



Interface and Hardware Commands

- [debug ilpower](#), on page 3
- [debug interface](#), on page 4
- [debug lldp packets](#), on page 5
- [debug platform poe](#), on page 6
- [debug platform software fed switch active punt packet-capture start](#), on page 7
- [duplex](#), on page 8
- [enable \(interface configuration\)](#), on page 10
- [errdisable detect cause](#), on page 11
- [errdisable recovery cause](#), on page 13
- [errdisable recovery interval](#), on page 15
- [interface](#), on page 16
- [interface range](#), on page 18
- [ip mtu](#), on page 20
- [ipv6 mtu](#), on page 21
- [lldp \(interface configuration\)](#), on page 22
- [mode \(power-stack configuration\)](#), on page 24
- [network-policy](#), on page 26
- [network-policy profile \(global configuration\)](#), on page 27
- [power-priority](#) , on page 28
- [power supply](#), on page 30
- [show beacon all](#), on page 32
- [show environment](#), on page 33
- [show errdisable detect](#), on page 35
- [show errdisable recovery](#), on page 36
- [show ip interface](#), on page 37
- [show interfaces](#), on page 42
- [show interfaces counters](#), on page 46
- [show interfaces switchport](#), on page 48
- [show interfaces transceiver](#), on page 50
- [show inventory](#), on page 52
- [show memory platform](#), on page 58
- [show module](#), on page 61
- [show mgmt-infra trace messages ilpower](#), on page 62

- [show mgmt-infra trace messages ilpower-ha](#), on page 64
- [show mgmt-infra trace messages platform-mgr-poe](#), on page 65
- [show network-policy profile](#), on page 66
- [show platform hardware capacity](#), on page 67
- [show platform hardware fed switch forward](#), on page 79
- [show platform hardware fed switch forward interface](#), on page 82
- [show platform hardware fed switch forward last summary](#), on page 85
- [show platform resources](#), on page 88
- [show platform software audit](#), on page 89
- [show platform software fed switch punt cpuq rates](#), on page 93
- [show platform software fed switch punt packet-capture display](#), on page 95
- [show platform software fed switch punt rates interfaces](#), on page 97
- [show platform software ilpower](#), on page 100
- [show platform software memory](#), on page 102
- [show platform software process list](#), on page 107
- [show platform software process memory](#), on page 111
- [show platform software process slot switch](#), on page 114
- [show platform software status control-processor](#), on page 116
- [show platform software thread list](#), on page 119
- [show processes cpu platform](#), on page 121
- [show processes cpu platform history](#), on page 124
- [show processes cpu platform monitor](#), on page 127
- [show processes memory](#), on page 129
- [show processes memory platform](#), on page 132
- [show processes platform](#), on page 136
- [show system mtu](#), on page 139
- [show tech-support](#) , on page 140
- [show tech-support bgp](#), on page 142
- [show tech-support diagnostic](#), on page 145
- [show tech-support poe](#), on page 147
- [speed](#), on page 162
- [switchport block](#), on page 164
- [system mtu](#), on page 165
- [voice-signaling vlan \(network-policy configuration\)](#), on page 166
- [voice vlan \(network-policy configuration\)](#), on page 168

debug ilpower

To enable debugging of the power controller and Power over Ethernet (PoE) system, use the **debug ilpower** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

debug ilpower {**cdp** | **event** | **ha** | **ipc** | **police** | **port** | **powerman** | **registries** | **scp** | **sense** | **upoe**}
no debug ilpower {**cdp** | **event** | **ha** | **ipc** | **police** | **port** | **powerman** | **registries** | **scp** | **sense** | **upoe**}

Syntax Description

cdp	Displays PoE Cisco Discovery Protocol (CDP) debug messages.
event	Displays PoE event debug messages.
ha	Displays PoE high-availability messages.
ipc	Displays PoE Inter-Process Communication (IPC) debug messages.
police	Displays PoE police debug messages.
port	Displays PoE port manager debug messages.
powerman	Displays PoE power management debug messages.
registries	Displays PoE registries debug messages.
scp	Displays PoE SCP debug messages.
sense	Displays PoE sense debug messages.
upoe	Displays Cisco UPOE debug messages.

Command Default

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

This command is supported only on PoE-capable switches.

When you enable debugging on a switch stack, it is enabled only on the stack master. To enable debugging on a stack member, you can start a session from the stack master by using the **session** *switch-number* EXEC command. Then enter the **debug** command at the command-line prompt of the stack member. You also can use the **remote command** *stack-member-number* *LINE* EXEC command on the stack master switch to enable debugging on a member switch without first starting a session.

debug interface

To enable debugging of interface-related activities, use the **debug interface** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

```
debug interface {interface-id | counters {exceptions | protocol memory} | null interface-number |
port-channel port-channel-number | states | vlan vlan-id}
no debug interface {interface-id | counters {exceptions | protocol memory} | null interface-number |
port-channel port-channel-number | states | vlan vlan-id}
```

Syntax Description

<i>interface-id</i>	ID of the physical interface. Displays debug messages for the specified physical port, identified by type switch number/module number/port, for example, gigabitethernet 1/0/2.
null <i>interface-number</i>	Displays debug messages for null interfaces. The interface number is always 0 .
port-channel <i>port-channel-number</i>	Displays debug messages for the specified EtherChannel port-channel interface. The <i>port-channel-number</i> range is 1 to 48.
vlan <i>vlan-id</i>	Displays debug messages for the specified VLAN. The vlan range is 1 to 4094.
counters	Displays counters debugging information.
exceptions	Displays debug messages when a recoverable exceptional condition occurs during the computation of the interface packet and data rate statistics.
protocol memory	Displays debug messages for memory operations of protocol counters.
states	Displays intermediary debug messages when an interface's state transitions.

Command Default

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

If you do not specify a keyword, all debug messages appear.

The **undebug interface** command is the same as the **no debug interface** command.

When you enable debugging on a switch stack, it is enabled only on the stack master. To enable debugging on a stack member, you can start a session from the stack master by using the **session** *switch-number* EXEC command. Then enter the **debug** command at the command-line prompt of the stack member. You also can use the **remote command** *stack-member-number* *LINE* EXEC command on the stack master switch to enable debugging on a member switch without first starting a session.

debug lldp packets

To enable debugging of Link Layer Discovery Protocol (LLDP) packets, use the **debug lldp packets** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

debug lldp packets
no debug lldp packets

Syntax Description This command has no arguments or keywords.

Command Default Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines The **undebg lldp packets** command is the same as the **no debug lldp packets** command.

When you enable debugging on a switch stack, it is enabled only on the . To enable debugging on a stack member, you can start a session from the by using the **session switch-number** EXEC command.

debug platform poe

To enable debugging of a Power over Ethernet (PoE) port, use the **debug platform poe** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

```
debug platform poe [{error | info}] [switch switch-number]  
no debug platform poe [{error | info}] [switch switch-number]
```

Syntax Description

error	(Optional) Displays PoE-related error debug messages.
info	(Optional) Displays PoE-related information debug messages.
switch <i>switch-number</i>	(Optional) Specifies the stack member. This keyword is supported only on stacking-capable switches.

Command Default

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

The **undebug platform poe** command is the same as the **no debug platform poe** command.

debug platform software fed switch active punt packet-capture start

To enable debugging of packets during high CPU utilization, for an active switch, use the **debug platform software fed switch active punt packet-capture start** command in privileged EXEC mode. To disable debugging of packets during high CPU utilization, for an active switch, use the **debug platform software fed switch active punt packet-capture stop** command in privileged EXEC mode.

debug platform software fed switch active punt packet-capture start
debug platform software fed switch active punt packet-capture stop

Syntax Description		
	switch active	Displays information about the active switch.
	punt	Specifies the punt information.
	packet-capture	Specifies information about the captured packet.
	start	Enables debugging of the active switch.
	stop	Disables debugging of the active switch.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Usage Guidelines The **debug platform software fed switch active punt packet-capture start** command starts the debugging of packets during high CPU utilization. The packet capture is stopped when the 4k buffer size is exceeded.

Examples

The following is a sample output from the **debug platform software fed switch active punt packet-capture start** command:

```
Device# debug platform software fed switch active packet-capture start
Punt packet capturing started.
```

The following is a sample output from the **debug platform software fed switch active punt packet-capture stop** command:

```
Device# debug platform software fed switch active packet-capture stop
Punt packet capturing stopped. Captured 101 packet(s)
```

duplex

To specify the duplex mode of operation for a port, use the **duplex** command in interface configuration mode. To return to the default value, use the **no** form of this command.

duplex {**auto** | **full** | **half**}
no duplex {**auto** | **full** | **half**}

Syntax Description

auto Enables automatic duplex configuration. The port automatically detects whether it should run in full- or half-duplex mode, depending on the attached device mode.

full Enables full-duplex mode.

half Enables half-duplex mode (only for interfaces operating at 10 or 100 Mbps). You cannot configure half-duplex mode for interfaces operating at 1000 or 10,000 Mbps.

Command Default

For Gigabit Ethernet ports, the default is **auto**.

Command Modes

Interface configuration (config-if)

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

For Gigabit Ethernet ports, setting the port to **auto** has the same effect as specifying **full** if the attached device does not autonegotiate the duplex parameter.

Duplex options are not supported on the 1000BASE-*x* or 10GBASE-*x* (where *x* is -BX, -CWDM, -LX, -SX, or -ZX) small form-factor pluggable (SFP) modules.



Note Half-duplex mode is supported on Gigabit Ethernet interfaces if the duplex mode is **auto** and the connected device is operating at half duplex. However, you cannot configure these interfaces to operate in half-duplex mode.

Certain ports can be configured to be either full duplex or half duplex. How this command is applied depends on the device to which the switch is attached.

If both ends of the line support autonegotiation, we highly recommend using the default autonegotiation settings. If one interface supports autonegotiation and the other end does not, configure duplex and speed on both interfaces, and use the **auto** setting on the supported side.

If the speed is set to **auto**, the switch negotiates with the device at the other end of the link for the speed setting and then forces the speed setting to the negotiated value. The duplex setting remains as configured on each end of the link, which could result in a duplex setting mismatch.

You can configure the duplex setting when the speed is set to **auto**.



Caution Changing the interface speed and duplex mode configuration might shut down and reenables the interface during the reconfiguration.

You can verify your setting by entering the **show interfaces** privileged EXEC command.

Examples

This example shows how to configure an interface for full-duplex operation:

```
Device> enable
Device# configure terminal
Device(config)# interface gigabitethernet 1/0/1
Device(config-if)# duplex full
```

enable (interface configuration)

To enable the 100 GigabitEthernet interface, use the **enable** command in interface configuration mode. Use the **no** form of the command to disable a 100 GigabitEthernet interface.

enable

no enable

Command Default

The 100 GigabitEthernet interface is enabled on physical port numbers 25 through 32.

The 100 GigabitEthernet interface is disabled on physical port numbers 1 through 24.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS XE Fuji 16.8.1a	The command was introduced on the Cisco Catalyst 9500 Series Switches - High Performance.

Usage Guidelines

Use the **enable** command in the interface configuration mode, to enable the 100 GigabitEthernet interface.

Use the **no** version of the command to disable the 100 GigabitEthernet interface.

To display the current state of an interface, enter the **show interface** *interface-id* command in privileged EXEC mode.

The following example shows how to enable interface HundredGigabitEthernet 1/0/40.

When you enable the interface HundredGigabitEthernet 1/0/40, the corresponding 40 GigabitEthernet interfaces, FortyGigabitEthernet 1/0/15 and FortyGigabitEthernet 1/0/16 become inactive.

```
Device> enable
Device# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Device(config)# interface hundredgigabitethernet 1/0/40
Device(config-if)# enable
```

The following example shows how to disable interface HundredGigabitEthernet 1/0/40 to use interface 40 GigabitEthernet 1/0/16.

When you disable a HundredGigabitEthernet interface, both the corresponding 40 GigabitEthernet interfaces, FortyGigabitEthernet1/0/15 and FortyGigabitEthernet1/0/16 become active.

```
Device> enable
Device# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Device(config)# interface hundredgigabitethernet 1/0/40
Device(config-if)# no enable
Device(config-if)# exit
```

errdisable detect cause

To enable error-disable detection for a specific cause or for all causes, use the **errdisable detect cause** command in global configuration mode. To disable the error-disable detection feature, use the **no** form of this command.

```
errdisable detect cause {all | arp-inspection | bpduguard shutdown vlan | dhcp-rate-limit | dtp-flap | gbic-invalid | inline-power | link-flap | loopback | pagp-flap | pppoe-ia-rate-limit | psp shutdown vlan | security-violation shutdown vlan | sfp-config-mismatch}
```

```
no errdisable detect cause {all | arp-inspection | bpduguard shutdown vlan | dhcp-rate-limit | dtp-flap | gbic-invalid | inline-power | link-flap | loopback | pagp-flap | pppoe-ia-rate-limit | psp shutdown vlan | security-violation shutdown vlan | sfp-config-mismatch}
```

Syntax	Description
all	Enables error detection for all error-disabled causes.
arp-inspection	Enables error detection for dynamic Address Resolution Protocol (ARP) inspection.
bpduguard shutdown vlan	Enables per-VLAN error-disable for BPDU guard.
dhcp-rate-limit	Enables error detection for DHCP snooping.
dtp-flap	Enables error detection for the Dynamic Trunking Protocol (DTP) flapping.
gbic-invalid	Enables error detection for an invalid Gigabit Interface Converter (GBIC) module. Note This error refers to an invalid small form-factor pluggable (SFP) module.
inline-power	Enables error detection for the Power over Ethernet (PoE) error-disabled cause. Note This keyword is supported only on switches with PoE ports.
link-flap	Enables error detection for link-state flapping.
loopback	Enables error detection for detected loopbacks.
pagp-flap	Enables error detection for the Port Aggregation Protocol (PAgP) flap error-disabled cause.
pppoe-ia-rate-limit	Enables error detection for the PPPoE Intermediate Agent rate-limit error-disabled cause.
psp shutdown vlan	Enables error detection for protocol storm protection (PSP).
security-violation shutdown vlan	Enables voice aware 802.1x security.
sfp-config-mismatch	Enables error detection on an SFP configuration mismatch.

Command Default Detection is enabled for all causes. All causes, except per-VLAN error disabling, are configured to shut down the entire port.

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines A cause (such as a link-flap or dhcp-rate-limit) is the reason for the error-disabled state. When a cause is detected on an interface, the interface is placed in an error-disabled state, an operational state that is similar to a link-down state.

When a port is error-disabled, it is effectively shut down, and no traffic is sent or received on the port. For the bridge protocol data unit (BPDU) guard, voice-aware 802.1x security, and port-security features, you can configure the switch to shut down only the offending VLAN on the port when a violation occurs, instead of shutting down the entire port.

If you set a recovery mechanism for the cause by entering the **errdisable recovery** global configuration command, the interface is brought out of the error-disabled state and allowed to retry the operation when all causes have timed out. If you do not set a recovery mechanism, you must enter the **shutdown** and then the **no shutdown** commands to manually recover an interface from the error-disabled state.

For protocol storm protection, excess packets are dropped for a maximum of two virtual ports. Virtual port error disabling using the **psp** keyword is not supported for EtherChannel and Flexlink interfaces.

To verify your settings, enter the **show errdisable detect** privileged EXEC command.

This example shows how to enable error-disabled detection for the link-flap error-disabled cause:

```
Device(config)# errdisable detect cause link-flap
```

This command shows how to globally configure BPDU guard for a per-VLAN error-disabled state:

```
Device(config)# errdisable detect cause bpduguard shutdown vlan
```

This command shows how to globally configure voice-aware 802.1x security for a per-VLAN error-disabled state:

```
Device(config)# errdisable detect cause security-violation shutdown vlan
```

You can verify your setting by entering the **show errdisable detect** privileged EXEC command.

errdisable recovery cause

To enable the error-disabled mechanism to recover from a specific cause, use the **errdisable recovery cause** command in global configuration mode. To return to the default setting, use the **no** form of this command.

```
errdisable recovery cause {all | arp-inspection | bpduguard | channel-misconfig | dhcp-rate-limit |
dtp-flap | gbic-invalid | inline-power | link-flap | loopback | mac-limit | pagp-flap | port-mode-failure |
pppoe-ia-rate-limit | psecure-violation | psp | security-violation | sfp-config-mismatch | storm-control |
udld}
```

```
no errdisable recovery cause {all | arp-inspection | bpduguard | channel-misconfig | dhcp-rate-limit |
dtp-flap | gbic-invalid | inline-power | link-flap | loopback | mac-limit | pagp-flap | port-mode-failure |
pppoe-ia-rate-limit | psecure-violation | psp | security-violation | sfp-config-mismatch | storm-control |
udld}
```

Syntax Description		
all		Enables the timer to recover from all error-disabled causes.
arp-inspection		Enables the timer to recover from the Address Resolution Protocol (ARP) inspection error-disabled state.
bpduguard		Enables the timer to recover from the bridge protocol data unit (BPDU) guard error-disabled state.
channel-misconfig		Enables the timer to recover from the EtherChannel misconfiguration error-disabled state.
dhcp-rate-limit		Enables the timer to recover from the DHCP snooping error-disabled state.
dtp-flap		Enables the timer to recover from the Dynamic Trunking Protocol (DTP) flap error-disabled state.
gbic-invalid		Enables the timer to recover from an invalid Gigabit Interface Converter (GBIC) module error-disabled state.
	Note	This error refers to an invalid small form-factor pluggable (SFP) error-disabled state.
inline-power		Enables the timer to recover from the Power over Ethernet (PoE) error-disabled state.
		This keyword is supported only on switches with PoE ports.
link-flap		Enables the timer to recover from the link-flap error-disabled state.
loopback		Enables the timer to recover from a loopback error-disabled state.
mac-limit		Enables the timer to recover from the mac limit error-disabled state.
pagp-flap		Enables the timer to recover from the Port Aggregation Protocol (PAgP)-flap error-disabled state.

port-mode-failure	Enables the timer to recover from the port mode change failure error-disabled state.
pppoe-ia-rate-limit	Enables the timer to recover from the PPPoE IA rate limit error-disabled state.
psecure-violation	Enables the timer to recover from a port security violation disable state.
psp	Enables the timer to recover from the protocol storm protection (PSP) error-disabled state.
security-violation	Enables the timer to recover from an IEEE 802.1x-violation disabled state.
sfp-config-mismatch	Enables error detection on an SFP configuration mismatch.
storm-control	Enables the timer to recover from a storm control error.
udld	Enables the timer to recover from the UniDirectional Link Detection (UDLD) error-disabled state.

Command Default Recovery is disabled for all causes.

Command Modes Global configuration

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

A cause (such as all or BPDU guard) is defined as the reason that the error-disabled state occurred. When a cause is detected on an interface, the interface is placed in the error-disabled state, an operational state similar to link-down state.

When a port is error-disabled, it is effectively shut down, and no traffic is sent or received on the port. For the BPDU guard and port-security features, you can configure the switch to shut down only the offending VLAN on the port when a violation occurs, instead of shutting down the entire port.

If you do not enable the recovery for the cause, the interface stays in the error-disabled state until you enter the **shutdown** and the **no shutdown** interface configuration commands. If you enable the recovery for a cause, the interface is brought out of the error-disabled state and allowed to retry the operation again when all the causes have timed out.

Otherwise, you must enter the **shutdown** and then the **no shutdown** commands to manually recover an interface from the error-disabled state.

You can verify your settings by entering the **show errdisable recovery** privileged EXEC command.

Examples

This example shows how to enable the recovery timer for the BPDU guard error-disabled cause:

```
Device(config)# errdisable recovery cause bpduguard
```

errdisable recovery interval

To specify the time to recover from an error-disabled state, use the **errdisable recovery interval** command in global configuration mode. To return to the default setting, use the **no** form of this command.

errdisable recovery interval *timer-interval*
no errdisable recovery interval *timer-interval*

Syntax Description

timer-interval Time to recover from the error-disabled state. The range is 30 to 86400 seconds. The same interval is applied to all causes. The default interval is 300 seconds.

Command Default

The default recovery interval is 300 seconds.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

The error-disabled recovery timer is initialized at a random differential from the configured interval value. The difference between the actual timeout value and the configured value can be up to 15 percent of the configured interval.

You can verify your settings by entering the **show errdisable recovery** privileged EXEC command.

Examples

This example shows how to set the timer to 500 seconds:

```
Device(config)# errdisable recovery interval 500
```

interface

To configure an interface, use the **interface** command.

interface { **Auto-Template** *interface-number* | **FortyGigabitEthernet** *switch-number/slot-number/port-number* | **GigabitEthernet** *switch-number/slot-number/port-number* | **Group VI** *Group VI interface number* | **Internal Interface** *Internal Interface number* | **Loopback** *interface-number* | **Null** *interface-number* | **Port-channel** *interface-number* | **TenGigabitEthernet** *switch-number/slot-number/port-number* | **Tunnel** *interface-number* | **Vlan** *interface-number* }

Syntax Description

Auto-Template <i>interface-number</i>	Enables you to configure a auto-template interface. The range is from 1 to 999.
FortyGigabitEthernet <i>switch-number/slot-number/port-number</i>	Enables you to configure a 40-Gigabit Ethernet interface. <ul style="list-style-type: none"> • <i>switch-number</i> — Switch ID. The range is from 1 to 8. • <i>slot-number</i> — Slot number. Value is 1. • <i>port-number</i> — Port number. The range is from 1 to 2.
GigabitEthernet <i>switch-number/slot-number/port-number</i>	Enables you to configure a Gigabit Ethernet IEEE 802.3z interface. <ul style="list-style-type: none"> • <i>switch-number</i> — Switch ID. The range is from 1 to 8. • <i>slot-number</i> — Slot number. The range is from 0 to 1. • <i>port-number</i> — Port number. The range is from 1 to 48.
Group VI <i>Group VI interface number</i>	Enables you to configure a Group VI interface. The range is from 0 to 9.
Internal Interface <i>Internal Interface</i>	Enables you to configure an internal interface.
Loopback <i>interface-number</i>	Enables you to configure a loopback interface. The range is from 0 to 2147483647.
Null <i>interface-number</i>	Enables you to configure a null interface. The default value is 0.
Port-channel <i>interface-number</i>	Enables you to configure a port-channel interface. The range is from 1 to 128.

TenGigabitEthernet <i>switch-number/slot-number/port-number</i>	Enables you to configure a 10-Gigabit Ethernet interface. <ul style="list-style-type: none"> • <i>switch-number</i> — Switch ID. The range is from 1 to 8. • <i>slot-number</i> — Slot number. The range is from 0 to 1. • <i>port-number</i> — Port number. The range is from 1 to 24 and 37 to 48
Tunnel <i>interface-number</i>	Enables you to configure a tunnel interface. The range is from 0 to 2147483647.
Vlan <i>interface-number</i>	Enables you to configure a switch VLAN. The range is from 1 to 4094.

Command Default

None

Command Modes

Global configuration (config)

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

You can not use the "no" form of this command.

Examples

The following example shows how to configure a tunnel interface:

```
Device(config)# interface Tunnel 15
Device(config-if)#
```

The following example shows how to configure a 40-Gigabit Ethernet interface

```
Device(config)# interface FortyGigabitEthernet 1/1/2
Device(config-if)#
```

interface range

To configure an interface range, use the **interface range** command.

interface range {**Auto-Template** *interface-number* | **FortyGigabitEthernet** *switch-number/slot-number/port-number* | **GigabitEthernet** *switch-number/slot-number/port-number* | **Group VI** *Group VI interface number* | **Internal Interface** *Internal Interface number* | **Loopback** *interface-number* | **Null** *interface-number* | **Port-channel** *interface-number* | **TenGigabitEthernet** *switch-number/slot-number/port-number* | **Tunnel** *interface-number* | **Vlan** *interface-number* }

Syntax Description

Auto-Template <i>interface-number</i>	Enables you to configure a auto-template interface. The range is from 1 to 999.
FortyGigabitEthernet <i>switch-number/slot-number/port-number</i>	Enables you to configure a 40-Gigabit Ethernet interface. <ul style="list-style-type: none"> • <i>switch-number</i> — Switch ID. The range is from 1 to 8. • <i>slot-number</i> — Slot number. Value is 1. • <i>port-number</i> — Port number. The range is from 1 to 2.
GigabitEthernet <i>switch-number/slot-number/port-number</i>	Enables you to configure a Gigabit Ethernet IEEE 802.3z interface. <ul style="list-style-type: none"> • <i>switch-number</i> — Switch ID. The range is from 1 to 8. • <i>slot-number</i> — Slot number. The range is from 0 to 1. • <i>port-number</i> — Port number. The range is from 1 to 48.
Group VI <i>Group VI interface number</i>	Enables you to configure a Group VI interface. The range is from 0 to 9.
Internal Interface <i>Internal Interface</i>	Enables you to configure an internal interface.
Loopback <i>interface-number</i>	Enables you to configure a loopback interface. The range is from 0 to 2147483647.
Null <i>interface-number</i>	Enables you to configure a null interface. The default value is 0.
Port-channel <i>interface-number</i>	Enables you to configure a port-channel interface. The range is from 1 to 128.

TenGigabitEthernet <i>switch-number/slot-number/port-number</i>	Enables you to configure a 10-Gigabit Ethernet interface. <ul style="list-style-type: none"> • <i>switch-number</i> — Switch ID. The range is from 1 to 8. • <i>slot-number</i> — Slot number. The range is from 0 to 1. • <i>port-number</i> — Port number. The range is from 1 to 24 and 37 to 48
Tunnel <i>interface-number</i>	Enables you to configure a tunnel interface. The range is from 0 to 2147483647.
Vlan <i>interface-number</i>	Enables you to configure a switch VLAN. The range is from 1 to 4094.

Command Default None

Command Modes Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Examples

This example shows how you can configure interface range:

```
Device(config)# interface range vlan 1-100
```

ip mtu

To set the IP maximum transmission unit (MTU) size of routed packets on all routed ports of the switch or switch stack, use the **ip mtu** command in interface configuration mode. To restore the default IP MTU size, use the **no** form of this command.

```
ip mtu bytes
no ip mtu bytes
```

Syntax Description	<i>bytes</i> MTU size, in bytes. The range is from 68 up to the system MTU value (in bytes).	
Command Default	The default IP MTU size for frames received and sent on all switch interfaces is 1500 bytes.	
Command Modes	Interface configuration	
Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines The upper limit of the IP value is based on the switch or switch stack configuration and refers to the currently applied system MTU value. For more information about setting the MTU sizes, see the **system mtu** global configuration command.

To return to the default IP MTU setting, you can apply the **default ip mtu** command or the **no ip mtu** command on the interface.

You can verify your setting by entering the **show ip interface** *interface-id* or **show interfaces** *interface-id* privileged EXEC command.

The following example sets the maximum IP packet size for VLAN 200 to 1000 bytes:

```
Device(config)# interface vlan 200
Device(config-if)# ip mtu 1000
```

The following example sets the maximum IP packet size for VLAN 200 to the default setting of 1500 bytes:

```
Device(config)# interface vlan 200
Device(config-if)# default ip mtu
```

This is an example of partial output from the **show ip interface** *interface-id* command. It displays the current IP MTU setting for the interface.

```
Device# show ip interface gigabitethernet4/0/1
GigabitEthernet4/0/1 is up, line protocol is up
  Internet address is 18.0.0.1/24
  Broadcast address is 255.255.255.255
  Address determined by setup command
  MTU is 1500 bytes
  Helper address is not set
```

<output truncated>

ipv6 mtu

To set the IPv6 maximum transmission unit (MTU) size of routed packets on all routed ports of the switch or switch stack, use the **ipv6 mtu** command in interface configuration mode. To restore the default IPv6 MTU size, use the **no** form of this command.

ipv6 mtu *bytes*
no ipv6 mtu *bytes*

Syntax Description

bytes MTU size, in bytes. The range is from 1280 up to the system MTU value (in bytes).

Command Default

The default IPv6 MTU size for frames received and sent on all switch interfaces is 1500 bytes.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

The upper limit of the IPv6 MTU value is based on the switch or switch stack configuration and refers to the currently applied system MTU value. For more information about setting the MTU sizes, see the **system mtu** global configuration command.

To return to the default IPv6 MTU setting, you can apply the **default ipv6 mtu** command or the **no ipv6 mtu** command on the interface.

You can verify your setting by entering the **show ipv6 interface** *interface-id* or **show interface** *interface-id* privileged EXEC command.

The following example sets the maximum IPv6 packet size for an interface to 2000 bytes:

```
Device(config)# interface gigabitethernet4/0/1
Device(config-if)# ipv6 mtu 2000
```

The following example sets the maximum IPv6 packet size for an interface to the default setting of 1500 bytes:

```
Device(config)# interface gigabitethernet4/0/1
Device(config-if)# default ipv6 mtu
```

This is an example of partial output from the **show ipv6 interface** *interface-id* command. It displays the current IPv6 MTU setting for the interface.

```
Device# show ipv6 interface gigabitethernet4/0/1
GigabitEthernet4/0/1 is up, line protocol is up
  Internet address is 18.0.0.1/24
  Broadcast address is 255.255.255.255
  Address determined by setup command
  MTU is 1500 bytes
  Helper address is not set
```

<output truncated>

lldp (interface configuration)

To enable Link Layer Discovery Protocol (LLDP) on an interface, use the **lldp** command in interface configuration mode. To disable LLDP on an interface, use the **no** form of this command.

```
lldp {med-tlv-select tlv | receive | tlv-select power-management | transmit}
no lldp {med-tlv-select tlv | receive | tlv-select power-management | transmit}
```

Syntax Description		
med-tlv-select		Selects an LLDP Media Endpoint Discovery (MED) time-length-value (TLV) element to send.
<i>tlv</i>		String that identifies the TLV element. Valid values are the following: <ul style="list-style-type: none"> • inventory-management— LLDP MED Inventory Management TLV. • location— LLDP MED Location TLV. • network-policy— LLDP MED Network Policy TLV. • power-management— LLDP MED Power Management TLV.
receive		Enables the interface to receive LLDP transmissions.
tlv-select		Selects the LLDP TLVs to send.
power-management		Sends the LLDP Power Management TLV.
transmit		Enables LLDP transmission on the interface.

Command Default LLDP is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines This command is supported on 802.1 media types.

If the interface is configured as a tunnel port, LLDP is automatically disabled.

The following example shows how to disable LLDP transmission on an interface:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# no lldp transmit
```

The following example shows how to enable LLDP transmission on an interface:

```
Device(config)# interface gigabitethernet1/0/1
```

```
Device(config-if)# lldp transmit
```

mode (power-stack configuration)

To configure power stack mode for the power stack, use the **mode** command in power-stack configuration mode. To return to the default settings, use the **no** form of the command.

mode {**power-shared** | **redundant**} [**strict**]
no mode

Syntax Description		
	power-shared	Sets the power stack to operate in power-shared mode. This is the default.
	redundant	Sets the power stack to operate in redundant mode. The largest power supply is removed from the power pool to be used as backup power in case one of the other power supplies fails.
	strict	(Optional) Configures the power stack mode to run a strict power budget. The stack power needs cannot exceed the available power.

Command Default The default modes are **power-shared** and nonstrict.

Command Modes Power-stack configuration

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines This command is available only on switch stacks running the IP Base or IP Services feature set. To access power-stack configuration mode, enter the **stack-power stack** *power stack name* global configuration command.

Entering the **no mode** command sets the switch to the defaults of **power-shared** and non-strict mode.



Note For stack power, available power is the total power available for PoE from all power supplies in the power stack, available power is the power allocated to all powered devices connected to PoE ports in the stack, and consumed power is the actual power consumed by the powered devices.

In **power-shared** mode, all of the input power can be used for loads, and the total available power appears as one large power supply. The power budget includes all power from all supplies. No power is set aside for power supply failures. If a power supply fails, load shedding (shutting down of powered devices or switches) might occur.

In **redundant** mode, the largest power supply is removed from the power pool to use as backup power in case one of the other power supplies fails. The available power budget is the total power minus the largest power supply. This reduces the available power in the pool for switches and powered devices, but in case of a failure or an extreme power load, there is less chance of having to shut down switches or powered devices.

In **strict** mode, when a power supply fails and the available power drops below the budgeted power, the system balances the budget through load shedding of powered devices, even if the actual power is less than the available power. In nonstrict mode, the power stack can run in an over-allocated state and is stable as long as

the actual power does not exceed the available power. In this mode, a powered device drawing more than normal power could cause the power stack to start shedding loads. This is normally not a problem because most devices do not run at full power. The chances of multiple powered devices in the stack requiring maximum power at the same time is small.

In both strict and nonstrict modes, power is denied when there is no power available in the power budget.

This is an example of setting the power stack mode for the stack named power1 to power-shared with strict power budgeting. All power in the stack is shared, but when the total available power is allotted, no more devices are allowed power.

```
Device(config)# stack-power stack power1  
Device(config-stackpower)# mode power-shared strict  
Device(config-stackpower)# exit
```

This is an example of setting the power stack mode for the stack named power2 to redundant. The largest power supply in the stack is removed from the power pool to provide redundancy in case one of the other supplies fails.

```
Device(config)# stack-power stack power2  
Device(config-stackpower)# mode redundant  
Device(config-stackpower)# exit
```

network-policy

To apply a network-policy profile to an interface, use the **network-policy** command in interface configuration mode. To remove the policy, use the **no** form of this command.

network-policy *profile-number*
no network-policy

Syntax Description

profile-number The network-policy profile number to apply to the interface.

Command Default

No network-policy profiles are applied.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

Use the **network-policy** *profile number* interface configuration command to apply a profile to an interface.

You cannot apply the **switchport voice vlan** command on an interface if you first configure a network-policy profile on it. However, if **switchport voice vlan** *vlan-id* is already configured on the interface, you can apply a network-policy profile on the interface. The interface then has the voice or voice-signaling VLAN network-policy profile applied.

This example shows how to apply network-policy profile 60 to an interface:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# network-policy 60
```

network-policy profile (global configuration)

To create a network-policy profile and to enter network-policy configuration mode, use the **network-policy profile** command in global configuration mode. To delete the policy and to return to global configuration mode, use the **no** form of this command.

network-policy profile *profile-number*
no network-policy profile *profile-number*

Syntax Description	<i>profile-number</i> Network-policy profile number. The range is 1 to 4294967295.	
Command Default	No network-policy profiles are defined.	
Command Modes	Global configuration	
Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.
Usage Guidelines	<p>Use the network-policy profile global configuration command to create a profile and to enter network-policy profile configuration mode.</p> <p>To return to privileged EXEC mode from the network-policy profile configuration mode, enter the exit command.</p> <p>When you are in network-policy profile configuration mode, you can create the profile for voice and voice signaling by specifying the values for VLAN, class of service (CoS), differentiated services code point (DSCP), and tagging mode.</p> <p>These profile attributes are contained in the Link Layer Discovery Protocol for Media Endpoint Devices (LLDP-MED) network-policy time-length-value (TLV).</p> <p>This example shows how to create network-policy profile 60:</p> <pre>Device(config)# network-policy profile 60 Device(config-network-policy)#</pre>	

power-priority

To configure Cisco StackPower power-priority values for a switch in a power stack and for its high-priority and low-priority PoE ports, use the **power-priority** command in switch stack-power configuration mode. To return to the default setting, use the **no** form of the command.

power-priority {**high** *value* | **low** *value* | **switch** *value*}
no power-priority {**high** | **low** | **switch**}

Syntax Description	
high <i>value</i>	Sets the power priority for the ports configured as high-priority ports. The range is 1 to 27, with 1 as the highest priority. The high value must be lower than the value set for the low-priority ports and higher than the value set for the switch.
low <i>value</i>	Sets the power priority for the ports configured as low-priority ports. The range is 1 to 27. The low value must be higher than the value set for the high-priority ports and the value set for the switch.
switch <i>value</i>	Sets the power priority for the switch. The range is 1 to 27. The switch value must be lower than the values set for the low and high-priority ports.

Command Default If no values are configured, the power stack randomly determines a default priority. The default ranges are 1 to 9 for switches, 10 to 18 for high-priority ports, 19 to 27 for low-priority ports. On non-PoE switches, the high and low values (for port priority) have no effect.

Command Modes Switch stack-power configuration

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines To access switch stack-power configuration mode, enter the **stack-power switch** *switch-number* global configuration command.

Cisco StackPower power-priority values determine the order for shutting down switches and ports when power is lost and load shedding must occur. Priority values are from 1 to 27; the highest numbers are shut down first.

We recommend that you configure different priority values for each switch and for its high priority ports and low priority ports to limit the number of devices shut down at one time during a loss of power. If you try to configure the same priority value on different switches in a power stack, the configuration is allowed, but you receive a warning message.



Note This command is available only on switch stacks running the IP Base or IP Services feature set.

Examples

This is an example of setting the power priority for switch 1 in power stack a to 7, for the high-priority ports to 11, and for the low-priority ports to 20.

```
Device(config)# stack-power switch 1  
Device(config-switch-stackpower)# stack-id power_stack_a  
Device(config-switch-stackpower)# power-priority high 11  
Device(config-switch-stackpower)# power-priority low 20  
Device(config-switch-stackpower)# power-priority switch 7  
Device(config-switch-stackpower)# exit
```

power supply

To configure and manage the internal power supplies on a switch, use the **power supply** command in privileged EXEC mode.

power supply *stack-member-number* **slot** {**A** | **B**} {**off** | **on**}

Syntax Description		
<i>stack-member-number</i>		Stack member number for which to configure the internal power supplies. The range is 1 to 9, depending on the number of switches in the stack. This parameter is available only on stacking-capable switches.
slot		Selects the switch power supply to set.
A		Selects the power supply in slot A.
B		Selects the power supply in slot B. Note Power supply slot B is the closest slot to the outer edge of the switch.
off		Sets the switch power supply to off.
on		Sets the switch power supply to on.

Command Default The switch power supply is on.

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines The **power supply** command applies to a switch or to a switch stack where all switches are the same platform.

In a switch stack with the same platform switches, you must specify the stack member before entering the **slot** {**A** | **B**} **off** or **on** keywords.

To return to the default setting, use the **power supply** *stack-member-number* **on** command.

You can verify your settings by entering the **show env power** privileged EXEC command.

Examples

This example shows how to set the power supply in slot A to off:

```
Device> power supply 2 slot A off
Disabling Power supply A may result in a power loss to PoE devices and/or switches ...
Continue? (yes/[no]): yes
Device
Jun 10 04:52:54.389: %PLATFORM_ENV-6-FRU_PS_OIR: FRU Power Supply 1 powered off
Jun 10 04:52:56.717: %PLATFORM_ENV-1-FAN_NOT_PRESENT: Fan is not present
```

This example shows how to set the power supply in slot A to on:

```
Device> power supply 1 slot B on
Jun 10 04:54:39.600: %PLATFORM_ENV-6-FRU_PS_OIR: FRU Power Supply 1 powered on
```

This example shows the output of the show env power command:

```
Device> show env power
SW  PID                Serial#      Status      Sys Pwr  PoE Pwr  Watts
--  -
1A  PWR-1RUC2-640WAC    DCB1705B05B OK          Good     Good     250/390
1B  Not Present
```

show beacon all

To display the status of beacon LED on the device, use the **show beacon all** command in privileged EXEC mode.

show beacon { **rp** { **active** | **standby** } | **slot** *slot-number* } | **all** }

Syntax Description		
rp { active standby }		Specifies the active or the standby Switch whose beacon LED status is to be displayed.
slot <i>slot-num</i>		Specifies the slot whose beacon LED status is to be displayed.
all		Displays the status of all beacon LEDs.

Command History	Release	Modification
	Cisco IOS XE Fuji 16.9.1	This command was introduced.

Command Default This command has no default settings.

Command Modes Privileged EXEC (#)

Usage Guidelines Use the command **show beacon all** to know the status of all beacon LEDs.

Sample output of *show beacon all* command.

```
Device#show beacon all
Switch# Beacon Status
-----
*1 OFF
```

Sample output of *show beacon rp* command.

```
Device#show beacon rp active
Switch# Beacon Status
-----
*1 OFF
```

```
Device#show beacon slot 1
Switch# Beacon Status
-----
*1 OFF
```


show environment

To display information about the sensors, and status of fan and power supply, use the **show environment** command in EXEC mode.

show environment { **all** | **counters** | **fan-air-direction** | **history** | **location** | **sensor** | **status** | **summary** | **table** }

Syntax Description	
all	(Optional) Displays the list of sensors.
counters	(Optional) Displays the operational counters of the sensors.
fan-air-direction	(Optional) Displays information of the fan tray and power supply fan air direction.
history	(Optional) Displays history of the sensor state changes.
location	(Optional) Displays the sensors by location.
sensor	(Optional) Displays sensor summary.
status	(Optional) Displays the power supply and fan tray status of the switch.
summary	(Optional) Displays a summary of all the environment monitoring sensors.
table	(Optional) Displays sensor state table.

Command Default None

Command Modes User EXEC (>)
Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines Use the **show environment** EXEC command to display the information for the switch being accessed.

Examples

This example shows a sample output of the **show environment all** command:

```
Device> show environment all
```

```
Sensor List: Environmental Monitoring
Sensor      Location    State      Reading
Temp: UADP_0_0  R1         Normal    52 Celsius
Temp: UADP_0_1  R1         Normal    50 Celsius
Temp: UADP_0_2  R1         Normal    50 Celsius
Temp: UADP_0_3  R1         Normal    52 Celsius
Temp: UADP_0_4  R1         Normal    51 Celsius
Temp: UADP_0_5  R1         Normal    52 Celsius
Temp: UADP_0_6  R1         Normal    63 Celsius
Temp: UADP_0_7  R1         Normal    54 Celsius
```

```
..  
<output truncated>
```

This example shows a sample output of the **show environment status** command:

```
Device> show environment status
```

Power Supply	Model No	Type	Capacity	Status	Fan States	
					1	2
PS1	C9x00-PWR-2KWAC	ac	2000 W	active	good	good
PS4	C9x00-PWR-2KWAC	ac	2000 W	active	good	good

```
PS Current Configuration Mode : Combined  
PS Current Operating State    : none
```

```
Power supplies currently active    : 2  
Power supplies currently available : 2
```

```
Fantray : good  
Power consumed by Fantray : 300 Watts  
Fantray airflow direction : side-to-side  
Fantray beacon LED: off  
Fantray status LED: green
```

show errdisable detect

To display error-disabled detection status, use the **show errdisable detect** command in EXEC mode.

show errdisable detect

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes User EXEC
Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines A gbic-invalid error reason refers to an invalid small form-factor pluggable (SFP) module.

The error-disable reasons in the command output are listed in alphabetical order. The mode column shows how error-disable is configured for each feature.

You can configure error-disabled detection in these modes:

- port mode—The entire physical port is error-disabled if a violation occurs.
- vlan mode—The VLAN is error-disabled if a violation occurs.
- port/vlan mode—The entire physical port is error-disabled on some ports and is per-VLAN error-disabled on other ports.

show errdisable recovery

To display the error-disabled recovery timer information, use the **show errdisable recovery** command in EXEC mode.

show errdisable recovery

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes User EXEC
Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines A gbic-invalid error-disable reason refers to an invalid small form-factor pluggable (SFP) module interface.



Note Though visible in the output, the unicast-flood field is not valid.

This is an example of output from the **show errdisable recovery** command:

show ip interface

To display the usability status of interfaces configured for IP, use the **show ip interface** command in privileged EXEC mode.

show ip interface [*type number*] [**brief**]

Syntax Description

type (Optional) Interface type.

number (Optional) Interface number.

brief (Optional) Displays a summary of the usability status information for each interface.

Note The output of the **show ip interface brief** command displays information of all the available interfaces whether or not the corresponding network module for these interfaces are connected. These interfaces can be configured if the network module is connected. Run the **show interface status** command to see which network modules are connected.

This is not applicable for Cisco Catalyst 9500 Series High-Performance switches.

Command Default

The full usability status is displayed for all interfaces configured for IP.

Command Modes

Privileged EXEC (#)

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

The Cisco IOS software automatically enters a directly connected route in the routing table if the interface is usable (which means that it can send and receive packets). If an interface is not usable, the directly connected routing entry is removed from the routing table. Removing the entry lets the software use dynamic routing protocols to determine backup routes to the network, if any.

If the interface can provide two-way communication, the line protocol is marked "up." If the interface hardware is usable, the interface is marked "up."

If you specify an optional interface type, information for that specific interface is displayed. If you specify no optional arguments, information on all the interfaces is displayed.

When an asynchronous interface is encapsulated with PPP or Serial Line Internet Protocol (SLIP), IP fast switching is enabled. A **show ip interface** command on an asynchronous interface encapsulated with PPP or SLIP displays a message indicating that IP fast switching is enabled.

You can use the **show ip interface brief** command to display a summary of the device interfaces. This command displays the IP address, the interface status, and other information.

The **show ip interface brief** command does not display any information related to Unicast RPF.

Examples

The following example shows interface information on Gigabit Ethernet interface 1/0/1:

```

Device# show ip interface gigabitethernet 1/0/1

GigabitEthernet1/0/1 is up, line protocol is up
  Internet address is 10.1.1.1/16
  Broadcast address is 255.255.255.255
  Address determined by setup command
  MTU is 1500 bytes
  Helper address is not set
  Directed broadcast forwarding is disabled
  Outgoing access list is not set
  Inbound access list is not set
  Proxy ARP is enabled
  Local Proxy ARP is disabled
  Security level is default
  Split horizon is enabled
  ICMP redirects are always sent
  ICMP unreachable are always sent
  ICMP mask replies are never sent
  IP fast switching is enabled
  IP fast switching on the same interface is disabled
  IP Flow switching is disabled
  IP CEF switching is enabled
  IP Feature Fast switching turbo vector
  IP VPN Flow CEF switching turbo vector
  IP multicast fast switching is enabled
  IP multicast distributed fast switching is disabled
  IP route-cache flags are Fast, CEF
  Router Discovery is disabled
  IP output packet accounting is disabled
  IP access violation accounting is disabled
  TCP/IP header compression is disabled
  RTP/IP header compression is disabled
  Policy routing is enabled, using route map PBR
  Network address translation is disabled
  BGP Policy Mapping is disabled
  IP Multi-Processor Forwarding is enabled
    IP Input features, "PBR",
      are not supported by MPF and are IGNORED
    IP Output features, "NetFlow",
      are not supported by MPF and are IGNORED

```

The following example shows how to display the usability status for a specific VLAN:

```

Device# show ip interface vlan 1

Vlan1 is up, line protocol is up
  Internet address is 10.0.0.4/24
  Broadcast address is 255.255.255.255
  Address determined by non-volatile memory
  MTU is 1500 bytes
  Helper address is not set
  Directed broadcast forwarding is disabled
  Outgoing access list is not set
  Inbound access list is not set
  Proxy ARP is enabled
  Local Proxy ARP is disabled
  Security level is default
  Split horizon is enabled
  ICMP redirects are always sent
  ICMP unreachable are always sent
  ICMP mask replies are never sent
  IP fast switching is enabled

```

```

IP fast switching on the same interface is disabled
IP Flow switching is disabled
IP CEF switching is enabled
IP Fast switching turbo vector
IP Normal CEF switching turbo vector
IP multicast fast switching is enabled
IP multicast distributed fast switching is disabled
IP route-cache flags are Fast, CEF
Router Discovery is disabled
IP output packet accounting is disabled
IP access violation accounting is disabled
TCP/IP header compression is disabled
RTP/IP header compression is disabled
Probe proxy name replies are disabled
Policy routing is disabled
Network address translation is disabled
WCCP Redirect outbound is disabled
WCCP Redirect inbound is disabled
WCCP Redirect exclude is disabled
BGP Policy Mapping is disabled
Sampled Netflow is disabled
IP multicast multilayer switching is disabled
Netflow Data Export (hardware) is enabled

```

The table below describes the significant fields shown in the display.

Table 1: show ip interface Field Descriptions

Field	Description
Broadcast address is	Broadcast address.
Peer address is	Peer address.
MTU is	MTU value set on the interface, in bytes.
Helper address	Helper address, if one is set.
Directed broadcast forwarding	Shows whether directed broadcast forwarding is enabled.
Outgoing access list	Shows whether the interface has an outgoing access list set.
Inbound access list	Shows whether the interface has an incoming access list set.
Proxy ARP	Shows whether Proxy Address Resolution Protocol (ARP) is enabled for the interface.
Security level	IP Security Option (IPSO) security level set for this interface.
Split horizon	Shows whether split horizon is enabled.
ICMP redirects	Shows whether redirect messages will be sent on this interface.
ICMP unreachable	Shows whether unreachable messages will be sent on this interface.
ICMP mask replies	Shows whether mask replies will be sent on this interface.
IP fast switching	Shows whether fast switching is enabled for this interface. It is generally enabled on serial interfaces, such as this one.

Field	Description
IP Flow switching	Shows whether Flow switching is enabled for this interface.
IP CEF switching	Shows whether Cisco Express Forwarding switching is enabled for the interface.
IP multicast fast switching	Shows whether multicast fast switching is enabled for the interface.
IP route-cache flags are Fast	Shows whether NetFlow is enabled on an interface. Displays "Flow init" to specify that NetFlow is enabled on the interface. Displays "Ingress Flow" to specify that NetFlow is enabled on a subinterface using the ip flow ingress command. Shows "Flow" to specify that NetFlow is enabled on a main interface using the ip route-cache flow command.
Router Discovery	Shows whether the discovery process is enabled for this interface. It is generally disabled on serial interfaces.
IP output packet accounting	Shows whether IP accounting is enabled for this interface and what the threshold (maximum number of entries) is.
TCP/IP header compression	Shows whether compression is enabled.
WCCP Redirect outbound is disabled	Shows the status of whether packets received on an interface are redirected to a cache engine. Displays "enabled" or "disabled."
WCCP Redirect exclude is disabled	Shows the status of whether packets targeted for an interface will be excluded from being redirected to a cache engine. Displays "enabled" or "disabled."
Netflow Data Export (hardware) is enabled	NetFlow Data Expert (NDE) hardware flow status on the interface.

The following example shows how to display a summary of the usability status information for each interface:

```
Device# show ip interface brief
```

```
Interface          IP-Address      OK? Method Status          Protocol
Vlan1              unassigned     YES NVRAM   administratively down down
GigabitEthernet0/0 unassigned     YES NVRAM   down            down
GigabitEthernet1/0/1 unassigned     YES NVRAM   down            down
GigabitEthernet1/0/2 unassigned     YES unset   down            down
GigabitEthernet1/0/3 unassigned     YES unset   down            down
GigabitEthernet1/0/4 unassigned     YES unset   down            down
GigabitEthernet1/0/5 unassigned     YES unset   down            down
GigabitEthernet1/0/6 unassigned     YES unset   down            down
GigabitEthernet1/0/7 unassigned     YES unset   down            down
```

```
<output truncated>
```


Table 2: show ip interface brief Field Descriptions

Field	Description
Interface	Type of interface.
IP-Address	IP address assigned to the interface.
OK?	"Yes" means that the IP Address is valid. "No" means that the IP Address is not valid.
Method	The Method field has the following possible values: <ul style="list-style-type: none"> • RARP or SLARP: Reverse Address Resolution Protocol (RARP) or Serial Line Address Resolution Protocol (SLARP) request. • BOOTP: Bootstrap protocol. • TFTP: Configuration file obtained from the TFTP server. • manual: Manually changed by the command-line interface. • NVRAM: Configuration file in NVRAM. • IPCP: ip address negotiated command. • DHCP: ip address dhcp command. • unset: Unset. • other: Unknown.
Status	Shows the status of the interface. Valid values and their meanings are: <ul style="list-style-type: none"> • up: Interface is up. • down: Interface is down. • administratively down: Interface is administratively down.
Protocol	Shows the operational status of the routing protocol on this interface.

Related Commands

Command	Description
ip interface	Configures a virtual gateway IP interface on a Secure Socket Layer Virtual Private Network (SSL VPN) gateway
show interface status	Displays the status of the interface.

show interfaces

To display the administrative and operational status of all interfaces or for a specified interface, use the **show interfaces** command in the EXEC mode.

```
show interfaces [{interface-id|vlan vlan-id}] [{accounting|capabilities [module number] | debounce | description | etherchannel | flowcontrol | private-vlan mapping | pruning | stats | status [{err-disabled | inactive}]} | trunk}]
```

Syntax	Description
<i>interface-id</i>	(Optional) ID of the interface. Valid interfaces include physical ports (including type, stack member for stacking-capable switches, module, and port number) and port channels. The port channel range is 1 to 128.
vlan <i>vlan-id</i>	(Optional) VLAN identification. The range is 1 to 4094.
accounting	(Optional) Displays accounting information on the interface, including active protocols and input and output packets and octets. Note The display shows only packets processed in software; hardware-switched packets do not appear.
capabilities	(Optional) Displays the capabilities of all interfaces or the specified interface, including the features and options that you can configure on the interface. Though visible in the command line help, this option is not available for VLAN IDs.
module <i>number</i>	(Optional) Displays capabilities of all interfaces on the switch or specified stack member. The range is 1 to 9. This option is not available if you entered a specific interface ID.
description	(Optional) Displays the administrative status and description set for interfaces. Note The output of the show interfaces description command displays information of all the available interfaces whether or not the corresponding network module for these interfaces are connected. These interfaces can be configured if the network module is connected. Run the show interface status command to see which network modules are connected. This is not applicable for Cisco Catalyst 9500 Series High-Performance switches.
etherchannel	(Optional) Displays interface EtherChannel information.
flowcontrol	(Optional) Displays interface flow control information.

private-vlan mapping	(Optional) Displays private-VLAN mapping information for the VLAN switch virtual interfaces (SVIs). This keyword is not available if the switch is running the LAN base feature set.
pruning	(Optional) Displays trunk VTP pruning information for the interface.
stats	(Optional) Displays the input and output packets by switching the path for the interface.
status	(Optional) Displays the status of the interface. A status of unsupported in the Type field means that a non-Cisco small form-factor pluggable (SFP) module is inserted in the module slot.
err-disabled	(Optional) Displays interfaces in an error-disabled state.
inactive	(Optional) Displays interfaces in an inactive state.
trunk	(Optional) Displays interface trunk information. If you do not specify an interface, only information for active trunking ports appears.



Note Though visible in the command-line help strings, the **crb**, **fair-queue**, **irb**, **mac-accounting**, **precedence**, **random-detect**, **rate-limit**, and **shape** keywords are not supported.

Command Default None

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines The **show interfaces capabilities** command with different keywords has these results:

- Use the **show interface capabilities module** *number* command to display the capabilities of all interfaces on that switch in the stack. If there is no switch with that module number in the stack, there is no output.
- Use the **show interfaces** *interface-id* **capabilities** to display the capabilities of the specified interface.
- Use the **show interfaces capabilities** (with no module number or interface ID) to display the capabilities of all interfaces in the stack.



Note The field **Last Input** displayed in the command output indicates the number of hours, minutes, and seconds since the last packet was successfully received by an interface and processed by the CPU on the device. This information can be used to know when a dead interface failed.

Last Input is not updated by fast-switched traffic.

The field **output** displayed in the command output indicates the number of hours, minutes, and seconds since the last packet was successfully transmitted by the interface. The information provided by this field can be useful for knowing when a dead interface failed.

```
Device# show interfaces accounting

Vlan1
      Protocol  Pkts In  Chars In  Pkts Out  Chars Out
      IP        0        0         6         378

Vlan200
      Protocol  Pkts In  Chars In  Pkts Out  Chars Out
No traffic sent or received on this interface.
GigabitEthernet0/0
      Protocol  Pkts In  Chars In  Pkts Out  Chars Out
      Other    165476  11417844  0         0
      Spanning Tree 1240284  64494768  0         0
      ARP      7096    425760   0         0
      CDP      41368  18781072  82908    35318808

GigabitEthernet1/0/1
      Protocol  Pkts In  Chars In  Pkts Out  Chars Out
No traffic sent or received on this interface.
GigabitEthernet1/0/2
      Protocol  Pkts In  Chars In  Pkts Out  Chars Out
No traffic sent or received on this interface.

<output truncated>
```

This is an example of output from the **show interfaces interface description** command when the interface has been described as *Connects to Marketing* by using the **description** interface configuration command:

```
Device# show interfaces fortyGigabitEthernet6/0/2 description

Interface          Status      Protocol Description
Fo1/0/2            up          Connects to Marketing

Device# show interfaces etherchannel
----
Port-channel34:
Age of the Port-channel = 28d:18h:51m:46s
Logical slot/port    = 12/34          Number of ports = 0
GC                   = 0x00000000     HotStandBy port = null
Passive port list    =
Port state           = Port-channel L3-Ag Ag-Not-Inuse
Protocol              = -
Port security        = Disabled
```

This is an example of output from the **show interfaces stats** command for a specified VLAN interface:

```
Device# show interfaces vlan 1 stats
```

Switching path	Pkts In	Chars In	Pkts Out	Chars Out
Processor	1165354	136205310	570800	91731594
Route cache	0	0	0	0
Total	1165354	136205310	570800	91731594

This is an example of output from the **show interfaces status err-disabled** command. It displays the status of interfaces in the error-disabled state:

```
Device# show interfaces status err-disabled
```

Port	Name	Status	Reason
Fo1/0/2		err-disabled	gbic-invalid
Fo2/0/3		err-disabled	dtp-flap

This is an example of output from the **show interfaces interface-id pruning** command:

```
Device# show interfaces gigabitethernet1/0/2 pruning
```

```
Port Vlans pruned for lack of request by neighbor
```

This is an example of output from the **show interfaces description** command:

```
Device# show interfaces description
```

Interface	Status	Protocol	Description
Vl1	admin down	down	
Gi0/0	down	down	
Gil/0/1	down	down	
Gil/0/2	down	down	
Gil/0/3	down	down	
Gil/0/4	down	down	
Gil/0/5	down	down	
Gil/0/6	down	down	
Gil/0/7	down	down	

```
<output truncated>
```

show interfaces counters

To display various counters for the switch or for a specific interface, use the **show interfaces counters** command in privileged EXEC mode.

show interfaces [*interface-id*] **counters** [{**errors** | **etherchannel** | **module** *stack-member-number* | **protocol status** | **trunk**}]

Syntax Description

<i>interface-id</i>	(Optional) ID of the physical interface, including type, stack member (stacking-capable switches only) module, and port number.
errors	(Optional) Displays error counters.
etherchannel	(Optional) Displays EtherChannel counters, including octets, broadcast packets, multicast packets, and unicast packets received and sent.
module <i>stack-member-number</i>	(Optional) Displays counters for the specified stack member. The range is 1 to 9. Note In this command, the module keyword refers to the stack member number. The module number that is part of the interface ID is always zero.
protocol status	(Optional) Displays the status of protocols enabled on interfaces.
trunk	(Optional) Displays trunk counters.



Note Though visible in the command-line help string, the **vlan** *vlan-id* keyword is not supported.

Command Default

None

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

If you do not enter any keywords, all counters for all interfaces are included.

This is an example of partial output from the **show interfaces counters** command. It displays all counters for the switch.

```
Device# show interfaces counters
Port          InOctets    InUcastPkts  InMcastPkts  InBcastPkts
Gi1/0/1             0             0             0             0
Gi1/0/2             0             0             0             0
Gi1/0/3      95285341     43115         1178430       1950
Gi1/0/4             0             0             0             0
```

<output truncated>

This is an example of partial output from the **show interfaces counters module** command for stack member 2. It displays all counters for the specified switch in the stack.

```
Device# show interfaces counters module 2
Port          InOctets    InUcastPkts  InMcastPkts  InBcastPkts
Gi1/0/1       520         2            0            0
Gi1/0/2       520         2            0            0
Gi1/0/3       520         2            0            0
Gi1/0/4       520         2            0            0
```

<output truncated>

This is an example of partial output from the **show interfaces counters protocol status** command for all interfaces:

```
Device# show interfaces counters protocol status
Protocols allocated:
Vlan1: Other, IP
Vlan20: Other, IP, ARP
Vlan30: Other, IP, ARP
Vlan40: Other, IP, ARP
Vlan50: Other, IP, ARP
Vlan60: Other, IP, ARP
Vlan70: Other, IP, ARP
Vlan80: Other, IP, ARP
Vlan90: Other, IP, ARP
Vlan900: Other, IP, ARP
Vlan3000: Other, IP
Vlan3500: Other, IP
GigabitEthernet1/0/1: Other, IP, ARP, CDP
GigabitEthernet1/0/2: Other, IP
GigabitEthernet1/0/3: Other, IP
GigabitEthernet1/0/4: Other, IP
GigabitEthernet1/0/5: Other, IP
GigabitEthernet1/0/6: Other, IP
GigabitEthernet1/0/7: Other, IP
GigabitEthernet1/0/8: Other, IP
GigabitEthernet1/0/9: Other, IP
GigabitEthernet1/0/10: Other, IP, CDP
```

<output truncated>

This is an example of output from the **show interfaces counters trunk** command. It displays trunk counters for all interfaces.

```
Device# show interfaces counters trunk
Port          TrunkFramesTx  TrunkFramesRx  WrongEncap
Gi1/0/1       0              0              0
Gi1/0/2       0              0              0
Gi1/0/3       80678         0              0
Gi1/0/4       82320         0              0
Gi1/0/5       0              0              0
```

<output truncated>

show interfaces switchport

To display the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings, use the **show interfaces switchport** command in privileged EXEC mode.

show interfaces [*interface-id*] **switchport** [{**module** *number*}]

Syntax Description	<p><i>interface-id</i> (Optional) ID of the interface. Valid interfaces include physical ports (including type, stack member for stacking-capable switches, module, and port number) and port channels. The port channel range is 1 to 48.</p> <hr/> <p>module <i>number</i> (Optional) Displays switchport configuration of all interfaces on the switch or specified stack member.</p> <p>The range is 1 to 9.</p> <p>This option is not available if you entered a specific interface ID.</p>				
Command Default	None				
Command Modes	Privileged EXEC				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE Everest 16.5.1a</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE Everest 16.5.1a	This command was introduced.
Release	Modification				
Cisco IOS XE Everest 16.5.1a	This command was introduced.				
Usage Guidelines	<p>Use the show interface switchport module <i>number</i> command to display the switch port characteristics of all interfaces on that switch in the stack. If there is no switch with that module number in the stack, there is no output.</p>				

This is an example of output from the **show interfaces switchport** command for a port. The table that follows describes the fields in the display.



Note Private VLANs are not supported in this release, so those fields are not applicable.

```
Device# show interfaces gigabitethernet1/0/1 switchport
Name: Gi1/0/1
Switchport: Enabled
Administrative Mode: trunk
Operational Mode: down
Administrative Trunking Encapsulation: dot1q
Negotiation of Trunking: On
Access Mode VLAN: 1 (default)
Trunking Native Mode VLAN: 10 (VLAN0010)
Administrative Native VLAN tagging: enabled
Voice VLAN: none
Administrative private-vlan host-association: none
Administrative private-vlan mapping: none
Administrative private-vlan trunk native VLAN: none
Administrative private-vlan trunk Native VLAN tagging: enabled
Administrative private-vlan trunk encapsulation: dot1q
```



```

Administrative private-vlan trunk normal VLANs: none
Administrative private-vlan trunk associations: none
Administrative private-vlan trunk mappings: none
Operational private-vlan: none
Trunking VLANs Enabled: 11-20
Pruning VLANs Enabled: 2-1001
Capture Mode Disabled
Capture VLANs Allowed: ALL

```

```

Protected: false
Unknown unicast blocked: disabled
Unknown multicast blocked: disabled
Appliance trust: none

```

Field	Description
Name	Displays the port name.
Switchport	Displays the administrative and operational status of the port. In this display, the port is in switchport mode.
Administrative Mode Operational Mode	Displays the administrative and operational modes.
Administrative Trunking Encapsulation Operational Trunking Encapsulation Negotiation of Trunking	Displays the administrative and operational encapsulation method and whether trunking negotiation is enabled.
Access Mode VLAN	Displays the VLAN ID to which the port is configured.
Trunking Native Mode VLAN Trunking VLANs Enabled Trunking VLANs Active	Lists the VLAN ID of the trunk that is in native mode. Lists the allowed VLANs on the trunk. Lists the active VLANs on the trunk.
Pruning VLANs Enabled	Lists the VLANs that are pruning-eligible.
Protected	Displays whether or not protected port is enabled (True) or disabled (False) on the interface.
Unknown unicast blocked Unknown multicast blocked	Displays whether or not unknown multicast and unknown unicast traffic is blocked on the interface.
Voice VLAN	Displays the VLAN ID on which voice VLAN is enabled.
Appliance trust	Displays the class of service (CoS) setting of the data packets of the IP phone.

show interfaces transceiver

To display the physical properties of a small form-factor pluggable (SFP) module interface, use the **show interfaces transceiver** command in EXEC mode.

show interfaces [*interface-id*] **transceiver** [{**detail** | **module number** | **properties** | **supported-list** | **threshold-table**}]

Syntax Description

interface-id	(Optional) ID of the physical interface, including type, stack member (stacking-capable switches only) module, and port number.
detail	(Optional) Displays calibration properties, including high and low numbers and any alarm information for any Digital Optical Monitoring (DoM)-capable transceiver if one is installed in the switch.
module number	(Optional) Limits display to interfaces on module on the switch. This option is not available if you entered a specific interface ID.
properties	(Optional) Displays speed, duplex, and inline power settings on an interface.
supported-list	(Optional) Lists all supported transceivers.
threshold-table	(Optional) Displays alarm and warning threshold table.

Command Modes

User EXEC
Privileged EXEC

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Examples

This is an example of output from the **show interfaces interface-id transceiver detail** command:

```
Device# show interfaces gigabitethernet1/1/1 transceiver detail
  ITU Channel not available (Wavelength not available),
  Transceiver is internally calibrated.
  mA:milliamperes, dBm:decibels (milliwatts), N/A:not applicable.
  ++:high alarm, +:high warning, -:low warning, -- :low alarm.
  A2D readouts (if they differ), are reported in parentheses.
  The threshold values are uncalibrated.
```

Port	Temperature (Celsius)	High Alarm Threshold (Celsius)	High Warn Threshold (Celsius)	Low Warn Threshold (Celsius)	Low Alarm Threshold (Celsius)
Gi1/1/1	29.9	74.0	70.0	0.0	-4.0

Port	Voltage (Volts)	High Alarm Threshold (Volts)	High Warn Threshold (Volts)	Low Warn Threshold (Volts)	Low Alarm Threshold (Volts)
Gi1/1/1	3.28	3.60	3.50	3.10	3.00

Port	Optical Transmit Power (dBm)	High Alarm Threshold (dBm)	High Warn Threshold (dBm)	Low Warn Threshold (dBm)	Low Alarm Threshold (dBm)
Gi1/1/1	1.8	7.9	3.9	0.0	-4.0

Port	Optical Receive Power (dBm)	High Alarm Threshold (dBm)	High Warn Threshold (dBm)	Low Warn Threshold (dBm)	Low Alarm Threshold (dBm)
Gi1/1/1	-23.5	-5.0	-9.0	-28.2	-32.2

This is an example of output from the **show interfaces transceiver threshold-table** command:

```
Device# show interfaces transceiver threshold-table
          Optical Tx      Optical Rx      Temp      Laser Bias      Voltage
          -----      -
          DWDM GBIC
Min1      -4.00      -32.00      -4      N/A      4.65
Min2      0.00      -28.00      0      N/A      4.75
Max2      4.00      -9.00      70      N/A      5.25
Max1      7.00      -5.00      74      N/A      5.40
          DWDM SFP
Min1      -4.00      -32.00      -4      N/A      3.00
Min2      0.00      -28.00      0      N/A      3.10
Max2      4.00      -9.00      70      N/A      3.50
Max1      8.00      -5.00      74      N/A      3.60
          RX only WDM GBIC
Min1      N/A      -32.00      -4      N/A      4.65
Min2      N/A      -28.30      0      N/A      4.75
Max2      N/A      -9.00      70      N/A      5.25
Max1      N/A      -5.00      74      N/A      5.40
          DWDM XENPAK
Min1      -5.00      -28.00      -4      N/A      N/A
Min2      -1.00      -24.00      0      N/A      N/A
Max2      3.00      -7.00      70      N/A      N/A
Max1      7.00      -3.00      74      N/A      N/A
          DWDM X2
Min1      -5.00      -28.00      -4      N/A      N/A
Min2      -1.00      -24.00      0      N/A      N/A
Max2      3.00      -7.00      70      N/A      N/A
Max1      7.00      -3.00      74      N/A      N/A
          DWDM XFP
Min1      -5.00      -28.00      -4      N/A      N/A
Min2      -1.00      -24.00      0      N/A      N/A
Max2      3.00      -7.00      70      N/A      N/A
Max1      7.00      -3.00      74      N/A      N/A
          CWDM X2
Min1      N/A      N/A      0      N/A      N/A
Min2      N/A      N/A      0      N/A      N/A
Max2      N/A      N/A      0      N/A      N/A
Max1      N/A      N/A      0      N/A      N/A
```

<output truncated>

show inventory

To display the product inventory listing of all Cisco products installed in the networking device, use the **show inventory** command in user EXEC or privileged EXEC mode.

show inventory {**fru** | **oid** | **raw**} [**entity**]

fru	(Optional) Retrieves information about all Field Replaceable Units (FRUs) installed in the Cisco networking device.
oid	(Optional) Retrieves information about the vendor specific hardware registration identifier referred to as object identifier (OID). The OID identifies the MIB object's location in the MIB hierarchy, and provides a means of accessing the MIB object in a network of managed devices
raw	(Optional) Retrieves information about all Cisco products referred to as entities installed in the Cisco networking device, even if the entities do not have a product ID (PID) value, a unique device identifier (UDI), or other physical identification.
<i>entity</i>	(Optional) Name of a Cisco entity (for example, chassis, backplane, module, or slot). A quoted string may be used to display very specific UDI information; for example "sfslot 1" will display the UDI information for slot 1 of an entity named sfslot.

Command Modes

Privileged EXEC (#)

Command History

Release	Modification
Cisco IOS XE Everest 16.6.1	This command was introduced.
Cisco IOS XE Everest 16.6.3	This command was enhanced to display the serial number for the chassis.

Usage Guidelines

The **show inventory** command retrieves and displays inventory information about each Cisco product in the form of a UDI. The UDI is a combination of three separate data elements: a product identifier (PID), a version identifier (VID), and the serial number (SN).

The PID is the name by which the product can be ordered; it has been historically called the "Product Name" or "Part Number." This is the identifier that one would use to order an exact replacement part.

The VID is the version of the product. Whenever a product has been revised, the VID will be incremented. The VID is incremented according to a rigorous process derived from Telcordia GR-209-CORE, an industry guideline that governs product change notices.

The SN is the vendor-unique serialization of the product. Each manufactured product will carry a unique serial number assigned at the factory, which cannot be changed in the field. This is the means by which to identify an individual, specific instance of a product.

The UDI refers to each product as an entity. Some entities, such as a chassis, will have subentities like slots. Each entity will display on a separate line in a logically ordered presentation that is arranged hierarchically by Cisco entities.

Use the **show inventory** command without options to display a list of Cisco entities installed in the networking device that are assigned a PID.

The following is sample output from the **show inventory** command:

```
Device#show inventory
9500-32QC-SVL#show inv
NAME: "Switch 1 Chassis", DESCR: "Cisco Catalyst 9500 Series Chassis"
PID: C9500-32QC      , VID: V00  , SN: CAT2144L10V

NAME: "Switch 1 Power Supply Module 0", DESCR: "Cisco Catalyst 9500 Series 650W AC Power
Supply"
PID: C9K-PWR-650WAC-R  , VID: V00  , SN: ART2148F53T

NAME: "Switch 1 Power Supply Module 1", DESCR: "Cisco Catalyst 9500 Series 650W AC Power
Supply"
PID: C9K-PWR-650WAC-R  , VID: V01  , SN: ART2151FC04

NAME: "Switch 1 Fan Tray 0", DESCR: "Cisco Catalyst 9500 Series Fan Tray"
PID: C9K-T1-FANTRAY    , VID:      , SN:

NAME: "Switch 1 Fan Tray 1", DESCR: "Cisco Catalyst 9500 Series Fan Tray"
PID: C9K-T1-FANTRAY    , VID:      , SN:

NAME: "Switch 1 Slot 1 Supervisor", DESCR: "Cisco Catalyst 9500 Series Router"
PID: C9500-32QC      , VID: V00  , SN: CAT2144L10V

NAME: "FortyGigabitEthernet1/0/2", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M    , VID: A0  , SN: JPC2144034J-A

NAME: "FortyGigabitEthernet1/0/4", DESCR: "QSFP 40GE SR4"
PID: QSFP-40G-SR4      , VID: 03  , SN: AVP1824S0YQ

NAME: "FortyGigabitEthernet1/0/5", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M   , VID: D   , SN: FIW211101UL-B

NAME: "FortyGigabitEthernet1/0/8", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M   , VID: D   , SN: FIW211101N6-B

NAME: "FortyGigabitEthernet1/0/10", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M   , VID: A   , SN: DTS2045A271-B

NAME: "FortyGigabitEthernet1/0/11", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M    , VID: D   , SN: TED2047K013-B

NAME: "FortyGigabitEthernet1/0/15", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M   , VID: D   , SN: FIS1922011T-B

NAME: "FortyGigabitEthernet1/0/16-qla", DESCR: "CVR 10GE SFP "
PID: CVR-QSFP-SFP10G   , VID: V01  , SN: DTY204604UN

NAME: "FortyGigabitEthernet1/0/16", DESCR: "10GE CU3M"
PID: SFP-H10GB-CU3M    , VID: R   , SN: TED1739B9HY

NAME: "FortyGigabitEthernet1/0/18", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M    , VID: D   , SN: TED2047K10U-A

NAME: "FortyGigabitEthernet1/0/19", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M    , VID: D   , SN: TED2030K4U6-B

NAME: "FortyGigabitEthernet1/0/22", DESCR: "QSFP 40GE CU5M"
PID: QSFP-H40G-CU5M    , VID: A0  , SN: JPC203508YN-B

NAME: "FortyGigabitEthernet1/0/24", DESCR: "QSFP 40GE CU3M"
```

show inventory

```

PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2047K13Y-A

NAME: "FortyGigabitEthernet1/0/25", DESCR: "QSFP 100GE CU3M"
PID: QSFP-100G-CU3M      , VID: A      , SN: APF20412069-A

NAME: "FortyGigabitEthernet1/0/28", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: A0     , SN: JPC214402J7-A

NAME: "FortyGigabitEthernet1/0/30", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2047K13Z-B

NAME: "FortyGigabitEthernet1/0/32", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: 01     , SN: LCC1922G2E8-A

NAME: "HundredGigE1/0/33", DESCR: "QSFP 100GE CU3M"
PID: QSFP-100G-CU3M      , VID: A      , SN: APF20412159-A

NAME: "HundredGigE1/0/47", DESCR: "QSFP 100GE CU3M"
PID: QSFP-100G-CU3M      , VID: A      , SN: APF21010360-B

NAME: "HundredGigE1/0/48", DESCR: "QSFP 100GE CU1M"
PID: QSFP-100G-CU1M      , VID: A      , SN: APF21450009-A

NAME: "Switch 2 Chassis", DESCR: "Cisco Catalyst 9500 Series Chassis"
PID: C9500-32QC          , VID: V00    , SN: CAT2144L10L

NAME: "Switch 2 Power Supply Module 0", DESCR: "Cisco Catalyst 9500 Series 650W AC Power
Supply"
PID: C9K-PWR-650WAC-R    , VID: V00    , SN: ART2141FAZ4

NAME: "Switch 2 Fan Tray 4", DESCR: "Cisco Catalyst 9500 Series Fan Tray"
PID: C9K-T1-FANTRAY      , VID:        , SN:

NAME: "Switch 2 Fan Tray 5", DESCR: "Cisco Catalyst 9500 Series Fan Tray"
PID: C9K-T1-FANTRAY      , VID:        , SN:

NAME: "Switch 2 Slot 1 Supervisor", DESCR: "Cisco Catalyst 9500 Series Router"
PID: C9500-32QC          , VID: V00    , SN: CAT2144L10L

NAME: "SATA disk", DESCR: "disk0 Drive"
PID: C9K-F1-SSD-240G     , VID: V00    , SN: CAT2144L1J0

NAME: "FortyGigabitEthernet2/0/4", DESCR: "QSFP 40GE SR4"
PID: QSFP-40G-SR4        , VID: 03     , SN: AVP1824S0YS

NAME: "FortyGigabitEthernet2/0/6", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2047K0ZN-B

NAME: "FortyGigabitEthernet2/0/7", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2047K0ZN-A

NAME: "FortyGigabitEthernet2/0/8", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2030K4U6-A

NAME: "FortyGigabitEthernet2/0/9", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: A0     , SN: JPC2144034J-B

NAME: "FortyGigabitEthernet2/0/10", DESCR: "QSFP 40GE AOC10M"
PID: QSFP-H40G-AOC10M    , VID: A      , SN: DTS2101A050-B

NAME: "FortyGigabitEthernet2/0/11", DESCR: "QSFP 40GE CU5M"
PID: QSFP-H40G-CU5M      , VID: A0     , SN: JPC203508R1-B

NAME: "FortyGigabitEthernet2/0/13", DESCR: "QSFP 40GE CU3M"

```

```

PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2047K13Y-B

NAME: "FortyGigabitEthernet2/0/14", DESCR: "QSFP 40GE CU2M"
PID: QSFP-H40G-CU2M      , VID: A0     , SN: JPC2039000Z-A

NAME: "FortyGigabitEthernet2/0/15", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M     , VID: A      , SN: DTS2045A271-A

NAME: "FortyGigabitEthernet2/0/17", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M     , VID: D      , SN: FIW211101N6-A

NAME: "FortyGigabitEthernet2/0/18", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2047K013-A

NAME: "FortyGigabitEthernet2/0/19", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M     , VID: D      , SN: FIW211101UL-A

NAME: "FortyGigabitEthernet2/0/20", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M     , VID: D      , SN: FIS1922011T-A

NAME: "FortyGigabitEthernet2/0/21-qls", DESCR: "CVR 10GE SFP "
PID: CVR-QSFP-SFP10G     , VID: V01    , SN: DTY20460528

NAME: "FortyGigabitEthernet2/0/21", DESCR: "10GE CU3M"
PID: SFP-H10GB-CU3M      , VID: B2     , SN: LRM204581VA

NAME: "FortyGigabitEthernet2/0/28", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: A0     , SN: JPC214402J7-B

NAME: "FortyGigabitEthernet2/0/30", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2047K13Z-A

NAME: "FortyGigabitEthernet2/0/32", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M      , VID: 01     , SN: LCC1922G2E8-B

NAME: "HundredGigE2/0/33", DESCR: "QSFP 100GE CU3M"
PID: QSFP-100G-CU3M      , VID: A      , SN: APF21010653-B

NAME: "HundredGigE2/0/47", DESCR: "QSFP 100GE CU3M"
PID: QSFP-100G-CU3M      , VID: A      , SN: APF21010360-A

NAME: "HundredGigE2/0/48", DESCR: "QSFP 100GE CU1M"
PID: QSFP-100G-CU1M      , VID: A      , SN: APF21450009-B

```

Table 3: show inventory Field Descriptions

Field	Description
NAME	Physical name (text string) assigned to the Cisco entity. For example, console or a simple component number (port or module number), such as "1," depending on the physical component naming syntax of the device.
DESCR	Physical description of the Cisco entity that characterizes the object. The physical description includes the hardware serial number and the hardware revision.
PID	Entity product identifier. Equivalent to the entPhysicalModelName MIB variable in RFC 2737.
VID	Entity version identifier. Equivalent to the entPhysicalHardwareRev MIB variable in RFC 2737.
SN	Entity serial number. Equivalent to the entPhysicalSerialNum MIB variable in RFC 2737.

For diagnostic purposes, the **show inventory** command can be used with the **raw** keyword to display every RFC 2737 entity including those without a PID, UDI, or other physical identification.



Note The **raw** keyword option is primarily intended for troubleshooting problems with the **show inventory** command itself.

Enter the **show inventory** command with an *entity* argument value to display the UDI information for a specific type of Cisco entity installed in the networking device. In this example, a list of Cisco entities that match the sfslot argument string is displayed.

```
Device#show inventory "Switch 1 Chassis"
NAME: "Switch 1 Chassis", DESCR: "Cisco Catalyst 9500 Series Chassis"
PID: C9500-32QC      , VID: V00  , SN: CAT2144L10V

NAME: "Switch 1 Power Supply Module 0", DESCR: "Cisco Catalyst 9500 Series 650W AC Power
Supply"
PID: C9K-PWR-650WAC-R  , VID: V00  , SN: ART2148F53T

NAME: "Switch 1 Power Supply Module 1", DESCR: "Cisco Catalyst 9500 Series 650W AC Power
Supply"
PID: C9K-PWR-650WAC-R  , VID: V01  , SN: ART2151FC04

NAME: "Switch 1 Fan Tray 0", DESCR: "Cisco Catalyst 9500 Series Fan Tray"
PID: C9K-T1-FANTRAY    , VID:      , SN:

NAME: "Switch 1 Fan Tray 1", DESCR: "Cisco Catalyst 9500 Series Fan Tray"
PID: C9K-T1-FANTRAY    , VID:      , SN:

NAME: "Switch 1 Slot 1 Supervisor", DESCR: "Cisco Catalyst 9500 Series Router"
PID: C9500-32QC      , VID: V00  , SN: CAT2144L10V

NAME: "FortyGigabitEthernet1/0/2", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M    , VID: A0   , SN: JPC2144034J-A

NAME: "FortyGigabitEthernet1/0/4", DESCR: "QSFP 40GE SR4"
PID: QSFP-40G-SR4      , VID: 03   , SN: AVP1824S0YQ

NAME: "FortyGigabitEthernet1/0/5", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M   , VID: D    , SN: FIW211101UL-B

NAME: "FortyGigabitEthernet1/0/8", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M   , VID: D    , SN: FIW211101N6-B

NAME: "FortyGigabitEthernet1/0/10", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M   , VID: A    , SN: DTS2045A271-B

NAME: "FortyGigabitEthernet1/0/11", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M    , VID: D    , SN: TED2047K013-B

NAME: "FortyGigabitEthernet1/0/15", DESCR: "QSFP 40GE AOC3M"
PID: QSFP-H40G-AOC3M   , VID: D    , SN: FIS1922011T-B

NAME: "FortyGigabitEthernet1/0/16-qs", DESCR: "CVR 10GE SFP "
PID: CVR-QSFP-SFP10G   , VID: V01  , SN: DTY204604UN

NAME: "FortyGigabitEthernet1/0/16", DESCR: "10GE CU3M"
PID: SFP-H10GB-CU3M    , VID: R    , SN: TED1739B9HY

NAME: "FortyGigabitEthernet1/0/18", DESCR: "QSFP 40GE CU3M"
PID: QSFP-H40G-CU3M    , VID: D    , SN: TED2047K10U-A
```



```
NAME: "FortyGigabitEthernet1/0/19", DESCR: "QSFP 40GE CU3M"  
PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2030K4U6-B  
  
NAME: "FortyGigabitEthernet1/0/22", DESCR: "QSFP 40GE CU5M"  
PID: QSFP-H40G-CU5M      , VID: A0     , SN: JPC203508YN-B  
  
NAME: "FortyGigabitEthernet1/0/24", DESCR: "QSFP 40GE CU3M"  
PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2047K13Y-A  
  
NAME: "FortyGigabitEthernet1/0/25", DESCR: "QSFP 100GE CU3M"  
PID: QSFP-100G-CU3M      , VID: A      , SN: APF20412069-A  
  
NAME: "FortyGigabitEthernet1/0/28", DESCR: "QSFP 40GE CU3M"  
PID: QSFP-H40G-CU3M      , VID: A0     , SN: JPC214402J7-A  
  
NAME: "FortyGigabitEthernet1/0/30", DESCR: "QSFP 40GE CU3M"  
PID: QSFP-H40G-CU3M      , VID: D      , SN: TED2047K13Z-B  
  
NAME: "FortyGigabitEthernet1/0/32", DESCR: "QSFP 40GE CU3M"  
PID: QSFP-H40G-CU3M      , VID: 01     , SN: LCC1922G2E8-A  
  
NAME: "HundredGigE1/0/33", DESCR: "QSFP 100GE CU3M"  
PID: QSFP-100G-CU3M      , VID: A      , SN: APF20412159-A  
  
NAME: "HundredGigE1/0/47", DESCR: "QSFP 100GE CU3M"  
PID: QSFP-100G-CU3M      , VID: A      , SN: APF21010360-B  
  
NAME: "HundredGigE1/0/48", DESCR: "QSFP 100GE CU1M"  
PID: QSFP-100G-CU1M      , VID: A      , SN: APF21450009-A
```

You can request even more specific UDI information with the *entity* argument value enclosed in quotation marks.

show memory platform

To display memory statistics of a platform, use the **show memory platform** command in privileged EXEC mode.

show memory platform [{**compressed-swap** | **information** | **page-merging**}]

Syntax Description	
compressed-swap	(Optional) Displays platform memory compressed-swap information.
information	(Optional) Displays general information about the platform.
page-merging	(Optional) Displays platform memory page-merging information.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines Free memory is accurately computed and displayed in the Free Memory field of the command output.

Examples

The following is sample output from the **show memory platform** command:

```
Switch# show memory platform

Virtual memory   : 12874653696
Pages resident  : 627041
Major page faults: 2220
Minor page faults: 2348631

Architecture    : mips64
Memory (kB)
  Physical      : 3976852
  Total         : 3976852
  Used          : 2761276
  Free          : 1215576
  Active        : 2128196
  Inactive      : 1581856
  Inact-dirty   : 0
  Inact-clean   : 0
  Dirty         : 0
  AnonPages     : 1294984
  Bounce        : 0
  Cached        : 1978168
  Commit Limit  : 1988424
  Committed As  : 3343324
  High Total    : 0
  High Free     : 0
  Low Total     : 3976852
  Low Free      : 1215576
  Mapped        : 516316
  NFS Unstable  : 0
  Page Tables   : 17124
  Slab          : 0
```

```

VMmalloc Chunk : 1069542588
VMmalloc Total : 1069547512
VMmalloc Used  : 2588
Writeback      : 0
HugePages Total: 0
HugePages Free : 0
HugePages Rsvd : 0
HugePage Size  : 2048

Swap (kB)
  Total      : 0
  Used       : 0
  Free       : 0
  Cached     : 0

Buffers (kB) : 437136

Load Average
  1-Min      : 1.04
  5-Min      : 1.16
  15-Min     : 0.94

```

The following is sample output from the **show memory platform information** command:

```
Device# show memory platform information
```

```

Virtual memory : 12870438912
Pages resident : 626833
Major page faults: 2222
Minor page faults: 2362455

Architecture : mips64
Memory (kB)
  Physical    : 3976852
  Total       : 3976852
  Used        : 2761224
  Free        : 1215628
  Active      : 2128060
  Inactive    : 1584444
  Inact-dirty : 0
  Inact-clean : 0
  Dirty       : 284
  AnonPages   : 1294656
  Bounce      : 0
  Cached      : 1979644
  Commit Limit : 1988424
  Committed As : 3342184
  High Total  : 0
  High Free   : 0
  Low Total   : 3976852
  Low Free    : 1215628
  Mapped      : 516212
  NFS Unstable : 0
  Page Tables : 17096
  Slab        : 0
VMmalloc Chunk : 1069542588
VMmalloc Total : 1069547512
VMmalloc Used  : 2588
Writeback      : 0
HugePages Total: 0
HugePages Free : 0
HugePages Rsvd : 0
HugePage Size  : 2048

```

show memory platform

```
Swap (kB)
  Total      : 0
  Used       : 0
  Free       : 0
  Cached     : 0

Buffers (kB) : 438228

Load Average
  1-Min      : 1.54
  5-Min      : 1.27
  15-Min     : 0.99
```

show module

To display module information such as switch number, model number, serial number, hardware revision number, software version, MAC address and so on, use this command in user EXEC or privileged EXEC mode.

```
show module [{switch-num}]
```

Syntax Description	<i>switch-num</i>	(Optional) Number of the switch.
Command Default	None	
Command Modes	User EXEC (>) Privileged EXEC (#)	
Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.
Usage Guidelines	Entering the show module command without the <i>switch-num</i> argument is the same as entering the show module all command.	

show mgmt-infra trace messages ilpower

To display inline power messages within a trace buffer, use the **show mgmt-infra trace messages ilpower** command in privileged EXEC mode.

show mgmt-infra trace messages ilpower [*switch stack-member-number*]

Syntax Description	switch <i>stack-member-number</i> (Optional) Specifies the stack member number for which to display inline power messages within a trace buffer.	
Command Default	None	
Command Modes	Privileged EXEC	
Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

This is an output example from the **show mgmt-infra trace messages ilpower** command:

```
Device# show mgmt-infra trace messages ilpower
[10/23/12 14:05:10.984 UTC 1 3] Initialized inline power system configuration fo
r slot 1.
[10/23/12 14:05:10.984 UTC 2 3] Initialized inline power system configuration fo
r slot 2.
[10/23/12 14:05:10.984 UTC 3 3] Initialized inline power system configuration fo
r slot 3.
[10/23/12 14:05:10.984 UTC 4 3] Initialized inline power system configuration fo
r slot 4.
[10/23/12 14:05:10.984 UTC 5 3] Initialized inline power system configuration fo
r slot 5.
[10/23/12 14:05:10.984 UTC 6 3] Initialized inline power system configuration fo
r slot 6.
[10/23/12 14:05:10.984 UTC 7 3] Initialized inline power system configuration fo
r slot 7.
[10/23/12 14:05:10.984 UTC 8 3] Initialized inline power system configuration fo
r slot 8.
[10/23/12 14:05:10.984 UTC 9 3] Initialized inline power system configuration fo
r slot 9.
[10/23/12 14:05:10.984 UTC a 3] Inline power subsystem initialized.
[10/23/12 14:05:18.908 UTC b 264] Create new power pool for slot 1
[10/23/12 14:05:18.909 UTC c 264] Set total inline power to 450 for slot 1
[10/23/12 14:05:20.273 UTC d 3] PoE is not supported on .
[10/23/12 14:05:20.288 UTC e 3] PoE is not supported on .
[10/23/12 14:05:20.299 UTC f 3] PoE is not supported on .
[10/23/12 14:05:20.311 UTC 10 3] PoE is not supported on .
[10/23/12 14:05:20.373 UTC 11 98] Inline power process post for switch 1
[10/23/12 14:05:20.373 UTC 12 98] PoE post passed on switch 1
[10/23/12 14:05:20.379 UTC 13 3] Slot #1: PoE initialization for board id 16387
[10/23/12 14:05:20.379 UTC 14 3] Set total inline power to 450 for slot 1
[10/23/12 14:05:20.379 UTC 15 3] Gi1/0/1 port config Initialized
[10/23/12 14:05:20.379 UTC 16 3] Interface Gi1/0/1 initialization done.
[10/23/12 14:05:20.380 UTC 17 3] Gi1/0/24 port config Initialized
[10/23/12 14:05:20.380 UTC 18 3] Interface Gi1/0/24 initialization done.
[10/23/12 14:05:20.380 UTC 19 3] Slot #1: initialization done.
```

```
[10/23/12 14:05:50.440 UTC 1a 3] Slot #1: PoE initialization for board id 16387  
[10/23/12 14:05:50.440 UTC 1b 3] Duplicate init event
```

show mgmt-infra trace messages ilpower-ha

To display inline power high availability messages within a trace buffer, use the **show mgmt-infra trace messages ilpower-ha** command in privileged EXEC mode.

show mgmt-infra trace messages ilpower-ha [**switch** *stack-member-number*]

Syntax Description	switch <i>stack-member-number</i> (Optional) Specifies the stack member number for which to display inline power messages within a trace buffer.				
Command Default	None				
Command Modes	Privileged EXEC				
Command History	<table border="1"> <thead> <tr> <th style="text-align: left;">Release</th> <th style="text-align: left;">Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE Everest 16.5.1a</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE Everest 16.5.1a	This command was introduced.
Release	Modification				
Cisco IOS XE Everest 16.5.1a	This command was introduced.				

This is an output example from the **show mgmt-infra trace messages ilpower-ha** command:

```
Device# show mgmt-infra trace messages ilpower-ha
[10/23/12 14:04:48.087 UTC 1 3] NG3K_ILPOWER_HA: Created NGWC ILP CF client successfully.
```


show mgmt-infra trace messages platform-mgr-poe

To display platform manager Power over Ethernet (PoE) messages within a trace buffer, use the **show mgmt-infra trace messages platform-mgr-poe** privileged EXEC command.

show mgmt-infra trace messages platform-mgr-poe [*switch stack-member-number*]

Syntax Description	switch <i>stack-member-number</i> (Optional) Specifies the stack member number for which to display messages within a trace buffer.				
Command Default	None				
Command Modes	Privileged EXEC				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE Everest 16.5.1a</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE Everest 16.5.1a	This command was introduced.
Release	Modification				
Cisco IOS XE Everest 16.5.1a	This command was introduced.				

This is an example of partial output from the **show mgmt-infra trace messages platform-mgr-poe** command:

```
Device# show mgmt-infra trace messages platform-mgr-poe
[10/23/12 14:04:06.431 UTC 1 5495] PoE Info: get power controller param sent:
[10/23/12 14:04:06.431 UTC 2 5495] PoE Info: POE_SHUT sent for port 1 (0:0)
[10/23/12 14:04:06.431 UTC 3 5495] PoE Info: POE_SHUT sent for port 2 (0:1)
[10/23/12 14:04:06.431 UTC 4 5495] PoE Info: POE_SHUT sent for port 3 (0:2)
[10/23/12 14:04:06.431 UTC 5 5495] PoE Info: POE_SHUT sent for port 4 (0:3)
[10/23/12 14:04:06.431 UTC 6 5495] PoE Info: POE_SHUT sent for port 5 (0:4)
[10/23/12 14:04:06.431 UTC 7 5495] PoE Info: POE_SHUT sent for port 6 (0:5)
[10/23/12 14:04:06.431 UTC 8 5495] PoE Info: POE_SHUT sent for port 7 (0:6)
[10/23/12 14:04:06.431 UTC 9 5495] PoE Info: POE_SHUT sent for port 8 (0:7)
[10/23/12 14:04:06.431 UTC a 5495] PoE Info: POE_SHUT sent for port 9 (0:8)
[10/23/12 14:04:06.431 UTC b 5495] PoE Info: POE_SHUT sent for port 10 (0:9)
[10/23/12 14:04:06.431 UTC c 5495] PoE Info: POE_SHUT sent for port 11 (0:10)
[10/23/12 14:04:06.431 UTC d 5495] PoE Info: POE_SHUT sent for port 12 (0:11)
[10/23/12 14:04:06.431 UTC e 5495] PoE Info: POE_SHUT sent for port 13 (e:0)
[10/23/12 14:04:06.431 UTC f 5495] PoE Info: POE_SHUT sent for port 14 (e:1)
[10/23/12 14:04:06.431 UTC 10 5495] PoE Info: POE_SHUT sent for port 15 (e:2)
[10/23/12 14:04:06.431 UTC 11 5495] PoE Info: POE_SHUT sent for port 16 (e:3)
[10/23/12 14:04:06.431 UTC 12 5495] PoE Info: POE_SHUT sent for port 17 (e:4)
[10/23/12 14:04:06.431 UTC 13 5495] PoE Info: POE_SHUT sent for port 18 (e:5)
[10/23/12 14:04:06.431 UTC 14 5495] PoE Info: POE_SHUT sent for port 19 (e:6)
[10/23/12 14:04:06.431 UTC 15 5495] PoE Info: POE_SHUT sent for port 20 (e:7)
[10/23/12 14:04:06.431 UTC 16 5495] PoE Info: POE_SHUT sent for port 21 (e:8)
[10/23/12 14:04:06.431 UTC 17 5495] PoE Info: POE_SHUT sent for port 22 (e:9)
[10/23/12 14:04:06.431 UTC 18 5495] PoE Info: POE_SHUT sent for port 23 (e:10)
```

show network-policy profile

To display the network-policy profiles, use the **show network policy profile** command in privileged EXEC mode.

show network-policy profile [*profile-number*] [**detail**]

Syntax Description	<i>profile-number</i> (Optional) Displays the network-policy profile number. If no profile is entered, all network-policy profiles appear.				
	detail (Optional) Displays detailed status and statistics information.				
Command Default	None				
Command Modes	Privileged EXEC				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE Everest 16.5.1a</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE Everest 16.5.1a	This command was introduced.
Release	Modification				
Cisco IOS XE Everest 16.5.1a	This command was introduced.				

This is an example of output from the **show network-policy profile** command:

```
Device# show network-policy profile
Network Policy Profile 10
  voice vlan 17 cos 4
  Interface:
  none
Network Policy Profile 30
  voice vlan 30 cos 5
  Interface:
  none
Network Policy Profile 36
  voice vlan 4 cos 3
  Interface:
  Interface_id
```

show platform hardware capacity



Note This command is not supported on the C9500-12Q-E, C9500-12Q-A, C9500-24Q-E, C9500-24Q-A, C9500-40X-E, and C9500-40X-A models of the Cisco Catalyst 9500 Series Switches.



Note The existing **show platform hardware capacity** command is currently supported, but is going to be deprecated. Use the **show tech-support resource** command instead.

To determine system hardware capacity, use the **show platform hardware capacity** command in privileged EXEC mode.

show platform hardware capacity

Syntax Description This command has no arguments or keywords.

Command Default This command has no default settings.

Command Modes Privileged EXEC (#)

Command History

Release	Modification
Cisco IOS XE Fuji 16.8.1a	This command was introduced.

Example

This example shows how to determine the system hardware capacity

```
Device# show platform hardware capacity
```

```
Module           Model           Operational Status
-----
subslot 1/0     C9500H-32QC     ok

Load Average
Slot  Status  1-Min  5-Min  15-Min
RP0  Healthy  0.07   0.16   0.13

Memory (kB)
Slot  Status  Total      Used (Pct)   Free (Pct)  Committed (Pct)
RP0  Healthy 15958108  3060492 (19%) 12897616 (81%) 25941080 (163%)

CPU Utilization
Slot  CPU    User System  Nice  Idle   IRQ   SIRQ  IOwait
RP0   0     0.70  0.20  0.00  99.10  0.00  0.00  0.00
      1     0.39  0.09  0.00  99.50  0.00  0.00  0.00
      2     0.80  0.40  0.00  98.80  0.00  0.00  0.00
      3     1.10  0.20  0.00  98.69  0.00  0.00  0.00
      4     0.00  0.00  0.00 100.00  0.00  0.00  0.00
      5     2.20  0.00  0.00  97.80  0.00  0.00  0.00
```

show platform hardware capacity

```

6  0.10  3.20  0.00  96.70  0.00  0.00  0.00
7  0.00  0.00  0.00 100.00  0.00  0.00  0.00

```

```

*: interface is up
IHQ: pkts in input hold queue      IQD: pkts dropped from input queue
OHQ: pkts in output hold queue     OQD: pkts dropped from output queue
RXBS: rx rate (bits/sec)           RXPS: rx rate (pkts/sec)
TXBS: tx rate (bits/sec)           TXPS: tx rate (pkts/sec)
TRTL: throttle count

```

Interface			IHQ	IQD	OHQ	OQD	RXBS	RXPS
TXBS	TXPS	TRTL						
Vlan1			0	0	0	0	0	0
0	0	0						
* GigabitEthernet0/0			0	0	0	0	0	0
0	0	0						
Fo1/0/1			0	0	0	0	0	0
0	0	0						
Fo1/0/2			0	0	0	0	0	0
0	0	0						
Fo1/0/3			0	0	0	0	0	0
0	0	0						
Fo1/0/4			0	0	0	0	0	0
0	0	0						
Fo1/0/5			0	0	0	0	0	0
0	0	0						
Fo1/0/6			0	0	0	0	0	0
0	0	0						
Fo1/0/7			0	0	0	0	0	0
0	0	0						
Fo1/0/8			0	0	0	0	0	0
0	0	0						
Fo1/0/9			0	0	0	0	0	0
0	0	0						
Fo1/0/10			0	0	0	0	0	0
0	0	0						
Fo1/0/11			0	0	0	0	0	0
0	0	0						
Fo1/0/12			0	0	0	0	0	0
0	0	0						
Fo1/0/13			0	0	0	0	0	0
0	0	0						
Fo1/0/14			0	0	0	0	0	0
0	0	0						
Fo1/0/15			0	0	0	0	0	0
0	0	0						
Fo1/0/16			0	0	0	0	0	0
0	0	0						
Fo1/0/17			0	0	0	0	0	0
0	0	0						
Fo1/0/18			0	0	0	0	0	0
0	0	0						
Fo1/0/19			0	0	0	0	0	0
0	0	0						
Fo1/0/20			0	0	0	0	0	0
0	0	0						
Fo1/0/21			0	0	0	0	0	0
0	0	0						
Fo1/0/22			0	0	0	0	0	0
0	0	0						

```

Fo1/0/23          0          0          0          0          0          0
0                0          0
* Fo1/0/24        0          0          0          0          0          0
0                0          0
* Fo1/0/25        0          0          0          0          0          0
0                0          0
* Fo1/0/26        0          0          0          0          0          0
0                0          0
* Fo1/0/27        0          0          0          0          0          0
0                0          0
* Fo1/0/28        0          0          0          0          0          0
0                0          0
* Fo1/0/29        0          0          0          0          0          0
0                0          0
* Fo1/0/30        0          0          0          0          0          0
0                0          0
* Fo1/0/31        0          0          0          0          0          0
0                0          0
Fo1/0/32          0          0          0          0          0          0
0                0          0
HundredGigE1/0/33 0          0          0          0          0          0
0                0          0
HundredGigE1/0/34 0          0          0          0          0          0
0                0          0
HundredGigE1/0/35 0          0          0          0          0          0
0                0          0
HundredGigE1/0/36 0          0          0          0          0          0
0                0          0
HundredGigE1/0/37 0          0          0          0          0          0
0                0          0
HundredGigE1/0/38 0          0          0          0          0          0
0                0          0
HundredGigE1/0/39 0          0          0          0          0          0
0                0          0
HundredGigE1/0/40 0          0          0          0          0          0
0                0          0
HundredGigE1/0/41 0          0          0          0          0          0
0                0          0
HundredGigE1/0/42 0          0          0          0          0          0
0                0          0
HundredGigE1/0/43 0          0          0          0          0          0
0                0          0
HundredGigE1/0/44 0          0          0          0          0          0
0                0          0
HundredGigE1/0/45 0          0          0          0          0          0
0                0          0
HundredGigE1/0/46 0          0          0          0          0          0
0                0          0
HundredGigE1/0/47 0          0          0          0          0          0
0                0          0
HundredGigE1/0/48 0          0          0          0          0          0
0                0          0

```

ASIC 0 Info

```

ASIC 0 HSN Table 0 Software info:      FSE 255
    TILE 0: (null)          srip
    TILE 1: (null)          srip
ASIC 0 HSN Table 1 Software info:      FSE 255
    TILE 0: (null)          srip
    TILE 1: (null)          srip
ASIC 0 HSN Table 2 Software info:      FSE 0
    TILE 0: Unicast MAC addresses srip 0 1 2 3
    TILE 1: Unicast MAC addresses srip 0 1 2 3
ASIC 0 HSN Table 3 Software info:      FSE 0

```

show platform hardware capacity

```

        TILE 0: Unicast MAC addresses srip 0 1 2 3
        TILE 1: Unicast MAC addresses srip 0 1 2 3
ASIC 0 HSN Table 4 Software info:      FSE 255
        TILE 0: (null)                srip
        TILE 1: (null)                srip
ASIC 0 HSN Table 5 Software info:      FSE 255
        TILE 0: (null)                srip
        TILE 1: (null)                srip
ASIC 0 HSN Table 6 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
ASIC 0 HSN Table 7 Software info:      FSE 2
        TILE 0: SGT_DGT                srip 0 1 2 3
        TILE 1: SGT_DGT                srip 0 1 2 3
ASIC 0 HSF Table 0 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
        TILE 2: Directly or indirectly connected routes srip 0 1 2 3
        TILE 3: Directly or indirectly connected routes srip 0 1 2 3
        TILE 4: Directly or indirectly connected routes srip 0 1 2 3
        TILE 5: Directly or indirectly connected routes srip 0 1 2 3
        TILE 6: Directly or indirectly connected routes srip 0 1 2 3
        TILE 7: Directly or indirectly connected routes srip 0 1 2 3
ASIC 0 HSF Table 1 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
        TILE 2: Directly or indirectly connected routes srip 0 1 2 3
        TILE 3: Directly or indirectly connected routes srip 0 1 2 3
        TILE 4: Directly or indirectly connected routes srip 0 1 2 3
        TILE 5: Directly or indirectly connected routes srip 0 1 2 3
        TILE 6: Directly or indirectly connected routes srip 0 1 2 3
        TILE 7: Directly or indirectly connected routes srip 0 1 2 3
ASIC 0 HSF Table 2 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
        TILE 2: Directly or indirectly connected routes srip 0 1 2 3
        TILE 3: Directly or indirectly connected routes srip 0 1 2 3
        TILE 4: Directly or indirectly connected routes srip 0 1 2 3
        TILE 5: Directly or indirectly connected routes srip 0 1 2 3
        TILE 6: Directly or indirectly connected routes srip 0 1 2 3
        TILE 7: Directly or indirectly connected routes srip 0 1 2 3
ASIC 0 HSF Table 3 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
        TILE 2: Directly or indirectly connected routes srip 0 1 2 3
        TILE 3: Directly or indirectly connected routes srip 0 1 2 3
        TILE 4: Directly or indirectly connected routes srip 0 1 2 3
        TILE 5: Directly or indirectly connected routes srip 0 1 2 3
        TILE 6: Directly or indirectly connected routes srip 0 1 2 3
        TILE 7: Directly or indirectly connected routes srip 0 1 2 3
ASIC 0 HSF Table 4 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
        TILE 2: Directly or indirectly connected routes srip 0 1 2 3
        TILE 3: Directly or indirectly connected routes srip 0 1 2 3
        TILE 4: Directly or indirectly connected routes srip 0 1 2 3
        TILE 5: Directly or indirectly connected routes srip 0 1 2 3
        TILE 6: Directly or indirectly connected routes srip 0 1 2 3
        TILE 7: Directly or indirectly connected routes srip 0 1 2 3
OVF Info
-----
Table 0 info:  FSE0: 0, FSE1: 255      #hwmabs: 24, #swmabs: 24
              MAB 0: Unicast MAC addresses srip 0 1 2 3      MAB 1: Unicast MAC addresses srip
0 1 2 3

```


show platform hardware capacity

```

MAB 16: Directly or indirectly connected routes srip 0 1 2 3
or indirectly connected routes srip 0 1 2 3
MAB 17: Directly
MAB 18: Directly or indirectly connected routes srip 0 1 2 3
or indirectly connected routes srip 0 1 2 3
MAB 19: Directly
MAB 20: Directly or indirectly connected routes srip 0 1 2 3
or indirectly connected routes srip 0 1 2 3
MAB 21: Directly
MAB 22: Directly or indirectly connected routes srip 0 1 2 3
or indirectly connected routes srip 0 1 2 3
MAB 23: Directly
Table 3 info: FSE0: 2, FSE1: 255 #hwmabs: 24, #swmabs: 24
MAB 0: SGT_DGT srip 0 1 2 3 MAB 1: SGT_DGT srip 0 1 2 3
MAB 2: SGT_DGT srip 0 1 2 3 MAB 3: SGT_DGT srip 0 1 2 3
MAB 4: SGT_DGT srip 0 1 2 3 MAB 5: SGT_DGT srip 0 1 2 3
MAB 6: SGT_DGT srip 0 1 2 3 MAB 7: SGT_DGT srip 0 1 2 3
MAB 8: SGT_DGT srip 0 1 2 3 MAB 9: SGT_DGT srip 0 1 2 3
MAB 10: SGT_DGT srip 0 1 2 3 MAB 11: SGT_DGT srip 0 1 2 3
MAB 12: SGT_DGT srip 0 1 2 3 MAB 13: SGT_DGT srip 0 1 2 3
MAB 14: SGT_DGT srip 0 1 2 3 MAB 15: SGT_DGT srip 0 1 2 3
MAB 16: SGT_DGT srip 0 1 2 3 MAB 17: SGT_DGT srip 0 1 2 3
MAB 18: SGT_DGT srip 0 1 2 3 MAB 19: SGT_DGT srip 0 1 2 3
MAB 20: SGT_DGT srip 0 1 2 3 MAB 21: SGT_DGT srip 0 1 2 3
MAB 22: SGT_DGT srip 0 1 2 3 MAB 23: SGT_DGT srip 0 1 2 3
TLQ Info
-----
Table 0 info: FSE0: 255, FSE1: 255 #hwmabs: 4, #swmabs: 4
MAB 0: (null) srip MAB 1: (null) srip
MAB 2: (null) srip MAB 3: (null) srip
Table 1 info: FSE0: 255, FSE1: 255 #hwmabs: 4, #swmabs: 4
MAB 0: (null) srip MAB 1: (null) srip
MAB 2: (null) srip MAB 3: (null) srip
TAQ Info
-----
Table 0 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Input Ipv4 Security Access Control Entries srip 0 2 MAB 1: Input Ipv4
Security Access Control Entries srip 0 2
MAB 2: Input Ipv4 Security Access Control Entries srip 0 2 MAB 3: Input Ipv4
Security Access Control Entries srip 0 2
Table 1 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Input Ipv4 Security Access Control Entries srip 0 2 MAB 1: Input Ipv4
Security Access Control Entries srip 0 2
MAB 2: Input Ipv4 Security Access Control Entries srip 0 2 MAB 3: Input Ipv4
Security Access Control Entries srip 0 2
Table 2 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Output Ipv4 Security Access Control Entries srip 1 3 MAB 1: Output Ipv4
Security Access Control Entries srip 1 3
MAB 2: Output Ipv4 Security Access Control Entries srip 1 3 MAB 3: Output Ipv4
Security Access Control Entries srip 1 3
Table 3 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Output Ipv4 Security Access Control Entries srip 1 3 MAB 1: Output Ipv4
Security Access Control Entries srip 1 3
MAB 2: Output Ipv4 Security Access Control Entries srip 1 3 MAB 3: Output Ipv4
Security Access Control Entries srip 1 3
Table 4 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Output Ipv4 Security Access Control Entries srip 1 3 MAB 1: Output Ipv4
Security Access Control Entries srip 1 3
MAB 2: Output Ipv4 Security Access Control Entries srip 1 3 MAB 3: Output Ipv4
Security Access Control Entries srip 1 3
Table 5 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Output Non Ipv4 Security Access Control Entries srip 1 3 MAB 1:
Output Non Ipv4 Security Access Control Entries srip 1 3
MAB 2: Output Non Ipv4 Security Access Control Entries srip 1 3 MAB 3:
Output Non Ipv4 Security Access Control Entries srip 1 3
Table 6 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Output Non Ipv4 Security Access Control Entries srip 1 3 MAB 1:
Output Non Ipv4 Security Access Control Entries srip 1 3

```


show platform hardware capacity

```

        MAB 18: Output Non Ipv4 Security Access Control Entries srip 1 3      MAB 19:
Output Non Ipv4 Security Access Control Entries srip 1 3
        MAB 20: Output Non Ipv4 Security Access Control Entries srip 1 3      MAB 21:
Output Non Ipv4 Security Access Control Entries srip 1 3
        MAB 22: Output Non Ipv4 Security Access Control Entries srip 1 3      MAB 23:
Output Non Ipv4 Security Access Control Entries srip 1 3
        MAB 24: Output Non Ipv4 Security Access Control Entries srip 1 3      MAB 25:
Output Non Ipv4 Security Access Control Entries srip 1 3
        MAB 26: Output Non Ipv4 Security Access Control Entries srip 1 3      MAB 27:
Output Non Ipv4 Security Access Control Entries srip 1 3
        MAB 28: Output Non Ipv4 Security Access Control Entries srip 1 3      MAB 29:
Output Non Ipv4 Security Access Control Entries srip 1 3
        MAB 30: Output Non Ipv4 Security Access Control Entries srip 1 3      MAB 31:
Output Non Ipv4 Security Access Control Entries srip 1 3
Table 11 (TAQ) info:   ASE: 0 #hwmabs: 4
        MAB 0: Input Non Ipv4 Security Access Control Entries srip 0 2      MAB 1: Input Non
Ipv4 Security Access Control Entries srip 0 2
        MAB 2: Input Non Ipv4 Security Access Control Entries srip 0 2      MAB 3: Input Non
Ipv4 Security Access Control Entries srip 0 2
Table 12 (TAQ) info:   ASE: 0 #hwmabs: 4
        MAB 0: Input Non Ipv4 Security Access Control Entries srip 0 2      MAB 1: Input Non
Ipv4 Security Access Control Entries srip 0 2
        MAB 2: Input Non Ipv4 Security Access Control Entries srip 0 2      MAB 3: Input Non
Ipv4 Security Access Control Entries srip 0 2
ASIC 1 Info
-----
ASIC 1 HSN Table 0 Software info:      FSE 255
        TILE 0: (null)          srip
        TILE 1: (null)          srip
ASIC 1 HSN Table 1 Software info:      FSE 255
        TILE 0: (null)          srip
        TILE 1: (null)          srip
ASIC 1 HSN Table 2 Software info:      FSE 2
        TILE 0: L3 Multicast entries srip 0 1 2 3
        TILE 1: L3 Multicast entries srip 0 1 2 3
ASIC 1 HSN Table 3 Software info:      FSE 2
        TILE 0: L3 Multicast entries srip 0 1 2 3
        TILE 1: L3 Multicast entries srip 0 1 2 3
ASIC 1 HSN Table 4 Software info:      FSE 255
        TILE 0: (null)          srip
        TILE 1: (null)          srip
ASIC 1 HSN Table 5 Software info:      FSE 255
        TILE 0: (null)          srip
        TILE 1: (null)          srip
ASIC 1 HSN Table 6 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
ASIC 1 HSN Table 7 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
ASIC 1 HSF Table 0 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
        TILE 2: Directly or indirectly connected routes srip 0 1 2 3
        TILE 3: Directly or indirectly connected routes srip 0 1 2 3
        TILE 4: Directly or indirectly connected routes srip 0 1 2 3
        TILE 5: Directly or indirectly connected routes srip 0 1 2 3
        TILE 6: Directly or indirectly connected routes srip 0 1 2 3
        TILE 7: Directly or indirectly connected routes srip 0 1 2 3
ASIC 1 HSF Table 1 Software info:      FSE 1
        TILE 0: Directly or indirectly connected routes srip 0 1 2 3
        TILE 1: Directly or indirectly connected routes srip 0 1 2 3
        TILE 2: Directly or indirectly connected routes srip 0 1 2 3
        TILE 3: Directly or indirectly connected routes srip 0 1 2 3

```

```

TILE 4: Directly or indirectly connected routes srip 0 1 2 3
TILE 5: Directly or indirectly connected routes srip 0 1 2 3
TILE 6: Directly or indirectly connected routes srip 0 1 2 3
TILE 7: Directly or indirectly connected routes srip 0 1 2 3
ASIC 1 HSF Table 2 Software info:      FSE 1
TILE 0: Directly or indirectly connected routes srip 0 1 2 3
TILE 1: Directly or indirectly connected routes srip 0 1 2 3
TILE 2: Directly or indirectly connected routes srip 0 1 2 3
TILE 3: Directly or indirectly connected routes srip 0 1 2 3
TILE 4: Directly or indirectly connected routes srip 0 1 2 3
TILE 5: Directly or indirectly connected routes srip 0 1 2 3
TILE 6: Directly or indirectly connected routes srip 0 1 2 3
TILE 7: Directly or indirectly connected routes srip 0 1 2 3
ASIC 1 HSF Table 3 Software info:      FSE 1
TILE 0: Directly or indirectly connected routes srip 0 1 2 3
TILE 1: Directly or indirectly connected routes srip 0 1 2 3
TILE 2: Directly or indirectly connected routes srip 0 1 2 3
TILE 3: Directly or indirectly connected routes srip 0 1 2 3
TILE 4: Directly or indirectly connected routes srip 0 1 2 3
TILE 5: Directly or indirectly connected routes srip 0 1 2 3
TILE 6: Directly or indirectly connected routes srip 0 1 2 3
TILE 7: Directly or indirectly connected routes srip 0 1 2 3
ASIC 1 HSF Table 4 Software info:      FSE 1
TILE 0: Directly or indirectly connected routes srip 0 1 2 3
TILE 1: Directly or indirectly connected routes srip 0 1 2 3
TILE 2: Directly or indirectly connected routes srip 0 1 2 3
TILE 3: Directly or indirectly connected routes srip 0 1 2 3
TILE 4: Directly or indirectly connected routes srip 0 1 2 3
TILE 5: Directly or indirectly connected routes srip 0 1 2 3
TILE 6: Directly or indirectly connected routes srip 0 1 2 3
TILE 7: Directly or indirectly connected routes srip 0 1 2 3
OVF Info
-----
Table 0 info:  FSE0: 2, FSE1: 255      #hwtabs: 24, #swtabs: 24
MAB  0: L3 Multicast entries srip 0 1 2 3      MAB  1: L3 Multicast entries srip
0 1 2 3
MAB  2: L3 Multicast entries srip 0 1 2 3      MAB  3: L3 Multicast entries srip
0 1 2 3
MAB  4: L3 Multicast entries srip 0 1 2 3      MAB  5: L3 Multicast entries srip
0 1 2 3
MAB  6: L3 Multicast entries srip 0 1 2 3      MAB  7: L3 Multicast entries srip
0 1 2 3
MAB  8: L3 Multicast entries srip 0 1 2 3      MAB  9: L3 Multicast entries srip
0 1 2 3
MAB 10: L3 Multicast entries srip 0 1 2 3      MAB 11: L3 Multicast entries srip
0 1 2 3
MAB 12: L3 Multicast entries srip 0 1 2 3      MAB 13: L3 Multicast entries srip
0 1 2 3
MAB 14: L3 Multicast entries srip 0 1 2 3      MAB 15: L3 Multicast entries srip
0 1 2 3
MAB 16: L3 Multicast entries srip 0 1 2 3      MAB 17: L3 Multicast entries srip
0 1 2 3
MAB 18: L3 Multicast entries srip 0 1 2 3      MAB 19: L3 Multicast entries srip
0 1 2 3
MAB 20: L3 Multicast entries srip 0 1 2 3      MAB 21: L3 Multicast entries srip
0 1 2 3
MAB 22: L3 Multicast entries srip 0 1 2 3      MAB 23: L3 Multicast entries srip
0 1 2 3
Table 1 info:  FSE0: 1, FSE1: 255      #hwtabs: 24, #swtabs: 24
MAB  0: L2 Multicast entries srip 1 3      MAB  1: L2 Multicast entries srip 1 3
MAB  2: L2 Multicast entries srip 1 3      MAB  3: L2 Multicast entries srip 1 3
MAB  4: L2 Multicast entries srip 1 3      MAB  5: L2 Multicast entries srip 1 3
MAB  6: L2 Multicast entries srip 1 3      MAB  7: L2 Multicast entries srip 1 3
MAB  8: L2 Multicast entries srip 1 3      MAB  9: L2 Multicast entries srip 1 3

```

show platform hardware capacity

```

MAB 10: L2 Multicast entries srip 1 3 MAB 11: L2 Multicast entries srip 1 3
MAB 12: L2 Multicast entries srip 1 3 MAB 13: L2 Multicast entries srip 1 3
MAB 14: L2 Multicast entries srip 1 3 MAB 15: L2 Multicast entries srip 1 3
MAB 16: L2 Multicast entries srip 1 3 MAB 17: L2 Multicast entries srip 1 3
MAB 18: L2 Multicast entries srip 1 3 MAB 19: L2 Multicast entries srip 1 3
MAB 20: L2 Multicast entries srip 1 3 MAB 21: L2 Multicast entries srip 1 3
MAB 22: L2 Multicast entries srip 1 3 MAB 23: L2 Multicast entries srip 1 3
Table 2 info: FSE0: 1, FSE1: 255 #hwmabs: 24, #swmabs: 24
MAB 0: L2 Multicast entries srip 1 3 MAB 1: L2 Multicast entries srip 1 3
MAB 2: L2 Multicast entries srip 1 3 MAB 3: L2 Multicast entries srip 1 3
MAB 4: L2 Multicast entries srip 1 3 MAB 5: L2 Multicast entries srip 1 3
MAB 6: L2 Multicast entries srip 1 3 MAB 7: L2 Multicast entries srip 1 3
MAB 8: L2 Multicast entries srip 1 3 MAB 9: L2 Multicast entries srip 1 3
MAB 10: L2 Multicast entries srip 1 3 MAB 11: L2 Multicast entries srip 1 3
MAB 12: L2 Multicast entries srip 1 3 MAB 13: L2 Multicast entries srip 1 3
MAB 14: L2 Multicast entries srip 1 3 MAB 15: L2 Multicast entries srip 1 3
MAB 16: L2 Multicast entries srip 1 3 MAB 17: L2 Multicast entries srip 1 3
MAB 18: L2 Multicast entries srip 1 3 MAB 19: L2 Multicast entries srip 1 3
MAB 20: L2 Multicast entries srip 1 3 MAB 21: L2 Multicast entries srip 1 3
MAB 22: L2 Multicast entries srip 1 3 MAB 23: L2 Multicast entries srip 1 3
Table 3 info: FSE0: 1, FSE1: 255 #hwmabs: 24, #swmabs: 24
MAB 0: L2 Multicast entries srip 1 3 MAB 1: L2 Multicast entries srip 1 3
MAB 2: L2 Multicast entries srip 1 3 MAB 3: L2 Multicast entries srip 1 3
MAB 4: L2 Multicast entries srip 1 3 MAB 5: L2 Multicast entries srip 1 3
MAB 6: L2 Multicast entries srip 1 3 MAB 7: L2 Multicast entries srip 1 3
MAB 8: L2 Multicast entries srip 1 3 MAB 9: L2 Multicast entries srip 1 3
MAB 10: L2 Multicast entries srip 1 3 MAB 11: L2 Multicast entries srip 1 3
MAB 12: L2 Multicast entries srip 1 3 MAB 13: L2 Multicast entries srip 1 3
MAB 14: L2 Multicast entries srip 1 3 MAB 15: L2 Multicast entries srip 1 3
MAB 16: L2 Multicast entries srip 1 3 MAB 17: L2 Multicast entries srip 1 3
MAB 18: L2 Multicast entries srip 1 3 MAB 19: L2 Multicast entries srip 1 3
MAB 20: L2 Multicast entries srip 1 3 MAB 21: L2 Multicast entries srip 1 3
MAB 22: L2 Multicast entries srip 1 3 MAB 23: L2 Multicast entries srip 1 3
TLQ Info
-----
Table 0 info: FSE0: 255, FSE1: 255 #hwmabs: 4, #swmabs: 4
MAB 0: (null) srip MAB 1: (null) srip
MAB 2: (null) srip MAB 3: (null) srip
Table 1 info: FSE0: 255, FSE1: 255 #hwmabs: 4, #swmabs: 4
MAB 0: (null) srip MAB 1: (null) srip
MAB 2: (null) srip MAB 3: (null) srip
TAQ Info
-----
Table 0 (TAQ) info: ASE: 1 #hwmabs: 4
MAB 0: Ingress Netflow ACEs srip 0 2 MAB 1: Ingress Netflow ACEs srip 0 2
MAB 2: Ingress Netflow ACEs srip 0 2 MAB 3: Ingress Netflow ACEs srip 0 2
Table 1 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Policy Based Routing ACEs srip 0 2 MAB 1: Policy Based Routing ACEs
srip 0 2
MAB 2: Policy Based Routing ACEs srip 0 2 MAB 3: Policy Based Routing ACEs
srip 0 2
Table 2 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Policy Based Routing ACEs srip 0 2 MAB 1: Policy Based Routing ACEs
srip 0 2
MAB 2: Policy Based Routing ACEs srip 0 2 MAB 3: Policy Based Routing ACEs
srip 0 2
Table 3 (TAQ) info: ASE: 0 #hwmabs: 4
MAB 0: Policy Based Routing ACEs srip 0 2 MAB 1: Policy Based Routing ACEs
srip 0 2
MAB 2: Policy Based Routing ACEs srip 0 2 MAB 3: Policy Based Routing ACEs
srip 0 2
Table 4 (TAQ) info: ASE: 1 #hwmabs: 4
MAB 0: Egress Netflow ACEs srip 1 3 MAB 1: Egress Netflow ACEs srip 1 3
MAB 2: Egress Netflow ACEs srip 1 3 MAB 3: Egress Netflow ACEs srip 1 3

```

```

Table 5 (TAQ) info:      ASE: 2 #hwmabs: 4
MAB 0: Flow SPAN ACEs  srip 0 2      MAB 1: Flow SPAN ACEs  srip 0 2
MAB 2: Flow Egress SPAN ACEs srip 1 3 MAB 3: Flow Egress SPAN ACEs srip 1 3
Table 6 (TAQ) info:      ASE: 7 #hwmabs: 4
MAB 0: Control Plane Entries srip 1 3 MAB 1: Control Plane Entries srip 1 3
MAB 2: Control Plane Entries srip 1 3 MAB 3: Control Plane Entries srip 1 3
Table 7 (TAQ) info:      ASE: 6 #hwmabs: 4
MAB 0: Tunnels          srip 0 2      MAB 1: Tunnels          srip 0 2
MAB 2: Tunnels          srip 0 2      MAB 3: Tunnels          srip 0 2
Table 8 (TAQ) info:      ASE: 6 #hwmabs: 4
MAB 0: Tunnels          srip 0 2      MAB 1: Tunnels          srip 0 2
MAB 2: Tunnels          srip 0 2      MAB 3: Tunnels          srip 0 2
Table 9 (TAQ) info:      ASE: 3 #hwmabs: 32
MAB 0: Input Ipv4 QoS Access Control Entries srip 0 2 MAB 1: Input Ipv4 QoS Access
Control Entries srip 0 2
MAB 2: Input Ipv4 QoS Access Control Entries srip 0 2 MAB 3: Input Ipv4 QoS Access
Control Entries srip 0 2
MAB 4: Input Ipv4 QoS Access Control Entries srip 0 2 MAB 5: Input Ipv4 QoS Access
Control Entries srip 0 2
MAB 6: Input Ipv4 QoS Access Control Entries srip 0 2 MAB 7: Input Ipv4 QoS Access
Control Entries srip 0 2
MAB 8: Input Ipv4 QoS Access Control Entries srip 0 2 MAB 9: Input Ipv4 QoS Access
Control Entries srip 0 2
MAB 10: Input Ipv4 QoS Access Control Entries srip 0 2 MAB 11: Input Ipv4 QoS
Access Control Entries srip 0 2
MAB 12: Input Ipv4 QoS Access Control Entries srip 0 2 MAB 13: Input Ipv4 QoS
Access Control Entries srip 0 2
MAB 14: Input Ipv4 QoS Access Control Entries srip 0 2 MAB 15: Input Ipv4 QoS
Access Control Entries srip 0 2
MAB 16: Input Ipv4 QoS Access Control Entries srip 0 2 MAB 17: Input Ipv4 QoS
Access Control Entries srip 0 2
MAB 18: Input Non Ipv4 QoS Access Control Entries srip 0 2 MAB 19: Input Non
Ipv4 QoS Access Control Entries srip 0 2
MAB 20: Input Non Ipv4 QoS Access Control Entries srip 0 2 MAB 21: Input Non
Ipv4 QoS Access Control Entries srip 0 2
MAB 22: Input Non Ipv4 QoS Access Control Entries srip 0 2 MAB 23: Input Non
Ipv4 QoS Access Control Entries srip 0 2
MAB 24: Input Non Ipv4 QoS Access Control Entries srip 0 2 MAB 25: Input Non
Ipv4 QoS Access Control Entries srip 0 2
MAB 26: Input Non Ipv4 QoS Access Control Entries srip 0 2 MAB 27: Input Non
Ipv4 QoS Access Control Entries srip 0 2
MAB 28: Input Non Ipv4 QoS Access Control Entries srip 0 2 MAB 29: Input Non
Ipv4 QoS Access Control Entries srip 0 2
MAB 30: Input Non Ipv4 QoS Access Control Entries srip 0 2 MAB 31: Input Non
Ipv4 QoS Access Control Entries srip 0 2
Table 10 (TAQ) info:      ASE: 3 #hwmabs: 32
MAB 0: Output Ipv4 QoS Access Control Entries srip 1 3 MAB 1: Output Ipv4 QoS
Access Control Entries srip 1 3
MAB 2: Output Ipv4 QoS Access Control Entries srip 1 3 MAB 3: Output Ipv4 QoS
Access Control Entries srip 1 3
MAB 4: Output Ipv4 QoS Access Control Entries srip 1 3 MAB 5: Output Ipv4 QoS
Access Control Entries srip 1 3
MAB 6: Output Ipv4 QoS Access Control Entries srip 1 3 MAB 7: Output Ipv4 QoS
Access Control Entries srip 1 3
MAB 8: Output Ipv4 QoS Access Control Entries srip 1 3 MAB 9: Output Ipv4 QoS
Access Control Entries srip 1 3
MAB 10: Output Ipv4 QoS Access Control Entries srip 1 3 MAB 11: Output Ipv4
QoS Access Control Entries srip 1 3
MAB 12: Output Ipv4 QoS Access Control Entries srip 1 3 MAB 13: Output Ipv4
QoS Access Control Entries srip 1 3
MAB 14: Output Ipv4 QoS Access Control Entries srip 1 3 MAB 15: Output Ipv4
QoS Access Control Entries srip 1 3
MAB 16: Output Ipv4 QoS Access Control Entries srip 1 3 MAB 17: Output Ipv4
QoS Access Control Entries srip 1 3

```

show platform hardware capacity

```

MAB 18: Output Non Ipv4 QoS Access Control Entries srip 1 3      MAB 19: Output Non
Ipv4 QoS Access Control Entries srip 1 3
MAB 20: Output Non Ipv4 QoS Access Control Entries srip 1 3      MAB 21: Output Non
Ipv4 QoS Access Control Entries srip 1 3
MAB 22: Output Non Ipv4 QoS Access Control Entries srip 1 3      MAB 23: Output Non
Ipv4 QoS Access Control Entries srip 1 3
MAB 24: Output Non Ipv4 QoS Access Control Entries srip 1 3      MAB 25: Output Non
Ipv4 QoS Access Control Entries srip 1 3
MAB 26: Output Non Ipv4 QoS Access Control Entries srip 1 3      MAB 27: Output Non
Ipv4 QoS Access Control Entries srip 1 3
MAB 28: Output Non Ipv4 QoS Access Control Entries srip 1 3      MAB 29: Output Non
Ipv4 QoS Access Control Entries srip 1 3
MAB 30: Output Non Ipv4 QoS Access Control Entries srip 1 3      MAB 31: Output Non
Ipv4 QoS Access Control Entries srip 1 3
Table 11 (TAQ) info:      ASE: 6 #hwmabs: 4
MAB 0: Tunnels           srip 0 2      MAB 1: Tunnels           srip 0 2
MAB 2: Tunnels           srip 0 2      MAB 3: Macsec SPD       srip 1 3
Table 12 (TAQ) info:      ASE: 5 #hwmabs: 4
MAB 0: Lisp Instance Mapping Entries srip 0 2  MAB 1: Lisp Instance Mapping Entries
srip 0 2
MAB 2: Lisp Instance Mapping Entries srip 0 2  MAB 3: Lisp Instance Mapping Entries
srip 0 2

```

show platform hardware fed switch forward

To display device-specific hardware information, use the **show platform hardware fed switch** *switch_number* command.

This topic elaborates only the forwarding-specific options, that is, the options available with the **show platform hardware fed switch** {*switch_num* | **active** | **standby**} **forward summary** command.

The output of the **show platform hardware fed switch** *switch_number* **forward summary** displays all the details about the forwarding decision taken for the packet.

show platform hardware fed switch {*switch_num* | **active** | **standby**} **forward summary**

Syntax Description	
switch { <i>switch_num</i> active standby }	The switch for which you want to display information. You have the following options : <ul style="list-style-type: none"> • <i>switch_num</i>—ID of the switch. • active—Displays information relating to the active switch. • standby—Displays information relating to the standby switch, if available.
forward summary	Displays packet forwarding information. <p>Note Support for the keyword summary has been discontinued in the Cisco IOS XE Everest 16.6.1 release and later releases.</p>

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.
	Cisco IOS XE Everest 16.6.1 and later releases	Support for the keyword summary was discontinued.

Usage Guidelines Do not use this command unless a technical support representative asks you to. Use this command only when you are working directly with a technical support representative while troubleshooting a problem.

Fields displayed in the command output are explained below.

- **Station Index** : The Station Index is the result of the layer 2 lookup and points to a station descriptor which provides the following:
 - **Destination Index** : Determines the egress port(s) to which the packets should be sent to. Global Port Number(GPN) can be used as the destination index. A destination index with 15 down to 12 bits set indicates the GPN to be used. For example, destination index - 0xF04E corresponds to GPN - 78 (0x4e).
 - **Rewrite Index** : Determines what needs to be done with the packets. For layer 2 switching, this is typically a bridging action

- Flexible Lookup Pipeline Stages(FPS) : Indicates the forwarding decision that was taken for the packet - routing or bridging
- Replication Bit Map : Determines if the packets should be sent to CPU or stack
 - Local Data Copy = 1
 - Remote Data copy = 0
 - Local CPU Copy = 0
 - Remote CPU Copy = 0

Example

This is an example of output from the **show platform hardware fed switch** { *switch_num* | **active** | **standby** } **forward summary** command.

```
Device#show platform hardware fed switch 1 forward summary
Time: Fri Sep 16 08:25:00 PDT 2016
```

Incomming Packet Details:

```
###[ Ethernet ]###
  dst      = 00:51:0f:f2:0e:11
  src      = 00:1d:01:85:ba:22
  type     = ARP
###[ ARP ]###
  hwtype   = 0x1
  ptype    = IPv4
  hwlen    = 6
  plen     = 4
  op       = is-at
  hwsrc    = 00:1d:01:85:ba:22
  psrc     = 10.10.1.33
  hwdst    = 00:51:0f:f2:0e:11
  pdst     = 10.10.1.1
```

```
Ingress:
Switch      : 1
Port        : GigabitEthernet1/0/1
Global Port Number : 1
Local Port Number : 1
Asic Port Number : 21
ASIC Number : 0
STP state   :
             blkLrn31to0: 0xffdffffd
             blkFwd31to0: 0xffdffffd
Vlan        : 1
Station Descriptor : 170
DestIndex   : 0xF009
DestModIndex : 2
RewriteIndex : 2
Forwarding Decision: FPS 2A L2 Destination
```

```
Replication Bitmap:
Local CPU copy   : 0
Local Data copy  : 1
Remote CPU copy  : 0
Remote Data copy : 0
```



```
Egress:  
Switch          : 1  
Outgoing Port   : GigabitEthernet1/0/9  
Global Port Number : 9  
ASIC Number     : 0  
Vlan            : 1
```

show platform hardware fed switch forward interface

To debug forwarding information and to trace the packet path in the hardware forwarding plane, use the **show platform hardware fed switch *switch_number* forward interface** command. This command simulates a user-defined packet and retrieves the forwarding information from the hardware forwarding plane. A packet is generated on the ingress port based on the packet parameters that you have specified in this command. You can also provide a complete packet from the captured packets stored in a PCAP file.

This topic elaborates only the interface forwarding-specific options, that is, the options available with the **show platform hardware fed switch {*switch_num* | **active** | **standby** } forward interface** command.

show platform hardware fed switch {*switch_num* | **active | **standby** } forward interface *interface-type* *interface-number* source-mac-address *destination-mac-address* {*protocol-number* | **arp** | **cos** | **ipv4** | **ipv6** | **mpls** }**

show platform hardware fed switch {*switch_num* | **active | **standby** } forward interface *interface-type* *interface-number* pcap *pcap-file-name* number *packet-number* data**

show platform hardware fed switch {*switch_num* | **active | **standby** } forward interface *interface-type* *interface-number* vlan *vlan-id* source-mac-address *destination-mac-address* {*protocol-number* | **arp** | **cos** | **ipv4** | **ipv6** | **mpls** }**

Syntax Description

switch { <i>switch_num</i> active standby }	The switch on which packet tracing has to be scheduled. The input port should be available on this switch. You have the following options : <ul style="list-style-type: none"> • <i>switch_num</i>—ID of the switch on which the ingress port is present. • active—indicates the active switch on which the the ingress port is present. • standby—indicates the standby switch on which the ingress port is present. <p>Note This keyword is not supported.</p>
interface <i>interface-type</i> <i>interface-number</i>	The input interface on which packet trace is simulated.
<i>source-mac-address</i>	The source MAC address of the packet you want to simulate.
<i>destination-mac-address</i>	The MAC address of the destination interface in hexadecimal format.
<i>protocol-number</i>	The number assigned to any L3 protocol.
arp	The Address Resolution Protocol (ARP) parameters.
ipv4	The IPv4 packet parameters.
ipv6	The IPv6 packet parameters.
mpls	The Multiprotocol Label Switching (MPLS) label parameters.

cos	The class of service (CoS) number from 0 to 7 to set priority.
pcap <i>pcap-file-name</i>	Name of the pcap file in internal flash (flash:). Ensure that the file already exists in flash:.
number <i>packet-number</i>	Specifies the packet number in the pcap file.
vlan <i>vlan-id</i>	VLAN id of the dot1q header in the simulated packet. The range is 1 to 4096.

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.
	Cisco IOS XE Fuji 16.9.1	The command was enhanced to support MPLS/ARP/VxLAN packet parameters and trace packets captured in a PCAP file.
	Cisco IOS XE Gibraltar 16.10.1	The command was enhanced to support data capture across a stack.

Usage Guidelines Do not use this command unless a technical support representative asks you to. Use this command only when you are working directly with a technical support representative while troubleshooting a problem.

This command supports the following packet types:

- Non-IP packets with any L3 protocol
- ARP packets
- IPv4 packets with any L4 protocol
- IPv4 packets with TCP/UDP/IGMP/ICMP/SCTP payload
- VxLAN packets
- MPLS packets with up to 3 Labels and meta data
- MPLS packets with IPv4/IPv6 payload
- IPv6 packets with TCP/UDP/IGMP/ICMP/SCTP payload

In a stack environment, you can trace packets across the stack irrespective of the number of stack members and topology. The **show platform hardware fed switch** *switch-number* **forward interface** *interface-type interface-number* command consolidates packet-forwarding information of all the stack members on the ingress switch. To achieve this, ensure that the switch number specified in the *switch_num* and *interface-number* arguments are of the input switch and that the number matches.

To trace any particular packet from the captured packets stored in a PCAP file, use the **show platform hardware fed switch forward interface** *interface-type interface-number* **pcap** *pcap-file-name number packet-number* **data** command.

Example

This is an example of output from the **show platform hardware fed switch** {*switch_num* | **active** | **standby** } **forward interface** command.

```
Device#show platform hardware fed switch active forward interface gigabitEthernet 1/0/35
0000.0022.0055 0000.0055.0066 ipv4 44.44.0.2 55.55.0.2 udp 1222 3333
```

Show forward is running in the background. After completion, syslog will be generated.

```
*Sep 24 05:57:36.614: %SHFWD-6-PACKET_TRACE_DONE: Switch 1 R0/0: fed: Packet Trace Complete:
  Execute (show platform hardware fed switch <> forward last summary|detail)
*Sep 24 05:57:36.614: %SHFWD-6-PACKET_TRACE_FLOW_ID: Switch 1 R0/0: fed: Packet Trace Flow
id is 150323855361
```

Related Commands

Command	Description
monitor capture interface	Configures monitor capture points specifying an attachment point and the packet flow direction.
monitor capture start	Starts the capture of packet data at a traffic trace point into a buffer.
monitor capture stop	Stops the capture of packet data at a traffic trace point.
monitor capture export	Saves the captured packets in the buffer. Use this command to export the monitor capture buffer to a pcap file in flash: that you can use as an input in the show forward with pcap .

show platform hardware fed switch forward last summary

To display a summary of packet tracing data from a switch or switches in a stack, use the **show platform hardware fed switch *switch_number* forward last summary** command.

The output of the **show platform hardware fed switch *switch_number* forward last summary** command displays all the details about the forwarding decision taken for the packet from the last time the **show forward** command was run.

show platform hardware fed switch {*switch_number* | **active** | **standby**} **forward last summary**

Syntax Description

switch { <i>switch_number</i> active standby }	The switch on which you want to schedule a packet capture for a port. You have the following options : <ul style="list-style-type: none"> • <i>switch_num</i>—ID of the switch on which the ingress port is present. • active—indicates the active switch on which the the ingress port is present. • standby—indicates the standby switch on which the ingress port is present. <p>Note This keyword is not supported.</p>
---	---

forward last summary	Displays packet forwarding information.
-----------------------------	---

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.
Cisco IOS XE Everest 16.6.1 and later releases	Support for the keyword summary was discontinued.
Cisco IOS XE Fuji 16.9.1	Support for keywords last and summary is introduced.
Cisco IOS XE Gibraltar 16.10.1	The output of the command was enhanced to display the details about all the copies of the packets and the corresponding outgoing ports.

Usage Guidelines

Do not use this command unless a technical support representative asks you to. Use this command only when you are working directly with a technical support representative while troubleshooting a problem.

With Cisco IOS XE Gibraltar 16.10.1, **show platform hardware fed switch forward last summary** command is enhanced to:

- Inject the debug packets from the CPU to simulate the incoming port and packets

- Use the debug packets to trace the packet in hardware data-path to provide forwarding details such as lookup, adjacency, rewrite information, drop decision, outgoing port and so on
- Drop the original packets at egress so as not to transmit the packet to the outgoing port
- Send a copy of all the packets to the CPU and display the details in the packet tracing output

Example

This is an example of output from the **show platform hardware fed switch** {*switch_number* | **active** | **standby**} **forward last summary** command.

```
Device#show platform hardware fed switch active forward last summary
Input Packet Details:
###[ Ethernet ]###
  dst      = 01:00:5e:01:01:02
  src      = 00:00:00:03:00:05
  type     = 0x0
###[ Raw ]###
  load     = '00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00'
Ingress:
  Port                : GigabitEthernet1/0/11
  Global Port Number  : 11
  Local Port Number   : 11
  Asic Port Number    : 10
  Asic Instance       : 1
  Vlan                 : 20
  Mapped Vlan ID      : 6
  STP Instance        : 4
  BlockForward        : 0
  BlockLearn          : 0
  L3 Interface        : 39
    IPv4 Routing       : enabled
    IPv6 Routing       : enabled
    Vrf Id             : 0
Adjacency:
  Station Index       : 3      [SI_DIET_L2]
  Destination Index   : 18
  Rewrite Index       : 2
  Replication Bit Map : 0x15  ['localData', 'remoteData', 'coreData']
Decision:
  Destination Index   : 24     [DI_DIET_L2]
  Rewrite Index       : 2      [RI_L2]
  Dest Mod Index      : 9      [DMI_IGMP_CTRL_Q]
  CPU Map Index       : 0      [CMI_NULL]
  Forwarding Mode     : 0      [Bridging]
  Replication Bit Map :        ['localData', 'remoteData', 'coreData']
  Winner              :        L2DESTMACVLAN LOOKUP
  Qos Label           : 65
  SGT                 : 0
  DGTID               : 0
Egress:
  Possible Replication :
    Port              : GigabitEthernet1/0/11
    Port              : GigabitEthernet1/0/22
    Port              : GigabitEthernet2/0/1
  Output Port Data    :
    Port              : GigabitEthernet1/0/22
    Global Port Number : 22
```

```

Local Port Number      : 22
Asic Port Number      : 21
Asic Instance         : 0
Unique RI             : 2
Rewrite Type          : 1      [L2_BRIDGE]
Mapped Rewrite Type   : 1      [L2_BRIDGE]
Vlan                  : 20
Mapped Vlan ID        : 6
Port                  : GigabitEthernet2/0/1
Global Port Number    : 97
Local Port Number     : 1
Asic Port Number      : 0
Asic Instance         : 1
Unique RI             : 2
Rewrite Type          : 1      [L2_BRIDGE]
Mapped Rewrite Type   : 1      [L2_BRIDGE]
Vlan                  : 20
Mapped Vlan ID        : 6

```

Output Packet Details:

```

Port                  : GigabitEthernet1/0/22
###[ Ethernet ]###
dst                  = 01:00:5e:01:01:02
src                  = 00:00:00:03:00:05
type                 = 0x0
###[ Raw ]###
load                = '00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00'
Port                  : GigabitEthernet2/0/1
###[ Ethernet ]###
dst                  = 01:00:5e:01:01:02
src                  = 00:00:00:03:00:05
type                 = 0x0
###[ Raw ]###
load                = '00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00'
*****

```

show platform resources

To display platform resource information, use the **show platform resources** command in privileged EXEC mode.

show platform resources

This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines The output of this command displays the used memory, which is total memory minus the accurate free memory.

Example

The following is sample output from the **show platform resources** command:

```
Switch# show platform resources
```

```
**State Acronym: H - Healthy, W - Warning, C - Critical
```

Resource State	Usage	Max	Warning	Critical
Control Processor H	7.20%	100%	90%	95%
DRAM H	2701MB (69%)	3883MB	90%	95%

show platform software audit

To display the SE Linux Audit logs, use the **show platform software audit** command in privileged EXEC mode.

```
show platform software audit {all | summary | [switch {switch-number | active | standby}]
{0 | F0 | R0 | {FP | RP} {active}}}
```

Syntax Description		
all		Shows the audit log from all the slots.
summary		Shows the audit log summary count from all the slots.
switch		Shows the audit logs for a slot on a specific switch.
<i>switch-number</i>		Selects the switch with the specified switch number.
switch active		Selects the active instance of the switch.
standby		Selects the standby instance of the switch.
0		Shows the audit log for the SPA-Inter-Processor slot 0.
F0		Shows the audit log for the Embedded-Service-Processor slot 0.
R0		Shows the audit log for the Route-Processor slot 0.
FP active		Shows the audit log for the active Embedded-Service-Processor slot.
RP active		Shows the audit log for the active Route-Processor slot.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Usage Guidelines This command was introduced in the Cisco IOS XE Gibraltar 16.10.1 as a part of the SELinux Permissive Mode feature. The **show platform software audit** command displays the system logs containing the access violation events.

In Cisco IOS XE Gibraltar 16.10.1, operation in a permissive mode is available - with the intent of confining specific components (process or application) of the IOS-XE platform. In the permissive mode, access violation events are detected and system logs are generated, but the event or operation itself is not blocked. The solution operates mainly in an access violation detection mode.

The following is a sample output of the **show software platform software audit summary** command:

show platform software audit

```
Device# show platform software audit summary
```

```
=====
AUDIT LOG ON switch 1
-----
AVC Denial count: 58
=====
```

The following is a sample output of the **show software platform software audit all** command:

```
Device# show platform software audit all
```

```
=====
AUDIT LOG ON switch 1
-----
===== START =====
type=AVC msg=audit(1539222292.584:100): avc: denied { read } for pid=14017
comm="mcp_trace_filte" name="crashinfo" dev="rootfs" ino=13667
scontext=system_u:system_r:polaris_trace_filter_t:s0
tcontext=system_u:object_r:polaris_disk_crashinfo_t:s0 tclass=lnk_file permissive=1
type=AVC msg=audit(1539222292.584:100): avc: denied { getattr } for pid=14017
comm="mcp_trace_filte" path="/mnt/sd1" dev="sda1" ino=2
scontext=system_u:system_r:polaris_trace_filter_t:s0
tcontext=system_u:object_r:polaris_disk_crashinfo_t:s0 tclass=dir permissive=1
type=AVC msg=audit(1539222292.586:101): avc: denied { getattr } for pid=14028 comm="ls"
path="/tmp/ufs/crashinfo" dev="tmpfs" ino=58407
scontext=system_u:system_r:polaris_trace_filter_t:s0
tcontext=system_u:object_r:polaris_ncd_tmp_t:s0 tclass=dir permissive=1
type=AVC msg=audit(1539222292.586:102): avc: denied { read } for pid=14028 comm="ls"
name="crashinfo" dev="tmpfs" ino=58407 scontext=system_u:system_r:polaris_trace_filter_t:s0
tcontext=system_u:object_r:polaris_ncd_tmp_t:s0 tclass=dir permissive=1
type=AVC msg=audit(1539438600.896:119): avc: denied { execute } for pid=8300 comm="sh"
name="id" dev="loop0" ino=6982 scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:bin_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438600.897:120): avc: denied { execute_no_trans } for pid=8300
comm="sh"
path="/tmp/sw/mount/cat9k-rpbase.2018-10-02_00.13_mhungund.SSA.pkg/nyquist/usr/bin/id"
dev="loop0" ino=6982 scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:bin_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438615.535:121): avc: denied { name_connect } for pid=26421
comm="nginx" dest=8098 scontext=system_u:system_r:polaris_nginx_t:s0
tcontext=system_u:object_r:polaris_caf_api_port_t:s0 tclass=tcp_socket permissive=1
type=AVC msg=audit(1539438624.916:122): avc: denied { execute_no_trans } for pid=8600
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438648.936:123): avc: denied { execute_no_trans } for pid=9307
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438678.649:124): avc: denied { name_connect } for pid=26421
comm="nginx" dest=8098 scontext=system_u:system_r:polaris_nginx_t:s0
tcontext=system_u:object_r:polaris_caf_api_port_t:s0 tclass=tcp_socket permissive=1
type=AVC msg=audit(1539438696.969:125): avc: denied { execute_no_trans } for pid=10057
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438732.973:126): avc: denied { execute_no_trans } for pid=10858
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438778.008:127): avc: denied { execute_no_trans } for pid=11579
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
```

```

type=AVC msg=audit(1539438800.156:128): avc: denied { name_connect } for pid=26421
comm="nginx" dest=8098 scontext=system_u:system_r:polaris_nginx_t:s0
tcontext=system_u:object_r:polaris_caf_api_port_t:s0 tclass=tcp_socket permissive=1
type=AVC msg=audit(1539438834.099:129): avc: denied { execute_no_trans } for pid=12451
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539440246.697:149): avc: denied { name_connect } for pid=26421
comm="nginx" dest=8098 scontext=system_u:system_r:polaris_nginx_t:s0
tcontext=system_u:object_r:polaris_caf_api_port_t:s0 tclass=tcp_socket permissive=1
type=AVC msg=audit(1539440299.119:150): avc: denied { name_connect } for pid=26421
comm="nginx" dest=8098 scontext=system_u:system_r:polaris_nginx_t:s0
tcontext=system_u:object_r:polaris_caf_api_port_t:s0 tclass=tcp_socket permissive=1
===== END =====
=====

```

The following is a sample output of the **show software platform software audit switch** command:

```
Device# show platform software audit switch active R0
```

```

===== START =====
type=AVC msg=audit(1539222292.584:100): avc: denied { read } for pid=14017
comm="mcp_trace_filte" name="crashinfo" dev="rootfs" ino=13667
scontext=system_u:system_r:polaris_trace_filter_t:s0
tcontext=system_u:object_r:polaris_disk_crashinfo_t:s0 tclass=lnk_file permissive=1
type=AVC msg=audit(1539222292.584:100): avc: denied { getattr } for pid=14017
comm="mcp_trace_filte" path="/mnt/sd1" dev="sdal" ino=2
scontext=system_u:system_r:polaris_trace_filter_t:s0
tcontext=system_u:object_r:polaris_disk_crashinfo_t:s0 tclass=dir permissive=1
type=AVC msg=audit(1539222292.586:101): avc: denied { getattr } for pid=14028 comm="ls"
path="/tmp/ufs/crashinfo" dev="tmpfs" ino=58407
scontext=system_u:system_r:polaris_trace_filter_t:s0
tcontext=system_u:object_r:polaris_ncd_tmp_t:s0 tclass=dir permissive=1
type=AVC msg=audit(1539222292.586:102): avc: denied { read } for pid=14028 comm="ls"
name="crashinfo" dev="tmpfs" ino=58407 scontext=system_u:system_r:polaris_trace_filter_t:s0
tcontext=system_u:object_r:polaris_ncd_tmp_t:s0 tclass=dir permissive=1
type=AVC msg=audit(1539438624.916:122): avc: denied { execute_no_trans } for pid=8600
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438648.936:123): avc: denied { execute_no_trans } for pid=9307
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438678.649:124): avc: denied { name_connect } for pid=26421
comm="nginx" dest=8098 scontext=system_u:system_r:polaris_nginx_t:s0
tcontext=system_u:object_r:polaris_caf_api_port_t:s0 tclass=tcp_socket permissive=1
type=AVC msg=audit(1539438696.969:125): avc: denied { execute_no_trans } for pid=10057
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438732.973:126): avc: denied { execute_no_trans } for pid=10858
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438778.008:127): avc: denied { execute_no_trans } for pid=11579
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438800.156:128): avc: denied { name_connect } for pid=26421
comm="nginx" dest=8098 scontext=system_u:system_r:polaris_nginx_t:s0
tcontext=system_u:object_r:polaris_caf_api_port_t:s0 tclass=tcp_socket permissive=1
type=AVC msg=audit(1539438834.099:129): avc: denied { execute_no_trans } for pid=12451
comm="auto_upgrade_se" path="/bin/bash" dev="rootfs" ino=7276
scontext=system_u:system_r:polaris_auto_upgrade_server_rp_t:s0

```

```
tcontext=system_u:object_r:shell_exec_t:s0 tclass=file permissive=1
type=AVC msg=audit(1539438860.907:130): avc: denied { name_connect } for pid=26421
comm="nginx" dest=8098 scontext=system_u:system_r:polaris_nginx_t:s0
tcontext=system_u:object_r:polaris_caf_api_port_t:s0 tclass=tcp_socket permissive=1
===== END =====
=====
```

show platform software fed switch punt cpuq rates

To display the rate at which packets are punted, including the drops in the punted path, use the **show platform software fed switch punt cpuq rates** command in privileged EXEC mode.

show platform software fed switch {*switch-number* | **active** | **standby**} **punt cpuq rates**

Syntax Description	switch	{ <i>switch-number</i> active standby }	Displays information about the switch. You have the following options:
			<ul style="list-style-type: none"> <i>switch-number</i>. active—Displays information relating to the active switch. standby—Displays information relating to the standby switch, if available.
			Note This keyword is not supported.
	punt		Specifies the punt information.
	cpuq		Specifies information about CPU receive queue.
	rates		Specifies the rate at which the packets are punted.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Usage Guidelines The output of this command displays the rate in packets per second at intervals of 10 seconds, 1 minute and 5 minutes.

Example

The following is sample output from the **show platform software fed switch active punt cpuq rates** command.

```
Device#show platform software fed switch active punt cpuq rates
```

```
Punt Rate CPU Q Statistics
```

```
Packets per second averaged over 10 seconds, 1 min and 5 mins
```

Q no	Queue Name	Rx 10s	Rx 1min	Rx 5min	Drop 10s	Drop 1min	Drop 5min
0	CPU_Q_DOT1X_AUTH	0	0	0	0	0	0
1	CPU_Q_L2_CONTROL	0	0	0	0	0	0
2	CPU_Q_FORUS_TRAFFIC	336	266	320	0	0	0

show platform software fed switch punt cpuq rates

```

3 CPU_Q_ICMP_GEN 0 0 0 0 0 0
4 CPU_Q_ROUTING_CONTROL 0 0 0 0 0 0
5 CPU_Q_FORUS_ADDR_RESOLUTION 0 0 0 0 0 0
6 CPU_Q_ICMP_REDIRECT 0 0 0 0 0 0
7 CPU_Q_INTER_FED_TRAFFIC 0 0 0 0 0 0
8 CPU_Q_L2LVX_CONTROL_PKT 0 0 0 0 0 0
9 CPU_Q_EWLC_CONTROL 0 0 0 0 0 0
10 CPU_Q_EWLC_DATA 0 0 0 0 0 0
11 CPU_Q_L2LVX_DATA_PKT 0 0 0 0 0 0
12 CPU_Q_BROADCAST 0 0 0 0 0 0
13 CPU_Q_LEARNING_CACHE_OVFL 0 0 0 0 0 0
14 CPU_Q_SW_FORWARDING 0 0 0 0 0 0
15 CPU_Q_TOPOLOGY_CONTROL 0 0 0 0 0 0
16 CPU_Q_PROTO_SNOOPING 0 0 0 0 0 0
17 CPU_Q_DHCP_SNOOPING 0 0 0 0 0 0
18 CPU_Q_TRANSIT_TRAFFIC 0 0 0 0 0 0
19 CPU_Q_RPF_FAILED 0 0 0 0 0 0
20 CPU_Q_MCAST_END_STATION_SERVICE 0 0 0 0 0 0
21 CPU_Q_LOGGING 0 0 0 0 0 0
22 CPU_Q_PUNT_WEBAUTH 0 0 0 0 0 0
23 CPU_Q_HIGH_RATE_APP 0 0 0 0 0 0
24 CPU_Q_EXCEPTION 0 0 0 0 0 0
25 CPU_Q_SYSTEM_CRITICAL 0 0 0 0 0 0
26 CPU_Q_NFL_SAMPLED_DATA 0 0 0 0 0 0
27 CPU_Q_LOW_LATENCY 0 0 0 0 0 0
28 CPU_Q_EGR_EXCEPTION 0 0 0 0 0 0
29 CPU_Q_FSS 0 0 0 0 0 0
30 CPU_Q_MCAST_DATA 0 0 0 0 0 0
31 CPU_Q_GOLD_PKT 0 0 0 0 0 0

```

The table below describes the significant fields shown in the display.

Table 4: show platform software fed switch active punt cpuq rates Field Descriptions

Field	Description
Queue Name	Name of the queue.
Rx	The rate at which the packets are received per second in 10s, 1 minute and 5 minutes.
Drop	The rate at which the packets are dropped per second in 10s, 1 minute and 5 minutes.

show platform software fed switch punt packet-capture display

To display packet capture information during high CPU utilization, use the **show platform software fed switch active punt packet-capture display** command in privileged EXEC mode.

show platform software fed switch active punt packet-capture display { detailed | hexdump }

Syntax Description	switch { <i>switch-number</i> active standby }	Displays information about a switch. You have the following options:
		<ul style="list-style-type: none"> active—Displays information relating to the active switch. standby—Displays information relating to the standby switch, if available. <p>Note The standby keyword is not supported.</p>
	punt	Specifies punt information.
	packet-capture display	Specifies information about the captured packet.
	detailed	Specifies detailed information about the captured packet.
	hex-dump	Specifies information about the captured packet, in hex format.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Usage Guidelines The output of this command displays the periodic and persistent logs of CPU-bound packets, inband CPU traffic rates, and running CPU processes when the CPU passes a high CPU utilization threshold.

Examples The following is a sample output from the **show platform software fed switch active punt packet-capture display detailed** command:

```
Device# show platform software fed switch active punt packet-capture display detailed
Punt packet capturing: disabled. Buffer wrapping: disabled
Total captured so far: 101 packets. Capture capacity : 4096 packets

----- Packet Number: 1, Timestamp: 2018/09/04 23:22:10.179 -----
interface : GigabitEthernet2/0/2 [if-id: 0x00000032] (physical)
ether hdr : dest mac: 0100.0ccc.cccd, src mac: 2c36.f8fc.4884
ether hdr : ethertype: 0x0032

Doppler Frame Descriptor :
```

```
show platform software fed switch punt packet-capture display
```

```
0000000044004E04 C00F402D94510000 0000000000000100 0000400401000000  
0000000001000050 000000006D000100 0000000025836200 0000000000000000
```

```
Packet Data Dump (length: 68 bytes) :
```

```
01000CCCCCD2C36 F8FC48840032AAAA 0300000C010B0000 00000080012C36F8  
FC48800000000080 012C36F8FC488080 040000140002000F 0071000000020001  
244E733E
```

```
----- Packet Number: 2, Timestamp: 2018/09/04 23:22:10.179 -----  
interface : GigabitEthernet2/0/2 [if-id: 0x00000032] (physical)  
ether hdr : dest mac: 0180.c200.0000, src mac: 2c36.f8fc.4884  
ether hdr : ethertype: 0x0026
```

```
!  
!  
!
```


show platform software fed switch punt rates interfaces

To display the overall statistics of punt rate for all the interfaces, use the **show platform software fed switch punt rates interfaces** command in privileged EXEC mode.

```
show platform software fed switch {switch-number | active | standby} punt rates
interfaces[interface-id]
```

Syntax Description

switch{*switch-number* | **active** | **standby**}

Displays information about the switch. You have the following options:

- *switch-number*.
- **active**—Displays information relating to the active switch.
- **standby**—Displays information relating to the standby switch, if available.

Note This keyword is not supported.

punt

Specifies the punt informtion.

rates

Specifies the rate at which the packets are punted.

interfaces[*interface-id*]

(Optional) Displays the overall statistics for an interface and also the per-queue configuration for the interface at an interval of 10 seconds.

Command Modes

Privileged EXEC (#)

Command History

Release	Modification
Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Usage Guidelines

The output displays the punt rates in packets per second at intervals of 10 seconds, 1 minute and 5 minutes.

Example

The following is sample output from the **show platform software fed switch active punt rates interfaces** command for all the interfaces.

```
Device#show plataform software fed switch active punt rates interfaces
```

```
Punt Rate on Interfaces Statistics
```

```
Packets per second averaged over 10 seconds, 1 min and 5 mins
```

```
=====
```

Interface Name	IF_ID	Rx 10s	Rx 1min	Rx 5min	Drop 10s	Drop 1min	Drop 5min

show platform software fed switch punt rates interfaces

```
=====
Vlan3                0x00000034    1000    1000    520    0    0    0
=====
```

The table below describes the significant fields shown in the display.

Table 5: show platform software fed switch active punt rates interfaces Field Descriptions

Field	Description
Interface Name	Name of the physical interface.
IF_ID	ID of the physical interface.
Rx	The per second rate at which the packets are received in 10s, 1 minute and 5 minutes.
Drop	The per second rate at which the packets are dropped in 10s, 1 minute and 5 minutes.

The following is sample output from the **show platform software fed switch active punt rates interfaces interface-id** command for a specific interface.

```
Device#show platform software fed switch active punt rates interfaces 0x31
Punt Rate on Single Interfaces Statistics
```

```
Interface : Port-channel1 [if_id: 0x31]
```

```

Received                               Dropped
-----                               -
Total           : 29617                Total           : 0
10 sec average : 0                    10 sec average : 0
1 min average  : 0                    1 min average  : 0
5 min average  : 0                    5 min average  : 0
```

```
Per CPUQ punt stats on the interface (rate averaged over 10s interval)
```

```
=====
Q |           Queue           | Recv | Recv | Drop | Drop |
no |           Name           | Total | Rate | Total | Rate |
=====
0  CPU_Q_DOT1X_AUTH          | 0    | 0    | 0    | 0    |
1  CPU_Q_L2_CONTROL         | 29519| 0    | 0    | 0    |
2  CPU_Q_FORUS_TRAFFIC     | 0    | 0    | 0    | 0    |
3  CPU_Q_ICMP_GEN          | 0    | 0    | 0    | 0    |
4  CPU_Q_ROUTING_CONTROL   | 0    | 0    | 0    | 0    |
5  CPU_Q_FORUS_ADDR_RESOLUTION | 0    | 0    | 0    | 0    |
6  CPU_Q_ICMP_REDIRECT     | 0    | 0    | 0    | 0    |
7  CPU_Q_INTER_FED_TRAFFIC | 0    | 0    | 0    | 0    |
8  CPU_Q_L2LVX_CONTROL_PKT | 0    | 0    | 0    | 0    |
9  CPU_Q_EWLC_CONTROL      | 0    | 0    | 0    | 0    |
10 CPU_Q_EWLC_DATA         | 0    | 0    | 0    | 0    |
11 CPU_Q_L2LVX_DATA_PKT    | 0    | 0    | 0    | 0    |
12 CPU_Q_BROADCAST        | 0    | 0    | 0    | 0    |
13 CPU_Q_LEARNING_CACHE_OVFL | 0    | 0    | 0    | 0    |
14 CPU_Q_SW_FORWARDING     | 0    | 0    | 0    | 0    |
15 CPU_Q_TOPOLOGY_CONTROL  | 98   | 0    | 0    | 0    |
16 CPU_Q_PROTO_SNOOPING    | 0    | 0    | 0    | 0    |
17 CPU_Q_DHCP_SNOOPING     | 0    | 0    | 0    | 0    |
18 CPU_Q_TRANSIT_TRAFFIC   | 0    | 0    | 0    | 0    |
19 CPU_Q_RPF_FAILED        | 0    | 0    | 0    | 0    |
=====
```

```

20 CPU_Q_MCAST_END_STATION_SERVICE      0      0      0      0
21 CPU_Q_LOGGING                        0      0      0      0
22 CPU_Q_PUNT_WEBAUTH                   0      0      0      0
23 CPU_Q_HIGH_RATE_APP                   0      0      0      0
24 CPU_Q_EXCEPTION                       0      0      0      0
25 CPU_Q_SYSTEM_CRITICAL                  0      0      0      0
26 CPU_Q_NFL_SAMPLED_DATA                0      0      0      0
27 CPU_Q_LOW_LATENCY                     0      0      0      0
28 CPU_Q_EGR_EXCEPTION                    0      0      0      0
29 CPU_Q_FSS                              0      0      0      0
30 CPU_Q_MCAST_DATA                       0      0      0      0
31 CPU_Q_GOLD_PKT                         0      0      0      0

```

The table below describes the significant fields shown in the display.

Table 6: show platform software fed switch punt rates interfaces interface-id Field Descriptions

Field	Description
Queue Name	Name of the queue.
Recv Total	Total number of packets received.
Recv Rate	Per second rate at which the packets are received.
Drop Total	Total number of packets dropped.
Drop Rate	Per second rate at which the packets are dropped.

show platform software ilpower

To display the inline power details of all the PoE ports on the device, use the **show platform software ilpower** command in privileged EXEC mode.

show platform software ilpower { **details** | **port** { **GigabitEthernet** *interface-number* } | **system** *slot-number* }

Syntax Description		
details		Displays inline power details for all the interfaces.
port		Displays inline power port configuration.
GigabitEthernet <i>interface-number</i>		The GigabitEthernet interface number. Values range from 0 to 9.
system <i>slot-number</i>		Displays inline power system configuration.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	The command was introduced.

Examples

The following is sample output from the **show platform software ilpower details** command:

```
Device# show platform software ilpower details
ILP Port Configuration for interface Gi1/0/1
  Initialization Done:   Yes
  ILP Supported:        Yes
  ILP Enabled:          Yes
  POST:                 Yes
  Detect On:            No
  Powered Device Detected           No
  Powered Device Class Done         No
  Cisco Powered Device:             No
  Power is On:                      No
  Power Denied:                     No
  Powered Device Type:               Null
  Powerd Device Class:               Null
  Power State:                       NULL
  Current State:                     NGWC_ILP_DETECTING_S
  Previous State:                     NGWC_ILP_SHUT_OFF_S
  Requested Power in milli watts:    0
  Short Circuit Detected:             0
  Short Circuit Count:                0
  Cisco Powerd Device Detect Count:  0
  Spare Pair mode:                   0
    IEEE Detect:                      Stopped
    IEEE Short:                       Stopped
    Link Down:                        Stopped
    Voltage sense:                     Stopped
  Spare Pair Architecture:           1
  Signal Pair Power allocation in milli watts: 0
  Spare Pair Power On:               0
  Powered Device power state:        0
  Timer:
```

```
Power Good:          Stopped
Power Denied:        Stopped
Cisco Powered Device Detect:  Stopped
```

show platform software memory

To display memory information for a specified switch, use the **show platform software memory** command in privileged EXEC mode.

show platform software memory [{**chunk** | **database** | **messaging**}] *process slot*

Syntax Description

Syntax Description

chunk	(Optional) Displays chunk memory information for the specified process.
database	(Optional) Displays database memory information for the specified process.
messaging	(Optional) Displays messaging memory information for the specified process. The information displayed is for internal debugging purposes only.

process

Level that is being set. Options include:

- **bt-logger**—The Binary-Tracing Logger process.
 - **btrace-manager**—The Btrace Manager process.
 - **chassis-manager**—The Chassis Manager process.
 - **cli-agent**—The CLI Agent process.
 - **cmm**—The CMM process.
 - **dbm**—The Database Manager process.
 - **dmiauthd**—The DMI Authentication Daemon process.
 - **emd**—The Environmental Monitoring process.
 - **fed**—The Forwarding Engine Driver process.
 - **forwarding-manager**—The Forwarding Manager process.
 - **geo**—The Geo Manager process.
 - **gnmi**—The GNMI process.
 - **host-manager**—The Host Manager process.
 - **interface-manager**—The Interface Manager process.
 - **iomd**—The Input/Output Module daemon (IOMd) process.
 - **ios**—The IOS process.
 - **iox-manager**—The IOx Manager process.
 - **license-manager**—The License Manager process.
 - **logger**—The Logging Manager process.
 - **mdt-pubd**—The Model Defined Telemetry Publisher process.
 - **ndbman**—The Netconf DataBase Manager process.
 - **nesd**—The Network Element Synchronizer Daemon process.
 - **nginx**—The Nginx Webserver process.
 - **nif_mgr**—The NIF Manager process.
 - **platform-mgr**—The Platform Manager process.
 - **pluggable-services**—The Pluggable Services process.
 - **replication-mgr**—The Replication Manager process.
 - **shell-manager**—The Shell Manager process.
 - **sif**—The Stack Interface (SIF) Manager process.
 - **smd**—The Session Manager process.
 - **stack-mgr**—The Stack Manager process.
-

- **syncfd**—The SyncmDaemon process.
- **table-manager**—The Table Manager Server.
- **thread-test**—The Multithread Manager process.
- **virt-manager**—The Virtualization Manager process.

<i>slot</i>	Hardware slot where the process for which the level is set, is running. Options include: <ul style="list-style-type: none"> • number—Number of the SIP slot of the hardware module where the level is set. For instance, if you want to specify the SIP in SIP slot 2 of the switch, enter 2. • SIP-slot / SPA-bay—Number of the SIP switch slot and the number of the shared port adapter (SPA) bay of that SIP. For instance, if you want to specify the SPA in bay 2 of the SIP in switch slot 3, enter 3/2. • F0—The Embedded Service Processor slot 0. • FP active—The active Embedded Service Processor. • R0—The route processor in slot 0. • RP active—The active route processor. • RP standby—The standby route processor. • switch active—The active switch.
-------------	---

Command Default No default behavior or values.

Command Modes Privileged EXEC (#)

Command History

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This comm

The following is a sample output displaying the abbreviated (brief keyword) memory information for the Forwarding Manager process for Cisco Catalyst 9000 Series ESP slot 0:

```
Device# show platform software memory forwarding-manager switch 1 fp active brief
```

module	allocated	requested	allocs	frees
Summary	5702540	5619788	121888	116716
AOM object	1920374	1920310	4	0
AOM links array	880379	880315	4	0
smc_message	819575	819511	4	0
AOM update state	640380	640316	4	0
dpidb-config	208776	203544	351	24
fman-infra-avl	178016	153680	1521	0
AOM batch	152373	152309	4	0

show platform software memory

```

AOM asynchronous conte 128388      128324      4           0
AOM basic data         124824      124760      5           1
eventutil             118939      118299      50          10
AOM tree node         96465       96385       5           0
AOM tree root         72377       72313       4           0
acl                   36090       31914       504         243
fman-infra-ipc        35326       24366       115097      114412
AOM uplink update node 32386       32322       4           0
unknown               30528       23808       424         4
uipeer                27232       27152       5           0
fman-infra-qos        26872       24712       164         29
cce-class             19427       15411       251         0
l2 control protocol  15472       12896       325         164
fman-infra-cce        15272       13576       106         0
smc_channel           15223       15159       4           0
unknown               14208       8736        447         105
chunk                 12513       12033       33          3
cce-bind              8496        7552        82          23
MATM mac entry        8040        5928        544         412
adj                   7064        6312        157         110
route-pfx             6116        5412        157         113
Filter_rules          4912        4896        1           0
fman-infra-dpidb     4130        2338        112         0
SMC Buffer             3794        3202        43          6
urpf-list             3028        2100        85          27
lookup                2480        2160        30          10
MATM mac table       2432        1600        148         96
cdllib                1688        1672        1           0
route-tbl             1600        1264        21          0
FNF Flowdef           1492        1460        3           1
acl-ref               1120        1024        8           2
cgm-lib               1120        880         410         395
pbr_if_cfg            1088        976         205         198
FNF Monitor           1048        1032        1           0
pbr_routemap         960         864         18          12
!
!
!
```

The following table describes the significant fields shown in the display.

Table 7: show platform software memory brief Field Descriptions

Field	Description
module	Name of submodule.
allocated	Memory, allocated in bytes.
requested	Number of bytes requested by application.
allocs	Number of discrete allocation event attempts.
frees	Number of free events.

show platform software process list

To display the list of running processes on a platform, use the **show platform software process list** command in privileged EXEC mode.

```
show platform software process list switch {switch-number | active | standby} {0 | F0 | R0}
[{name process-name | process-id process-ID | sort memory | summary}]
```

Syntax Description	
switch <i>switch-number</i>	Displays information about the switch. Valid values for <i>switch-number</i> argument are from 0 to 9.
active	Displays information about the active instance of the switch.
standby	Displays information about the standby instance of the switch.
0	Displays information about the shared port adapters (SPA) Interface Processor slot 0.
F0	Displays information about the Embedded Service Processor (ESP) slot 0.
R0	Displays information about the Route Processor (RP) slot 0.
name <i>process-name</i>	(Optional) Displays information about the specified process. Enter the process name.
process-id <i>process-ID</i>	(Optional) Displays information about the specified process ID. Enter the process ID.
sort	(Optional) Displays information sorted according to processes.
memory	(Optional) Displays information sorted according to memory.
summary	(Optional) Displays a summary of the process memory of the host device.

Command Modes Privileged EXE (#)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	The Size column in the output was modified to display Resident Set Size (RSS) in KB.
	Cisco IOS XE Everest 16.5.1a	The command was introduced.

Examples

The following is sample output from the **show platform software process list switch active R0** command:

```
Switch# show platform software process list switch active R0 summary

Total number of processes: 278
  Running           : 2
  Sleeping          : 276
  Disk sleeping     : 0
  Zombies           : 0
```

show platform software process list

```

Stopped          : 0
Paging           : 0

Up time          : 8318
Idle time        : 0
User time        : 216809
Kernel time      : 78931

Virtual memory   : 12933324800
Pages resident   : 634061
Major page faults: 2228
Minor page faults: 3491744

Architecture     : mips64
Memory (kB)
  Physical        : 3976852
  Total           : 3976852
  Used            : 2766952
  Free            : 1209900
  Active          : 2141344
  Inactive        : 1589672
  Inact-dirty     : 0
  Inact-clean     : 0
  Dirty          : 4
  AnonPages       : 1306800
  Bounce          : 0
  Cached          : 1984688
  Commit Limit    : 1988424
  Committed As    : 3358528
  High Total      : 0
  High Free       : 0
  Low Total       : 3976852
  Low Free        : 1209900
  Mapped          : 520528
  NFS Unstable    : 0
  Page Tables     : 17328
  Slab            : 0
  VMmalloc Chunk  : 1069542588
  VMmalloc Total  : 1069547512
  VMmalloc Used   : 2588
  Writeback       : 0
  HugePages Total: 0
  HugePages Free  : 0
  HugePages Rsvd  : 0
  HugePage Size   : 2048

Swap (kB)
  Total           : 0
  Used            : 0
  Free            : 0
  Cached          : 0

Buffers (kB)     : 439528

Load Average
  1-Min          : 1.13
  5-Min          : 1.18
  15-Min         : 0.92

```

The following is sample output from the **show platform software process list switch active R0** command:

```

Device# show platform software process list switch active R0
Name                               Pid    PPid  Group Id  Status  Priority  Size
-----
systemd                             1      0      1    S           20  7892
kthreadd                            2      0      0    S           20    0
ksoftirqd/0                         3      2      0    S           20    0
kworker/0:0H                         5      2      0    S           0     0
rcu_sched                           7      2      0    S           20    0
rcu_bh                               8      2      0    S           20    0
migration/0                         9      2      0    S          4294967196 0
migration/1                        10     2      0    S          4294967196 0
ksoftirqd/1                        11     2      0    S           20    0
kworker/1:0H                       13     2      0    S           0     0
migration/2                        14     2      0    S          4294967196 0
ksoftirqd/2                        15     2      0    S           20    0
kworker/2:0H                       17     2      0    S           0     0
systemd-journal                    221    1      221   S           20  4460
kworker/1:3                        246    2      0    S           20    0
systemd-udevd                      253    1     253   S           20  5648
kvm-irqfd-clean                   617    2      0    S           0     0
scsi_eh_6                          620    2      0    S           20    0
scsi_tmf_6                         621    2      0    S           0     0
usb-storage                       622    2      0    S           20    0
scsi_eh_7                          625    2      0    S           20    0
scsi_tmf_7                         626    2      0    S           0     0
usb-storage                       627    2      0    S           20    0
kworker/7:1                        630    2      0    S           20    0
bioset                             631    2      0    S           0     0
kworker/3:1H                      648    2      0    S           0     0
kworker/0:1H                      667    2      0    S           0     0
kworker/1:1H                      668    2      0    S           0     0
bioset                             669    2      0    S           0     0
kworker/6:2                       698    2      0    S           20    0
kworker/2:2                       699    2      0    S           20    0
kworker/2:1H                      703    2      0    S           0     0
kworker/7:1H                      748    2      0    S           0     0
kworker/5:1H                      749    2      0    S           0     0
kworker/6:1H                      754    2      0    S           0     0
kworker/7:2                       779    2      0    S           20    0
auditd                             838    1     838   S           16  2564
.
.
.

```

The table below describes the significant fields shown in the displays.

Table 8: show platform software process list Field Descriptions

Field	Description
Name	Displays the command name associated with the process. Different threads in the same process may have different command values.
Pid	Displays the process ID that is used by the operating system to identify and keep track of the processes.
PPid	Displays process ID of the parent process.
Group Id	Displays the group ID

Field	Description
Status	Displays the process status in human readable form.
Priority	Displays the negated scheduling priority.
Size	Prior to Cisco IOS XE Gibraltar 16.10.1: Displays Virtual Memory size. From Cisco IOS XE Gibraltar 16.10.1 onwards: Displays the Resident Set Size (RSS) that shows how much memory is allocated to that process in the RAM.

show platform software process memory

To display the amount of memory used by each system process, use the **show platform software process memory** command in privileged EXEC mode.

show platform process memory

```
switch { switch-number | active | standby } { 0 | F0 | FP | R0 } { all [sorted | virtual [sorted] ] | name
process-name { maps | smaps [summary] } | process-id process-id { maps | smaps [summary] } }
```

Syntax Description		
switch <i>switch-number</i>		Displays information about the switch. Enter the switch number.
active		Specifies the active instance of the device.
standby		Specifies the standby instance of the device.
0		Specifies the Shared Port Adapter (SPA) Interface Processor slot 0.
F0		Specifies the Embedded Service Processor (ESP) slot 0.
FP		Specifies the Embedded Service Processor (ESP).
R0		Specifies the Route Processor (RP) slot 0.
all		Lists all processes.
sorted		(Optional) Sorts the output based on Resident Set Size (RSS).
virtual		(Optional) Specifies virtual memory.
name <i>process-name</i>		Specifies a process name.
maps		Specifies the memory maps of a process.
smaps summary		Specifies the smaps summary of a process.
process-id <i>process-id</i>		Specifies a process identifier.

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Command Modes Privileged EXEC(#)

Examples:

The following is a sample output from the **show platform software process memory active R0 all** command:

show platform software process memory

```
Device# show platform software process memory switch active R0 all
```

Pid	RSS	PSS	Heap	Shared	Private	Name
1	4876	3229	1064	1808	3068	systemd
118	3184	1327	132	2352	832	systemd-journal
159	3008	1191	396	1996	1012	systemd-udev
407	3192	1262	132	2196	996	dbus-daemon
3406	4772	3064	264	1940	2832	virtlogd
3411	5712	3474	2964	2344	3368	droputil.sh
3416	2588	358	132	2336	252	libvirtd.sh
3420	5708	3484	2976	2308	3400	reflector.sh
3424	1804	263	132	1632	172	xinetd
3425	964	118	132	872	92	sleep
3434	3060	844	528	2304	756	oom.sh
3442	2068	606	132	1604	464	rpcbind
3485	2380	845	132	1636	744	rpc.statd
3486	1632	338	132	1348	284	boothelper_evt.
3493	1136	156	132	1004	132	inotifywait
3504	2048	753	132	1372	676	rpc.mountd
3584	2868	620	36	2384	484	rotee
3649	1032	116	132	944	88	sleep
3705	2784	613	36	2296	488	rotee
3718	2856	610	36	2376	480	rotee
3759	1292	184	132	1136	156	inotifywait
3787	4256	2040	1640	2300	1956	iptbl.sh
3894	2948	637	36	2460	488	rotee
4017	1380	175	132	1236	144	inotifywait
4866	1820	287	132	1624	196	xinetd
5887	1692	257	132	1508	184	xinetd
5891	7248	4984	4584	2348	4900	rollback_timer.
5893	1764	257	132	1588	176	xinetd
6031	2804	601	36	2332	472	rotee
6037	1228	163	132	1092	136	inotifywait
6077	4736	3389	2992	1368	3368	psvp.sh
6115	1620	476	36	1152	468	rotee
6122	624	149	132	480	144	inotifywait
6127	5440	4077	3680	1384	4056	pvp.sh
6165	1736	592	36	1152	584	rotee
6245	624	149	132	480	144	inotifywait
6353	2592	1260	924	1352	1240	pman.sh
6470	1632	488	36	1152	480	rotee
6499	2588	1262	924	1348	1240	pman.sh
6666	1640	496	36	1152	488	rotee
6718	2584	1258	800	1348	1236	pman.sh
6736	8360	7020	6640	1360	7000	auto_upgrade_cl
6909	1636	492	36	1152	484	rotee
6955	2588	1262	928	1348	1240	pman.sh
7029	2196	679	40	1552	644	auto_upgrade_se
7149	1636	492	36	1152	484	rotee
7224	13200	4595	48	9368	3832	bt_logger
7295	2588	1262	800	1348	1240	pman.sh
.						
.						
.						

The table below describes the significant fields shown in the displays.

Table 9: show platform software process memory Field Descriptions

Field	Description
PID	Displays the process ID that is used by the operating system to identify and keep track of the processes.
RSS	Displays the Resident Set Size (in kilobytes (KB)) that shows how much memory is allocated to that process in the RAM.
PSS	Displays the Proportional Set Size of a process. This is the count of pages it has in memory, where each page is divided by the number of processes sharing it.
Heap	Displays where all user-allocated memory is located.
Shared	Shared clean + Shared dirty
Private	Private clean + Private dirty
Name	Displays the command name associated with the process. Different threads in the same process may have different command values.

show platform software process slot switch

To display platform software process switch information, use the **show platform software process slot switch** command in privileged EXEC mode.

```
show platform software process slot switch {switch-number | active | standby} {0 | F0 | R0}
monitor [{cycles no-of-times [{interval delay [{lines number}]}}]
```

Syntax Description

<i>switch-number</i>	Switch number.
active	Specifies the active instance.
standby	Specifies the standby instance.
0	Specifies the shared port adapter (SPA) interface processor slot 0.
F0	Specifies the Embedded Service Processor (ESP) slot 0.
R0	Specifies the Route Processor (RP) slot 0.
monitor	Monitors the running processes.
<i>cycles no-of-times</i>	(Optional) Sets the number of times to run monitor command. Valid values are from 1 to 4294967295. The default is 5.
<i>interval delay</i>	(Optional) Sets a delay after each . Valid values are from 0 to 300. The default is 3.
<i>lines number</i>	(Optional) Sets the number of lines of output displayed. Valid values are from 0 to 512. The default is 0.

Command Modes

Privileged EXEC (#)

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

The output of the **show platform software process slot switch** and **show processes cpu platform monitor location** commands display the output of the Linux **top** command. The output of these commands display Free memory and Used memory as displayed by the Linux **top** command. The values displayed for the Free memory and Used memory by these commands do not match the values displayed by the output of other platform-memory related CLIs.

Examples

The following is sample output from the **show platform software process slot switch active R0 monitor** command:

```
Switch# show platform software process slot switch active R0 monitor
```

```
top - 00:01:52 up 1 day, 11:20, 0 users, load average: 0.50, 0.68, 0.83
Tasks: 311 total, 2 running, 309 sleeping, 0 stopped, 0 zombie
Cpu(s): 7.4%us, 3.3%sy, 0.0%ni, 89.2%id, 0.0%wa, 0.0%hi, 0.1%si, 0.0%st
Mem: 3976844k total, 3955036k used, 21808k free, 419312k buffers
Swap: 0k total, 0k used, 0k free, 1946764k cached
```

```

PID USER      PR  NI  VIRT  RES  SHR  S  %CPU  %MEM    TIME+  COMMAND
 5693 root      20   0   3448 1368  912  R   7   0.0    0:00.07 top
17546 root      20   0 2044m 244m  79m  S   7   6.3   186:49.08 fed main event
18662 root      20   0 1806m 678m 263m  S   5  17.5   215:32.38 linux_iods-imag
30276 root      20   0  171m  42m  33m  S   5   1.1   125:06.77 repm
17835 root      20   0  935m  74m  63m  S   4   1.9    82:28.31 sif_mgr
18534 root      20   0  182m 150m  10m  S   2   3.9    8:12.08 smand
   1 root      20   0  8440 4740 2184  S   0   0.1    0:09.52 systemd
   2 root      20   0    0    0    0  S   0   0.0    0:00.00 kthreadd
   3 root      20   0    0    0    0  S   0   0.0    0:02.86 ksoftirqd/0
   5 root      0  -20    0    0    0  S   0   0.0    0:00.00 kworker/0:0H
   7 root      RT   0    0    0    0  S   0   0.0    0:01.44 migration/0
   8 root      20   0    0    0    0  S   0   0.0    0:00.00 rcu_bh
   9 root      20   0    0    0    0  S   0   0.0    0:23.08 rcu_sched
  10 root      20   0    0    0    0  S   0   0.0    0:58.04 rcuc/0
  11 root      20   0    0    0    0  S   0   0.0   21:35.60 rcuc/1
  12 root      RT   0    0    0    0  S   0   0.0    0:01.33 migration/1

```

Related Commands

Command	Description
show processes cpu platform monitor location	Displays information about the CPU utilization of the IOS-XE processes.

show platform software status control-processor

To display platform software control-processor status, use the **show platform software status control-processor** command in privileged EXEC mode.

show platform software status control-processor [{brief}]

Syntax Description	brief (Optional) Displays a summary of the platform control-processor status.
---------------------------	--

Command Modes	Privileged EXEC (#)
----------------------	---------------------

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Examples

The following is sample output from the **show platform memory software status control-processor** command:

```
Switch# show platform software status control-processor

2-RP0: online, statistics updated 7 seconds ago
Load Average: healthy
  1-Min: 1.00, status: healthy, under 5.00
  5-Min: 1.21, status: healthy, under 5.00
 15-Min: 0.90, status: healthy, under 5.00
Memory (kb): healthy
  Total: 3976852
  Used: 2766284 (70%), status: healthy
  Free: 1210568 (30%)
  Committed: 3358008 (84%), under 95%
Per-core Statistics
CPU0: CPU Utilization (percentage of time spent)
  User: 4.40, System: 1.70, Nice: 0.00, Idle: 93.80
  IRQ: 0.00, SIRQ: 0.10, IOWait: 0.00
CPU1: CPU Utilization (percentage of time spent)
  User: 3.80, System: 1.20, Nice: 0.00, Idle: 94.90
  IRQ: 0.00, SIRQ: 0.10, IOWait: 0.00
CPU2: CPU Utilization (percentage of time spent)
  User: 7.00, System: 1.10, Nice: 0.00, Idle: 91.89
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU3: CPU Utilization (percentage of time spent)
  User: 4.49, System: 0.69, Nice: 0.00, Idle: 94.80
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00

3-RP0: unknown, statistics updated 2 seconds ago
Load Average: healthy
  1-Min: 0.24, status: healthy, under 5.00
  5-Min: 0.27, status: healthy, under 5.00
 15-Min: 0.32, status: healthy, under 5.00
Memory (kb): healthy
  Total: 3976852
  Used: 2706768 (68%), status: healthy
  Free: 1270084 (32%)
  Committed: 3299332 (83%), under 95%
Per-core Statistics
CPU0: CPU Utilization (percentage of time spent)
```

```

User: 4.50, System: 1.20, Nice: 0.00, Idle: 94.20
IRQ: 0.00, SIRQ: 0.10, IOWait: 0.00
CPU1: CPU Utilization (percentage of time spent)
User: 5.20, System: 0.50, Nice: 0.00, Idle: 94.29
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU2: CPU Utilization (percentage of time spent)
User: 3.60, System: 0.70, Nice: 0.00, Idle: 95.69
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU3: CPU Utilization (percentage of time spent)
User: 3.00, System: 0.60, Nice: 0.00, Idle: 96.39
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00

4-RP0: unknown, statistics updated 2 seconds ago
Load Average: healthy
  1-Min: 0.21, status: healthy, under 5.00
  5-Min: 0.24, status: healthy, under 5.00
 15-Min: 0.24, status: healthy, under 5.00
Memory (kb): healthy
Total: 3976852
Used: 1452404 (37%), status: healthy
Free: 2524448 (63%)
Committed: 1675120 (42%), under 95%
Per-core Statistics
CPU0: CPU Utilization (percentage of time spent)
User: 2.30, System: 0.40, Nice: 0.00, Idle: 97.30
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU1: CPU Utilization (percentage of time spent)
User: 4.19, System: 0.69, Nice: 0.00, Idle: 95.10
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU2: CPU Utilization (percentage of time spent)
User: 4.79, System: 0.79, Nice: 0.00, Idle: 94.40
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU3: CPU Utilization (percentage of time spent)
User: 2.10, System: 0.40, Nice: 0.00, Idle: 97.50
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00

9-RP0: unknown, statistics updated 4 seconds ago
Load Average: healthy
  1-Min: 0.20, status: healthy, under 5.00
  5-Min: 0.35, status: healthy, under 5.00
 15-Min: 0.35, status: healthy, under 5.00
Memory (kb): healthy
Total: 3976852
Used: 1451328 (36%), status: healthy
Free: 2525524 (64%)
Committed: 1675932 (42%), under 95%
Per-core Statistics
CPU0: CPU Utilization (percentage of time spent)
User: 1.90, System: 0.50, Nice: 0.00, Idle: 97.60
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU1: CPU Utilization (percentage of time spent)
User: 4.39, System: 0.19, Nice: 0.00, Idle: 95.40
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU2: CPU Utilization (percentage of time spent)
User: 5.70, System: 1.00, Nice: 0.00, Idle: 93.30
IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU3: CPU Utilization (percentage of time spent)
User: 1.30, System: 0.60, Nice: 0.00, Idle: 98.00
IRQ: 0.00, SIRQ: 0.10, IOWait: 0.00

```

The following is sample output from the **show platform memory software status control-processor brief** command:

show platform software status control-processor

Switch# show platform software status control-processor brief

Load Average

Slot	Status	1-Min	5-Min	15-Min
2-RP0	Healthy	1.10	1.21	0.91
3-RP0	Healthy	0.23	0.27	0.31
4-RP0	Healthy	0.11	0.21	0.22
9-RP0	Healthy	0.10	0.30	0.34

Memory (kB)

Slot	Status	Total	Used (Pct)	Free (Pct)	Committed (Pct)
2-RP0	Healthy	3976852	2766956 (70%)	1209896 (30%)	3358352 (84%)
3-RP0	Healthy	3976852	2706824 (68%)	1270028 (32%)	3299276 (83%)
4-RP0	Healthy	3976852	1451888 (37%)	2524964 (63%)	1675076 (42%)
9-RP0	Healthy	3976852	1451580 (37%)	2525272 (63%)	1675952 (42%)

CPU Utilization

Slot	CPU	User	System	Nice	Idle	IRQ	SIRQ	IOWait
2-RP0	0	4.10	2.00	0.00	93.80	0.00	0.10	0.00
	1	4.60	1.00	0.00	94.30	0.00	0.10	0.00
	2	6.50	1.10	0.00	92.40	0.00	0.00	0.00
	3	5.59	1.19	0.00	93.20	0.00	0.00	0.00
3-RP0	0	2.80	1.20	0.00	95.90	0.00	0.10	0.00
	1	4.49	1.29	0.00	94.20	0.00	0.00	0.00
	2	5.30	1.60	0.00	93.10	0.00	0.00	0.00
4-RP0	3	5.80	1.20	0.00	93.00	0.00	0.00	0.00
	0	1.30	0.80	0.00	97.89	0.00	0.00	0.00
	1	1.30	0.20	0.00	98.50	0.00	0.00	0.00
9-RP0	2	5.60	0.80	0.00	93.59	0.00	0.00	0.00
	3	5.09	0.19	0.00	94.70	0.00	0.00	0.00
	0	3.99	0.69	0.00	95.30	0.00	0.00	0.00
	1	2.60	0.70	0.00	96.70	0.00	0.00	0.00
9-RP0	2	4.49	0.89	0.00	94.60	0.00	0.00	0.00
	3	2.60	0.20	0.00	97.20	0.00	0.00	0.00

show platform software thread list

To display the list of threads on a platform, use the **show platform software thread list** command in privileged EXEC mode.

show platform software thread list switch { *switch-number* | **active** | **standby** } { **0** | **F0** | **FP active** | **R0** } **pname** { **cdman** | **vidman** | **all** } **tname** { **main** | **pktio** | **rt** | **all** }

Syntax Description		
switch <i>switch-number</i>		Displays information about the switch. Enter the switch number.
active		Specifies the active instance of the device.
standby		Specifies standby instance of the device.
0		Specifies the Shared Port Adapter (SPA) Interface Processor slot 0.
F0		Specifies the Embedded Service Processor (ESP) slot 0.
FP active		Specifies the active instance of Embedded Service Processor (ESP).
R0		Specifies the Route Processor (RP) slot 0.
pname		Specifies a process name. The possible values are cdman , vidman , and all .
tname		Specifies a thread name. The possible values are main , pktio , rt , and all .
Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Command Modes Privileged EXEC(#)

Examples:

The following is sample output from the **show platform software thread list switch active R0 pname cdman tname all** command:

```
Device# show platform software thread list switch active R0 pname cdman tname all
Name          Tid    PPid  Group Id  Core   Vcswch  Nvcswch  Status   Priority
TIME+  Size
-----
cdman         8407   7295   8407     1       0         0    S         20
12309  36976
```

The table below describes the significant fields shown in the displays.

Table 10: show platform software thread list Field Descriptions

Field	Description
Name	Displays the command name associated with the process. Different threads in the same process may have different command values.
Tid	Displays the process ID.
PPid	Displays the process ID of the parent process.
Group Id	Displays the group ID.
Core	Displays processor information.
Vcswch	Displays the number of voluntary context switches.
Nvcswch	Displays the number of non-voluntary context switches.
Status	Displays the process status in human readable form.
Priority	Displays the negated scheduling priority.
TIME+	Displays the time since the start of the process.
Size	Displays the Resident Set Size (in kilobytes (KB)) that shows how much memory is allocated to that process in the RAM.

show processes cpu platform

To display information about the CPU utilization of the IOS-XE processes, use the **show processes cpu platform** command in privileged EXEC mode.

show processes cpu platform [[**sorted** [**1min** | **5min** | **5sec**]] **location**
switch { *switch-number* | **active** | **standby** } { **F0** | **FP active** | **R0** | **RP active** }

Syntax Description		
sorted	(Optional)	Displays output sorted based on percentage of CPU usage on a platform.
1min	(Optional)	Sorts based on 1 minute intervals.
5min	(Optional)	Sorts based on 5 minute intervals.
5sec	(Optional)	Sorts based on 5 second intervals.
location		Specifies the Field Replaceable Unit (FRU) location.
switch <i>switch-number</i>		Displays information about the switch. Enter the switch number.
active		Specifies the active instance of the device.
standby		Specifies the standby instance of the device.
F0		Specifies the Embedded Service Processor (ESP) slot 0.
FP active		Specifies active instances on the Embedded Service Processor (ESP).
R0		Specifies the Route Processor (RP) slot 0.
RP active		Specifies active instances on the Route Processor (RP).

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Command Modes Privileged EXEC (#)

Examples:

The following is sample output from the **show processes cpu platform** command:

```
Device# show processes cpu platform

CPU utilization for five seconds: 1%, one minute: 3%, five minutes: 2%
Core 0: CPU utilization for five seconds: 2%, one minute: 2%, five minutes: 2%
Core 1: CPU utilization for five seconds: 2%, one minute: 1%, five minutes: 1%
Core 2: CPU utilization for five seconds: 3%, one minute: 1%, five minutes: 1%
Core 3: CPU utilization for five seconds: 2%, one minute: 5%, five minutes: 2%
-----
  Pid   PPid   5Sec   1Min   5Min  Status      Size  Name
-----
    1     0     0%    0%    0%  S           4876  systemd
```

show processes cpu platform

```

 2      0      0%      0%      0% S          0 kthreadd
 3      2      0%      0%      0% S          0 ksoftirqd/0
 5      2      0%      0%      0% S          0 kworker/0:0H
 7      2      0%      0%      0% S          0 rcu_sched
 8      2      0%      0%      0% S          0 rcu_bh
 9      2      0%      0%      0% S          0 migration/0
10      2      0%      0%      0% S          0 watchdog/0
11      2      0%      0%      0% S          0 watchdog/1
12      2      0%      0%      0% S          0 migration/1
13      2      0%      0%      0% S          0 ksoftirqd/1
15      2      0%      0%      0% S          0 kworker/1:0H
16      2      0%      0%      0% S          0 watchdog/2
17      2      0%      0%      0% S          0 migration/2
18      2      0%      0%      0% S          0 ksoftirqd/2
20      2      0%      0%      0% S          0 kworker/2:0H
21      2      0%      0%      0% S          0 watchdog/3
22      2      0%      0%      0% S          0 migration/3
23      2      0%      0%      0% S          0 ksoftirqd/3
24      2      0%      0%      0% S          0 kworker/3:0
25      2      0%      0%      0% S          0 kworker/3:0H
26      2      0%      0%      0% S          0 kdevtmpfs
27      2      0%      0%      0% S          0 netns
28      2      0%      0%      0% S          0 perf
29      2      0%      0%      0% S          0 khungtaskd
30      2      0%      0%      0% S          0 writeback
31      2      7%      8%      8% S          0 ksm
32      2      0%      0%      0% S          0 khugepaged
33      2      0%      0%      0% S          0 crypto
34      2      0%      0%      0% S          0 bioset
35      2      0%      0%      0% S          0 kblockd
36      2      0%      0%      0% S          0 ata_sff
37      2      0%      0%      0% S          0 rpciod
63      2      0%      0%      0% S          0 kswapd0
64      2      0%      0%      0% S          0 vmstat
65      2      0%      0%      0% S          0 fsnotify_mark
.
.
.

```

The following is sample output from the **show processes cpu platform sorted 5min location switch 5 R0**

```
Device# show processes cpu platform sorted 5min location switch 5 R0
```

```

CPU utilization for five seconds: 0%, one minute: 0%, five minutes: 0%
Core 0: CPU utilization for five seconds: 1%, one minute: 1%, five minutes: 1%
Core 1: CPU utilization for five seconds: 1%, one minute: 1%, five minutes: 1%
Core 2: CPU utilization for five seconds: 1%, one minute: 1%, five minutes: 1%
Core 3: CPU utilization for five seconds: 2%, one minute: 2%, five minutes: 1%
Core 4: CPU utilization for five seconds: 0%, one minute: 0%, five minutes: 0%
Core 5: CPU utilization for five seconds: 0%, one minute: 0%, five minutes: 0%
Core 6: CPU utilization for five seconds: 0%, one minute: 0%, five minutes: 0%
Core 7: CPU utilization for five seconds: 0%, one minute: 0%, five minutes: 0%
  Pid   PPid   5Sec   1Min   5Min  Status      Size  Name
-----
16358  15516   4%     4%     4%  S          221376  fed main event
14062  12756   1%     1%     1%  S           52140  sif_mgr
32105   8618   0%     0%     0%  S           260    inotifywait
31396  31393   0%     0%     0%  S          36516  python2.7
31393  31271   0%     0%     0%  S           2744   rdope.sh
31319     1     0%     0%     0%  S           2648   rotee
31271     1     0%     0%     0%  S           3852   pman.sh
29671     2     0%     0%     0%  S            0  kworker/u16:0
29341  29329   0%     0%     0%  S           1780   sntp
29329     1     0%     0%     0%  S           2788  stack_sntp.sh
.

```

.
.

The following is sample output from the **show processes cpu platform location switch 7 R0** command:

Device# **show processes cpu platform location switch 7 R0**

```

CPU utilization for five seconds: 3%, one minute: 3%, five minutes: 3%
Core 0: CPU utilization for five seconds: 1%, one minute: 5%, five minutes: 5%
Core 1: CPU utilization for five seconds: 1%, one minute: 11%, five minutes: 5%
Core 2: CPU utilization for five seconds: 22%, one minute: 7%, five minutes: 6%
Core 3: CPU utilization for five seconds: 5%, one minute: 6%, five minutes: 6%
Core 4: CPU utilization for five seconds: 0%, one minute: 0%, five minutes: 0%
Core 5: CPU utilization for five seconds: 0%, one minute: 0%, five minutes: 0%
Core 6: CPU utilization for five seconds: 0%, one minute: 0%, five minutes: 0%
Core 7: CPU utilization for five seconds: 0%, one minute: 0%, five minutes: 6%

```

Pid	PPid	5Sec	1Min	5Min	Status	Size	Name
1	0	0%	0%	0%	S	8044	systemd
2	0	0%	0%	0%	S	0	kthreadd

.
.
.

show processes cpu platform history

To display information about the CPU usage history of a system, use the **show processes cpu platform history** command.

show processes cpu platform history [**1min** | **5min** | **5sec** | **60min**] **location**
switch {*switch-number* | **active** | **standby**} {**0** | **F0** | **FP active** | **R0**}

1min	(Optional) Displays CPU utilization history with 1 minute intervals.
5min	(Optional) Displays CPU utilization history with 5 minute intervals.
5sec	(Optional) Displays CPU utilization history with 5 second intervals.
60min	(Optional) Displays CPU utilization history with 60 minute intervals.
location	Specifies the Field Replaceable Unit (FRU) location.
switch <i>switch-number</i>	Displays information about the switch. Enter the switch number.
active	Specifies the active instance of the device.
standby	Specifies the standby instance of the device.
0	Specifies the Shared Port Adapter (SPA) Interface Processor slot 0.
F0	Specifies the Embedded Service Processor (ESP) slot 0.
FP active	Specifies active instances on the Embedded Service Processor (ESP).
R0	Specifies the Route Processor (RP) slot 0.

Command History

Release	Modification
Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Command Modes

Privileged EXEC (#)

Examples:

The following is sample output from the **show processes cpu platform** command:

```
Device# show processes cpu platform
```

```

CPU utilization for five seconds: 1%, one minute: 3%, five minutes: 2%
Core 0: CPU utilization for five seconds: 2%, one minute: 2%, five minutes: 2%
Core 1: CPU utilization for five seconds: 2%, one minute: 1%, five minutes: 1%
Core 2: CPU utilization for five seconds: 3%, one minute: 1%, five minutes: 1%
Core 3: CPU utilization for five seconds: 2%, one minute: 5%, five minutes: 2%

```

Pid	PPid	5Sec	1Min	5Min	Status	Size	Name
1	0	0%	0%	0%	S	4876	systemd
2	0	0%	0%	0%	S	0	kthreadd
3	2	0%	0%	0%	S	0	ksoftirqd/0
5	2	0%	0%	0%	S	0	kworker/0:0H
7	2	0%	0%	0%	S	0	rcu_sched
8	2	0%	0%	0%	S	0	rcu_bh
9	2	0%	0%	0%	S	0	migration/0
10	2	0%	0%	0%	S	0	watchdog/0
11	2	0%	0%	0%	S	0	watchdog/1
12	2	0%	0%	0%	S	0	migration/1
13	2	0%	0%	0%	S	0	ksoftirqd/1
15	2	0%	0%	0%	S	0	kworker/1:0H
16	2	0%	0%	0%	S	0	watchdog/2
17	2	0%	0%	0%	S	0	migration/2
18	2	0%	0%	0%	S	0	ksoftirqd/2
20	2	0%	0%	0%	S	0	kworker/2:0H
21	2	0%	0%	0%	S	0	watchdog/3
22	2	0%	0%	0%	S	0	migration/3
23	2	0%	0%	0%	S	0	ksoftirqd/3
24	2	0%	0%	0%	S	0	kworker/3:0
25	2	0%	0%	0%	S	0	kworker/3:0H
26	2	0%	0%	0%	S	0	kdevtmpfs
27	2	0%	0%	0%	S	0	netns
28	2	0%	0%	0%	S	0	perf
29	2	0%	0%	0%	S	0	khungtaskd
30	2	0%	0%	0%	S	0	writeback
31	2	7%	8%	8%	S	0	ksmd
32	2	0%	0%	0%	S	0	khugepaged
33	2	0%	0%	0%	S	0	crypto
34	2	0%	0%	0%	S	0	bioaset
35	2	0%	0%	0%	S	0	kblockd
36	2	0%	0%	0%	S	0	ata_sff
37	2	0%	0%	0%	S	0	rpciod
63	2	0%	0%	0%	S	0	kswapd0
64	2	0%	0%	0%	S	0	vmstat
65	2	0%	0%	0%	S	0	fsnotify_mark
.							
.							
.							

The following is sample output from the **show processes cpu platform history 5sec** command:

```
Device# show processes cpu platform history 5sec
```

```

5 seconds ago, CPU utilization: 0%
10 seconds ago, CPU utilization: 0%
15 seconds ago, CPU utilization: 0%
20 seconds ago, CPU utilization: 0%
25 seconds ago, CPU utilization: 0%
30 seconds ago, CPU utilization: 0%
35 seconds ago, CPU utilization: 0%
40 seconds ago, CPU utilization: 0%
45 seconds ago, CPU utilization: 0%
50 seconds ago, CPU utilization: 0%
55 seconds ago, CPU utilization: 0%
60 seconds ago, CPU utilization: 0%
65 seconds ago, CPU utilization: 0%
70 seconds ago, CPU utilization: 0%

```

show processes cpu platform history

```
75 seconds ago, CPU utilization: 0%
80 seconds ago, CPU utilization: 0%
85 seconds ago, CPU utilization: 0%
90 seconds ago, CPU utilization: 0%
95 seconds ago, CPU utilization: 0%
100 seconds ago, CPU utilization: 0%
105 seconds ago, CPU utilization: 0%
110 seconds ago, CPU utilization: 0%
115 seconds ago, CPU utilization: 0%
120 seconds ago, CPU utilization: 0%
125 seconds ago, CPU utilization: 0%
130 seconds ago, CPU utilization: 0%
135 seconds ago, CPU utilization: 0%
140 seconds ago, CPU utilization: 0%
145 seconds ago, CPU utilization: 1%
150 seconds ago, CPU utilization: 0%
155 seconds ago, CPU utilization: 0%
160 seconds ago, CPU utilization: 0%
165 seconds ago, CPU utilization: 0%
170 seconds ago, CPU utilization: 0%
175 seconds ago, CPU utilization: 0%
180 seconds ago, CPU utilization: 0%
185 seconds ago, CPU utilization: 0%
190 seconds ago, CPU utilization: 0%
195 seconds ago, CPU utilization: 0%
200 seconds ago, CPU utilization: 0%
205 seconds ago, CPU utilization: 0%
210 seconds ago, CPU utilization: 0%
215 seconds ago, CPU utilization: 0%
220 seconds ago, CPU utilization: 0%
225 seconds ago, CPU utilization: 0%
230 seconds ago, CPU utilization: 0%
235 seconds ago, CPU utilization: 0%
240 seconds ago, CPU utilization: 0%
245 seconds ago, CPU utilization: 0%
250 seconds ago, CPU utilization: 0%
.
.
.
```

show processes cpu platform monitor

To displays information about the CPU utilization of the IOS-XE processes, use the **show processes cpu platform monitor** command in privileged EXEC mode.

show processes cpu platform monitor location switch {*switch-number* | **active** | **standby**} {**0** | **F0** | **R0**}

Syntax Description	location	Displays information about the Field Replaceable Unit (FRU) location.
	switch	Specifies the switch.
	<i>switch-number</i>	Switch number.
	active	Specifies the active instance.
	standby	Specifies the standby instance.
	0	Specifies the shared port adapter (SPA) interface processor slot 0.
	F0	Specifies the Embedded Service Processor (ESP) slot 0.
	R0	Specifies the Route Processor (RP) slot 0.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines The output of the **show platform software process slot switch** and **show processes cpu platform monitor location** commands display the output of the Linux **top** command. The output of these commands display Free memory and Used memory as displayed by the Linux **top** command. The values displayed for the Free memory and Used memory by these commands do not match the values displayed by the output of other platform-memory related CLIs.

Examples

The following is sample output from the **show processes cpu monitor location switch active R0** command:

```
Switch# show processes cpu platform monitor location switch active R0

top - 00:04:21 up 1 day, 11:22, 0 users, load average: 0.42, 0.60, 0.78
Tasks: 312 total, 4 running, 308 sleeping, 0 stopped, 0 zombie
Cpu(s): 7.4%us, 3.3%sy, 0.0%ni, 89.2%id, 0.0%wa, 0.0%hi, 0.1%si, 0.0%st
Mem: 3976844k total, 3956928k used, 19916k free, 419312k buffers
Swap: 0k total, 0k used, 0k free, 1947036k cached

  PID USER      PR  NI  VIRT  RES  SHR  S  %CPU  %MEM    TIME+  COMMAND
  6294 root      20   0  3448  1368  912  R   9.0   0.0   0:00.07 top
 17546 root      20   0 2044m 244m  79m  S   6.3 187:02.07 fed main event
30276 root      20   0  171m  42m  33m  S   7.1  1.1 125:15.54 repm
   16 root      20   0     0     0     0  S   5.0   0.0  22:07.92 rcuc/2
   21 root      20   0     0     0     0  R   5.0   0.0  22:13.24 rcuc/3
```

show processes cpu platform monitor

```

18662 root      20    0 1806m 678m 263m R    5 17.5 215:47.59 linux_iods-imag
   11 root      20    0     0    0    0 S    4  0.0 21:37.41 rcuc/1
10333 root      20    0 6420 3916 1492 S    4  0.1  4:47.03 btrace_rotate.s
   10 root      20    0     0    0    0 S    2  0.0  0:58.13 rcuc/0
 6304 root      20    0   776   12    0 R    2  0.0  0:00.01 ls
17835 root      20    0 935m  74m  63m S    2  1.9 82:34.07 sif_mgr
   1 root      20    0 8440 4740 2184 S    0  0.1  0:09.52 systemd
   2 root      20    0     0    0    0 S    0  0.0  0:00.00 kthreadd
   3 root      20    0     0    0    0 S    0  0.0  0:02.86 ksoftirqd/0
   5 root        0 -20     0    0    0 S    0  0.0  0:00.00 kworker/0:0H
   7 root      RT    0     0    0    0 S    0  0.0  0:01.44 migration/0

```

Related Commands

Command	Description
show platform software process slot switch	Displays platform software process switch information.

show processes memory

To display the amount of memory used by each system process, use the **show processes memory** command in privileged EXEC mode.

```
show processes memory [{ process-id | sorted [{ allocated | getbufs | holding }]}]
```

Syntax Description

<i>process-id</i>	(Optional) Process ID (PID) of a specific process. When you specify a process ID, only details for the specified process will be shown.
sorted	(Optional) Displays memory data sorted by the Allocated, Get Buffers, or Holding column. If the sorted keyword is used by itself, data is sorted by the Holding column by default.
allocated	(Optional) Displays memory data sorted by the Allocated column.
getbufs	(Optional) Displays memory data sorted by the Getbufs (Get Buffers) column.
holding	(Optional) Displays memory data sorted by the Holding column. This keyword is the default.

Command Modes

Privileged EXEC (#)

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

The **show processes memory** command and the **show processes memory sorted** command displays a summary of total, used, and free memory, followed by a list of processes and their memory impact.

If the standard **show processes memory process-id** command is used, processes are sorted by their PID. If the **show processes memory sorted** command is used, the default sorting is by the Holding value.



Note Holding memory of a particular process can be allocated by other processes also, and so it can be greater than the allocated memory.

The following is sample output from the **show processes memory** command:

```
Device# show processes memory

Processor Pool Total: 25954228 Used: 8368640 Free: 17585588
  PID TTY  Allocated      Freed    Holding    Getbufs    Retbufs Process
   0  0    8629528    689900    6751716         0         0 *Init*
   0  0     24048    12928     24048         0         0 *Sched*
   0  0         260     328         68    350080         0 *Dead*
   1  0         0         0     12928         0         0 Chunk Manager
   2  0         192     192     6928         0         0 Load Meter
   3  0    214664     304    227288         0         0 Exec
   4  0         0         0     12928         0         0 Check heaps
   5  0         0         0     12928         0         0 Pool Manager
   6  0         192     192     12928         0         0 Timers
   7  0         192     192     12928         0         0 Serial Backgroun
```

show processes memory

```

 8 0      192      192      12928      0      0 AAA high-capacit
 9 0      0        0        24928      0      0 Policy Manager
10 0      0        0        12928      0      0 ARP Input
11 0      192      192      12928      0      0 DDR Timers
12 0      0        0        12928      0      0 Entity MIB API
13 0      0        0        12928      0      0 MPLS HC Counter
14 0      0        0        12928      0      0 SERIAL A'detect
.
.
.
78 0      0        0        12992      0      0 DHCPD Timer
79 0      160      0        13088      0      0 DHCPD Database
      8329440 Total

```

The table below describes the significant fields shown in the display.

Table 11: show processes memory Field Descriptions

Field	Description
Processor Pool Total	Total amount of memory, in kilobytes (KB), held for the Processor memory pool.
Used	Total amount of used memory, in KB, in the Processor memory pool.
Free	Total amount of free memory, in KB, in the Processor memory pool.
PID	Process ID.
TTY	Terminal that controls the process.
Allocated	Bytes of memory allocated by the process.
Freed	Bytes of memory freed by the process, regardless of who originally allocated it.
Holding	Amount of memory, in KB, currently allocated to the process. This includes memory allocated by the process and assigned to the process.
Getbufs	Number of times the process has requested a packet buffer.
Retbufs	Number of times the process has relinquished a packet buffer.
Process	Process name.
Init	System initialization process.
Sched	The scheduler process.
Dead	Processes as a group that are now dead.
<value> Total	Total amount of memory, in KB, held by all processes (sum of the “Holding” column).

The following is sample output from the **show processes memory** command when the **sorted** keyword is used. In this case, the output is sorted by the Holding column, from largest to smallest.

```

Device# show processes memory sorted

Processor Pool Total: 25954228 Used: 8371280 Free: 17582948
PID TTY Allocated Freed Holding Getbufs Retbufs Process
 0 0 8629528 689900 6751716 0 0 *Init*

```

```

 3  0  217304  304  229928  0  0 Exec
53  0  109248  192  96064  0  0 DHCPD Receive
56  0  0  0  32928  0  0 COPS
19  0  39048  0  25192  0  0 Net Background
42  0  0  0  24960  0  0 L2X Data Daemon
58  0  192  192  24928  0  0 X.25 Background
43  0  192  192  24928  0  0 PPP IP Route
49  0  0  0  24928  0  0 TCP Protocols
48  0  0  0  24928  0  0 TCP Timer
17  0  192  192  24928  0  0 XML Proxy Client
 9  0  0  0  24928  0  0 Policy Manager
40  0  0  0  24928  0  0 L2X SSS manager
29  0  0  0  24928  0  0 IP Input
44  0  192  192  24928  0  0 PPP IPCP
32  0  192  192  24928  0  0 PPP Hooks
34  0  0  0  24928  0  0 SSS Manager
41  0  192  192  24928  0  0 L2TP mgmt daemon
16  0  192  192  24928  0  0 Dialer event
35  0  0  0  24928  0  0 SSS Test Client
--More--

```

The following is sample output from the **show processes memory** command when a process ID (*process-id*) is specified:

```
Device# show processes memory 1
```

```

Process ID: 1
Process Name: Chunk Manager
Total Memory Held: 8428 bytes
Processor memory holding = 8428 bytes
pc = 0x60790654, size = 6044, count = 1
pc = 0x607A5084, size = 1544, count = 1
pc = 0x6076DBC4, size = 652, count = 1
pc = 0x6076FF18, size = 188, count = 1
I/O memory holding = 0 bytes

```

```
Device# show processes memory 2
```

```

Process ID: 2
Process Name: Load Meter
Total Memory Held: 3884 bytes
Processor memory holding = 3884 bytes
pc = 0x60790654, size = 3044, count = 1
pc = 0x6076DBC4, size = 652, count = 1
pc = 0x6076FF18, size = 188, count = 1
I/O memory holding = 0 bytes

```

Related Commands

Command	Description
show memory	Displays statistics about memory, including memory-free pool statistics.
show processes	Displays information about the active processes.

show processes memory platform

To display memory usage for each Cisco IOS XE process, use the **show processes memory platform** command in privileged EXEC mode.

Syntax	Description				
accounting	(Optional) Displays the top memory allocators for each Cisco IOS XE process.				
detailed	(Optional) Displays detailed memory information for a specified Cisco IOS XE process.				
name <i>process-name</i>	(Optional) Displays the Cisco IOS XE process name. Enter the process name.				
process-id <i>process-ID</i>	(Optional) Displays the Cisco IOS XE process ID. Enter the process ID.				
location	(Optional) Displays information about the Field Replaceable Unit (FRU) location.				
maps	(Optional) Displays memory maps of a process.				
smaps	(Optional) Displays static memory maps of a process.				
sorted	(Optional) Displays the sorted output based on the Resident Set Size (RSS) memory used by Cisco IOS XE process.				
switch <i>switch-number</i>	Displays information about the device.				
active	Displays information about the active instance of the device.				
standby	Displays information about the standby instance of the device.				
0	Displays information about Shared Port Adapter (SPA)-Inter-Processor slot 0.				
F0	Displays information about Embedded Service Processor (ESP) slot 0.				
R0	Displays information about Route Processor (RP) slot 0.				
Command Modes	Privileged EXEC (#)				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE Everest 16.5.1a</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE Everest 16.5.1a	This command was introduced.
Release	Modification				
Cisco IOS XE Everest 16.5.1a	This command was introduced.				

Release	Modification
Cisco IOS XE Gibraltar 16.10.1	This command was modified. The keyword accounting was added. The Total column was deleted from the output.

Examples

The following is a sample output from the **show processes memory platform** command:

```
device# show processes memory platform

System memory: 3976852K total, 2761580K used, 1215272K free,
Lowest: 1215272K
  Pid   Text      Data   Stack  Dynamic   RSS      Name
-----
    1   1246     4400   132    1308     4400     systemd
   96   233     2796   132    132      2796     systemd-journal
  105   284     1796   132    176      1796     systemd-udev
  707    52     2660   132    172      2660     in.telnetd
  744   968     3264   132    1700     3264     brelay.sh
  835   52     2660   132    172      2660     in.telnetd
  863   968     3264   132    1700     3264     brelay.sh
  928   968     3996   132    2312     3996     reflector.sh
  933   968     3976   132    2312     3976     droputil.sh
  934   968     2140   132    528      2140     oom.sh
  936   173     936    132    132      936     xinetd
  945   968     1472   132    132      1472     libvirtd.sh
  947   592    43164   132    3096    43164     repm
  954    45     932    132    132      932     rpcbind
  986   482     3476   132    132      3476     libvirtd
  988    66     940    132    132      940     rpc.statd
  993   968     928    132    132      928     boothelper_evt.
 1017   21     640    132    132      640     inotifywait
 1089  102    1200   132    132     1200     rpc.mountd
 1328    9     2940   132    148     2940     rotee
 1353   39     532    132    132      532     sleep
!
!
!
```

The following is a sample output from the **show processes memory platform accounting** command:

```
device# show processes memory platform accounting
Hourly Stats

  process                callsite_ID(bytes)  max_diff_bytes  callsite_ID(calls)
max_diff_calls  tracekey                timestamp(UTC)

-----
smand_rp_0                3624155137          172389          3624155138          50
 1#a3e0e4361082c702e5bf1afbd90e6313  2018-09-04 14:23
linux_iosd-imag_rp_0      3626295305          49188          3624155138          12
 1#545420bd869d25eb5ab826182ee5d9ce  2018-09-04 12:03
btman_rp_0                3624737792          17080          2953915394          64
 1#d6888bd9564a3c4fcf049c31ba07a036  2018-09-04 22:29
fman_fp_image_fp_0        3624059905          16960          4027402242          298
 1#921ba4d9df5b0a6e946a3b270bd6592d  2018-09-04 22:55
```

show processes memory platform

```

fed_main_event_fp_0      3626295305      16396      4027402242      32
    1#27083f7bf3985d892505806cae2bfb0d      2018-09-04 12:03
dbm_rp_0                 3626295305      16396      4027402242      3
    1#2b878f802bd7703c5298d37e7a4e8ac3      2018-09-04 12:02
tamd_proc_rp_0          3895208962      12632      3624667171      7
    1#5b0ed8f88ef5f873abcaf8a744037a44      2018-09-04 18:47
btman_fp_0              3624233985      12288      3624737792      9
    1#d6888bd9564a3c4fcf049c31ba07a036      2018-09-04 15:23
sif_mgr_rp_0            3624059907      8216      4027402242      4
    1#de2a951a8a7bae83ca2c04c56810eb72      2018-09-04 14:21
python2.7_fp_0         2954560513      8000      2954560513      1
    2018-09-04 12:16
nginx_rp_0              3357041665      4608      4027402242      4
    1#32e56bb09e0509c5fa5ac32093631206      2018-09-04 16:18
rotee_FRU_SLOT_NUM     3624667169      4097      3624667169      1
    1#ff68e5150a698cd59fa259828614995b      2018-09-04 10:43
hman_rp_0               3893617664      1488      3893617664      1
    1#1c4aadada30083c5d6f66dc8ca8cd4cb      2018-09-04 10:42
tams_proc_rp_0         3895096320      1024      3895096320      1
    1#a36a3afa9884c8dc4d40af1e80cacd26      2018-09-04 10:42
stack_mgr_rp_0         4027402242      904      4027402242      4
    1#ca902eab11a18ab056b16554f49871e8      2018-09-04 14:21
sessmgrd_rp_0          3491618816      848      3624155138      8
    1#720239fc8bddcabc059768c55a1640ed      2018-09-04 14:32
psd_rp_0                4027402242      696      4027402242      4
    1#98cf04e0ddd78c2400b3ca3b5f298594      2018-09-04 14:21
lman_rp_0               4027402242      592      4027402242      4
    1#dc8ed9e428d36477a617d56c51d5caf2      2018-09-04 14:21
bt_logger_rp_0         4027402242      592      4027402242      4
    1#ba882be1ed783e72575e97cc0908e0e8      2018-09-04 14:21
repm_rp_0              4027402242      592      4027402242      4
    1#ae461a05430efa767427f2ab40aba372      2018-09-04 14:21
fman_rp_rp_0           4027402242      592      4027402242      3
    1#09def9cc1390911be9e3a7a9c89f4cf7      2018-09-04 12:16
epc_ws_liaison_fp_0    4027402242      592      4027402242      4
    1#41451626dcce9d1478b22e2ebbbdcf54      2018-09-04 14:21
cli_agent_rp_0         4027402242      592      4027402242      4
    1#92d3882919daf3a9e210807c61de0552      2018-09-04 14:21
cmm_rp_0                4027402242      592      4027402242      4
    1#15ed1d79e96874b1e0621c42c3de6166      2018-09-04 14:21
tms_rp_0                4027402242      352      4027402242      4
    1#5c6efe2e21f15aa16318576d3ec9153c      2018-09-04 12:03
plogd_rp_0             4027402242      48      4027402242      1
    1#2d7f2ef57206f4fa763d7f2f5400bf1b      2018-09-04 10:43
cmand_rp_0             3624155137      17      3624155137      1
    1#f1f41f61c44d73014023db5d8a46ecf5      2018-09-04 10:42
!
!
!
```

The following is a sample output from the **show processes memory platform sorted** command:

```

device# show processes memory platform sorted
System memory: 3976852K total, 2762884K used, 1213968K free,
Lowest: 1213968K
```

Pid	Text	Data	Stack	Dynamic	RSS	Name
7885	149848	684864	136	80	684864	linux_iosd-imag
9655	3787	264964	136	18004	264964	wcm
17261	324	248588	132	103908	248588	fed main event
4268	391	102084	136	5596	102084	cli_agent

```

    4856      357      93388    132      3680      93388          dbm
17067    1087      77912    136      1796      77912    platform_mgr
!
!
!
```

The following is sample output from the **show processes memory platform sorted location switch active R0** command:

```

device# show processes memory platform sorted location switch active R0
System memory: 3976852K total, 2762884K used, 1213968K free,
Lowest: 1213968K

  Pid      Text      Data  Stack  Dynamic      RSS      Name
-----
  7885    149848    684864    136      80      684864    linux_iosd-imag
  9655      3787    264964    136     18004    264964      wcm
 17261      324    248588    132    103908    248588    fed main event
  4268      391    102084    136      5596    102084      cli_agent
  4856      357      93388    132      3680      93388      dbm
17067    1087      77912    136      1796      77912    platform_mgr
!
!
!
```

show processes platform

To display information about the IOS-XE processes running on a platform, use the **show processes platform** command in privileged EXEC mode.

show processes platform [**detailed name** *process-name*] [**location** **switch** {*switch-number* | **active** | **standby**} {**0** | **F0** | **FP active** | **R0**}]

detailed	(Optional) Displays detailed information of the specified IOS-XE process.
name <i>process-name</i>	(Optional) Specifies the process name.
location	(Optional) Specifies the Field Replaceable Unit (FRU) location.
switch <i>switch-number</i>	(Optional) Displays information about the switch.
active	(Optional) Specifies the active instance of the device.
standby	(Optional) Specifies standby instance of the device.
0	Specifies the Shared Port Adapter (SPA) Interface Processor slot 0.
F0	Specifies the Embedded Service Processor (ESP) slot 0.
FP active	Specifies the active instance in the Embedded Service Processor (ESP).
R0	Specifies the Route Processor (RP) slot 0.

Command History

Release	Modification
Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Command Modes

Privileged EXEC(#)

Examples:

The following is sample output from the **show processes platform** command:

```
Device# show processes platform
```

```
CPU utilization for five seconds: 1%, one minute: 2%, five minutes: 1%
```

```

  Pid   PPid  Status   Size  Name
  -----
    1     0    S        4876  systemd
    2     0    S         0  kthreadd
    3     2    S         0  ksoftirqd/0
    5     2    S         0  kworker/0:0H
    7     2    S         0  rcu_sched
    8     2    S         0  rcu_bh
    9     2    S         0  migration/0
   10    2    S         0  watchdog/0
   11    2    S         0  watchdog/1
   12    2    S         0  migration/1

```



```

13      2  S          0  ksoftirqd/1
15      2  S          0  kworker/1:0H
16      2  S          0  watchdog/2
17      2  S          0  migration/2
18      2  S          0  ksoftirqd/2
20      2  S          0  kworker/2:0H
21      2  S          0  watchdog/3
22      2  S          0  migration/3
23      2  S          0  ksoftirqd/3
24      2  S          0  kworker/3:0
25      2  S          0  kworker/3:0H
26      2  S          0  kdevtmpfs
27      2  S          0  netns
28      2  S          0  perf
29      2  S          0  khungtaskd
30      2  S          0  writeback
31      2  S          0  ksm
32      2  S          0  khugepaged
33      2  S          0  crypto
34      2  S          0  bioset
35      2  S          0  kblockd
36      2  S          0  ata_sff
37      2  S          0  rpciod
63      2  S          0  kswapd0
64      2  S          0  vmstat
65      2  S          0  fsnotify_mark
66      2  S          0  nfsiod
74      2  S          0  bioset
75      2  S          0  bioset
76      2  S          0  bioset
77      2  S          0  bioset
78      2  S          0  bioset
79      2  S          0  bioset
80      2  S          0  bioset
81      2  S          0  bioset
82      2  S          0  bioset
83      2  S          0  bioset
84      2  S          0  bioset
85      2  S          0  bioset
86      2  S          0  bioset
87      2  S          0  bioset
88      2  S          0  bioset
89      2  S          0  bioset
90      2  S          0  bioset
91      2  S          0  bioset
92      2  S          0  bioset
93      2  S          0  bioset
94      2  S          0  bioset
95      2  S          0  bioset
96      2  S          0  bioset
97      2  S          0  bioset
100     2  S          0  ipv6_addrconf
102     2  S          0  deferwq

```

The table below describes the significant fields shown in the displays.

Table 12: show processes platform Field Descriptions

Field	Description
Pid	Displays the process ID.

Field	Description
PPid	Displays the process ID of the parent process.
Status	Displays the process status in human readable form.
Size	Displays the Resident Set Size (in kilobytes (KB)) that shows how much memory is allocated to that process in the RAM.
Name	Displays the command name associated with the process. Different threads in the same process may have different command values.

show system mtu

To display the global maximum transmission unit (MTU) or maximum packet size set for the switch, use the **show system mtu** command in privileged EXEC mode.

```
show system mtu
```

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines For information about the MTU values and the stack configurations that affect the MTU values, see the **system mtu** command.

Examples This is an example of output from the **show system mtu** command:

show tech-support

To automatically run **show** commands that display system information, use the **show tech-support** command in the privilege EXEC mode.

show tech-support

[**cef** | **cft** | **eigrp** | **evc** | **fnf** | | **ipc** | **ipmulticast** | **ipsec** | **mfib** | **nat** | **nbar** | **onep** | **ospf** | **page** | **password** | **rsvp** | **subscriber** | **vrrp** | **wccp**

Syntax Description

cef	(Optional) Displays CEF related information.
cft	(Optional) Displays CFT related information.
eigrp	(Optional) Displays EIGRP related information.
evc	(Optional) Displays EVC related information.
fnf	(Optional) Displays flexible netflow related information.
ipc	(Optional) Displays IPC related information.
ipmulticast	(Optional) Displays IP multicast related information.
ipsec	(Optional) Displays IPSEC related information.
mfib	(Optional) Displays MFIB related information.
nat	(Optional) Displays NAT related information.
nbar	(Optional) Displays NBAR related information.
onep	(Optional) Displays ONEP related information.
ospf	(Optional) Displays OSPF related information.
page	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl-C keys to stop the command output.
password	(Optional) Leaves passwords and other security information in the output. If not used, passwords and other security-sensitive information in the output are replaced with the label "<removed>".
rsvp	(Optional) Displays IP RSVP related information.
subscriber	(Optional) Displays subscriber related information.
vrrp	(Optional) Displays VRRP related information.
wccp	(Optional) Displays WCCP related information.

Command Modes

Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was enhanced to display the output of the show logging onboard uptime command
	Cisco IOS XE Everest 16.5.1a	This command was implemented on the Cisco Catalyst 9500 Series Switches

Usage Guidelines

The output of the **show logging onboard uptime** command is displayed in the output of the **show tech-support** command.

The output from the **show tech-support** command is very long. To better manage this output, you can redirect the output to a file (for example, **show tech-support > filename**) in the local writable storage file system or the remote file system. Redirecting the output to a file also makes sending the output to your Cisco Technical Assistance Center (TAC) representative easier.

You can use one of the following redirection methods:

- **> filename** - Redirects the output to a file.
- **>> filename** - Redirects the output to a file in append mode.

show tech-support bgp

To automatically run show commands that display BGP related system information, use the **show tech-support bgp** command in the privileged EXEC mode.

```
show tech-support bgp [address-family {all | ipv4 [flowspec | multicast | unicast | [mdt
| mvpn] {all | vrf vrf-instance-name} ] | ipv6 [flowspec | multicast | mvpn {all | vrf
vrf-instance-name} | unicast] | l2vpn [evpn | vpls] | link-state [link-state] | [nsap |
rtfilter] [unicast] | [vpn4 | vpn6] [flowspec | multicast | unicast] {all | vrf
vrf-instance-name} } ] [detail]
```

Syntax Description

address-family	(Optional) Displays the output for a specified address family.
address-family all	(Optional) Displays the output for all address families.
ipv4	(Optional) Displays the output for IPv4 address family.
ipv6	(Optional) Displays the output for IPv6 address family.
l2vpn	(Optional) Displays the output for L2VPN address family.
link-state	(Optional) Displays the output for Link State address family.
nsap	(Optional) Displays the output for NSAP address family.
rtfilter	(Optional) Displays the output for RT Filter address family.
vpn4	(Optional) Displays the output for VPNv4 address family.
vpn6	(Optional) Displays the output for VPNv6 address family.
flowspec	(Optional) Displays the flowspec related information for an address family.
multicast	(Optional) Displays the multicast related information for an address family.
unicast	(Optional) Displays the unicast related information for an address family.
mdt	(Optional) Displays the Multicast Distribution Tree (MDT) related information for an address family.

mvpn	(Optional) Displays the Multicast VPN (MVPN) related information for an address family.
vrf	Displays the information for a VPN Routing/Forwarding instance.
evpn	(Optional) Displays the Ethernet VPN (EVPN) related information for an address family.
vpls	(Optional) Displays the Virtual Private LAN Services (VPLS) related information for an address family.
<i>vrf-instance-name</i>	Specifies the name of the VPN Routing/Forwarding instance.
all	Displays the information about all VPN NLRIs.
detail	(Optional) Displays the detailed routes information.

Command Modes

User EXEC (>)
Privileged EXEC (#)

Command History

Release	Modification
Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Usage Guidelines

The **show tech-support bgp** command is used to display the outputs of various BGP show commands and log them to the show-tech file. The output from the **show tech-support bgp** command is very long. To better manage this output, you can redirect the output to a file (for example, **show tech-support > filename**) in the local writable storage file system or the remote file system. Redirecting the output to a file also makes sending the output to your Cisco Technical Assistance Center (TAC) representative easier.

You can use one of the following redirection methods:

- > filename - Redirects the output to a file.
- >> filename - Redirects the output to a file in append mode.

The following **show** commands run automatically when the **show tech-support bgp** command is used:

- **show clock**
- **show version**
- **show running-config**
- **show process cpu sorted**
- **show process cpu history**
- **show process memory sorted**

The following **show** commands for a specific address family run automatically when the **show tech-support bgp address-family address-family-name address-family-modifier** command is used:

- **show bgp** *address-family-name address-family-modifier* **summary**
- **show bgp** *address-family-name address-family-modifier* **detail**
- **show bgp** *address-family-name address-family-modifier* **internal**
- **show bgp** *address-family-name address-family-modifier* **neighbors**
- **show bgp** *address-family-name address-family-modifier* **update-group**
- **show bgp** *address-family-name address-family-modifier* **replication**
- **show bgp** *address-family-name address-family-modifier* **community**
- **show bgp** *address-family-name address-family-modifier* **dampening dampened-paths**
- **show bgp** *address-family-name address-family-modifier* **dampening flap-statistics**
- **show bgp** *address-family-name address-family-modifier* **dampening parameters**
- **show bgp** *address-family-name address-family-modifier* **injected-paths**
- **show bgp** *address-family-name address-family-modifier* **cluster-ids**
- **show bgp** *address-family-name address-family-modifier* **cluster-ids internal**
- **show bgp** *address-family-name address-family-modifier* **peer-group**
- **show bgp** *address-family-name address-family-modifier* **pending-prefixes**
- **show bgp** *address-family-name address-family-modifier* **rib-failure**

In addition to the above commands, the following segment routing specific **show** commands also run when the **show tech-support bgp** command is used:

- **show bgp all binding-sid**
- **show segment-routing client**
- **show segment-routing mpls state**
- **show segment-routing mpls gb**
- **show segment-routing mpls connected-prefix-sid-map protocol ipv4**
- **show segment-routing mpls connected-prefix-sid-map protocol backup ipv4**
- **show mpls traffic-eng tunnel auto-tunnel client bgp**

show tech-support diagnostic

To display diagnostic information for technical support, use the **show tech-support diagnostic** command in privileged EXEC mode.

show tech-support diagnostic

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Gibraltar 16.10.1	This command was introduced.

Usage Guidelines The output of this command is very long. To better manage this output, you can redirect the output to a file (for example, **show tech-support diagnostic > flash:filename**) in the local writable storage file system or remote file system.



Note For devices that support stacking, this command is executed on every switch that is up. For devices that do not support stacking, this command is executed only on the active switch.

The output of this command displays the output of the following commands:

- **show clock**
- **show version**
- **show running-config**
- **show inventory**
- **show diagnostic bootup level**
- **show diagnostic status**
- **show diagnostic content switch all**
- **show diagnostic result switch all detail**
- **show diagnostic schedule switch all**
- **show diagnostic post**
- **show diagnostic description switch [switch number] test all**
- **show logging onboard switch [switch number] clilog detail**
- **show logging onboard switch [switch number] counter detail**
- **show logging onboard switch [switch number] environment detail**
- **show logging onboard switch [switch number] message detail**

- **show logging onboard switch [switch number] poe detail**
- **show logging onboard switch [switch number] status**
- **show logging onboard switch [switch number] temperature detail**
- **show logging onboard switch [switch number] uptime detail**
- **show logging onboard switch [switch number] voltage detail**

show tech-support poe

To display the output of all the PoE-related troubleshooting commands, use the **show tech-support poe** command in privileged EXEC mode. This command displays the output of the following commands:

- **show clock**
- **show version**
- **show running-config**
- **show log**
- **show interface**
- **show interface status**
- **show controllers ethernet-controller**
- **show controllers power inline**
- **show cdp neighbors detail**
- **show llpd neighbors detail**
- **show post**
- **show platform software ilpower details**
- **show platform software ilpower system** *switch-id*
- **show power inline**
- **show power inline** *interface-id* **detail**
- **show power inline police**
- **show power inline priority**
- **show platform software trace message platform-mgr switch** *switch-number* *R0*
- **show platform software trace message fed switch** *switch-number*
- **show platform hardware fed switch** *switch-number* **fwd-asic register read** *register-name* *pimdeviceid*
- **show platform frontend-controller manager 0** *switch-number*
- **show platform frontend-controller subordinate 0** *switch-number*
- **show platform frontend-controller version 0** *switch-number*
- **show stack-power budgeting**
- **show stack-power detail**

Command Default This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History

Release

Modification

Cisco IOS XE Gibraltar 16.10.1

This command was introduced.

This example shows the output from the **show tech-support poe** command:

```
Device# show tech-support poe
```

```
----- show clock -----
```

```
*17:39:28.741 PDT Wed Aug 22 2018
```

```
----- show version -----
```

```
Cisco IOS XE Software, Version Version 16.10.01
Cisco IOS Software [Gibraltar], Catalyst L3 Switch Software (CAT9K_LITE_IOSXE), Version
16.10.1, RELEASE SOFTWARE (fc1)
Copyright (c) 1986-2018 by Cisco Systems, Inc.
Compiled Wed 13-Jun-18 05:27 by mcpre
```

```
Cisco IOS-XE software, Copyright (c) 2005-2018 by cisco Systems, Inc.
All rights reserved. Certain components of Cisco IOS-XE software are
licensed under the GNU General Public License ("GPL") Version 2.0. The
software code licensed under GPL Version 2.0 is free software that comes
with ABSOLUTELY NO WARRANTY. You can redistribute and/or modify such
GPL code under the terms of GPL Version 2.0. For more details, see the
documentation or "License Notice" file accompanying the IOS-XE software,
or the applicable URL provided on the flyer accompanying the IOS-XE
software.
```

```
ROM: IOS-XE ROMMON
BOOTLDR: System Bootstrap, Version 8.4 DEVELOPMENT SOFTWARE
Switch uptime is 49 minutes
Uptime for this control processor is 53 minutes
System returned to ROM by Image Install
System image file is "flash:packages.conf"
Last reload reason: Image Install
```

```
This product contains cryptographic features and is subject to United
States and local country laws governing import, export, transfer and
use. Delivery of Cisco cryptographic products does not imply
third-party authority to import, export, distribute or use encryption.
Importers, exporters, distributors and users are responsible for
compliance with U.S. and local country laws. By using this product you
agree to comply with applicable laws and regulations. If you are unable
to comply with U.S. and local laws, return this product immediately.
```

```
A summary of U.S. laws governing Cisco cryptographic products may be found at:
http://www.cisco.com/wwl/export/crypto/tool/stqrg.html
```

```
If you require further assistance please contact us by sending email to
export@cisco.com.
```

```
Technology Package License Information:
```

```
-----
Technology-package          Type          Technology-package
Current                    Next reboot
-----
```

```

network-essentials      Smart License      network-essentials
None                    Subscription Smart License      None

```

```

cisco C9500-12Q (ARM64) processor with 519006K/3071K bytes of memory.
Processor board ID JPG220200A8
1 Virtual Ethernet interface
56 Gigabit Ethernet interfaces
2048K bytes of non-volatile configuration memory.
2000996K bytes of physical memory.
819200K bytes of Crash Files at crashinfo:.
819200K bytes of Crash Files at crashinfo-2:.
1941504K bytes of Flash at flash:.
1941504K bytes of Flash at flash-2:.
0K bytes of WebUI ODM Files at webui:.

```

```

Base Ethernet MAC Address      : 00:bf:77:62:62:80
Motherboard Assembly Number   : 73-18700-2
Motherboard Serial Number     : JAE220202YB
Model Revision Number         : 15
Motherboard Revision Number   : 07
Model Number                  : C9500-12Q
System Serial Number          : JPG220200A8

```

Switch Ports	Model	SW Version	SW Image	Mode
* 1 12	C9500-12Q	16.10.1	CAT9K_LITE_IOSXE	INSTALL

```

----- show running-config -----

```

```

Building configuration...

```

```

Current configuration : 22900 bytes
!
! Last configuration change at 14:59:57 PDT Mon Sep 11 2017
!
version 16.10
no service pad
service timestamps debug datetime msec localtime show-timezone
service timestamps log datetime msec localtime show-timezone
service compress-config
no platform punt-keepalive disable-kernel-core
platform shell
!
hostname stack9-mixed2
!
!
vrf definition Mgmt-vrf
!
 address-family ipv4
 exit-address-family
!
 address-family ipv6
 exit-address-family
!
no logging monitor
!
no aaa new-model
boot system switch all flash:packages.conf
clock timezone PDT -7 0
stack-mac persistent timer 4
switch 1 provision ws-c3850-24xs
!

```

```

stack-power stack Powerstack-11
 mode redundant strict
!
stack-power switch 1
 stack Powerstack-11
!
ip routing
!
crypto pki trustpoint TP-self-signed-2636786964
 enrollment selfsigned
 subject-name cn=IOS-Self-Signed-Certificate-2636786964
 revocation-check none
 rsakeypair TP-self-signed-2636786964
!
crypto pki certificate chain TP-self-signed-2636786964
 certificate self-signed 01
 30820330 30820218 A0030201 02020101 300D0609 2A864886 F70D0101 05050030
 31312F30 2D060355 04031326 494F532D 53656C66 2D536967 6E65642D 43657274
 69666963 6174652D 32363336 37383639 3634301E 170D3137 30333137 31383331
 31325A17 0D323030 31303130 30303030 305A3031 312F302D 06035504 03132649
 4F532D53 656C662D 5369676E 65642D43 65727469 66696361 74652D32 36333637
 38363936 34308201 22300D06 092A8648 86F70D01 01010500 0382010F 00308201
 0A028201 0100E7C5 F498308A 83FF02DB 48AC4428 2F738E43 8587DD2E D1D43918
 7921617F 563890D7 35707C69 413D9F6D A160A6E2 D741C0B3 8E2969EA 9E732EA8
 D3BD6B75 3465C0E6 0FAC1055 340903A5 0EF67AE4 271D73BF F6C91B39 A13C2423
 9250D266 86E07FBC B41851AC 2B03B570 73300C09 0D1B15D1 E56DDA9A 4D39CDF2
 0C7A0831 C634DFE8 3EA55909 D9EEFEA7 B0EB872E 0E91CA86 B90965CC 326780EA
 28274CB1 EB13CA17 08959E01 8F9D25EC 4F8CE767 394E345C E870D776 10758D21
 9D6BD6CD D7619DD0 28B1E6CB D1032A62 DC215510 BA58895E D3724D3C 2A8481D4
 5E5129F5 65CE9105 47DCFD46 1AA7E20E 1D20E4DD 7C786428 83ACDCDE C5900822
 F85AF081 FF130203 010001A3 53305130 0F060355 1D130101 FF040530 030101FF
 301F0603 551D2304 18301680 149EE39D 6B4CC129 72868658 69880994 7AC71912
 04301D06 03551D0E 04160414 9EE39D6B 4CC12972 86865869 8809947A C7191204
 300D0609 2A864886 F70D0101 05050003 82010100 C42EAF92 1D2324B9 2B0153DD
 A85E607E FA9FA0AD BB677982 B5DAC3F7 DE938EC9 6F948385 9916A359 AF2BBA86
 06F04B7E 5B736DD7 CDD89067 1887C177 9241CDF5 0943000D D940F982 55F3DD8A
 9E52167E 64074D23 A1E93445 1B60E4A0 D923F5FA 19064241 E575D6B9 7E1CCE9C
 3957A4C7 67F86FE4 3CC37107 B003873A 3D986787 7DF29056 29D42E30 4AE1D7AC
 3DABD1E8 940DDDF9 C14DCE35 71C79000 A7AF6B28 AD050608 4E7B16CB 7ED8D32E
 FB4B5FF8 CDA2FFCD 3FDAFEF6 AC279A80 03A7FC31 FEB27C2F D7AEFCAE 1B01850F
 AEEAC787 1F1B6BBB 380AA70F CACE89AF 3B0096B6 05906C96 8D004FDC D35AECFC
 A644C0AF 4F874C6D 67F5769E A6147323 D199FE63
 quit
!
errdisable recovery cause inline-power
errdisable recovery interval 30
license boot level ipservicesk9
diagnostic bootup level minimal
spanning-tree mode rapid-pvst
spanning-tree extend system-id
!
redundancy
 mode sso
!
class-map match-any system-cpp-police-topology-control
 description Topology control
class-map match-any system-cpp-police-sw-forward
 description Sw forwarding, L2 LVX data, LOGGING
class-map match-any system-cpp-default
 description EWLC control, EWCL data
!
policy-map port_child_policy
 class non-client-nrt-class
  bandwidth remaining ratio 10

```

```
policy-map system-cpp-policy
  class system-cpp-police-data
    police rate 600 pps
  class system-cpp-police-sys-data
    police rate 100 pps
!
interface Port-channel1
  no switchport
  no ip address
!
interface GigabitEthernet0/0
  vrf forwarding Mgmt-vrf
  ip address 10.5.49.131 255.255.255.0
  negotiation auto
!
interface FortyGigabitEthernet1/1/1
!
interface TenGigabitEthernet1/0/1
!
interface FortyGigabitEthernet2/1/1
  shutdown
!
interface TenGigabitEthernet2/1/1
  shutdown
!
interface GigabitEthernet3/0/40
  shutdown
!
interface GigabitEthernet9/0/1
  power inline port poe-ha
!
interface GigabitEthernet9/0/11
  power inline port priority high
!
interface Vlan1
  no ip address
!
ip forward-protocol nd
ip http server
ip http authentication local
ip http secure-server
!
ip tftp source-interface GigabitEthernet0/0
ip route 20.20.20.0 255.255.255.0 2.2.2.3
ip ssh time-out 60
ip ssh authentication-retries 2
ip ssh version 2
ip ssh server algorithm encryption aes128-ctr aes192-ctr aes256-ctr
ip ssh client algorithm encryption aes128-ctr aes192-ctr aes256-ctr
!
ip access-list extended AutoQos-4.0-wlan-Acl-Bulk-Data
  permit tcp any any eq 22
  permit tcp any any eq 465
  permit tcp any any eq 143
  permit tcp any any eq 993
  permit tcp any any eq 995
  permit tcp any any eq 1914
  permit tcp any any eq ftp
  permit tcp any any eq ftp-data
  permit tcp any any eq smtp
  permit tcp any any eq pop3
ip access-list extended AutoQos-4.0-wlan-Acl-MultiEnhanced-Conf
  permit udp any any range 16384 32767
  permit tcp any any range 50000 59999
```

```

ip access-list extended AutoQos-4.0-wlan-Acl-Scavenger
  permit tcp any any range 2300 2400
  permit udp any any range 2300 2400
  permit tcp any any range 6881 6999
  permit tcp any any range 28800 29100
  permit tcp any any eq 1214
  permit udp any any eq 1214
  permit tcp any any eq 3689
  permit udp any any eq 3689
  permit tcp any any eq 11999
ip access-list extended AutoQos-4.0-wlan-Acl-Signaling
  permit tcp any any range 2000 2002
  permit tcp any any range 5060 5061
  permit udp any any range 5060 5061
ip access-list extended AutoQos-4.0-wlan-Acl-Transactional-Data
  permit tcp any any eq 443
  permit tcp any any eq 1521
  permit udp any any eq 1521
  permit tcp any any eq 1526
  permit udp any any eq 1526
  permit tcp any any eq 1575
  permit udp any any eq 1575
  permit tcp any any eq 1630
  permit udp any any eq 1630
  permit tcp any any eq 1527
  permit tcp any any eq 6200
  permit tcp any any eq 3389
  permit tcp any any eq 5985
  permit tcp any any eq 8080
!
control-plane
  service-policy input system-cpp-policy
!
!
no vstack
!
line con 0
  exec-timeout 0 0
  stopbits 1
  speed 115200
line aux 0
  stopbits 1
line vty 0 4
  login
line vty 5 15
  login
!
!
mac address-table notification mac-move
wsma agent exec
  profile httplistener
  profile httpslistener
!
wsma agent config
  profile httplistener
  profile httpslistener
!
wsma agent filesys
  profile httplistener
  profile httpslistener
!
wsma agent notify
  profile httplistener
  profile httpslistener

```



```
!  
!  
wsma profile listener httplistener  
  transport http  
!  
wsma profile listener httpslistener  
  transport https  
!  
ap dot11 airtime-fairness policy-name Default 0  
ap group default-group  
ap hyperlocation ble-beacon 0  
ap hyperlocation ble-beacon 1  
ap hyperlocation ble-beacon 2  
ap hyperlocation ble-beacon 3  
ap hyperlocation ble-beacon 4  
end
```

```
----- show log -----
```

```
Syslog logging: enabled (0 messages dropped, 16 messages rate-limited, 0 flushes, 0 overruns,  
xml disabled, filtering disabled)
```

```
No Active Message Discriminator.
```

```
No Inactive Message Discriminator.
```

```
Console logging: disabled
```

```
Monitor logging: level debugging, 0 messages logged, xml disabled,  
filtering disabled
```

```
Buffer logging: level debugging, 782 messages logged, xml disabled,  
filtering disabled
```

```
Exception Logging: size (4096 bytes)
```

```
Count and timestamp logging messages: disabled
```

```
File logging: disabled
```

```
Persistent logging: disabled
```

```
No active filter modules.
```

```

Trap logging: level informational, 310 message lines logged

Logging Source-Interface:      VRF Name:

Log Buffer (4096 bytes):

rev) PD Class      : Class 3/
   (curr/prev) PD Priority  : low/unknown
   (curr/prev) Power Type  : Type 2 PSE/Type 2 PSE
   (curr/prev) mdi_pwr_support: 15/0
   (curr/prev Power Pair)  : Signal/
   (curr/prev) PSE Pwr Source : Primary/Unknown

Aug 22 17:17:28.966 PDT: %LINK-3-UPDOWN: Interface FortyGigabitEthernet1/0/1, changed state
to down

Aug 22 17:17:29.196 PDT: %ILPOWER-5-POWER_GRANTED: Interface Fo1/0/1: Power granted

Aug 22 17:17:47.209 PDT: %SYS-5-CONFIG_I: Configured from console by console

Aug 22 17:17:50.200 PDT: %ILPOWER-7-DETECT: Interface Fo1/0/1: Power Device detected: IEEE
PD

Aug 22 17:17:51.822 PDT: %ILPOWER-5-POWER_GRANTED: Interface Fo1/0/1: Power granted

Aug 22 17:17:52.321 PDT: ilpower delete power from pd linkdown Fo1/0/1

Aug 22 17:17:52.321 PDT: Ilpower interface (Fo1/0/1), delete allocated power 15400

Aug 22 17:17:52.321 PDT: Ilpower interface (Fo1/0/1) setting ICUT_OFF threshold to 0.

Aug 22 17:17:52.321 PDT: ilpower_notify_lldp_power_via_mdi_tlv Fo1/0/1 pwr alloc 0

Aug 22 17:17:52.321 PDT: Fo1/0/1 AUTO PORT PWR Alloc 130 Request 130

Aug 22 17:17:52.321 PDT: Fo1/0/1: LLDP NOTIFY TLV:

   (curr/prev) PSE Allocation(mW): 13000/0
   (curr/prev) PD Request(mW)      : 13000/0
   (curr/prev) PD Class      : Class 3/
   (curr/prev) PD Priority  : low/unknown
   (curr/prev) Power Type  : Type 2 PSE/Type 2 PSE
   (curr/prev) mdi_pwr_support: 15/0
   (curr/prev Power Pair)  : Signal/
   (curr/prev) PSE Pwr Source : Primary/Unknown

Aug 22 17:17:52.321 PDT: ILP notify LLDB-TLV: lldp power class tlv:

```

```
Aug 22 17:17:52.321 PDT:      (curr/prev) pwr value 15400/0
Aug 22 17:17:52.322 PDT: %SYS-5-CONFIG_I: Configured from console by console
Aug 22 17:17:54.323 PDT: %LINK-5-CHANGED: Interface FiveGigabitEthernet1/0/1, changed state
to administratively down
Aug 22 17:18:11.981 PDT: ILP notify LLDB-TLV: lldp power class tlv:
Aug 22 17:18:11.981 PDT:      (curr/prev) pwr value 15400/0
Aug 22 17:18:11.982 PDT: %SYS-5-CONFIG_I: Configured from console by console
Aug 22 17:18:13.207 PDT: %ILPOWER-7-DETECT: Interface Fo1/0/1: Power Device detected: IEEE
PD
Aug 22 17:18:13.207 PDT: (Fo1/0/1) data power pool 1
Aug 22 17:18:13.207 PDT: Ilpower PD device 3 class 6 from interface (Fo1/0/1)
Aug 22 17:18:13.207 PDT: (Fo1/0/1) state auto
Aug 22 17:18:13.207 PDT: (Fo1/0/1) data power pool: 1, pool 1
Aug 22 17:18:13.207 PDT: (Fo1/0/1) curr pwr usage 15400
Aug 22 17:18:13.207 PDT: (Fo1/0/1) req pwr 15400
Aug 22 17:18:13.207 PDT: (Fo1/0/1) total pwr 610000
Aug 22 17:18:13.207 PDT: (Fo1/0/1) power_status OK
Aug 22 17:18:13.207 PDT: ilpower new power from pd discovery Fo1/0/1, power_status ok
Aug 22 17:18:13.207 PDT: Ilpower interface (Fo1/0/1) power status change, allocated power
15400
Aug 22 17:18:13.207 PDT: ILP notify LLDB-TLV: lldp power class tlv:
Aug 22 17:18:13.207 PDT:      (curr/prev) pwr value 15400/0
Aug 22 17:18:13.208 PDT:  ilpower_notify_lldp_power_via_mdi_tlv Fo1/0/1 pwr alloc 15400
Aug 22 17:18:13.208 PDT: Fo1/0/1 AUTO PORT PWR Alloc 130 Request 130
Aug 22 17:18:13.208 PDT: Fo1/0/1: LLDP NOTIFY TLV:
      (curr/prev) PSE Allocation(mW): 13000/0
      (curr/prev) PD Request(mW)      : 13000/0
      (curr/prev) PD Class           : Class 3/
      (curr/prev) PD Priority        : low/unknown
      (curr/prev) Power Type        : Type 2 PSE/Type 2 PSE
      (curr/prev) mdi_pwr_support: 15/0
      (curr/prev Power Pair)        : Signal/
      (curr/prev) PSE Pwr Source   : Primary/Unknown
```

```

Aug 22 17:18:13.981 PDT: %LINK-3-UPDOWN: Interface FoveGigabitEthernet1/0/1, changed state
to down
Aug 22 17:18:14.207 PDT: %ILPOWER-5-POWER_GRANTED: Interface Fo1/0/1: Power granted
Aug 22 17:18:32.180 PDT: %SYS-5-LOG_CONFIG_CHANGE: Console logging disabled
Aug 22 17:18:32.242 PDT: %SYS-5-CONFIG_I: Configured from console by console
Aug 22 17:47:45.133 PDT: %SYS-5-CONFIG_I: Configured from console by console
Aug 22 17:47:45.717 PDT: %SYS-5-CONFIG_I: Configured from console by console
Aug 22 17:47:45.000 PDT: %SYS-6-CLOCKUPDATE: System clock has been updated from 17:47:45
PDT Wed Aug 22 2018 to 17:47:45 PDT Wed Aug 22 2018, configured from console by console.

```

```
----- show controllers power inline module 1 -----
```

```
Alchemy instance 0, address 0
```

```

Pending event flag      : N N N N N N N N N N N N
Current State          : 00 00 10 93 D8 E8
Current Event         : 11 11 14 00 00 00
Timers                : 22 00 00 00 00 00 00 00 00 00 00 00
Error State           : 14 14 14 14 14 14
Error Code            : 00 00 00 00 00 00 00 00 00 00 00 00
Power Status          : N N N N N N N N N N N N
Auto Config           : N N N N N N N N N N N N
Disconnect            : N N N N N N N N N N N N
Detection Status      : F0 00 10 00 00 00
Current Class         : 00 00 00 00 00 00
Tweetie debug         : 00 00 00 00

```

```
POE Commands pending at sub:
```

```

Command 0 on each port : 00 00 00 00 00 00
Command 1 on each port : 00 00 00 00 00 00
Command 2 on each port : 00 00 00 00 00 00
Command 3 on each port : 00 00 00 00 00 00

```

```
Alchemy instance 1, address E
```

```

Pending event flag      : N N N N N N N N N N N N
Current State          : 00 00 10 93 D8 E8
Current Event         : 11 11 11 00 00 00
Timers                : 2A 00 00 00 00 00 00 00 00 00 00 00
Error State           : 26 26 26 26 26 2A
Error Code            : 00 00 00 00 00 00 00 00 00 00 00 00
Power Status          : N N N N N N N N N N N N
Auto Config           : N N N N N N N N N N N N
Disconnect            : N N N N N N N N N N N N
Detection Status      : F0 00 00 00 00 00
Current Class         : 00 00 00 00 00 00
Tweetie debug         : 00 00 00 00

```

```
POE Commands pending at sub:
```

```

Command 0 on each port : 00 00 00 00 00 00
Command 1 on each port : 00 00 00 00 00 00
Command 2 on each port : 00 00 00 00 00 00
Command 3 on each port : 00 00 00 00 00 00

```

```
----- show platform software ilpower details -----
```

```

ILP Port Configuration for interface Te2/0/1
Initialization Done:   Yes

```

```

ILP Supported:          Yes
ILP Enabled:           Yes
POST:                  Yes
Detect On:             No
Powered Device Detected      Yes
Powered Device Class Done    No
Cisco Powered Device:       No
Power is On:              No
Power Denied:             No
Powered Device Type:        Null
Powerd Device Class:        Null
Power State:              Off
Current State:             NGWC_ILP_DETECTING_S
Previous State:            NGWC_ILP_DETECTING_S
Requested Power in milli watts: 0
Short Circuit Detected:     0
Short Circuit Count:        0
Cisco Powerd Device Detect Count: 0
Spare Pair mode:           0
Spare Pair Architecture:    1
Signal Pair Power allocation in milli watts: 0
Spare Pair Power On:       0
Powered Device power state: 0
Timer:
  Power Good:             Stopped
  Power Denied:           Stopped
  Cisco Powered Device Detect: Stopped
  IEEE Detect:             Stopped
  IEEE Short:              Stopped
  Link Down:              Stopped
  Voltage sense:          Stopped

```

----- show platform software ilpower system 3 -----

```

ILP System Configuration
Slot:                3
ILP Supported:       Yes
Total Power:         1101000
Used Power:          49400
Initialization Done: Yes
Post Done:           Yes
Post Result Logged:  No
Post Result:         Success
Power Summary:
  Module:            0
  Power Total:       1101000
  Power Used:        49400
  Power Threshold:   0
  Operation Status: On
Pool:                3
Pool Valid:          Yes
Total Power:         1101000
Power Usage:         49400

```

----- show power inline Gi9/0/16 detail -----

```

Interface: Gi9/0/16
Inline Power Mode: auto
Operational status: off
Device Detected: no
Device Type: n/a
IEEE Class: n/a

```

show tech-support poe

Discovery mechanism used/configured: Ieee and Cisco
Police: off

Power Allocated
Admin Value: 60.0
Power drawn from the source: 0.0
Power available to the device: 0.0

Actual consumption
Measured at the port: 0.0
Maximum Power drawn by the device since powered on: 0.0

Absent Counter: 0
Over Current Counter: 0
Short Current Counter: 0
Mosfet Counter: 0
Invalid Signature Counter: 0
Power Denied Counter: 0

Power Negotiation Used: None
LLDP Power Negotiation --Sent to PD-- --Rcvd from PD--
Power Type: - -
Power Source: - -
Power Priority: - -
Requested Power(W): - -
Allocated Power(W): - -

Four-Pair PoE Supported: Yes
Spare Pair Power Enabled: No
Four-Pair PD Architecture: N/A

----- show power inline Te8/0/1 detail -----

Interface Te8/0/1: inline power not supported

----- show power inline police -----

Module	Available (Watts)		Used (Watts)		Remaining (Watts)	
1	n/a		n/a		n/a	
Interface	Admin State	Oper State	Admin Police	Oper Police	Cutoff Power	Oper Power
Totals:						0.0

Module	Available (Watts)		Used (Watts)		Remaining (Watts)	
2	1050.0		0.0		1050.0	
Interface	Admin State	Oper State	Admin Police	Oper Police	Cutoff Power	Oper Power
Te2/0/1	auto	off	none	n/a	n/a	n/a
Te2/0/2	auto	off	none	n/a	n/a	n/a
Te2/0/3	auto	off	none	n/a	n/a	n/a
Te2/0/4	auto	off	none	n/a	n/a	n/a
Te2/0/5	auto	off	none	n/a	n/a	n/a
Te2/0/6	auto	off	none	n/a	n/a	n/a

Te2/0/7	auto	off	none	n/a	n/a	n/a
Te2/0/8	auto	off	none	n/a	n/a	n/a
Te2/0/9	auto	off	none	n/a	n/a	n/a
Te2/0/10	auto	off	none	n/a	n/a	n/a
Te2/0/11	auto	off	none	n/a	n/a	n/a
Te2/0/12	auto	off	none	n/a	n/a	n/a
Te2/0/13	auto	off	none	n/a	n/a	n/a
Te2/0/14	auto	off	none	n/a	n/a	n/a
Te2/0/15	auto	off	none	n/a	n/a	n/a
Te2/0/16	auto	off	none	n/a	n/a	n/a
Te2/0/17	auto	off	none	n/a	n/a	n/a
Te2/0/18	auto	off	none	n/a	n/a	n/a
Te2/0/19	auto	off	none	n/a	n/a	n/a
Te2/0/20	auto	off	none	n/a	n/a	n/a
Te2/0/21	auto	off	none	n/a	n/a	n/a
Te2/0/22	auto	off	none	n/a	n/a	n/a
Te2/0/23	auto	off	none	n/a	n/a	n/a
Te2/0/24	auto	off	none	n/a	n/a	n/a

 Totals: 0.0

Module	Available (Watts)		Used (Watts)		Remaining (Watts)	
-----	-----	-----	-----	-----	-----	-----
3	1131.0		49.4		1081.6	
Interface	Admin State	Oper State	Admin Police	Oper Police	Cutoff Power	Oper Power
-----	-----	-----	-----	-----	-----	-----
Gi3/0/1	auto	off	none	n/a	n/a	n/a
Gi3/0/2	auto	off	none	n/a	n/a	n/a
Gi3/0/3	auto	off	none	n/a	n/a	n/a
Gi3/0/4	auto	off	none	n/a	n/a	n/a
Gi3/0/5	auto	off	none	n/a	n/a	n/a
Gi3/0/6	auto	off	none	n/a	n/a	n/a
Gi3/0/7	auto	off	none	n/a	n/a	n/a
Gi3/0/8	auto	off	none	n/a	n/a	n/a
Gi3/0/9	auto	off	none	n/a	n/a	n/a
Gi3/0/10	auto	off	none	n/a	n/a	n/a
Gi3/0/11	auto	off	none	n/a	n/a	n/a
Gi3/0/12	auto	off	none	n/a	n/a	n/a
Gi3/0/13	auto	on	none	n/a	n/a	3.6
Gi3/0/14	auto	on	none	n/a	n/a	7.0
Gi3/0/15	auto	off	none	n/a	n/a	n/a
Gi3/0/16	auto	on	none	n/a	n/a	3.7
Gi3/0/17	auto	on	none	n/a	n/a	3.7
Gi3/0/18	auto	off	none	n/a	n/a	n/a
Gi3/0/19	auto	on	none	n/a	n/a	3.7
Gi3/0/20	auto	off	none	n/a	n/a	n/a
Gi3/0/21	auto	on	none	n/a	n/a	3.7
Gi3/0/22	auto	off	none	n/a	n/a	n/a
Gi3/0/23	auto	off	none	n/a	n/a	n/a
Gi3/0/24	auto	off	none	n/a	n/a	n/a
Gi3/0/25	auto	off	none	n/a	n/a	n/a
Gi3/0/26	auto	off	none	n/a	n/a	n/a
Gi3/0/27	auto	off	none	n/a	n/a	n/a
Gi3/0/28	auto	off	none	n/a	n/a	n/a
Gi3/0/29	auto	off	none	n/a	n/a	n/a
Gi3/0/30	auto	off	none	n/a	n/a	n/a
Gi3/0/31	auto	off	none	n/a	n/a	n/a
Gi3/0/32	auto	off	none	n/a	n/a	n/a
Gi3/0/33	auto	off	none	n/a	n/a	n/a
Gi3/0/34	auto	off	none	n/a	n/a	n/a
Gi3/0/35	auto	on	none	n/a	n/a	2.3

show tech-support poe

Gi3/0/36	auto	off	none	n/a	n/a	n/a
Gi3/0/37	auto	off	none	n/a	n/a	n/a
Gi3/0/38	auto	off	none	n/a	n/a	n/a
Gi3/0/39	auto	off	none	n/a	n/a	n/a
Gi3/0/40	auto	off	none	n/a	n/a	n/a
Gi3/0/41	auto	off	none	n/a	n/a	n/a
Gi3/0/42	auto	off	none	n/a	n/a	n/a
Gi3/0/43	auto	off	none	n/a	n/a	n/a
Gi3/0/44	auto	off	none	n/a	n/a	n/a
Gi3/0/45	auto	off	none	n/a	n/a	n/a
Gi3/0/46	auto	off	none	n/a	n/a	n/a
Gi3/0/47	auto	off	none	n/a	n/a	n/a
Gi3/0/48	auto	off	none	n/a	n/a	n/a

Totals: 27.7

----- show platform frontend-controller manager 0 1 -----

```

showing manager info: 1
Tx cmd cnt SYS App 24681
Rx cmd cnt SYS App 24681
Tx cmd ignore SYS App 0
Tx cmd Q full SYS App 0
Tx cmd cnt SYS App 17706
Rx cmd cnt SYS App 11804
Tx cmd ignore SYS App 0
Tx cmd Q full SYS App 0
Tx cmd cnt SYS App 0
Rx cmd cnt SYS App 0
Tx cmd ignore SYS App 0
Tx cmd Q full SYS App 0
Tx cmd cnt POE App 0
Rx cmd cnt POE App 0
Tx cmd ignore POE App 0
Tx cmd Q full POE App 0
Tx cmd cnt FRUFE App 0
Rx cmd cnt FRUFE App 0
Tx cmd ignore FRUFE App 0
Tx cmd Q full FRUFE App 0
Tx cmd cnt SYS App 1744
Rx cmd cnt SYS App 993
Tx cmd ignore SYS App 0
Tx cmd Q full SYS App 0
Tx cmd cnt IMAGE App 13809
Rx cmd cnt IMAGE App 13808
Tx cmd ignore IMAGE App 0
Tx cmd Q full IMAGE App 0
Tx cmd cnt STACK App 0
Rx cmd cnt STACK App 0
Tx cmd ignore STACK App 0
Tx cmd Q full STACK App 0
Tx cmd cnt J2A App 0
Rx cmd cnt J2A App 0
Tx cmd ignore J2A App 0
Tx cmd Q full J2A App 0
Tx cmd cnt THERM App 0
Rx cmd cnt THERM App 0
Tx cmd ignore THERM App 0
Tx cmd Q full THERM App 0
Tx cmd cnt GPIO App 0
Rx cmd cnt GPIO App 255
Tx cmd ignore GPIO App 255
Tx cmd Q full GPIO App 255

```



```

Tx cmd cnt POE_E App          -369383984
Rx cmd cnt POE_E App          -369346528
Tx cmd ignore POE_E App      -1826379312
Tx cmd Q full POE_E App      -394693324
Tx cmd cnt DMSG App          0
Rx cmd cnt DMSG App          0
Tx cmd ignore DMSG App       0
Tx cmd Q full DMSG App       255
Tx reg cnt                    16
Rx reg cnt                    16
Tx reg ignore                  0
Tx reg Q full                  0
Rx invalid frame              0
Rx invalid App                 748
Rx invalid Seq                 0
Rx invalid checksum           0
Nack cnt                       0
Send Break count              0
Early Send Break count        0
Retransmission cnt            0

```

```
----- show platform frontend-controller subordinate 0 1 -----
```

```

showing sub info: 1
State                OK
Last Reset Reason    UNKNOWN REASON
UART FE Error        0
UART PE Error        0
UART DOR Error       0
Rx Buf Overflow      0
Rx Buf Underflow     0
Tx Buf Full          0
Rx Bad Endbyte       0
PLE Invalid App      0
PLE Disabled App     0
PLE Invalid Data     0
PLE Invalid Flags    0
PLE App Error        0
PLE Lost Ctxt        0
PLE Invalid Reg      0
PLE Invalid Reg Len  0
PLE Invalid Msg Len  0
SLE Poe No Port      0
SLE I2C Busy         0
SLE I2C Error        0
SLE I2C Timeout      0
SLE Invalid Reg Len  0
SLE Msg Underrun     0

```

```
----- show platform frontend-controller version 0 1 -----
```

```

Switch 1 MCU:
Software Version    0.109
System Type        6
Device Id          2
Device Revision    0
Hardware Version   41
Bootloader Version 16

```

speed

To specify the speed of a 10/100/1000/2500/5000 Mbps port, use the **speed** command in interface configuration mode. To return to the default value, use the **no** form of this command.

```
speed {10 | 100 | 1000 | 2500 | 5000 | auto [{10 | 100 | 1000 | 2500 | 5000}] | nonegotiate}
no speed
```

Syntax Description		
	10	Specifies that the port runs at 10 Mbps.
	100	Specifies that the port runs at 100 Mbps.
	1000	Specifies that the port runs at 1000 Mbps. This option is valid and visible only on 10/100/1000 Mb/s ports.
	2500	Specifies that the port runs at 2500 Mbps. This option is valid and visible only on multi-Gigabit-supported Ethernet ports.
	5000	Specifies that the port runs at 5000 Mbps. This option is valid and visible only on multi-Gigabit-supported Ethernet ports.
	auto	Detects the speed at which the port should run, automatically, based on the port at the other end of the link. If you use the 10 , 100 , 1000 , 1000 , 2500 , or 5000 keyword with the auto keyword, the port autonegotiates only at the specified speeds.
	nonegotiate	Disables autonegotiation, and the port runs at 1000 Mbps.

Command Default The default is **auto**.

Command Modes Interface configuration

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines You cannot configure speed on 10-Gigabit Ethernet ports.

Except for the 1000BASE-T small form-factor pluggable (SFP) modules, you can configure the speed to not negotiate (**nonegotiate**) when an SFP module port is connected to a device that does not support autonegotiation.

The new keywords, **2500** and **5000** are visible only on multi-Gigabit (m-Gig) Ethernet supporting devices.

If the speed is set to **auto**, the switch negotiates with the device at the other end of the link for the speed setting, and then forces the speed setting to the negotiated value. The duplex setting remains configured on each end of the link, which might result in a duplex setting mismatch.

If both ends of the line support autonegotiation, we highly recommend the default autonegotiation settings. If one interface supports autonegotiation and the other end does not, use the auto setting on the supported side, but set the duplex and speed on the other side.



Caution Changing the interface speed and duplex mode configuration might shut down and re-enable the interface during the reconfiguration.

For guidelines on setting the switch speed and duplex parameters, see the “Configuring Interface Characteristics” chapter in the software configuration guide for this release.

Verify your settings using the **show interfaces** privileged EXEC command.

Examples

The following example shows how to set speed on a port to 100 Mbps:

```
Device(config)# interface gigabitethernet1/0/1  
Device(config-if)# speed 100
```

The following example shows how to set a port to autonegotiate at only 10 Mbps:

```
Device(config)# interface gigabitethernet1/0/1  
Device(config-if)# speed auto 10
```

The following example shows how to set a port to autonegotiate at only 10 or 100 Mbps:

```
Device(config)# interface gigabitethernet1/0/1  
Device(config-if)# speed auto 10 100
```

switchport block

To prevent unknown multicast or unicast packets from being forwarded, use the **switchport block** command in interface configuration mode. To allow forwarding unknown multicast or unicast packets, use the **no** form of this command.

switchport block {multicast | unicast}
no switchport block {multicast | unicast}

Syntax Description	multicast	Specifies that unknown multicast traffic should be blocked.
	Note	Only pure Layer 2 multicast traffic is blocked. Multicast packets that contain IPv4 or IPv6 information in the header are not blocked.
	unicast	Specifies that unknown unicast traffic should be blocked.
Command Default	Unknown multicast and unicast traffic is not blocked.	
Command Modes	Interface configuration	
Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.
Usage Guidelines	By default, all traffic with unknown MAC addresses is sent to all ports. You can block unknown multicast or unicast traffic on protected or nonprotected ports. If unknown multicast or unicast traffic is not blocked on a protected port, there could be security issues.	
	With multicast traffic, the port blocking feature blocks only pure Layer 2 packets. Multicast packets that contain IPv4 or IPv6 information in the header are not blocked.	
	Blocking unknown multicast or unicast traffic is not automatically enabled on protected ports; you must explicitly configure it.	
	For more information about blocking packets, see the software configuration guide for this release.	
	This example shows how to block unknown unicast traffic on an interface:	

```
Device(config-if)# switchport block unicast
```

You can verify your setting by entering the **show interfaces interface-id switchport** privileged EXEC command.

system mtu

Syntax Description *bytes*

Command Default The default MTU size for all ports is 1500 bytes.

Command Modes Global configuration

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines You can verify your setting by entering the **show system mtu** privileged EXEC command.

 The switch does not support the MTU on a per-interface basis.

 If you enter a value that is outside the allowed range for the specific type of interface, the value is not accepted.

voice-signaling vlan (network-policy configuration)

To create a network-policy profile for the voice-signaling application type, use the **voice-signaling vlan** command in network-policy configuration mode. To delete the policy, use the **no** form of this command.

```
voice-signaling vlan {vlan-id [{cos cos-value | dscp dscp-value}] | dot1p [{cos l2-priority | dscp dscp}] | none | untagged}
```

Syntax Description

vlan-id	(Optional) The VLAN for voice traffic. The range is 1 to 4094.
cos <i>cos-value</i>	(Optional) Specifies the Layer 2 priority class of service (CoS) for the configured VLAN. The range is 0 to 7; the default is 5.
dscp <i>dscp-value</i>	(Optional) Specifies the differentiated services code point (DSCP) value for the configured VLAN. The range is 0 to 63; the default is 46.
dot1p	(Optional) Configures the phone to use IEEE 802.1p priority tagging and to use VLAN 0 (the native VLAN).
none	(Optional) Does not instruct the Cisco IP phone about the voice VLAN. The phone uses the configuration from the phone key pad.
untagged	(Optional) Configures the phone to send untagged voice traffic. This is the default for the phone.

Command Default

No network-policy profiles for the voice-signaling application type are defined.

The default CoS value is 5.

The default DSCP value is 46.

The default tagging mode is untagged.

Command Modes

Network-policy profile configuration

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

Use the **network-policy profile** global configuration command to create a profile and to enter network-policy profile configuration mode.

The voice-signaling application type is for network topologies that require a different policy for voice signaling than for voice media. This application type should not be advertised if all of the same network policies apply as those advertised in the voice policy TLV.

When you are in network-policy profile configuration mode, you can create the profile for voice-signaling by specifying the values for VLAN, class of service (CoS), differentiated services code point (DSCP), and tagging mode.

These profile attributes are contained in the Link Layer Discovery Protocol for Media Endpoint Devices (LLDP-MED) network-policy time-length-value (TLV).

To return to privileged EXEC mode from the network-policy profile configuration mode, enter the **exit** command.

This example shows how to configure voice-signaling for VLAN 200 with a priority 2 CoS:

```
Device(config)# network-policy profile 1  
Device(config-network-policy)# voice-signaling vlan 200 cos 2
```

This example shows how to configure voice-signaling for VLAN 400 with a DSCP value of 45:

```
Device(config)# network-policy profile 1  
Device(config-network-policy)# voice-signaling vlan 400 dscp 45
```

This example shows how to configure voice-signaling for the native VLAN with priority tagging:

```
Device(config-network-policy)# voice-signaling vlan dot1p cos 4
```

voice vlan (network-policy configuration)

To create a network-policy profile for the voice application type, use the **voice vlan** command in network-policy configuration mode. To delete the policy, use the **no** form of this command.

```
voice vlan {vlan-id [{cos cos-value | dscp dscp-value}] | dot1p [{cos l2-priority | dscp dscp}] | none | untagged}
```

Syntax Description

vlan-id	(Optional) The VLAN for voice traffic. The range is 1 to 4094.
cos <i>cos-value</i>	(Optional) Specifies the Layer 2 priority class of service (CoS) for the configured VLAN. The range is 0 to 7; the default is 5.
dscp <i>dscp-value</i>	(Optional) Specifies the differentiated services code point (DSCP) value for the configured VLAN. The range is 0 to 63; the default is 46.
dot1p	(Optional) Configures the phone to use IEEE 802.1p priority tagging and to use VLAN 0 (the native VLAN).
none	(Optional) Does not instruct the Cisco IP phone about the voice VLAN. The phone uses the configuration from the phone key pad.
untagged	(Optional) Configures the phone to send untagged voice traffic. This is the default for the phone.

Command Default

No network-policy profiles for the voice application type are defined.

The default CoS value is 5.

The default DSCP value is 46.

The default tagging mode is untagged.

Command Modes

Network-policy profile configuration

Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

Usage Guidelines

Use the **network-policy profile** global configuration command to create a profile and to enter network-policy profile configuration mode.

The voice application type is for dedicated IP telephones and similar devices that support interactive voice services. These devices are typically deployed on a separate VLAN for ease of deployment and enhanced security through isolation from data applications.

When you are in network-policy profile configuration mode, you can create the profile for voice by specifying the values for VLAN, class of service (CoS), differentiated services code point (DSCP), and tagging mode.

These profile attributes are contained in the Link Layer Discovery Protocol for Media Endpoint Devices (LLDP-MED) network-policy time-length-value (TLV).

To return to privileged EXEC mode from the network-policy profile configuration mode, enter the **exit** command.

This example shows how to configure the voice application type for VLAN 100 with a priority 4 CoS:

```
Device(config)# network-policy profile 1
Device(config-network-policy)# voice vlan 100 cos 4
```

This example shows how to configure the voice application type for VLAN 100 with a DSCP value of 34:

```
Device(config)# network-policy profile 1
Device(config-network-policy)# voice vlan 100 dscp 34
```

This example shows how to configure the voice application type for the native VLAN with priority tagging:

```
Device(config-network-policy)# voice vlan dot1p cos 4
```

