

# **Critical Voice VLAN Support**

• Critical Voice VLAN Support, on page 1

# **Critical Voice VLAN Support**

The Critical Voice VLAN Support feature directs phone traffic to the configured voice VLAN of a port if the authentication server becomes unreachable.

With normal network connectivity, when an IP phone successfully authenticates on a port, the authentication server directs the phone traffic to the voice domain of the port. If the authentication server becomes unreachable, IP phones cannot authenticate the phone traffic. In multidomain authentication (MDA) mode or multiauthentication mode, you can configure the Critical Voice VLAN Support feature to direct phone traffic to the configured voice VLAN of the port. The phone is authorized as an unknown domain. Both data and voice are enabled for the phone.

## **Restrictions for Critical Voice VLAN Support**

- Different VLANs must be configured for voice and data.
- The voice VLAN must be configured on a device.
- The Critical Voice VLAN Support feature does not support standard Access Control Lists (ACLs) on the switch port.

### **Information About Critical Voice VLAN Support**

### **Critical Voice VLAN Support in Multidomain Authentication Mode**

If a critical voice VLAN is deployed using an interface in multidomain authentication (MDA) mode, the host mode is changed to multihost and the first phone device is installed as a static forwarding entries. Any additional phone devices are installed as dynamic forwarding entry in the Host Access Table (HAT).



Note

- If a critical port is already authorized and reauthentication occurs, the switch puts the port in the critical-authentication state in the current VLAN, which might be the one previously assigned by the RADIUS server.
- Inaccessible authentication bypass is compatible with guest VLAN. When a guest VLAN is enabled on a 802.1X port, the features interact as follows: if all RADIUS servers are not available and if a client is connected to a critical port and was previously assigned to a guest VLAN, the switch keeps the port in the guest VLAN.

#### Critical Voice VLAN Support in Multiauthentication Mode

If the critical authentication feature is deployed in multiauthentication mode, only one phone device will be allowed and a second phone trying to authorize will trigger a violation.

The **show authentication sessions** command displays the critical voice client data. A critically authorized voice client in multiauthentication host mode will be in the "authz success" and "authz fail" state.



Note

If critical voice is required, then critical data should be configured too. Otherwise, the critical voice client will be displayed in the "authz fail" state while the voice VLAN will be open.

#### **Critical Voice VLAN Support in a Service Template**

On enterprise Edge (eEdge) devices, the critical access of phones is configured by activating a critical service template when the authentication server becomes unreachable. The voice feature plug-in registers with the Enterprise Policy Manager (EPM) by using an authentication, authorization, and accounting (AAA) voice attribute, and it allows unconditional access to the voice VLAN while the AAA services are unavailable.

To enable critical voice VLAN support, the critical authentication of phones must be configured using a combination of control policy rules and a service template.

When the authentication server is unavailable and the host is unauthorized, the AAA attribute device-traffic-type is not populated. The phone is authorized as an unknown domain, and both the data and voice VLAN are enabled for this device, allowing the device to handle voice traffic.

### **How to Configure Critical Voice VLAN Support**

### Configuring a Critical Voice VLAN in a Service Template

Perform this task on a port to configure critical voice VLAN support using a service template.

#### **Procedure**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.

	Command or Action	Purpose	
	Device> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Device# configure terminal		
Step 3	service-template template-name	Defines a template that contains a set of service policy attributes to apply to subscriber session and enters service template configuration	
	Example:		
	Device(config)# service-template CRITICAL-DATA	mode.	
Step 4	vlan vlan-id	Assigns a VLAN to a subscriber session.	
	Example:		
	Device(config-service-template)# vlan 116		
Step 5	exit	Exits service template configuration mode and	
	Example:	returns to global configuration mode.	
	Device(config-service-template)# exit		
Step 6	service-template template-name	Defines a template that contains a set of service	
	Example:	policy attributes to apply to subscriber session and enters service template configuration	
	Device(config)# service-template CRITICAL-VOICE	mode.	
Step 7	voice vlan	Assigns a critical voice VLAN to a subscriber	
	Example:	session.	
	<pre>Device(config-service-template)# voice   vlan</pre>		
Step 8	exit	Exits service template configuration mode and	
	Example:	returns to global configuration mode.	
	Device(config-service-template)# exit		
Step 9	class-map type control subscriber {match-all   match-any   match-none}	Creates a control class, which defines the conditions under which the actions of a control	
	control-class-name	policy are executed and enters control	
	Example:	class-map filter configuration mode.	
	Device(config)# class-map type control subscriber match-all AAA-SVR-DOWN-UNAUTHD-HOST		
Step 10	match result-type [method {dot1x   mab   webauth}] result-type	Creates a condition that returns true based on the specified authentication result.	
	Example:		
	· ·		

	Command or Action	Purpose
	Device(config-filter-control-classmap)# match result-type aaa-timeout	
Step 11	match authorization-status {authorized   unauthorized}	Creates a condition that returns true based on the authorization status of a session.
	Example:  Device(config-filter-control-classmap)# match authorization-status unauthorized	
Step 12	<pre>exit  Example: Device(config-filter-control-classmap)#   exit</pre>	Exits control class-map filter configuration mode and returns to global configuration mode.
Step 13	<pre>class-map type control subscriber {match-all   match-any   match-none} control-class-name  Example:  Device(config) # class-map type control subscriber match-all AAA-SVR-DOWN-AUTHD-HOST</pre>	Creates a control class, which defines the conditions under which the actions of a control policy are executed and enters control class-map filter configuration mode.
Step 14	<pre>match result-type [method {dot1x   mab   webauth}] result-type  Example:  Device(config-filter-control-classmap) # match result-type aaa-timeout</pre>	Creates a condition that returns true based on the specified authentication result.
Step 15	<pre>match authorization-status {authorized   unauthorized}  Example:  Device(config-filter-control-classmap) # match authorization-status authorized</pre>	Creates a condition that returns true based on the authorization status of a session.
Step 16	<pre>end Example: Device(config-filter-control-classmap)# end</pre>	Exits control class-map filter configuration mode and returns to privileged EXEC mode.

## **Activating Critical Voice VLAN**

Perform the following task to activate a critical voice VLAN that is configured on a service template.

#### **Procedure**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.

	Command or Action	Purpose
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	policy-map type control subscriber control-policy-name	Defines a control policy for subscriber sessions and enters control policy-map event
	Example:	configuration mode.
	Device(config) # policy-map type control subscriber cisco-subscriber	
Step 4	event authentication-failure [match-all   match-first]	Specifies the type of event that triggers actions in a control policy if all authentication events
	Example:	are a match and enters control policy-map class configuration mode.
	<pre>Device(config-event-control-policymap)#   event authentication-failure   match-first</pre>	configuration mode.
Step 5	priority-number class {control-class-name   always} [do-all   do-until-failure   do-until-success]	Specifies that the control class should execute the actions in a control policy, in the specified order, until one of the actions fails, and enters
	Example:	control policy-map action configuration mode.
	Device(config-class-control-policymap)# 10 class AAA-SVR-DOWN-UNAUTHD-HOST do-until-failure	
Step 6	action-number activate { policy type control subscriber control-policy-name   service-template template-name [aaa-list list-name] [precedence [replace-all]]}	Activates a control policy associated with the VLAN on a subscriber session.
	Example:	
	Device(config-action-control-policymap)# 10 activate service-template CRITICAL-DATA	
Step 7	action-number activate { policy type control subscriber control-policy-name   service-template template-name [aaa-list list-name] [precedence [replace-all]]}	Activates a control policy associated with the voice VLAN on a subscriber session.
	Example:	
	Device(config-action-control-policymap)# 20 activate service-template CRITICAL-VOICE	

	Command or Action	Purpose
Step 8	<pre>action-number authorize Example:    Device(config-action-control-policymap)#</pre>	Initiates the authorization of a subscriber session.
Step 9	action-number pause reauthentication  Example:  Device(config-action-control-policymap)# 40 pause reauthentication	Pauses the reauthentication process after an authentication failure.
Step 10	<pre>exit  Example: Device(config-action-control-policymap)#    exit</pre>	Exits control policy-map action configuration mode and enters control policy-map class configuration mode.
Step 11	<pre>priority-number class { control-class-name     always } [do-all   do-until-failure     do-until-success]  Example: Device (config-class-control-policymap) #   20 class AAA-SVR-DOWN-AUTHD-HOST</pre>	Specifies that the control class should execute the actions in a control policy, in the specified order, until one of the actions fails, and enters control policy-map action configuration mode.
Step 12	action-number pause reauthentication  Example:  Device(config-action-control-policymap)#  10 pause reauthentication	Pauses the reauthentication process after an authentication failure.
Step 13	<pre>end Example: Device(config-action-control-policymap)# exit</pre>	Exits control policy-map action configuration mode and enters privileged EXEC mode.

## **Configuration Examples for Critical Voice VLAN Support**

### **Example: Configuring a Voice VLAN in a Service Template**

```
Device> enable

Device# configure terminal

Device(config)# service-template CRITICAL-DATA

Device(config-service-template)# vlan 116

Device(config-service-template)# exit

Device(config)# service-template CRITICAL-VOICE

Device(config-service-template)# voice vlan

Device(config-service-template)# exit

Device(config)# class-map type control subscriber match-all AAA-SVR-DOWN-UNAUTHD-HOST

Device(config-filter-control-classmap)# match result-type aaa-timeout

Device(config-filter-control-classmap)# match authorization-status unauthorized

Device(config-filter-control-classmap)# exit
```

```
Device(config) # class-map type control subscriber match-all AAA-SVR-DOWN-AUTHD-HOST
Device(config-filter-control-classmap) # match result-type aaa-timeout
Device(config-filter-control-classmap) # match authorization-status authorized
Device(config-filter-control-classmap) # end
```

#### **Example: Activating a Critical Voice VLAN on a Service Template**

```
Device enable

Device configure terminal

Device (config) # policy-map type control subscriber cisco-subscriber

Device (config-event-control-policymap) # event authentication-failure match-first

Device (config-class-control-policymap) # 10 class AAA-SVR-DOWN-UNAUTHD-HOST do-until-failure

Device (config-action-control-policymap) # 10 activate service-template CRITICAL-DATA

Device (config-action-control-policymap) # 10 activate service-template CRITICAL-VOICE

Device (config-action-control-policymap) # 30 authorize

Device (config-action-control-policymap) # 40 pause reauthentication

Device (config-class-control-policymap) # exit

Device (config-action-control-policymap) # 20 class AAA-SVR-DOWN-AUTHD-HOST

Device (config-action-control-policymap) # 10 pause reauthentication

Device (config-action-control-policymap) # end
```

## **Feature Information for Critical Voice VLAN Support**

This table provides release and related information for the features explained in this module.

These features are available in all the releases subsequent to the one they were introduced in, unless noted otherwise.

Table 1: Feature Information for Critical Voice VLAN Support

Release	Feature Name	Feature Information
Cisco IOS XE Everest 16.5.1a	Critical Voice VLAN Support	This feature enables critical voice VLAN support, which puts phone traffic into the configured voice VLAN of a port if the authentication server becomes unreachable.
Cisco IOS XE Fuji 16.8.1a	Critical Voice VLAN Support	Support for this feature was introduced only on the C9500-32C, C9500-32QC, C9500-48Y4C, and C9500-24Y4C models of the Cisco Catalyst 9500 Series Switches.
Cisco IOS XE Cupertino 17.7.1	Critical Voice VLAN Support	Support for this feature was introduced on the C9500X-28C8D model of the Cisco Catalyst 9500 Series Switches.

Feature Information for Critical Voice VLAN Support