



Configuring WWN Pools

This chapter includes the following sections:

- [WWN Pools, page 1](#)
- [Creating a WWNN Pool, page 2](#)
- [Deleting a WWNN Pool, page 3](#)
- [Creating a WWPN Pool, page 3](#)
- [Deleting a WWPN Pool, page 4](#)

WWN Pools

A WWN pool is a collection of WWNs for use by the Fibre Channel vHBAs in a Cisco UCS instance. You create separate pools for the following:

- WW node names assigned to the server
- WW port names assigned to the vHBA



Important

A WWN pool can include only WWNNs or WWPNs in the ranges from 20:00:00:00:00:00:00 to 20:FF:FF:FF:FF:FF:FF or from 50:00:00:00:00:00:00 to 5F:FF:FF:FF:FF:FF:FF. All other WWN ranges are reserved.

If you use WWN pools in service profiles, you do not have to manually configure the WWNs that will be used by the server associated with the service profile. In a system that implements multi-tenancy, you can use a WWN pool to control the WWNs used by each organization.

You assign WWNs to pools in blocks. For each block or individual WWN, you can assign a boot target.

WWNN Pools

A WWNN pool is a WWN pool which contains only WW node names. If you include a pool of WWNNs in a service profile, the associated server is assigned a WWNN from that pool.

WWPN Pools

A WWPN pool is a WWN pool which contains only WW port names. If you include a pool of WWPNs in a service profile, the port on each vHBA of the associated server is assigned a WWPN from that pool.

Creating a WWNN Pool



Important

A WWN pool can include only WWNNs or WWPNs in the ranges from 20:00:00:00:00:00:00:00 to 20:FF:FF:FF:FF:FF:FF:FF or from 50:00:00:00:00:00:00:00 to 5F:FF:FF:FF:FF:FF:FF:FF. All other WWN ranges are reserved.

Procedure

- Step 1** In the **Navigation** pane, click the **SAN** tab.
- Step 2** In the **SAN** tab, expand **SAN ► Pools**.
- Step 3** Expand the node for the organization where you want to create the pool.
If the system does not include multi-tenancy, expand the **root** node.
- Step 4** Right-click **WWNN Pools** and select **Create WWNN Pool**.
- Step 5** In the **Define Name and Description** page of the **Create WWNN Pool** wizard:
 - a) Enter a unique name and description for the WWNN Pool.
This name can be between 1 and 16 alphanumeric characters. You cannot use spaces or any special characters, and you cannot change this name after the object has been saved.
 - b) Click **Next**.
- Step 6** In the **Add WWN Blocks** page of the **Create WWNN Pool** wizard:
 - a) Click **Add**.
 - b) In the **Create WWN Block** page, complete the following fields:
 - In the **From** field, enter the first WWNN in the pool.
 - In the **Size** field, enter the number of WWNNs to include in the pool.
 - c) Click **Finish Stage**.
 - d) Do one of the following:
 - Repeat steps a through c to add another block to the pool.
 - Click **Next** to move to the next page.
- Step 7** In the **Add Individual WWN** page of the **Create WWNN Pool** wizard:
 - a) Click **Add**.
 - b) In the **World Wide Name** field, enter the WWNN initiator.
 - c) In the **Name** field, enter a unique name for the WWNN initiator.
 - d) In the **Description** field, enter a description of the WWNN initiator.
 - e) Click **Add** to expand the **Boot Target** area.
 - f) In the **Boot Target WWNN** field, enter the WWNN associated with the initiator.

- g) In the **Boot Target LUN** field, enter the unique identifier for the LUN associated with the initiator.
- h) Click **OK**.

Step 8 Click **Finish**.

Deleting a WWNN Pool

Procedure

- Step 1** In the **Navigation** pane, click the **SAN** tab.
 - Step 2** In the **SAN** tab, expand **SAN ► Pools ► Organization_Name** .
 - Step 3** Expand the **WWNN Pools** node.
 - Step 4** Right-click the WWNN pool you want to delete and select **Delete**.
 - Step 5** If Cisco UCS Manager displays a confirmation dialog box, click **Yes**.
-

Creating a WWPN Pool



Important A WWN pool can include only WWNNs or WWPNs in the ranges from 20:00:00:00:00:00:00 to 20:FF:FF:FF:FF:FF:FF or from 50:00:00:00:00:00:00 to 5F:FF:FF:FF:FF:FF:FF. All other WWN ranges are reserved.

Procedure

- Step 1** In the **Navigation** pane, click the **SAN** tab.
- Step 2** In the **SAN** tab, expand **SAN ► Pools** .
- Step 3** Expand the node for the organization where you want to create the pool.
If the system does not include multi-tenancy, expand the **root** node.
- Step 4** Right-click **WWPN Pools** and select **Create WWPN Pool**.
- Step 5** In the **Define Name and Description** page of the **Create WWN Pool** wizard:
 - a) Enter a unique name and description for the WWPN Pool.
This name can be between 1 and 16 alphanumeric characters. You cannot use spaces or any special characters, and you cannot change this name after the object has been saved.
 - b) Click **Next**.
- Step 6** In the **Add WWN Blocks** page of the **Create WWPN Pool** wizard:
 - a) Click **Add**.
 - b) In the **Create WWN Block** page, complete the following fields:

- In the **From** field, enter the first WWPN in the pool.
 - In the **Size** field, enter the number of WWPNs to include in the pool.
- c) Click **Finish Stage**.
- d) Do one of the following:
- Repeat steps a through c to add another block to the pool.
 - Click **Next** to move to the next page.

Step 7 In the **Add Individual WWN** page of the **Create WWPN Pool** wizard:

- a) Click **Add**.
- b) In the **World Wide Name** field, enter the WWPN initiator.
- c) In the **Name** field, enter a unique name for the WWPN initiator.
- d) In the **Description** field, enter a description of the WWPN initiator.
- e) Click **Add** to expand the **Boot Target** area.
- f) In the **Boot Target WWPN** field, enter the WWPN associated with the initiator.
- g) In the **Boot Target LUN** field, enter the unique identifier for the LUN associated with the initiator.
- h) Click **OK**.

Step 8 Click **Finish**.

What to Do Next

Include the WWPN pool in a vHBA template.

Deleting a WWPN Pool

Procedure

- Step 1** In the **Navigation** pane, click the **SAN** tab.
 - Step 2** In the **SAN** tab, expand **SAN ► Pools ► Organization_Name** .
 - Step 3** Expand the **WWPN Pools** node.
 - Step 4** Right-click the WWPN pool you want to delete and select **Delete**.
 - Step 5** If Cisco UCS Manager displays a confirmation dialog box, click **Yes**.
-