



Cisco UCS Faults

This chapter provides information about the faults that may be raised in a Cisco UCS instance.

fltFabricComputeSlotEpMisplacedInChassisSlot

Fault Code: F0156

Message

Server, vendor([vendor]), model([model]), serial([serial]) in slot [chassisId]/[slotId] presence: [presence]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: server-moved
mibFaultCode: 156
mibFaultName: fltFabricComputeSlotEpMisplacedInChassisSlot
moClass: fabric:ComputeSlotEp
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]

fltFabricComputeSlotEpServerIdentificationProblem

Fault Code: F0157

Message

Problem identifying server in slot [chassisId]/[slotId]

Explanation**Recommended Action****Fault Details**

Severity: warning
Cause: server-identification-problem
mibFaultCode: 157
mibFaultName: fltFabricComputeSlotEpServerIdentificationProblem
moClass: fabric:ComputeSlotEp
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]

fltVnicEtherConfig-failed**Fault Code:** F0169**Message**

Eth vNIC [name], service profile [name] failed to apply configuration

Explanation**Recommended Action****Fault Details**

Severity: minor
Cause: configuration-failed
mibFaultCode: 169
mibFaultName: fltVnicEtherConfigFailed
moClass: vnic:Ether
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]

fltVnicFcConfig-failed**Fault Code:** F0170**Message**

FC vHBA [name], service profile [name] failed to apply configuration

Explanation**Recommended Action****Fault Details**

```

Severity: minor
Cause: configuration-failed
mibFaultCode: 170
mibFaultName: fltVnicFcConfigFailed
moClass: vnic:Fc
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/fc-[name]
Affected MO: org-[name]/san-conn-pol-[name]/fc-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/fc-[name]

```

fltProcessorUnitInoperable**Fault Code: F0174****Message**

Processor [id] on server [chassisId]/[slotId] operability: [operability]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: equipment-inoperable
mibFaultCode: 174
mibFaultName: fltProcessorUnitInoperable
moClass: processor:Unit
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]

```

fltProcessorUnitThermalNonCritical**Fault Code: F0175****Message**

Processor [id] on server [chassisId]/[slotId] temperature: [thermal]Processor [id] on server [id] temperature: [thermal]

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: thermal-problem
mibFaultCode: 175
mibFaultName: fltProcessorUnitThermalNonCritical
moClass: processor:Unit
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]

```

fltProcessorUnitThermalThresholdCritical**Fault Code: F0176****Message**

Processor [id] on server [chassisId]/[slotId] temperature: [thermal]Processor [id] on server [id] temperature: [thermal]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: thermal-problem
mibFaultCode: 176
mibFaultName: fltProcessorUnitThermalThresholdCritical
moClass: processor:Unit
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]

```

fltProcessorUnitThermalThresholdNonRecoverable**Fault Code: F0177****Message**

Processor [id] on server [chassisId]/[slotId] temperature: [thermal]Processor [id] on server [id] temperature: [thermal]

Explanation**Recommended Action****Fault Details**

```

Severity: minor
Cause: thermal-problem
mibFaultCode: 177
mibFaultName: fltProcessorUnitThermalThresholdNonRecoverable
moClass: processor:Unit
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]

```

fltProcessorUnitVoltageThresholdNonCritical**Fault Code: F0178****Message**

Processor [id] on server [chassisId]/[slotId] voltage: [voltage]Processor [id] on server [id] voltage: [voltage]

Explanation**Recommended Action****Fault Details**

```

Severity: minor
Cause: voltage-problem
mibFaultCode: 178
mibFaultName: fltProcessorUnitVoltageThresholdNonCritical
moClass: processor:Unit
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]

```

fltProcessorUnitVoltageThresholdCritical**Fault Code: F0179****Message**

Processor [id] on server [chassisId]/[slotId] voltage: [voltage]Processor [id] on server [id] voltage: [voltage]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: voltage-problem
mibFaultCode: 179
mibFaultName: fltProcessorUnitVoltageThresholdCritical
moClass: processor:Unit
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]

```

fltProcessorUnitVoltageThresholdNonRecoverable**Fault Code: F0180****Message**

Processor [id] on server [chassisId]/[slotId] voltage: [voltage]Processor [id] on server [id] voltage: [voltage]

Explanation**Recommended Action****Fault Details**

```

Severity: critical
Cause: voltage-problem
mibFaultCode: 180
mibFaultName: fltProcessorUnitVoltageThresholdNonRecoverable
moClass: processor:Unit
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]

```

fltStorageLocalDiskInoperable**Fault Code: F0181****Message**

Local disk [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: equipment-inoperable
mibFaultCode: 181
mibFaultName: fltStorageLocalDiskInoperable
moClass: storage:LocalDisk
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]

```

fltStorageItemCapacityExceeded**Fault Code: F0182****Message**

Disk usage for partition [name] on fabric interconnect [id] exceeded 70%

Explanation**Recommended Action****Fault Details**

```

Severity: minor
Cause: capacity-exceeded
mibFaultCode: 182
mibFaultName: fltStorageItemCapacityExceeded
moClass: storage:Item
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/stor-part-[name]

```

fltStorageItemCapacityWarning**Fault Code: F0183****Message**

Disk usage for partition [name] on fabric interconnect [id] exceeded 90%

Explanation**Recommended Action****Fault Details**

Severity: major
Cause: capacity-exceeded
mibFaultCode: 183
mibFaultName: fltStorageItemCapacityWarning
moClass: storage:Item
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/stor-part-[name]

fltMemoryUnitDegraded**Fault Code: F0184****Message**

DIMM [location] on server [chassisId]/[slotId] operability: [operability]DIMM [location] on server [id] operability: [operability]

Explanation**Recommended Action****Fault Details**

Severity: minor
Cause: equipment-degraded
mibFaultCode: 184
mibFaultName: fltMemoryUnitDegraded
moClass: memory:Unit
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]

fltMemoryUnitInoperable**Fault Code: F0185****Message**

DIMM [location] on server [chassisId]/[slotId] operability: [operability]DIMM [location] on server [id] operability: [operability]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: equipment-inoperable
mibFaultCode: 185
mibFaultName: fltMemoryUnitInoperable
moClass: memory:Unit
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]

```

fltMemoryUnitThermalThresholdNonCritical**Fault Code: F0186****Message**

DIMM [location] on server [chassisId]/[slotId] temperature: [thermal]DIMM [location] on server [id] temperature: [thermal]

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: thermal-problem
mibFaultCode: 186
mibFaultName: fltMemoryUnitThermalThresholdNonCritical
moClass: memory:Unit
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]

```

fltMemoryUnitThermalThresholdCritical**Fault Code: F0187****Message**

DIMM [location] on server [chassisId]/[slotId] temperature: [thermal]DIMM [location] on server [id] temperature: [thermal]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: thermal-problem
mibFaultCode: 187
mibFaultName: fltMemoryUnitThermalThresholdCritical
moClass: memory:Unit
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]

```

fltMemoryUnitThermalThresholdNonRecoverable**Fault Code: F0188****Message**

DIMM [location] on server [chassisId]/[slotId] temperature: [thermal]DIMM [location] on server [id] temperature: [thermal]

Explanation**Recommended Action****Fault Details**

```

Severity: critical
Cause: thermal-problem
mibFaultCode: 188
mibFaultName: fltMemoryUnitThermalThresholdNonRecoverable
moClass: memory:Unit
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]

```

fltMemoryArrayVoltageThresholdNonCritical**Fault Code: F0189****Message**

Memory array [id] on server [chassisId]/[slotId] voltage: [voltage]Memory array [id] on server [id] voltage: [voltage]

Explanation**Recommended Action****Fault Details**

```

Severity: minor
Cause: voltage-problem
mibFaultCode: 189
mibFaultName: fltMemoryArrayVoltageThresholdNonCritical
moClass: memory:Array
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]

```

fltMemoryArrayVoltageThresholdCritical**Fault Code: F0190****Message**

Memory array [id] on server [chassisId]/[slotId] voltage: [voltage]Memory array [id] on server [id]
voltage: [voltage]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: voltage-problem
mibFaultCode: 190
mibFaultName: fltMemoryArrayVoltageThresholdCritical
moClass: memory:Array
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]

```

fltMemoryArrayVoltageThresholdNonRecoverable**Fault Code: F0191****Message**

Memory array [id] on server [chassisId]/[slotId] voltage: [voltage]Memory array [id] on server [id]
voltage: [voltage]

Explanation**Recommended Action****Fault Details**

```

Severity: critical
Cause: voltage-problem
mibFaultCode: 191
mibFaultName: fltMemoryArrayVoltageThresholdNonRecoverable
moClass: memory:Array
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]

```

fltAdaptorUnitUnidentifiable-fru**Fault Code: F0200****Message**

Adapter [id] in server [id] has unidentified FRUAdapter [id] in server [chassisId]/[slotId] has unidentified FRU

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: unidentifiable-fru
mibFaultCode: 200
mibFaultName: fltAdaptorUnitUnidentifiableFru
moClass: adaptor:Unit
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]

```

fltAdaptorUnitMissing**Fault Code: F0203****Message**

Adapter [id] in server [id] presence: [presence]Adapter [id] in server [chassisId]/[slotId] presence: [presence]

Explanation**Recommended Action****Fault Details**

```

Severity: warning
Cause: equipment-missing
mibFaultCode: 203
mibFaultName: fltAdaptorUnitMissing
moClass: adaptor:Unit
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]

```

fltAdaptorUnitAdaptorReachability**Fault Code: F0206****Message**

Adapter [id]/[id] is unreachableAdapter [chassisId]/[slotId]/[id] is unreachable

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: connectivity-problem
mibFaultCode: 206
mibFaultName: fltAdaptorUnitAdaptorReachability
moClass: adaptor:Unit
Type: connectivity
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]

```

fltAdaptorHostIfLink-down**Fault Code: F0207****Message**

Adapter [transport] host interface [id]/[id]/[id] link state: [linkState]Adapter [transport] host interface [chassisId]/[slotId]/[id]/[id] link state: [linkState]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: link-down
mibFaultCode: 207
mibFaultName: fltAdaptorHostIfLinkDown
moClass: adaptor:HostIf
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]

```

fltAdaptorExtIfLink-down**Fault Code: F0209****Message**

Adapter uplink interface [id]/[id]/[id] link state: [linkState]. Please verify connectivity to Fabric Interconnect. Acknowledging FEX might be required. Adapter uplink interface [chassisId]/[slotId]/[id]/[id] link state: [linkState]. Please verify connectivity to Fabric Interconnect. Acknowledging chassis might be required.

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: link-down
mibFaultCode: 209
mibFaultName: fltAdaptorExtIfLinkDown
moClass: adaptor:ExtIf
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]

```

fltPortPloLink-down

Fault Code: F0276

Message

[transport] port [portId] on chassis [id] oper state: [operState], reason: [stateQual][transport] port [slotId]/[portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: link-down
mibFaultCode: 276
mibFaultName: fltPortPloLinkDown
moClass: port:PIo
Type: network
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fltPortPloFailed

Fault Code: F0277

Message

[transport] port [portId] on chassis [id] oper state: [operState], reason: [stateQual][transport] port [slotId]/[portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: port-failed
mibFaultCode: 277
mibFaultName: fltPortPloFailed
moClass: port:PIo
Type: network
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fltPortPloHardware-failure

Fault Code: F0278

Message

[transport] port [portId] on chassis [id] oper state: [operState], reason: hardware-failure[transport] port [slotId]/[portId] on fabric interconnect [id] oper state: [operState], reason: hardware-failure

Explanation

Recommended Action

Fault Details

Severity: major
Cause: port-failed
mibFaultCode: 278
mibFaultName: fltPortPloHardwareFailure
moClass: port:PIo
Type: network
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fltPortPloSfp-not-present

Fault Code: F0279

Message

[transport] port [portId] on chassis [id] oper state: [operState][transport] port [slotId]/[portId] on fabric interconnect [id] oper state: [operState]

Explanation

Recommended Action

Fault Details

Severity: info
Cause: port-failed
mibFaultCode: 279
mibFaultName: fltPortPloSfpNotPresent
moClass: port:PIo
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fltFabricExternalPcDown

Fault Code: F0282

Message

[type] port-channel [portId] on fabric interconnect [switchId] oper state: [operState], reason: [stateQual]
[type] port-channel [portId] on fabric interconnect [switchId] oper state: [operState], reason: [stateQual]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: operational-state-down
mibFaultCode: 282
mibFaultName: fltFabricExternalPcDown
moClass: fabric:ExternalPc
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]
Affected MO: fabric/eth-estc/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/fc-estc/[id]/net-[name]/fcoepc-switch-[switchId]-fcoepc-[portId]
Affected MO: fabric/fc-estc/[id]/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/fc-estc/net-[name]/fcoepc-switch-[switchId]-fcoepc-[portId]
Affected MO: fabric/fc-estc/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/lan/[id]/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/lan/[id]/net-group-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/lan/[id]/pc-[portId]
Affected MO: fabric/lan/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/lan/net-group-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]
Affected MO: fabric/san/[id]/net-[name]/fcoepc-switch-[switchId]-fcoepc-[portId]
Affected MO: fabric/san/[id]/net-[name]/pc-switch-[switchId]-pc-[portId]
Affected MO: fabric/san/[id]/pc-[portId]
Affected MO: fabric/san/net-[name]/fcoepc-switch-[switchId]-fcoepc-[portId]
Affected MO: fabric/san/net-[name]/pc-switch-[switchId]-pc-[portId]

fltDcxVcDown

Fault Code: F0283

Message

[transport] VIF [id] on server [chassisId] / [slotId] of switch [switchId] down, reason: [stateQual]
[transport] VIF [id] on server [id] of switch [switchId] down, reason: [stateQual]

Explanation**Recommended Action****Fault Details**

Severity: major
Cause: link-down
mibFaultCode: 283
mibFaultName: fltDcxVcDown
moClass: dcx:Vc
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]

Affected MO:
 sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/switch-[id]/ethlanflowmon/vc-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vc-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/vc-[id]

fltNetworkElementInoperable

Fault Code: F0291

Message

Fabric Interconnect [id] operability: [operability]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: equipment-inoperable
mibFaultCode: 291
mibFaultName: fltNetworkElementInoperable
moClass: network:Element
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]

fltMgmtEntityDegraded

Fault Code: F0293

Message

Fabric Interconnect [id], HA Cluster interconnect link failure

Explanation

Recommended Action

Fault Details

Severity: major
Cause: link-down
mibFaultCode: 293
mibFaultName: fltMgmtEntityDegraded
moClass: mgmt:Entity
Type: network

```

Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

```

fltMgmtEntityDown

Fault Code: F0294

Message

Fabric Interconnect [id], HA Cluster interconnect total link failure

Explanation

Recommended Action

Fault Details

```

Severity: critical
Cause: link-down
mibFaultCode: 294
mibFaultName: fltMgmtEntityDown
moClass: mgmt:Entity
Type: network
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

```

fltDcxNsFailed

Fault Code: F0304

Message

Server [chassisId]/[slotId] (service profile: [assignedToDn]) virtual network interface allocation failed. Server [id] (service profile: [assignedToDn]) virtual network interface allocation failed.

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: insufficient-resources
mibFaultCode: 304
mibFaultName: fltDcxNsFailed
moClass: dcx:Ns
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/dcxns-[switchId]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/dcxns-[switchId]

```

fltComputePhysicalInsufficientlyEquipped

Fault Code: F0305

Message

Server [id] (service profile: [assignedToDn]) has insufficient number of DIMMs, CPUs and/or adapters
Server [chassisId]/[slotId] (service profile: [assignedToDn]) has insufficient number of DIMMs, CPUs and/or adapters

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: insufficiently-equipped
mibFaultCode: 305
mibFaultName: fltComputePhysicalInsufficientlyEquipped
moClass: compute:Physical
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalIdentityUnestablishable

Fault Code: F0306

Message

Server [id] (service profile: [assignedToDn]) has an invalid FRUServer [chassisId]/[slotId] (service profile: [assignedToDn]) has an invalid FRU

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: identity-unestablishable
mibFaultCode: 306
mibFaultName: fltComputePhysicalIdentityUnestablishable
moClass: compute:Physical
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltComputeBoardPowerError

Fault Code: F0310

Message

Motherboard of server [chassisId]/[slotId] (service profile: [assignedToDn]) power: [operPower]
Motherboard of server [id] (service profile: [assignedToDn]) power: [operPower]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: power-problem
mibFaultCode: 310
mibFaultName: fltComputeBoardPowerError
moClass: compute:Board
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/rack-unit-[id]/board

fltComputePhysicalPowerProblem

Fault Code: F0311

Message

Server [id] (service profile: [assignedToDn]) oper state: [operState] Server [chassisId]/[slotId] (service profile: [assignedToDn]) oper state: [operState]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: power-problem
mibFaultCode: 311
mibFaultName: fltComputePhysicalPowerProblem
moClass: compute:Physical
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]

fltComputePhysicalThermalProblem

Fault Code: F0312

Message

Server [id] (service profile: [assignedToDn]) oper state: [operState]Server [chassisId]/[slotId] (service profile: [assignedToDn]) oper state: [operState]

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: thermal-problem
mibFaultCode: 312
mibFaultName: fltComputePhysicalThermalProblem
moClass: compute:Physical
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalBiosPostTimeout

Fault Code: F0313

Message

Server [id] (service profile: [assignedToDn]) BIOS failed power-on self testServer [chassisId]/[slotId] (service profile: [assignedToDn]) BIOS failed power-on self test

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: equipment-inoperable
mibFaultCode: 313
mibFaultName: fltComputePhysicalBiosPostTimeout
moClass: compute:Physical
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalDiscoveryFailed

Fault Code: F0314

Message

Server [id] (service profile: [assignedToDn]) discovery: [discovery]Server [chassisId]/[slotId] (service profile: [assignedToDn]) discovery: [discovery]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: discovery-failed
mibFaultCode: 314
mibFaultName: fltComputePhysicalDiscoveryFailed
moClass: compute:Physical
Type: operational
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]

fltComputePhysicalAssociationFailed

Fault Code: F0315

Message

Service profile [assignedToDn] failed to associate with server [id]Service profile [assignedToDn] failed to associate with server [chassisId]/[slotId]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: association-failed
mibFaultCode: 315
mibFaultName: fltComputePhysicalAssociationFailed
moClass: compute:Physical
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]

fltComputePhysicalInoperable

Fault Code: F0317

Message

Server [id] (service profile: [assignedToDn]) health: [operability]Server [chassisId]/[slotId] (service profile: [assignedToDn]) health: [operability]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: equipment-inoperable
mibFaultCode: 317
mibFaultName: fltComputePhysicalInoperable
moClass: compute:Physical
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalUnassignedMissing

Fault Code: F0318

Message

Server [id] (no profile) missingServer [chassisId]/[slotId] (no profile) missing

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: equipment-missing
mibFaultCode: 318
mibFaultName: fltComputePhysicalUnassignedMissing
moClass: compute:Physical
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalAssignedMissing

Fault Code: F0319

Message

Server [id] (service profile: [assignedToDn]) missingServer [chassisId]/[slotId] (service profile: [assignedToDn]) missing

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: equipment-missing
mibFaultCode: 319
mibFaultName: fltComputePhysicalAssignedMissing
moClass: compute:Physical
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalUnidentified

Fault Code: F0320

Message

Server [id] (service profile: [assignedToDn]) has an invalid FRU: [presence]Server [chassisId]/[slotId] (service profile: [assignedToDn]) has an invalid FRU: [presence]

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: identity-unestablishable
mibFaultCode: 320
mibFaultName: fltComputePhysicalUnidentified
moClass: compute:Physical
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalUnassignedInaccessible

Fault Code: F0321

Message

Server [id] (no profile) inaccessibleServer [chassisId]/[slotId] (no profile) inaccessible

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: equipment-inaccessible
mibFaultCode: 321
mibFaultName: fltComputePhysicalUnassignedInaccessible
moClass: compute:Physical
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltComputePhysicalAssignedInaccessible

Fault Code: F0322

Message

Server [id] (service profile: [assignedToDn]) inaccessibleServer [chassisId]/[slotId] (service profile: [assignedToDn]) inaccessible

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: equipment-inaccessible
mibFaultCode: 322
mibFaultName: fltComputePhysicalAssignedInaccessible
moClass: compute:Physical
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]
```

fltLsServerFailed

Fault Code: F0324

Message

Service profile [name] failed

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: server-failed
mibFaultCode: 324
mibFaultName: fltLsServerFailed
moClass: ls:Server
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerDiscoveryFailed

Fault Code: F0326

Message

Service profile [name] discovery failed

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: discovery-failed
mibFaultCode: 326
mibFaultName: fltLsServerDiscoveryFailed
moClass: ls:Server
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerConfigFailure

Fault Code: F0327

Message

Service profile [name] configuration failed due to [serverConfigIssues],[networkConfigIssues],[storageConfigIssues],[vnicConfigIssues],[iscsiConfigIssues]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: configuration-failure
mibFaultCode: 327
mibFaultName: fltLsServerConfigFailure
moClass: ls:Server
Type: server
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]

fltLsServerMaintenanceFailed

Fault Code: F0329

Message

Service profile [name] maintenance failed

Explanation

Recommended Action

Fault Details

Severity: major
Cause: maintenance-failed
mibFaultCode: 329
mibFaultName: fltLsServerMaintenanceFailed
moClass: ls:Server
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]

fltLsServerRemoved

Fault Code: F0330

Message

Service profile [name] underlying resource removed

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: equipment-removed
mibFaultCode: 330
mibFaultName: fltLsServerRemoved
moClass: ls:Server
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerInaccessible

Fault Code: F0331

Message

Service profile [name] cannot be accessed

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: server-inaccessible
mibFaultCode: 331
mibFaultName: fltLsServerInaccessible
moClass: ls:Server
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerAssociationFailed

Fault Code: F0332

Message

Service profile [name] association failed for [pnDn]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: association-failed
mibFaultCode: 332
mibFaultName: fltLsServerAssociationFailed
moClass: ls:Server
Type: server
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerUnassociated

Fault Code: F0334

Message

Service profile [name] is not associated

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: unassociated
mibFaultCode: 334
mibFaultName: fltLsServerUnassociated
moClass: ls:Server
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]
```

fltLsServerServer-unfulfilled

Fault Code: F0337

Message

Server [pnDn] does not fulfill Service profile [name] due to [configQualifier]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: server-failed
mibFaultCode: 337
mibFaultName: fltLsServerServerUnfulfilled
moClass: ls:Server
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]

fltEtherSwitchIntFloSatellite-connection-absent

Fault Code: F0367

Message

No link between IOM port [chassisId]/[slotId]/[portId] and fabric interconnect [switchId]:[peerSlotId]/[peerPortId]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: satellite-connection-absent
mibFaultCode: 367
mibFaultName: fltEtherSwitchIntFioSatelliteConnectionAbsent
moClass: ether:SwitchIntFio
Type: connectivity
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fltEtherSwitchIntFloSatellite-wiring-problem

Fault Code: F0368

Message

Invalid connection between IOM port [chassisId]/[slotId]/[portId] and fabric interconnect [switchId]:[peerSlotId]/[peerPortId]

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: satellite-mis-connected
mibFaultCode: 368
mibFaultName: fltEtherSwitchIntFloSatelliteWiringProblem
moClass: ether:SwitchIntFio
Type: connectivity
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```

fltEquipmentPsuPowerSupplyProblem

Fault Code: F0369

Message

Power supply [id] in chassis [id] power: [power]Power supply [id] in fabric interconnect [id] power: [power]Power supply [id] in fex [id] power: [power]Power supply [id] in server [id] power: [power]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: power-problem
mibFaultCode: 369
mibFaultName: fltEquipmentPsuPowerSupplyProblem
moClass: equipment:Psu
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentFanDegraded

Fault Code: F0371

Message

Fan [id] in Fan Module [tray]-[id] under chassis [id] operability: [operability]Fan [id] in fabric interconnect [id] operability: [operability]Fan [id] in fex [id] operability: [operability]Fan [id] in Fan Module [tray]-[id] under server [id] operability: [operability]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: equipment-degraded
mibFaultCode: 371
mibFaultName: fltEquipmentFanDegraded
moClass: equipment:Fan
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]

fltEquipmentFanInoperable

Fault Code: F0373

Message

Fan [id] in Fan Module [tray]-[id] under chassis [id] operability: [operability]Fan [id] in fabric interconnect [id] operability: [operability]Fan [id] in fex [id] operability: [operability]Fan [id] in Fan Module [tray]-[id] under server [id] operability: [operability]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-inoperable
mibFaultCode: 373
mibFaultName: fltEquipmentFanInoperable
moClass: equipment:Fan
Type: equipment
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]

Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]

fltEquipmentPsuInoperable

Fault Code: F0374

Message

Power supply [id] in chassis [id] operability: [operability]Power supply [id] in fabric interconnect [id] operability: [operability]Power supply [id] in fex [id] operability: [operability]Power supply [id] in server [id] operability: [operability]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-inoperable
mibFaultCode: 374
mibFaultName: fltEquipmentPsuInoperable
moClass: equipment:Psu
Type: equipment
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

fltEquipmentIOCardRemoved

Fault Code: F0376

Message

[side] IOM [chassisId]/[id] ([switchId]) is removed

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: equipment-removed
mibFaultCode: 376
mibFaultName: fltEquipmentIOCardRemoved
moClass: equipment:IOCard
Type: equipment
Callhome: none
Callhome Enabled: no

```

Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

```

fltEquipmentFanModuleMissing

Fault Code: F0377

Message

Fan module [tray]-[id] in chassis [id] presence: [presence]Fan module [tray]-[id] in server [id] presence: [presence]Fan module [tray]-[id] in fabric interconnect [id] presence: [presence]

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: equipment-missing
mibFaultCode: 377
mibFaultName: fltEquipmentFanModuleMissing
moClass: equipment:FanModule
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]

```

fltEquipmentPsuMissing

Fault Code: F0378

Message

Power supply [id] in chassis [id] presence: [presence]Power supply [id] in fabric interconnect [id] presence: [presence]Power supply [id] in fex [id] presence: [presence]Power supply [id] in server [id] presence: [presence]

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: equipment-missing
mibFaultCode: 378
mibFaultName: fltEquipmentPsuMissing
moClass: equipment:Psu
Type: equipment
Callhome: none
Callhome Enabled: no

```

```

Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

```

fltEquipmentIOCardThermalProblem

Fault Code: F0379

Message

[side] IOM [chassisId]/[id] ([switchId]) operState: [operState]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: thermal-problem
mibFaultCode: 379
mibFaultName: fltEquipmentIOCardThermalProblem
moClass: equipment:IOCard
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

```

fltEquipmentFanModuleThermalThresholdNonCritical

Fault Code: F0380

Message

Fan module [tray]-[id] in chassis [id] temperature: [thermal]Fan module [tray]-[id] in server [id] temperature: [thermal]Fan module [tray]-[id] in fabric interconnect [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: minor
Cause: thermal-problem
mibFaultCode: 380
mibFaultName: fltEquipmentFanModuleThermalThresholdNonCritical
moClass: equipment:FanModule
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]

fltEquipmentPsuThermalThresholdNonCritical

Fault Code: F0381

Message

Power supply [id] in chassis [id] temperature: [thermal]Power supply [id] in fabric interconnect [id] temperature: [thermal]Power supply [id] in server [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: thermal-problem
mibFaultCode: 381
mibFaultName: fltEquipmentPsuThermalThresholdNonCritical
moClass: equipment:Psu
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

fltEquipmentFanModuleThermalThresholdCritical

Fault Code: F0382

Message

Fan module [tray]-[id] in chassis [id] temperature: [thermal]Fan module [tray]-[id] in server [id] temperature: [thermal]Fan module [tray]-[id] in fabric interconnect [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: thermal-problem
mibFaultCode: 382
mibFaultName: fltEquipmentFanModuleThermalThresholdCritical
moClass: equipment:FanModule
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]

```

fltEquipmentPsuThermalThresholdCritical

Fault Code: F0383

Message

Power supply [id] in chassis [id] temperature: [thermal]Power supply [id] in fabric interconnect [id] temperature: [thermal]Power supply [id] in server [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: thermal-problem
mibFaultCode: 383
mibFaultName: fltEquipmentPsuThermalThresholdCritical
moClass: equipment:Psu
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

```

fltEquipmentFanModuleThermalThresholdNonRecoverable

Fault Code: F0384

Message

Fan module [tray]-[id] in chassis [id] temperature: [thermal]Fan module [tray]-[id] in server [id] temperature: [thermal]Fan module [tray]-[id] in fabric interconnect [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: critical
Cause: thermal-problem
mibFaultCode: 384
mibFaultName: fltEquipmentFanModuleThermalThresholdNonRecoverable
moClass: equipment:FanModule
Type: environmental
Callhome: environmental
Callhome Enabled: no

```

```

Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]

```

fltEquipmentPsuThermalThresholdNonRecoverable

Fault Code: F0385

Message

Power supply [id] in chassis [id] temperature: [thermal]Power supply [id] in fabric interconnect [id] temperature: [thermal]Power supply [id] in server [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: critical
Cause: thermal-problem
mibFaultCode: 385
mibFaultName: fltEquipmentPsuThermalThresholdNonRecoverable
moClass: equipment:Psu
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

```

fltEquipmentPsuVoltageThresholdNonCritical

Fault Code: F0387

Message

Power supply [id] in chassis [id] voltage: [voltage]Power supply [id] in fabric interconnect [id] voltage: [voltage]Power supply [id] in fex [id] voltage: [voltage]Power supply [id] in server [id] voltage: [voltage]

Explanation

Recommended Action

Fault Details

```

Severity: minor
Cause: voltage-problem
mibFaultCode: 387
mibFaultName: fltEquipmentPsuVoltageThresholdNonCritical
moClass: equipment:Psu
Type: environmental

```



```

Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

```

fltEquipmentPsuVoltageThresholdCritical

Fault Code: F0389

Message

Power supply [id] in chassis [id] voltage: [voltage]Power supply [id] in fabric interconnect [id] voltage: [voltage]Power supply [id] in fex [id] voltage: [voltage]Power supply [id] in server [id] voltage: [voltage]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: voltage-problem
mibFaultCode: 389
mibFaultName: fltEquipmentPsuVoltageThresholdCritical
moClass: equipment:Psu
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

```

fltEquipmentPsuVoltageThresholdNonRecoverable

Fault Code: F0391

Message

Power supply [id] in chassis [id] voltage: [voltage]Power supply [id] in fabric interconnect [id] voltage: [voltage]Power supply [id] in fex [id] voltage: [voltage]Power supply [id] in server [id] voltage: [voltage]

Explanation

Recommended Action

Fault Details

```

Severity: critical
Cause: voltage-problem

```

```

mibFaultCode: 391
mibFaultName: fltEquipmentPsuVoltageThresholdNonRecoverable
moClass: equipment:Psu
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

```

fltEquipmentPsuPerfThresholdNonCritical

Fault Code: F0392

Message

Power supply [id] in chassis [id] output power: [perf]Power supply [id] in fabric interconnect [id] output power: [perf]Power supply [id] in server [id] output power: [perf]

Explanation

Recommended Action

Fault Details

```

Severity: minor
Cause: performance-problem
mibFaultCode: 392
mibFaultName: fltEquipmentPsuPerfThresholdNonCritical
moClass: equipment:Psu
Type: equipment
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

```

fltEquipmentPsuPerfThresholdCritical

Fault Code: F0393

Message

Power supply [id] in chassis [id] output power: [perf]Power supply [id] in fabric interconnect [id] output power: [perf]Power supply [id] in server [id] output power: [perf]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: performance-problem
mibFaultCode: 393
mibFaultName: fltEquipmentPsuPerfThresholdCritical
moClass: equipment:Psu
Type: equipment
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

```

fltEquipmentPsuPerfThresholdNonRecoverable**Fault Code:** F0394**Message**

Power supply [id] in chassis [id] output power: [perf]Power supply [id] in fabric interconnect [id] output power: [perf]Power supply [id] in server [id] output power: [perf]

Explanation**Recommended Action****Fault Details**

```

Severity: critical
Cause: performance-problem
mibFaultCode: 394
mibFaultName: fltEquipmentPsuPerfThresholdNonRecoverable
moClass: equipment:Psu
Type: equipment
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

```

fltEquipmentFanPerfThresholdNonCritical**Fault Code:** F0395**Message**

Fan [id] in Fan Module [tray]-[id] under chassis [id] speed: [perf]Fan [id] in fabric interconnect [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under server [id] speed: [perf]

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: performance-problem
mibFaultCode: 395
mibFaultName: fltEquipmentFanPerfThresholdNonCritical
moClass: equipment:Fan
Type: equipment
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]

fltEquipmentFanPerfThresholdCritical**Fault Code: F0396****Message**

Fan [id] in Fan Module [tray]-[id] under chassis [id] speed: [perf]Fan [id] in fabric interconnect [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under server [id] speed: [perf]

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: performance-problem
mibFaultCode: 396
mibFaultName: fltEquipmentFanPerfThresholdCritical
moClass: equipment:Fan
Type: equipment
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]

fltEquipmentFanPerfThresholdNonRecoverable

Fault Code: F0397

Message

Fan [id] in Fan Module [tray]-[id] under chassis [id] speed: [perf]Fan [id] in fabric interconnect [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under server [id] speed: [perf]

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: performance-problem
mibFaultCode: 397
mibFaultName: fltEquipmentFanPerfThresholdNonRecoverable
moClass: equipment:Fan
Type: equipment
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]
```

fltEquipmentIOCardFirmwareUpgrade

Fault Code: F0398

Message

Chassis controller in IOM [chassisId]/[id] ([switchId]) firmware upgrade problem: [upgradeStatus]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: firmware-upgrade-problem
mibFaultCode: 398
mibFaultName: fltEquipmentIOCardFirmwareUpgrade
moClass: equipment:IOCard
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentChassisUnsupportedConnectivity

Fault Code: F0399

Message

Current connectivity for chassis [id] does not match discovery policy: [configState]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: unsupported-connectivity-configuration
mibFaultCode: 399
mibFaultName: fltEquipmentChassisUnsupportedConnectivity
moClass: equipment:Chassis
Type: connectivity
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]

fltEquipmentChassisUnacknowledged

Fault Code: F0400

Message

Chassis [id] connectivity configuration: [configState]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: equipment-unacknowledged
mibFaultCode: 400
mibFaultName: fltEquipmentChassisUnacknowledged
moClass: equipment:Chassis
Type: connectivity
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]

fltEquipmentIOCardUnsupportedConnectivity

Fault Code: F0401

Message

IOM [chassisId]/[id] ([switchId]) current connectivity does not match discovery policy or connectivity is unsupported: [configState]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: unsupported-connectivity-configuration
mibFaultCode: 401
mibFaultName: fltEquipmentIOCardUnsupportedConnectivity
moClass: equipment:IOCard
Type: connectivity
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentIOCardUnacknowledged

Fault Code: F0402

Message

IOM [chassisId]/[id] ([switchId]) connectivity configuration: [configState]

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: equipment-unacknowledged
mibFaultCode: 402
mibFaultName: fltEquipmentIOCardUnacknowledged
moClass: equipment:IOCard
Type: connectivity
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentIOCardPeerDisconnected

Fault Code: F0403

Message

IOM [chassisId]/[id] ([switchId]) peer connectivity: [peerCommStatus]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: equipment-disconnected
mibFaultCode: 403
mibFaultName: fltEquipmentIOCardPeerDisconnected
moClass: equipment:IOCard
Type: connectivity
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

fltEquipmentChassisIdentity

Fault Code: F0404

Message

Chassis [id] has a mismatch between FRU identity reported by Fabric/IOM vs. FRU identity reported by CMC

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: fru-problem
mibFaultCode: 404
mibFaultName: fltEquipmentChassisIdentity
moClass: equipment:Chassis
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]

fltEquipmentIOCardIdentity

Fault Code: F0405

Message

[side] IOM [chassisId]/[id] ([switchId]) has a malformed FRU

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: 405
mibFaultName: fltEquipmentIOCardIdentity
moClass: equipment:IOCard
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]
```

fltEquipmentFanModuleIdentity

Fault Code: F0406

Message

Fan Module [tray]-[id] in chassis [id] has a malformed FRUFan Module [tray]-[id] in server [id] has a malformed FRUFan Module [tray]-[id] in fabric interconnect [id] has a malformed FRU

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: fru-problem
mibFaultCode: 406
mibFaultName: fltEquipmentFanModuleIdentity
moClass: equipment:FanModule
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]
```

fltEquipmentPsuIdentity

Fault Code: F0407

Message

Power supply [id] on chassis [id] has a malformed FRUPower supply [id] on server [id] has a malformed FRU

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: fru-problem
mibFaultCode: 407
mibFaultName: fltEquipmentPsuIdentity
moClass: equipment:Psu
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

fltEquipmentChassisPowerProblem

Fault Code: F0408

Message

Power state on chassis [id] is [power]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: power-problem
mibFaultCode: 408
mibFaultName: fltEquipmentChassisPowerProblem
moClass: equipment:Chassis
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]

fltEquipmentChassisThermalThresholdCritical

Fault Code: F0409

Message

Thermal condition on chassis [id]. [thermalStateQualifier]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: thermal-problem
mibFaultCode: 409
mibFaultName: fltEquipmentChassisThermalThresholdCritical
moClass: equipment:Chassis
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]

fltEquipmentChassisThermalThresholdNonCritical

Fault Code: F0410

Message

Thermal condition on chassis [id]. [thermalStateQualifier]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: thermal-problem
mibFaultCode: 410
mibFaultName: fltEquipmentChassisThermalThresholdNonCritical
moClass: equipment:Chassis
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]

fltEquipmentChassisThermalThresholdNonRecoverable

Fault Code: F0411

Message

Thermal condition on chassis [id]. [thermalStateQualifier]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: thermal-problem
mibFaultCode: 411
mibFaultName: fltEquipmentChassisThermalThresholdNonRecoverable
moClass: equipment:Chassis
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]

fltComputeBoardCmosVoltageThresholdCritical

Fault Code: F0424

Message

Possible loss of CMOS settings: CMOS battery voltage on server [chassisId]/[slotId] is [cmosVoltage]Possible loss of CMOS settings: CMOS battery voltage on server [id] is [cmosVoltage]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: voltage-problem
mibFaultCode: 424
mibFaultName: fltComputeBoardCmosVoltageThresholdCritical
moClass: compute:Board
Type: environmental
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/rack-unit-[id]/board

fltComputeBoardCmosVoltageThresholdNonRecoverable

Fault Code: F0425

Message

Possible loss of CMOS settings: CMOS battery voltage on server [chassisId]/[slotId] is [cmosVoltage]
Possible loss of CMOS settings: CMOS battery voltage on server [id] is [cmosVoltage]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: 425
mibFaultName: fltComputeBoardCmosVoltageThresholdNonRecoverable
moClass: compute:Board
Type: environmental
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/rack-unit-[id]/board
```

fltMgmtEntityElection-failure

Fault Code: F0428

Message

Fabric Interconnect [id], election of primary management instance has failed

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: election-failure
mibFaultCode: 428
mibFaultName: fltMgmtEntityElectionFailure
moClass: mgmt:Entity
Type: management
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]
```

fltMgmtEntityHa-not-ready

Fault Code: F0429

Message

Fabric Interconnect [id], HA functionality not ready

Explanation

Recommended Action

Fault Details

Severity: major
Cause: ha-not-ready
mibFaultCode: 429
mibFaultName: fltMgmtEntityHaNotReady
moClass: mgmt:Entity
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

fltMgmtEntityVersion-incompatible

Fault Code: F0430

Message

Fabric Interconnect [id], management services, incompatible versions

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: version-incompatible
mibFaultCode: 430
mibFaultName: fltMgmtEntityVersionIncompatible
moClass: mgmt:Entity
Type: management
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

fltEquipmentFanMissing

Fault Code: F0434

Message

Fan [id] in fabric interconnect [id] presence: [presence]Fan [id] in fex [id] presence: [presence]Fan [id] in Fan Module [tray]-[id] under server [id] presence: [presence]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: equipment-missing
mibFaultCode: 434
mibFaultName: fltEquipmentFanMissing
moClass: equipment:Fan
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]

fltEquipmentIOCardAutoUpgradingFirmware

Fault Code: F0435

Message

IOM [chassisId]/[id] ([switchId]) is auto upgrading firmware

Explanation

Recommended Action

Fault Details

Severity: major
Cause: auto-firmware-upgrade
mibFaultCode: 435
mibFaultName: fltEquipmentIOCardAutoUpgradingFirmware
moClass: equipment:IOCard
Type: connectivity
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

fltFirmwarePackItemImageMissing

Fault Code: F0436

Message

[type] image with vendor [hwVendor], model [hwModel] and version [version] is deleted

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: image-deleted
mibFaultCode: 436
mibFaultName: fltFirmwarePackItemImageMissing
moClass: firmware:PackItem
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/fw-catalog-pack-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO: org-[name]/fw-host-pack-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO: org-[name]/fw-infra-pack-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO: org-[name]/fw-mgmt-pack-[name]/pack-image-[hwVendor]|[hwModel]|[type]
Affected MO: org-[name]/pack-image-[hwVendor]|[hwModel]|[type]
```

fltEtherSwitchIntFloSatellite-wiring-numbers-unexpected

Fault Code: F0440

Message

Chassis discovery policy conflict: Link IOM [chassisId]/[slotId]/[portId] to fabric interconnect [switchId]:[peerSlotId]/[peerPortId] not configured

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: unexpected-number-of-links
mibFaultCode: 440
mibFaultName: fltEtherSwitchIntFioSatelliteWiringNumbersUnexpected
moClass: ether:SwitchIntFio
Type: connectivity
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]
```


fltMgmtEntityManagement-services-failure

Fault Code: F0451

Message

Fabric Interconnect [id], management services have failed

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: management-services-failure
mibFaultCode: 451
mibFaultName: fltMgmtEntityManagementServicesFailure
moClass: mgmt:Entity
Type: management
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

fltMgmtEntityManagement-services-unresponsive

Fault Code: F0452

Message

Fabric Interconnect [id], management services are unresponsive

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: management-services-unresponsive
mibFaultCode: 452
mibFaultName: fltMgmtEntityManagementServicesUnresponsive
moClass: mgmt:Entity
Type: management
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

fltEquipmentChassisInoperable

Fault Code: F0456

Message

Chassis [id] operability: [operability]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: equipment-inoperable
mibFaultCode: 456
mibFaultName: fltEquipmentChassisInoperable
moClass: equipment:Chassis
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]

fltEtherServerIntFioHardware-failure

Fault Code: F0458

Message

IOM [transport] interface [portId] on chassis [id] oper state: [operState], reason: [stateQual]Fabric Interconnect [transport] interface [portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual]IOM [transport] interface [portId] on fex [id] oper state: [operState], reason: [stateQual]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: interface-failed
mibFaultCode: 458
mibFaultName: fltEtherServerIntFioHardwareFailure
moClass: ether:ServerIntFio
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/rack-unit-[id]/diag/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fltDcxVcMgmt-vif-down

Fault Code: F0459

Message

IOM [chassisId] / [slotId] ([switchId]) management VIF [id] down, reason [stateQual]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: cmc-vif-down
mibFaultCode: 459
mibFaultName: fltDcxVcMgmtVifDown
moClass: dcx:Vc
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]

Affected MO:
 sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
 sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO:
 sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]
Affected MO:
 sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/fabric-[switchId]/vc-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/switch-[id]/ethlanflowmon/vc-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vc-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/vc-[id]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/vc-[id]

fltSysdebugMEpLogMEpLogLog

Fault Code: F0460

Message

Log capacity on [side] IOM [chassisId]/[id] is [capacity]Log capacity on Management Controller on server [chassisId]/[slotId] is [capacity]Log capacity on Management Controller on server [id] is [capacity]

Explanation

Recommended Action

Fault Details

Severity: info
Cause: log-capacity
mibFaultCode: 460
mibFaultName: fltSysdebugMEpLogMEpLogLog
moClass: sysdebug:MEpLog
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/log-[type]-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/log-[type]-[id]

Affected MO: sys/rack-unit-[id]/mgmt/log-[type]-[id]
Affected MO: sys/switch-[id]/mgmt/log-[type]-[id]

fltSysdebugMEpLogMEpLogVeryLow

Fault Code: F0461

Message

Log capacity on [side] IOM [chassisId]/[id] is [capacity]Log capacity on Management Controller on server [chassisId]/[slotId] is [capacity]Log capacity on Management Controller on server [id] is [capacity]

Explanation

Recommended Action

Fault Details

Severity: info
Cause: log-capacity
mibFaultCode: 461
mibFaultName: fltSysdebugMEpLogMEpLogVeryLow
moClass: sysdebug:MEpLog
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/mgmt/log-[type]-[id]
Affected MO: sys/switch-[id]/mgmt/log-[type]-[id]

fltSysdebugMEpLogMEpLogFull

Fault Code: F0462

Message

Log capacity on [side] IOM [chassisId]/[id] is [capacity]Log capacity on Management Controller on server [chassisId]/[slotId] is [capacity]Log capacity on Management Controller on server [id] is [capacity]

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: log-capacity
mibFaultCode: 462
mibFaultName: fltSysdebugMEpLogMEpLogFull
moClass: sysdebug:MEpLog
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/log-[type]-[id]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/mgmt/log-[type]-[id]
Affected MO: sys/switch-[id]/mgmt/log-[type]-[id]

```

fltComputePoolEmpty**Fault Code: F0463****Message**

server pool [name] is empty

Explanation**Recommended Action****Fault Details**

```

Severity: minor
Cause: empty-pool
mibFaultCode: 463
mibFaultName: fltComputePoolEmpty
moClass: compute:Pool
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/compute-pool-[name]

```

fltUuidpoolPoolEmpty

Fault Code: F0464

Message

UUID suffix pool [name] is empty

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: empty-pool
mibFaultCode: 464
mibFaultName: fltUuidpoolPoolEmpty
moClass: uuidpool:Pool
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/uuid-pool-[name]
```

fltIppoolPoolEmpty

Fault Code: F0465

Message

IP pool [name] is empty

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: empty-pool
mibFaultCode: 465
mibFaultName: fltIppoolPoolEmpty
moClass: ippool:Pool
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/network-sets/ip-pool-[name]
Affected MO: org-[name]/ip-pool-[name]
```

fltMacpoolPoolEmpty

Fault Code: F0466

Message

MAC pool [name] is empty

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: empty-pool
mibFaultCode: 466
mibFaultName: fltMacpoolPoolEmpty
moClass: macpool:Pool
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/mac-pool-[name]

fltFirmwareUpdatableImageUnusable

Fault Code: F0470

Message

backup image is unusable. reason: [operStateQual]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: image-unusable
mibFaultCode: 470
mibFaultName: fltFirmwareUpdatableImageUnusable
moClass: firmware:Updatable
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/bios/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fw-updatable
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fw-updatable
Affected MO: sys/fex-[id]/mgmt/fw-updatable

Affected MO: sys/fex-[id]/slot-[id]/mgmt/fw-updatable
Affected MO: sys/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/bios/fw-updatable
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios/fw-updatable
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fw-updatable
Affected MO: sys/rack-unit-[id]/mgmt/fw-updatable
Affected MO: sys/switch-[id]/mgmt/fw-updatable

fltFirmwareBootUnitCantBoot

Fault Code: F0471

Message

unable to boot the startup image. End point booted with backup image

Explanation

Recommended Action

Fault Details

Severity: major
Cause: image-cannot-boot
mibFaultCode: 471
mibFaultName: fltFirmwareBootUnitCantBoot
moClass: firmware:BootUnit
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: capabilities/ep/mgmt-ext/fw-boot-def/bootunit-[type]
Affected MO: capabilities/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fw-boot-def/bootunit-[type]

Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/mgmt/fw-boot-def/bootunit-[type]

fltFcpoolInitiatorsEmpty

Fault Code: F0476

Message

FC pool [purpose] [name] is empty

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: empty-pool
mibFaultCode: 476
mibFaultName: fltFcpoolInitiatorsEmpty
moClass: fcpool:Initiators
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/wwn-pool-[name]

fltEquipmentIOCardInaccessible

Fault Code: F0478

Message

[side] IOM [chassisId]/[id] ([switchId]) is inaccessible

Explanation**Recommended Action****Fault Details**

Severity: critical
Cause: equipment-inaccessible
mibFaultCode: 478
mibFaultName: fltEquipmentIOCardInaccessible
moClass: equipment:IOCard
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

fltDcxVifLinkState**Fault Code: F0479****Message**

Virtual interface [id] link state is down

Explanation**Recommended Action****Fault Details**

Severity: major
Cause: vif-down
mibFaultCode: 479
mibFaultName: fltDcxVIFLinkState
moClass: dcx:VIF
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/fcoe/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fcoe/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vif-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/fcoe/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fcoe/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vif-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vif-[id]

fltEquipmentFanModuleDegraded

Fault Code: F0480

Message

Fan module [tray]-[id] in chassis [id] operability: [operability]Fan module [tray]-[id] in server [id] operability: [operability]Fan module [tray]-[id] in fabric interconnect [id] operability: [operability]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: equipment-degraded
mibFaultCode: 480
mibFaultName: fltEquipmentFanModuleDegraded
moClass: equipment:FanModule
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]

fltEquipmentIOCardPost-failure

Fault Code: F0481

Message

[side] IOM [chassisId]/[id] ([switchId]) POST failure

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-problem
mibFaultCode: 481
mibFaultName: fltEquipmentIOCardPostFailure
moClass: equipment:IOCard
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

fltEquipmentFanPerfThresholdLowerNonRecoverable

Fault Code: F0484

Message

Fan [id] in Fan Module [tray]-[id] under chassis [id] speed: [perf]Fan [id] in fabric interconnect [id] speed: [perf]Fan [id] in Fan Module [tray]-[id] under server [id] speed: [perf]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: performance-problem
mibFaultCode: 484
mibFaultName: fltEquipmentFanPerfThresholdLowerNonRecoverable
moClass: equipment:Fan
Type: equipment
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/fex-[id]/fan-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]

fltMemoryUnitIdentity-unestablishable

Fault Code: F0502

Message

DIMM [location] on server [chassisId]/[slotId] has an invalid FRUDIMM [location] on server [id] has an invalid FRU

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: identity-unestablishable
mibFaultCode: 502
mibFaultName: fltMemoryUnitIdentityUnestablishable
moClass: memory:Unit
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]

fltComputePhysicalPost-failure

Fault Code: F0517

Message

Server [id] POST or diagnostic failureServer [chassisId]/[slotId] POST or diagnostic failure

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-problem
mibFaultCode: 517
mibFaultName: fltComputePhysicalPostFailure
moClass: compute:Physical
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]

fltEquipmentPsuOffline

Fault Code: F0528

Message

Power supply [id] in chassis [id] power: [power]Power supply [id] in fabric interconnect [id] power: [power]Power supply [id] in fex [id] power: [power]Power supply [id] in server [id] power: [power]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: equipment-offline
mibFaultCode: 528
mibFaultName: fltEquipmentPsuOffline
moClass: equipment:Psu
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]

fltStorageRaidBatteryInoperable

Fault Code: F0531

Message

RAID Battery on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]RAID Battery on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-inoperable
mibFaultCode: 531
mibFaultName: fltStorageRaidBatteryInoperable
moClass: storage:RaidBattery
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/raid-battery
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/raid-battery

fltSysdebugMEpLogTransferError

Fault Code: F0532

Message

Server [chassisId]/[slotId] [type] transfer failed: [operState]Server [id] [type] transfer failed: [operState]

Explanation

Recommended Action

Fault Details

Severity: info
Cause: file-transfer-failed
mibFaultCode: 532
mibFaultName: fltSysdebugMEpLogTransferError
moClass: sysdebug:MEpLog
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/log-[type]-[id]

Affected MO: sys/chassis-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/mgmt/log-[type]-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/log-[type]-[id]
Affected MO: sys/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/log-[type]-[id]
Affected MO: sys/rack-unit-[id]/mgmt/log-[type]-[id]
Affected MO: sys/switch-[id]/mgmt/log-[type]-[id]

fltComputeRtcBatteryInoperable

Fault Code: F0533

Message

RTC Battery on server [chassisId]/[slotId] operability: [operability]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-inoperable
mibFaultCode: 533
mibFaultName: fltComputeRtcBatteryInoperable
moClass: compute:RtcBattery
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/rtc-battery
Affected MO: sys/rack-unit-[id]/board/rtc-battery

fltMemoryBufferUnitThermalThresholdNonCritical

Fault Code: F0535

Message

Buffer Unit [id] on server [chassisId]/[slotId] temperature: [thermal] Buffer Unit [id] on server [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

Severity: info
Cause: thermal-problem
mibFaultCode: 535
mibFaultName: fltMemoryBufferUnitThermalThresholdNonCritical
moClass: memory:BufferUnit
Type: environmental


```

Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]

```

fltMemoryBufferUnitThermalThresholdCritical

Fault Code: F0536

Message

Buffer Unit [id] on server [chassisId]/[slotId] temperature: [thermal]Buffer Unit [id] on server [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: thermal-problem
mibFaultCode: 536
mibFaultName: fltMemoryBufferUnitThermalThresholdCritical
moClass: memory:BufferUnit
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]

```

fltMemoryBufferUnitThermalThresholdNonRecoverable

Fault Code: F0537

Message

Buffer Unit [id] on server [chassisId]/[slotId] temperature: [thermal]Buffer Unit [id] on server [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: critical
Cause: thermal-problem
mibFaultCode: 537
mibFaultName: fltMemoryBufferUnitThermalThresholdNonRecoverable
moClass: memory:BufferUnit
Type: environmental
Callhome: environmental
Callhome Enabled: no

```

```

Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]

```

fltComputeIOHubThermalNonCritical

Fault Code: F0538

Message

IO Hub on server [chassisId]/[slotId] temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: minor
Cause: thermal-problem
mibFaultCode: 538
mibFaultName: fltComputeIOHubThermalNonCritical
moClass: compute:IOHub
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub
Affected MO: sys/rack-unit-[id]/board/iohub

```

fltComputeIOHubThermalThresholdCritical

Fault Code: F0539

Message

IO Hub on server [chassisId]/[slotId] temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: thermal-problem
mibFaultCode: 539
mibFaultName: fltComputeIOHubThermalThresholdCritical
moClass: compute:IOHub
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub
Affected MO: sys/rack-unit-[id]/board/iohub

```

fltComputeIOHubThermalThresholdNonRecoverable

Fault Code: F0540

Message

IO Hub on server [chassisId]/[slotId] temperature: [thermal]

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: thermal-problem
mibFaultCode: 540
mibFaultName: fltComputeIOHubThermalThresholdNonRecoverable
moClass: compute:IOHub
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub
Affected MO: sys/rack-unit-[id]/board/iohub
```

fltEquipmentChassisIdentity-unestablishable

Fault Code: F0543

Message

Chassis [id] has an invalid FRU

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: identity-unestablishable
mibFaultCode: 543
mibFaultName: fltEquipmentChassisIdentityUnestablishable
moClass: equipment:Chassis
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]
```

fltSwVlanPortNsResourceStatus

Fault Code: F0549

Message

Vlan-Port Resource exceeded

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: limit-reached
mibFaultCode: 549
mibFaultName: fltSwVlanPortNsResourceStatus
moClass: sw:VlanPortNs
Type: management
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/vlan-port-ns

fltFabricLanPinGroupEmpty

Fault Code: F0621

Message

LAN Pin Group [name] is empty

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: empty-pin-group
mibFaultCode: 621
mibFaultName: fltFabricLanPinGroupEmpty
moClass: fabric:LanPinGroup
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/lan-pin-group-[name]

fltFabricSanPinGroupEmpty

Fault Code: F0622

Message

SAN Pin Group [name] is empty

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: empty-pin-group
mibFaultCode: 622
mibFaultName: fltFabricSanPinGroupEmpty
moClass: fabric:SanPinGroup
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/san-pin-group-[name]

fltAdaptorExtEthIfMisConnect

Fault Code: F0625

Message

Adapter [id] eth interface [id] in server [id] mis-connected

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: link-misconnected
mibFaultCode: 625
mibFaultName: fltAdaptorExtEthIfMisConnect
moClass: adaptor:ExtEthIf
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]

fltAdaptorHostEthIfMisConnect

Fault Code: F0626

Message

Adapter [id] eth interface [id] in server [id] mis-connected

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: link-misconnected
mibFaultCode: 626
mibFaultName: fltAdaptorHostEthIfMisConnect
moClass: adaptor:HostEthIf
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]
```

fltPowerBudgetPowerBudgetCmcProblem

Fault Code: F0635

Message

Power cap application failed for chassis [id]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: power-cap-fail
mibFaultCode: 635
mibFaultName: fltPowerBudgetPowerBudgetCmcProblem
moClass: power:Budget
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
```

fltPowerBudgetPowerBudgetBmcProblem

Fault Code: F0637

Message

Power cap application failed for server [chassisId]/[slotId]Power cap application failed for server [id]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: power-cap-fail
mibFaultCode: 637
mibFaultName: fltPowerBudgetPowerBudgetBmcProblem
moClass: power:Budget
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget

fltPowerBudgetPowerBudgetDiscFail

Fault Code: F0640

Message

Insufficient power available to discover server [chassisId]/[slotId]Insufficient power available to discover server [id]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: power-cap-fail
mibFaultCode: 640
mibFaultName: fltPowerBudgetPowerBudgetDiscFail
moClass: power:Budget
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/rack-unit-[id]/budget

Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget

fltPowerGroupPowerGroupInsufficientBudget

Fault Code: F0642

Message

insufficient budget for power group [name]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: power-cap-fail
mibFaultCode: 642
mibFaultName: fltPowerGroupPowerGroupInsufficientBudget
moClass: power:Group
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/power-ep/group-[name]

fltPowerGroupPowerGroupBudgetIncorrect

Fault Code: F0643

Message

admin committed insufficient for power group [name], using previous value [operCommitted]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: power-cap-fail
mibFaultCode: 643
mibFaultName: fltPowerGroupPowerGroupBudgetIncorrect
moClass: power:Group
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/power-ep/group-[name]

fltLicenseInstanceGracePeriodWarning1

Fault Code: F0670

Message

license for [feature] on fabric-interconnect [scope] has entered into the grace period.

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: license-graceperiod-entered
mibFaultCode: 670
mibFaultName: fltLicenseInstanceGracePeriodWarning1
moClass: license:Instance
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseInstanceGracePeriodWarning2

Fault Code: F0671

Message

license for [feature] on fabric-interconnect [scope] is running in the grace period for more than 10 days

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: license-graceperiod-10days
mibFaultCode: 671
mibFaultName: fltLicenseInstanceGracePeriodWarning2
moClass: license:Instance
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseInstanceGracePeriodWarning3

Fault Code: F0672

Message

license for [feature] on fabric-interconnect [scope] is running in the grace period for more than 30 days

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: license-graceperiod-30days
mibFaultCode: 672
mibFaultName: fltLicenseInstanceGracePeriodWarning3
moClass: license:Instance
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]

fltLicenseInstanceGracePeriodWarning4

Fault Code: F0673

Message

license for [feature] on fabric-interconnect [scope] is running in the grace period for more than 60 days

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: license-graceperiod-60days
mibFaultCode: 673
mibFaultName: fltLicenseInstanceGracePeriodWarning4
moClass: license:Instance
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]

fltLicenseInstanceGracePeriodWarning5

Fault Code: F0674

Message

license for [feature] on fabric-interconnect [scope] is running in the grace period for more than 90 days

Explanation

Recommended Action

Fault Details

Severity: major
Cause: license-graceperiod-90days
mibFaultCode: 674
mibFaultName: fltLicenseInstanceGracePeriodWarning5
moClass: license:Instance
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]

fltLicenseInstanceGracePeriodWarning6

Fault Code: F0675

Message

license for [feature] on fabric-interconnect [scope] is running in the grace period for more than 119 days

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: license-graceperiod-119days
mibFaultCode: 675
mibFaultName: fltLicenseInstanceGracePeriodWarning6
moClass: license:Instance
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]

fltLicenseInstanceGracePeriodWarning7

Fault Code: F0676

Message

Grace period for [feature] on fabric-interconnect [scope] is expired. Please acquire a license for the same.

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: license-graceperiod-expired
mibFaultCode: 676
mibFaultName: fltLicenseInstanceGracePeriodWarning7
moClass: license:Instance
Type: management
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/license/feature-[name]-[vendor]-[version]/inst-[scope]
```

fltLicenseFileBadLicenseFile

Fault Code: F0677

Message

license file [name] on fabric-interconnect [scope] can not be installed

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: license-file-uninstallable
mibFaultCode: 677
mibFaultName: fltLicenseFileBadLicenseFile
moClass: license:File
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: false
Is Implemented: true
Affected MO: sys/license/file-[scope]:[id]
```

fltLicenseFileFileNotDeleted

Fault Code: F0678

Message

license file [name] from fabric-interconnect [scope] could not be deleted

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: license-file-not-deleted
mibFaultCode: 678
mibFaultName: fltLicenseFileFileNotDeleted
moClass: license:File
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: false
Is Implemented: true
Affected MO: sys/license/file-[scope]:[id]

fltMgmtIfMisConnect

Fault Code: F0688

Message

Management Port [id] in server [id] is mis connected

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: link-misconnected
mibFaultCode: 688
mibFaultName: fltMgmtIfMisConnect
moClass: mgmt:If
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]

Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fltLsComputeBindingAssignmentRequirementsNotMet

Fault Code: F0689

Message

Assignment of service profile [name] to server [pnDn] failed

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: assignment-failed
mibFaultCode: 689
mibFaultName: fltLsComputeBindingAssignmentRequirementsNotMet
moClass: ls:ComputeBinding
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/pn
Affected MO: org-[name]/ls-[name]/pn-req
Affected MO: org-[name]/tier-[name]/ls-[name]/pn
Affected MO: org-[name]/tier-[name]/ls-[name]/pn-req

fltEquipmentFexPost-failure

Fault Code: F0702

Message

fex [id] POST failure

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-problem
mibFaultCode: 702
mibFaultName: fltEquipmentFexPostFailure
moClass: equipment:Fex
Type: equipment
Callhome: diagnostic

```

Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]

```

fltEquipmentFexIdentity

Fault Code: F0703

Message

Fex [id] has a malformed FRU

Explanation

Recommended Action

Fault Details

```

Severity: critical
Cause: fru-problem
mibFaultCode: 703
mibFaultName: fltEquipmentFexIdentity
moClass: equipment:Fex
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]

```

fltAdaptorHostEthIfMissing

Fault Code: F0708

Message

Connection to Adapter [id] eth interface [id] in server [id] missing

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: link-missing
mibFaultCode: 708
mibFaultName: fltAdaptorHostEthIfMissing
moClass: adaptor:HostEthIf
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]

```

fltPortPIoInvalid-sfp

Fault Code: F0713

Message

[transport] port [portId] on chassis [id] role : [ifRole] transceiver type:[xcvrType][transport] port [slotId]/[portId] on fabric interconnect [id] role : [ifRole] transceiver type:[xcvrType]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: unsupported-transceiver
mibFaultCode: 713
mibFaultName: fltPortPIoInvalidSfp
moClass: port:PIo
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]

fltMgmtIfMissing

Fault Code: F0717

Message

Connection to Management Port [id] in server [id] is missing

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: link-missing
mibFaultCode: 717
mibFaultName: fltMgmtIfMissing
moClass: mgmt:If
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fltFabricEthLanPcEpDown

Fault Code: F0727

Message

[type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: membership-down
mibFaultCode: 727
mibFaultName: fltFabricEthLanPcEpDown
moClass: fabric:EthLanPcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]

fltFabricFcSanPcEpDown

Fault Code: F0728

Message

[type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: membership-down
mibFaultCode: 728

```

mibFaultName: fltFabricFcSanPcEpDown
moClass: fabric:FcSanPcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]

```

fltEquipmentIOCardThermalThresholdNonCritical

Fault Code: F0729

Message

[side] IOM [chassisId]/[id] ([switchId]) temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: minor
Cause: thermal-problem
mibFaultCode: 729
mibFaultName: fltEquipmentIOCardThermalThresholdNonCritical
moClass: equipment:IOCard
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

```

fltEquipmentIOCardThermalThresholdCritical

Fault Code: F0730

Message

[side] IOM [chassisId]/[id] ([switchId]) temperature: [thermal]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: thermal-problem
mibFaultCode: 730
mibFaultName: fltEquipmentIOCardThermalThresholdCritical
moClass: equipment:IOCard
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

fltEquipmentIOCardThermalThresholdNonRecoverable

Fault Code: F0731

Message

[side] IOM [chassisId]/[id] ([switchId]) temperature: [thermal]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: thermal-problem
mibFaultCode: 731
mibFaultName: fltEquipmentIOCardThermalThresholdNonRecoverable
moClass: equipment:IOCard
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]
Affected MO: sys/fex-[id]/slot-[id]

fltEquipmentChassisSeeprom-inoperable

Fault Code: F0733

Message

Device [id] SEEPROM operability: [seepromOperState]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: equipment-inoperable
mibFaultCode: 733
mibFaultName: fltEquipmentChassisSeepromInoperable
moClass: equipment:Chassis
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]

fltFabricFcSanPcEpIncompatibleSpeed

Fault Code: F0734

Message

Member [slotId]/[portId] cannot be added to SAN Port-Channel [portId] on fabric interconnect [id], reason: [membership]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: incompatible-speed
mibFaultCode: 734
mibFaultName: fltFabricFcSanPcEpIncompatibleSpeed
moClass: fabric:FcSanPcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]

fltFabricFcSanPcIncompatibleSpeed

Fault Code: F0735

Message

Cannot set admin speed to the requested value, Speed incompatible with member ports in the port-channel

Explanation

Recommended Action

Fault Details

Severity: major
Cause: incompatible-speed
mibFaultCode: 735
mibFaultName: fltFabricFcSanPcIncompatibleSpeed
moClass: fabric:FcSanPc
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]

fltExtmgmtIfMgmtifdown

Fault Code: F0736

Message

Management interface on Fabric Interconnect [id] is [operState]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: mgmtif-down
mibFaultCode: 736
mibFaultName: fltExtmgmtIfMgmtifdown
moClass: extmgmt:If
Type: management
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/extmgmt-intf
```

fltPowerChassisMemberPowerGroupCapInsufficient

Fault Code: F0740

Message

Chassis [id] cannot be capped as group cap is low. Please consider raising the cap.

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: group-cap-insufficient
mibFaultCode: 740
mibFaultName: fltPowerChassisMemberPowerGroupCapInsufficient
moClass: power:ChassisMember
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/power-ep/group-[name]/ch-member-[id]
```

fltPowerChassisMemberChassisFirmwareProblem

Fault Code: F0741

Message

Chassis [id] cannot be capped as at least one of the CMC or CIMC or BIOS firmware version is less than 1.4. Please upgrade the firmware for cap to be applied.

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: old-chassis-component-firmware
mibFaultCode: 741
mibFaultName: fltPowerChassisMemberChassisFirmwareProblem
moClass: power:ChassisMember
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/power-ep/group-[name]/ch-member-[id]
```

fltPowerChassisMemberChassisPsuInsufficient

Fault Code: F0742

Message

Chassis [id] cannot be capped as at least two PSU need to be powered

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: psu-insufficient
mibFaultCode: 742
mibFaultName: fltPowerChassisMemberChassisPsuInsufficient
moClass: power:ChassisMember
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/power-ep/group-[name]/ch-member-[id]
```

fltPowerChassisMemberChassisPsuRedundanceFailure

Fault Code: F0743

Message

Chassis [id] was configured for redundancy, but running in a non-redundant configuration.

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: psu-redundancy-fail
mibFaultCode: 743
mibFaultName: fltPowerChassisMemberChassisPsuRedundanceFailure
moClass: power:ChassisMember
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/power-ep/group-[name]/ch-member-[id]
```

fltPowerBudgetPowerCapReachedCommit

Fault Code: F0744

Message

P-State lowered as consumption hit power cap for server [chassisId]/[slotId]P-State lowered as consumption hit power cap for server [id]

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: power-consumption-hit-limit
mibFaultCode: 744
mibFaultName: fltPowerBudgetPowerCapReachedCommit
moClass: power:Budget
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
```

fltSysdebugAutoCoreFileExportTargetAutoCoreTransferFailure

Fault Code: F0747

Message

Auto core transfer failure at remote server [hostname]:[path] [exportFailureReason]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: tftp-server-error
mibFaultCode: 747
mibFaultName: fltSysdebugAutoCoreFileExportTargetAutoCoreTransferFailure
moClass: sysdebug:AutoCoreFileExportTarget
Type: sysdebug
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/sysdebug/file-export

fltFabricMonSpanConfigFail

Fault Code: F0757

Message

Configuration for traffic monitor [name] failed, reason: [configFailReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: config-error
mibFaultCode: 757
mibFaultName: fltFabricMonSpanConfigFail
moClass: fabric:Mon
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lanmon/[id]/eth-mon-[name]
Affected MO: fabric/sanmon/[id]/fc-mon-[name]

fltPowerBudgetChassisPsuInsufficient

Fault Code: F0764

Message

Chassis [id] has had PSU failures. Please correct the problem by checking input power or replace the PSU

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: psu-failure
mibFaultCode: 764
mibFaultName: fltPowerBudgetChassisPsuInsufficient
moClass: power:Budget
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget
```

fltPowerBudgetTStateTransition

Fault Code: F0765

Message

Blade [chassisId]/[slotId] has been severely throttled. CIMC can recover if budget is redeployed to the blade or by rebooting the blade. If problem persists, please ensure that OS is ACPI compliantRack server [id] has been severely throttled. CIMC can recover if budget is redeployed to the blade or by rebooting the blade. If problem persists, please ensure that OS is ACPI compliant

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: no-ack-from-bios
mibFaultCode: 765
mibFaultName: fltPowerBudgetTStateTransition
moClass: power:Budget
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
```

Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget

fltPowerPolicyPowerPolicyApplicationFail

Fault Code: F0766

Message

Insufficient budget to apply no-cap priority through policy [name]. Blades will continue to be capped

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: no-cap-fail
mibFaultCode: 766
mibFaultName: fltPowerPolicyPowerPolicyApplicationFail
moClass: power:Policy
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/power-policy-[name]

fltMgmtIfNew

Fault Code: F0772

Message

New connection discovered on Management Port [id] in server [id]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: new-link
mibFaultCode: 772
mibFaultName: fltMgmtIfNew
moClass: mgmt:If
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/if-[id]

Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/if-[id]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/mgmt/if-[id]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/if-[id]
Affected MO: sys/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/if-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/if-[id]
Affected MO: sys/rack-unit-[id]/mgmt/if-[id]
Affected MO: sys/switch-[id]/mgmt/if-[id]

fltAdaptorExtEthIfMissing

Fault Code: F0775

Message

Connection to Adapter [id] eth interface [id] in server [id] missing

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: link-missing
mibFaultCode: 775
mibFaultName: fltAdaptorExtEthIfMissing
moClass: adaptor:ExtEthIf
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]

fltStorageLocalDiskSlotEpUnusable

Fault Code: F0776

Message

Local disk [id] on server [serverId] is not usable by the operating system

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: equipment-inoperable

```

mibFaultCode: 776
mibFaultName: fltStorageLocalDiskSlotEpUnusable
moClass: storage:LocalDiskSlotEp
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/disk-[id]
Affected MO: sys/rack-unit-[id]/board/disk-[id]

```

fltFabricEthEstcPcEpDown

Fault Code: F0777

Message

[type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: membership-down
mibFaultCode: 777
mibFaultName: fltFabricEthEstcPcEpDown
moClass: fabric:EthEstcPcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]

```

fltEquipmentFexIdentity-unestablishable

Fault Code: F0778

Message

Fex [id] has an invalid FRU

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: identity-unestablishable
mibFaultCode: 778
mibFaultName: fltEquipmentFexIdentityUnestablishable
moClass: equipment:Fex
Type: equipment
Callhome: none

```

```

Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]

```

fltEquipmentFanModuleInoperable

Fault Code: F0794

Message

Fan module [tray]-[id] in chassis [id] operability: [operability]Fan module [tray]-[id] in server [id] operability: [operability]Fan module [tray]-[id] in fabric interconnect [id] operability: [operability]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: equipment-inoperable
mibFaultCode: 794
mibFaultName: fltEquipmentFanModuleInoperable
moClass: equipment:FanModule
Type: equipment
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]

```

fltLsmaintMaintPolicyUnresolvableScheduler

Fault Code: F0795

Message

Schedule [schedName] referenced by maintenance policy [name] does not exist

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: non-existent-scheduler
mibFaultCode: 795
mibFaultName: fltLsmaintMaintPolicyUnresolvableScheduler
moClass: lsmaint:MaintPolicy
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/maint-[name]

```

fltFabricVsanErrorDisabled

Fault Code: F0796

Message

VSAN [name] is [operState]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: vsan-misconfigured
mibFaultCode: 796
mibFaultName: fltFabricVsanErrorDisabled
moClass: fabric:Vsan
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/fc-estc/[id]/net-[name]
Affected MO: fabric/fc-estc/net-[name]
Affected MO: fabric/san/[id]/net-[name]
Affected MO: fabric/san/net-[name]

fltFabricVsanEpErrorDisabled

Fault Code: F0797

Message

[type] Port [slotId]/[portId] on fabric interconnect [switchId] has VSAN [id] in error disabled state
 Port channel [portId] on fabric interconnect [switchId] has VSAN [id] in error disabled state

Explanation

Recommended Action

Fault Details

Severity: major
Cause: vsan-misconfigured
mibFaultCode: 797
mibFaultName: fltFabricVsanEpErrorDisabled
moClass: fabric:VsanEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/fc-estc/[id]/phys-fc-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/vsan-[id]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/vsan-[id]
Affected MO: fabric/san/[id]/pc-[portId]/vsan-[id]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsan-[id]

Affected MO: fabric/san/[id]/phys-slot-[slotId]-port-[portId]/vsan-[id]

fltPowerBudgetFirmwareMismatch

Fault Code: F0798

Message

Firmware on blade [chassisId]/[slotId] does not allow chassis level power capping. Please consider upgrading to at least 1.4 version

Explanation

Recommended Action

Fault Details

Severity: major
Cause: old-firmware
mibFaultCode: 798
mibFaultName: fltPowerBudgetFirmwareMismatch
moClass: power:Budget
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/budget
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/budget
Affected MO: sys/chassis-[id]/budget
Affected MO: sys/rack-unit-[id]/budget
Affected MO: sys/rack-unit-[id]/ext-board-[id]/budget

fltProcessorUnitIdentity-unestablishable

Fault Code: F0801

Message

Processor [id] on server [chassisId]/[slotId] has an invalid FRUProcessor [id] on server [id] has an invalid FRU

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: identity-unestablishable
mibFaultCode: 801
mibFaultName: fltProcessorUnitIdentityUnestablishable
moClass: processor:Unit
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]

fltIqnpoolPoolEmpty

Fault Code: F0821

Message

iqn pool [name] is empty

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: empty-pool
mibFaultCode: 821
mibFaultName: fltIqnpoolPoolEmpty
moClass: iqnpool:Pool
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/iqn-pool-[name]

fltFabricDceSwSrvPcEpDown

Fault Code: F0831

Message

[type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: membership-down
mibFaultCode: 831
mibFaultName: fltFabricDceSwSrvPcEpDown
moClass: fabric:DceSwSrvPcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/server/sw-[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]

fltFabricEpMgrEpTransModeFail

Fault Code: F0832

Message

Port constraint violation on switch [id]: [confQual]

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: config-error
mibFaultCode: 832
mibFaultName: fltFabricEpMgrEpTransModeFail
moClass: fabric:EpMgr
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/[id]
```

fltFabricVlanMisconfigured

Fault Code: F0833

Message

VLAN [name] is [operState] because of conflicting vlan-id with a fcoe-vlan

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: vlan-misconfigured
mibFaultCode: 833
mibFaultName: fltFabricVlanMisconfigured
moClass: fabric:Vlan
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltFabricPloEpErrorMisconfigured

Fault Code: F0834

Message

Interface [name] is [operState]. Reason: [operStateReason]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: interface-misconfigured
mibFaultCode: 834
mibFaultName: fltFabricPloEpErrorMisconfigured
moClass: fabric:PloEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/eth-estc/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]/eth-target-ep-[name]
Affected MO: fabric/eth-estc/[id]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
fabric/eth-estc/[id]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
fabric/eth-estc/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fc-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/fc-estc/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/[id]/net-group-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/lan/net-group-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lanmon/[id]/eth-mon-[name]/dest-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/fcoesanpc-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-slot-[slotId]-port-[portId]

Affected MO:
 fabric/san/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/sanmon/[id]/fc-mon-[name]/dest-slot-[slotId]-port-[portId]
Affected MO: fabric/server/chassis-[chassisId]
Affected MO: fabric/server/chassis-[chassisId]/slot-[slotId]
Affected MO: fabric/server/chassis-ep-ven-[vendor]-mod[model]-ser-[serial]
Affected MO: fabric/server/compute-ep-ven-[vendor]-mod-[model]-ser-[serial]
Affected MO: fabric/server/sw-[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/server/sw-[id]/slot-[slotId]-port-[portId]
Affected MO:
 sys/switch-[id]/border-eth/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO: sys/switch-[id]/border-eth/pc-[portId]/eth-target-[name]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/pc-[portId]/eth-target-[name]

fltFabricEthLanEpMissingPrimaryVlan

Fault Code: F0835

Message

Primary vlan missing from fabric: [switchId], port: [slotId]/[portId].

Explanation

Recommended Action

Fault Details

Severity: major
Cause: missing-primary-vlan
mibFaultCode: 835
mibFaultName: fltFabricEthLanEpMissingPrimaryVlan
moClass: fabric:EthLanEp
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]

fltFabricEthLanPcMissingPrimaryVlan

Fault Code: F0836

Message

Primary vlan missing from fabric: [switchId], port-channel: [portId].

Explanation

Recommended Action

Fault Details

Severity: major
Cause: missing-primary-vlan
mibFaultCode: 836
mibFaultName: fltFabricEthLanPcMissingPrimaryVlan

```

moClass: fabric:EthLanPc
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/[id]/pc-[portId]

```

fltVnicEtherPinningMismatch

Fault Code: F0840

Message

Hard pinning target for eth vNIC [name], service profile [name] does not have all the required vlans configured

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: pinning-mismatch
mibFaultCode: 840
mibFaultName: fltVnicEtherPinningMismatch
moClass: vnic:Ether
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]

```

fltVnicEtherPinningMisconfig

Fault Code: F0841

Message

Hard pinning target for eth vNIC [name], service profile [name] is missing or misconfigured

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: pinning-misconfig
mibFaultCode: 841
mibFaultName: fltVnicEtherPinningMisconfig
moClass: vnic:Ether
Type: configuration
Callhome: none
Callhome Enabled: no

```

```

Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]

```

fltProcessorUnitDisabled

Fault Code: F0842

Message

Processor [id] on server [chassisId]/[slotId] operState: [operState]Processor [id] on server [id]
operState: [operState]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: equipment-disabled
mibFaultCode: 842
mibFaultName: fltProcessorUnitDisabled
moClass: processor:Unit
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]
Affected MO: sys/rack-unit-[id]/board/cpu-[id]

```

fltMemoryUnitDisabled

Fault Code: F0844

Message

DIMM [location] on server [chassisId]/[slotId] operState: [operState]DIMM [location] on server [id]
operaState: [operState]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: equipment-disabled
mibFaultCode: 844
mibFaultName: fltMemoryUnitDisabled
moClass: memory:Unit
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true

```

Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]

fltFirmwareBootUnitActivateStatusFailed

Fault Code: F0856

Message

Activation failed and Activate Status set to failed.

Explanation

Recommended Action

Fault Details

Severity: major
Cause: activation-failed
mibFaultCode: 856
mibFaultName: fltFirmwareBootUnitActivateStatusFailed
moClass: firmware:BootUnit
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: capabilities/ep/mgmt-ext/fw-boot-def/bootunit-[type]
Affected MO: capabilities/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]

Affected MO: sys/rack-unit-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
 sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/mgmt/fw-boot-def/bootunit-[type]

fltFabricInternalPcDown

Fault Code: F0858

Message

[type] port-channel [portId] on fabric interconnect [id] oper state: [operState], reason: [stateQual]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: operational-state-down
mibFaultCode: 858
mibFaultName: fltFabricInternalPcDown
moClass: fabric:InternalPc
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/server/sw-[id]/pc-[portId]

fltMgmtEntityDevice-1-shared-storage-error

Fault Code: F0863

Message

device [chassis1], error accessing shared-storage

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: device-shared-storage-error
mibFaultCode: 863
mibFaultName: fltMgmtEntityDevice1SharedStorageError
moClass: mgmt:Entity
Type: management

Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

fltMgmtEntityDevice-2-shared-storage error

Fault Code: F0864

Message

device [chassis2], error accessing shared-storage

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: device-shared-storage-error
mibFaultCode: 864
mibFaultName: fltMgmtEntityDevice2SharedStorageError
moClass: mgmt:Entity
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

fltMgmtEntityDevice-3-shared-storage error

Fault Code: F0865

Message

device [chassis3], error accessing shared-storage

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: device-shared-storage-error
mibFaultCode: 865
mibFaultName: fltMgmtEntityDevice3SharedStorageError
moClass: mgmt:Entity
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

fltMgmtEntityHa-ssh-keys-mismatched

Fault Code: F0866

Message

Fabric Interconnect [id], management services, mismatched SSH keys

Explanation

Recommended Action

Fault Details

Severity: major
Cause: ha-ssh-keys-mismatched
mibFaultCode: 866
mibFaultName: fltMgmtEntityHaSshKeysMismatched
moClass: mgmt:Entity
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]

fltMgmtPmonEntryUCSM process failure

Fault Code: F0867

Message

UCSM process [name] failed on FI [switchId]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: ucsm-process-failure
mibFaultCode: 867
mibFaultName: fltMgmtPmonEntryUCSMProcessFailure
moClass: mgmt:PmonEntry
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/mgmt-entity-[id]/[name]

fltComputeBoardPowerFail

Fault Code: F0868

Message

Motherboard of server [chassisId]/[slotId] (service profile: [assignedToDn]) power: [power]Motherboard of server [id] (service profile: [assignedToDn]) power: [power]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: power-problem
mibFaultCode: 868
mibFaultName: fltComputeBoardPowerFail
moClass: compute:Board
Type: environmental
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/rack-unit-[id]/board

fltComputeABoardThermalProblem

Fault Code: F0869

Message

Motherboard [faultQualifier] of server [chassisId]/[slotId] (service profile: [assignedToDn]) thermal: [thermal]Motherboard of server [id] (service profile: [assignedToDn]) thermal: [thermal]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: thermal-problem
mibFaultCode: 869
mibFaultName: fltComputeABoardThermalProblem
moClass: compute:ABoard
Type: environmental
Callhome: environmental
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]

fltVmVifLinkState

Fault Code: F0876

Message

Virtual interface [vifId] link is down; reason [stateQual]

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: vif-down
mibFaultCode: 876
mibFaultName: fltVmVifLinkState
moClass: vm:Vif
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: vmm/computeEp-[uuid]/nic-[name]/sw-[phSwitchId]vif-[vifId]
Affected MO: vmm/hv-[uuid]/nic-[name]/sw-[phSwitchId]vif-[vifId]
Affected MO: vmm/vm-[uuid]/nic-[name]/sw-[phSwitchId]vif-[vifId]
```

fltEquipmentPsuPowerSupplyShutdown

Fault Code: F0881

Message

Power supply [id] in chassis [id] shutdown reason:[powerStateQualifier]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: equipment-offline
mibFaultCode: 881
mibFaultName: fltEquipmentPsuPowerSupplyShutdown
moClass: equipment:Psu
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuPowerThreshold

Fault Code: F0882

Message

Power supply [id] on chassis [id] has exceeded its power thresholdPower supply [id] on server [id] has exceeded its power threshold

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: power-problem
mibFaultCode: 882
mibFaultName: fltEquipmentPsuPowerThreshold
moClass: equipment:Psu
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentPsuInputError

Fault Code: F0883

Message

Power supply [id] on chassis [id] has disconnected cable or bad input voltagePower supply [id] on server [id] has disconnected cable or bad input voltage

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: power-problem
mibFaultCode: 883
mibFaultName: fltEquipmentPsuInputError
moClass: equipment:Psu
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]
Affected MO: sys/fex-[id]/psu-[id]
Affected MO: sys/rack-unit-[id]/psu-[id]
Affected MO: sys/switch-[id]/psu-[id]
```

fltEquipmentSwitchCardPowerOff

Fault Code: F0884

Message

Switch card is powered down.

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: power-down
mibFaultCode: 884
mibFaultName: fltEquipmentSwitchCardPowerOff
moClass: equipment:SwitchCard
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/slot-[id]
```

fltNetworkElementInventoryFailed

Fault Code: F0885

Message

Fabric Interconnect [id] inventory is not complete [inventoryStatus]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: inventory-failed
mibFaultCode: 885
mibFaultName: fltNetworkElementInventoryFailed
moClass: network:Element
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]
```

fltAdaptorUnitExtnUnidentifiable-fru

Fault Code: F0900

Message

Adapter extension [id] in server [chassisId]/[slotId] has unidentified FRU

Explanation

Recommended Action

Fault Details

Severity: major
Cause: unidentifiable-fru
mibFaultCode: 900
mibFaultName: fltAdaptorUnitExtnUnidentifiableFru
moClass: adaptor:UnitExtn
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/adaptor-extn-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/adaptor-extn-[id]

fltAdaptorUnitExtnMissing

Fault Code: F0901

Message

Adapter extension [id] in server [chassisId]/[slotId] presence: [presence]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: equipment-missing
mibFaultCode: 901
mibFaultName: fltAdaptorUnitExtnMissing
moClass: adaptor:UnitExtn
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/adaptor-extn-[id]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/adaptor-extn-[id]

fltEquipmentFexFex-unsupported

Fault Code: F0902

Message

Fex [id] with model [model] is unsupported

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: fex-unsupported
mibFaultCode: 902
mibFaultName: fltEquipmentFexFexUnsupported
moClass: equipment:Fex
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]
```

fltVnicIscsiConfig-failed

Fault Code: F0903

Message

iSCSI vNIC [name], service profile [name] has duplicate iqn name [initiatorName]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: configuration-failed
mibFaultCode: 903
mibFaultName: fltVnicIscsiConfigFailed
moClass: vnic:IScsi
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/iscsi-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/iscsi-[name]
```

fltPkiKeyRingStatus

Fault Code: F0909

Message

[name] Keyring's certificate is invalid, reason: [certStatus].

Explanation

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: invalid-keyring-certificate
mibFaultCode: 909
mibFaultName: fltPkiKeyRingStatus
moClass: pki:KeyRing
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/pki-ext/keyring-[name]
```

fltPkiTPStatus

Fault Code: F0910

Message

[name] Trustpoint's cert-chain is invalid, reason: [certStatus].

Explanation

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: invalid-trustpoint-cert-chain
mibFaultCode: 910
mibFaultName: fltPkiTPStatus
moClass: pki:TP
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/pki-ext/tp-[name]
```


fltComputePhysicalDisassociationFailed

Fault Code: F0915

Message

Failed to disassociate server [id]Failed to disassociate server [chassisId]/[slotId]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: disassociation-failed
mibFaultCode: 915
mibFaultName: fltComputePhysicalDisassociationFailed
moClass: compute:Physical
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]

fltComputePhysicalNetworkMisconfigured

Fault Code: F0916

Message

Server [id] (service profile: [assignedToDn]) has mis-configured network vif resourcesServer [chassisId]/[slotId] (service profile: [assignedToDn]) has mis-configured network vif resources

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: vif-ids-mismatch
mibFaultCode: 916
mibFaultName: fltComputePhysicalNetworkMisconfigured
moClass: compute:Physical
Type: equipment
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]

fltVnicProfileProfileConfigIncorrect

Fault Code: F0917

Message

The Port Profile [name] has an invalid configuration.

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: profile-config-incorrect
mibFaultCode: 917
mibFaultName: fltVnicProfileProfileConfigIncorrect
moClass: vnic:Profile
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/profiles/vnic-[name]
```

fltComputeABoardMotherBoardVoltageThresholdUpperNonRecoverable

Fault Code: F0918

Message

Motherboard input voltage(12V/5V/3V) in server [id] is [voltage]Motherboard [faultQualifier] input voltage(12V/5V/3V) in server [chassisId]/[slotId] is [voltage]

Explanation

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: 918
mibFaultName: fltComputeABoardMotherBoardVoltageThresholdUpperNonRecoverable
moClass: compute:ABoard
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]
```

fltComputeABoardMotherBoardVoltageThresholdLowerNonRecoverable

Fault Code: F0919

Message

Motherboard input voltage(12V/5V/3V) in server [id] is [voltage]Motherboard [faultQualifier] input voltage(12V/5V/3V) in server [chassisId]/[slotId] is [voltage]

Explanation

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: voltage-problem
mibFaultCode: 919
mibFaultName: fltComputeABoardMotherBoardVoltageThresholdLowerNonRecoverable
moClass: compute:ABoard
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]
```

fltComputeABoardMotherBoardVoltageUpperThresholdCritical

Fault Code: F0920

Message

Motherboard input voltage(12V/5V/3V) in server [id] is [voltage]Motherboard [faultQualifier] input voltage(12V/5V/3V) in server [chassisId]/[slotId] is [voltage]

Explanation

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: minor
Cause: voltage-problem
mibFaultCode: 920
mibFaultName: fltComputeABoardMotherBoardVoltageUpperThresholdCritical
moClass: compute:ABoard
Type: environmental
```

```

Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]

```

fltComputeABoardMotherBoardVoltageLowerThresholdCritical

Fault Code: F0921

Message

Motherboard input voltage(12V/5V/3V) in server [id] is [voltage]Motherboard [faultQualifier] input voltage(12V/5V/3V) in server [chassisId]/[slotId] is [voltage]

Explanation

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```

Severity: minor
Cause: voltage-problem
mibFaultCode: 921
mibFaultName: fltComputeABoardMotherBoardVoltageLowerThresholdCritical
moClass: compute:ABoard
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]

```

fltVnicEtherIfVlanAccessFault

Fault Code: F0932

Message

The named vlan [name] for vNIC [name] cannot be accessed from org [name]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: inaccessible-vlan-referenced

```

```

mibFaultCode: 932
mibFaultName: fltVnicEtherIfVlanAccessFault
moClass: vnic:EtherIf
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/lan/network-sets/fabric-network-[name]/fabric-network-def-[name]/vm-network-def-
[name]/if-[name]
Affected MO: fabric/lan/profiles/vnic-[name]/if-[name]
Affected MO: fabric/lanmon/eth-flow-monitoring/flow-exporter-profile-[name]/if-[name]
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/lan-conn-templ-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ipc-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ipc-[name]/if-[name]

```

fltVnicEtherIfVlanUnresolvable

Fault Code: F0933

Message

The named vlan [name] for vNIC [name] cannot be resolved

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: referenced-vlan-unresolvable
mibFaultCode: 933
mibFaultName: fltVnicEtherIfVlanUnresolvable
moClass: vnic:EtherIf
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/lan/network-sets/fabric-network-[name]/fabric-network-def-[name]/vm-network-def-
[name]/if-[name]
Affected MO: fabric/lan/profiles/vnic-[name]/if-[name]
Affected MO: fabric/lanmon/eth-flow-monitoring/flow-exporter-profile-[name]/if-[name]
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/lan-conn-templ-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ipc-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ipc-[name]/if-[name]

```

fltVnicEtherIfInvalidVlan

Fault Code: F0934

Message

Invalid Vlan in the allowed vlan list

Explanation

Recommended Action

Fault Details

Severity: major
Cause: invalid-vlan-in-the-allowed-vlan-list
mibFaultCode: 934
mibFaultName: fltVnicEtherIfInvalidVlan
moClass: vnic:EtherIf
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 fabric/lan/network-sets/fabric-network-[name]/fabric-network-def-[name]/vm-network-def-[name]/if-[name]
Affected MO: fabric/lan/profiles/vnic-[name]/if-[name]
Affected MO: fabric/lanmon/eth-flow-monitoring/flow-exporter-profile-[name]/if-[name]
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/lan-conn-templ-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ipc-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ipc-[name]/if-[name]

fltFabricVlanVlanConflictPermit

Fault Code: F0935

Message

There are multiple vlans with id [id] have different accessibility configured.

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: vlan-conflict-permit
mibFaultCode: 935
mibFaultName: fltFabricVlanVlanConflictPermit
moClass: fabric:Vlan
Type: configuration
Callhome: none
Callhome Enabled: no

```

Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]

```

fltFabricVlanReqVlanPermitUnresolved

Fault Code: F0936

Message

The VLAN permit does not reference any existing vlans.

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: vlan-permit-unresolved
mibFaultCode: 936
mibFaultName: fltFabricVlanReqVlanPermitUnresolved
moClass: fabric:VlanReq
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/vlan-req-[name]

```

fltFabricVlanGroupReqVlanGroupPermitUnresolved

Fault Code: F0937

Message

The VLAN permit does not reference any existing net groups.

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: group-permit-unresolved
mibFaultCode: 937
mibFaultName: fltFabricVlanGroupReqVlanGroupPermitUnresolved
moClass: fabric:VlanGroupReq
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/vlan-group-req-[name]

```

fltExtpolClientClientLostConnectivity

Fault Code: F0988

Message

UCS has lost connectivity with UCS Central

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: client-lost-connectivity
mibFaultCode: 988
mibFaultName: fltExtpolClientClientLostConnectivity
moClass: extpol:Client
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: extpol/reg/clients/client-[id]
```

fltStorageLocalDiskDegraded

Fault Code: F0996

Message

Local disk [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: equipment-degraded
mibFaultCode: 996
mibFaultName: fltStorageLocalDiskDegraded
moClass: storage:LocalDisk
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]
```


fltStorageRaidBatteryDegraded

Fault Code: F0997

Message

RAID Battery on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]RAID Battery on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: equipment-degraded
mibFaultCode: 997
mibFaultName: fltStorageRaidBatteryDegraded
moClass: storage:RaidBattery
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/raid-battery
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/raid-battery

fltStorageRaidBatteryRelearnAborted

Fault Code: F0998

Message

RAID Battery on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]RAID Battery on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: equipment-degraded
mibFaultCode: 998
mibFaultName: fltStorageRaidBatteryRelearnAborted
moClass: storage:RaidBattery
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: false
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/raid-battery
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/raid-battery

fltStorageRaidBatteryRelearnFailed

Fault Code: F0999

Message

RAID Battery on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]RAID Battery on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-degraded
mibFaultCode: 999
mibFaultName: fltStorageRaidBatteryRelearnFailed
moClass: storage:RaidBattery
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: false
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/raid-battery
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/raid-battery

fltStorageADefConfiguration-error

Fault Code: F1000

Message

Vsan trunking is not supported on Vhbas. Targets with overlapping path should have same vsan.

Explanation

Recommended Action

Fault Details

Severity: info
Cause: configuration-error
mibFaultCode: 1000
mibFaultName: fltStorageADefConfigurationError
moClass: storage:ADef
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/grp-[name]/fc-group/storage-conndef
Affected MO: org-[name]/san-conn-pol-[name]/grp-[name]/fc-group/storage-conndef
Affected MO: org-[name]/storage-connpolicy-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/grp-[name]/fc-group/storage-conndef

fltStorageInitiatorConfiguration-error

Fault Code: F1001

Message

Initiator [name] either cannot be resolved or does not match with one of the storage targets. No zones are deployed for this initiator and the target.

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: configuration-error
mibFaultCode: 1001
mibFaultName: fltStorageInitiatorConfigurationError
moClass: storage:Initiator
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/grp-[name]/ini-[name]
Affected MO: org-[name]/san-conn-pol-[name]/grp-[name]/ini-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/grp-[name]/ini-[name]
```

fltStorageVsanRefVsanUnresolvable

Fault Code: F1002

Message

The named vsan [name] for storage target cannot be resolved

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: referenced-vsan-unresolvable
mibFaultCode: 1002
mibFaultName: fltStorageVsanRefVsanUnresolvable
moClass: storage:VsanRef
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
org-[name]/ls-[name]/grp-[name]/fc-group/storage-conndef/fc-target-ep-[targetwwpn]/vsan-ref
Affected MO:
org-[name]/san-conn-pol-[name]/grp-[name]/fc-group/storage-conndef/fc-target-ep-[targetwwpn]/vsan-ref
```

Affected MO: org-[name]/storage-connpolicy-[name]/fc-target-ep-[targetwwpn]/vsan-ref
Affected MO:
 org-[name]/tier-[name]/ls-[name]/grp-[name]/fc-group/storage-conndef/fc-target-ep-[targetwwpn]/vsan-ref

fltStorageControllerPatrolReadFailed

Fault Code: F1003

Message

Controller [id] on server [chassisId]/[slotId] had a patrol read failure. Reason: [operQualifierReason]Controller [id] on server [id] had a patrol read failure. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: operation-failed
mibFaultCode: 1003
mibFaultName: fltStorageControllerPatrolReadFailed
moClass: storage:Controller
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: false
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]

fltStorageControllerInoperable

Fault Code: F1004

Message

Controller [id] on server [chassisId]/[slotId] is inoperable. Reason: [operQualifierReason]Controller [id] on server [id] is inoperable. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: equipment-inoperable
mibFaultCode: 1004
mibFaultName: fltStorageControllerInoperable
moClass: storage:Controller
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true

Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]

fltStorageLocalDiskRebuildFailed

Fault Code: F1005

Message

Local disk [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-offline
mibFaultCode: 1005
mibFaultName: fltStorageLocalDiskRebuildFailed
moClass: storage:LocalDisk
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: false
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]

fltStorageLocalDiskCopybackFailed

Fault Code: F1006

Message

Local disk [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Local disk [id] on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-offline
mibFaultCode: 1006
mibFaultName: fltStorageLocalDiskCopybackFailed
moClass: storage:LocalDisk
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true

Is Implemented: false
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]

fltStorageVirtualDriveInoperable

Fault Code: F1007

Message

Virtual drive [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: equipment-inoperable
mibFaultCode: 1007
mibFaultName: fltStorageVirtualDriveInoperable
moClass: storage:VirtualDrive
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]

fltStorageVirtualDriveDegraded

Fault Code: F1008

Message

Virtual drive [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-degraded
mibFaultCode: 1008
mibFaultName: fltStorageVirtualDriveDegraded
moClass: storage:VirtualDrive
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true

Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]

fltStorageVirtualDriveReconstructionFailed

Fault Code: F1009

Message

Virtual drive [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-degraded
mibFaultCode: 1009
mibFaultName: fltStorageVirtualDriveReconstructionFailed
moClass: storage:VirtualDrive
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: false
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]

fltStorageVirtualDriveConsistencyCheckFailed

Fault Code: F1010

Message

Virtual drive [id] on server [chassisId]/[slotId] operability: [operability]. Reason: [operQualifierReason]Virtual drive [id] on server [id] operability: [operability]. Reason: [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-degraded
mibFaultCode: 1010
mibFaultName: fltStorageVirtualDriveConsistencyCheckFailed
moClass: storage:VirtualDrive
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

Is Implemented: false
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]

fltAaaProviderGroupProvidergroup

Fault Code: F1026

Message

For [dn]: Server Group with name [name] already exist, You need to specify a unique name for this object.

Explanation

Recommended Action

Fault Details

Severity: major
Cause: provider-group-already-exists
mibFaultCode: 1026
mibFaultName: fltAaaProviderGroupProvidergroup
moClass: aaa:ProviderGroup
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/ldap-ext/providergroup-[name]
Affected MO: sys/radius-ext/providergroup-[name]
Affected MO: sys/tacacs-ext/providergroup-[name]

fltAaaConfigServergroup

Fault Code: F1027

Message

For [dn]: [realm] Server Group with name [providerGroup] doesn't exist or is not deployed.

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: invalid-server-group
mibFaultCode: 1027
mibFaultName: fltAaaConfigServergroup
moClass: aaa:Config
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/auth-realm/console-auth
Affected MO: sys/auth-realm/default-auth

Affected MO: sys/auth-realm/domain-[name]/domain-auth

fltAaaRoleRoleNotDeployed

Fault Code: F1028

Message

Role [name] can't be deployed. Error: [configStatusMessage]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: role-config-error
mibFaultCode: 1028
mibFaultName: fltAaaRoleRoleNotDeployed
moClass: aaa:Role
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/user-ext/role-[name]

fltAaaLocaleLocaleNotDeployed

Fault Code: F1029

Message

Locale [name] can't be deployed. Error: [configStatusMessage]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: locale-config-error
mibFaultCode: 1029
mibFaultName: fltAaaLocaleLocaleNotDeployed
moClass: aaa:Locale
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/user-ext/locale-[name]

fltAaaUserRoleUserRoleNotDeployed

Fault Code: F1030

Message

For user: [name] role [name] can't be assigned. Error: [configStatusMessage].For Ldap Group: [name] role [name] can't be assigned. Error: [configStatusMessage].

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: user-role-config-error
mibFaultCode: 1030
mibFaultName: fltAaaUserRoleUserRoleNotDeployed
moClass: aaa:UserRole
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/ldap-ext/ldapgroup-[name]/role-[name]
Affected MO: sys/user-ext/remotouser-[name]/role-[name]
Affected MO: sys/user-ext/user-[name]/role-[name]
```

fltAaaUserLocaleUserLocaleNotDeployed

Fault Code: F1031

Message

For user: [name] locale [name] can't be assigned. Error: [configStatusMessage].For Ldap Group: [name] locale [name] can't be assigned. Error: [configStatusMessage].

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: user-locale-config-error
mibFaultCode: 1031
mibFaultName: fltAaaUserLocaleUserLocaleNotDeployed
moClass: aaa:UserLocale
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/ldap-ext/ldapgroup-[name]/locale-[name]
Affected MO: sys/user-ext/remotouser-[name]/locale-[name]
Affected MO: sys/user-ext/user-[name]/locale-[name]
```

fltPkiKeyRingKeyRingNotDeployed

Fault Code: F1032

Message

Keyring [name] can't be deployed. Error: [configStatusMessage]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: keyring-config-error
mibFaultCode: 1032
mibFaultName: fltPkiKeyRingKeyRingNotDeployed
moClass: pki:KeyRing
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/pki-ext/keyring-[name]

fltCommSnmpSyscontactEmpty

Fault Code: F1033

Message

UCS Manager cannot deploy an empty value of SNMP Syscontact when Callhome is enabled. The previous value [sysContact] for SNMP Syscontact has been retained.

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: snmp-config-error
mibFaultCode: 1033
mibFaultName: fltCommSnmpSyscontactEmpty
moClass: comm:Snmp
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/svc-ext/snmp-svc

fltCommDateTimeCommTimeZoneInvalid

Fault Code: F1034

Message

Timezone:[timezone] is invalid

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: timezone-file-not-exists
mibFaultCode: 1034
mibFaultName: fltCommDateTimeCommTimeZoneInvalid
moClass: comm:DateTime
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/svc-ext/datetime-svc

fltAaaUserLocalUserNotDeployed

Fault Code: F1035

Message

Local User [name] can't be deployed. Error: [configStatusMessage]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: user-config-error
mibFaultCode: 1035
mibFaultName: fltAaaUserLocalUserNotDeployed
moClass: aaa:User
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/user-ext/user-[name]

fltCommSnmpUserSnmpUserNotDeployed

Fault Code: F1036

Message

SNMP User [name] can't be deployed. Error: [configStatusMessage]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: snmp-user-config-error
mibFaultCode: 1036
mibFaultName: fltCommSnmpUserSnmpUserNotDeployed
moClass: comm:SnmpUser
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/svc-ext/snmp-svc/snmpv3-user-[name]
```

fltCommSvcEpCommSvcNotDeployed

Fault Code: F1037

Message

Communication Service configuration can't be deployed. Error: [configStatusMessage]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: comm-svc-config-error
mibFaultCode: 1037
mibFaultName: fltCommSvcEpCommSvcNotDeployed
moClass: comm:SvcEp
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/svc-ext
```

fltComputeABoardPowerUsageProblem

Fault Code: F1040

Message

Motherboard [faultQualifier] of server [chassisId]/[slotId] (service profile: [assignedToDn])
powerUsage: [powerUsage]Motherboard of server [id] (service profile: [assignedToDn]) powerUsage:
[powerUsage]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: power-problem
mibFaultCode: 1040
mibFaultName: fltComputeABoardPowerUsageProblem
moClass: compute:ABoard
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]
Affected MO: sys/rack-unit-[id]/board
Affected MO: sys/rack-unit-[id]/ext-board-[id]

fltSwVlanPortNsVLANCompNotSupport

Fault Code: F1056

Message

VLAN Port Count Optimization is not supported

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: no-vlan-optimization
mibFaultCode: 1056
mibFaultName: fltSwVlanPortNsVLANCompNotSupport
moClass: sw:VlanPortNs
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true

Is Implemented: true
Affected MO: sys/switch-[id]/vlan-port-ns

fltPolicyControlEpSuspendModeActive

Fault Code: F1057

Message

UCSM is suspended from receiving updates from UCS Central.

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: suspend-mode-entered
mibFaultCode: 1057
mibFaultName: fltPolicyControlEpSuspendModeActive
moClass: policy:ControlEp
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/control-ep-[type]

fltNetworkElementThermalThresholdCritical

Fault Code: F1080

Message

Fabric Interconnect [id] temperature: [thermal]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: thermal-problem
mibFaultCode: 1080
mibFaultName: fltNetworkElementThermalThresholdCritical
moClass: network:Element
Type: environmental
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]

fltFabricFcoeSanPcEpDown

Fault Code: F1081

Message

[type] Member [slotId]/[portId] of Port-Channel [portId] on fabric interconnect [id] is down, membership: [membership]

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: membership-down
mibFaultCode: 1081
mibFaultName: fltFabricFcoeSanPcEpDown
moClass: fabric:FcoeSanPcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/san/[id]/fcoesanpc-[portId]/fcoesanpcep-slot-[slotId]-port-[portId]
```

fltFabricFcoeSanEpDown

Fault Code: F1082

Message

FCoE uplink port [slotId]/[portId] is down

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: membership-down
mibFaultCode: 1082
mibFaultName: fltFabricFcoeSanEpDown
moClass: fabric:FcoeSanEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]
```


fltFabricVsanMembershipDown

Fault Code: F1083

Message

FCoE or FC uplink is down on Vsan [vsanId]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: membership-down
mibFaultCode: 1083
mibFaultName: fltFabricVsanMembershipDown
moClass: fabric:VsanMembership
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/vsanmember-[vsanId]
Affected MO: fabric/san/[id]/pc-[portId]/vsanmember-[vsanId]
Affected MO:
 fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/vsanmember-[vsanId]
Affected MO: fabric/san/[id]/phys-slot-[slotId]-port-[portId]/vsanmember-[vsanId]

fltFabricFcoeSanEpUnsupported

Fault Code: F1084

Message

FCoE uplink port [slotId]/[portId] cannot be supported on springfields when FI is in eth endhost mode and FC switching mode

Explanation

Recommended Action

Fault Details

Severity: major
Cause: fcoe-uplink-unsupported-fi-settings
mibFaultCode: 1084
mibFaultName: fltFabricFcoeSanEpUnsupported
moClass: fabric:FcoeSanEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]

fltFabricFcoeSanPcDown

Fault Code: F1085

Message

FCoE uplink port channel [portId] is down

Explanation

Recommended Action

Fault Details

Severity: major
Cause: membership-down
mibFaultCode: 1085
mibFaultName: fltFabricFcoeSanPcDown
moClass: fabric:FcoeSanPc
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/fcoesanpc-[portId]

fltFabricFcoeSanPcUnsupported

Fault Code: F1086

Message

FCoE uplink port channel [portId] cannot be supported on springfields when FI is in eth endhost mode and FC switching mode

Explanation

Recommended Action

Fault Details

Severity: major
Cause: fcoe-uplink-port-channel-unsupported-fi-settings
mibFaultCode: 1086
mibFaultName: fltFabricFcoeSanPcUnsupported
moClass: fabric:FcoeSanPc
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/fcoesanpc-[portId]

fltFabricFcoeEstcEpDown

Fault Code: F1087

Message

FCoE storage port [slotId]/[portId] is down

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: membership-down
mibFaultCode: 1087
mibFaultName: fltFabricFcoeEstcEpDown
moClass: fabric:FcoeEstcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]
```

fltFabricPinTargetDown

Fault Code: F1088

Message

Pin target is a non-existent interface

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: invalid-target
mibFaultCode: 1088
mibFaultName: fltFabricPinTargetDown
moClass: fabric:PinTarget
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/lan-pin-group-[name]/target-[fabricId]
Affected MO: fabric/san/san-pin-group-[name]/target-[fabricId]
```

fltFabricExternalEpFcZoningEnable

Fault Code: F1089

Message

FC zoning is not supported from FI when connected to an uplink FC switch. Fabric: [switchId], Port: [slotId]/[portId].

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: fc-zoning-enabled
mibFaultCode: 1089
mibFaultName: fltFabricExternalEpFcZoningEnable
moClass: fabric:ExternalEp
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 fabric/eth-estc/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/eth-estc/[id]/pc-[portId]/eth-target-ep-[name]
Affected MO: fabric/eth-estc/[id]/phys-eth-slot-[slotId]-port-[portId]
Affected MO:
 fabric/eth-estc/[id]/phys-eth-slot-[slotId]-port-[portId]/eth-target-ep-[name]
Affected MO:
 fabric/eth-estc/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
 fabric/fc-estc/[id]/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
 fabric/fc-estc/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fc-slot-[slotId]-port-[portId]
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]
Affected MO:
 fabric/fc-estc/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
 fabric/fc-estc/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
 fabric/lan/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
 fabric/lan/[id]/net-group-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]
Affected MO: fabric/lan/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
 fabric/lan/net-group-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/lanmon/[id]/eth-mon-[name]/dest-slot-[slotId]-port-[portId]
Affected MO:
 fabric/san/[id]/fcoesanpc-[portId]/fcoesanpc-ep-slot-[slotId]-port-[portId]
Affected MO:
 fabric/san/[id]/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO:
 fabric/san/[id]/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]

```

Affected MO: fabric/san/[id]/phys-slot-[slotId]-port-[portId]
Affected MO:
fabric/san/net-[name]/phys-fcoe-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/san/net-[name]/phys-switch-[switchId]-slot-[slotId]-port-[portId]
Affected MO: fabric/sanmon/[id]/fc-mon-[name]/dest-slot-[slotId]-port-[portId]
Affected MO:
sys/switch-[id]/border-eth/ethestc-ep-slot-[slotId]port-[portId]/eth-target-[name]
Affected MO: sys/switch-[id]/border-eth/pc-[portId]/eth-target-[name]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/pc-[portId]/eth-target-[name]

```

fltFabricEthLanEpOverlapping-vlan

Fault Code: F1090

Message

On Fabric: [switchId], Port: [slotId]/[portId] following overlapping VLANs detected: [overlappingVlans]

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: configuration-error
mibFaultCode: 1090
mibFaultName: fltFabricEthLanEpOverlappingVlan
moClass: fabric:EthLanEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]

```

fltFabricEthLanPcOverlapping-vlan

Fault Code: F1091

Message

Overlapping VLANs detected on Fabric: [switchId], Port: [portId] in configured VLANs: [overlappingVlans]

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: configuration-error
mibFaultCode: 1091
mibFaultName: fltFabricEthLanPcOverlappingVlan
moClass: fabric:EthLanPc
Type: network

```

Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/[id]/pc-[portId]

fltFabricFcEstcEpFc-storage-port-invalid

Fault Code: F1092

Message

FC storage port should not be created in NPV mode

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: fc-storageport-npv-mode
mibFaultCode: 1092
mibFaultName: fltFabricFcEstcEpFcStoragePortInvalid
moClass: fabric:FcEstcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/fc-estc/[id]/phys-fc-slot-[slotId]-port-[portId]

fltFabricFcoeEstcEpFcoe-storage-port-invalid

Fault Code: F1093

Message

FCOE storage port should not be created in NPV mode

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: fcoe-storageport-npv-mode
mibFaultCode: 1093
mibFaultName: fltFabricFcoeEstcEpFcoeStoragePortInvalid
moClass: fabric:FcoeEstcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]

fltFabricFcSanPcFc-portchannel-members-invalid

Fault Code: F1094

Message

FC port channel member ports should have same max speed

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: fc-portchannel-members-inconsistent-speed
mibFaultCode: 1094
mibFaultName: fltFabricFcSanPcFcPortchannelMembersInvalid
moClass: fabric:FcSanPc
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]
```

fltFabricVlanMisconfigured-mcast-policy

Fault Code: F1095

Message

VLAN [name] multicast policy [mcastPolicyName] is non-default.

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: vlan-mcast-policy-misconfigured
mibFaultCode: 1095
mibFaultName: fltFabricVlanMisconfiguredMcastPolicy
moClass: fabric:Vlan
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltMgmtConnectionDisabled

Fault Code: F1097

Message

Management Connection [type] in server [id] is not operational

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: another-connection-already-enabled
mibFaultCode: 1097
mibFaultName: fltMgmtConnectionDisabled
moClass: mgmt:Connection
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/switch-[id]/mgmt/mgmt-connection-[type]

fltMgmtConnectionUnused

Fault Code: F1098

Message

Management Connection [type] in server [id] is unused

Explanation

Recommended Action

Fault Details

Severity: info


```

Cause: connection-unused
mibFaultCode: 1098
mibFaultName: fltMgmtConnectionUnused
moClass: mgmt:Connection
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/mgmt-connection-[t
ype]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/switch-[id]/mgmt/mgmt-connection-[type]

```

fltMgmtConnectionUnsupportedConnectivity

Fault Code: F1099

Message

Unsupported connectivity for management connection [type] in server [id]

Explanation

Recommended Action

Fault Details

```

Severity: minor
Cause: unsupported-connectivity
mibFaultCode: 1099
mibFaultName: fltMgmtConnectionUnsupportedConnectivity
moClass: mgmt:Connection
Type: operational
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/mgmt-connection-[t
ype]

```

Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/mgmt-connection-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO:
 sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/rack-unit-[id]/mgmt/mgmt-connection-[type]
Affected MO: sys/switch-[id]/mgmt/mgmt-connection-[type]

fltCallhomeEpNoSnmppolicyForCallhome

Fault Code: F1102

Message

UCS Manager cannot apply Callhome policy if SNMP Policy is not configured or if SNMP Syscontact has an empty value. The Callhome policy from UCS Central has not been applied.

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: callhome-config-error
mibFaultCode: 1102
mibFaultName: fltCallhomeEpNoSnmppolicyForCallhome
moClass: callhome:Ep
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: call-home

fltCapabilityCatalogueLoadErrors

Fault Code: F1103

Message

Load errors: File parse errors: [fileParseFailures], provider load failures: [providerLoadFailures], XML element load errors: [loadErrors].

Explanation

Recommended Action

Fault Details

Severity: major

```

Cause: load-catalog-failed
mibFaultCode: 1103
mibFaultName: fltCapabilityCatalogueLoadErrors
moClass: capability:Catalogue
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: capabilities

```

fltExtmgmtArpTargetsArpTargetsNotValid

Fault Code: F1114

Message

Invalid ARP Targets configured for Management Interface Polling. Error: [configStatusMessage]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: arp-targets-config-error
mibFaultCode: 1114
mibFaultName: fltExtmgmtArpTargetsArpTargetsNotValid
moClass: extmgmt:ArpTargets
Type: management
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/extmgmt-intf-monitor-policy/arp-target-policy

```

fltVnicFcPinningMisconfig

Fault Code: F1209

Message

Hard pinning target for vHBA [name], service profile [name] is missing or misconfigured

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: pinning-misconfig
mibFaultCode: 1209
mibFaultName: fltVnicFcPinningMisconfig
moClass: vnic:Fc
Type: configuration
Callhome: none
Callhome Enabled: no

```

```

Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/fc-[name]
Affected MO: org-[name]/san-conn-pol-[name]/fc-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/fc-[name]

```

fltExtpolClientGracePeriodWarning

Fault Code: F1211

Message

UCS domain [name] registered with UCS Central has entered into the grace period.

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: license-graceperiod-entered
mibFaultCode: 1211
mibFaultName: fltExtpolClientGracePeriodWarning
moClass: extpol:Client
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: extpol/reg/clients/client-[id]

```

fltExtpolClientGracePeriodWarning2

Fault Code: F1212

Message

UCS Domain [name] registered with UCS Central is running in the grace period for more than 10 days

Explanation

Recommended Action

Fault Details

```

Severity: warning
Cause: license-graceperiod-10days
mibFaultCode: 1212
mibFaultName: fltExtpolClientGracePeriodWarning2
moClass: extpol:Client
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: extpol/reg/clients/client-[id]

```

fltExtpolClientGracePeriodWarning3

Fault Code: F1213

Message

UCS Domain [name] registered with UCS Central is running in the grace period for more than 30 days

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: license-graceperiod-30days
mibFaultCode: 1213
mibFaultName: fltExtpolClientGracePeriodWarning3
moClass: extpol:Client
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: extpol/reg/clients/client-[id]

fltExtpolClientGracePeriodWarning4

Fault Code: F1214

Message

UCS Domain [name] registered with UCS Central is running in the grace period for more than 60 days

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: license-graceperiod-60days
mibFaultCode: 1214
mibFaultName: fltExtpolClientGracePeriodWarning4
moClass: extpol:Client
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: extpol/reg/clients/client-[id]

fltExtpolClientGracePeriodWarning5

Fault Code: F1215

Message

UCS Domain [name] registered with UCS Central is running in the grace period for more than 90 days

Explanation

Recommended Action

Fault Details

Severity: major
Cause: license-graceperiod-90days
mibFaultCode: 1215
mibFaultName: fltExtpolClientGracePeriodWarning5
moClass: extpol:Client
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: extpol/reg/clients/client-[id]

fltExtpolClientGracePeriodWarning6

Fault Code: F1216

Message

UCS Domain [name] registered with UCS Central is running in the grace period for more than 119 days

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: license-graceperiod-119days
mibFaultCode: 1216
mibFaultName: fltExtpolClientGracePeriodWarning6
moClass: extpol:Client
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: extpol/reg/clients/client-[id]

fltExtpolClientGracePeriodWarning7

Fault Code: F1217

Message

Grace period for UCS Domain [name] registered with UCS Central has expired. Please acquire a license for the same.

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: license-graceperiod-expired
mibFaultCode: 1217
mibFaultName: fltExtpolClientGracePeriodWarning7
moClass: extpol:Client
Type: management
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: extpol/reg/clients/client-[id]
```

fltExtpolClientGracePeriodWarning1

Fault Code: F1218

Message

UCS Domain [name] is registered with UCS Central without a valid license.

Explanation

Recommended Action

Fault Details

```
Severity: critical
Cause: license-insufficient
mibFaultCode: 1218
mibFaultName: fltExtpolClientGracePeriodWarning1
moClass: extpol:Client
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: extpol/reg/clients/client-[id]
```

fltStorageItemFilesystemIssues

Fault Code: F1219

Message

Partition [name] on fabric interconnect [id] has file system errors

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-degraded
mibFaultCode: 1219
mibFaultName: fltStorageItemFilesystemIssues
moClass: storage:Item
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/stor-part-[name]

fltStorageInitiatorDuplicate-fc-zone

Fault Code: F1220

Message

Duplicate FC zones are created for initiator [name], because the same target wwpn [duplicateTarget] is duplicately configured in both boot and storage connection policy.

Explanation

Recommended Action

Fault Details

Severity: info
Cause: configuration-error
mibFaultCode: 1220
mibFaultName: fltStorageInitiatorDuplicateFcZone
moClass: storage:Initiator
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/grp-[name]/ini-[name]
Affected MO: org-[name]/san-conn-pol-[name]/grp-[name]/ini-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/grp-[name]/ini-[name]

fltStorageIniGroupSwitch-mode-disabled

Fault Code: F1221

Message

FC zones cannot be deployed because FI is not running in FC switch mode.

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: configuration-error
mibFaultCode: 1221
mibFaultName: fltStorageIniGroupSwitchModeDisabled
moClass: storage:IniGroup
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/grp-[name]
Affected MO: org-[name]/san-conn-pol-[name]/grp-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/grp-[name]
```

fltPkiKeyRingModulus

Fault Code: F1222

Message

[name] Keyring's key modulus is invalid.

Explanation

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: invalid-keyring-modulus
mibFaultCode: 1222
mibFaultName: fltPkiKeyRingModulus
moClass: pki:KeyRing
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/pki-ext/keyring-[name]
```

fltAaaOrgLocaleOrgNotPresent

Fault Code: F1223

Message

Locale Org [name] can't be deployed. Error: [configStatusMessage]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: locale-org-config-error
mibFaultCode: 1223
mibFaultName: fltAaaOrgLocaleOrgNotPresent
moClass: aaa:Org
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/user-ext/locale-[name]/org-[name]

fltNetworkOperLevelExtraprimaryvlans

Fault Code: F1229

Message

Fabric Interconnect [id]: Number of primary vlans exceeds the max limit on the FI: Number of Primary Vlans: [primaryVlanCount] and Max primary vlans allowed: [maxPrimaryVlanCount]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: extra-primary-vlans
mibFaultCode: 1229
mibFaultName: fltNetworkOperLevelExtraprimaryvlans
moClass: network:OperLevel
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/oper-level

fltEquipmentHealthLedCriticalError

Fault Code: F1236

Message

Health LED of server [chassisId]/[slotId] shows error. Reason: [healthLedStateQualifier]Health LED of server [id] shows error. Reason: [healthLedStateQualifier]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: health-led-amber-blinking
mibFaultCode: 1236
mibFaultName: fltEquipmentHealthLedCriticalError
moClass: equipment:HealthLed
Type: equipment
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/health-led
Affected MO: sys/chassis-[id]/blade-[slotId]/health-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/chassis-[id]/health-led
Affected MO: sys/chassis-[id]/psu-[id]/health-led
Affected MO: sys/chassis-[id]/slot-[id]/health-led
Affected MO: sys/fex-[id]/health-led
Affected MO: sys/fex-[id]/psu-[id]/health-led
Affected MO: sys/fex-[id]/slot-[id]/health-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/health-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/rack-unit-[id]/health-led
Affected MO: sys/rack-unit-[id]/psu-[id]/health-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/switch-[id]/psu-[id]/health-led

fltEquipmentHealthLedMinorError

Fault Code: F1237

Message

Health LED of server [chassisId]/[slotId] shows error. Reason: [healthLedStateQualifier]Health LED of server [id] shows error. Reason: [healthLedStateQualifier]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: health-led-amber
mibFaultCode: 1237

```

mibFaultName: fltEquipmentHealthLedMinorError
moClass: equipment:HealthLed
Type: equipment
Callhome: environmental
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/health-led
Affected MO: sys/chassis-[id]/blade-[slotId]/health-led
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/chassis-[id]/health-led
Affected MO: sys/chassis-[id]/psu-[id]/health-led
Affected MO: sys/chassis-[id]/slot-[id]/health-led
Affected MO: sys/fex-[id]/health-led
Affected MO: sys/fex-[id]/psu-[id]/health-led
Affected MO: sys/fex-[id]/slot-[id]/health-led
Affected MO: sys/rack-unit-[id]/ext-board-[id]/health-led
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/rack-unit-[id]/health-led
Affected MO: sys/rack-unit-[id]/psu-[id]/health-led
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/health-led
Affected MO: sys/switch-[id]/psu-[id]/health-led

```

fltVnicEtherIfRemoteVlanUnresolvable

Fault Code: F1249

Message

The named vlan [name] for vNIC [name] cannot be resolved remotely

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```

Severity: warning
Cause: referenced-remote-vlan-unresolvable
mibFaultCode: 1249
mibFaultName: fltVnicEtherIfRemoteVlanUnresolvable
moClass: vnic:EtherIf
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/lan/network-sets/fabric-network-[name]/fabric-network-def-[name]/vm-network-def-
-[name]/if-[name]
Affected MO: fabric/lan/profiles/vnic-[name]/if-[name]
Affected MO: fabric/lanmon/eth-flow-monitoring/flow-exporter-profile-[name]/if-[name]
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/lan-conn-templ-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/ls-[name]/if-[name]

```

```

Affected MO: org-[name]/ls-[name]/ipc-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/if-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ipc-[name]/if-[name]

```

fltVnicFcIfRemoteVsanUnresolvable

Fault Code: F1250

Message

The named vsan [name] for vNIC [name] cannot be resolved remotely

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```

Severity: warning
Cause: referenced-remote-vsan-unresolvable
mibFaultCode: 1250
mibFaultName: fltVnicFcIfRemoteVsanUnresolvable
moClass: vnic:FcIf
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/fc-[name]/if-default
Affected MO: org-[name]/san-conn-pol-[name]/fc-[name]/if-default
Affected MO: org-[name]/san-conn-templ-[name]/if-default
Affected MO: org-[name]/tier-[name]/ls-[name]/fc-[name]/if-default

```

fltVnicEtherVirtualization-conflict

Fault Code: F1251

Message

Multiple connection policies cannot be assigned to the same Eth vNIC

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: multiple-connection-policies
mibFaultCode: 1251
mibFaultName: fltVnicEtherVirtualizationConflict
moClass: vnic:Ether

```

```

Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]

```

fltLsIssuesIscsi-config-failed

Fault Code: F1252

Message

Service Profile [name] configuration failed due to iSCSI issue [iscsiConfigIssues]

Explanation

Recommended Action

Fault Details

```

Severity: major
Cause: configuration-failed
mibFaultCode: 1252
mibFaultName: fltLsIssuesIscsiConfigFailed
moClass: ls:Issues
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/config-issue
Affected MO: org-[name]/tier-[name]/ls-[name]/config-issue

```

fltStorageLocalDiskMissing

Fault Code: F1256

Message

Local disk [id] missing on server [chassisId]/[slotId]Local disk [id] missing on server [id]

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: equipment-missing
mibFaultCode: 1256
mibFaultName: fltStorageLocalDiskMissing
moClass: storage:LocalDisk
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]

fltStorageFlexFlashControllerInoperable

Fault Code: F1257

Message

FlexFlash Controller [id] on server [chassisId]/[slotId] is inoperable. Reason: [operQualifierReason]
 Status: [controllerHealth]FlexFlash Controller [id] on server [id] is inoperable. Reason:
 [operQualifierReason] Status: [controllerHealth]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-inoperable
mibFaultCode: 1257
mibFaultName: fltStorageFlexFlashControllerInoperable
moClass: storage:FlexFlashController
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]

fltStorageFlexFlashCardInoperable

Fault Code: F1258

Message

FlexFlash Card [slotNumber] on server [chassisId]/[slotId] is inoperable. Reason:
 [operQualifierReason]FlexFlash Card [slotNumber] on server [id] is inoperable. Reason:
 [operQualifierReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-inoperable
mibFaultCode: 1258
mibFaultName: fltStorageFlexFlashCardInoperable
moClass: storage:FlexFlashCard
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/card-[slotNumber]

```

fltStorageFlexFlashCardMissing

Fault Code: F1259

Message

FlexFlash Card [slotNumber] missing on server [chassisId]/[slotId]FlexFlash Card [slotNumber] missing on server [id]

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: equipment-missing
mibFaultCode: 1259
mibFaultName: fltStorageFlexFlashCardMissing
moClass: storage:FlexFlashCard
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/card-[slotNumber]

```

fltStorageFlexFlashVirtualDriveDegraded

Fault Code: F1260

Message

FlexFlash Virtual Drive RAID degraded on server [chassisId]/[slotId]. Reason: [raidState]FlexFlash Virtual Drive RAID degraded on server [id]. Reason: [raidState]

Explanation

Recommended Action

Fault Details

```

Severity: minor
Cause: equipment-degraded
mibFaultCode: 1260
mibFaultName: fltStorageFlexFlashVirtualDriveDegraded
moClass: storage:FlexFlashVirtualDrive
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```


Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/vd-[id]

fltStorageFlexFlashVirtualDriveInoperable

Fault Code: F1261

Message

FlexFlash Virtual Drive on server [chassisId]/[slotId] is inoperable. Reason: [raidState]FlexFlash Virtual Drive on server [id] is inoperable. Reason: [raidState]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: equipment-inoperable
mibFaultCode: 1261
mibFaultName: fltStorageFlexFlashVirtualDriveInoperable
moClass: storage:FlexFlashVirtualDrive
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/vd-[id]

fltStorageFlexFlashControllerUnhealthy

Fault Code: F1262

Message

FlexFlash Controller [id] on server [chassisId]/[slotId] is unhealthy. Reason: [operQualifierReason] Status: [controllerHealth]FlexFlash Controller [id] on server [id] is unhealthy. Reason: [operQualifierReason] Status: [controllerHealth]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: equipment-unhealthy
mibFaultCode: 1262
mibFaultName: fltStorageFlexFlashControllerUnhealthy
moClass: storage:FlexFlashController
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]

fltAaaProviderGroupProvidergroupsize

Fault Code: F1279

Message

For [dn]: Server Group [name] has [size] provider references. Authentication might fail, if this provider group is used with auth-domain.

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: provider-group-size-empty
mibFaultCode: 1279
mibFaultName: fltAaaProviderGroupProvidergroupsize
moClass: aaa:ProviderGroup
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/ldap-ext/providergroup-[name]
Affected MO: sys/radius-ext/providergroup-[name]
Affected MO: sys/tacacs-ext/providergroup-[name]

fltFirmwareAutoSyncPolicyDefaultHostPackageMissing

Fault Code: F1284

Message

Default host firmware package is missing or deleted.

Explanation

Recommended Action

Fault Details

Severity: major
Cause: default-hostpack-missing
mibFaultCode: 1284
mibFaultName: fltFirmwareAutoSyncPolicyDefaultHostPackageMissing
moClass: firmware:AutoSyncPolicy
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/fw-auto-sync

fltFirmwareAutoSyncPolicyDefaultHostPackageMissingVersions

Fault Code: F1285

Message

B-series and C-series package versions are empty in default host firmware package

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: default-hostpack-missing-versions
mibFaultCode: 1285
mibFaultName: fltFirmwareAutoSyncPolicyDefaultHostPackageMissingVersions
moClass: firmware:AutoSyncPolicy
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/fw-auto-sync

fltFabricNetflowMonSessionFlowMonConfigFail

Fault Code: F1304

Message

Configuration for traffic flow monitor [name] failed, reason: [configFailReason]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: config-error
mibFaultCode: 1304
mibFaultName: fltFabricNetflowMonSessionFlowMonConfigFail
moClass: fabric:NetflowMonSession
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lanmon/eth-flow-monitoring/netflow-mon-[name]

fltFabricNetflowMonSessionNetflowSessionConfigFail

Fault Code: F1305

Message

Netflow session configuration failed because [configQualifier]

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: config-error
mibFaultCode: 1305
mibFaultName: fltFabricNetflowMonSessionNetflowSessionConfigFail
moClass: fabric:NetflowMonSession
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lanmon/eth-flow-monitoring/netflow-mon-[name]
```

fltFabricPooledVlanNamedVlanUnresolved

Fault Code: F1306

Message

VLAN [name] for VLAN group [name] cannot be resolved to any existing vlans.

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: named-vlan-unresolved
mibFaultCode: 1306
mibFaultName: fltFabricPooledVlanNamedVlanUnresolved
moClass: fabric:PooledVlan
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/[id]/net-group-[name]/net-[name]
Affected MO: fabric/lan/net-group-[name]/net-[name]
```

fltExtvmmVMNDRefVmNetworkReferenceIncorrect

Fault Code: F1320

Message

VM Network [name] references [vmNetworkDefName] that is already being referenced by another VM Network

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: vm-network-reference-incorrect
mibFaultCode: 1320
mibFaultName: fltExtvmmVMNDRefVmNetworkReferenceIncorrect
moClass: extvmm:VMNDRef
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/vm-network-sets/vm-network-[name]/vm-network-def-ref[name]
```

fltExtmgmtNdiscTargetsNdiscTargetsNotValid

Fault Code: F1321

Message

Invalid NDISC Targets configured for Management Interface Polling. Error: [configStatusMessage]

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: ndisc-targets-config-error
mibFaultCode: 1321
mibFaultName: fltExtmgmtNdiscTargetsNdiscTargetsNotValid
moClass: extmgmt:NdiscTargets
Type: management
Callhome: diagnostic
Callhome Enabled: yes
```

Auto Cleared: true
Is Implemented: true
Affected MO: sys/extmgmt-intf-monitor-policy/ndisc-target-policy

fltFirmwareBootUnitPowerCycleRequired

Fault Code: F1325

Message

Board controller upgraded, manual a/c power cycle required on server [serverId]

Explanation

None set.

Recommended Action

Fault Details

Severity: critical
Cause: board-ctrl-upgraded
mibFaultCode: 1325
mibFaultName: fltFirmwareBootUnitPowerCycleRequired
moClass: firmware:BootUnit
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: capabilities/ep/mgmt-ext/fw-boot-def/bootunit-[type]
Affected MO: capabilities/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/bios/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fw-boot-def/bootunit-[type]

Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/graphics-card-[id]/fw-boot-def/bootunit-[type]
Affected MO:
 sys/rack-unit-[id]/board/storage-[type]-[id]/disk-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/bios/fw-boot-def/bootunit-[type]
Affected MO:
 sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/rack-unit-[id]/mgmt/fw-boot-def/bootunit-[type]
Affected MO: sys/switch-[id]/mgmt/fw-boot-def/bootunit-[type]

fltMgmtControllerUnsupportedDimmBlacklisting

Fault Code: F1328

Message

Dimm blacklisting is not supported on server [chassisId]/[slotId]Dimm blacklisting is not supported on server [id]

Explanation

Recommended Action

Fault Details

Severity: info
Cause: incompatible-server-firmware
mibFaultCode: 1328
mibFaultName: fltMgmtControllerUnsupportedDimmBlacklisting
moClass: mgmt:Controller
Type: environmental
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt
Affected MO: sys/chassis-[id]/slot-[id]/mgmt
Affected MO: sys/fex-[id]/mgmt
Affected MO: sys/fex-[id]/slot-[id]/mgmt
Affected MO: sys/mgmt
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt
Affected MO: sys/rack-unit-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt
Affected MO: sys/rack-unit-[id]/mgmt
Affected MO: sys/switch-[id]/mgmt

fltFabricEthLanEpUdldLinkDown

Fault Code: F1358

Message

UDLD state for ether port [slotId]/[portId] on fabric interconnect [switchId] is: [udldOperState].

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: udld-link-down
mibFaultCode: 1358
mibFaultName: fltFabricEthLanEpUdldLinkDown
moClass: fabric:EthLanEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/[id]/phys-slot-[slotId]-port-[portId]

fltFabricEthLanPcEpUdldLinkDown

Fault Code: F1359

Message

UDLD state for ether port [slotId]/[portId] on fabric interconnect [switchId] is: [udldOperState].

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: udld-link-down
mibFaultCode: 1359
mibFaultName: fltFabricEthLanPcEpUdldLinkDown
moClass: fabric:EthLanPcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/[id]/pc-[portId]/ep-slot-[slotId]-port-[portId]

fltFabricFcoeSanEpUddLinkDown

Fault Code: F1360

Message

UDLD state for ether port [slotId]/[portId] on fabric interconnect [switchId] is: [udldOperState].

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: udd-link-down
mibFaultCode: 1360
mibFaultName: fltFabricFcoeSanEpUddLinkDown
moClass: fabric:FcoeSanEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]
```

fltFabricFcoeSanPcEpUddLinkDown

Fault Code: F1361

Message

UDLD state for ether port [slotId]/[portId] on fabric interconnect [switchId] is: [udldOperState].

Explanation

Recommended Action

Fault Details

```
Severity: warning
Cause: udd-link-down
mibFaultCode: 1361
mibFaultName: fltFabricFcoeSanPcEpUddLinkDown
moClass: fabric:FcoeSanPcEp
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoesanpc-slot-[slotId]-port-[portId]
```

fltFirmwareStatusCimcFirmwareMismatch

Fault Code: F1365

Message

Aggregate blade CIMC firmware mismatch. Firmware: [cimcVersion]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: cimc-firmware-mismatch
mibFaultCode: 1365
mibFaultName: fltFirmwareStatusCimcFirmwareMismatch
moClass: firmware:Status
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/fw-status
Affected MO: sys/chassis-[id]/slot-[id]/fw-status
Affected MO: sys/fex-[id]/slot-[id]/fw-status
Affected MO: sys/fw-status
Affected MO: sys/rack-unit-[id]/fw-status
Affected MO: sys/switch-[id]/fw-status

fltFirmwareStatusPldFirmwareMismatch

Fault Code: F1366

Message

Aggregate blade board controller firmware mismatch. Firmware: [pldVersion]

Explanation

Recommended Action

Fault Details

Severity: critical
Cause: pld-firmware-mismatch
mibFaultCode: 1366
mibFaultName: fltFirmwareStatusPldFirmwareMismatch
moClass: firmware:Status
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/fw-status
Affected MO: sys/chassis-[id]/slot-[id]/fw-status
Affected MO: sys/fex-[id]/slot-[id]/fw-status
Affected MO: sys/fw-status
Affected MO: sys/rack-unit-[id]/fw-status

Affected MO: sys/switch-[id]/fw-status

fltSysdebugLogExportStatusLogExportFailure

Fault Code: F1369

Message

Log export to remote server failed from [switchId]:[exportFailureReason]

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: server-error
mibFaultCode: 1369
mibFaultName: fltSysdebugLogExportStatusLogExportFailure
moClass: sysdebug:LogExportStatus
Type: sysdebug
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/sysdebug/log-export-policy/log-export-status-[switchId]

fltVnicEtherVirtualization-netflow-conflict

Fault Code: F1380

Message

Netflow and VMQ/SRIOV-USNIC policies cannot be assigned to the same Eth vNIC

Explanation

Recommended Action

Fault Details

Severity: major
Cause: multiple-connection-policies
mibFaultCode: 1380
mibFaultName: fltVnicEtherVirtualizationNetflowConflict
moClass: vnic:Ether
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]

fltFabricVlanPrimaryVlanMissingForIsolated

Fault Code: F1382

Message

Primary Vlan can not be resolved for isolated vlan [name]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: primary-vlan-missing-for-isolated
mibFaultCode: 1382
mibFaultName: fltFabricVlanPrimaryVlanMissingForIsolated
moClass: fabric:Vlan
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]

fltFabricVlanPrimaryVlanMissingForCommunity

Fault Code: F1383

Message

Primary Vlan can not be resolved for community vlan [name]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: primary-vlan-missing-for-community
mibFaultCode: 1383
mibFaultName: fltFabricVlanPrimaryVlanMissingForCommunity
moClass: fabric:Vlan
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]

fltFabricVlanMismatch-a

Fault Code: F1384

Message

VLAN [name] has [overlapStateForA] with another vlan under lan-cloud/appliance-cloud for the fabric interconnect A

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: vlan-mismatch
mibFaultCode: 1384
mibFaultName: fltFabricVlanMismatchA
moClass: fabric:Vlan
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltFabricVlanMismatch-b

Fault Code: F1385

Message

VLAN [name] has [overlapStateForB] with another vlan under lan-cloud/appliance-cloud for the fabric interconnect B

Explanation

Recommended Action

Fault Details

```
Severity: major
Cause: vlan-mismatch
mibFaultCode: 1385
mibFaultName: fltFabricVlanMismatchB
moClass: fabric:Vlan
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]
```

fltFabricVlanErrorAssocPrimary

Fault Code: F1386

Message

VLAN [name] is in error state because the associated primary vlan [assocPrimaryVlanState]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: vlan-error-assoc-primary
mibFaultCode: 1386
mibFaultName: fltFabricVlanErrorAssocPrimary
moClass: fabric:Vlan
Type: network
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/net-[name]
Affected MO: fabric/eth-estc/net-[name]
Affected MO: fabric/lan/[id]/net-[name]
Affected MO: fabric/lan/net-[name]

fltLsServerSvnicNotPresent

Fault Code: F1388

Message

Service profile [name] does not contain service vnics for netflow.

Explanation

Recommended Action

Fault Details

Severity: warning
Cause: svnic-not-present
mibFaultCode: 1388
mibFaultName: fltLsServerSvnicNotPresent
moClass: ls:Server
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]

fltLsIssuesKvmPolicyUnsupported

Fault Code: F1389

Message

Kvm mgmt policy not supported by current CIMC version

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: minor
Cause: unsupported-cimc-firmware
mibFaultCode: 1389
mibFaultName: fltLsIssuesKvmPolicyUnsupported
moClass: ls:Issues
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/config-issue
Affected MO: org-[name]/tier-[name]/ls-[name]/config-issue
```

fltMgmtBackupPolicyConfigConfiguration backup outdated

Fault Code: F1392

Message

Config backup may be outdated

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: config-backup-outdated
mibFaultCode: 1392
mibFaultName: fltMgmtBackupPolicyConfigConfigurationBackupOutdated
moClass: mgmt:BackupPolicyConfig
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/bkup-policy-cfg
```

fltNetworkOperLevelExtrasecondaryvlans

Fault Code: F1396

Message

Fabric Interconnect [id]: Number of secondary vlans exceeds the max limit on the FI: Number of secondary vlans: [secondaryVlanCount] and Max secondary vlans allowed: [maxSecondaryVlanCount]

Explanation

Recommended Action

Fault Details

Severity: major
Cause: extra-secondary-vlans
mibFaultCode: 1396
mibFaultName: fltNetworkOperLevelExtrasecondaryvlans
moClass: network:OperLevel
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/oper-level

fltSwVlanExtrasecondaryvlansperprimary

Fault Code: F1397

Message

Number of secondary vlans associated with the primary vlan [id] in Fabric Interconnect [switchId] exceeds the max limit: Number of secondary vlans: [secVlanPerPrimaryVlanCount] and Max secondary vlans allowed in a primary vlan: 30

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: extra-secondary-vlans-per-primary
mibFaultCode: 1397
mibFaultName: fltSwVlanExtrasecondaryvlansperprimary
moClass: sw:Vlan
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/lan/profiles/vnic-[name]/vlan-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO:
sys/chassis-[id]/blade-[slotId]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO:
sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO: sys/chassis-[id]/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/chassis-[id]/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/chassis-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO: sys/fex-[id]/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/fex-[id]/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/fex-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/fex-[id]/slot-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO: sys/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO:
sys/rack-unit-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO:
sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO:
sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO:
sys/rack-unit-[id]/ext-board-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO: sys/rack-unit-[id]/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/rack-unit-[id]/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]

Affected MO: sys/rack-unit-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]

Affected MO: sys/switch-[id]/border-eth/ep-slot-[slotId]port-[portId]/vlan-[id]

Affected MO:
sys/switch-[id]/border-eth/esthstc-ep-slot-[slotId]port-[portId]/vlan-[id]

Affected MO: sys/switch-[id]/border-eth/pc-[portId]/vlan-[id]

Affected MO: sys/switch-[id]/border-eth/vlan-[id]

Affected MO:
 sys/switch-[id]/border-fc/fcoeestc-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-fc/fcoesan-ep-slot-[slotId]port-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-fc/fcoesan-pc-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/border-fc/vlan-[id]
Affected MO: sys/switch-[id]/ethlanflowmon/flowexporter-netflow-[name]/vlan-[id]
Affected MO: sys/switch-[id]/ethlanflowmon/vc-[id]/vlan-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/pc-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vc-[id]/vlan-[id]
Affected MO: sys/switch-[id]/lanmon-eth/mon-[name]/vlan-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/path-[id]/vc-[id]/vlan-[id]
Affected MO: sys/switch-[id]/mgmt/fabric-[switchId]/vc-[id]/vlan-[id]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/fcoesan-pc-[portId]/vlan-[id]
Affected MO: sys/switch-[id]/sanmon-fc/mon-[name]/vc-[id]/vlan-[id]

fltCimcvmediaActualMountEntryVmediaMountFailed

Fault Code: F1404

Message

Server [chassisId]/[slotId] (service profile: [assignedToDn]) vmedia mapping [mappingName] has failed. Server [id] (service profile: [assignedToDn]) vmedia mapping [mappingName] has failed.

Explanation

None set.

Recommended Action

Fault Details

Severity: major
Cause: vmedia-mount-inaccessible
mibFaultCode: 1404
mibFaultName: fltCimcvmediaActualMountEntryVmediaMountFailed
moClass: cimcvmedia:ActualMountEntry
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
 sys/chassis-[id]/slot-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/fex-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO:
 sys/fex-[id]/slot-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]

Affected MO: sys/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/rack-unit-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]
Affected MO: sys/switch-[id]/mgmt/actual-mount-list/actual-mount-entry-[virtualDiskId]

fltEquipmentTpmSlaveTpm

Fault Code: F1439

Message

Server [chassisId]/[slotId], has a Tpm present on the Slave Board.

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

Severity: info
Cause: tpm-on-slave-board
mibFaultCode: 1439
mibFaultName: fltEquipmentTpmSlaveTpm
moClass: equipment:Tpm
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/Tpm-[id]
Affected MO: sys/rack-unit-[id]/board/Tpm-[id]

fltStorageMezzFlashLifeConfiguration-error

Fault Code: F1448

Message

Flash Life on server [chassisId]/[slotId] flashStatus: [flashStatus]

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: configuration-error
mibFaultCode: 1448
mibFaultName: fltStorageMezzFlashLifeConfigurationError
moClass: storage:MezzFlashLife
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/flash-life-
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/flash-life-

fltStorageMezzFlashLifeDegraded**Fault Code:** F1449**Message**

Flash Life on server [chassisId]/[slotId] flashStatus: [flashStatus]

Explanation**Recommended Action****Fault Details**

Severity: warning
Cause: equipment-degraded
mibFaultCode: 1449
mibFaultName: fltStorageMezzFlashLifeDegraded
moClass: storage:MezzFlashLife
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/flash-life-
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/flash-life-

fltStorageFlexFlashControllerMismatch**Fault Code:** F1450**Message**

FlexFlash Controller [id] on server [chassisId]/[slotId] has SD cards with different sizes.FlexFlash Controller [id] on server [id] has SD cards with different sizes.

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: equipment-unhealthy
mibFaultCode: 1450
mibFaultName: fltStorageFlexFlashControllerMismatch
moClass: storage:FlexFlashController
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]

```

fltStorageFlexFlashDriveUnhealthy**Fault Code: F1451****Message**

FlexFlash Drive [id] on server [chassisId]/[slotId] is unhealthy. Reason: [operQualifierReason] Status: [operationState] FlexFlash Drive [id] on server [id] is unhealthy. Reason: [operQualifierReason] Status: [operationState]

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```

Severity: major
Cause: equipment-unhealthy
mibFaultCode: 1451
mibFaultName: fltStorageFlexFlashDriveUnhealthy
moClass: storage:FlexFlashDrive
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/card-[slotNumber]/drive-[
name]
Affected MO:
sys/rack-unit-[id]/board/storage-flexflash-[id]/card-[slotNumber]/drive-[name]

```

fltStorageFlexFlashCardUnhealthy

Fault Code: F1452

Message

FlexFlash Card [slotNumber] on server [chassisId]/[slotId] is unhealthy. Reason: [cardHealth]FlexFlash Card [slotNumber] on server [id] is unhealthy. Reason: [cardHealth]

Explanation

Recommended Action

Fault Details

```
Severity: minor
Cause: equipment-unhealthy
mibFaultCode: 1452
mibFaultName: fltStorageFlexFlashCardUnhealthy
moClass: storage:FlexFlashCard
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/storage-flexflash-[id]/card-[slotNumber]
Affected MO: sys/rack-unit-[id]/board/storage-flexflash-[id]/card-[slotNumber]
```

fltPoolElementDuplicatedAssigned

Fault Code: F1453

Message

ID is duplicated assigned for multiple servers(Check UCSC for details)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: major
Cause: duplicated-assigned
mibFaultCode: 1453
mibFaultName: fltPoolElementDuplicatedAssigned
moClass: pool:Element
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: ip/[id]
```

Affected MO: iqn/[name]
Affected MO: mac/[id]
Affected MO: uuid/[id]
Affected MO: wwn/[id]

fltMgmtInterfaceNamedInbandVlanUnresolved

Fault Code: F1454

Message

[configMessage]

Explanation

Recommended Action

Fault Details

Severity: minor
Cause: named-inband-vlan-unresolved
mibFaultCode: 1454
mibFaultName: fltMgmtInterfaceNamedInbandVlanUnresolved
moClass: mgmt:Interface
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/iface-[mode]
Affected MO: org-[name]/tier-[name]/ls-[name]/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/mgmt/iface-[mode]
Affected MO: sys/switch-[id]/mgmt/iface-[mode]

fltMgmtInterfaceInbandUnsupportedServer

Fault Code: F1455

Message

[configMessage]

Explanation**Recommended Action****Fault Details**

```

Severity: minor
Cause: inband-unsupported-server
mibFaultCode: 1455
mibFaultName: fltMgmtInterfaceInbandUnsupportedServer
moClass: mgmt:Interface
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/iface-[mode]
Affected MO: org-[name]/tier-[name]/ls-[name]/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/mgmt/iface-[mode]
Affected MO: sys/switch-[id]/mgmt/iface-[mode]

```

fltMgmtInterfaceInbandUnsupportedFirmware**Fault Code: F1456****Message**

[configMessage]

Explanation**Recommended Action****Fault Details**

```

Severity: minor
Cause: unsupported-cimc-firmware
mibFaultCode: 1456
mibFaultName: fltMgmtInterfaceInbandUnsupportedFirmware
moClass: mgmt:Interface
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]/iface-[mode]
Affected MO: org-[name]/tier-[name]/ls-[name]/iface-[mode]

```


Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/blade-[slotId]/mgmt/iface-[mode]
Affected MO: sys/chassis-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/mgmt/iface-[mode]
Affected MO: sys/fex-[id]/slot-[id]/mgmt/iface-[mode]
Affected MO: sys/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/boardController/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/ext-board-[id]/mgmt/iface-[mode]
Affected MO: sys/rack-unit-[id]/mgmt/iface-[mode]
Affected MO: sys/switch-[id]/mgmt/iface-[mode]

fltSwVlanPortNsResourceStatusWarning

Fault Code: F1464

Message

Total Available Vlan-Port Count on switch [switchId] is below 10%

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: near-max-limit
mibFaultCode: 1464
mibFaultName: fltSwVlanPortNsResourceStatusWarning
moClass: sw:VlanPortNs
Type: management
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/vlan-port-ns

fltNetworkElementMemoryerror

Fault Code: F1465

Message

Fabric Interconnect [id] memory less than expected! Total Memory: [totalMemory] and Expected Memory: [expectedMemory]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: memory-error
mibFaultCode: 1465
mibFaultName: fltNetworkElementMemoryerror
moClass: network:Element
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]

```

fltComputePhysicalAdapterMismatch**Fault Code: F1467****Message**

Server [id] (service profile: [assignedToDn]) has invalid adapter combinatonServer [chassisId]/[slotId] (service profile: [assignedToDn]) has invalid adapter combination

Explanation**Recommended Action****Fault Details**

```

Severity: critical
Cause: adaptor-mismatch
mibFaultCode: 1467
mibFaultName: fltComputePhysicalAdapterMismatch
moClass: compute:Physical
Type: equipment
Callhome: diagnostic
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]

```

fltStorageVirtualDriveDeployment-failure**Fault Code: F1621****Message**

Virtual drive [name] deployment failure. Reason: [configQualifierReason]

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: equipment-inoperable
mibFaultCode: 1621
mibFaultName: fltStorageVirtualDriveDeploymentFailure
moClass: storage:VirtualDrive
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]

```

fltStorageVirtualDriveMissing**Fault Code: F1622****Message**

Virtual drive [name] missing

Explanation**Recommended Action****Fault Details**

```

Severity: major
Cause: equipment-missing
mibFaultCode: 1622
mibFaultName: fltStorageVirtualDriveMissing
moClass: storage:VirtualDrive
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]

```

fltStorageVirtualDriveMismatch**Fault Code: F1623****Message**

Virtual drive [name] mismatch. Reason: [configQualifierReason]

Explanation**Recommended Action****Fault Details**

Severity: major
Cause: configuration-mismatch
mibFaultCode: 1623
mibFaultName: fltStorageVirtualDriveMismatch
moClass: storage:VirtualDrive
Type: equipment
Callhome: diagnostic
Callhome Enabled: yes
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]

fltStorageVDMemberEpMismatch**Fault Code:** F1624**Message**

Virtual drive member [id] in a mismatched state. Reason: [operQualifierReason]

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: configuration-mismatch
mibFaultCode: 1624
mibFaultName: fltStorageVDMemberEpMismatch
moClass: storage:VDMemberEp
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/storage-[type]-[id]/vd-[id]/member-[id]
Affected MO: sys/rack-unit-[id]/board/storage-[type]-[id]/vd-[id]/member-[id]

fltAaaDefaultAuthDefaultAuthNotDeployed**Fault Code:** F1668**Message**

DefaultAuth can't be deployed. Error: [configStatusMessage]

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: defaultauth-config-error
mibFaultCode: 1668
mibFaultName: fltAaaDefaultAuthDefaultAuthNotDeployed
moClass: aaa:DefaultAuth
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/auth-realm/default-auth
```

fltAaaDomainDomainNotDeployed**Fault Code: F1669****Message**

Domain [name] can't be deployed. Error: [configStatusMessage]

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. If you cannot resolve the issue, create a **show tech-support** file and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: domain-config-error
mibFaultCode: 1669
mibFaultName: fltAaaDomainDomainNotDeployed
moClass: aaa:Domain
Type: security
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/auth-realm/domain-[name]
```

fltLsServerFAULT**Fault Code: F1671****Message**

The UUID stored in Service Profile [name] does not match the UUID stored in server [pnDn]

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: fault
mibFaultCode: 1671
mibFaultName: fltLsServerFAULT
moClass: ls:Server
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/ls-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]

```

fltMgmtBackupLocal Internal backup failed**Fault Code: F1672****Message**

Local Internal backup failed while upgrade

Explanation**Recommended Action****Fault Details**

```

Severity: minor
Cause: local-internal-backup-failed
mibFaultCode: 1672
mibFaultName: fltMgmtBackupLocalInternalBackupFailed
moClass: mgmt:Backup
Type: management
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/backup-[hostname]

```

fltVnicEtherCdn-config-not-applied**Fault Code: F1680****Message**

CDN can not be applied for vnic [name] in Service Profile [name]

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: config-missing
mibFaultCode: 1680
mibFaultName: fltVnicEtherCdnConfigNotApplied
moClass: vnic:Ether
Type: configuration
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: org-[name]/lan-conn-pol-[name]/ether-[name]
Affected MO: org-[name]/ls-[name]/ether-[name]
Affected MO: org-[name]/tier-[name]/ls-[name]/ether-[name]

```

fltComputePhysicalConnectivityDown**Fault Code: F1681****Message**

Connectivity between the CIMC and one of the FIs is down. Connectivity may be down for expected reasons (e.g. FI/CIMC firmware upgrade).Connectivity between the CIMC and one of the FIs is down. Connectivity may be down for expected reasons (e.g. FI/CIMC firmware upgrade).

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: equipment-inaccessible
mibFaultCode: 1681
mibFaultName: fltComputePhysicalConnectivityDown
moClass: compute:Physical
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]
Affected MO: sys/rack-unit-[id]

```

tcaProcessorLoad**Fault Code: F33142****Message**

Threshold Crossed: processor:Runtime property: load

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: threshold-crossed
mibFaultCode: 33142
mibFaultName: tcaProcessorLoad
moClass: processor:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/cpu-rt

tcaProcessorLoadMin

Fault Code: F33144

Message

Threshold Crossed: processor:Runtime property: loadMin

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: threshold-crossed
mibFaultCode: 33144
mibFaultName: tcaProcessorLoadMin
moClass: processor:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/cpu-rt

tcaProcessorLoadMax

Fault Code: F33145

Message

Threshold Crossed: processor:Runtime property: loadMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33145
mibFaultName: tcaProcessorLoadMax
moClass: processor:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/cpu-rt

```

tcaProcessorLoadAvg**Fault Code: F33146****Message**

Threshold Crossed: processor:Runtime property: loadAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33146
mibFaultName: tcaProcessorLoadAvg
moClass: processor:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/cpu-rt

```

tcaFcBytesRxDelta**Fault Code: F33167****Message**

Threshold Crossed: fc:Stats property: bytesRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33167
mibFaultName: tcaFcBytesRxDelta
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcBytesRxDeltaMin**Fault Code: F33168****Message**

Threshold Crossed: fc:Stats property: bytesRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33168
mibFaultName: tcaFcBytesRxDeltaMin
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcBytesRxDeltaMax**Fault Code: F33169****Message**

Threshold Crossed: fc:Stats property: bytesRxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33169
mibFaultName: tcaFcBytesRxDeltaMax
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcBytesRxDeltaAvg**Fault Code: F33170****Message**

Threshold Crossed: fc:Stats property: bytesRxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33170
mibFaultName: tcaFcBytesRxDeltaAvg
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcPacketsRxDelta**Fault Code: F33177****Message**

Threshold Crossed: fc:Stats property: packetsRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33177
mibFaultName: tcaFcPacketsRxDelta
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcPacketsRxDeltaMin**Fault Code: F33178****Message**

Threshold Crossed: fc:Stats property: packetsRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33178
mibFaultName: tcaFcPacketsRxDeltaMin
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcPacketsRxDeltaMax**Fault Code: F33179****Message**

Threshold Crossed: fc:Stats property: packetsRxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33179
mibFaultName: tcaFcPacketsRxDeltaMax
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcPacketsRxDeltaAvg**Fault Code: F33180****Message**

Threshold Crossed: fc:Stats property: packetsRxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33180
mibFaultName: tcaFcPacketsRxDeltaAvg
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcBytesTxDelta**Fault Code: F33187****Message**

Threshold Crossed: fc:Stats property: bytesTxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33187
mibFaultName: tcaFcBytesTxDelta
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcBytesTxDeltaMin**Fault Code: F33188****Message**

Threshold Crossed: fc:Stats property: bytesTxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33188
mibFaultName: tcaFcBytesTxDeltaMin
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcBytesTxDeltaMax**Fault Code: F33189****Message**

Threshold Crossed: fc:Stats property: bytesTxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33189
mibFaultName: tcaFcBytesTxDeltaMax
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcBytesTxDeltaAvg**Fault Code: F33190****Message**

Threshold Crossed: fc:Stats property: bytesTxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33190
mibFaultName: tcaFcBytesTxDeltaAvg
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcPacketsTxDelta**Fault Code: F33197****Message**

Threshold Crossed: fc:Stats property: packetsTxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33197
mibFaultName: tcaFcPacketsTxDelta
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcPacketsTxDeltaMin**Fault Code: F33198****Message**

Threshold Crossed: fc:Stats property: packetsTxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33198
mibFaultName: tcaFcPacketsTxDeltaMin
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcPacketsTxDeltaMax**Fault Code: F33199****Message**

Threshold Crossed: fc:Stats property: packetsTxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33199
mibFaultName: tcaFcPacketsTxDeltaMax
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcPacketsTxDeltaAvg**Fault Code: F33200****Message**

Threshold Crossed: fc:Stats property: packetsTxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33200
mibFaultName: tcaFcPacketsTxDeltaAvg
moClass: fc:Stats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/stats

```

tcaFcCrcRxDelta**Fault Code: F33211****Message**

Threshold Crossed: fc:ErrStats property: crcRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33211
mibFaultName: tcaFcCrcRxDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcCrcRxDeltaMin**Fault Code: F33212****Message**

Threshold Crossed: fc:ErrStats property: crcRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33212
mibFaultName: tcaFcCrcRxDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcCrcRxDeltaMax**Fault Code: F33213****Message**

Threshold Crossed: fc:ErrStats property: crcRxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33213
mibFaultName: tcaFcCrcRxDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcCrcRxDeltaAvg**Fault Code: F33214****Message**

Threshold Crossed: fc:ErrStats property: crcRxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33214
mibFaultName: tcaFcCrcRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcDiscardRxDelta**Fault Code: F33221****Message**

Threshold Crossed: fc:ErrStats property: discardRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33221
mibFaultName: tcaFcDiscardRxDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcDiscardRxDeltaMin**Fault Code: F33222****Message**

Threshold Crossed: fc:ErrStats property: discardRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33222
mibFaultName: tcaFcDiscardRxDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcDiscardRxDeltaMax**Fault Code: F33223****Message**

Threshold Crossed: fc:ErrStats property: discardRxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33223
mibFaultName: tcaFcDiscardRxDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcDiscardRxDeltaAvg**Fault Code: F33224****Message**

Threshold Crossed: fc:ErrStats property: discardRxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33224
mibFaultName: tcaFcDiscardRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTooLongRxDelta**Fault Code: F33231****Message**

Threshold Crossed: fc:ErrStats property: tooLongRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33231
mibFaultName: tcaFcTooLongRxDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTooLongRxDeltaMin**Fault Code: F33232****Message**

Threshold Crossed: fc:ErrStats property: tooLongRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33232
mibFaultName: tcaFcTooLongRxDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTooLongRxDeltaMax**Fault Code: F33233****Message**

Threshold Crossed: fc:ErrStats property: tooLongRxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33233
mibFaultName: tcaFcTooLongRxDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTooLongRxDeltaAvg**Fault Code: F33234****Message**

Threshold Crossed: fc:ErrStats property: tooLongRxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33234
mibFaultName: tcaFcTooLongRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTooShortRxDelta**Fault Code: F33241****Message**

Threshold Crossed: fc:ErrStats property: tooShortRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33241
mibFaultName: tcaFcTooShortRxDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTooShortRxDeltaMin**Fault Code: F33242****Message**

Threshold Crossed: fc:ErrStats property: tooShortRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33242
mibFaultName: tcaFcTooShortRxDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTooShortRxDeltaMax**Fault Code: F33243****Message**

Threshold Crossed: fc:ErrStats property: tooShortRxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33243
mibFaultName: tcaFcTooShortRxDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTooShortRxDeltaAvg**Fault Code: F33244****Message**

Threshold Crossed: fc:ErrStats property: tooShortRxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33244
mibFaultName: tcaFcTooShortRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcRxDelta**Fault Code: F33251****Message**

Threshold Crossed: fc:ErrStats property: rxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33251
mibFaultName: tcaFcRxDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcRxDeltaMin**Fault Code: F33252****Message**

Threshold Crossed: fc:ErrStats property: rxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33252
mibFaultName: tcaFcRxDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcRxDeltaMax**Fault Code: F33253****Message**

Threshold Crossed: fc:ErrStats property: rxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33253
mibFaultName: tcaFcRxDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcRxDeltaAvg**Fault Code: F33254****Message**

Threshold Crossed: fc:ErrStats property: rxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33254
mibFaultName: tcaFcRxDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcDiscardTxDelta**Fault Code: F33261****Message**

Threshold Crossed: fc:ErrStats property: discardTxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33261
mibFaultName: tcaFcDiscardTxDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcDiscardTxDeltaMin**Fault Code: F33262****Message**

Threshold Crossed: fc:ErrStats property: discardTxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33262
mibFaultName: tcaFcDiscardTxDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcDiscardTxDeltaMax**Fault Code: F33263****Message**

Threshold Crossed: fc:ErrStats property: discardTxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33263
mibFaultName: tcaFcDiscardTxDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcDiscardTxDeltaAvg**Fault Code: F33264****Message**

Threshold Crossed: fc:ErrStats property: discardTxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33264
mibFaultName: tcaFcDiscardTxDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTxDelta**Fault Code: F33271****Message**

Threshold Crossed: fc:ErrStats property: txDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33271
mibFaultName: tcaFcTxDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTxDeltaMin**Fault Code: F33272****Message**

Threshold Crossed: fc:ErrStats property: txDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33272
mibFaultName: tcaFcTxDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTxDeltaMax**Fault Code: F33273****Message**

Threshold Crossed: fc:ErrStats property: txDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33273
mibFaultName: tcaFcTxDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcTxDeltaAvg**Fault Code: F33274****Message**

Threshold Crossed: fc:ErrStats property: txDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33274
mibFaultName: tcaFcTxDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcLinkFailuresDelta**Fault Code: F33281****Message**

Threshold Crossed: fc:ErrStats property: linkFailuresDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33281
mibFaultName: tcaFcLinkFailuresDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcLinkFailuresDeltaMin**Fault Code: F33282****Message**

Threshold Crossed: fc:ErrStats property: linkFailuresDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33282
mibFaultName: tcaFcLinkFailuresDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcLinkFailuresDeltaMax**Fault Code: F33283****Message**

Threshold Crossed: fc:ErrStats property: linkFailuresDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33283
mibFaultName: tcaFcLinkFailuresDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcLinkFailuresDeltaAvg**Fault Code: F33284****Message**

Threshold Crossed: fc:ErrStats property: linkFailuresDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33284
mibFaultName: tcaFcLinkFailuresDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcSyncLossesDelta**Fault Code: F33291****Message**

Threshold Crossed: fc:ErrStats property: syncLossesDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33291
mibFaultName: tcaFcSyncLossesDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcSyncLossesDeltaMin**Fault Code: F33292****Message**

Threshold Crossed: fc:ErrStats property: syncLossesDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33292
mibFaultName: tcaFcSyncLossesDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcSyncLossesDeltaMax**Fault Code: F33293****Message**

Threshold Crossed: fc:ErrStats property: syncLossesDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33293
mibFaultName: tcaFcSyncLossesDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcSyncLossesDeltaAvg**Fault Code:** F33294**Message**

Threshold Crossed: fc:ErrStats property: syncLossesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33294
mibFaultName: tcaFcSyncLossesDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcSignalLossesDelta**Fault Code:** F33301**Message**

Threshold Crossed: fc:ErrStats property: signalLossesDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33301
mibFaultName: tcaFcSignalLossesDelta
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcSignalLossesDeltaMin**Fault Code: F33302****Message**

Threshold Crossed: fc:ErrStats property: signalLossesDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33302
mibFaultName: tcaFcSignalLossesDeltaMin
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san-[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcSignalLossesDeltaMax**Fault Code: F33303****Message**

Threshold Crossed: fc:ErrStats property: signalLossesDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33303
mibFaultName: tcaFcSignalLossesDeltaMax
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaFcSignalLossesDeltaAvg**Fault Code: F33304****Message**

Threshold Crossed: fc:ErrStats property: signalLossesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33304
mibFaultName: tcaFcSignalLossesDeltaAvg
moClass: fc:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/san/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaMemoryTotal**Fault Code: F33483****Message**

Threshold Crossed: memory:Runtime property: total

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33483
mibFaultName: tcaMemoryTotal
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaMemoryTotalMin**Fault Code: F33485****Message**

Threshold Crossed: memory:Runtime property: totalMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33485
mibFaultName: tcaMemoryTotalMin
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaMemoryTotalMax**Fault Code: F33486****Message**

Threshold Crossed: memory:Runtime property: totalMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33486
mibFaultName: tcaMemoryTotalMax
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaMemoryTotalAvg**Fault Code: F33487****Message**

Threshold Crossed: memory:Runtime property: totalAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33487
mibFaultName: tcaMemoryTotalAvg
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaMemoryAvailable**Fault Code: F33491****Message**

Threshold Crossed: memory:Runtime property: available

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33491
mibFaultName: tcaMemoryAvailable
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaMemoryAvailableMin**Fault Code: F33493****Message**

Threshold Crossed: memory:Runtime property: availableMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33493
mibFaultName: tcaMemoryAvailableMin
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaMemoryAvailableMax**Fault Code: F33494****Message**

Threshold Crossed: memory:Runtime property: availableMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33494
mibFaultName: tcaMemoryAvailableMax
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaMemoryAvailableAvg**Fault Code: F33495****Message**

Threshold Crossed: memory:Runtime property: availableAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33495
mibFaultName: tcaMemoryAvailableAvg
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaMemoryCached**Fault Code: F33499****Message**

Threshold Crossed: memory:Runtime property: cached

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: threshold-crossed
mibFaultCode: 33499
mibFaultName: tcaMemoryCached
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

tcaMemoryCachedMin

Fault Code: F33501

Message

Threshold Crossed: memory:Runtime property: cachedMin

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: threshold-crossed
mibFaultCode: 33501
mibFaultName: tcaMemoryCachedMin
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

tcaMemoryCachedMax

Fault Code: F33502

Message

Threshold Crossed: memory:Runtime property: cachedMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33502
mibFaultName: tcaMemoryCachedMax
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaMemoryCachedAvg**Fault Code: F33503****Message**

Threshold Crossed: memory:Runtime property: cachedAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33503
mibFaultName: tcaMemoryCachedAvg
moClass: memory:Runtime
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/[type]-mem-rt

```

tcaAdaptorTotalPacketsDelta**Fault Code: F33720****Message**

Threshold Crossed: adaptor:EthPortStats property: totalPacketsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33720
mibFaultName: tcaAdaptorTotalPacketsDelta
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

```

tcaAdaptorTotalPacketsDeltaMin**Fault Code: F33721****Message**

Threshold Crossed: adaptor:EthPortStats property: totalPacketsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33721
mibFaultName: tcaAdaptorTotalPacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]

```

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorTotalPacketsDeltaMax

Fault Code: F33722

Message

Threshold Crossed: adaptor:EthPortStats property: totalPacketsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33722
mibFaultName: tcaAdaptorTotalPacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorTotalPacketsDeltaAvg

Fault Code: F33723

Message

Threshold Crossed: adaptor:EthPortStats property: totalPacketsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33723
mibFaultName: tcaAdaptorTotalPacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

```

tcaAdaptorGoodPacketsDelta**Fault Code: F33730****Message**

Threshold Crossed: adaptor:EthPortStats property: goodPacketsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33730
mibFaultName: tcaAdaptorGoodPacketsDelta
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]

```

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorGoodPacketsDeltaMin

Fault Code: F33731

Message

Threshold Crossed: adaptor:EthPortStats property: goodPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33731
mibFaultName: tcaAdaptorGoodPacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorGoodPacketsDeltaMax

Fault Code: F33732

Message

Threshold Crossed: adaptor:EthPortStats property: goodPacketsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33732
mibFaultName: tcaAdaptorGoodPacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

```

tcaAdaptorGoodPacketsDeltaAvg**Fault Code: F33733****Message**

Threshold Crossed: adaptor:EthPortStats property: goodPacketsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33733
mibFaultName: tcaAdaptorGoodPacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]

```


Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorVlanPacketsDelta

Fault Code: F33740

Message

Threshold Crossed: adaptor:EthPortStats property: vlanPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33740
mibFaultName: tcaAdaptorVlanPacketsDelta
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorVlanPacketsDeltaMin

Fault Code: F33741

Message

Threshold Crossed: adaptor:EthPortStats property: vlanPacketsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33741
mibFaultName: tcaAdaptorVlanPacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

```

tcaAdaptorVlanPacketsDeltaMax**Fault Code: F33742****Message**

Threshold Crossed: adaptor:EthPortStats property: vlanPacketsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33742
mibFaultName: tcaAdaptorVlanPacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]

```

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorVlanPacketsDeltaAvg

Fault Code: F33743

Message

Threshold Crossed: adaptor:EthPortStats property: vlanPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33743
mibFaultName: tcaAdaptorVlanPacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPausePacketsDelta

Fault Code: F33750

Message

Threshold Crossed: adaptor:EthPortStats property: pausePacketsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33750
mibFaultName: tcaAdaptorPausePacketsDelta
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

```

tcaAdaptorPausePacketsDeltaMin**Fault Code: F33751****Message**

Threshold Crossed: adaptor:EthPortStats property: pausePacketsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33751
mibFaultName: tcaAdaptorPausePacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]

```

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPausePacketsDeltaMax

Fault Code: F33752

Message

Threshold Crossed: adaptor:EthPortStats property: pausePacketsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33752
mibFaultName: tcaAdaptorPausePacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPausePacketsDeltaAvg

Fault Code: F33753

Message

Threshold Crossed: adaptor:EthPortStats property: pausePacketsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33753
mibFaultName: tcaAdaptorPausePacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

```

tcaAdaptorPerPriorityPausePacketsDelta**Fault Code: F33760****Message**

Threshold Crossed: adaptor:EthPortStats property: perPriorityPausePacketsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33760
mibFaultName: tcaAdaptorPerPriorityPausePacketsDelta
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]

```

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPerPriorityPausePacketsDeltaMin

Fault Code: F33761

Message

Threshold Crossed: adaptor:EthPortStats property: perPriorityPausePacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33761
mibFaultName: tcaAdaptorPerPriorityPausePacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPerPriorityPausePacketsDeltaMax

Fault Code: F33762

Message

Threshold Crossed: adaptor:EthPortStats property: perPriorityPausePacketsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33762
mibFaultName: tcaAdaptorPerPriorityPausePacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

```

tcaAdaptorPerPriorityPausePacketsDeltaAvg**Fault Code: F33763****Message**

Threshold Crossed: adaptor:EthPortStats property: perPriorityPausePacketsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33763
mibFaultName: tcaAdaptorPerPriorityPausePacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]

```


Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPppPacketsDelta

Fault Code: F33770

Message

Threshold Crossed: adaptor:EthPortStats property: pppPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33770
mibFaultName: tcaAdaptorPppPacketsDelta
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPppPacketsDeltaMin

Fault Code: F33771

Message

Threshold Crossed: adaptor:EthPortStats property: pppPacketsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33771
mibFaultName: tcaAdaptorPppPacketsDeltaMin
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

```

tcaAdaptorPppPacketsDeltaMax**Fault Code:** F33772**Message**

Threshold Crossed: adaptor:EthPortStats property: pppPacketsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33772
mibFaultName: tcaAdaptorPppPacketsDeltaMax
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]

```

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorPppPacketsDeltaAvg

Fault Code: F33773

Message

Threshold Crossed: adaptor:EthPortStats property: pppPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33773
mibFaultName: tcaAdaptorPppPacketsDeltaAvg
moClass: adaptor:EthPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-stats-[trafficDirection]

tcaAdaptorLessThan64Delta

Fault Code: F33810

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan64Delta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33810
mibFaultName: tcaAdaptorLessThan64Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

```

tcaAdaptorLessThan64DeltaMin**Fault Code: F33811****Message**

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan64DeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33811
mibFaultName: tcaAdaptorLessThan64DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]

```

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan64DeltaMax

Fault Code: F33812

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan64DeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33812
mibFaultName: tcaAdaptorLessThan64DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan64DeltaAvg

Fault Code: F33813

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan64DeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 33813
mibFaultName: tcaAdaptorLessThan64DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
```

tcaAdaptorEquals64Delta

Fault Code: F33820

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: equals64Delta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 33820
mibFaultName: tcaAdaptorEquals64Delta
moClass: adaptor:EthPortBySizeSmallStats
```

```

Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

```

tcaAdaptorEquals64DeltaMin

Fault Code: F33821

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: equals64DeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33821
mibFaultName: tcaAdaptorEquals64DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

```

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorEquals64DeltaMax

Fault Code: F33822

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: equals64DeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33822
mibFaultName: tcaAdaptorEquals64DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorEquals64DeltaAvg

Fault Code: F33823

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: equals64DeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed


```

mibFaultCode: 33823
mibFaultName: tcaAdaptorEquals64DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

```

tcaAdaptorLessThan128Delta

Fault Code: F33830

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan128Delta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33830
mibFaultName: tcaAdaptorLessThan128Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]

```

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan128DeltaMin

Fault Code: F33831

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan128DeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33831
mibFaultName: tcaAdaptorLessThan128DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stat
 s-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDire
 ction]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDir
 ection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan128DeltaMax

Fault Code: F33832

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan128DeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33832
mibFaultName: tcaAdaptorLessThan128DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

```

tcaAdaptorLessThan128DeltaAvg**Fault Code:** F33833**Message**

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan128DeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33833
mibFaultName: tcaAdaptorLessThan128DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]

```

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan256Delta

Fault Code: F33840

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan256Delta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33840
mibFaultName: tcaAdaptorLessThan256Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan256DeltaMin

Fault Code: F33841

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan256DeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33841
mibFaultName: tcaAdaptorLessThan256DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan256DeltaMax

Fault Code: F33842

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan256DeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33842
mibFaultName: tcaAdaptorLessThan256DeltaMax
moClass: adaptor:EthPortBySizeSmallStats

```

Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

```

tcaAdaptorLessThan256DeltaAvg

Fault Code: F33843

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan256DeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33843
mibFaultName: tcaAdaptorLessThan256DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

```

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan512Delta

Fault Code: F33850

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan512Delta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33850
mibFaultName: tcaAdaptorLessThan512Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stat
 s-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDire
 ction]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDir
 ection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan512DeltaMin

Fault Code: F33851

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan512DeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed

```

mibFaultCode: 33851
mibFaultName: tcaAdaptorLessThan512DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

```

tcaAdaptorLessThan512DeltaMax

Fault Code: F33852

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan512DeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33852
mibFaultName: tcaAdaptorLessThan512DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]

```


Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan512DeltaAvg

Fault Code: F33853

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan512DeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33853
mibFaultName: tcaAdaptorLessThan512DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan1024Delta

Fault Code: F33860

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan1024Delta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33860
mibFaultName: tcaAdaptorLessThan1024Delta
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

```

tcaAdaptorLessThan1024DeltaMin**Fault Code:** F33861**Message**

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan1024DeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33861
mibFaultName: tcaAdaptorLessThan1024DeltaMin
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]

```

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan1024DeltaMax

Fault Code: F33862

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan1024DeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33862
mibFaultName: tcaAdaptorLessThan1024DeltaMax
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]

tcaAdaptorLessThan1024DeltaAvg

Fault Code: F33863

Message

Threshold Crossed: adaptor:EthPortBySizeSmallStats property: lessThan1024DeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 33863
mibFaultName: tcaAdaptorLessThan1024DeltaAvg
moClass: adaptor:EthPortBySizeSmallStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-small-stats-[trafficDirection]
```

tcaAdaptorLessThanOrEqualTo1518Delta

Fault Code: F33875

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThanOrEqualTo1518Delta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 33875
mibFaultName: tcaAdaptorLessThanOrEqualTo1518Delta
moClass: adaptor:EthPortBySizeLargeStats
```

```

Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

tcaAdaptorLessThanOrEqualTo1518DeltaMin

Fault Code: F33876

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThanOrEqualTo1518DeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33876
mibFaultName: tcaAdaptorLessThanOrEqualTo1518DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThanOrEqualTo1518DeltaMax

Fault Code: F33877

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThanOrEqualTo1518DeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33877
mibFaultName: tcaAdaptorLessThanOrEqualTo1518DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThanOrEqualTo1518DeltaAvg

Fault Code: F33878

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThanOrEqualTo1518DeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed

```

mibFaultCode: 33878
mibFaultName: tcaAdaptorLessThanOrEqualTo1518DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stat
s-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDire
ction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDir
ection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

tcaAdaptorLessThan2048Delta

Fault Code: F33885

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan2048Delta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33885
mibFaultName: tcaAdaptorLessThan2048Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stat
s-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDire
ction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDir
ection]

```

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan2048DeltaMin

Fault Code: F33886

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan2048DeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33886
mibFaultName: tcaAdaptorLessThan2048DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stat
 s-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDire
 ction]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDir
 ection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan2048DeltaMax

Fault Code: F33887

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan2048DeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33887
mibFaultName: tcaAdaptorLessThan2048DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

tcaAdaptorLessThan2048DeltaAvg**Fault Code:** F33888**Message**

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan2048DeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33888
mibFaultName: tcaAdaptorLessThan2048DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]

```

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan4096Delta

Fault Code: F33895

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan4096Delta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33895
mibFaultName: tcaAdaptorLessThan4096Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan4096DeltaMin

Fault Code: F33896

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan4096DeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33896
mibFaultName: tcaAdaptorLessThan4096DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stat
 s-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDire
 ction]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDir
 ection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan4096DeltaMax

Fault Code: F33897

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan4096DeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33897
mibFaultName: tcaAdaptorLessThan4096DeltaMax
moClass: adaptor:EthPortBySizeLargeStats

```

Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

tcaAdaptorLessThan4096DeltaAvg

Fault Code: F33898

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan4096DeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33898
mibFaultName: tcaAdaptorLessThan4096DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan8192Delta

Fault Code: F33905

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan8192Delta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33905
mibFaultName: tcaAdaptorLessThan8192Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan8192DeltaMin

Fault Code: F33906

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan8192DeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed

```

mibFaultCode: 33906
mibFaultName: tcaAdaptorLessThan8192DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

tcaAdaptorLessThan8192DeltaMax

Fault Code: F33907

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan8192DeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33907
mibFaultName: tcaAdaptorLessThan8192DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]

```

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan8192DeltaAvg

Fault Code: F33908

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan8192DeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33908
mibFaultName: tcaAdaptorLessThan8192DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan9216Delta

Fault Code: F33915

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan9216Delta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33915
mibFaultName: tcaAdaptorLessThan9216Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

tcaAdaptorLessThan9216DeltaMin**Fault Code:** F33916**Message**

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan9216DeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33916
mibFaultName: tcaAdaptorLessThan9216DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]

```


Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan9216DeltaMax

Fault Code: F33917

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan9216DeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33917
mibFaultName: tcaAdaptorLessThan9216DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorLessThan9216DeltaAvg

Fault Code: F33918

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: lessThan9216DeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 33918
mibFaultName: tcaAdaptorLessThan9216DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
```

tcaAdaptorGreaterThanOrEqualTo9216Delta

Fault Code: F33925

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: greaterThanOrEqualTo9216Delta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 33925
mibFaultName: tcaAdaptorGreaterThanOrEqualTo9216Delta
moClass: adaptor:EthPortBySizeLargeStats
```

```

Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

tcaAdaptorGreaterThanOrEqualTo9216DeltaMin

Fault Code: F33926

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: greaterThanOrEqualTo9216DeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33926
mibFaultName: tcaAdaptorGreaterThanOrEqualTo9216DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorGreaterThanOrEqualTo9216DeltaMax

Fault Code: F33927

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: greaterThanOrEqualTo9216DeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33927
mibFaultName: tcaAdaptorGreaterThanOrEqualTo9216DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorGreaterThanOrEqualTo9216DeltaAvg

Fault Code: F33928

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: greaterThanOrEqualTo9216DeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed

```

mibFaultCode: 33928
mibFaultName: tcaAdaptorGreaterThanOrEqualTo9216DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

tcaAdaptorOversizedPacketsDelta

Fault Code: F33940

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedPacketsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33940
mibFaultName: tcaAdaptorOversizedPacketsDelta
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[trafficDirection]

```

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedPacketsDeltaMin

Fault Code: F33941

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33941
mibFaultName: tcaAdaptorOversizedPacketsDeltaMin
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedPacketsDeltaMax

Fault Code: F33942

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedPacketsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33942
mibFaultName: tcaAdaptorOversizedPacketsDeltaMax
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-oversized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-oversized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-oversized-stats-[trafficDirection]

```

tcaAdaptorOversizedPacketsDeltaAvg**Fault Code:** F33943**Message**

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedPacketsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33943
mibFaultName: tcaAdaptorOversizedPacketsDeltaAvg
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[tra
fficDirection]

```

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedGoodCrcPacketsDelta

Fault Code: F33950

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedGoodCrcPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33950
mibFaultName: tcaAdaptorOversizedGoodCrcPacketsDelta
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedGoodCrcPacketsDeltaMin

Fault Code: F33951

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedGoodCrcPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 33951
mibFaultName: tcaAdaptorOversizedGoodCrcPacketsDeltaMin
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-oversized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-oversized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-oversized-stats-[trafficDirection]
```

tcaAdaptorOversizedGoodCrcPacketsDeltaMax

Fault Code: F33952

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedGoodCrcPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 33952
mibFaultName: tcaAdaptorOversizedGoodCrcPacketsDeltaMax
moClass: adaptor:EthPortOversizedStats
```

```

Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

```

tcaAdaptorOversizedGoodCrcPacketsDeltaAvg

Fault Code: F33953

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedGoodCrcPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33953
mibFaultName: tcaAdaptorOversizedGoodCrcPacketsDeltaAvg
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

```

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedBadCrcPacketsDelta

Fault Code: F33960

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedBadCrcPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33960
mibFaultName: tcaAdaptorOversizedBadCrcPacketsDelta
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedBadCrcPacketsDeltaMin

Fault Code: F33961

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedBadCrcPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed

```

mibFaultCode: 33961
mibFaultName: tcaAdaptorOversizedBadCrcPacketsDeltaMin
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-oversized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-oversized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-oversized-stats-[trafficDirection]

```

tcaAdaptorOversizedBadCrcPacketsDeltaMax

Fault Code: F33962

Message

Threshold Crossed: adaptor:EthPortOversizedStats property: oversizedBadCrcPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33962
mibFaultName: tcaAdaptorOversizedBadCrcPacketsDeltaMax
moClass: adaptor:EthPortOversizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-oversized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-oversized-stats-[trafficDirectio
n]

```

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorOversizedBadCrcPacketsDeltaAvg

Fault Code: F33963

Message

Threshold Crossed: adaptor:EthPortOutsizedStats property: oversizedBadCrcPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33963
mibFaultName: tcaAdaptorOversizedBadCrcPacketsDeltaAvg
moClass: adaptor:EthPortOutsizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedGoodCrcPacketsDelta

Fault Code: F33970

Message

Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedGoodCrcPacketsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33970
mibFaultName: tcaAdaptorUndersizedGoodCrcPacketsDelta
moClass: adaptor:EthPortOutsizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirectio
n]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

```

tcaAdaptorUndersizedGoodCrcPacketsDeltaMin**Fault Code:** F33971**Message**

Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedGoodCrcPacketsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33971
mibFaultName: tcaAdaptorUndersizedGoodCrcPacketsDeltaMin
moClass: adaptor:EthPortOutsizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[tra
fficDirection]

```

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedGoodCrcPacketsDeltaMax

Fault Code: F33972

Message

Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedGoodCrcPacketsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33972
mibFaultName: tcaAdaptorUndersizedGoodCrcPacketsDeltaMax
moClass: adaptor:EthPortOutsizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedGoodCrcPacketsDeltaAvg

Fault Code: F33973

Message

Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedGoodCrcPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33973
mibFaultName: tcaAdaptorUndersizedGoodCrcPacketsDeltaAvg
moClass: adaptor:EthPortOutsizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

```

tcaAdaptorUndersizedBadCrcPacketsDelta

Fault Code: F33980

Message

Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedBadCrcPacketsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33980
mibFaultName: tcaAdaptorUndersizedBadCrcPacketsDelta
moClass: adaptor:EthPortOutsizedStats

```



```

Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

```

tcaAdaptorUndersizedBadCrcPacketsDeltaMin

Fault Code: F33981

Message

Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedBadCrcPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33981
mibFaultName: tcaAdaptorUndersizedBadCrcPacketsDeltaMin
moClass: adaptor:EthPortOutsizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

```

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedBadCrcPacketsDeltaMax

Fault Code: F33982

Message

Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedBadCrcPacketsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33982
mibFaultName: tcaAdaptorUndersizedBadCrcPacketsDeltaMax
moClass: adaptor:EthPortOutsizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

tcaAdaptorUndersizedBadCrcPacketsDeltaAvg

Fault Code: F33983

Message

Threshold Crossed: adaptor:EthPortOutsizedStats property: undersizedBadCrcPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed

```

mibFaultCode: 33983
mibFaultName: tcaAdaptorUndersizedBadCrcPacketsDeltaAvg
moClass: adaptor:EthPortOutsizedStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[tra
fficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[tr
afficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-outsized-stats-[trafficDirection
]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-outsized-stats-[trafficDirectio
n]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-outsized-stats-[trafficDirection]

```

tcaAdaptorUnicastPacketsDelta

Fault Code: F33995

Message

Threshold Crossed: adaptor:EthPortMcastStats property: unicastPacketsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33995
mibFaultName: tcaAdaptorUnicastPacketsDelta
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[traffi
cDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[traff
icDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

```

Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorUnicastPacketsDeltaMin

Fault Code: F33996

Message

Threshold Crossed: adaptor:EthPortMcastStats property: unicastPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33996
mibFaultName: tcaAdaptorUnicastPacketsDeltaMin
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

tcaAdaptorUnicastPacketsDeltaMax

Fault Code: F33997

Message

Threshold Crossed: adaptor:EthPortMcastStats property: unicastPacketsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 33997
mibFaultName: tcaAdaptorUnicastPacketsDeltaMax
moClass: adaptor:EthPortMcastStats

```

Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[traffi
cDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[traff
icDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

```

tcaAdaptorUnicastPacketsDeltaAvg

Fault Code: F33998

Message

Threshold Crossed: adaptor:EthPortMcastStats property: unicastPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 33998
mibFaultName: tcaAdaptorUnicastPacketsDeltaAvg
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[traffi
cDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[traff
icDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

```

tcaAdaptorMulticastPacketsDelta

Fault Code: F34005

Message

Threshold Crossed: adaptor:EthPortMcastStats property: multicastPacketsDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34005
mibFaultName: tcaAdaptorMulticastPacketsDelta
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
```

tcaAdaptorMulticastPacketsDeltaMin

Fault Code: F34006

Message

Threshold Crossed: adaptor:EthPortMcastStats property: multicastPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34006
mibFaultName: tcaAdaptorMulticastPacketsDeltaMin
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
```

```

Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[traffi
cDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[traff
icDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

```

tcaAdaptorMulticastPacketsDeltaMax

Fault Code: F34007

Message

Threshold Crossed: adaptor:EthPortMcastStats property: multicastPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34007
mibFaultName: tcaAdaptorMulticastPacketsDeltaMax
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[traffi
cDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[traff
icDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

```

tcaAdaptorMulticastPacketsDeltaAvg

Fault Code: F34008

Message

Threshold Crossed: adaptor:EthPortMcastStats property: multicastPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34008
mibFaultName: tcaAdaptorMulticastPacketsDeltaAvg
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
```

tcaAdaptorBroadcastPacketsDelta

Fault Code: F34015

Message

Threshold Crossed: adaptor:EthPortMcastStats property: broadcastPacketsDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34015
mibFaultName: tcaAdaptorBroadcastPacketsDelta
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
```



```

Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[traffi
cDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[traff
icDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

```

tcaAdaptorBroadcastPacketsDeltaMin

Fault Code: F34016

Message

Threshold Crossed: adaptor:EthPortMcastStats property: broadcastPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34016
mibFaultName: tcaAdaptorBroadcastPacketsDeltaMin
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[traffi
cDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[traff
icDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

```

tcaAdaptorBroadcastPacketsDeltaMax

Fault Code: F34017

Message

Threshold Crossed: adaptor:EthPortMcastStats property: broadcastPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34017
mibFaultName: tcaAdaptorBroadcastPacketsDeltaMax
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
```

tcaAdaptorBroadcastPacketsDeltaAvg

Fault Code: F34018

Message

Threshold Crossed: adaptor:EthPortMcastStats property: broadcastPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34018
mibFaultName: tcaAdaptorBroadcastPacketsDeltaAvg
moClass: adaptor:EthPortMcastStats
Type: server
Callhome: none
Callhome Enabled: no
```

```

Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-mcast-stats-[trafficDirection]

```

tcaAdaptorMacDiscardedPacketsDelta

Fault Code: F34030

Message

Threshold Crossed: adaptor:EthPortErrStats property: macDiscardedPacketsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34030
mibFaultName: tcaAdaptorMacDiscardedPacketsDelta
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

```

tcaAdaptorMacDiscardedPacketsDeltaMin

Fault Code: F34031

Message

Threshold Crossed: adaptor:EthPortErrStats property: macDiscardedPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34031
mibFaultName: tcaAdaptorMacDiscardedPacketsDeltaMin
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
```

tcaAdaptorMacDiscardedPacketsDeltaMax

Fault Code: F34032

Message

Threshold Crossed: adaptor:EthPortErrStats property: macDiscardedPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34032
mibFaultName: tcaAdaptorMacDiscardedPacketsDeltaMax
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
```

```

Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

```

tcaAdaptorMacDiscardedPacketsDeltaAvg

Fault Code: F34033

Message

Threshold Crossed: adaptor:EthPortErrStats property: macDiscardedPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34033
mibFaultName: tcaAdaptorMacDiscardedPacketsDeltaAvg
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

```

tcaAdaptorBadCrcPacketsDelta

Fault Code: F34040

Message

Threshold Crossed: adaptor:EthPortErrStats property: badCrcPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34040
mibFaultName: tcaAdaptorBadCrcPacketsDelta
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

tcaAdaptorBadCrcPacketsDeltaMin

Fault Code: F34041

Message

Threshold Crossed: adaptor:EthPortErrStats property: badCrcPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34041
mibFaultName: tcaAdaptorBadCrcPacketsDeltaMin
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no

```

Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

```

tcaAdaptorBadCrcPacketsDeltaMax

Fault Code: F34042

Message

Threshold Crossed: adaptor:EthPortErrStats property: badCrcPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34042
mibFaultName: tcaAdaptorBadCrcPacketsDeltaMax
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

```

tcaAdaptorBadCrcPacketsDeltaAvg

Fault Code: F34043

Message

Threshold Crossed: adaptor:EthPortErrStats property: badCrcPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34043
mibFaultName: tcaAdaptorBadCrcPacketsDeltaAvg
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

```

tcaAdaptorBadLengthPacketsDelta

Fault Code: F34050

Message

Threshold Crossed: adaptor:EthPortErrStats property: badLengthPacketsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34050
mibFaultName: tcaAdaptorBadLengthPacketsDelta
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no

```



```

Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

```

tcaAdaptorBadLengthPacketsDeltaMin

Fault Code: F34051

Message

Threshold Crossed: adaptor:EthPortErrStats property: badLengthPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34051
mibFaultName: tcaAdaptorBadLengthPacketsDeltaMin
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

```

tcaAdaptorBadLengthPacketsDeltaMax

Fault Code: F34052

Message

Threshold Crossed: adaptor:EthPortErrStats property: badLengthPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34052
mibFaultName: tcaAdaptorBadLengthPacketsDeltaMax
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
```

tcaAdaptorBadLengthPacketsDeltaAvg

Fault Code: F34053

Message

Threshold Crossed: adaptor:EthPortErrStats property: badLengthPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34053
mibFaultName: tcaAdaptorBadLengthPacketsDeltaAvg
moClass: adaptor:EthPortErrStats
Type: server
Callhome: none
Callhome Enabled: no
```

```

Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficD
irection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[traffic
Direction]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/computeEp-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-err-stats-[trafficDirection]

```

tcaAdaptorRxFramesDelta

Fault Code: F34064

Message

Threshold Crossed: adaptor:FcPortStats property: rxFramesDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34064
mibFaultName: tcaAdaptorRxFramesDelta
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorRxFramesDeltaMin

Fault Code: F34065

Message

Threshold Crossed: adaptor:FcPortStats property: rxFramesDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34065
mibFaultName: tcaAdaptorRxFramesDeltaMin
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorRxFramesDeltaMax**Fault Code:** F34066**Message**

Threshold Crossed: adaptor:FcPortStats property: rxFramesDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34066
mibFaultName: tcaAdaptorRxFramesDeltaMax
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorRxFramesDeltaAvg**Fault Code:** F34067**Message**

Threshold Crossed: adaptor:FcPortStats property: rxFramesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34067
mibFaultName: tcaAdaptorRxFramesDeltaAvg
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorTxFramesDelta**Fault Code: F34074****Message**

Threshold Crossed: adaptor:FcPortStats property: txFramesDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34074
mibFaultName: tcaAdaptorTxFramesDelta
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorTxFramesDeltaMin**Fault Code: F34075****Message**

Threshold Crossed: adaptor:FcPortStats property: txFramesDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34075
mibFaultName: tcaAdaptorTxFramesDeltaMin
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorTxFramesDeltaMax**Fault Code: F34076****Message**

Threshold Crossed: adaptor:FcPortStats property: txFramesDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34076
mibFaultName: tcaAdaptorTxFramesDeltaMax
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorTxFramesDeltaAvg**Fault Code: F34077****Message**

Threshold Crossed: adaptor:FcPortStats property: txFramesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34077
mibFaultName: tcaAdaptorTxFramesDeltaAvg
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorRxBadFramesDelta**Fault Code: F34084****Message**

Threshold Crossed: adaptor:FcPortStats property: rxBadFramesDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34084
mibFaultName: tcaAdaptorRxBadFramesDelta
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorRxBadFramesDeltaMin**Fault Code: F34085****Message**

Threshold Crossed: adaptor:FcPortStats property: rxBadFramesDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34085
mibFaultName: tcaAdaptorRxBadFramesDeltaMin
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorRxBadFramesDeltaMax**Fault Code:** F34086**Message**

Threshold Crossed: adaptor:FcPortStats property: rxBadFramesDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34086
mibFaultName: tcaAdaptorRxBadFramesDeltaMax
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorRxBadFramesDeltaAvg**Fault Code:** F34087**Message**

Threshold Crossed: adaptor:FcPortStats property: rxBadFramesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34087
mibFaultName: tcaAdaptorRxBadFramesDeltaAvg
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorTxBadFramesDelta**Fault Code: F34094****Message**

Threshold Crossed: adaptor:FcPortStats property: txBadFramesDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34094
mibFaultName: tcaAdaptorTxBadFramesDelta
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorTxBadFramesDeltaMin**Fault Code: F34095****Message**

Threshold Crossed: adaptor:FcPortStats property: txBadFramesDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34095
mibFaultName: tcaAdaptorTxBadFramesDeltaMin
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorTxBadFramesDeltaMax**Fault Code:** F34096**Message**

Threshold Crossed: adaptor:FcPortStats property: txBadFramesDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34096
mibFaultName: tcaAdaptorTxBadFramesDeltaMax
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorTxBadFramesDeltaAvg**Fault Code:** F34097**Message**

Threshold Crossed: adaptor:FcPortStats property: txBadFramesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34097
mibFaultName: tcaAdaptorTxBadFramesDeltaAvg
moClass: adaptor:FcPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-port-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/fc-port-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/fc-port-stats

```

tcaAdaptorPacketsTxDelta**Fault Code: F34108****Message**

Threshold Crossed: adaptor:VnicStats property: packetsTxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34108
mibFaultName: tcaAdaptorPacketsTxDelta
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorPacketsTxDeltaMin

Fault Code: F34109

Message

Threshold Crossed: adaptor:VnicStats property: packetsTxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34109
mibFaultName: tcaAdaptorPacketsTxDeltaMin
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats
```

tcaAdaptorPacketsTxDeltaMax

Fault Code: F34110

Message

Threshold Crossed: adaptor:VnicStats property: packetsTxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34110
mibFaultName: tcaAdaptorPacketsTxDeltaMax
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
```

```

Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorPacketsTxDeltaAvg

Fault Code: F34111

Message

Threshold Crossed: adaptor:VnicStats property: packetsTxDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34111
mibFaultName: tcaAdaptorPacketsTxDeltaAvg
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorPacketsRxDelta

Fault Code: F34118

Message

Threshold Crossed: adaptor:VnicStats property: packetsRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34118
mibFaultName: tcaAdaptorPacketsRxDelta
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorPacketsRxDeltaMin**Fault Code: F34119****Message**

Threshold Crossed: adaptor:VnicStats property: packetsRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34119
mibFaultName: tcaAdaptorPacketsRxDeltaMin
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats

```

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorPacketsRxDeltaMax

Fault Code: F34120

Message

Threshold Crossed: adaptor:VnicStats property: packetsRxDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34120
mibFaultName: tcaAdaptorPacketsRxDeltaMax
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorPacketsRxDeltaAvg

Fault Code: F34121

Message

Threshold Crossed: adaptor:VnicStats property: packetsRxDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34121

```

mibFaultName: tcaAdaptorPacketsRxDeltaAvg
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorBytesTxDelta

Fault Code: F34128

Message

Threshold Crossed: adaptor:VnicStats property: bytesTxDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34128
mibFaultName: tcaAdaptorBytesTxDelta
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```


tcaAdaptorBytesTxDeltaMin

Fault Code: F34129

Message

Threshold Crossed: adaptor:VnicStats property: bytesTxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34129
mibFaultName: tcaAdaptorBytesTxDeltaMin
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats
```

tcaAdaptorBytesTxDeltaMax

Fault Code: F34130

Message

Threshold Crossed: adaptor:VnicStats property: bytesTxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34130
mibFaultName: tcaAdaptorBytesTxDeltaMax
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
```

```

Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorBytesTxDeltaAvg

Fault Code: F34131

Message

Threshold Crossed: adaptor:VnicStats property: bytesTxDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34131
mibFaultName: tcaAdaptorBytesTxDeltaAvg
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorBytesRxDelta

Fault Code: F34138

Message

Threshold Crossed: adaptor:VnicStats property: bytesRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34138
mibFaultName: tcaAdaptorBytesRxDelta
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorBytesRxDeltaMin**Fault Code: F34139****Message**

Threshold Crossed: adaptor:VnicStats property: bytesRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34139
mibFaultName: tcaAdaptorBytesRxDeltaMin
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats

```

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesRxDeltaMax

Fault Code: F34140

Message

Threshold Crossed: adaptor:VnicStats property: bytesRxDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34140
mibFaultName: tcaAdaptorBytesRxDeltaMax
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorBytesRxDeltaAvg

Fault Code: F34141

Message

Threshold Crossed: adaptor:VnicStats property: bytesRxDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34141

```

mibFaultName: tcaAdaptorBytesRxDeltaAvg
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorErrorsTxDelta

Fault Code: F34148

Message

Threshold Crossed: adaptor:VnicStats property: errorsTxDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34148
mibFaultName: tcaAdaptorErrorsTxDelta
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorErrorsTxDeltaMin

Fault Code: F34149

Message

Threshold Crossed: adaptor:VnicStats property: errorsTxDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34149
mibFaultName: tcaAdaptorErrorsTxDeltaMin
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorErrorsTxDeltaMax

Fault Code: F34150

Message

Threshold Crossed: adaptor:VnicStats property: errorsTxDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34150
mibFaultName: tcaAdaptorErrorsTxDeltaMax
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorErrorsTxDeltaAvg

Fault Code: F34151

Message

Threshold Crossed: adaptor:VnicStats property: errorsTxDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34151
mibFaultName: tcaAdaptorErrorsTxDeltaAvg
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorErrorsRxDelta

Fault Code: F34158

Message

Threshold Crossed: adaptor:VnicStats property: errorsRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34158
mibFaultName: tcaAdaptorErrorsRxDelta
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorErrorsRxDeltaMin**Fault Code: F34159****Message**

Threshold Crossed: adaptor:VnicStats property: errorsRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34159
mibFaultName: tcaAdaptorErrorsRxDeltaMin
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats

```


Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorErrorsRxDeltaMax

Fault Code: F34160

Message

Threshold Crossed: adaptor:VnicStats property: errorsRxDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34160
mibFaultName: tcaAdaptorErrorsRxDeltaMax
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorErrorsRxDeltaAvg

Fault Code: F34161

Message

Threshold Crossed: adaptor:VnicStats property: errorsRxDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34161

```

mibFaultName: tcaAdaptorErrorsRxDeltaAvg
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorDroppedTxDelta

Fault Code: F34168

Message

Threshold Crossed: adaptor:VnicStats property: droppedTxDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34168
mibFaultName: tcaAdaptorDroppedTxDelta
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorDroppedTxDeltaMin

Fault Code: F34169

Message

Threshold Crossed: adaptor:VnicStats property: droppedTxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34169
mibFaultName: tcaAdaptorDroppedTxDeltaMin
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats
```

tcaAdaptorDroppedTxDeltaMax

Fault Code: F34170

Message

Threshold Crossed: adaptor:VnicStats property: droppedTxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34170
mibFaultName: tcaAdaptorDroppedTxDeltaMax
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
```

```

Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorDroppedTxDeltaAvg

Fault Code: F34171

Message

Threshold Crossed: adaptor:VnicStats property: droppedTxDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34171
mibFaultName: tcaAdaptorDroppedTxDeltaAvg
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorDroppedRxDelta

Fault Code: F34178

Message

Threshold Crossed: adaptor:VnicStats property: droppedRxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34178
mibFaultName: tcaAdaptorDroppedRxDelta
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorDroppedRxDeltaMin**Fault Code: F34179****Message**

Threshold Crossed: adaptor:VnicStats property: droppedRxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34179
mibFaultName: tcaAdaptorDroppedRxDeltaMin
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats

```

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorDroppedRxDeltaMax

Fault Code: F34180

Message

Threshold Crossed: adaptor:VnicStats property: droppedRxDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34180
mibFaultName: tcaAdaptorDroppedRxDeltaMax
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

tcaAdaptorDroppedRxDeltaAvg

Fault Code: F34181

Message

Threshold Crossed: adaptor:VnicStats property: droppedRxDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34181

```

mibFaultName: tcaAdaptorDroppedRxDeltaAvg
moClass: adaptor:VnicStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vnic-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vnic-stats
Affected MO: vmm/computeEp-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/hv-[uuid]/nic-[name]/vnic-stats
Affected MO: vmm/vm-[uuid]/nic-[name]/vnic-stats

```

tcaAdaptorInputRequestsDelta

Fault Code: F34192

Message

Threshold Crossed: adaptor:FcIfFC4Stats property: inputRequestsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34192
mibFaultName: tcaAdaptorInputRequestsDelta
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorInputRequestsDeltaMin

Fault Code: F34193

Message

Threshold Crossed: adaptor:FcIfFC4Stats property: inputRequestsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34193
mibFaultName: tcaAdaptorInputRequestsDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorInputRequestsDeltaMax**Fault Code:** F34194**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: inputRequestsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34194
mibFaultName: tcaAdaptorInputRequestsDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorInputRequestsDeltaAvg**Fault Code:** F34195**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: inputRequestsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34195
mibFaultName: tcaAdaptorInputRequestsDeltaAvg
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorOutputRequestsDelta**Fault Code: F34202****Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: outputRequestsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34202
mibFaultName: tcaAdaptorOutputRequestsDelta
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorOutputRequestsDeltaMin**Fault Code: F34203****Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: outputRequestsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34203
mibFaultName: tcaAdaptorOutputRequestsDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorOutputRequestsDeltaMax**Fault Code:** F34204**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: outputRequestsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34204
mibFaultName: tcaAdaptorOutputRequestsDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorOutputRequestsDeltaAvg**Fault Code:** F34205**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: outputRequestsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34205
mibFaultName: tcaAdaptorOutputRequestsDeltaAvg
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorControlRequestsDelta**Fault Code: F34212****Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: controlRequestsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34212
mibFaultName: tcaAdaptorControlRequestsDelta
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorControlRequestsDeltaMin**Fault Code: F34213****Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: controlRequestsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34213
mibFaultName: tcaAdaptorControlRequestsDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorControlRequestsDeltaMax**Fault Code:** F34214**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: controlRequestsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34214
mibFaultName: tcaAdaptorControlRequestsDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorControlRequestsDeltaAvg**Fault Code:** F34215**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: controlRequestsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34215
mibFaultName: tcaAdaptorControlRequestsDeltaAvg
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorInputMegabytesDelta**Fault Code: F34222****Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: inputMegabytesDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34222
mibFaultName: tcaAdaptorInputMegabytesDelta
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorInputMegabytesDeltaMin**Fault Code: F34223****Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: inputMegabytesDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34223
mibFaultName: tcaAdaptorInputMegabytesDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorInputMegabytesDeltaMax**Fault Code:** F34224**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: inputMegabytesDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34224
mibFaultName: tcaAdaptorInputMegabytesDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorInputMegabytesDeltaAvg**Fault Code:** F34225**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: inputMegabytesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34225
mibFaultName: tcaAdaptorInputMegabytesDeltaAvg
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorOutputMegabytesDelta**Fault Code: F34232****Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: outputMegabytesDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34232
mibFaultName: tcaAdaptorOutputMegabytesDelta
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorOutputMegabytesDeltaMin**Fault Code: F34233****Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: outputMegabytesDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34233
mibFaultName: tcaAdaptorOutputMegabytesDeltaMin
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorOutputMegabytesDeltaMax**Fault Code:** F34234**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: outputMegabytesDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34234
mibFaultName: tcaAdaptorOutputMegabytesDeltaMax
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorOutputMegabytesDeltaAvg**Fault Code:** F34235**Message**

Threshold Crossed: adaptor:FcIfFC4Stats property: outputMegabytesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34235
mibFaultName: tcaAdaptorOutputMegabytesDeltaAvg
moClass: adaptor:FcIfFC4Stats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-fc4-stats

```

tcaAdaptorCorrectableErrorsDelta**Fault Code: F34246****Message**

Threshold Crossed: adaptor:MenloBaseErrorStats property: correctableErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34246
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloBaseErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

tcaAdaptorCorrectableErrorsDeltaMin**Fault Code: F34247****Message**

Threshold Crossed: adaptor:MenloBaseErrorStats property: correctableErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34247
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin
moClass: adaptor:MenloBaseErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

tcaAdaptorCorrectableErrorsDeltaMax**Fault Code: F34248****Message**

Threshold Crossed: adaptor:MenloBaseErrorStats property: correctableErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34248
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax
moClass: adaptor:MenloBaseErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

tcaAdaptorCorrectableErrorsDeltaAvg**Fault Code: F34249****Message**

Threshold Crossed: adaptor:MenloBaseErrorStats property: correctableErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed

```

```

mibFaultCode: 34249
mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg
moClass: adaptor:MenloBaseErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

tcaAdaptorUncorrectableErrorsDelta

Fault Code: F34256

Message

Threshold Crossed: adaptor:MenloBaseErrorStats property: uncorrectableErrorsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34256
mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloBaseErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

tcaAdaptorUncorrectableErrorsDeltaMin

Fault Code: F34257

Message

Threshold Crossed: adaptor:MenloBaseErrorStats property: uncorrectableErrorsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34257
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloBaseErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

tcaAdaptorUncorrectableErrorsDeltaMax

Fault Code: F34258

Message

Threshold Crossed: adaptor:MenloBaseErrorStats property: uncorrectableErrorsDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34258
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax
moClass: adaptor:MenloBaseErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
```

tcaAdaptorUncorrectableErrorsDeltaAvg

Fault Code: F34259

Message

Threshold Crossed: adaptor:MenloBaseErrorStats property: uncorrectableErrorsDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34259
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg
moClass: adaptor:MenloBaseErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
```

tcaAdaptorDropAcIDelta

Fault Code: F34271

Message

Threshold Crossed: adaptor:MenloMcpuStats property: dropAcIDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34271
mibFaultName: tcaAdaptorDropAcldelta
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropAcldeltaMin**Fault Code: F34272****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropAcldeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34272
mibFaultName: tcaAdaptorDropAcldeltaMin
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropAcldeltaMax**Fault Code: F34273****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropAcldeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34273
mibFaultName: tcaAdaptorDropAclDeltaMax
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropAclDeltaAvg**Fault Code: F34274****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropAclDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34274
mibFaultName: tcaAdaptorDropAclDeltaAvg
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropOverrunDelta**Fault Code: F34281****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropOverrunDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34281
mibFaultName: tcaAdaptorDropOverrunDelta
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropOverrunDeltaMin**Fault Code: F34282****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropOverrunDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34282
mibFaultName: tcaAdaptorDropOverrunDeltaMin
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropOverrunDeltaMax**Fault Code: F34283****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropOverrunDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34283
mibFaultName: tcaAdaptorDropOverrunDeltaMax
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropOverrunDeltaAvg**Fault Code:** F34284**Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropOverrunDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34284
mibFaultName: tcaAdaptorDropOverrunDeltaAvg
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropRuntDelta**Fault Code:** F34291**Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropRuntDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34291
mibFaultName: tcaAdaptorDropRuntDelta
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropRuntDeltaMin**Fault Code: F34292****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropRuntDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34292
mibFaultName: tcaAdaptorDropRuntDeltaMin
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropRuntDeltaMax**Fault Code: F34293****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropRuntDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34293
mibFaultName: tcaAdaptorDropRuntDeltaMax
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorDropRuntDeltaAvg**Fault Code:** F34294**Message**

Threshold Crossed: adaptor:MenloMcpuStats property: dropRuntDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34294
mibFaultName: tcaAdaptorDropRuntDeltaAvg
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorTruncateOverrunDelta**Fault Code:** F34301**Message**

Threshold Crossed: adaptor:MenloMcpuStats property: truncateOverrunDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34301
mibFaultName: tcaAdaptorTruncateOverrunDelta
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorTruncateOverrunDeltaMin**Fault Code: F34302****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: truncateOverrunDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34302
mibFaultName: tcaAdaptorTruncateOverrunDeltaMin
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorTruncateOverrunDeltaMax**Fault Code: F34303****Message**

Threshold Crossed: adaptor:MenloMcpuStats property: truncateOverrunDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34303
mibFaultName: tcaAdaptorTruncateOverrunDeltaMax
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorTruncateOverrunDeltaAvg**Fault Code:** F34304**Message**

Threshold Crossed: adaptor:MenloMcpuStats property: truncateOverrunDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34304
mibFaultName: tcaAdaptorTruncateOverrunDeltaAvg
moClass: adaptor:MenloMcpuStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-stats-[menloMcpuIndex]

```

tcaAdaptorCorrectableErrorsDelta**Fault Code:** F34316**Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: correctableErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34316
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorCorrectableErrorsDeltaMin**Fault Code: F34317****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: correctableErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34317
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorCorrectableErrorsDeltaMax**Fault Code: F34318****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: correctableErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34318
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorCorrectableErrorsDeltaAvg**Fault Code: F34319****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: correctableErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34319
mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorPopErrorsDelta**Fault Code: F34326****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: popErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34326
mibFaultName: tcaAdaptorPopErrorsDelta
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorPopErrorsDeltaMin**Fault Code: F34327****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: popErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34327
mibFaultName: tcaAdaptorPopErrorsDeltaMin
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorPopErrorsDeltaMax**Fault Code: F34328****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: popErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34328
mibFaultName: tcaAdaptorPopErrorsDeltaMax
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorPopErrorsDeltaAvg**Fault Code: F34329****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: popErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34329
mibFaultName: tcaAdaptorPopErrorsDeltaAvg
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorPushErrorsDelta**Fault Code: F34336****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: pushErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34336
mibFaultName: tcaAdaptorPushErrorsDelta
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorPushErrorsDeltaMin**Fault Code: F34337****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: pushErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34337
mibFaultName: tcaAdaptorPushErrorsDeltaMin
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorPushErrorsDeltaMax**Fault Code: F34338****Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: pushErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34338
mibFaultName: tcaAdaptorPushErrorsDeltaMax
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorPushErrorsDeltaAvg**Fault Code:** F34339**Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: pushErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34339
mibFaultName: tcaAdaptorPushErrorsDeltaAvg
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorUncorrectableErrorsDelta**Fault Code:** F34346**Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: uncorrectableErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34346
mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorUncorrectableErrorsDeltaMin**Fault Code:** F34347**Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: uncorrectableErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34347
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorUncorrectableErrorsDeltaMax**Fault Code:** F34348**Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: uncorrectableErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34348
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorUncorrectableErrorsDeltaAvg**Fault Code:** F34349**Message**

Threshold Crossed: adaptor:MenloMcpuErrorStats property: uncorrectableErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34349
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg
moClass: adaptor:MenloMcpuErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-mcpu-error-stats-[menloMcpuIndex]

```

tcaAdaptorDropOverrunDelta**Fault Code:** F34361**Message**

Threshold Crossed: adaptor:MenloEthStats property: dropOverrunDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34361
mibFaultName: tcaAdaptorDropOverrunDelta
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorDropOverrunDeltaMin**Fault Code: F34362****Message**

Threshold Crossed: adaptor:MenloEthStats property: dropOverrunDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34362
mibFaultName: tcaAdaptorDropOverrunDeltaMin
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorDropOverrunDeltaMax**Fault Code: F34363****Message**

Threshold Crossed: adaptor:MenloEthStats property: dropOverrunDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34363
mibFaultName: tcaAdaptorDropOverrunDeltaMax
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorDropOverrunDeltaAvg**Fault Code:** F34364**Message**

Threshold Crossed: adaptor:MenloEthStats property: dropOverrunDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34364
mibFaultName: tcaAdaptorDropOverrunDeltaAvg
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorDropRuntDelta**Fault Code:** F34371**Message**

Threshold Crossed: adaptor:MenloEthStats property: dropRuntDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34371
mibFaultName: tcaAdaptorDropRuntDelta
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorDropRuntDeltaMin**Fault Code: F34372****Message**

Threshold Crossed: adaptor:MenloEthStats property: dropRuntDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34372
mibFaultName: tcaAdaptorDropRuntDeltaMin
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorDropRuntDeltaMax**Fault Code: F34373****Message**

Threshold Crossed: adaptor:MenloEthStats property: dropRuntDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34373
mibFaultName: tcaAdaptorDropRuntDeltaMax
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorDropRuntDeltaAvg**Fault Code: F34374****Message**

Threshold Crossed: adaptor:MenloEthStats property: dropRuntDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34374
mibFaultName: tcaAdaptorDropRuntDeltaAvg
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorTruncateOverrunDelta**Fault Code: F34381****Message**

Threshold Crossed: adaptor:MenloEthStats property: truncateOverrunDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34381
mibFaultName: tcaAdaptorTruncateOverrunDelta
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorTruncateOverrunDeltaMin**Fault Code: F34382****Message**

Threshold Crossed: adaptor:MenloEthStats property: truncateOverrunDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34382
mibFaultName: tcaAdaptorTruncateOverrunDeltaMin
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorTruncateOverrunDeltaMax**Fault Code: F34383****Message**

Threshold Crossed: adaptor:MenloEthStats property: truncateOverrunDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34383
mibFaultName: tcaAdaptorTruncateOvrrunDeltaMax
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorTruncateOvrrunDeltaAvg**Fault Code: F34384****Message**

Threshold Crossed: adaptor:MenloEthStats property: truncateOvrrunDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34384
mibFaultName: tcaAdaptorTruncateOvrrunDeltaAvg
moClass: adaptor:MenloEthStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-stats-[menloEthIndex]

```

tcaAdaptorCorrectableErrorsDelta**Fault Code: F34396****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: correctableErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34396
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorCorrectableErrorsDeltaMin**Fault Code: F34397****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: correctableErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34397
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorCorrectableErrorsDeltaMax**Fault Code: F34398****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: correctableErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34398
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorCorrectableErrorsDeltaAvg**Fault Code:** F34399**Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: correctableErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34399
mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorDropAclDelta**Fault Code:** F34406**Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: dropAclDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34406
mibFaultName: tcaAdaptorDropAcldelta
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorDropAcldeltaMin**Fault Code: F34407****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: dropAcldeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34407
mibFaultName: tcaAdaptorDropAcldeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorDropAcldeltaMax**Fault Code: F34408****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: dropAcldeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34408
mibFaultName: tcaAdaptorDropAcldeltaMax
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorDropAcldeltaAvg**Fault Code:** F34409**Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: dropAcldeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34409
mibFaultName: tcaAdaptorDropAcldeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorPopErrorsDelta**Fault Code:** F34416**Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: popErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34416
mibFaultName: tcaAdaptorPopErrorsDelta
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorPopErrorsDeltaMin**Fault Code: F34417****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: popErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34417
mibFaultName: tcaAdaptorPopErrorsDeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorPopErrorsDeltaMax**Fault Code: F34418****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: popErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34418
mibFaultName: tcaAdaptorPopErrorsDeltaMax
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorPopErrorsDeltaAvg**Fault Code: F34419****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: popErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34419
mibFaultName: tcaAdaptorPopErrorsDeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorPushErrorsDelta**Fault Code: F34426****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: pushErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34426
mibFaultName: tcaAdaptorPushErrorsDelta
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorPushErrorsDeltaMin**Fault Code: F34427****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: pushErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34427
mibFaultName: tcaAdaptorPushErrorsDeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorPushErrorsDeltaMax**Fault Code: F34428****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: pushErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34428
mibFaultName: tcaAdaptorPushErrorsDeltaMax
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorPushErrorsDeltaAvg**Fault Code:** F34429**Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: pushErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34429
mibFaultName: tcaAdaptorPushErrorsDeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorUncorrectableErrorsDelta**Fault Code:** F34436**Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: uncorrectableErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34436
mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorUncorrectableErrorsDeltaMin**Fault Code: F34437****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: uncorrectableErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34437
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorUncorrectableErrorsDeltaMax**Fault Code: F34438****Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: uncorrectableErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34438
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorUncorrectableErrorsDeltaAvg**Fault Code:** F34439**Message**

Threshold Crossed: adaptor:MenloEthErrorStats property: uncorrectableErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34439
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg
moClass: adaptor:MenloEthErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-eth-error-stats-[menloEthIndex]

```

tcaAdaptorDropAcIdelta**Fault Code:** F34451**Message**

Threshold Crossed: adaptor:MenloFcStats property: dropAcIdelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34451
mibFaultName: tcaAdaptorDropAcldelta
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropAcldeltaMin**Fault Code: F34452****Message**

Threshold Crossed: adaptor:MenloFcStats property: dropAcldeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34452
mibFaultName: tcaAdaptorDropAcldeltaMin
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropAcldeltaMax**Fault Code: F34453****Message**

Threshold Crossed: adaptor:MenloFcStats property: dropAcldeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34453
mibFaultName: tcaAdaptorDropAcIDeltaMax
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropAcIDeltaAvg**Fault Code:** F34454**Message**

Threshold Crossed: adaptor:MenloFcStats property: dropAcIDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34454
mibFaultName: tcaAdaptorDropAcIDeltaAvg
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropOverrunDelta**Fault Code:** F34461**Message**

Threshold Crossed: adaptor:MenloFcStats property: dropOverrunDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34461
mibFaultName: tcaAdaptorDropOverrunDelta
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropOverrunDeltaMin**Fault Code:** F34462**Message**

Threshold Crossed: adaptor:MenloFcStats property: dropOverrunDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34462
mibFaultName: tcaAdaptorDropOverrunDeltaMin
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropOverrunDeltaMax**Fault Code:** F34463**Message**

Threshold Crossed: adaptor:MenloFcStats property: dropOverrunDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34463
mibFaultName: tcaAdaptorDropOverrunDeltaMax
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropOverrunDeltaAvg**Fault Code:** F34464**Message**

Threshold Crossed: adaptor:MenloFcStats property: dropOverrunDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34464
mibFaultName: tcaAdaptorDropOverrunDeltaAvg
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropRuntDelta**Fault Code:** F34471**Message**

Threshold Crossed: adaptor:MenloFcStats property: dropRuntDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34471
mibFaultName: tcaAdaptorDropRuntDelta
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropRuntDeltaMin**Fault Code: F34472****Message**

Threshold Crossed: adaptor:MenloFcStats property: dropRuntDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34472
mibFaultName: tcaAdaptorDropRuntDeltaMin
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropRuntDeltaMax**Fault Code: F34473****Message**

Threshold Crossed: adaptor:MenloFcStats property: dropRuntDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34473
mibFaultName: tcaAdaptorDropRuntDeltaMax
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorDropRuntDeltaAvg**Fault Code: F34474****Message**

Threshold Crossed: adaptor:MenloFcStats property: dropRuntDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34474
mibFaultName: tcaAdaptorDropRuntDeltaAvg
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorTruncateOverrunDelta**Fault Code: F34481****Message**

Threshold Crossed: adaptor:MenloFcStats property: truncateOverrunDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34481
mibFaultName: tcaAdaptorTruncateOvrrunDelta
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorTruncateOvrrunDeltaMin**Fault Code: F34482****Message**

Threshold Crossed: adaptor:MenloFcStats property: truncateOvrrunDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34482
mibFaultName: tcaAdaptorTruncateOvrrunDeltaMin
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorTruncateOvrrunDeltaMax**Fault Code: F34483****Message**

Threshold Crossed: adaptor:MenloFcStats property: truncateOvrrunDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34483
mibFaultName: tcaAdaptorTruncateOverrunDeltaMax
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorTruncateOverrunDeltaAvg**Fault Code: F34484****Message**

Threshold Crossed: adaptor:MenloFcStats property: truncateOverrunDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34484
mibFaultName: tcaAdaptorTruncateOverrunDeltaAvg
moClass: adaptor:MenloFcStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-stats-[menloFcIndex]

```

tcaAdaptorCorrectableErrorsDelta**Fault Code: F34496****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: correctableErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34496
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorCorrectableErrorsDeltaMin**Fault Code: F34497****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: correctableErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34497
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorCorrectableErrorsDeltaMax**Fault Code: F34498****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: correctableErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34498
mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorCorrectableErrorsDeltaAvg**Fault Code:** F34499**Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: correctableErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34499
mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorPopErrorsDelta**Fault Code:** F34506**Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: popErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34506
mibFaultName: tcaAdaptorPopErrorsDelta
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorPopErrorsDeltaMin**Fault Code: F34507****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: popErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34507
mibFaultName: tcaAdaptorPopErrorsDeltaMin
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorPopErrorsDeltaMax**Fault Code: F34508****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: popErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34508
mibFaultName: tcaAdaptorPopErrorsDeltaMax
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorPopErrorsDeltaAvg**Fault Code: F34509****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: popErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34509
mibFaultName: tcaAdaptorPopErrorsDeltaAvg
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorPushErrorsDelta**Fault Code: F34516****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: pushErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34516
mibFaultName: tcaAdaptorPushErrorsDelta
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorPushErrorsDeltaMin**Fault Code: F34517****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: pushErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34517
mibFaultName: tcaAdaptorPushErrorsDeltaMin
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorPushErrorsDeltaMax**Fault Code: F34518****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: pushErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34518
mibFaultName: tcaAdaptorPushErrorsDeltaMax
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorPushErrorsDeltaAvg**Fault Code: F34519****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: pushErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34519
mibFaultName: tcaAdaptorPushErrorsDeltaAvg
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorUncorrectableErrorsDelta**Fault Code: F34526****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: uncorrectableErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34526
mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorUncorrectableErrorsDeltaMin**Fault Code: F34527****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: uncorrectableErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34527
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorUncorrectableErrorsDeltaMax**Fault Code: F34528****Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: uncorrectableErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34528
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorUncorrectableErrorsDeltaAvg**Fault Code:** F34529**Message**

Threshold Crossed: adaptor:MenloFcErrorStats property: uncorrectableErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34529
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg
moClass: adaptor:MenloFcErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-fc-error-stats-[menloFcIndex]

```

tcaAdaptorDropOverrunN0Delta**Fault Code:** F34542**Message**

Threshold Crossed: adaptor:MenloQStats property: dropOverrunN0Delta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34542
mibFaultName: tcaAdaptorDropOverrunN0Delta
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorDropOverrunN0DeltaMin**Fault Code: F34543****Message**

Threshold Crossed: adaptor:MenloQStats property: dropOverrunN0DeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34543
mibFaultName: tcaAdaptorDropOverrunN0DeltaMin
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorDropOverrunN0DeltaMax

Fault Code: F34544

Message

Threshold Crossed: adaptor:MenloQStats property: dropOverrunN0DeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34544
mibFaultName: tcaAdaptorDropOverrunN0DeltaMax
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorDropOverrunN0DeltaAvg

Fault Code: F34545

Message

Threshold Crossed: adaptor:MenloQStats property: dropOverrunN0DeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34545
mibFaultName: tcaAdaptorDropOverrunN0DeltaAvg
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]

```

Affected MO:

```
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorDropOverrunN1Delta**Fault Code:** F34552**Message**

Threshold Crossed: adaptor:MenloQStats property: dropOverrunN1Delta

Explanation**Recommended Action****Fault Details****Severity:** info**Cause:** threshold-crossed**mibFaultCode:** 34552**mibFaultName:** tcaAdaptorDropOverrunN1Delta**moClass:** adaptor:MenloQStats**Type:** server**Callhome:** none**Callhome Enabled:** no**Auto Cleared:** true**Is Implemented:** true**Affected MO:**

```
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

Affected MO:

```
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorDropOverrunN1DeltaMin**Fault Code:** F34553**Message**

Threshold Crossed: adaptor:MenloQStats property: dropOverrunN1DeltaMin

Explanation**Recommended Action****Fault Details****Severity:** info**Cause:** threshold-crossed**mibFaultCode:** 34553**mibFaultName:** tcaAdaptorDropOverrunN1DeltaMin**moClass:** adaptor:MenloQStats**Type:** server**Callhome:** none**Callhome Enabled:** no**Auto Cleared:** true**Is Implemented:** true

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorDropOverrunN1DeltaMax

Fault Code: F34554

Message

Threshold Crossed: adaptor:MenloQStats property: dropOverrunN1DeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34554
mibFaultName: tcaAdaptorDropOverrunN1DeltaMax
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorDropOverrunN1DeltaAvg

Fault Code: F34555

Message

Threshold Crossed: adaptor:MenloQStats property: dropOverrunN1DeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34555
mibFaultName: tcaAdaptorDropOverrunN1DeltaAvg
moClass: adaptor:MenloQStats
Type: server
Callhome: none


```

Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorTruncateOverrunN0Delta

Fault Code: F34562

Message

Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN0Delta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34562
mibFaultName: tcaAdaptorTruncateOverrunN0Delta
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorTruncateOverrunN0DeltaMin

Fault Code: F34563

Message

Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN0DeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34563
mibFaultName: tcaAdaptorTruncateOverrunN0DeltaMin

```

```

moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorTruncateOverrunN0DeltaMax

Fault Code: F34564

Message

Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN0DeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34564
mibFaultName: tcaAdaptorTruncateOverrunN0DeltaMax
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorTruncateOverrunN0DeltaAvg

Fault Code: F34565

Message

Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN0DeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info

```

```

Cause: threshold-crossed
mibFaultCode: 34565
mibFaultName: tcaAdaptorTruncateOverrunN0DeltaAvg
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorTruncateOverrunN1Delta

Fault Code: F34572

Message

Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN1Delta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34572
mibFaultName: tcaAdaptorTruncateOverrunN1Delta
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorTruncateOverrunN1DeltaMin

Fault Code: F34573

Message

Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN1DeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34573
mibFaultName: tcaAdaptorTruncateOverrunN1DeltaMin
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorTruncateOverrunN1DeltaMax**Fault Code: F34574****Message**

Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN1DeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34574
mibFaultName: tcaAdaptorTruncateOverrunN1DeltaMax
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]i
ndex-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQu
eueIndex]

```

tcaAdaptorTruncateOverrunN1DeltaAvg

Fault Code: F34575

Message

Threshold Crossed: adaptor:MenloQStats property: truncateOverrunN1DeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34575
mibFaultName: tcaAdaptorTruncateOverrunN1DeltaAvg
moClass: adaptor:MenloQStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorCorrectableErrorsDelta

Fault Code: F34588

Message

Threshold Crossed: adaptor:MenloQErrorStats property: correctableErrorsDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34588
mibFaultName: tcaAdaptorCorrectableErrorsDelta
moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

Affected MO:

sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorCorrectableErrorsDeltaMin

Fault Code: F34589

Message

Threshold Crossed: adaptor:MenloQErrorStats property: correctableErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

Severity: info

Cause: threshold-crossed

mibFaultCode: 34589

mibFaultName: tcaAdaptorCorrectableErrorsDeltaMin

moClass: adaptor:MenloQErrorStats

Type: server

Callhome: none

Callhome Enabled: no

Auto Cleared: true

Is Implemented: true

Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

Affected MO:

sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorCorrectableErrorsDeltaMax

Fault Code: F34590

Message

Threshold Crossed: adaptor:MenloQErrorStats property: correctableErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

Severity: info

Cause: threshold-crossed

mibFaultCode: 34590

mibFaultName: tcaAdaptorCorrectableErrorsDeltaMax

moClass: adaptor:MenloQErrorStats

Type: server

Callhome: none

Callhome Enabled: no

Auto Cleared: true

Is Implemented: true

Affected MO:

```
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

Affected MO:

```
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorCorrectableErrorsDeltaAvg

Fault Code: F34591

Message

Threshold Crossed: adaptor:MenloQErrorStats property: correctableErrorsDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info

Cause: threshold-crossed

mibFaultCode: 34591

mibFaultName: tcaAdaptorCorrectableErrorsDeltaAvg

moClass: adaptor:MenloQErrorStats

Type: server

Callhome: none

Callhome Enabled: no

Auto Cleared: true

Is Implemented: true

Affected MO:

```
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

Affected MO:

```
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorPopErrorsDelta

Fault Code: F34598

Message

Threshold Crossed: adaptor:MenloQErrorStats property: popErrorsDelta

Explanation

Recommended Action

Fault Details

Severity: info

Cause: threshold-crossed

mibFaultCode: 34598

mibFaultName: tcaAdaptorPopErrorsDelta

moClass: adaptor:MenloQErrorStats

Type: server

Callhome: none

```

Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

tcaAdaptorPopErrorsDeltaMin

Fault Code: F34599

Message

Threshold Crossed: adaptor:MenloQErrorStats property: popErrorsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34599
mibFaultName: tcaAdaptorPopErrorsDeltaMin
moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

tcaAdaptorPopErrorsDeltaMax

Fault Code: F34600

Message

Threshold Crossed: adaptor:MenloQErrorStats property: popErrorsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34600
mibFaultName: tcaAdaptorPopErrorsDeltaMax

```



```

moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

tcaAdaptorPopErrorsDeltaAvg

Fault Code: F34601

Message

Threshold Crossed: adaptor:MenloQErrorStats property: popErrorsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34601
mibFaultName: tcaAdaptorPopErrorsDeltaAvg
moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

tcaAdaptorPushErrorsDelta

Fault Code: F34608

Message

Threshold Crossed: adaptor:MenloQErrorStats property: pushErrorsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info

```

```

Cause: threshold-crossed
mibFaultCode: 34608
mibFaultName: tcaAdaptorPushErrorsDelta
moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

tcaAdaptorPushErrorsDeltaMin

Fault Code: F34609

Message

Threshold Crossed: adaptor:MenloQErrorStats property: pushErrorsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34609
mibFaultName: tcaAdaptorPushErrorsDeltaMin
moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

tcaAdaptorPushErrorsDeltaMax

Fault Code: F34610

Message

Threshold Crossed: adaptor:MenloQErrorStats property: pushErrorsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34610
mibFaultName: tcaAdaptorPushErrorsDeltaMax
moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

tcaAdaptorPushErrorsDeltaAvg**Fault Code: F34611****Message**

Threshold Crossed: adaptor:MenloQErrorStats property: pushErrorsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34611
mibFaultName: tcaAdaptorPushErrorsDeltaAvg
moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

tcaAdaptorUncorrectableErrorsDelta

Fault Code: F34618

Message

Threshold Crossed: adaptor:MenloQErrorStats property: uncorrectableErrorsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34618
mibFaultName: tcaAdaptorUncorrectableErrorsDelta
moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

tcaAdaptorUncorrectableErrorsDeltaMin

Fault Code: F34619

Message

Threshold Crossed: adaptor:MenloQErrorStats property: uncorrectableErrorsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34619
mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMin
moClass: adaptor:MenloQErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

```

Affected MO:

```
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorUncorrectableErrorsDeltaMax

Fault Code: F34620

Message

Threshold Crossed: adaptor:MenloQErrorStats property: uncorrectableErrorsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info

Cause: threshold-crossed

mibFaultCode: 34620

mibFaultName: tcaAdaptorUncorrectableErrorsDeltaMax

moClass: adaptor:MenloQErrorStats

Type: server

Callhome: none

Callhome Enabled: no

Auto Cleared: true

Is Implemented: true

Affected MO:

```
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

Affected MO:

```
sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
```

tcaAdaptorUncorrectableErrorsDeltaAvg

Fault Code: F34621

Message

Threshold Crossed: adaptor:MenloQErrorStats property: uncorrectableErrorsDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info

Cause: threshold-crossed

mibFaultCode: 34621

mibFaultName: tcaAdaptorUncorrectableErrorsDeltaAvg

moClass: adaptor:MenloQErrorStats

Type: server

Callhome: none

Callhome Enabled: no

Auto Cleared: true

Is Implemented: true

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/menlo-q-error-stats-comp-[menloQueueComponent]index-[menloQueueIndex]

tcaAdaptorLearnReqDropDelta

Fault Code: F34633

Message

Threshold Crossed: adaptor:MenloNetEgStats property: learnReqDropDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34633
mibFaultName: tcaAdaptorLearnReqDropDelta
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorLearnReqDropDeltaMin

Fault Code: F34634

Message

Threshold Crossed: adaptor:MenloNetEgStats property: learnReqDropDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34634
mibFaultName: tcaAdaptorLearnReqDropDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorLearnReqDropDeltaMax

Fault Code: F34635

Message

Threshold Crossed: adaptor:MenloNetEgStats property: learnReqDropDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34635
mibFaultName: tcaAdaptorLearnReqDropDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorLearnReqDropDeltaAvg

Fault Code: F34636

Message

Threshold Crossed: adaptor:MenloNetEgStats property: learnReqDropDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34636
mibFaultName: tcaAdaptorLearnReqDropDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]

tcaAdaptorDropCmdDelta

Fault Code: F34643

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropCmdDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34643
mibFaultName: tcaAdaptorDropCmdDelta
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropCmdDeltaMin

Fault Code: F34644

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropCmdDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34644
mibFaultName: tcaAdaptorDropCmdDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```


tcaAdaptorDropCmdDeltaMax

Fault Code: F34645

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropCmdDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34645
mibFaultName: tcaAdaptorDropCmdDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropCmdDeltaAvg

Fault Code: F34646

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropCmdDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34646
mibFaultName: tcaAdaptorDropCmdDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifCfgInvalidDelta

Fault Code: F34653

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropLifCfgInvalidDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34653
mibFaultName: tcaAdaptorDropLifCfgInvalidDelta
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifCfgInvalidDeltaMin

Fault Code: F34654

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropLifCfgInvalidDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34654
mibFaultName: tcaAdaptorDropLifCfgInvalidDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifCfgInvalidDeltaMax

Fault Code: F34655

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropLifCfgInvalidDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34655
mibFaultName: tcaAdaptorDropLifCfgInvalidDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifCfgInvalidDeltaAvg

Fault Code: F34656

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropLifCfgInvalidDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34656
mibFaultName: tcaAdaptorDropLifCfgInvalidDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifMapNoHitDelta

Fault Code: F34663

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropLifMapNoHitDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34663
mibFaultName: tcaAdaptorDropLifMapNoHitDelta
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifMapNoHitDeltaMin

Fault Code: F34664

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropLifMapNoHitDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34664
mibFaultName: tcaAdaptorDropLifMapNoHitDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifMapNoHitDeltaMax

Fault Code: F34665

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropLifMapNoHitDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34665
mibFaultName: tcaAdaptorDropLifMapNoHitDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropLifMapNoHitDeltaAvg

Fault Code: F34666

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropLifMapNoHitDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34666
mibFaultName: tcaAdaptorDropLifMapNoHitDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropSrcBindDelta

Fault Code: F34673

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropSrcBindDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34673
mibFaultName: tcaAdaptorDropSrcBindDelta
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropSrcBindDeltaMin

Fault Code: F34674

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropSrcBindDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34674
mibFaultName: tcaAdaptorDropSrcBindDeltaMin
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropSrcBindDeltaMax

Fault Code: F34675

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropSrcBindDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34675
mibFaultName: tcaAdaptorDropSrcBindDeltaMax
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorDropSrcBindDeltaAvg

Fault Code: F34676

Message

Threshold Crossed: adaptor:MenloNetEgStats property: dropSrcBindDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34676
mibFaultName: tcaAdaptorDropSrcBindDeltaAvg
moClass: adaptor:MenloNetEgStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-eg-stats-[menloNetIndex]
```

tcaAdaptorFwdLookupNoHitDelta

Fault Code: F34688

Message

Threshold Crossed: adaptor:MenloNetInStats property: fwdLookupNoHitDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34688
mibFaultName: tcaAdaptorFwdLookupNoHitDelta
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorFwdLookupNoHitDeltaMin

Fault Code: F34689

Message

Threshold Crossed: adaptor:MenloNetInStats property: fwdLookupNoHitDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34689
mibFaultName: tcaAdaptorFwdLookupNoHitDeltaMin
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```


tcaAdaptorFwdLookupNoHitDeltaMax

Fault Code: F34690

Message

Threshold Crossed: adaptor:MenloNetInStats property: fwdLookupNoHitDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34690
mibFaultName: tcaAdaptorFwdLookupNoHitDeltaMax
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorFwdLookupNoHitDeltaAvg

Fault Code: F34691

Message

Threshold Crossed: adaptor:MenloNetInStats property: fwdLookupNoHitDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34691
mibFaultName: tcaAdaptorFwdLookupNoHitDeltaAvg
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcMulticastDelta

Fault Code: F34698

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropFcMulticastDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34698
mibFaultName: tcaAdaptorDropFcMulticastDelta
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcMulticastDeltaMin

Fault Code: F34699

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropFcMulticastDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34699
mibFaultName: tcaAdaptorDropFcMulticastDeltaMin
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcMulticastDeltaMax

Fault Code: F34700

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropFcMulticastDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34700
mibFaultName: tcaAdaptorDropFcMulticastDeltaMax
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcMulticastDeltaAvg

Fault Code: F34701

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropFcMulticastDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34701
mibFaultName: tcaAdaptorDropFcMulticastDeltaAvg
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcLifInvalidDelta

Fault Code: F34708

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropFcLifInvalidDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34708
mibFaultName: tcaAdaptorDropFcLifInvalidDelta
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcLifInvalidDeltaMin

Fault Code: F34709

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropFcLifInvalidDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34709
mibFaultName: tcaAdaptorDropFcLifInvalidDeltaMin
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcLifInvalidDeltaMax

Fault Code: F34710

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropFcLifInvalidDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34710
mibFaultName: tcaAdaptorDropFcLifInvalidDeltaMax
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropFcLifInvalidDeltaAvg

Fault Code: F34711

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropFcLifInvalidDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34711
mibFaultName: tcaAdaptorDropFcLifInvalidDeltaAvg
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropNullPifDelta

Fault Code: F34718

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropNullPifDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34718
mibFaultName: tcaAdaptorDropNullPifDelta
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropNullPifDeltaMin

Fault Code: F34719

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropNullPifDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34719
mibFaultName: tcaAdaptorDropNullPifDeltaMin
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropNullPifDeltaMax

Fault Code: F34720

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropNullPifDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34720
mibFaultName: tcaAdaptorDropNullPifDeltaMax
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorDropNullPifDeltaAvg

Fault Code: F34721

Message

Threshold Crossed: adaptor:MenloNetInStats property: dropNullPifDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34721
mibFaultName: tcaAdaptorDropNullPifDeltaAvg
moClass: adaptor:MenloNetInStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-net-in-stats-[menloNetIndex]
```

tcaAdaptorRxPauseCFCDelta

Fault Code: F34733

Message

Threshold Crossed: adaptor:MenloHostPortStats property: rxPauseCFCDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34733
mibFaultName: tcaAdaptorRxPauseCFCDelta
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPauseCFCDeltaMin

Fault Code: F34734

Message

Threshold Crossed: adaptor:MenloHostPortStats property: rxPauseCFCDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34734
mibFaultName: tcaAdaptorRxPauseCFCDeltaMin
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```


tcaAdaptorRxPauseCFCDeltaMax

Fault Code: F34735

Message

Threshold Crossed: adaptor:MenloHostPortStats property: rxPauseCFCDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34735
mibFaultName: tcaAdaptorRxPauseCFCDeltaMax
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPauseCFCDeltaAvg

Fault Code: F34736

Message

Threshold Crossed: adaptor:MenloHostPortStats property: rxPauseCFCDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34736
mibFaultName: tcaAdaptorRxPauseCFCDeltaAvg
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDelta

Fault Code: F34743

Message

Threshold Crossed: adaptor:MenloHostPortStats property: rxPausePFCDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34743
mibFaultName: tcaAdaptorRxPausePFCDelta
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDeltaMin

Fault Code: F34744

Message

Threshold Crossed: adaptor:MenloHostPortStats property: rxPausePFCDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34744
mibFaultName: tcaAdaptorRxPausePFCDeltaMin
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDeltaMax

Fault Code: F34745

Message

Threshold Crossed: adaptor:MenloHostPortStats property: rxPausePFCDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34745
mibFaultName: tcaAdaptorRxPausePFCDeltaMax
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDeltaAvg

Fault Code: F34746

Message

Threshold Crossed: adaptor:MenloHostPortStats property: rxPausePFCDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34746
mibFaultName: tcaAdaptorRxPausePFCDeltaAvg
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDelta

Fault Code: F34753

Message

Threshold Crossed: adaptor:MenloHostPortStats property: txPauseCFCDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34753
mibFaultName: tcaAdaptorTxPauseCFCDelta
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDeltaMin

Fault Code: F34754

Message

Threshold Crossed: adaptor:MenloHostPortStats property: txPauseCFCDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34754
mibFaultName: tcaAdaptorTxPauseCFCDeltaMin
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDeltaMax

Fault Code: F34755

Message

Threshold Crossed: adaptor:MenloHostPortStats property: txPauseCFCDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34755
mibFaultName: tcaAdaptorTxPauseCFCDeltaMax
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDeltaAvg

Fault Code: F34756

Message

Threshold Crossed: adaptor:MenloHostPortStats property: txPauseCFCDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34756
mibFaultName: tcaAdaptorTxPauseCFCDeltaAvg
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDelta

Fault Code: F34763

Message

Threshold Crossed: adaptor:MenloHostPortStats property: txPausePFCDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34763
mibFaultName: tcaAdaptorTxPausePFCDelta
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDeltaMin

Fault Code: F34764

Message

Threshold Crossed: adaptor:MenloHostPortStats property: txPausePFCDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34764
mibFaultName: tcaAdaptorTxPausePFCDeltaMin
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDeltaMax

Fault Code: F34765

Message

Threshold Crossed: adaptor:MenloHostPortStats property: txPausePFCDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34765
mibFaultName: tcaAdaptorTxPausePFCDeltaMax
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDeltaAvg

Fault Code: F34766

Message

Threshold Crossed: adaptor:MenloHostPortStats property: txPausePFCDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34766
mibFaultName: tcaAdaptorTxPausePFCDeltaAvg
moClass: adaptor:MenloHostPortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-host-port-stats-[menloPortIndex]
```

tcaAdaptorRxPauseCFCDelta

Fault Code: F34778

Message

Threshold Crossed: adaptor:MenloDcePortStats property: rxPauseCFCDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34778
mibFaultName: tcaAdaptorRxPauseCFCDelta
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorRxPauseCFCDeltaMin

Fault Code: F34779

Message

Threshold Crossed: adaptor:MenloDcePortStats property: rxPauseCFCDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34779
mibFaultName: tcaAdaptorRxPauseCFCDeltaMin
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```


tcaAdaptorRxPauseCFCDeltaMax

Fault Code: F34780

Message

Threshold Crossed: adaptor:MenloDcePortStats property: rxPauseCFCDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34780
mibFaultName: tcaAdaptorRxPauseCFCDeltaMax
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorRxPauseCFCDeltaAvg

Fault Code: F34781

Message

Threshold Crossed: adaptor:MenloDcePortStats property: rxPauseCFCDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34781
mibFaultName: tcaAdaptorRxPauseCFCDeltaAvg
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDelta

Fault Code: F34788

Message

Threshold Crossed: adaptor:MenloDcePortStats property: rxPausePFCDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34788
mibFaultName: tcaAdaptorRxPausePFCDelta
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDeltaMin

Fault Code: F34789

Message

Threshold Crossed: adaptor:MenloDcePortStats property: rxPausePFCDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34789
mibFaultName: tcaAdaptorRxPausePFCDeltaMin
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDeltaMax

Fault Code: F34790

Message

Threshold Crossed: adaptor:MenloDcePortStats property: rxPausePFCDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34790
mibFaultName: tcaAdaptorRxPausePFCDeltaMax
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorRxPausePFCDeltaAvg

Fault Code: F34791

Message

Threshold Crossed: adaptor:MenloDcePortStats property: rxPausePFCDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34791
mibFaultName: tcaAdaptorRxPausePFCDeltaAvg
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDelta

Fault Code: F34798

Message

Threshold Crossed: adaptor:MenloDcePortStats property: txPauseCFCDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34798
mibFaultName: tcaAdaptorTxPauseCFCDelta
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDeltaMin

Fault Code: F34799

Message

Threshold Crossed: adaptor:MenloDcePortStats property: txPauseCFCDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34799
mibFaultName: tcaAdaptorTxPauseCFCDeltaMin
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDeltaMax

Fault Code: F34800

Message

Threshold Crossed: adaptor:MenloDcePortStats property: txPauseCFCDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34800
mibFaultName: tcaAdaptorTxPauseCFCDeltaMax
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPauseCFCDeltaAvg

Fault Code: F34801

Message

Threshold Crossed: adaptor:MenloDcePortStats property: txPauseCFCDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34801
mibFaultName: tcaAdaptorTxPauseCFCDeltaAvg
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDelta

Fault Code: F34808

Message

Threshold Crossed: adaptor:MenloDcePortStats property: txPausePFCDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34808
mibFaultName: tcaAdaptorTxPausePFCDelta
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDeltaMin

Fault Code: F34809

Message

Threshold Crossed: adaptor:MenloDcePortStats property: txPausePFCDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34809
mibFaultName: tcaAdaptorTxPausePFCDeltaMin
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDeltaMax

Fault Code: F34810

Message

Threshold Crossed: adaptor:MenloDcePortStats property: txPausePFCDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34810
mibFaultName: tcaAdaptorTxPausePFCDeltaMax
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxPausePFCDeltaAvg

Fault Code: F34811

Message

Threshold Crossed: adaptor:MenloDcePortStats property: txPausePFCDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34811
mibFaultName: tcaAdaptorTxPausePFCDeltaAvg
moClass: adaptor:MenloDcePortStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
Affected MO: sys/rack-unit-[id]/adaptor-[id]/menlo-dce-port-stats-[menloPortIndex]
```

tcaAdaptorTxBytesDelta

Fault Code: F34822

Message

Threshold Crossed: adaptor:EtherIfStats property: txBytesDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34822
mibFaultName: tcaAdaptorTxBytesDelta
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxBytesDeltaMin

Fault Code: F34823

Message

Threshold Crossed: adaptor:EtherIfStats property: txBytesDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34823
mibFaultName: tcaAdaptorTxBytesDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
 stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxBytesDeltaMax

Fault Code: F34824

Message

Threshold Crossed: adaptor:EtherIfStats property: txBytesDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34824
mibFaultName: tcaAdaptorTxBytesDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
 stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxBytesDeltaAvg

Fault Code: F34825

Message

Threshold Crossed: adaptor:EtherIfStats property: txBytesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34825
mibFaultName: tcaAdaptorTxBytesDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorTxPacketsDelta**Fault Code:** F34832**Message**

Threshold Crossed: adaptor:EtherIfStats property: txPacketsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34832
mibFaultName: tcaAdaptorTxPacketsDelta
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

```

Affected MO:

sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxPacketsDeltaMin

Fault Code: F34833

Message

Threshold Crossed: adaptor:EtherIfStats property: txPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info

Cause: threshold-crossed

mibFaultCode: 34833

mibFaultName: tcaAdaptorTxPacketsDeltaMin

moClass: adaptor:EtherIfStats

Type: generic

Callhome: none

Callhome Enabled: no

Auto Cleared: true

Is Implemented: true

Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats

Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

Affected MO:

sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxPacketsDeltaMax

Fault Code: F34834

Message

Threshold Crossed: adaptor:EtherIfStats property: txPacketsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info

Cause: threshold-crossed

mibFaultCode: 34834

mibFaultName: tcaAdaptorTxPacketsDeltaMax

moClass: adaptor:EtherIfStats

Type: generic

```

Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorTxPacketsDeltaAvg

Fault Code: F34835

Message

Threshold Crossed: adaptor:EtherIfStats property: txPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34835
mibFaultName: tcaAdaptorTxPacketsDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorTxErrorsDelta

Fault Code: F34842

Message

Threshold Crossed: adaptor:EtherIfStats property: txErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34842
mibFaultName: tcaAdaptorTxErrorsDelta
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorTxErrorsDeltaMin**Fault Code: F34843****Message**

Threshold Crossed: adaptor:EtherIfStats property: txErrorsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34843
mibFaultName: tcaAdaptorTxErrorsDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

```

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxErrorsDeltaMax

Fault Code: F34844

Message

Threshold Crossed: adaptor:EtherIfStats property: txErrorsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34844
mibFaultName: tcaAdaptorTxErrorsDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxErrorsDeltaAvg

Fault Code: F34845

Message

Threshold Crossed: adaptor:EtherIfStats property: txErrorsDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34845
mibFaultName: tcaAdaptorTxErrorsDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic

```

Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorTxDroppedDelta

Fault Code: F34852

Message

Threshold Crossed: adaptor:EtherIfStats property: txDroppedDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34852
mibFaultName: tcaAdaptorTxDroppedDelta
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorTxDroppedDeltaMin

Fault Code: F34853

Message

Threshold Crossed: adaptor:EtherIfStats property: txDroppedDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34853
mibFaultName: tcaAdaptorTxDroppedDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorTxDroppedDeltaMax**Fault Code:** F34854**Message**

Threshold Crossed: adaptor:EtherIfStats property: txDroppedDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34854
mibFaultName: tcaAdaptorTxDroppedDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

```


Affected MO:

sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorTxDroppedDeltaAvg**Fault Code: F34855****Message**

Threshold Crossed: adaptor:EtherIfStats property: txDroppedDeltaAvg

Explanation**Recommended Action****Fault Details****Severity:** info**Cause:** threshold-crossed**mibFaultCode:** 34855**mibFaultName:** tcaAdaptorTxDroppedDeltaAvg**moClass:** adaptor:EtherIfStats**Type:** generic**Callhome:** none**Callhome Enabled:** no**Auto Cleared:** true**Is Implemented:** true**Affected MO:**

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats

Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats**Affected MO:** sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats**Affected MO:**

sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxBytesDelta**Fault Code: F34862****Message**

Threshold Crossed: adaptor:EtherIfStats property: rxBytesDelta

Explanation**Recommended Action****Fault Details****Severity:** info**Cause:** threshold-crossed**mibFaultCode:** 34862**mibFaultName:** tcaAdaptorRxBytesDelta**moClass:** adaptor:EtherIfStats**Type:** generic

```

Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorRxBytesDeltaMin

Fault Code: F34863

Message

Threshold Crossed: adaptor:EtherIfStats property: rxBytesDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34863
mibFaultName: tcaAdaptorRxBytesDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorRxBytesDeltaMax

Fault Code: F34864

Message

Threshold Crossed: adaptor:EtherIfStats property: rxBytesDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34864
mibFaultName: tcaAdaptorRxBytesDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorRxBytesDeltaAvg**Fault Code:** F34865**Message**

Threshold Crossed: adaptor:EtherIfStats property: rxBytesDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34865
mibFaultName: tcaAdaptorRxBytesDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

```

Affected MO:

sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxPacketsDelta

Fault Code: F34872**Message**

Threshold Crossed: adaptor:EtherIfStats property: rxPacketsDelta

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: threshold-crossed
mibFaultCode: 34872
mibFaultName: tcaAdaptorRxPacketsDelta
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxPacketsDeltaMin

Fault Code: F34873**Message**

Threshold Crossed: adaptor:EtherIfStats property: rxPacketsDeltaMin

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: threshold-crossed
mibFaultCode: 34873
mibFaultName: tcaAdaptorRxPacketsDeltaMin
moClass: adaptor:EtherIfStats
Type: generic

```

Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorRxPacketsDeltaMax

Fault Code: F34874

Message

Threshold Crossed: adaptor:EtherIfStats property: rxPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34874
mibFaultName: tcaAdaptorRxPacketsDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorRxPacketsDeltaAvg

Fault Code: F34875

Message

Threshold Crossed: adaptor:EtherIfStats property: rxPacketsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34875
mibFaultName: tcaAdaptorRxPacketsDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorRxErrorsDelta**Fault Code: F34882****Message**

Threshold Crossed: adaptor:EtherIfStats property: rxErrorsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34882
mibFaultName: tcaAdaptorRxErrorsDelta
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

```

Affected MO:

sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxErrorsDeltaMin

Fault Code: F34883

Message

Threshold Crossed: adaptor:EtherIfStats property: rxErrorsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info

Cause: threshold-crossed

mibFaultCode: 34883

mibFaultName: tcaAdaptorRxErrorsDeltaMin

moClass: adaptor:EtherIfStats

Type: generic

Callhome: none

Callhome Enabled: no

Auto Cleared: true

Is Implemented: true

Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats

Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

Affected MO:

sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats

Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

Affected MO:

sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxErrorsDeltaMax

Fault Code: F34884

Message

Threshold Crossed: adaptor:EtherIfStats property: rxErrorsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info

Cause: threshold-crossed

mibFaultCode: 34884

mibFaultName: tcaAdaptorRxErrorsDeltaMax

moClass: adaptor:EtherIfStats

Type: generic

```

Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorRxErrorsDeltaAvg

Fault Code: F34885

Message

Threshold Crossed: adaptor:EtherIfStats property: rxErrorsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34885
mibFaultName: tcaAdaptorRxErrorsDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorRxDroppedDelta

Fault Code: F34892

Message

Threshold Crossed: adaptor:EtherIfStats property: rxDroppedDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34892
mibFaultName: tcaAdaptorRxDroppedDelta
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorRxDroppedDeltaMin**Fault Code: F34893****Message**

Threshold Crossed: adaptor:EtherIfStats property: rxDroppedDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34893
mibFaultName: tcaAdaptorRxDroppedDeltaMin
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats

```

Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxDroppedDeltaMax

Fault Code: F34894

Message

Threshold Crossed: adaptor:EtherIfStats property: rxDroppedDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34894
mibFaultName: tcaAdaptorRxDroppedDeltaMax
moClass: adaptor:EtherIfStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

tcaAdaptorRxDroppedDeltaAvg

Fault Code: F34895

Message

Threshold Crossed: adaptor:EtherIfStats property: rxDroppedDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34895
mibFaultName: tcaAdaptorRxDroppedDeltaAvg
moClass: adaptor:EtherIfStats
Type: generic

```

Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-
stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/vlan-[id]/ether-if-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-iscsi-[id]/vlan-[id]/ether-if-stats
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-service-eth-[id]/vlan-[id]/ether-if-stats

```

tcaAdaptorTxFramesDelta

Fault Code: F34906

Message

Threshold Crossed: adaptor:FcIfFrameStats property: txFramesDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34906
mibFaultName: tcaAdaptorTxFramesDelta
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

```

tcaAdaptorTxFramesDeltaMin

Fault Code: F34907

Message

Threshold Crossed: adaptor:FcIfFrameStats property: txFramesDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info

```

```

Cause: threshold-crossed
mibFaultCode: 34907
mibFaultName: tcaAdaptorTxFramesDeltaMin
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

```

tcaAdaptorTxFramesDeltaMax

Fault Code: F34908

Message

Threshold Crossed: adaptor:FcIfFrameStats property: txFramesDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34908
mibFaultName: tcaAdaptorTxFramesDeltaMax
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

```

tcaAdaptorTxFramesDeltaAvg

Fault Code: F34909

Message

Threshold Crossed: adaptor:FcIfFrameStats property: txFramesDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34909
mibFaultName: tcaAdaptorTxFramesDeltaAvg

```

```

moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

```

tcaAdaptorRxFramesDelta

Fault Code: F34916

Message

Threshold Crossed: adaptor:FcIfFrameStats property: rxFramesDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34916
mibFaultName: tcaAdaptorRxFramesDelta
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

```

tcaAdaptorRxFramesDeltaMin

Fault Code: F34917

Message

Threshold Crossed: adaptor:FcIfFrameStats property: rxFramesDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34917
mibFaultName: tcaAdaptorRxFramesDeltaMin
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none

```

```

Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

```

tcaAdaptorRxFramesDeltaMax

Fault Code: F34918

Message

Threshold Crossed: adaptor:FcIfFrameStats property: rxFramesDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34918
mibFaultName: tcaAdaptorRxFramesDeltaMax
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

```

tcaAdaptorRxFramesDeltaAvg

Fault Code: F34919

Message

Threshold Crossed: adaptor:FcIfFrameStats property: rxFramesDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 34919
mibFaultName: tcaAdaptorRxFramesDeltaAvg
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

tcaAdaptorErrorFramesDelta

Fault Code: F34926

Message

Threshold Crossed: adaptor:FcIfFrameStats property: errorFramesDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34926
mibFaultName: tcaAdaptorErrorFramesDelta
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

tcaAdaptorErrorFramesDeltaMin

Fault Code: F34927

Message

Threshold Crossed: adaptor:FcIfFrameStats property: errorFramesDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 34927
mibFaultName: tcaAdaptorErrorFramesDeltaMin
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats

tcaAdaptorErrorFramesDeltaMax

Fault Code: F34928

Message

Threshold Crossed: adaptor:FcIfFrameStats property: errorFramesDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34928
mibFaultName: tcaAdaptorErrorFramesDeltaMax
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorErrorFramesDeltaAvg

Fault Code: F34929

Message

Threshold Crossed: adaptor:FcIfFrameStats property: errorFramesDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34929
mibFaultName: tcaAdaptorErrorFramesDeltaAvg
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```


tcaAdaptorDumpedFramesDelta

Fault Code: F34936

Message

Threshold Crossed: adaptor:FcIfFrameStats property: dumpedFramesDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34936
mibFaultName: tcaAdaptorDumpedFramesDelta
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorDumpedFramesDeltaMin

Fault Code: F34937

Message

Threshold Crossed: adaptor:FcIfFrameStats property: dumpedFramesDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34937
mibFaultName: tcaAdaptorDumpedFramesDeltaMin
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorDumpedFramesDeltaMax

Fault Code: F34938

Message

Threshold Crossed: adaptor:FcIfFrameStats property: dumpedFramesDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34938
mibFaultName: tcaAdaptorDumpedFramesDeltaMax
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorDumpedFramesDeltaAvg

Fault Code: F34939

Message

Threshold Crossed: adaptor:FcIfFrameStats property: dumpedFramesDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34939
mibFaultName: tcaAdaptorDumpedFramesDeltaAvg
moClass: adaptor:FcIfFrameStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-frame-stats
```

tcaAdaptorLipCountDelta

Fault Code: F34950

Message

Threshold Crossed: adaptor:FcIfEventStats property: lipCountDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34950
mibFaultName: tcaAdaptorLipCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLipCountDeltaMin

Fault Code: F34951

Message

Threshold Crossed: adaptor:FcIfEventStats property: lipCountDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34951
mibFaultName: tcaAdaptorLipCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLipCountDeltaMax

Fault Code: F34952

Message

Threshold Crossed: adaptor:FcIfEventStats property: lipCountDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34952
mibFaultName: tcaAdaptorLipCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLipCountDeltaAvg

Fault Code: F34953

Message

Threshold Crossed: adaptor:FcIfEventStats property: lipCountDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34953
mibFaultName: tcaAdaptorLipCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorInvalidCRCCountDelta

Fault Code: F34960

Message

Threshold Crossed: adaptor:FcIfEventStats property: invalidCRCCountDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34960
mibFaultName: tcaAdaptorInvalidCRCCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorInvalidCRCCountDeltaMin

Fault Code: F34961

Message

Threshold Crossed: adaptor:FcIfEventStats property: invalidCRCCountDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34961
mibFaultName: tcaAdaptorInvalidCRCCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorInvalidCRCCCountDeltaMax

Fault Code: F34962

Message

Threshold Crossed: adaptor:FcIfEventStats property: invalidCRCCCountDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34962
mibFaultName: tcaAdaptorInvalidCRCCCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorInvalidCRCCCountDeltaAvg

Fault Code: F34963

Message

Threshold Crossed: adaptor:FcIfEventStats property: invalidCRCCCountDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34963
mibFaultName: tcaAdaptorInvalidCRCCCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorNOSCountDelta

Fault Code: F34970

Message

Threshold Crossed: adaptor:FcIfEventStats property: nOSCountDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34970
mibFaultName: tcaAdaptorNOSCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorNOSCountDeltaMin

Fault Code: F34971

Message

Threshold Crossed: adaptor:FcIfEventStats property: nOSCountDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34971
mibFaultName: tcaAdaptorNOSCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorNOSCountDeltaMax

Fault Code: F34972

Message

Threshold Crossed: adaptor:FcIfEventStats property: nOSCountDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34972
mibFaultName: tcaAdaptorNOSCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorNOSCountDeltaAvg

Fault Code: F34973

Message

Threshold Crossed: adaptor:FcIfEventStats property: nOSCountDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34973
mibFaultName: tcaAdaptorNOSCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```


tcaAdaptorLinkFailureCountDelta

Fault Code: F34980

Message

Threshold Crossed: adaptor:FcIfEventStats property: linkFailureCountDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34980
mibFaultName: tcaAdaptorLinkFailureCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLinkFailureCountDeltaMin

Fault Code: F34981

Message

Threshold Crossed: adaptor:FcIfEventStats property: linkFailureCountDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34981
mibFaultName: tcaAdaptorLinkFailureCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLinkFailureCountDeltaMax

Fault Code: F34982

Message

Threshold Crossed: adaptor:FcIfEventStats property: linkFailureCountDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34982
mibFaultName: tcaAdaptorLinkFailureCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLinkFailureCountDeltaAvg

Fault Code: F34983

Message

Threshold Crossed: adaptor:FcIfEventStats property: linkFailureCountDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34983
mibFaultName: tcaAdaptorLinkFailureCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSyncCountDelta

Fault Code: F34990

Message

Threshold Crossed: adaptor:FcIfEventStats property: lossOfSyncCountDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34990
mibFaultName: tcaAdaptorLossOfSyncCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSyncCountDeltaMin

Fault Code: F34991

Message

Threshold Crossed: adaptor:FcIfEventStats property: lossOfSyncCountDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34991
mibFaultName: tcaAdaptorLossOfSyncCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSyncCountDeltaMax

Fault Code: F34992

Message

Threshold Crossed: adaptor:FcIfEventStats property: lossOfSyncCountDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34992
mibFaultName: tcaAdaptorLossOfSyncCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSyncCountDeltaAvg

Fault Code: F34993

Message

Threshold Crossed: adaptor:FcIfEventStats property: lossOfSyncCountDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 34993
mibFaultName: tcaAdaptorLossOfSyncCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSignalCountDelta

Fault Code: F35000

Message

Threshold Crossed: adaptor:FcIfEventStats property: lossOfSignalCountDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35000
mibFaultName: tcaAdaptorLossOfSignalCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSignalCountDeltaMin

Fault Code: F35001

Message

Threshold Crossed: adaptor:FcIfEventStats property: lossOfSignalCountDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35001
mibFaultName: tcaAdaptorLossOfSignalCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSignalCountDeltaMax

Fault Code: F35002

Message

Threshold Crossed: adaptor:FcIfEventStats property: lossOfSignalCountDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35002
mibFaultName: tcaAdaptorLossOfSignalCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorLossOfSignalCountDeltaAvg

Fault Code: F35003

Message

Threshold Crossed: adaptor:FcIfEventStats property: lossOfSignalCountDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35003
mibFaultName: tcaAdaptorLossOfSignalCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSeqProtocolErrCountDelta

Fault Code: F35010

Message

Threshold Crossed: adaptor:FcIfEventStats property: seqProtocolErrCountDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35010
mibFaultName: tcaAdaptorSeqProtocolErrCountDelta
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSeqProtocolErrCountDeltaMin

Fault Code: F35011

Message

Threshold Crossed: adaptor:FcIfEventStats property: seqProtocolErrCountDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35011
mibFaultName: tcaAdaptorSeqProtocolErrCountDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSeqProtocolErrCountDeltaMax

Fault Code: F35012

Message

Threshold Crossed: adaptor:FcIfEventStats property: seqProtocolErrCountDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35012
mibFaultName: tcaAdaptorSeqProtocolErrCountDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSeqProtocolErrCountDeltaAvg

Fault Code: F35013

Message

Threshold Crossed: adaptor:FcIfEventStats property: seqProtocolErrCountDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35013
mibFaultName: tcaAdaptorSeqProtocolErrCountDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```


tcaAdaptorSecondsSinceLastResetDelta

Fault Code: F35020

Message

Threshold Crossed: adaptor:FcIfEventStats property: secondsSinceLastResetDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35020
mibFaultName: tcaAdaptorSecondsSinceLastResetDelta
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSecondsSinceLastResetDeltaMin

Fault Code: F35021

Message

Threshold Crossed: adaptor:FcIfEventStats property: secondsSinceLastResetDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35021
mibFaultName: tcaAdaptorSecondsSinceLastResetDeltaMin
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSecondsSinceLastResetDeltaMax

Fault Code: F35022

Message

Threshold Crossed: adaptor:FcIfEventStats property: secondsSinceLastResetDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35022
mibFaultName: tcaAdaptorSecondsSinceLastResetDeltaMax
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaAdaptorSecondsSinceLastResetDeltaAvg

Fault Code: F35023

Message

Threshold Crossed: adaptor:FcIfEventStats property: secondsSinceLastResetDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35023
mibFaultName: tcaAdaptorSecondsSinceLastResetDeltaAvg
moClass: adaptor:FcIfEventStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
Affected MO: sys/rack-unit-[id]/adaptor-[id]/host-fc-[id]/fc-if-event-stats
```

tcaSwMainBoardOutlet1

Fault Code: F35166

Message

Threshold Crossed: sw:EnvStats property: mainBoardOutlet1

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35166
mibFaultName: tcaSwMainBoardOutlet1
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwMainBoardOutlet1Min

Fault Code: F35168

Message

Threshold Crossed: sw:EnvStats property: mainBoardOutlet1Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35168
mibFaultName: tcaSwMainBoardOutlet1Min
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwMainBoardOutlet1Max

Fault Code: F35169

Message

Threshold Crossed: sw:EnvStats property: mainBoardOutlet1Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35169
mibFaultName: tcaSwMainBoardOutlet1Max
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwMainBoardOutlet1Avg

Fault Code: F35170

Message

Threshold Crossed: sw:EnvStats property: mainBoardOutlet1Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35170
mibFaultName: tcaSwMainBoardOutlet1Avg
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwMainBoardOutlet2

Fault Code: F35174

Message

Threshold Crossed: sw:EnvStats property: mainBoardOutlet2

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35174
mibFaultName: tcaSwMainBoardOutlet2
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwMainBoardOutlet2Min

Fault Code: F35176

Message

Threshold Crossed: sw:EnvStats property: mainBoardOutlet2Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35176
mibFaultName: tcaSwMainBoardOutlet2Min
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwMainBoardOutlet2Max

Fault Code: F35177

Message

Threshold Crossed: sw:EnvStats property: mainBoardOutlet2Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35177
mibFaultName: tcaSwMainBoardOutlet2Max
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwMainBoardOutlet2Avg

Fault Code: F35178

Message

Threshold Crossed: sw:EnvStats property: mainBoardOutlet2Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35178
mibFaultName: tcaSwMainBoardOutlet2Avg
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet1

Fault Code: F35198

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet1

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35198
mibFaultName: tcaSwFanCtrlrInlet1
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

```

tcaSwFanCtrlrInlet1Min

Fault Code: F35200

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet1Min

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35200
mibFaultName: tcaSwFanCtrlrInlet1Min
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

```

tcaSwFanCtrlrInlet1Max

Fault Code: F35201

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet1Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35201
mibFaultName: tcaSwFanCtrlrInlet1Max
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet1Avg

Fault Code: F35202

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet1Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35202
mibFaultName: tcaSwFanCtrlrInlet1Avg
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet2

Fault Code: F35206

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet2

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35206
mibFaultName: tcaSwFanCtrlrInlet2
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet2Min

Fault Code: F35208

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet2Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35208
mibFaultName: tcaSwFanCtrlrInlet2Min
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet2Max

Fault Code: F35209

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet2Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35209
mibFaultName: tcaSwFanCtrlrInlet2Max
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet2Avg

Fault Code: F35210

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet2Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35210
mibFaultName: tcaSwFanCtrlrInlet2Avg
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet3

Fault Code: F35214

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet3

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35214
mibFaultName: tcaSwFanCtrlrInlet3
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet3Min

Fault Code: F35216

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet3Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35216
mibFaultName: tcaSwFanCtrlrInlet3Min
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet3Max

Fault Code: F35217

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet3Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35217
mibFaultName: tcaSwFanCtrlrInlet3Max
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet3Avg

Fault Code: F35218

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet3Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35218
mibFaultName: tcaSwFanCtrlrInlet3Avg
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet4

Fault Code: F35222

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet4

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35222
mibFaultName: tcaSwFanCtrlrInlet4
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet4Min

Fault Code: F35224

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet4Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35224
mibFaultName: tcaSwFanCtrlrInlet4Min
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet4Max

Fault Code: F35225

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet4Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35225
mibFaultName: tcaSwFanCtrlrInlet4Max
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwFanCtrlrInlet4Avg

Fault Code: F35226

Message

Threshold Crossed: sw:EnvStats property: fanCtrlrInlet4Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35226
mibFaultName: tcaSwFanCtrlrInlet4Avg
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwMemAvailable

Fault Code: F35234

Message

Threshold Crossed: sw:SystemStats property: memAvailable

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35234
mibFaultName: tcaSwMemAvailable
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwMemAvailableMin

Fault Code: F35236

Message

Threshold Crossed: sw:SystemStats property: memAvailableMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35236
mibFaultName: tcaSwMemAvailableMin
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwMemAvailableMax

Fault Code: F35237

Message

Threshold Crossed: sw:SystemStats property: memAvailableMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35237
mibFaultName: tcaSwMemAvailableMax
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats

tcaSwMemAvailableAvg

Fault Code: F35238

Message

Threshold Crossed: sw:SystemStats property: memAvailableAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35238
mibFaultName: tcaSwMemAvailableAvg
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats

tcaSwMemCached

Fault Code: F35242

Message

Threshold Crossed: sw:SystemStats property: memCached

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35242
mibFaultName: tcaSwMemCached
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats

tcaSwMemCachedMin

Fault Code: F35244

Message

Threshold Crossed: sw:SystemStats property: memCachedMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35244
mibFaultName: tcaSwMemCachedMin
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats

tcaSwMemCachedMax

Fault Code: F35245

Message

Threshold Crossed: sw:SystemStats property: memCachedMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35245
mibFaultName: tcaSwMemCachedMax
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats

tcaSwMemCachedAvg

Fault Code: F35246

Message

Threshold Crossed: sw:SystemStats property: memCachedAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35246
mibFaultName: tcaSwMemCachedAvg
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats

tcaSwLoad

Fault Code: F35250

Message

Threshold Crossed: sw:SystemStats property: load

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35250
mibFaultName: tcaSwLoad
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwLoadMin

Fault Code: F35252

Message

Threshold Crossed: sw:SystemStats property: loadMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35252
mibFaultName: tcaSwLoadMin
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwLoadMax

Fault Code: F35253

Message

Threshold Crossed: sw:SystemStats property: loadMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35253
mibFaultName: tcaSwLoadMax
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats
```

tcaSwLoadAvg

Fault Code: F35254

Message

Threshold Crossed: sw:SystemStats property: loadAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35254
mibFaultName: tcaSwLoadAvg
moClass: sw:SystemStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/sysstats
```

tcaEtherTotalBytesDelta

Fault Code: F35275

Message

Threshold Crossed: ether:TxStats property: totalBytesDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35275
mibFaultName: tcaEtherTotalBytesDelta
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherTotalBytesDeltaMin

Fault Code: F35276

Message

Threshold Crossed: ether:TxStats property: totalBytesDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35276
mibFaultName: tcaEtherTotalBytesDeltaMin
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalBytesDeltaMax

Fault Code: F35277

Message

Threshold Crossed: ether:TxStats property: totalBytesDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35277
mibFaultName: tcaEtherTotalBytesDeltaMax
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalBytesDeltaAvg

Fault Code: F35278

Message

Threshold Crossed: ether:TxStats property: totalBytesDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35278
mibFaultName: tcaEtherTotalBytesDeltaAvg
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalPacketsDelta

Fault Code: F35285

Message

Threshold Crossed: ether:TxStats property: totalPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35285
mibFaultName: tcaEtherTotalPacketsDelta
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalPacketsDeltaMin

Fault Code: F35286

Message

Threshold Crossed: ether:TxStats property: totalPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35286
mibFaultName: tcaEtherTotalPacketsDeltaMin

```

moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherTotalPacketsDeltaMax

Fault Code: F35287

Message

Threshold Crossed: ether:TxStats property: totalPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35287
mibFaultName: tcaEtherTotalPacketsDeltaMax
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherTotalPacketsDeltaAvg

Fault Code: F35288

Message

Threshold Crossed: ether:TxStats property: totalPacketsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35288
mibFaultName: tcaEtherTotalPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherMulticastPacketsDelta**Fault Code: F35295****Message**

Threshold Crossed: ether:TxStats property: multicastPacketsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35295
mibFaultName: tcaEtherMulticastPacketsDelta
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherMulticastPacketsDeltaMin

Fault Code: F35296

Message

Threshold Crossed: ether:TxStats property: multicastPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35296
mibFaultName: tcaEtherMulticastPacketsDeltaMin
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherMulticastPacketsDeltaMax

Fault Code: F35297

Message

Threshold Crossed: ether:TxStats property: multicastPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35297
mibFaultName: tcaEtherMulticastPacketsDeltaMax
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherMulticastPacketsDeltaAvg

Fault Code: F35298

Message

Threshold Crossed: ether:TxStats property: multicastPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35298
mibFaultName: tcaEtherMulticastPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherBroadcastPacketsDelta

Fault Code: F35305

Message

Threshold Crossed: ether:TxStats property: broadcastPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35305
mibFaultName: tcaEtherBroadcastPacketsDelta
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherBroadcastPacketsDeltaMin

Fault Code: F35306

Message

Threshold Crossed: ether:TxStats property: broadcastPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35306
mibFaultName: tcaEtherBroadcastPacketsDeltaMin
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherBroadcastPacketsDeltaMax

Fault Code: F35307

Message

Threshold Crossed: ether:TxStats property: broadcastPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35307
mibFaultName: tcaEtherBroadcastPacketsDeltaMax

```

```

moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherBroadcastPacketsDeltaAvg

Fault Code: F35308

Message

Threshold Crossed: ether:TxStats property: broadcastPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35308
mibFaultName: tcaEtherBroadcastPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherJumboPacketsDelta

Fault Code: F35315

Message

Threshold Crossed: ether:TxStats property: jumboPacketsDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35315
mibFaultName: tcaEtherJumboPacketsDelta
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherJumboPacketsDeltaMin**Fault Code: F35316****Message**

Threshold Crossed: ether:TxStats property: jumboPacketsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35316
mibFaultName: tcaEtherJumboPacketsDeltaMin
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherJumboPacketsDeltaMax

Fault Code: F35317

Message

Threshold Crossed: ether:TxStats property: jumboPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35317
mibFaultName: tcaEtherJumboPacketsDeltaMax
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

tcaEtherJumboPacketsDeltaAvg

Fault Code: F35318

Message

Threshold Crossed: ether:TxStats property: jumboPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35318
mibFaultName: tcaEtherJumboPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

tcaEtherTotalBytesDelta

Fault Code: F35329

Message

Threshold Crossed: ether:RxStats property: totalBytesDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35329
mibFaultName: tcaEtherTotalBytesDelta
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherTotalBytesDeltaMin

Fault Code: F35330

Message

Threshold Crossed: ether:RxStats property: totalBytesDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35330
mibFaultName: tcaEtherTotalBytesDeltaMin
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherTotalBytesDeltaMax

Fault Code: F35331

Message

Threshold Crossed: ether:RxStats property: totalBytesDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35331
mibFaultName: tcaEtherTotalBytesDeltaMax
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherTotalBytesDeltaAvg

Fault Code: F35332

Message

Threshold Crossed: ether:RxStats property: totalBytesDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35332
mibFaultName: tcaEtherTotalBytesDeltaAvg

```

moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherTotalPacketsDelta

Fault Code: F35339

Message

Threshold Crossed: ether:RxStats property: totalPacketsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35339
mibFaultName: tcaEtherTotalPacketsDelta
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherTotalPacketsDeltaMin

Fault Code: F35340

Message

Threshold Crossed: ether:RxStats property: totalPacketsDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35340
mibFaultName: tcaEtherTotalPacketsDeltaMin
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherTotalPacketsDeltaMax**Fault Code: F35341****Message**

Threshold Crossed: ether:RxStats property: totalPacketsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35341
mibFaultName: tcaEtherTotalPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherTotalPacketsDeltaAvg

Fault Code: F35342

Message

Threshold Crossed: ether:RxStats property: totalPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35342
mibFaultName: tcaEtherTotalPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

tcaEtherUnicastPacketsDelta

Fault Code: F35349

Message

Threshold Crossed: ether:RxStats property: unicastPacketsDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35349
mibFaultName: tcaEtherUnicastPacketsDelta
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherUnicastPacketsDeltaMin

Fault Code: F35350

Message

Threshold Crossed: ether:RxStats property: unicastPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35350
mibFaultName: tcaEtherUnicastPacketsDeltaMin
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherUnicastPacketsDeltaMax

Fault Code: F35351

Message

Threshold Crossed: ether:RxStats property: unicastPacketsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35351
mibFaultName: tcaEtherUnicastPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherUnicastPacketsDeltaAvg

Fault Code: F35352

Message

Threshold Crossed: ether:RxStats property: unicastPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35352
mibFaultName: tcaEtherUnicastPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherMulticastPacketsDelta

Fault Code: F35359

Message

Threshold Crossed: ether:RxStats property: multicastPacketsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35359
mibFaultName: tcaEtherMulticastPacketsDelta

```

```

moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherMulticastPacketsDeltaMin

Fault Code: F35360

Message

Threshold Crossed: ether:RxStats property: multicastPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35360
mibFaultName: tcaEtherMulticastPacketsDeltaMin
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherMulticastPacketsDeltaMax

Fault Code: F35361

Message

Threshold Crossed: ether:RxStats property: multicastPacketsDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35361
mibFaultName: tcaEtherMulticastPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherMulticastPacketsDeltaAvg**Fault Code: F35362****Message**

Threshold Crossed: ether:RxStats property: multicastPacketsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35362
mibFaultName: tcaEtherMulticastPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```


tcaEtherBroadcastPacketsDelta

Fault Code: F35369

Message

Threshold Crossed: ether:RxStats property: broadcastPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35369
mibFaultName: tcaEtherBroadcastPacketsDelta
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherBroadcastPacketsDeltaMin

Fault Code: F35370

Message

Threshold Crossed: ether:RxStats property: broadcastPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35370
mibFaultName: tcaEtherBroadcastPacketsDeltaMin
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherBroadcastPacketsDeltaMax

Fault Code: F35371

Message

Threshold Crossed: ether:RxStats property: broadcastPacketsDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35371
mibFaultName: tcaEtherBroadcastPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherBroadcastPacketsDeltaAvg

Fault Code: F35372

Message

Threshold Crossed: ether:RxStats property: broadcastPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35372
mibFaultName: tcaEtherBroadcastPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherJumboPacketsDelta

Fault Code: F35379

Message

Threshold Crossed: ether:RxStats property: jumboPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35379
mibFaultName: tcaEtherJumboPacketsDelta
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

tcaEtherJumboPacketsDeltaMin

Fault Code: F35380

Message

Threshold Crossed: ether:RxStats property: jumboPacketsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35380
mibFaultName: tcaEtherJumboPacketsDeltaMin

```

moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherJumboPacketsDeltaMax

Fault Code: F35381

Message

Threshold Crossed: ether:RxStats property: jumboPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35381
mibFaultName: tcaEtherJumboPacketsDeltaMax
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaEtherJumboPacketsDeltaAvg

Fault Code: F35382

Message

Threshold Crossed: ether:RxStats property: jumboPacketsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35382
mibFaultName: tcaEtherJumboPacketsDeltaAvg
moClass: ether:RxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/rx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/rx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/rx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/rx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/rx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/rx-stats

```

tcaComputeConsumedPower**Fault Code: F35962****Message**

Threshold Crossed: compute:MbPowerStats property: consumedPower

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 35962
mibFaultName: tcaComputeConsumedPower
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

```

tcaComputeConsumedPowerMin

Fault Code: F35964

Message

Threshold Crossed: compute:MbPowerStats property: consumedPowerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35964
mibFaultName: tcaComputeConsumedPowerMin
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeConsumedPowerMax

Fault Code: F35965

Message

Threshold Crossed: compute:MbPowerStats property: consumedPowerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35965
mibFaultName: tcaComputeConsumedPowerMax
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeConsumedPowerAvg

Fault Code: F35966

Message

Threshold Crossed: compute:MbPowerStats property: consumedPowerAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35966
mibFaultName: tcaComputeConsumedPowerAvg
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats
```

tcaComputeFmTempSenIo

Fault Code: F35974

Message

Threshold Crossed: compute:MbTempStats property: fmTempSenIo

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35974
mibFaultName: tcaComputeFmTempSenIo
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats
```

tcaComputeFmTempSenIoMin

Fault Code: F35976

Message

Threshold Crossed: compute:MbTempStats property: fmTempSenIoMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35976
mibFaultName: tcaComputeFmTempSenIoMin
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenIoMax

Fault Code: F35977

Message

Threshold Crossed: compute:MbTempStats property: fmTempSenIoMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 35977
mibFaultName: tcaComputeFmTempSenIoMax
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenIoAvg

Fault Code: F35978

Message

Threshold Crossed: compute:MbTempStats property: fmTempSenIoAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 35978
mibFaultName: tcaComputeFmTempSenIoAvg
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats
```

tcaEquipmentInputPower

Fault Code: F36234

Message

Threshold Crossed: equipment:ChassisStats property: inputPower

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36234
mibFaultName: tcaEquipmentInputPower
moClass: equipment:ChassisStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentInputPowerMin

Fault Code: F36236

Message

Threshold Crossed: equipment:ChassisStats property: inputPowerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36236
mibFaultName: tcaEquipmentInputPowerMin
moClass: equipment:ChassisStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/stats

tcaEquipmentInputPowerMax

Fault Code: F36237

Message

Threshold Crossed: equipment:ChassisStats property: inputPowerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36237
mibFaultName: tcaEquipmentInputPowerMax
moClass: equipment:ChassisStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/stats

tcaEquipmentInputPowerAvg

Fault Code: F36238

Message

Threshold Crossed: equipment:ChassisStats property: inputPowerAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36238
mibFaultName: tcaEquipmentInputPowerAvg
moClass: equipment:ChassisStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/stats

tcaEquipmentOutputPower

Fault Code: F36242

Message

Threshold Crossed: equipment:ChassisStats property: outputPower

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36242
mibFaultName: tcaEquipmentOutputPower
moClass: equipment:ChassisStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/stats

tcaEquipmentOutputPowerMin

Fault Code: F36244

Message

Threshold Crossed: equipment:ChassisStats property: outputPowerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36244
mibFaultName: tcaEquipmentOutputPowerMin
moClass: equipment:ChassisStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/stats

tcaEquipmentOutputPowerMax

Fault Code: F36245

Message

Threshold Crossed: equipment:ChassisStats property: outputPowerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36245
mibFaultName: tcaEquipmentOutputPowerMax
moClass: equipment:ChassisStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/stats

tcaEquipmentOutputPowerAvg

Fault Code: F36246

Message

Threshold Crossed: equipment:ChassisStats property: outputPowerAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36246
mibFaultName: tcaEquipmentOutputPowerAvg
moClass: equipment:ChassisStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/stats
```

tcaEquipmentAmbientTemp

Fault Code: F36266

Message

Threshold Crossed: equipment:PsuStats property: ambientTemp

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36266
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentAmbientTempMin

Fault Code: F36268

Message

Threshold Crossed: equipment:PsuStats property: ambientTempMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36268
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentAmbientTempMax

Fault Code: F36269

Message

Threshold Crossed: equipment:PsuStats property: ambientTempMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36269
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentAmbientTempAvg

Fault Code: F36270

Message

Threshold Crossed: equipment:PsuStats property: ambientTempAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36270
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutputCurrent

Fault Code: F36274

Message

Threshold Crossed: equipment:PsuStats property: outputCurrent

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36274
mibFaultName: tcaEquipmentOutputCurrent
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutputCurrentMin

Fault Code: F36276

Message

Threshold Crossed: equipment:PsuStats property: outputCurrentMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36276
mibFaultName: tcaEquipmentOutputCurrentMin
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutputCurrentMax

Fault Code: F36277

Message

Threshold Crossed: equipment:PsuStats property: outputCurrentMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36277
mibFaultName: tcaEquipmentOutputCurrentMax
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutputCurrentAvg

Fault Code: F36278

Message

Threshold Crossed: equipment:PsuStats property: outputCurrentAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36278
mibFaultName: tcaEquipmentOutputCurrentAvg
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutputPower

Fault Code: F36282

Message

Threshold Crossed: equipment:PsuStats property: outputPower

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36282
mibFaultName: tcaEquipmentOutputPower
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutputPowerMin

Fault Code: F36284

Message

Threshold Crossed: equipment:PsuStats property: outputPowerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36284
mibFaultName: tcaEquipmentOutputPowerMin
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutputPowerMax

Fault Code: F36285

Message

Threshold Crossed: equipment:PsuStats property: outputPowerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36285
mibFaultName: tcaEquipmentOutputPowerMax
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutputPowerAvg

Fault Code: F36286

Message

Threshold Crossed: equipment:PsuStats property: outputPowerAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36286
mibFaultName: tcaEquipmentOutputPowerAvg
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats
```

tcaEquipmentCurrent

Fault Code: F36294

Message

Threshold Crossed: equipment:PsuInputStats property: current

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36294
mibFaultName: tcaEquipmentCurrent
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentCurrentMin

Fault Code: F36296

Message

Threshold Crossed: equipment:PsuInputStats property: currentMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36296
mibFaultName: tcaEquipmentCurrentMin
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentCurrentMax

Fault Code: F36297

Message

Threshold Crossed: equipment:PsuInputStats property: currentMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36297
mibFaultName: tcaEquipmentCurrentMax
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentCurrentAvg

Fault Code: F36298

Message

Threshold Crossed: equipment:PsuInputStats property: currentAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36298
mibFaultName: tcaEquipmentCurrentAvg
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats

tcaEquipmentVoltage

Fault Code: F36302

Message

Threshold Crossed: equipment:PsuInputStats property: voltage

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36302
mibFaultName: tcaEquipmentVoltage
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats

tcaEquipmentVoltageMin

Fault Code: F36304

Message

Threshold Crossed: equipment:PsuInputStats property: voltageMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36304
mibFaultName: tcaEquipmentVoltageMin
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentVoltageMax

Fault Code: F36305

Message

Threshold Crossed: equipment:PsuInputStats property: voltageMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36305
mibFaultName: tcaEquipmentVoltageMax
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentVoltageAvg

Fault Code: F36306

Message

Threshold Crossed: equipment:PsuInputStats property: voltageAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36306
mibFaultName: tcaEquipmentVoltageAvg
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats

tcaEquipmentPower

Fault Code: F36310

Message

Threshold Crossed: equipment:PsuInputStats property: power

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36310
mibFaultName: tcaEquipmentPower
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats

tcaEquipmentPowerMin

Fault Code: F36312

Message

Threshold Crossed: equipment:PsuInputStats property: powerMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36312
mibFaultName: tcaEquipmentPowerMin
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentPowerMax

Fault Code: F36313

Message

Threshold Crossed: equipment:PsuInputStats property: powerMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36313
mibFaultName: tcaEquipmentPowerMax
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```


tcaEquipmentPowerAvg

Fault Code: F36314

Message

Threshold Crossed: equipment:PsuInputStats property: powerAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36314
mibFaultName: tcaEquipmentPowerAvg
moClass: equipment:PsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/input-stats
Affected MO: sys/fex-[id]/psu-[id]/input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/input-stats
Affected MO: sys/switch-[id]/psu-[id]/input-stats
```

tcaEquipmentAmbientTemp

Fault Code: F36323

Message

Threshold Crossed: equipment:FanModuleStats property: ambientTemp

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36323
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:FanModuleStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats
```

tcaEquipmentAmbientTempMin

Fault Code: F36325

Message

Threshold Crossed: equipment:FanModuleStats property: ambientTempMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36325
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:FanModuleStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats

tcaEquipmentAmbientTempMax

Fault Code: F36326

Message

Threshold Crossed: equipment:FanModuleStats property: ambientTempMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36326
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:FanModuleStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats

tcaEquipmentAmbientTempAvg

Fault Code: F36327

Message

Threshold Crossed: equipment:FanModuleStats property: ambientTempAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36327
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:FanModuleStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/stats
```

tcaEquipmentSpeed

Fault Code: F36335

Message

Threshold Crossed: equipment:FanStats property: speed

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 36335
mibFaultName: tcaEquipmentSpeed
moClass: equipment:FanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats
```

tcaEquipmentSpeedMin

Fault Code: F36337

Message

Threshold Crossed: equipment:FanStats property: speedMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36337
mibFaultName: tcaEquipmentSpeedMin
moClass: equipment:FanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedMax

Fault Code: F36338

Message

Threshold Crossed: equipment:FanStats property: speedMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36338
mibFaultName: tcaEquipmentSpeedMax
moClass: equipment:FanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedAvg

Fault Code: F36339

Message

Threshold Crossed: equipment:FanStats property: speedAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 36339
mibFaultName: tcaEquipmentSpeedAvg
moClass: equipment:FanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentOutput12v

Fault Code: F37154

Message

Threshold Crossed: equipment:PsuStats property: output12v

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37154
mibFaultName: tcaEquipmentOutput12v
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutput12vMin

Fault Code: F37156

Message

Threshold Crossed: equipment:PsuStats property: output12vMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37156
mibFaultName: tcaEquipmentOutput12vMin
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutput12vMax

Fault Code: F37157

Message

Threshold Crossed: equipment:PsuStats property: output12vMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37157
mibFaultName: tcaEquipmentOutput12vMax
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutput12vAvg

Fault Code: F37158

Message

Threshold Crossed: equipment:PsuStats property: output12vAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37158
mibFaultName: tcaEquipmentOutput12vAvg
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutput3v3

Fault Code: F37162

Message

Threshold Crossed: equipment:PsuStats property: output3v3

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37162
mibFaultName: tcaEquipmentOutput3v3
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutput3v3Min

Fault Code: F37164

Message

Threshold Crossed: equipment:PsuStats property: output3v3Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37164
mibFaultName: tcaEquipmentOutput3v3Min
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutput3v3Max

Fault Code: F37165

Message

Threshold Crossed: equipment:PsuStats property: output3v3Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37165
mibFaultName: tcaEquipmentOutput3v3Max
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentOutput3v3Avg

Fault Code: F37166

Message

Threshold Crossed: equipment:PsuStats property: output3v3Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37166
mibFaultName: tcaEquipmentOutput3v3Avg
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentInput210v

Fault Code: F37170

Message

Threshold Crossed: equipment:PsuStats property: input210v

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37170
mibFaultName: tcaEquipmentInput210v
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentInput210vMin

Fault Code: F37172

Message

Threshold Crossed: equipment:PsuStats property: input210vMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37172
mibFaultName: tcaEquipmentInput210vMin
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentInput210vMax

Fault Code: F37173

Message

Threshold Crossed: equipment:PsuStats property: input210vMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37173
mibFaultName: tcaEquipmentInput210vMax
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentInput210vAvg

Fault Code: F37174

Message

Threshold Crossed: equipment:PsuStats property: input210vAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37174
mibFaultName: tcaEquipmentInput210vAvg
moClass: equipment:PsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/stats
Affected MO: sys/fex-[id]/psu-[id]/stats
Affected MO: sys/rack-unit-[id]/psu-[id]/stats
Affected MO: sys/switch-[id]/psu-[id]/stats

tcaEquipmentAmbientTemp

Fault Code: F37269

Message

Threshold Crossed: equipment:IOCardStats property: ambientTemp

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37269
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:IOCardStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats

tcaEquipmentAmbientTempMin

Fault Code: F37271

Message

Threshold Crossed: equipment:IOCardStats property: ambientTempMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37271
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:IOCardStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats

tcaEquipmentAmbientTempMax

Fault Code: F37272

Message

Threshold Crossed: equipment:IOCardStats property: ambientTempMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37272
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:IOCardStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats

tcaEquipmentAmbientTempAvg

Fault Code: F37273

Message

Threshold Crossed: equipment:IOCardStats property: ambientTempAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37273
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:IOCardStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats
```

tcaEtherAlignDelta

Fault Code: F37313

Message

Threshold Crossed: ether:ErrStats property: alignDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37313
mibFaultName: tcaEtherAlignDelta
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherAlignDeltaMin

Fault Code: F37314

Message

Threshold Crossed: ether:ErrStats property: alignDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37314
mibFaultName: tcaEtherAlignDeltaMin
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherAlignDeltaMax

Fault Code: F37315

Message

Threshold Crossed: ether:ErrStats property: alignDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37315
mibFaultName: tcaEtherAlignDeltaMax
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherAlignDeltaAvg

Fault Code: F37316

Message

Threshold Crossed: ether:ErrStats property: alignDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37316
mibFaultName: tcaEtherAlignDeltaAvg
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherFcsDelta

Fault Code: F37323

Message

Threshold Crossed: ether:ErrStats property: fcsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37323
mibFaultName: tcaEtherFcsDelta
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherFcsDeltaMin

Fault Code: F37324

Message

Threshold Crossed: ether:ErrStats property: fcsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37324
mibFaultName: tcaEtherFcsDeltaMin
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherFcsDeltaMax

Fault Code: F37325

Message

Threshold Crossed: ether:ErrStats property: fcsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37325
mibFaultName: tcaEtherFcsDeltaMax

```



```

moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherFcsDeltaAvg

Fault Code: F37326

Message

Threshold Crossed: ether:ErrStats property: fcsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37326
mibFaultName: tcaEtherFcsDeltaAvg
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherXmitDelta

Fault Code: F37333

Message

Threshold Crossed: ether:ErrStats property: xmitDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37333
mibFaultName: tcaEtherXmitDelta
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherXmitDeltaMin**Fault Code: F37334****Message**

Threshold Crossed: ether:ErrStats property: xmitDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37334
mibFaultName: tcaEtherXmitDeltaMin
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherXmitDeltaMax

Fault Code: F37335

Message

Threshold Crossed: ether:ErrStats property: xmitDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37335
mibFaultName: tcaEtherXmitDeltaMax
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherXmitDeltaAvg

Fault Code: F37336

Message

Threshold Crossed: ether:ErrStats property: xmitDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37336
mibFaultName: tcaEtherXmitDeltaAvg
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherRcvDelta

Fault Code: F37343

Message

Threshold Crossed: ether:ErrStats property: rcvDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37343
mibFaultName: tcaEtherRcvDelta
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherRcvDeltaMin

Fault Code: F37344

Message

Threshold Crossed: ether:ErrStats property: rcvDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37344
mibFaultName: tcaEtherRcvDeltaMin
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherRcvDeltaMax

Fault Code: F37345

Message

Threshold Crossed: ether:ErrStats property: rcvDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37345
mibFaultName: tcaEtherRcvDeltaMax
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherRcvDeltaAvg

Fault Code: F37346

Message

Threshold Crossed: ether:ErrStats property: rcvDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37346
mibFaultName: tcaEtherRcvDeltaAvg

```

moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherUnderSizeDelta

Fault Code: F37353

Message

Threshold Crossed: ether:ErrStats property: underSizeDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37353
mibFaultName: tcaEtherUnderSizeDelta
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherUnderSizeDeltaMin

Fault Code: F37354

Message

Threshold Crossed: ether:ErrStats property: underSizeDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37354
mibFaultName: tcaEtherUnderSizeDeltaMin
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherUnderSizeDeltaMax**Fault Code: F37355****Message**

Threshold Crossed: ether:ErrStats property: underSizeDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37355
mibFaultName: tcaEtherUnderSizeDeltaMax
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherUnderSizeDeltaAvg

Fault Code: F37356

Message

Threshold Crossed: ether:ErrStats property: underSizeDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37356
mibFaultName: tcaEtherUnderSizeDeltaAvg
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherOutDiscardDelta

Fault Code: F37363

Message

Threshold Crossed: ether:ErrStats property: outDiscardDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37363
mibFaultName: tcaEtherOutDiscardDelta
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
```


Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherOutDiscardDeltaMin

Fault Code: F37364

Message

Threshold Crossed: ether:ErrStats property: outDiscardDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37364
mibFaultName: tcaEtherOutDiscardDeltaMin
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherOutDiscardDeltaMax

Fault Code: F37365

Message

Threshold Crossed: ether:ErrStats property: outDiscardDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37365
mibFaultName: tcaEtherOutDiscardDeltaMax
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherOutDiscardDeltaAvg

Fault Code: F37366

Message

Threshold Crossed: ether:ErrStats property: outDiscardDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37366
mibFaultName: tcaEtherOutDiscardDeltaAvg
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherIntMacTxDelta

Fault Code: F37383

Message

Threshold Crossed: ether:ErrStats property: intMacTxDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37383
mibFaultName: tcaEtherIntMacTxDelta

```

```

moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherIntMacTxDeltaMin

Fault Code: F37384

Message

Threshold Crossed: ether:ErrStats property: intMacTxDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37384
mibFaultName: tcaEtherIntMacTxDeltaMin
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherIntMacTxDeltaMax

Fault Code: F37385

Message

Threshold Crossed: ether:ErrStats property: intMacTxDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37385
mibFaultName: tcaEtherIntMacTxDeltaMax
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherIntMacTxDeltaAvg**Fault Code: F37386****Message**

Threshold Crossed: ether:ErrStats property: intMacTxDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37386
mibFaultName: tcaEtherIntMacTxDeltaAvg
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherIntMacRxDelta

Fault Code: F37393

Message

Threshold Crossed: ether:ErrStats property: intMacRxDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37393
mibFaultName: tcaEtherIntMacRxDelta
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

tcaEtherIntMacRxDeltaMin

Fault Code: F37394

Message

Threshold Crossed: ether:ErrStats property: intMacRxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37394
mibFaultName: tcaEtherIntMacRxDeltaMin
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherIntMacRxDeltaMax

Fault Code: F37395

Message

Threshold Crossed: ether:ErrStats property: intMacRxDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37395
mibFaultName: tcaEtherIntMacRxDeltaMax
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherIntMacRxDeltaAvg

Fault Code: F37396

Message

Threshold Crossed: ether:ErrStats property: intMacRxDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37396
mibFaultName: tcaEtherIntMacRxDeltaAvg
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherSingleCollisionDelta

Fault Code: F37403

Message

Threshold Crossed: ether:LossStats property: singleCollisionDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37403
mibFaultName: tcaEtherSingleCollisionDelta
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherSingleCollisionDeltaMin

Fault Code: F37404

Message

Threshold Crossed: ether:LossStats property: singleCollisionDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37404
mibFaultName: tcaEtherSingleCollisionDeltaMin

```

```

moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherSingleCollisionDeltaMax

Fault Code: F37405

Message

Threshold Crossed: ether:LossStats property: singleCollisionDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37405
mibFaultName: tcaEtherSingleCollisionDeltaMax
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherSingleCollisionDeltaAvg

Fault Code: F37406

Message

Threshold Crossed: ether:LossStats property: singleCollisionDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37406
mibFaultName: tcaEtherSingleCollisionDeltaAvg
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherMultiCollisionDelta**Fault Code: F37413****Message**

Threshold Crossed: ether:LossStats property: multiCollisionDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37413
mibFaultName: tcaEtherMultiCollisionDelta
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherMultiCollisionDeltaMin

Fault Code: F37414

Message

Threshold Crossed: ether:LossStats property: multiCollisionDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37414
mibFaultName: tcaEtherMultiCollisionDeltaMin
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherMultiCollisionDeltaMax

Fault Code: F37415

Message

Threshold Crossed: ether:LossStats property: multiCollisionDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37415
mibFaultName: tcaEtherMultiCollisionDeltaMax
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherMultiCollisionDeltaAvg

Fault Code: F37416

Message

Threshold Crossed: ether:LossStats property: multiCollisionDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37416
mibFaultName: tcaEtherMultiCollisionDeltaAvg
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherLateCollisionDelta

Fault Code: F37423

Message

Threshold Crossed: ether:LossStats property: lateCollisionDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37423
mibFaultName: tcaEtherLateCollisionDelta
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherLateCollisionDeltaMin

Fault Code: F37424

Message

Threshold Crossed: ether:LossStats property: lateCollisionDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37424
mibFaultName: tcaEtherLateCollisionDeltaMin
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherLateCollisionDeltaMax

Fault Code: F37425

Message

Threshold Crossed: ether:LossStats property: lateCollisionDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37425
mibFaultName: tcaEtherLateCollisionDeltaMax

```

```

moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherLateCollisionDeltaAvg

Fault Code: F37426

Message

Threshold Crossed: ether:LossStats property: lateCollisionDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37426
mibFaultName: tcaEtherLateCollisionDeltaAvg
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherCarrierSenseDelta

Fault Code: F37443

Message

Threshold Crossed: ether:LossStats property: carrierSenseDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37443
mibFaultName: tcaEtherCarrierSenseDelta
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherCarrierSenseDeltaMin**Fault Code: F37444****Message**

Threshold Crossed: ether:LossStats property: carrierSenseDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37444
mibFaultName: tcaEtherCarrierSenseDeltaMin
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherCarrierSenseDeltaMax

Fault Code: F37445

Message

Threshold Crossed: ether:LossStats property: carrierSenseDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37445
mibFaultName: tcaEtherCarrierSenseDeltaMax
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherCarrierSenseDeltaAvg

Fault Code: F37446

Message

Threshold Crossed: ether:LossStats property: carrierSenseDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37446
mibFaultName: tcaEtherCarrierSenseDeltaAvg
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherGiantsDelta

Fault Code: F37453

Message

Threshold Crossed: ether:LossStats property: giantsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37453
mibFaultName: tcaEtherGiantsDelta
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherGiantsDeltaMin

Fault Code: F37454

Message

Threshold Crossed: ether:LossStats property: giantsDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37454
mibFaultName: tcaEtherGiantsDeltaMin
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true


```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherGiantsDeltaMax

Fault Code: F37455

Message

Threshold Crossed: ether:LossStats property: giantsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37455
mibFaultName: tcaEtherGiantsDeltaMax
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherGiantsDeltaAvg

Fault Code: F37456

Message

Threshold Crossed: ether:LossStats property: giantsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37456
mibFaultName: tcaEtherGiantsDeltaAvg

```

```

moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherSymbolDelta

Fault Code: F37463

Message

Threshold Crossed: ether:LossStats property: symbolDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37463
mibFaultName: tcaEtherSymbolDelta
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherSymbolDeltaMin

Fault Code: F37464

Message

Threshold Crossed: ether:LossStats property: symbolDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37464
mibFaultName: tcaEtherSymbolDeltaMin
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherSymbolDeltaMax**Fault Code: F37465****Message**

Threshold Crossed: ether:LossStats property: symbolDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37465
mibFaultName: tcaEtherSymbolDeltaMax
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherSymbolDeltaAvg

Fault Code: F37466

Message

Threshold Crossed: ether:LossStats property: symbolDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37466
mibFaultName: tcaEtherSymbolDeltaAvg
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherSQETestDelta

Fault Code: F37473

Message

Threshold Crossed: ether:LossStats property: SQETestDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37473
mibFaultName: tcaEtherSQETestDelta
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSQETestDeltaMin

Fault Code: F37474

Message

Threshold Crossed: ether:LossStats property: SQETestDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37474
mibFaultName: tcaEtherSQETestDeltaMin
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherSQETestDeltaMax

Fault Code: F37475

Message

Threshold Crossed: ether:LossStats property: SQETestDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37475
mibFaultName: tcaEtherSQETestDeltaMax
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherSQETestDeltaAvg

Fault Code: F37476

Message

Threshold Crossed: ether:LossStats property: SQETestDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37476
mibFaultName: tcaEtherSQETestDeltaAvg
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherRecvPauseDelta

Fault Code: F37485

Message

Threshold Crossed: ether:PauseStats property: recvPauseDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37485
mibFaultName: tcaEtherRecvPauseDelta

```

```

moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

```

tcaEtherRecvPauseDeltaMin

Fault Code: F37486

Message

Threshold Crossed: ether:PauseStats property: recvPauseDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37486
mibFaultName: tcaEtherRecvPauseDeltaMin
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

```

tcaEtherRecvPauseDeltaMax

Fault Code: F37487

Message

Threshold Crossed: ether:PauseStats property: recvPauseDeltaMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37487
mibFaultName: tcaEtherRecvPauseDeltaMax
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

```

tcaEtherRecvPauseDeltaAvg**Fault Code: F37488****Message**

Threshold Crossed: ether:PauseStats property: recvPauseDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37488
mibFaultName: tcaEtherRecvPauseDeltaAvg
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

```


tcaEtherXmitPauseDelta

Fault Code: F37495

Message

Threshold Crossed: ether:PauseStats property: xmitPauseDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37495
mibFaultName: tcaEtherXmitPauseDelta
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats
```

tcaEtherXmitPauseDeltaMin

Fault Code: F37496

Message

Threshold Crossed: ether:PauseStats property: xmitPauseDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37496
mibFaultName: tcaEtherXmitPauseDeltaMin
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherXmitPauseDeltaMax

Fault Code: F37497

Message

Threshold Crossed: ether:PauseStats property: xmitPauseDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37497
mibFaultName: tcaEtherXmitPauseDeltaMax
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

tcaEtherXmitPauseDeltaAvg

Fault Code: F37498

Message

Threshold Crossed: ether:PauseStats property: xmitPauseDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37498
mibFaultName: tcaEtherXmitPauseDeltaAvg
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

```

tcaEtherResetsDelta

Fault Code: F37505

Message

Threshold Crossed: ether:PauseStats property: resetsDelta

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37505
mibFaultName: tcaEtherResetsDelta
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

```

tcaEtherResetsDeltaMin

Fault Code: F37506

Message

Threshold Crossed: ether:PauseStats property: resetsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37506
mibFaultName: tcaEtherResetsDeltaMin

```

```

moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

```

tcaEtherResetsDeltaMax

Fault Code: F37507

Message

Threshold Crossed: ether:PauseStats property: resetsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37507
mibFaultName: tcaEtherResetsDeltaMax
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

```

tcaEtherResetsDeltaAvg

Fault Code: F37508

Message

Threshold Crossed: ether:PauseStats property: resetsDeltaAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37508
mibFaultName: tcaEtherResetsDeltaAvg
moClass: ether:PauseStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/pause-stats
Affected MO: fabric/lan/[id]/pc-[portId]/pause-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/pause-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/pause-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/pause-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/pause-stats

```

tcaEtherExcessCollisionDelta**Fault Code: F37532****Message**

Threshold Crossed: ether:LossStats property: excessCollisionDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37532
mibFaultName: tcaEtherExcessCollisionDelta
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

```

tcaEtherExcessCollisionDeltaMin

Fault Code: F37533

Message

Threshold Crossed: ether:LossStats property: excessCollisionDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37533
mibFaultName: tcaEtherExcessCollisionDeltaMin
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

tcaEtherExcessCollisionDeltaMax

Fault Code: F37534

Message

Threshold Crossed: ether:LossStats property: excessCollisionDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37534
mibFaultName: tcaEtherExcessCollisionDeltaMax
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
```

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherExcessCollisionDeltaAvg

Fault Code: F37535

Message

Threshold Crossed: ether:LossStats property: excessCollisionDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37535
mibFaultName: tcaEtherExcessCollisionDeltaAvg
moClass: ether:LossStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/loss-stats
Affected MO: fabric/lan/[id]/pc-[portId]/loss-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/loss-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/loss-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/loss-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/loss-stats

tcaEtherUnicastPacketsDelta

Fault Code: F37543

Message

Threshold Crossed: ether:TxStats property: unicastPacketsDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37543
mibFaultName: tcaEtherUnicastPacketsDelta
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true

```

Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherUnicastPacketsDeltaMin

Fault Code: F37544

Message

Threshold Crossed: ether:TxStats property: unicastPacketsDeltaMin

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37544
mibFaultName: tcaEtherUnicastPacketsDeltaMin
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherUnicastPacketsDeltaMax

Fault Code: F37545

Message

Threshold Crossed: ether:TxStats property: unicastPacketsDeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37545
mibFaultName: tcaEtherUnicastPacketsDeltaMax

```



```

moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherUnicastPacketsDeltaAvg

Fault Code: F37546

Message

Threshold Crossed: ether:TxStats property: unicastPacketsDeltaAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37546
mibFaultName: tcaEtherUnicastPacketsDeltaAvg
moClass: ether:TxStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/tx-stats
Affected MO: fabric/lan/[id]/pc-[portId]/tx-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/tx-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/tx-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/tx-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/tx-stats

```

tcaEtherDeferredTxDelta

Fault Code: F37553

Message

Threshold Crossed: ether:ErrStats property: deferredTxDelta

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37553
mibFaultName: tcaEtherDeferredTxDelta
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherDeferredTxDeltaMin**Fault Code: F37554****Message**

Threshold Crossed: ether:ErrStats property: deferredTxDeltaMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 37554
mibFaultName: tcaEtherDeferredTxDeltaMin
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

```

tcaEtherDeferredTxDeltaMax

Fault Code: F37555

Message

Threshold Crossed: ether:ErrStats property: deferredTxDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37555
mibFaultName: tcaEtherDeferredTxDeltaMax
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaEtherDeferredTxDeltaAvg

Fault Code: F37556

Message

Threshold Crossed: ether:ErrStats property: deferredTxDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37556
mibFaultName: tcaEtherDeferredTxDeltaAvg
moClass: ether:ErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: fabric/eth-estc/[id]/pc-[portId]/err-stats
Affected MO: fabric/lan/[id]/pc-[portId]/err-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/diag/port-[portId]/err-stats
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/err-stats

Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/err-stats
Affected MO: sys/rack-unit-[id]/diag/port-[portId]/err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/err-stats

tcaComputeInputVoltage

Fault Code: F37564

Message

Threshold Crossed: compute:MbPowerStats property: inputVoltage

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37564
mibFaultName: tcaComputeInputVoltage
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeInputVoltageMin

Fault Code: F37566

Message

Threshold Crossed: compute:MbPowerStats property: inputVoltageMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37566
mibFaultName: tcaComputeInputVoltageMin
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats

Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeInputVoltageMax

Fault Code: F37567

Message

Threshold Crossed: compute:MbPowerStats property: inputVoltageMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37567
mibFaultName: tcaComputeInputVoltageMax
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeInputVoltageAvg

Fault Code: F37568

Message

Threshold Crossed: compute:MbPowerStats property: inputVoltageAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37568
mibFaultName: tcaComputeInputVoltageAvg
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats

Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeInputCurrent

Fault Code: F37572

Message

Threshold Crossed: compute:MbPowerStats property: inputCurrent

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37572
mibFaultName: tcaComputeInputCurrent
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeInputCurrentMin

Fault Code: F37574

Message

Threshold Crossed: compute:MbPowerStats property: inputCurrentMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37574
mibFaultName: tcaComputeInputCurrentMin
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats

tcaComputeInputCurrentMax

Fault Code: F37575

Message

Threshold Crossed: compute:MbPowerStats property: inputCurrentMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37575
mibFaultName: tcaComputeInputCurrentMax
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats
```

tcaComputeInputCurrentAvg

Fault Code: F37576

Message

Threshold Crossed: compute:MbPowerStats property: inputCurrentAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37576
mibFaultName: tcaComputeInputCurrentAvg
moClass: compute:MbPowerStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/power-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/power-stats
Affected MO: sys/rack-unit-[id]/board/power-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/power-stats
```

tcaComputeFmTempSenRear

Fault Code: F37580

Message

Threshold Crossed: compute:MbTempStats property: fmTempSenRear

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37580
mibFaultName: tcaComputeFmTempSenRear
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearMin

Fault Code: F37582

Message

Threshold Crossed: compute:MbTempStats property: fmTempSenRearMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37582
mibFaultName: tcaComputeFmTempSenRearMin
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearMax

Fault Code: F37583

Message

Threshold Crossed: compute:MbTempStats property: fmTempSenRearMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37583
mibFaultName: tcaComputeFmTempSenRearMax
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaComputeFmTempSenRearAvg

Fault Code: F37584

Message

Threshold Crossed: compute:MbTempStats property: fmTempSenRearAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37584
mibFaultName: tcaComputeFmTempSenRearAvg
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

tcaMemoryTemperature

Fault Code: F37600

Message

Threshold Crossed: memory:UnitEnvStats property: temperature

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37600
mibFaultName: tcaMemoryTemperature
moClass: memory:UnitEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/dimm-env-stats
```

tcaMemoryTemperatureMin

Fault Code: F37602

Message

Threshold Crossed: memory:UnitEnvStats property: temperatureMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37602
mibFaultName: tcaMemoryTemperatureMin
moClass: memory:UnitEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/dimm-env-stats
```

tcaMemoryTemperatureMax

Fault Code: F37603

Message

Threshold Crossed: memory:UnitEnvStats property: temperatureMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37603
mibFaultName: tcaMemoryTemperatureMax
moClass: memory:UnitEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/dimm-env-stats
```

tcaMemoryTemperatureAvg

Fault Code: F37604

Message

Threshold Crossed: memory:UnitEnvStats property: temperatureAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37604
mibFaultName: tcaMemoryTemperatureAvg
moClass: memory:UnitEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/dimm-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/dimm-env-stats
```

tcaProcessorTemperature

Fault Code: F37610

Message

Threshold Crossed: processor:EnvStats property: temperature

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37610
mibFaultName: tcaProcessorTemperature
moClass: processor:EnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats
```

tcaProcessorTemperatureMin

Fault Code: F37612

Message

Threshold Crossed: processor:EnvStats property: temperatureMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37612
mibFaultName: tcaProcessorTemperatureMin
moClass: processor:EnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats
```

tcaProcessorTemperatureMax

Fault Code: F37613

Message

Threshold Crossed: processor:EnvStats property: temperatureMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37613
mibFaultName: tcaProcessorTemperatureMax
moClass: processor:EnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats
```

tcaProcessorTemperatureAvg

Fault Code: F37614

Message

Threshold Crossed: processor:EnvStats property: temperatureAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37614
mibFaultName: tcaProcessorTemperatureAvg
moClass: processor:EnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats
```

tcaSwPsuCtrlrInlet1

Fault Code: F3771

Message

Threshold Crossed: sw:EnvStats property: psuCtrlrInlet1

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37771
mibFaultName: tcaSwPsuCtrlrInlet1
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwPsuCtrlrInlet1Min

Fault Code: F3773

Message

Threshold Crossed: sw:EnvStats property: psuCtrlrInlet1Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37773
mibFaultName: tcaSwPsuCtrlrInlet1Min
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwPsuCtrlrInlet1Max

Fault Code: F37774

Message

Threshold Crossed: sw:EnvStats property: psuCtrlrInlet1Max

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37774
mibFaultName: tcaSwPsuCtrlrInlet1Max
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwPsuCtrlrInlet1Avg

Fault Code: F37775

Message

Threshold Crossed: sw:EnvStats property: psuCtrlrInlet1Avg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 37775
mibFaultName: tcaSwPsuCtrlrInlet1Avg
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats
```

tcaSwPsuCtrlrInlet2

Fault Code: F37779

Message

Threshold Crossed: sw:EnvStats property: psuCtrlrInlet2

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37779
mibFaultName: tcaSwPsuCtrlrInlet2
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwPsuCtrlrInlet2Min

Fault Code: F37781

Message

Threshold Crossed: sw:EnvStats property: psuCtrlrInlet2Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37781
mibFaultName: tcaSwPsuCtrlrInlet2Min
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwPsuCtrlrInlet2Max

Fault Code: F37782

Message

Threshold Crossed: sw:EnvStats property: psuCtrlrInlet2Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37782
mibFaultName: tcaSwPsuCtrlrInlet2Max
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaSwPsuCtrlrInlet2Avg

Fault Code: F37783

Message

Threshold Crossed: sw:EnvStats property: psuCtrlrInlet2Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 37783
mibFaultName: tcaSwPsuCtrlrInlet2Avg
moClass: sw:EnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/envstats

tcaComputeDllpErrors

Fault Code: F38022

Message

Threshold Crossed: compute:PCIEFatalProtocolStats property: dllpErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38022
mibFaultName: tcaComputeDllpErrors
moClass: compute:PCIEFatalProtocolStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-protocol-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-protocol-stats
```

tcaComputeFlowControlErrors

Fault Code: F38032

Message

Threshold Crossed: compute:PCIEFatalProtocolStats property: flowControlErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38032
mibFaultName: tcaComputeFlowControlErrors
moClass: compute:PCIEFatalProtocolStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-protocol-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-protocol-stats
```

tcaComputeUnsupportedRequestErrors

Fault Code: F38044

Message

Threshold Crossed: compute:PCIEFatalReceiveStats property: unsupportedRequestErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38044
mibFaultName: tcaComputeUnsupportedRequestErrors
moClass: compute:PCIEFatalReceiveStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-receive-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-receive-stats
```

tcaComputeErrFatalErrors

Fault Code: F38054

Message

Threshold Crossed: compute:PCIEFatalReceiveStats property: errFatalErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38054
mibFaultName: tcaComputeErrFatalErrors
moClass: compute:PCIEFatalReceiveStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-receive-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-receive-stats
```

tcaComputeErrNonFatalErrors

Fault Code: F38064

Message

Threshold Crossed: compute:PCIEFatalReceiveStats property: errNonFatalErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38064
mibFaultName: tcaComputeErrNonFatalErrors
moClass: compute:PCIEFatalReceiveStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-receive-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-receive-stats
```

tcaComputeUnexpectedErrors

Fault Code: F38086

Message

Threshold Crossed: compute:PCIEFatalCompletionStats property: unexpectedErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38086
mibFaultName: tcaComputeUnexpectedErrors
moClass: compute:PCIEFatalCompletionStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-completion-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-completion-stats
```

tcaComputeTimeoutErrors

Fault Code: F38096

Message

Threshold Crossed: compute:PCIEFatalCompletionStats property: TimeoutErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38096
mibFaultName: tcaComputeTimeoutErrors
moClass: compute:PCIEFatalCompletionStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-completion-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-completion-stats
```

tcaComputeAbortErrors

Fault Code: F38106

Message

Threshold Crossed: compute:PCIEFatalCompletionStats property: AbortErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38106
mibFaultName: tcaComputeAbortErrors
moClass: compute:PCIEFatalCompletionStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-completion-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-completion-stats
```

tcaComputeSurpriseLinkDownErrors

Fault Code: F38128

Message

Threshold Crossed: compute:PCIEFatalStats property: surpriseLinkDownErrors

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38128
mibFaultName: tcaComputeSurpriseLinkDownErrors
moClass: compute:PCIEFatalStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-stats

tcaComputePoisonedTLPErrors

Fault Code: F38138

Message

Threshold Crossed: compute:PCIEFatalStats property: poisonedTLPErrors

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38138
mibFaultName: tcaComputePoisonedTLPErrors
moClass: compute:PCIEFatalStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-stats

tcaComputeAcsViolationErrors

Fault Code: F38148

Message

Threshold Crossed: compute:PCIEFatalStats property: acsViolationErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38148
mibFaultName: tcaComputeAcsViolationErrors
moClass: compute:PCIEFatalStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-stats
```

tcaComputeMalformedTLPErrors

Fault Code: F38158

Message

Threshold Crossed: compute:PCIEFatalStats property: malformedTLPErrors

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38158
mibFaultName: tcaComputeMalformedTLPErrors
moClass: compute:PCIEFatalStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-stats
```

tcaEquipmentTemp

Fault Code: F38311

Message

Threshold Crossed: equipment:IOCardStats property: temp

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38311
mibFaultName: tcaEquipmentTemp
moClass: equipment:IOCardStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats

tcaEquipmentTempMin

Fault Code: F38313

Message

Threshold Crossed: equipment:IOCardStats property: tempMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38313
mibFaultName: tcaEquipmentTempMin
moClass: equipment:IOCardStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats

tcaEquipmentTempMax

Fault Code: F38314

Message

Threshold Crossed: equipment:IOCardStats property: tempMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38314
mibFaultName: tcaEquipmentTempMax
moClass: equipment:IOCardStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats

tcaEquipmentTempAvg

Fault Code: F38315

Message

Threshold Crossed: equipment:IOCardStats property: tempAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38315
mibFaultName: tcaEquipmentTempAvg
moClass: equipment:IOCardStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/stats
Affected MO: sys/fex-[id]/slot-[id]/stats

tcaProcessorInputCurrent

Fault Code: F38349

Message

Threshold Crossed: processor:EnvStats property: inputCurrent

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38349
mibFaultName: tcaProcessorInputCurrent
moClass: processor:EnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats

tcaProcessorInputCurrentMin

Fault Code: F38351

Message

Threshold Crossed: processor:EnvStats property: inputCurrentMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38351
mibFaultName: tcaProcessorInputCurrentMin
moClass: processor:EnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats

tcaProcessorInputCurrentMax

Fault Code: F38352

Message

Threshold Crossed: processor:EnvStats property: inputCurrentMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38352
mibFaultName: tcaProcessorInputCurrentMax
moClass: processor:EnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats
```

tcaProcessorInputCurrentAvg

Fault Code: F38353

Message

Threshold Crossed: processor:EnvStats property: inputCurrentAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38353
mibFaultName: tcaProcessorInputCurrentAvg
moClass: processor:EnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/env-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/env-stats
```

tcaMemoryInputCurrent

Fault Code: F38357

Message

Threshold Crossed: memory:ArrayEnvStats property: inputCurrent

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38357
mibFaultName: tcaMemoryInputCurrent
moClass: memory:ArrayEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/array-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/array-env-stats

tcaMemoryInputCurrentMin

Fault Code: F38359

Message

Threshold Crossed: memory:ArrayEnvStats property: inputCurrentMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38359
mibFaultName: tcaMemoryInputCurrentMin
moClass: memory:ArrayEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/array-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/array-env-stats

tcaMemoryInputCurrentMax

Fault Code: F38360

Message

Threshold Crossed: memory:ArrayEnvStats property: inputCurrentMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38360
mibFaultName: tcaMemoryInputCurrentMax
moClass: memory:ArrayEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/array-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/array-env-stats
```

tcaMemoryInputCurrentAvg

Fault Code: F38361

Message

Threshold Crossed: memory:ArrayEnvStats property: inputCurrentAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 38361
mibFaultName: tcaMemoryInputCurrentAvg
moClass: memory:ArrayEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/array-env-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/array-env-stats
```

tcaAdaptorNoBreakdownGreaterThan1518Delta

Fault Code: F38408

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property: noBreakdownGreaterThan1518Delta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38408
mibFaultName: tcaAdaptorNoBreakdownGreaterThan1518Delta
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stat
 s-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDire
 ction]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDir
 ection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorNoBreakdownGreaterThan1518DeltaMin

Fault Code: F38409

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property:
 noBreakdownGreaterThan1518DeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38409

```

mibFaultName: tcaAdaptorNoBreakdownGreaterThan1518DeltaMin
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

```

tcaAdaptorNoBreakdownGreaterThan1518DeltaMax

Fault Code: F38410

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property:
noBreakdownGreaterThan1518DeltaMax

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38410
mibFaultName: tcaAdaptorNoBreakdownGreaterThan1518DeltaMax
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]

```

Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaAdaptorNoBreakdownGreaterThan1518DeltaAvg

Fault Code: F38411

Message

Threshold Crossed: adaptor:EthPortBySizeLargeStats property:
 noBreakdownGreaterThan1518DeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 38411
mibFaultName: tcaAdaptorNoBreakdownGreaterThan1518DeltaAvg
moClass: adaptor:EthPortBySizeLargeStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/chassis-[id]/blade-[slotId]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/ext-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 sys/rack-unit-[id]/adaptor-[id]/host-eth-[id]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO:
 vmm/computeEp-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/hv-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]
Affected MO: vmm/vm-[uuid]/nic-[name]/eth-port-by-size-large-stats-[trafficDirection]

tcaMemoryTemperature

Fault Code: F38438

Message

Threshold Crossed: memory:BufferUnitEnvStats property: temperature

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38438
mibFaultName: tcaMemoryTemperature
moClass: memory:BufferUnitEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]/buffer-unit-env-stats

```

tcaMemoryTemperatureMin**Fault Code: F38440****Message**

Threshold Crossed: memory:BufferUnitEnvStats property: temperatureMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38440
mibFaultName: tcaMemoryTemperatureMin
moClass: memory:BufferUnitEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]/buffer-unit-env-stats

```

tcaMemoryTemperatureMax**Fault Code: F38441****Message**

Threshold Crossed: memory:BufferUnitEnvStats property: temperatureMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38441
mibFaultName: tcaMemoryTemperatureMax
moClass: memory:BufferUnitEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]/buffer-unit-env-stats

```

tcaMemoryTemperatureAvg**Fault Code: F38442****Message**

Threshold Crossed: memory:BufferUnitEnvStats property: temperatureAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38442
mibFaultName: tcaMemoryTemperatureAvg
moClass: memory:BufferUnitEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
sys/chassis-[id]/blade-[slotId]/board/sensor-unit-[id]/buffer-unit-env-stats
Affected MO: sys/rack-unit-[id]/board/sensor-unit-[id]/buffer-unit-env-stats

```

tcaComputeTemperature**Fault Code: F38451****Message**

Threshold Crossed: compute:IOHubEnvStats property: temperature

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38451
mibFaultName: tcaComputeTemperature
moClass: compute:IOHubEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub/iohub-stats
Affected MO: sys/rack-unit-[id]/board/iohub/iohub-stats

```

tcaComputeTemperatureMin**Fault Code: F38453****Message**

Threshold Crossed: compute:IOHubEnvStats property: temperatureMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38453
mibFaultName: tcaComputeTemperatureMin
moClass: compute:IOHubEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub/iohub-stats
Affected MO: sys/rack-unit-[id]/board/iohub/iohub-stats

```

tcaComputeTemperatureMax**Fault Code: F38454****Message**

Threshold Crossed: compute:IOHubEnvStats property: temperatureMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38454
mibFaultName: tcaComputeTemperatureMax
moClass: compute:IOHubEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub/iohub-stats
Affected MO: sys/rack-unit-[id]/board/iohub/iohub-stats

```

tcaComputeTemperatureAvg**Fault Code: F38455****Message**

Threshold Crossed: compute:IOHubEnvStats property: temperatureAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38455
mibFaultName: tcaComputeTemperatureAvg
moClass: compute:IOHubEnvStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/iohub/iohub-stats
Affected MO: sys/rack-unit-[id]/board/iohub/iohub-stats

```

tcaProcessorMirroringIntraSockErrors**Fault Code: F38779****Message**

Threshold Crossed: processor:ErrorStats property: mirroringIntraSockErrors

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38779
mibFaultName: tcaProcessorMirroringIntraSockErrors
moClass: processor:ErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats

```

tcaProcessorMirroringInterSockErrors**Fault Code: F38788****Message**

Threshold Crossed: processor:ErrorStats property: mirroringInterSockErrors

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38788
mibFaultName: tcaProcessorMirroringInterSockErrors
moClass: processor:ErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats

```

tcaProcessorSparingErrors**Fault Code: F38797****Message**

Threshold Crossed: processor:ErrorStats property: sparingErrors

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: threshold-crossed
mibFaultCode: 38797
mibFaultName: tcaProcessorSparingErrors
moClass: processor:ErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats

tcaProcessorSmiLinkCorrErrors**Fault Code:** F38806**Message**

Threshold Crossed: processor:ErrorStats property: smiLinkCorrErrors

Explanation**Recommended Action****Fault Details**

Severity: info
Cause: threshold-crossed
mibFaultCode: 38806
mibFaultName: tcaProcessorSmiLinkCorrErrors
moClass: processor:ErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats

tcaProcessorSmiLinkUncorrErrors**Fault Code:** F38815**Message**

Threshold Crossed: processor:ErrorStats property: smiLinkUncorrErrors

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38815
mibFaultName: tcaProcessorSmiLinkUncorrErrors
moClass: processor:ErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/cpu-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/cpu-[id]/error-stats

```

tcaMemoryEccMultibitErrors**Fault Code: F38829****Message**

Threshold Crossed: memory:ErrorStats property: eccMultibitErrors

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38829
mibFaultName: tcaMemoryEccMultibitErrors
moClass: memory:ErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats

```

tcaMemoryEccSinglebitErrors**Fault Code: F38838****Message**

Threshold Crossed: memory:ErrorStats property: eccSinglebitErrors

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38838
mibFaultName: tcaMemoryEccSinglebitErrors
moClass: memory:ErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats

```

tcaMemoryAddressParityErrors**Fault Code: F38847****Message**

Threshold Crossed: memory:ErrorStats property: addressParityErrors

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38847
mibFaultName: tcaMemoryAddressParityErrors
moClass: memory:ErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats

```

tcaMemoryMismatchErrors**Fault Code: F38856****Message**

Threshold Crossed: memory:ErrorStats property: mismatchErrors

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38856
mibFaultName: tcaMemoryMismatchErrors
moClass: memory:ErrorStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/memarray-[id]/mem-[id]/error-stats
Affected MO: sys/rack-unit-[id]/board/memarray-[id]/mem-[id]/error-stats

```

tcaComputeBufferOverflowErrors**Fault Code: F38909****Message**

Threshold Crossed: compute:PCIEFatalReceiveStats property: bufferOverflowErrors

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 38909
mibFaultName: tcaComputeBufferOverflowErrors
moClass: compute:PCIEFatalReceiveStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/pciefat-receive-stats
Affected MO: sys/rack-unit-[id]/board/pciefat-receive-stats

```

tcaComputeFmTempSenRearL**Fault Code: F39032****Message**

Threshold Crossed: compute:MbTempStats property: fmTempSenRearL

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39032
mibFaultName: tcaComputeFmTempSenRearL
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

```

tcaComputeFmTempSenRearLMin**Fault Code:** F39034**Message**

Threshold Crossed: compute:MbTempStats property: fmTempSenRearLMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39034
mibFaultName: tcaComputeFmTempSenRearLMin
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

```

tcaComputeFmTempSenRearLMax**Fault Code:** F39035**Message**

Threshold Crossed: compute:MbTempStats property: fmTempSenRearLMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39035
mibFaultName: tcaComputeFmTempSenRearLMax
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

```

tcaComputeFmTempSenRearLAvg**Fault Code: F39036****Message**

Threshold Crossed: compute:MbTempStats property: fmTempSenRearLAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39036
mibFaultName: tcaComputeFmTempSenRearLAvg
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

```

tcaComputeFmTempSenRearR**Fault Code: F39040****Message**

Threshold Crossed: compute:MbTempStats property: fmTempSenRearR

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39040
mibFaultName: tcaComputeFmTempSenRearR
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

```

tcaComputeFmTempSenRearRMin**Fault Code:** F39042**Message**

Threshold Crossed: compute:MbTempStats property: fmTempSenRearRMin

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39042
mibFaultName: tcaComputeFmTempSenRearRMin
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

```

tcaComputeFmTempSenRearRMax**Fault Code:** F39043**Message**

Threshold Crossed: compute:MbTempStats property: fmTempSenRearRMax

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39043
mibFaultName: tcaComputeFmTempSenRearRMax
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

```

tcaComputeFmTempSenRearRAvg**Fault Code: F39044****Message**

Threshold Crossed: compute:MbTempStats property: fmTempSenRearRAvg

Explanation**Recommended Action****Fault Details**

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39044
mibFaultName: tcaComputeFmTempSenRearRAvg
moClass: compute:MbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/chassis-[id]/blade-[slotId]/ext-board-[id]/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
Affected MO: sys/rack-unit-[id]/ext-board-[id]/temp-stats

```

tcaPowerPower**Fault Code: F39240****Message**

Threshold Crossed: power:GroupStats property: power

Explanation**Recommended Action****Fault Details**

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39240
mibFaultName: tcaPowerPower
moClass: power:GroupStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
```

tcaPowerPowerMin**Fault Code: F39242****Message**

Threshold Crossed: power:GroupStats property: powerMin

Explanation**Recommended Action****Fault Details**

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39242
mibFaultName: tcaPowerPowerMin
moClass: power:GroupStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
```

tcaPowerPowerMax**Fault Code: F39243****Message**

Threshold Crossed: power:GroupStats property: powerMax

Explanation**Recommended Action****Fault Details**

```
Severity: info
Cause: threshold-crossed
```

```

mibFaultCode: 39243
mibFaultName: tcaPowerPowerMax
moClass: power:GroupStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

tcaPowerPowerAvg

Fault Code: F39244

Message

Threshold Crossed: power:GroupStats property: powerAvg

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39244
mibFaultName: tcaPowerPowerAvg
moClass: power:GroupStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true

```

tcaEquipmentOutlet1

Fault Code: F39421

Message

Threshold Crossed: equipment:FexEnvStats property: outlet1

Explanation

Recommended Action

Fault Details

```

Severity: info
Cause: threshold-crossed
mibFaultCode: 39421
mibFaultName: tcaEquipmentOutlet1
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

```

tcaEquipmentOutlet1Min

Fault Code: F39423

Message

Threshold Crossed: equipment:FexEnvStats property: outlet1Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39423
mibFaultName: tcaEquipmentOutlet1Min
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentOutlet1Max

Fault Code: F39424

Message

Threshold Crossed: equipment:FexEnvStats property: outlet1Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39424
mibFaultName: tcaEquipmentOutlet1Max
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentOutlet1Avg

Fault Code: F39425

Message

Threshold Crossed: equipment:FexEnvStats property: outlet1Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39425
mibFaultName: tcaEquipmentOutlet1Avg
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentOutlet2

Fault Code: F39429

Message

Threshold Crossed: equipment:FexEnvStats property: outlet2

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39429
mibFaultName: tcaEquipmentOutlet2
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentOutlet2Min

Fault Code: F39431

Message

Threshold Crossed: equipment:FexEnvStats property: outlet2Min

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39431
mibFaultName: tcaEquipmentOutlet2Min
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentOutlet2Max

Fault Code: F39432

Message

Threshold Crossed: equipment:FexEnvStats property: outlet2Max

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39432
mibFaultName: tcaEquipmentOutlet2Max
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats
```

tcaEquipmentOutlet2Avg

Fault Code: F39433

Message

Threshold Crossed: equipment:FexEnvStats property: outlet2Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39433
mibFaultName: tcaEquipmentOutlet2Avg
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentInlet

Fault Code: F39437

Message

Threshold Crossed: equipment:FexEnvStats property: inlet

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39437
mibFaultName: tcaEquipmentInlet
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentInletMin

Fault Code: F39439

Message

Threshold Crossed: equipment:FexEnvStats property: inletMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39439
mibFaultName: tcaEquipmentInletMin
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentInletMax

Fault Code: F39440

Message

Threshold Crossed: equipment:FexEnvStats property: inletMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39440
mibFaultName: tcaEquipmentInletMax
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentInletAvg

Fault Code: F39441

Message

Threshold Crossed: equipment:FexEnvStats property: inletAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39441
mibFaultName: tcaEquipmentInletAvg
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentInlet1

Fault Code: F39445

Message

Threshold Crossed: equipment:FexEnvStats property: inlet1

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39445
mibFaultName: tcaEquipmentInlet1
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentInlet1Min

Fault Code: F39447

Message

Threshold Crossed: equipment:FexEnvStats property: inlet1Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39447
mibFaultName: tcaEquipmentInlet1Min
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentInlet1Max

Fault Code: F39448

Message

Threshold Crossed: equipment:FexEnvStats property: inlet1Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39448
mibFaultName: tcaEquipmentInlet1Max
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentInlet1Avg

Fault Code: F39449

Message

Threshold Crossed: equipment:FexEnvStats property: inlet1Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39449
mibFaultName: tcaEquipmentInlet1Avg
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentDie1

Fault Code: F39453

Message

Threshold Crossed: equipment:FexEnvStats property: die1

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39453
mibFaultName: tcaEquipmentDie1
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentDie1Min

Fault Code: F39455

Message

Threshold Crossed: equipment:FexEnvStats property: die1Min

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39455
mibFaultName: tcaEquipmentDie1Min
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentDie1Max

Fault Code: F39456

Message

Threshold Crossed: equipment:FexEnvStats property: die1Max

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39456
mibFaultName: tcaEquipmentDie1Max
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentDie1Avg

Fault Code: F39457

Message

Threshold Crossed: equipment:FexEnvStats property: die1Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39457
mibFaultName: tcaEquipmentDie1Avg
moClass: equipment:FexEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/env-stats

tcaEquipmentTotalPower

Fault Code: F39464

Message

Threshold Crossed: equipment:FexPowerSummary property: totalPower

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39464
mibFaultName: tcaEquipmentTotalPower
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentTotalPowerMin

Fault Code: F39466

Message

Threshold Crossed: equipment:FexPowerSummary property: totalPowerMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39466
mibFaultName: tcaEquipmentTotalPowerMin
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentTotalPowerMax

Fault Code: F39467

Message

Threshold Crossed: equipment:FexPowerSummary property: totalPowerMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39467
mibFaultName: tcaEquipmentTotalPowerMax
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentTotalPowerAvg

Fault Code: F39468

Message

Threshold Crossed: equipment:FexPowerSummary property: totalPowerAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39468
mibFaultName: tcaEquipmentTotalPowerAvg
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentReservedPower

Fault Code: F39472

Message

Threshold Crossed: equipment:FexPowerSummary property: reservedPower

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39472
mibFaultName: tcaEquipmentReservedPower
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentReservedPowerMin

Fault Code: F39474

Message

Threshold Crossed: equipment:FexPowerSummary property: reservedPowerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39474
mibFaultName: tcaEquipmentReservedPowerMin
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentReservedPowerMax

Fault Code: F39475

Message

Threshold Crossed: equipment:FexPowerSummary property: reservedPowerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39475
mibFaultName: tcaEquipmentReservedPowerMax
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentReservedPowerAvg

Fault Code: F39476

Message

Threshold Crossed: equipment:FexPowerSummary property: reservedPowerAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39476
mibFaultName: tcaEquipmentReservedPowerAvg
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentModulePower

Fault Code: F39480

Message

Threshold Crossed: equipment:FexPowerSummary property: ModulePower

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39480
mibFaultName: tcaEquipmentModulePower
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentModulePowerMin

Fault Code: F39482

Message

Threshold Crossed: equipment:FexPowerSummary property: ModulePowerMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39482
mibFaultName: tcaEquipmentModulePowerMin
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentModulePowerMax

Fault Code: F39483

Message

Threshold Crossed: equipment:FexPowerSummary property: ModulePowerMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39483
mibFaultName: tcaEquipmentModulePowerMax
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentModulePowerAvg

Fault Code: F39484

Message

Threshold Crossed: equipment:FexPowerSummary property: ModulePowerAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39484
mibFaultName: tcaEquipmentModulePowerAvg
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentAvailablePower

Fault Code: F39488

Message

Threshold Crossed: equipment:FexPowerSummary property: availablePower

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39488
mibFaultName: tcaEquipmentAvailablePower
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentAvailablePowerMin

Fault Code: F39490

Message

Threshold Crossed: equipment:FexPowerSummary property: availablePowerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39490
mibFaultName: tcaEquipmentAvailablePowerMin
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentAvailablePowerMax

Fault Code: F39491

Message

Threshold Crossed: equipment:FexPowerSummary property: availablePowerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39491
mibFaultName: tcaEquipmentAvailablePowerMax
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary

tcaEquipmentAvailablePowerAvg

Fault Code: F39492

Message

Threshold Crossed: equipment:FexPowerSummary property: availablePowerAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39492
mibFaultName: tcaEquipmentAvailablePowerAvg
moClass: equipment:FexPowerSummary
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/fex-[id]/power-summary
```

tcaEquipmentCurrent

Fault Code: F39498

Message

Threshold Crossed: equipment:FexPsuInputStats property: current

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39498
mibFaultName: tcaEquipmentCurrent
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentCurrentMin

Fault Code: F39500

Message

Threshold Crossed: equipment:FexPsuInputStats property: currentMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39500
mibFaultName: tcaEquipmentCurrentMin
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentCurrentMax

Fault Code: F39501

Message

Threshold Crossed: equipment:FexPsuInputStats property: currentMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39501
mibFaultName: tcaEquipmentCurrentMax
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentCurrentAvg

Fault Code: F39502

Message

Threshold Crossed: equipment:FexPsuInputStats property: currentAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39502
mibFaultName: tcaEquipmentCurrentAvg
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentVoltage

Fault Code: F39506

Message

Threshold Crossed: equipment:FexPsuInputStats property: voltage

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39506
mibFaultName: tcaEquipmentVoltage
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentVoltageMin

Fault Code: F39508

Message

Threshold Crossed: equipment:FexPsuInputStats property: voltageMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39508
mibFaultName: tcaEquipmentVoltageMin
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentVoltageMax

Fault Code: F39509

Message

Threshold Crossed: equipment:FexPsuInputStats property: voltageMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39509
mibFaultName: tcaEquipmentVoltageMax
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentVoltageAvg

Fault Code: F39510

Message

Threshold Crossed: equipment:FexPsuInputStats property: voltageAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39510
mibFaultName: tcaEquipmentVoltageAvg
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentPower

Fault Code: F39514

Message

Threshold Crossed: equipment:FexPsuInputStats property: power

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39514
mibFaultName: tcaEquipmentPower
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats
```

tcaEquipmentPowerMin

Fault Code: F39516

Message

Threshold Crossed: equipment:FexPsuInputStats property: powerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39516
mibFaultName: tcaEquipmentPowerMin
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentPowerMax

Fault Code: F39517

Message

Threshold Crossed: equipment:FexPsuInputStats property: powerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39517
mibFaultName: tcaEquipmentPowerMax
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentPowerAvg

Fault Code: F39518

Message

Threshold Crossed: equipment:FexPsuInputStats property: powerAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39518
mibFaultName: tcaEquipmentPowerAvg
moClass: equipment:FexPsuInputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/fex-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/fex-psu-input-stats
Affected MO: sys/switch-[id]/psu-[id]/fex-psu-input-stats

tcaEquipmentAmbientTemp

Fault Code: F39525

Message

Threshold Crossed: equipment:RackUnitPsuStats property: ambientTemp

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39525
mibFaultName: tcaEquipmentAmbientTemp
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentAmbientTempMin

Fault Code: F39527

Message

Threshold Crossed: equipment:RackUnitPsuStats property: ambientTempMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39527
mibFaultName: tcaEquipmentAmbientTempMin
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentAmbientTempMax

Fault Code: F39528

Message

Threshold Crossed: equipment:RackUnitPsuStats property: ambientTempMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39528
mibFaultName: tcaEquipmentAmbientTempMax
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentAmbientTempAvg

Fault Code: F39529

Message

Threshold Crossed: equipment:RackUnitPsuStats property: ambientTempAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39529
mibFaultName: tcaEquipmentAmbientTempAvg
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputCurrent

Fault Code: F39533

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputCurrent

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39533
mibFaultName: tcaEquipmentOutputCurrent
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputCurrentMin

Fault Code: F39535

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputCurrentMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39535
mibFaultName: tcaEquipmentOutputCurrentMin
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputCurrentMax

Fault Code: F39536

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputCurrentMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39536
mibFaultName: tcaEquipmentOutputCurrentMax
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputCurrentAvg

Fault Code: F39537

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputCurrentAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39537
mibFaultName: tcaEquipmentOutputCurrentAvg
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputPower

Fault Code: F39541

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputPower

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39541
mibFaultName: tcaEquipmentOutputPower
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentOutputPowerMin

Fault Code: F39543

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputPowerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39543
mibFaultName: tcaEquipmentOutputPowerMin
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputPowerMax

Fault Code: F39544

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputPowerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39544
mibFaultName: tcaEquipmentOutputPowerMax
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputPowerAvg

Fault Code: F39545

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputPowerAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39545
mibFaultName: tcaEquipmentOutputPowerAvg
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentInputPower

Fault Code: F39549

Message

Threshold Crossed: equipment:RackUnitPsuStats property: inputPower

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39549
mibFaultName: tcaEquipmentInputPower
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentInputPowerMin

Fault Code: F39551

Message

Threshold Crossed: equipment:RackUnitPsuStats property: inputPowerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39551
mibFaultName: tcaEquipmentInputPowerMin
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentInputPowerMax

Fault Code: F39552

Message

Threshold Crossed: equipment:RackUnitPsuStats property: inputPowerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39552
mibFaultName: tcaEquipmentInputPowerMax
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentInputPowerAvg

Fault Code: F39553

Message

Threshold Crossed: equipment:RackUnitPsuStats property: inputPowerAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39553
mibFaultName: tcaEquipmentInputPowerAvg
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputVoltage

Fault Code: F39557

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputVoltage

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39557
mibFaultName: tcaEquipmentOutputVoltage
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputVoltageMin

Fault Code: F39559

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputVoltageMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39559
mibFaultName: tcaEquipmentOutputVoltageMin
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputVoltageMax

Fault Code: F39560

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputVoltageMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39560
mibFaultName: tcaEquipmentOutputVoltageMax
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentOutputVoltageAvg

Fault Code: F39561

Message

Threshold Crossed: equipment:RackUnitPsuStats property: outputVoltageAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39561
mibFaultName: tcaEquipmentOutputVoltageAvg
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputVoltage

Fault Code: F39565

Message

Threshold Crossed: equipment:RackUnitPsuStats property: inputVoltage

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39565
mibFaultName: tcaEquipmentInputVoltage
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentInputVoltageMin

Fault Code: F39567

Message

Threshold Crossed: equipment:RackUnitPsuStats property: inputVoltageMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39567
mibFaultName: tcaEquipmentInputVoltageMin
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentInputVoltageMax

Fault Code: F39568

Message

Threshold Crossed: equipment:RackUnitPsuStats property: inputVoltageMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39568
mibFaultName: tcaEquipmentInputVoltageMax
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats

tcaEquipmentInputVoltageAvg

Fault Code: F39569

Message

Threshold Crossed: equipment:RackUnitPsuStats property: inputVoltageAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39569
mibFaultName: tcaEquipmentInputVoltageAvg
moClass: equipment:RackUnitPsuStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/fex-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/rackunit-power-stats
Affected MO: sys/switch-[id]/psu-[id]/rackunit-power-stats
```

tcaEquipmentSpeed

Fault Code: F39575

Message

Threshold Crossed: equipment:RackUnitFanStats property: speed

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 39575
mibFaultName: tcaEquipmentSpeed
moClass: equipment:RackUnitFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats
```

tcaEquipmentSpeedMin

Fault Code: F39577

Message

Threshold Crossed: equipment:RackUnitFanStats property: speedMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39577
mibFaultName: tcaEquipmentSpeedMin
moClass: equipment:RackUnitFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedMax

Fault Code: F39578

Message

Threshold Crossed: equipment:RackUnitFanStats property: speedMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39578
mibFaultName: tcaEquipmentSpeedMax
moClass: equipment:RackUnitFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedAvg

Fault Code: F39579

Message

Threshold Crossed: equipment:RackUnitFanStats property: speedAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 39579
mibFaultName: tcaEquipmentSpeedAvg
moClass: equipment:RackUnitFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaComputeFrontTemp

Fault Code: F40092

Message

Threshold Crossed: compute:RackUnitMbTempStats property: frontTemp

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40092
mibFaultName: tcaComputeFrontTemp
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats

tcaComputeFrontTempMin

Fault Code: F40094

Message

Threshold Crossed: compute:RackUnitMbTempStats property: frontTempMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40094
mibFaultName: tcaComputeFrontTempMin
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats

tcaComputeFrontTempMax

Fault Code: F40095

Message

Threshold Crossed: compute:RackUnitMbTempStats property: frontTempMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40095
mibFaultName: tcaComputeFrontTempMax
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats

tcaComputeFrontTempAvg

Fault Code: F40096

Message

Threshold Crossed: compute:RackUnitMbTempStats property: frontTempAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40096
mibFaultName: tcaComputeFrontTempAvg
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeRearTemp

Fault Code: F40100

Message

Threshold Crossed: compute:RackUnitMbTempStats property: rearTemp

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40100
mibFaultName: tcaComputeRearTemp
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeRearTempMin

Fault Code: F40102

Message

Threshold Crossed: compute:RackUnitMbTempStats property: rearTempMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40102
mibFaultName: tcaComputeRearTempMin
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeRearTempMax

Fault Code: F40103

Message

Threshold Crossed: compute:RackUnitMbTempStats property: rearTempMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40103
mibFaultName: tcaComputeRearTempMax
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```


tcaComputeRearTempAvg

Fault Code: F40104

Message

Threshold Crossed: compute:RackUnitMbTempStats property: rearTempAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40104
mibFaultName: tcaComputeRearTempAvg
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeAmbientTemp

Fault Code: F40108

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ambientTemp

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40108
mibFaultName: tcaComputeAmbientTemp
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeAmbientTempMin

Fault Code: F40110

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ambientTempMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40110
mibFaultName: tcaComputeAmbientTempMin
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeAmbientTempMax

Fault Code: F40111

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ambientTempMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40111
mibFaultName: tcaComputeAmbientTempMax
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeAmbientTempAvg

Fault Code: F40112

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ambientTempAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40112
mibFaultName: tcaComputeAmbientTempAvg
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh1Temp

Fault Code: F40116

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ioh1Temp

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40116
mibFaultName: tcaComputeIoh1Temp
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeloh1TempMin

Fault Code: F40118

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ioh1TempMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40118
mibFaultName: tcaComputeIoh1TempMin
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats

tcaComputeloh1TempMax

Fault Code: F40119

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ioh1TempMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40119
mibFaultName: tcaComputeIoh1TempMax
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats

tcaComputeIoh1TempAvg

Fault Code: F40120

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ioh1TempAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40120
mibFaultName: tcaComputeIoh1TempAvg
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeIoh2Temp

Fault Code: F40124

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ioh2Temp

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40124
mibFaultName: tcaComputeIoh2Temp
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaComputeloh2TempMin

Fault Code: F40126

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ioh2TempMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40126
mibFaultName: tcaComputeIoh2TempMin
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats

tcaComputeloh2TempMax

Fault Code: F40127

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ioh2TempMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40127
mibFaultName: tcaComputeIoh2TempMax
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats

tcaComputeIoh2TempAvg

Fault Code: F40128

Message

Threshold Crossed: compute:RackUnitMbTempStats property: ioh2TempAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40128
mibFaultName: tcaComputeIoh2TempAvg
moClass: compute:RackUnitMbTempStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/blade-[slotId]/board/temp-stats
Affected MO: sys/rack-unit-[id]/board/temp-stats
```

tcaEquipmentCurrent

Fault Code: F40547

Message

Threshold Crossed: equipment:PsuOutputStats property: current

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40547
mibFaultName: tcaEquipmentCurrent
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentCurrentMin

Fault Code: F40549

Message

Threshold Crossed: equipment:PsuOutputStats property: currentMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40549
mibFaultName: tcaEquipmentCurrentMin
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentCurrentMax

Fault Code: F40550

Message

Threshold Crossed: equipment:PsuOutputStats property: currentMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40550
mibFaultName: tcaEquipmentCurrentMax
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentCurrentAvg

Fault Code: F40551

Message

Threshold Crossed: equipment:PsuOutputStats property: currentAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40551
mibFaultName: tcaEquipmentCurrentAvg
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentVoltage

Fault Code: F40555

Message

Threshold Crossed: equipment:PsuOutputStats property: voltage

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40555
mibFaultName: tcaEquipmentVoltage
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentVoltageMin

Fault Code: F40557

Message

Threshold Crossed: equipment:PsuOutputStats property: voltageMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40557
mibFaultName: tcaEquipmentVoltageMin
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentVoltageMax

Fault Code: F40558

Message

Threshold Crossed: equipment:PsuOutputStats property: voltageMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40558
mibFaultName: tcaEquipmentVoltageMax
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentVoltageAvg

Fault Code: F40559

Message

Threshold Crossed: equipment:PsuOutputStats property: voltageAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40559
mibFaultName: tcaEquipmentVoltageAvg
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentPower

Fault Code: F40563

Message

Threshold Crossed: equipment:PsuOutputStats property: power

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40563
mibFaultName: tcaEquipmentPower
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentPowerMin

Fault Code: F40565

Message

Threshold Crossed: equipment:PsuOutputStats property: powerMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40565
mibFaultName: tcaEquipmentPowerMin
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentPowerMax

Fault Code: F40566

Message

Threshold Crossed: equipment:PsuOutputStats property: powerMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40566
mibFaultName: tcaEquipmentPowerMax
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats

tcaEquipmentPowerAvg

Fault Code: F40567

Message

Threshold Crossed: equipment:PsuOutputStats property: powerAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40567
mibFaultName: tcaEquipmentPowerAvg
moClass: equipment:PsuOutputStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/psu-[id]/output-stats
Affected MO: sys/fex-[id]/psu-[id]/output-stats
Affected MO: sys/rack-unit-[id]/psu-[id]/output-stats
Affected MO: sys/switch-[id]/psu-[id]/output-stats
```

tcaEquipmentSpeed

Fault Code: F40574

Message

Threshold Crossed: equipment:NetworkElementFanStats property: speed

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 40574
mibFaultName: tcaEquipmentSpeed
moClass: equipment:NetworkElementFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats
```

tcaEquipmentSpeedMin

Fault Code: F40576

Message

Threshold Crossed: equipment:NetworkElementFanStats property: speedMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40576
mibFaultName: tcaEquipmentSpeedMin
moClass: equipment:NetworkElementFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedMax

Fault Code: F40577

Message

Threshold Crossed: equipment:NetworkElementFanStats property: speedMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40577
mibFaultName: tcaEquipmentSpeedMax
moClass: equipment:NetworkElementFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentSpeedAvg

Fault Code: F40578

Message

Threshold Crossed: equipment:NetworkElementFanStats property: speedAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40578
mibFaultName: tcaEquipmentSpeedAvg
moClass: equipment:NetworkElementFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentDrivePercentage

Fault Code: F40582

Message

Threshold Crossed: equipment:NetworkElementFanStats property: drivePercentage

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40582
mibFaultName: tcaEquipmentDrivePercentage
moClass: equipment:NetworkElementFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentDrivePercentageMin

Fault Code: F40584

Message

Threshold Crossed: equipment:NetworkElementFanStats property: drivePercentageMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40584
mibFaultName: tcaEquipmentDrivePercentageMin
moClass: equipment:NetworkElementFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentDrivePercentageMax

Fault Code: F40585

Message

Threshold Crossed: equipment:NetworkElementFanStats property: drivePercentageMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40585
mibFaultName: tcaEquipmentDrivePercentageMax
moClass: equipment:NetworkElementFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaEquipmentDrivePercentageAvg

Fault Code: F40586

Message

Threshold Crossed: equipment:NetworkElementFanStats property: drivePercentageAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 40586
mibFaultName: tcaEquipmentDrivePercentageAvg
moClass: equipment:NetworkElementFanStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/fex-[id]/fan-[id]/stats
Affected MO: sys/rack-unit-[id]/fan-module-[tray]-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-[id]/stats
Affected MO: sys/switch-[id]/fan-module-[tray]-[id]/fan-[id]/stats

tcaSwSlotOutlet1

Fault Code: F41199

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet1

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41199
mibFaultName: tcaSwSlotOutlet1
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats

tcaSwSlotOutlet1Min

Fault Code: F41201

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet1Min

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41201
mibFaultName: tcaSwSlotOutlet1Min
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet1Max

Fault Code: F41202

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet1Max

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41202
mibFaultName: tcaSwSlotOutlet1Max
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet1Avg

Fault Code: F41203

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet1Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41203
mibFaultName: tcaSwSlotOutlet1Avg
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats

tcaSwSlotOutlet2

Fault Code: F41207

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet2

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41207
mibFaultName: tcaSwSlotOutlet2
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats

tcaSwSlotOutlet2Min

Fault Code: F41209

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet2Min

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41209
mibFaultName: tcaSwSlotOutlet2Min
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet2Max

Fault Code: F41210

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet2Max

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41210
mibFaultName: tcaSwSlotOutlet2Max
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet2Avg

Fault Code: F41211

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet2Avg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41211
mibFaultName: tcaSwSlotOutlet2Avg
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats

tcaSwSlotOutlet3

Fault Code: F41215

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet3

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41215
mibFaultName: tcaSwSlotOutlet3
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats

tcaSwSlotOutlet3Min

Fault Code: F41217

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet3Min

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41217
mibFaultName: tcaSwSlotOutlet3Min
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet3Max

Fault Code: F41218

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet3Max

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41218
mibFaultName: tcaSwSlotOutlet3Max
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaSwSlotOutlet3Avg

Fault Code: F41219

Message

Threshold Crossed: sw:CardEnvStats property: SlotOutlet3Avg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41219
mibFaultName: tcaSwSlotOutlet3Avg
moClass: sw:CardEnvStats
Type: generic
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/switch-[id]/cardenvstats
```

tcaEtherPacketsTxDelta

Fault Code: F41289

Message

Threshold Crossed: ether:FcoeInterfaceStats property: packetsTxDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41289
mibFaultName: tcaEtherPacketsTxDelta
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherPacketsTxDeltaMin

Fault Code: F41290

Message

Threshold Crossed: ether:FcoeInterfaceStats property: packetsTxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41290
mibFaultName: tcaEtherPacketsTxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherPacketsTxDeltaMax

Fault Code: F41291

Message

Threshold Crossed: ether:FcoeInterfaceStats property: packetsTxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41291
mibFaultName: tcaEtherPacketsTxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```


tcaEtherPacketsTxDeltaAvg

Fault Code: F41292

Message

Threshold Crossed: ether:FcoeInterfaceStats property: packetsTxDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41292
mibFaultName: tcaEtherPacketsTxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherPacketsRxDelta

Fault Code: F41299

Message

Threshold Crossed: ether:FcoeInterfaceStats property: packetsRxDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41299
mibFaultName: tcaEtherPacketsRxDelta
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherPacketsRxDeltaMin

Fault Code: F41300

Message

Threshold Crossed: ether:FcoeInterfaceStats property: packetsRxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41300
mibFaultName: tcaEtherPacketsRxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherPacketsRxDeltaMax

Fault Code: F41301

Message

Threshold Crossed: ether:FcoeInterfaceStats property: packetsRxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41301
mibFaultName: tcaEtherPacketsRxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherPacketsRxDeltaAvg

Fault Code: F41302

Message

Threshold Crossed: ether:FcoeInterfaceStats property: packetsRxDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41302
mibFaultName: tcaEtherPacketsRxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherBytesTxDelta

Fault Code: F41309

Message

Threshold Crossed: ether:FcoeInterfaceStats property: bytesTxDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41309
mibFaultName: tcaEtherBytesTxDelta
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherBytesTxDeltaMin

Fault Code: F41310

Message

Threshold Crossed: ether:FcoeInterfaceStats property: bytesTxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41310
mibFaultName: tcaEtherBytesTxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherBytesTxDeltaMax

Fault Code: F41311

Message

Threshold Crossed: ether:FcoeInterfaceStats property: bytesTxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41311
mibFaultName: tcaEtherBytesTxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherBytesTxDeltaAvg

Fault Code: F41312

Message

Threshold Crossed: ether:FcoeInterfaceStats property: bytesTxDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41312
mibFaultName: tcaEtherBytesTxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherBytesRxDelta

Fault Code: F41319

Message

Threshold Crossed: ether:FcoeInterfaceStats property: bytesRxDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41319
mibFaultName: tcaEtherBytesRxDelta
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherBytesRxDeltaMin

Fault Code: F41320

Message

Threshold Crossed: ether:FcoeInterfaceStats property: bytesRxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41320
mibFaultName: tcaEtherBytesRxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherBytesRxDeltaMax

Fault Code: F41321

Message

Threshold Crossed: ether:FcoeInterfaceStats property: bytesRxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41321
mibFaultName: tcaEtherBytesRxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherBytesRxDeltaAvg

Fault Code: F41322

Message

Threshold Crossed: ether:FcoeInterfaceStats property: bytesRxDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41322
mibFaultName: tcaEtherBytesRxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
 fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsTxDelta

Fault Code: F41329

Message

Threshold Crossed: ether:FcoeInterfaceStats property: errorsTxDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41329
mibFaultName: tcaEtherErrorsTxDelta
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
 fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherErrorsTxDeltaMin

Fault Code: F41330

Message

Threshold Crossed: ether:FcoeInterfaceStats property: errorsTxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41330
mibFaultName: tcaEtherErrorsTxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherErrorsTxDeltaMax

Fault Code: F41331

Message

Threshold Crossed: ether:FcoeInterfaceStats property: errorsTxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41331
mibFaultName: tcaEtherErrorsTxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```


tcaEtherErrorsTxDeltaAvg

Fault Code: F41332

Message

Threshold Crossed: ether:FcoeInterfaceStats property: errorsTxDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41332
mibFaultName: tcaEtherErrorsTxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherErrorsRxDelta

Fault Code: F41339

Message

Threshold Crossed: ether:FcoeInterfaceStats property: errorsRxDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41339
mibFaultName: tcaEtherErrorsRxDelta
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherErrorsRxDeltaMin

Fault Code: F41340

Message

Threshold Crossed: ether:FcoeInterfaceStats property: errorsRxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41340
mibFaultName: tcaEtherErrorsRxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherErrorsRxDeltaMax

Fault Code: F41341

Message

Threshold Crossed: ether:FcoeInterfaceStats property: errorsRxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41341
mibFaultName: tcaEtherErrorsRxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherErrorsRxDeltaAvg

Fault Code: F41342

Message

Threshold Crossed: ether:FcoeInterfaceStats property: errorsRxDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41342
mibFaultName: tcaEtherErrorsRxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherDroppedTxDelta

Fault Code: F41349

Message

Threshold Crossed: ether:FcoeInterfaceStats property: droppedTxDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41349
mibFaultName: tcaEtherDroppedTxDelta
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherDroppedTxDeltaMin

Fault Code: F41350

Message

Threshold Crossed: ether:FcoeInterfaceStats property: droppedTxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41350
mibFaultName: tcaEtherDroppedTxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherDroppedTxDeltaMax

Fault Code: F41351

Message

Threshold Crossed: ether:FcoeInterfaceStats property: droppedTxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41351
mibFaultName: tcaEtherDroppedTxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherDroppedTxDeltaAvg

Fault Code: F41352

Message

Threshold Crossed: ether:FcoeInterfaceStats property: droppedTxDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41352
mibFaultName: tcaEtherDroppedTxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
 fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedRxDelta

Fault Code: F41359

Message

Threshold Crossed: ether:FcoeInterfaceStats property: droppedRxDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41359
mibFaultName: tcaEtherDroppedRxDelta
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
 fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherDroppedRxDeltaMin

Fault Code: F41360

Message

Threshold Crossed: ether:FcoeInterfaceStats property: droppedRxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41360
mibFaultName: tcaEtherDroppedRxDeltaMin
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherDroppedRxDeltaMax

Fault Code: F41361

Message

Threshold Crossed: ether:FcoeInterfaceStats property: droppedRxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 41361
mibFaultName: tcaEtherDroppedRxDeltaMax
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats
```

tcaEtherDroppedRxDeltaAvg

Fault Code: F41362

Message

Threshold Crossed: ether:FcoeInterfaceStats property: droppedRxDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 41362
mibFaultName: tcaEtherDroppedRxDeltaAvg
moClass: ether:FcoeInterfaceStats
Type: server
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO:
 fabric/fc-estc/[id]/phys-fcoe-slot-[slotId]-port-[portId]/fcoe-interface-stats
Affected MO: fabric/san/[id]/fcoesanpc-[portId]/fcoe-interface-stats
Affected MO:
 fabric/san/[id]/phys-fcoesanep-slot-[slotId]-port-[portId]/fcoe-interface-stats

tcaEtherFrameTxDelta

Fault Code: F43294

Message

Threshold Crossed: ether:NiErrStats property: frameTxDelta

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43294
mibFaultName: tcaEtherFrameTxDelta
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherFrameTxDeltaMin

Fault Code: F43295

Message

Threshold Crossed: ether:NiErrStats property: frameTxDeltaMin

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43295
mibFaultName: tcaEtherFrameTxDeltaMin
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherFrameTxDeltaMax

Fault Code: F43296

Message

Threshold Crossed: ether:NiErrStats property: frameTxDeltaMax

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43296
mibFaultName: tcaEtherFrameTxDeltaMax
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```


tcaEtherFrameTxDeltaAvg

Fault Code: F43297

Message

Threshold Crossed: ether:NiErrStats property: frameTxDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43297
mibFaultName: tcaEtherFrameTxDeltaAvg
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherTooLongDelta

Fault Code: F43304

Message

Threshold Crossed: ether:NiErrStats property: tooLongDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43304
mibFaultName: tcaEtherTooLongDelta
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherTooLongDeltaMin

Fault Code: F43305

Message

Threshold Crossed: ether:NiErrStats property: tooLongDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43305
mibFaultName: tcaEtherTooLongDeltaMin
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooLongDeltaMax

Fault Code: F43306

Message

Threshold Crossed: ether:NiErrStats property: tooLongDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43306
mibFaultName: tcaEtherTooLongDeltaMax
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooLongDeltaAvg

Fault Code: F43307

Message

Threshold Crossed: ether:NiErrStats property: tooLongDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43307
mibFaultName: tcaEtherTooLongDeltaAvg
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherTooShortDelta

Fault Code: F43314

Message

Threshold Crossed: ether:NiErrStats property: tooShortDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43314
mibFaultName: tcaEtherTooShortDelta
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherTooShortDeltaMin

Fault Code: F43315

Message

Threshold Crossed: ether:NiErrStats property: tooShortDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43315
mibFaultName: tcaEtherTooShortDeltaMin
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooShortDeltaMax

Fault Code: F43316

Message

Threshold Crossed: ether:NiErrStats property: tooShortDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43316
mibFaultName: tcaEtherTooShortDeltaMax
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherTooShortDeltaAvg

Fault Code: F43317

Message

Threshold Crossed: ether:NiErrStats property: tooShortDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43317
mibFaultName: tcaEtherTooShortDeltaAvg
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherCrcDelta

Fault Code: F43324

Message

Threshold Crossed: ether:NiErrStats property: crcDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43324
mibFaultName: tcaEtherCrcDelta
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherCrcDeltaMin

Fault Code: F43325

Message

Threshold Crossed: ether:NiErrStats property: crcDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43325
mibFaultName: tcaEtherCrcDeltaMin
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherCrcDeltaMax

Fault Code: F43326

Message

Threshold Crossed: ether:NiErrStats property: crcDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43326
mibFaultName: tcaEtherCrcDeltaMax
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherCrcDeltaAvg

Fault Code: F43327

Message

Threshold Crossed: ether:NiErrStats property: crcDeltaAvg

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43327
mibFaultName: tcaEtherCrcDeltaAvg
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherInRangeDelta

Fault Code: F43334

Message

Threshold Crossed: ether:NiErrStats property: inRangeDelta

Explanation

Recommended Action

Fault Details

```
Severity: info
Cause: threshold-crossed
mibFaultCode: 43334
mibFaultName: tcaEtherInRangeDelta
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
```

tcaEtherInRangeDeltaMin

Fault Code: F43335

Message

Threshold Crossed: ether:NiErrStats property: inRangeDeltaMin

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43335
mibFaultName: tcaEtherInRangeDeltaMin
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherInRangeDeltaMax

Fault Code: F43336

Message

Threshold Crossed: ether:NiErrStats property: inRangeDeltaMax

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43336
mibFaultName: tcaEtherInRangeDeltaMax
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

tcaEtherInRangeDeltaAvg

Fault Code: F43337

Message

Threshold Crossed: ether:NiErrStats property: inRangeDeltaAvg

Explanation

Recommended Action

Fault Details

Severity: info
Cause: threshold-crossed
mibFaultCode: 43337
mibFaultName: tcaEtherInRangeDeltaAvg
moClass: ether:NiErrStats
Type: equipment
Callhome: none
Callhome Enabled: no
Auto Cleared: true
Is Implemented: true
Affected MO: sys/chassis-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/fex-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats
Affected MO: sys/switch-[id]/slot-[id]/[type]/port-[portId]/ni-err-stats

