



INDEX

B

- background download [23](#)
- backup
 - numbering scheme [41](#)
 - procedure [41](#)
- backup category command [42](#)
- backup file commands [41](#)
- backup server command [42](#)
- boot helper installation [2](#)
- boot loader [33](#)

C

- Cisco Analog Video Gateway Module
 - software files [18, 19, 25, 26, 35](#)
- Cisco Analog Video Gateway Network Module software website [18, 19, 25, 26, 35](#)
- Cisco SM-SRE [1](#)
- clean installation [23](#)
- clean installation, definition [2](#)
- command
 - backup category [42](#)
 - backup server [42](#)
 - configure terminal [42](#)
 - continue [42](#)
 - enable [42](#)
 - exit [42](#)
 - offline [42, 45](#)
 - reload [45](#)
 - restore id [45](#)
 - show backup history [42, 45](#)
 - show backup server [42, 45](#)

- show software versions [20](#)

- commands, file backup [41](#)
- configure terminal command [42](#)
- configuring server parameters [36](#)
- continue command [42](#)

D

- download, background [23](#)
- downloading software image [37](#)

E

- enable command [42](#)
- erasing hard drive [23](#)
- exit command [42](#)

F

- feature navigator [4](#)
- file storage [18, 20, 25, 38, 39](#)

G

- graceful shutdown [3](#)

H

- hard drive, erasing [23](#)

I

- installation

boot helper [2](#)
clean [23](#)
upgrade [2](#)
installing
software image [34](#)
upgrades [24](#)

L

local disk drive [18, 20, 25, 38, 39](#)

M

module command set [3](#)

N

numbering scheme, backup files [41](#)

O

offline command [42, 45](#)
offline mode [41, 45](#)

P

previous release, upgrading from [17](#)

R

reload command [45](#)
restore id command [45](#)

S

server parameter configuration [36](#)
show backup history command [42, 45](#)
show backup server command [42, 45](#)

show software versions command [20](#)
software center download website [4](#)
software files [18, 19, 25, 26, 35](#)
software image
downloading [37](#)
installing [34](#)
upgrading [17](#)
software install clean command [2](#)
software install upgrade command [2](#)

U

uninterruptible power supply. See also UPS
upgrade
installation, definition [2](#)
processes and procedures [2](#)
upgrading
from a previous release [17](#)
software image [17](#)
UPS [3](#)