



INDEX

B

- background download [17](#)
- backup
 - numbering scheme [31](#)
 - procedure [31](#)
- backup category command [32](#)
- backup file commands [31](#)
- backup server command [32](#)
- boot helper installation [3](#)
- boot loader [25](#)

C

- Cisco Analog Video Gateway Module
 - software files [12, 13, 19, 26, 27](#)
- Cisco Analog Video Gateway Network Module software website [12, 13, 18, 19, 26, 27](#)
- clean installation [17](#)
- clean installation, definition [2](#)
- command
 - backup category [32](#)
 - backup server [32](#)
 - configure terminal [32](#)
 - continue [32](#)
 - enable [32](#)
 - exit [32](#)
 - interface Service-Engine [8](#)
 - ip address [8](#)
 - ip unnumbered [8](#)
 - offline [32, 35](#)
 - reload [35](#)
 - restore id [35](#)

- show backup history [32, 35](#)
- show backup server [32, 35](#)
- show software versions [15](#)
- commands, file backup [31](#)
- configure terminal command [32](#)
- configuring server parameters [27](#)
- continue command [32](#)

D

- default gateway [7](#)
- download, background [17](#)
- downloading software image [29](#)

E

- enable command [32](#)
- erasing hard drive [17](#)
- exit command [32](#)

F

- feature navigator [5](#)
- file storage [12, 14, 19, 29, 30](#)

G

- graceful shutdown [3](#)

H

- hard drive, erasing [17](#)

I

installation

- boot helper [3](#)
- clean [17](#)
- upgrade [2](#)

installing

- software image [26](#)
- upgrades [18](#)

interface Service-Engine command [8](#)

ip address command [8](#)

ip unnumbered command [8](#)

L

local disk drive [12, 14, 19, 29, 30](#)

M

module command set [3](#)

N

numbering scheme, backup files [31](#)

O

offline command [32, 35](#)

offline mode [31, 35](#)

P

previous release, upgrading from [11](#)

R

reload command [35](#)

restore id command [35](#)

S

server parameter configuration [27](#)

show backup history command [32, 35](#)

show backup server command [32, 35](#)

show software versions command [15](#)

software center download website [5](#)

software files [12, 13, 19, 26, 27](#)

software image

- downloading [29](#)

- installing [26](#)

- upgrading [11](#)

software install clean command [2](#)

software install upgrade command [2](#)

spare modules [7](#)

U

uninterruptible power supply. See also UPS

upgrade

- installation, definition [2](#)

- processes and procedures [2](#)

upgrading

- from a previous release [11](#)

- software image [11](#)

UPS [3](#)