

#### CISCO CONFIDENTIAL

### **Preface**

Revised: May 14, 2012, OL-25015-02

#### Introduction

This document is the *Operations and Maintenance Guide* for the Cisco BTS 10200 Softswitch, Release 6.0.4.

## **Organization**

This guide has the following chapters:

- Chapter 1, "Starting and Shutting Down the BTS"—Tells you how to start up and shut down the BTS
- Chapter 2, "Managing BTS Users and Commands Using EMS"—Describes operator interfaces to the BTS and how to manage access and users
- Chapter 3, "Monitoring and Backing Up the BTS"—Includes overall BTS maintenance strategies
- Chapter 4, "Operating the BTS"—Tells you how to operate the BTS
- Chapter 5, "Managing External Resources"—Tells you how to manage external resources provisioned on the BTS using administrative (ADM) commands
- Chapter 6, "Using BTS Measurements"—Describes BTS traffic measurements and tells you how to use them
- Chapter 7, "Using the BTS SNMP Agent"—Explains how to use the Simple Network Management Protocol (SNMP) agent
- Appendix A, "Feature Tones"—Explains special tones the BTS supports for subscriber and operator features
- Appendix B, "FIM/XML"—Explains the Feature Interaction Module/Extensible Markup Language (FIM/XML) feature.

#### REVIEW DRAFT-CISCO CONFIDENTIAL

# **Document Change History**

This table provides the revision history for the *Cisco BTS 10200 Softswitch Operations and Maintenance Guide, Release 6.0.4.* 

Table 1 Revision History

Version Number	Issue Date	Status	Reason for Change
OL-25015-02	May 14, 2012	Initial	Initial document for Release 6.0.4

## **Obtaining Documentation and Submitting a Service Request**

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.