



A

adding

- description of message attachments [7-2](#)
- members to system distribution lists [6-3](#)
- port [7-4](#)
- SIP server [7-9](#)
- system distribution lists [6-3](#)
- TFTP server [7-8](#)

Administrator account [4-1](#)

administrators

- accounts created by importing from Cisco Unified Communications Manager [4-5](#)
- deleting [4-9](#)

alias, effect of changing [A-2](#)

All Voicemail Users distribution list [6-2](#)

alternate extensions

- advanced settings [A-13](#)
- custom settings [A-13](#)

application users

- deleting [4-9](#)

audio format

- changing for calls [7-12](#)

automated attendant [8-29](#)

AXL servers

- changing settings [7-4](#)

B

backup and restore application for migrations (COBRAS) [19-20](#)

Bulk Edit, accessing [4-8](#)

C

call handlers

- default [8-5](#)
- Goodbye [8-6](#)
- Opening Greeting [8-6](#)
- Operator [8-6](#)
- Route From Next Call Routing Rule Action, using with routing rules [8-21](#)

Call Handler Traffic report, description [17-9](#)

call loop detection [7-3](#)

call management

- managing schedules and holidays [2-1](#)
- overview [9-1](#)

call routing tables

- and the Route From Next Call Routing Rule action [8-21](#)

calls, changing the audio format (or codec) for [7-12](#)

certificate, viewing for port [7-5](#)

changing

- AXL server settings [7-4](#)
- call loop detection settings [7-3](#)
- Cisco Unified Communications Manager server settings [7-8](#)
- MWI settings [7-7](#)
- phone system trunk settings [7-11](#)
- port group advanced settings [7-10](#)
- port group settings [7-6, 7-7](#)
- SIP settings [7-7](#)
- TFTP server settings [7-8](#)

Cisco SIP Proxy Server

- adding [7-9](#)

Cisco Unified Communications Manager

- adding TFTP server [7-8](#)

- changing AXL server settings [7-4](#)
- changing server settings [7-8](#)
- changing TFTP server settings [7-8](#)
- deleting servers [7-8](#)
- deleting TFTP server [7-8](#)
- port certificate [7-5](#)
- root certificate for Connection [7-14](#)

Cisco Unified Real-Time Monitoring Tool (RTMT) [16-18](#)

Cisco Unity Connection Administration

- interface [1-4](#)

Cisco Utilities Database Link for Informix [19-21](#)

Cisco Voice Technology Group Subscription tool [19-21](#)

COBRAS backup and restore application [19-20](#)

codec

- changing for calls [7-12](#)

Connection 1.x, migrating from [19-20](#)

Connection User Data Dump [19-21](#)

conversation

- documenting for users [19-21](#)

- easy sign-in [17-5](#)

- sign-in [17-5](#)

creating

- restriction tables [8-20, 8-24](#)

- schedules [13-7](#)

CUDLI [19-21](#)

Custom Keypad Mapping tool

- accessing [19-6](#)

- conversations that can be customized [19-7](#)

- documenting keymap for users [19-17](#)

- guidelines [19-7](#)

- resetting [19-7](#)

- using [19-6](#)

- integration, phone system [7-2](#)

- members from system distribution lists [6-3](#)

- TFTP server [7-8](#)

- user accounts [4-9](#)

Dial Plan report, description [17-8](#)

Dial Search Scope report, description [17-8](#)

Distribution Lists report, description [17-8](#)

E

easy sign-in conversation [17-5](#)

email in external message store, user access [A-11](#)

F

forwarded (relay) messages [A-6](#)

G

G.711 A-Law codec

- selecting for calls [7-12](#)

G.711 Mu-Law codec

- selecting for calls [7-12](#)

G.729a codec

- selecting for calls [7-12](#)

Goodbye call handler [8-6](#)

Grammar Statistics tool, accessing [19-18](#)

I

Import Users tool, accessing [4-6](#)

integration

- adding phone system trunk [7-11](#)

- adding port [7-4](#)

- adding SIP certificate [7-15](#)

- adding SIP security profile [7-15](#)

- adding SIP server [7-9](#)

- adding TFTP server [7-8](#)

D

Database Proxy [19-19](#)

deleting

- Cisco Unified Communications Manager servers [7-8](#)

AXL server, changing settings [7-4](#)
 call loop detection, changing settings [7-3](#)
 changing Cisco Unified Communications Manager server settings [7-8](#)
 changing phone system trunk settings [7-11](#)
 changing port group advanced settings [7-10](#)
 changing SIP settings [7-7](#)
 changing TFTP server settings [7-8](#)
 deleting [7-2](#)
 deleting Cisco Unified Communications Manager servers [7-8](#)
 deleting TFTP server [7-8](#)
 IPv6 [7-16](#)
 MWI, disabling the use of the same port for turning on and off [7-3](#)
 MWIs, changing settings [7-7](#)
 port certificate [7-5](#)
 port description [7-4](#)
 port group, changing settings [7-6, 7-7](#)
 users associated with phone system [7-4](#)
 viewing root certificate for Connection [7-14](#)
 IPv6 [7-16](#)

L

LDAP

disabling authentication [12-11](#)

M

Mailbox Store report, description [17-7](#)
 message aging [9-8](#)
 message aging alerts
 about [9-8, 9-9](#)
 message attachment
 adding [7-2](#)
 message recording expiration [9-10](#)
 messages
 aging [9-8](#)

aging alerts [9-8, 9-9](#)
 expiration [9-10](#)
 forwarded (relay) [A-6](#)
 migrating from Connection 1.x using COBRAS (recommended) [19-20](#)
 migrating from Unity using COBRAS (recommended) [19-20](#)
 relay [A-6](#)

Message Traffic report, description [17-7](#)

message waiting indicators (MWIs), overview [A-5](#)

migrating data and messages from Unity or Connection 1.x [19-20](#)

modifying

 user accounts (in Connection Administration) [4-7](#)

MWIs

 changing settings [7-7](#)

 disabling the use of the same port for turning on and off [7-3](#)

O

Opening Greeting

 call handler [8-6](#)

Operator account [4-2](#)

Operator call handler [8-6](#)

Outcall Billing Detail report, description [17-9](#)

Outcall Billing Summary report, description [17-9](#)

P

passwords or PINs

 changing [A-5](#)

 settings [A-4](#)

Phone Interface Failed Sign-In report, description [17-6](#)

phone system

 changing AXL server settings [7-4](#)

 deleting integration [7-2](#)

 disabling the use of the same port for turning on and off an MWI [7-3](#)

 list of users associated with [7-4](#)

phone system trunk
 changing settings [7-11](#)

Port Activity report, description [17-7](#)

port group
 changing advanced settings [7-10](#)
 changing settings [7-6, 7-7](#)

port memory, disabling [7-3](#)

ports
 adding [7-4](#)
 adding SIP certificate [7-15](#)
 adding SIP security profile [7-15](#)
 description [7-4](#)
 port certificate for Connection [7-5](#)
 viewing root certificate for Connection [7-14](#)

proxy address, created when a user alias is changed [A-2](#)

R

relay messages [A-6](#)

Remote Administration Tools [19-19](#)

reports
 generating and viewing [17-6](#)

restriction tables
 creating [8-20, 8-24](#)
 default [8-24](#)
 Default Fax [8-24](#)
 Default Outdial [8-24](#)
 Default System Transfer [8-24](#)
 Default Transfer [8-24](#)
 overview [8-22](#)

roles
 default roles [3-8](#)
 overview [3-7](#)

root certificate
 viewing [7-14](#)

Route From Next Call Routing Rule action [8-21](#)

S

sag-03-01 [19-1](#)

sag-03-02 [19-20](#)

sag-03-03 [19-20](#)

sag-03-04 [19-21](#)

schedules and holidays
 creating schedules [13-7](#)

security
 adding SIP certificate [7-15](#)
 adding SIP security profile [7-15](#)
 port certificate [7-5](#)
 viewing root certificate for Connection [7-14](#)

Session Initiation Protocol (SIP), changing settings [7-7](#)

Show Dependency Results [19-18](#)

sign-in conversation [17-5](#)

SIP
 adding SIP certificate [7-15](#)
 adding SIP security profile [7-15](#)

SIP server
 adding [7-9](#)

SMTP proxy addresses
 created when a user alias is changed [A-2](#)

SpeechView Activity Report by User, description [17-9](#)

SpeechView Activity Summary Report, description [17-9](#)

Subscriber Information Dump. See Connection User Data Dump.

Synch Users Tool, accessing [4-6](#)

System Configuration report, description [17-9](#)

system distribution lists
 adding and removing members [6-3](#)
 creating [6-3](#)

T

Task Management tool, accessing [19-1](#)

TFTP server
 adding [7-8](#)
 changing settings [7-8](#)

- deleting [7-8](#)
- tools, Custom Keypad Mapping [19-6](#)
- Transfer Call Billing report, description [17-9](#)
- trunk, phone system
 - adding [7-11](#)
 - changing settings [7-11](#)

U

- Undeliverable Messages Mailbox account [4-2](#)
- Unity, migrating from [19-20](#)
- Unity Connection Messaging System account [4-2](#)
- Unused Voice Mail Accounts report, description [17-9](#)
- user access to email in an external message store [A-11](#)
- user accounts
 - administrator roles [3-7](#)
 - creating by importing from Cisco Unified Communications Manager [4-5](#)
 - default accounts [4-1](#)
 - overview [4-1](#)
- User Lockout report, description [17-8](#)
- User Message Activity report, description [17-8](#)
- User Phone Sign-In and MWI report, description [17-8](#)
- users
 - deleting [4-9](#)
 - finding [4-2](#)
 - list of users associated with phone system [7-4](#)
 - migrating from Connection 1.x using COBRAS (recommended) [19-20](#)
 - migrating from Unity using COBRAS (recommended) [19-20](#)
- Users report, description [17-7](#)
- users without voice mailboxes [4-1](#)
- users with voice mailboxes [4-1](#)
- user templates
 - default templates [3-6](#)
- utilities and tools
 - Cisco Voice Technology Group Subscription Tool [19-21](#)
 - Grammar Statistics [19-18](#)

- Import Users [4-6](#)
- RTMT [16-18](#)
- Synch Users [4-6](#)
- Task Management [19-1](#)

V

- voice mailboxes
 - deleting end users [4-9](#)
- voice messaging port
 - adding [7-4](#)
- voice recognition
 - Grammar Statistics tool [19-18](#)

W

- Wallet Card Wizard [19-21](#)

