



Configuring the System Login Banner

Use this procedure to configure your system login banner.

-
- Step 1** Choose **System > Login Banner**. The Login Banner window appears.
 - Step 2** Enter the text for the login banner.
 - Step 3** Click **Apply** to save your settings.
-

