

# **Hardware Features**

This chapter describes the hardware features of Cisco Catalyst 9164 Series Wi-Fi 6E Access Point and contains the following sections:

- Access Point Views, Ports, and Connectors, on page 1
- CW9164I (Internal Antenna) Radiation Patterns, on page 3

## **Access Point Views, Ports, and Connectors**


Cisco Catalyst 9164 Series Wi-Fi 6E Access Point has multiple options that you can use to power the AP. For information about connectors and ports for the AP models, see Connectors and Ports on the AP, on page 1.

### **Connectors and Ports on the AP**

The following figures show the available ports on the AP:

### **CW9164I Face View**

#### Figure 1: CW9164I Face View

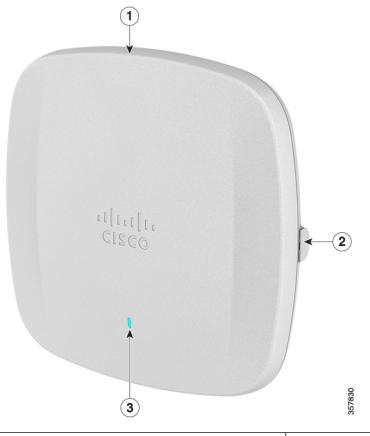

1	Location of the ports and connectors on the head of the AP.
2	USB 2.0 port
3	Status LED
	For information on the LEDs status, see LED Status Indications.

### CW9164I Top View


#### Figure 2: CW9164I Top View with Connectors and Ports



1	Kensington lock slot	5	RJ-45 console port
2	Security hasp for padlocking AP to mounting bracket	6	2.5GbE port
3	Environment Sensor vents	7	DC 54V power input port
4	Mode button For information on how to use the Mode button, see the Using the Mode Button section	8	USB 2.0 port

# **CW9164I (Internal Antenna) Radiation Patterns**

The following illustrations show the CW9164I model with internal antenna radiation patterns:

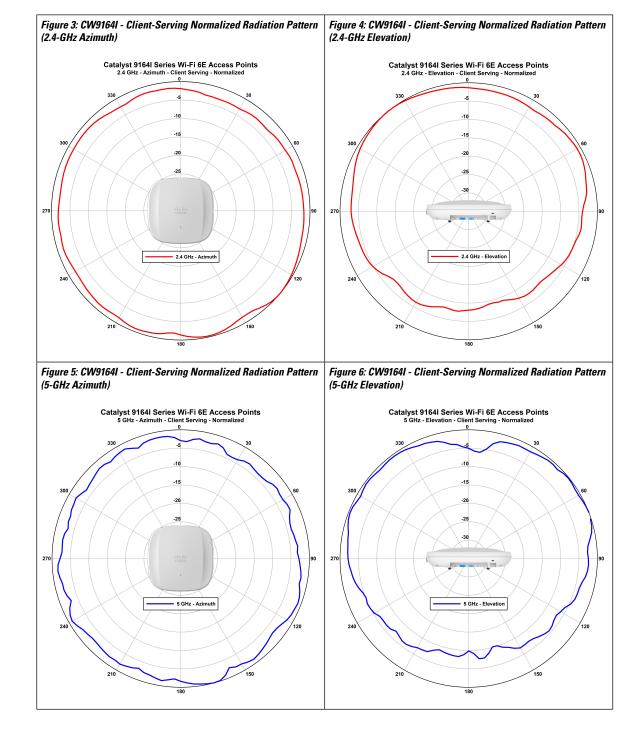

#### Table 1: Cisco Catalyst 9164I AP Radiataion Patterns

