



Unpacking Your Access Point

- [Package Contents, on page 1](#)
- [Unpacking the Access Point, on page 1](#)
- [Cisco Orderable Accessories, on page 1](#)

Package Contents

Each AP package contains the following items:

- One CW9166D1 AP
- Default mounting brackets: Mounting brackets and clips (if selected when ordered)
- Cisco product documentation and pointer card

Unpacking the Access Point

Procedure

- Step 1** Unpack and remove the access point and the selected mounting accessory kit from the shipping box.
 - Step 2** Return the packing material to the shipping container and save it for future use.
 - Step 3** Verify that you have received all the items you ordered. If any item is missing or is damaged, contact your Cisco representative or reseller for instructions.
-

Cisco Orderable Accessories

You can order the following accessories separately, from Cisco:

- AP-mounting brackets to mount the AP

Mounting Brackets	Description
CW-MNT-ART2-00	Articulating wall/pole mount kit. This kit should be used along with AIR-AP-BRACKET-2
AIR-AP-BRACKET-1=	For low-profile non-pivoting installations
AIR-AP-T-RAIL-F=	Flush ceiling grid clip
AIR-AP-T-RAIL-R=	Recessed ceiling grid clip
AIR-CHNL-ADAPTER=	T-RAIL channel adapter

- Power injectors when Power over Ethernet (PoE) is not available

Power Supply	Description
AIR-PWRINJ7=	Mid-span power injector AIR-PWRINJ7= when (PoE) is not available Power specifications: 50W, 56VDC For more information, see the power injector data sheet .
AIR-PWRINJ6=	A 802.3at power injector when PoE is not available Power Specifications: 30W, 55VDC For more information, see the power injector data sheet .
MA-INJ-6-x	Meraki 802.3bt PoE injector Power Specifications: 60W, 55VDC For more information, see the power injector data sheet .