



## Hardware Features

---

This chapter describes the hardware features of and contains the following sections:

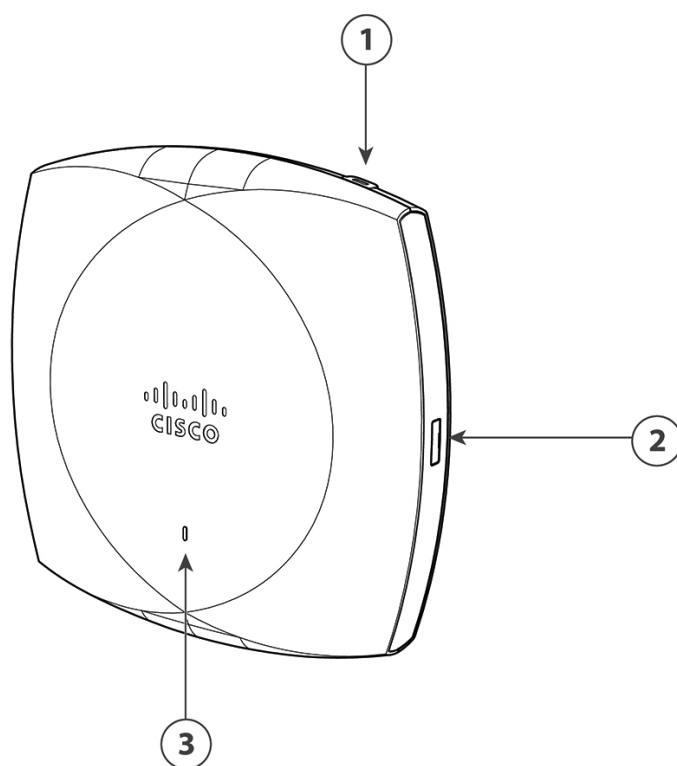
- [Access Point Views, Ports, and Connectors, on page 1](#)

### Access Point Views, Ports, and Connectors

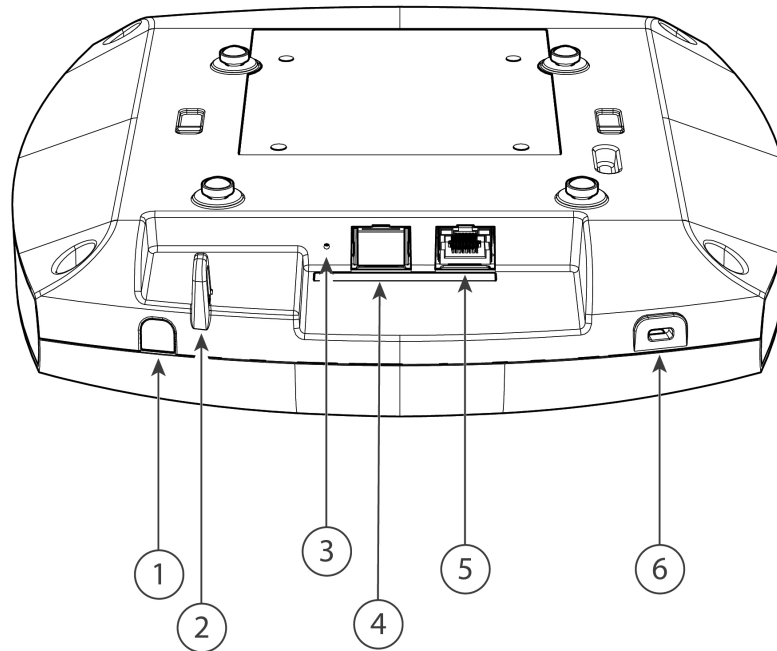
Cisco Wireless 9176D1 Wi-Fi 7 Access Point has multiple options that you can use to power the AP. For information about connectors and ports for the AP models, see [Connectors and Ports on the AP, on page 1](#).

### Connectors and Ports on the AP

The following figures show the available ports on the AP:

**CW9176D1 Face View***Figure 1: CW9176D1 Face View*

1	Kensington lock slot
2	USB 2.0 port
3	Status LED For information on the LEDs status, see <a href="#">LED Status Indications</a> .

**CW9176D1 Top View****Figure 2: CW9176D1 Top View with Connectors and Ports**

1	GPS external port	5	Ethernet port 0
2	Security hasp for padlocking AP to mounting bracket	6	Kensington lock slot
3	Reset button For information about how to use the Reset button, see the <a href="#">Using the Mode Button</a> section		
4	RJ-45 console port Default baud rate is 115200.		

