# Sustitución de PCRF del servidor controlador UCS C240 M4

## Contenido

Introducción Prerequisites Copia de seguridad Comprobación de estado preliminar Deshabilitar el envergadura en el clúster del controlador Instalación del nuevo nodo del controlador Sustitución del nodo del controlador en la nube Preparación para eliminar el nodo de controlador fallido Preparación para agregar un nuevo nodo de controlador Intervención manual Verificar los servicios de nube excesiva en el controlador Finalización de los Routers de Agente L3 Finalización de servicios de cálculo Reiniciar el vallado en los nodos del controlador

## Introducción

Este documento describe los pasos necesarios para sustituir un servidor de controlador defectuoso en una configuración Ultra-M que aloja las funciones de red virtual (VNF) de CPS.

## Prerequisites

### Copia de seguridad

En caso de recuperación, Cisco recomienda realizar una copia de seguridad de la base de datos OSPD (DB) con estos pasos:

[root@director ~]# mysqldump --opt --all-databases > /root/undercloud-all-databases.sql
[root@director ~]# tar --xattrs -czf undercloud-backup-`date +%F`.tar.gz /root/undercloud-alldatabases.sql
/etc/my.cnf.d/server.cnf /var/lib/glance/images /srv/node /home/stack
tar: Removing leading `/' from member names

### Comprobación de estado preliminar

Es importante comprobar el estado actual del entorno y los servicios de OpenStack y asegurarse de que esté sano antes de continuar con el procedimiento de reemplazo. Puede ayudar a evitar complicaciones en el momento del proceso de reemplazo del controlador.

Paso 1. Compruebe el estado de OpenStack y la lista de nodos:

[stack@director ~]\$ source stackrc [stack@director ~]\$ openstack stack list --nested [stack@director ~]\$ ironic node-list [stack@director ~]\$ nova list Paso 2. Verifique el estado del marcapasos en los controladores.

Inicie sesión en uno de los controladores activos y verifique el estado del marcapasos. Todos los servicios deben estar ejecutándose en los controladores disponibles y se deben detener en el controlador fallido.

```
[stack@pod1-controller-0 ~]# pcs status
<snip>
Online: [ pod1-controller-0 pod1-controller-1 ]
OFFLINE: [ pod1-controller-2 ]
Full list of resources:
ip-11.120.0.109 (ocf::heartbeat:IPaddr2): Started pod1-controller-0
ip-172.25.22.109 (ocf::heartbeat:IPaddr2): Started pod1-controller-1
ip-192.200.0.107 (ocf::heartbeat:IPaddr2): Started pod1-controller-0
Clone Set: haproxy-clone [haproxy]
Started: [ pod1-controller-0 pod1-controller-1 ]
Stopped: [ pod1-controller-2 ]
Master/Slave Set: galera-master [galera]
Masters: [ pod1-controller-0 pod1-controller-1 ]
Stopped: [ pod1-controller-2 ]
ip-11.120.0.110 (ocf::heartbeat:IPaddr2): Started pod1-controller-0
ip-11.119.0.110 (ocf::heartbeat:IPaddr2): Started pod1-controller-1
Clone Set: rabbitmq-clone [rabbitmq]
Started: [ pod1-controller-0 pod1-controller-1 ]
Stopped: [ pod1-controller-2 ]
Master/Slave Set: redis-master [redis]
Masters: [ pod1-controller-0 ]
Slaves: [ pod1-controller-1 ]
Stopped: [ pod1-controller-2 ]
ip-11.118.0.104 (ocf::heartbeat:IPaddr2): Started pod1-controller-1
openstack-cinder-volume (systemd:openstack-cinder-volume): Started pod1-controller-0
my-ipmilan-for-controller-6 (stonith:fence_ipmilan): Started pod1-controller-1
my-ipmilan-for-controller-4 (stonith:fence_ipmilan): Started pod1-controller-0
my-ipmilan-for-controller-7 (stonith:fence_ipmilan): Started pod1-controller-0
Failed Actions:
Daemon Status:
corosync: active/enabled
pacemaker: active/enabled
pcsd: active/enabled
```

En este ejemplo, Controller-2 está desconectado. Por lo tanto, será sustituida. El controlador 0 y el controlador 1 están funcionando y están ejecutando los servicios de clúster.

#### Paso 3. Verifique el estado de MariaDB en los controladores activos.

```
[stack@director] nova list | grep control
| 4361358a-922f-49b5-89d4-247a50722f6d | pod1-controller-0 | ACTIVE | - | Running |
ctlplane=192.200.0.102
| d0f57f27-93a8-414f-b4d8-957de0d785fc | pod1-controller-1 | ACTIVE | - | Running |
ctlplane=192.200.0.110 |
[stack@director ~]$ for i in 192.200.0.102 192.200.0.110 ; do echo "*** $i ***" ; ssh heat-
admin@$i "sudo mysql --exec=\"SHOW STATUS LIKE 'wsrep_local_state_comment'\" ; sudo mysql --
exec=\"SHOW STATUS LIKE 'wsrep_cluster_size'\""; done
*** 192.200.0.152 ***
Variable_name
                 Value
wsrep_local_state_comment Synced
Variable_name Value
wsrep_cluster_size
                          2
*** 192.200.0.154 ***
Variable_name
                Value
wsrep_local_state_comment Synced
Variable_name Value
wsrep_cluster_size
                          2
```

Verifique que estas líneas estén presentes para cada controlador activo:

wsrep\_local\_state\_comentario: Sincronizado

wsrep\_cluster\_size: 2

Paso 4. Verifique el estado de Rabbitmo en los controladores activos. El controlador fallido no debe aparecer en la lista de los nodos que se ejecutan.

```
[heat-admin@pod1-controller-0 ~] sudo rabbitmqctl cluster_status
Cluster status of node 'rabbit@pod1-controller-0' ...
[{nodes,[{disc,['rabbit@pod1-controller-0','rabbit@pod1-controller-1',
               'rabbit@pod1-controller-2']}]},
{running_nodes,['rabbit@pod1-controller-1',
                 'rabbit@pod1-controller-0']},
 {cluster_name, << "rabbit@pod1-controller-2.localdomain">>},
 {partitions,[]},
 {alarms, [{'rabbit@pod1-controller-1', []},
         {'rabbit@pod1-controller-0',[]}]
[heat-admin@pod1-controller-1 ~] sudo rabbitmqctl cluster_status
Cluster status of node 'rabbit@pod1-controller-1' ...
[{nodes,[{disc,['rabbit@pod1-controller-0', 'rabbit@pod1-controller-1',
               'rabbit@pod1-controller-2']}]},
 {running_nodes,['rabbit@pod1-controller-0',
                 'rabbit@pod1-controller-1']},
 {cluster_name, << "rabbit@pod1-controller-2.localdomain">>},
 {partitions,[]},
 {alarms, [{'rabbit@pod1-controller-0', []},
         {'rabbit@pod1-controller-1',[]}]
```

Paso 5. Compruebe si todos los servicios de la nube inferior están en estado cargado, activo y en ejecución desde el nodo OSP-D.

UNIT

LOAD ACTIVE SUB DE

DESCRIPTION

neutron-dhcp-agent.service loaded active running OpenStack Neutron DHCP Agent loaded active running OpenStack Neutron Open vSwitch neutron-openvswitch-agent.service Agent loaded active exited OpenStack Neutron Open vSwitch neutron-ovs-cleanup.service Cleanup Utility neutron-server.service loaded active running OpenStack Neutron Server openstack-aodh-evaluator.service loaded active running OpenStack Alarm evaluator service openstack-aodh-listener.service loaded active running OpenStack Alarm listener service openstack-aodh-notifier.service loaded active running OpenStack Alarm notifier service openstack-ceilometer-central.service loaded active running OpenStack ceilometer central agent openstack-ceilometer-collector.service loaded active running OpenStack ceilometer collection service openstack-ceilometer-notification.service loaded active running OpenStack ceilometer notification agent openstack-glance-api.service loaded active running OpenStack Image Service (codenamed Glance) API server openstack-glance-registry.service loaded active running OpenStack Image Service (codenamed Glance) Registry server openstack-heat-api-cfn.service loaded active running Openstack Heat CFN-compatible API Service loaded active running OpenStack Heat API Service openstack-heat-api.service openstack-heat-engine.service loaded active running Openstack Heat Engine Service openstack-ironic-api.service loaded active running OpenStack Ironic API service openstack-ironic-conductor.service loaded active running OpenStack Ironic Conductor service openstack-ironic-inspector-dnsmasq.service loaded active running PXE boot dnsmasq service for Ironic Inspector openstack-ironic-inspector.service loaded active running Hardware introspection service for OpenStack Ironic openstack-mistral-api.service loaded active running Mistral API Server openstack-mistral-engine.service loaded active running Mistral Engine Server openstack-mistral-executor.service loaded active running Mistral Executor Server openstack-nova-api.service loaded active running OpenStack Nova API Server openstack-nova-cert.service loaded active running OpenStack Nova Cert Server openstack-nova-compute.service loaded active running OpenStack Nova Compute Server openstack-nova-conductor.service loaded active running OpenStack Nova Conductor Server openstack-nova-scheduler.service loaded active running OpenStack Nova Scheduler Server openstack-swift-account-reaper.service loaded active running OpenStack Object Storage (swift) - Account Reaper openstack-swift-account.service loaded active running OpenStack Object Storage (swift) - Account Server openstack-swift-container-updater.service loaded active running OpenStack Object Storage (swift) - Container Updater openstack-swift-container.service loaded active running OpenStack Object Storage (swift) - Container Server openstack-swift-object-updater.service loaded active running OpenStack Object Storage (swift) - Object Updater openstack-swift-object.service loaded active running OpenStack Object Storage (swift) - Object Server openstack-swift-proxy.service loaded active running OpenStack Object Storage (swift) - Proxy Server loaded active running OpenStack Message Queuing openstack-zagar.service Service (code-named Zagar) Server openstack-zagar@1.service loaded active running OpenStack Message Queuing Service (code-named Zaqar) Server Instance 1 openvswitch.service loaded active exited Open vSwitch

ACTIVE = The high-level unit activation state, i.e. generalization of SUB. SUB = The low-level unit activation state, values depend on unit type.

37 loaded units listed. Pass --all to see loaded but inactive units, too. To show all installed unit files use 'systemctl list-unit-files'.

### Deshabilitar el envergadura en el clúster del controlador

[root@pod1-controller-0 ~]# sudo pcs property set stonith-enabled=false
[root@pod1-controller-0 ~]# pcs property show

```
Cluster Properties:

cluster-infrastructure: corosync

cluster-name: tripleo_cluster

dc-version: 1.1.15-11.el7_3.4-el74ec8

have-watchdog: false

last-lrm-refresh: 1510809585

maintenance-mode: false

redis_REPL_INFO: pod1-controller-0

stonith-enabled: false
```

```
Node Attributes:

pod1-controller-0: rmq-node-attr-last-known-rabbitmq=rabbit@pod1-controller-0

pod1-controller-1: rmq-node-attr-last-known-rabbitmq=rabbit@pod1-controller-1

pod1-controller-2: rmq-node-attr-last-known-rabbitmg=rabbit@pod1-controller-2
```

## Instalación del nuevo nodo del controlador

Paso 1. Los pasos para instalar un nuevo servidor UCS C240 M4 y los pasos iniciales de configuración se pueden consultar en la <u>Guía de Instalación y Servicio del Servidor Cisco UCS</u> C240 M4

Paso 2. Inicie sesión en el servidor con la IP de CIMC.

Paso 3. Realice la actualización del BIOS si el firmware no es conforme a la versión recomendada utilizada anteriormente. Los pasos para la actualización del BIOS se indican a continuación:

Guía de actualización del BIOS del servidor de montaje en bastidor Cisco UCS C-Series

Paso 4. Verifique el estado de las unidades físicas. Debe ser Unconfigured Good. Vaya a Almacenamiento > Cisco 12G SAS Modular Raid Controller (SLOT-HBA) > Información de unidad física.

	Cisco Inte	egrated Management C	Controller		🐥 🔽 0 ad	lmin@10.65.33.67	- C240-FCH2114V1NW 🛛 🕻
Chassis	. / Cisco 12G SAS OT-HBA) / <b>Physic</b>	S Modular Raid Controll	er	Refresh   I	Host Power   Launch K	VM Ping Reb	oot   Locator LED   🕐 (
Compute Cont	troller Info Physical	Drive Info Virtual Drive In	fo Battery Backup Unit	Storage Log			
Networking	Physical Driv Physi	cal Drives					Selected 0 / Total 2
Storage 🔹	PD-1 Ma	ke Global Hot Spare Make	Dedicated Hot Spare Remo	ve From Hot Spare Pools	ioval	>>	
Cisco 12G SAS Modular Raid		Controller	Physical Drive Number	Status	Health	Boot Drive	Drive Firmware
Cisco FlexFlash		SLOT-HBA	1	Unconfigured Good	Good	false	N003
Cisco FlexFl	ash	SLOT-HBA	2	Unconfigured Good	Good	false	N003
Admin 🕨							

Paso 5. Para crear una unidad virtual desde las unidades físicas con RAID Nivel 1: desplácese hasta Almacenamiento > Controlador de raid modular SAS 12G de Cisco (SLOT-HBA) > Información del controlador > Crear unidad virtual desde unidades físicas no usadas, como se muestra en la imagen.

	E altalta (	Cisco Integ	grated Mana	gement C	ontrolle	er			
	Create Virtual D	rive from Ur	nused Physical	Drives					0>
Chassis +		RAID Level:	1			Enable Full Disk Encr	yption:		
Compute									
Networking +	Create Drive	Groups							
	Physical Driv	es		Selected 2 /	Total 2 🔾	× - 4	Drive Groups		¢٠
Storage 🔹	ID	Size(MB)	Model	Interface	Туре		Name		
Cisco 12G SAS Modular Raid	✓ 1	1906394 MB	SEAGA	HDD	SAS		No data available		
Cisco FlexFlash	<b>√</b> 2	1906394 MB	SEAGA	HDD	SAS				
Admin +									
	Virtual Drive	Properties							
		Name: RAI	D1			Disk Cache Policy:	Unchanged	*	
	Access	Policy: Rea	d Write		•	Write Policy:	Write Through	*	
	Read	Policy: No	Read Ahead		•	Strip Size (MB):	64k	*	
	Cache	Policy: Dire	ct IO		*	Size			MB

		cisco Cisco	Integrated	Manag	ement C	ontrolle				
	Crea	ate Virtual Drive fr	om Unused R	Physical [	Drives		_			0
Chassis		RAID Le	wel: 1			¥	Enable Full Disk Encr	yption:		
Compute										
Networking	, Ci	reate Drive Group	s							
	Ph	nysical Drives			Selected 0 / 1	lotal 0 🦏	*	Drive Groups		¢٠
Storage	Ψ.	ID Size(M	8) N	lodel	Interface	Туре		Name		
Cisco 12G SAS M	dular Raid No	o data available						DG [1.2]		
Cisco FlexFlash							>>			
Admin	*									
	Vi	irtual Drive Proper	rties							
		Name	BOOTOS				Disk Cache Policy:	Unchanged	•	
		Access Policy:	Read Write			*	Write Policy:	Write Through	•	
		Read Policy:	No Read Ahr	bad		•	Strip Size (MB):	64k	•	
		Cache Policy:	Direct IO			*	Size	1906394		MB

• Seleccione el VD y configure Set as Boot Drive:

	국 네네네 C	isco Integrated Managemer	nt Controller		+ 🖸 0	admin@10.65.33.67 - (	C240-FCH2114V1NW	, ¢
Chassis +	↑ / / Cisco 1 (SLOT-HBA)	I2G SAS Modular Raid Coni / Virtual Drive Info ★	troller	Refr	esh   Host Power   Lau	nch KVM   Ping   Reboo	t   Locator LED	0
Compute	Controller Info	Physical Drive Info Virtual Driv	ve Info Battery Backup	Unit Storage Log				
Networking	▼ Virtual Drives	Virtual Drives		•		s	elected 1 / Total 1	\$ v
Storage 🔹	VD-0	Initialize Cancel Initialization	tion Set as Boot Drive	Delete Virtual Drive	Edit Virtual Drive	Hide Drive	>>	
Cisco 12G SAS Modular Ra Stora	ge	Virtual Drive Number	Name	Status	Health	Size	RAID Level	Во
Cisco FlexFlash		-) o	BOOTOS	Optimal	Good	1906394 MB	RAID 1	fals
Admin 🕨								

Paso 6. Para habilitar IPMI sobre LAN, navegue hasta Admin > Communication Services > Communication Services.

		🐥 <u>V 3</u> admin@10.65.33.67 - C240-FCH2141V113 🏠
Chassis 🕨	↑ / / Communication Services / Communications Services ★	
Compute		Refresh   Host Power   Launch KVM   Ping   Reboot   Locator LED   🚱 🌗
Compato	Communications Services SNMP Mail Alert	
Networking •		
Storage	HTTP Properties	<ul> <li>IPMI over LAN Properties</li> </ul>
0.0.030	HTTP/S Enabled: V Session Timeout(seconds): 1800	Enabled:
Admin 🔹	Redirect HTTP to HTTPS Enabled:  Max Sessions: 4	Privilege Level Limit: admin 🔻
Liser Management	HTTP Port: 80 Active Sessions: 1	Encryption Key: 000000000000000000000000000000000000
ober management	HTTPS Port: 443	Randomize
Networking		
Communication Services	XML API Properties	
	XML API Enabled: 🗹	

Paso 7. Para inhabilitar el hiperprocesamiento, navegue hasta **Compute > BIOS > Configure BIOS > Advanced > Processor Configuration**, como se muestra en la imagen.

	Ŧ	∃+ ";	luulu Cisc	o Integrate:	ed Manageme	ent Cor	ntroller			🐥 <u>V</u> 3 adr	min@10.65.33.67 - C24	0-FCH2141V113
Chassis	•	A / Con	npute / <b>BI</b>	0S ★								
Compute		DIOC	Demote M		Tranklashastia		Delision	DID Catalas		Refresh   Host Power   Launch KVI	M Ping Reboot I	.ocator LED   🕐
Networking	•	Enter BIC	OS Setup   Cle	anagement	Restore Manufact	turing Cus	tom Settings	PID Catalog				
Storage	•	Config	ure BIOS	Configure Be	oot Order Co	onfigure B	BIOS Profile					
Admin	•	Main	Advance	ed Server	Management							
Note: Default values are shown in bold.												
				Reboot	Host Immediately:							
			• Proces	sor Configur	ration					_		
				Intel(R) Hy	per-Threading Tec	hnology	Disabled		•	Num	ber of Enabled Cores	All
					Execute	Disable	Enabled		•		Intel(R) VT	Enabled
					Intel	(R) VT-d	Enabled		•	Intel(R)	Interrupt Remapping	Enabled
				l	ntel(R) Pass Throu	igh DMA	Disabled		•	Intel(R) VT-	d Coherency Support	Disabled
				Intel(R) Pass T	Through DMA ATS	Support	Enabled		•		CPU Performance	Enterprise

**Nota:** La imagen se muestra aquí y los pasos de configuración mencionados en esta sección se refieren a la versión de firmware 3.0(3e) y puede haber ligeras variaciones si trabaja en otras versiones.

## Sustitución del nodo del controlador en la nube

Esta sección trata los pasos necesarios para reemplazar el controlador defectuoso por el nuevo en la nube. Para esto, se reutilizaría el script **Deploy.sh** que se utilizó para activar la pila. En el momento de la implementación, en la fase ControllerNodesPostDeployment, la actualización fallaría debido a algunas limitaciones en los módulos Puppet. Se requiere una intervención manual antes de reiniciar el script de implementación.

### Preparación para eliminar el nodo de controlador fallido

Paso 1. Identifique el índice del controlador fallido. El índice es el sufijo numérico del nombre del controlador en el resultado de la lista de servidores OpenStack. En este ejemplo, el índice es 2:

```
[stack@director ~]$ nova list | grep controller
| 5813a47e-af27-4fb9-8560-75decd3347b4 | pod1-controller-0 | ACTIVE | - | Running
| ctlplane=192.200.0.152 |
| 457f023f-d077-45c9-bbea-dd32017d9708 | pod1-controller-1 | ACTIVE | - | Running
| ctlplane=192.200.0.154 |
| d13bb207-473a-4e42-a1e7-05316935ed65 | pod1-controller-2 | ACTIVE | - | Running
| ctlplane=192.200.0.151 |
```

Paso 2. Cree un archivo Yaml **~templates/remove-controller.yaml** que defina el nodo que desea eliminar. Utilice el índice encontrado en el paso anterior para la entrada de la lista de recursos.

[stack@director ~]\$ cat templates/remove-controller.yaml

#### parameters:

```
ControllerRemovalPolicies:
  [{'resource_list': [`2']}]
```

#### parameter\_defaults: CorosyncSettleTries: 5

Paso 3. Haga una copia del script de implementación que se utiliza para instalar la nube excesiva e insertar una línea para incluir el archivo **remove-controller.yaml** creado anteriormente.

```
[stack@director ~]$ cp deploy.sh deploy-removeController.sh
[stack@director ~]$ cat deploy-removeController.sh
time openstack overcloud deploy --templates \
-r ~/custom-templates/custom-roles.yaml \
-e /home/stack/templates/remove-controller.yaml \
-e /usr/share/openstack-tripleo-heat-templates/environments/puppet-pacemaker.yaml \
-e /usr/share/openstack-tripleo-heat-templates/environments/network-isolation.yaml \
-e /usr/share/openstack-tripleo-heat-templates/environments/storage-environment.yaml \
-e /usr/share/openstack-tripleo-heat-templates/environments/neutron-sriov.yaml \
-e ~/custom-templates/network.yaml \
-e ~/custom-templates/ceph.yaml \
-e ~/custom-templates/compute.yaml \
-e ~/custom-templates/layout-removeController.yaml \
-e ~/custom-templates/rabbitmq.yaml \
--stack pod1 \
--debug \
--log-file overcloudDeploy_$(date +%m_%d_%y__%H_%M_%S).log \
--neutron-flat-networks phys_pcie1_0,phys_pcie1_1,phys_pcie4_0,phys_pcie4_1 \
--neutron-network-vlan-ranges datacentre:101:200 \
--neutron-disable-tunneling \
```

--verbose --timeout 180

Paso 4. Identifique el ID del controlador que se va a reemplazar, con el uso de los comandos mencionados aquí y muévalo al modo de mantenimiento.

```
[stack@director ~]$ nova list | grep controller
5813a47e-af27-4fb9-8560-75decd3347b4 | pod1-controller-0 | ACTIVE | -
                                                                              Running
ctlplane=192.200.0.152
457f023f-d077-45c9-bbea-dd32017d9708 | pod1-controller-1 | ACTIVE | -
                                                                               Running
ctlplane=192.200.0.154
| d13bb207-473a-4e42-a1e7-05316935ed65 | pod1-controller-2 | ACTIVE | -
                                                                              Running
| ctlplane=192.200.0.151 |
[stack@director ~]$ openstack baremetal node list | grep d13bb207-473a-4e42-a1e7-05316935ed65
e7c32170-c7d1-4023-b356-e98564a9b85b | None | d13bb207-473a-4e42-a1e7-05316935ed65 | power
off | active
                         False
                                      [stack@b10-ospd ~]$ openstack baremetal node maintenance set e7c32170-c7d1-4023-b356-
e98564a9b85b
[stack@director~]$ openstack baremetal node list | grep True
| e7c32170-c7d1-4023-b356-e98564a9b85b | None | d13bb207-473a-4e42-a1e7-05316935ed65 | power
off | active
                          True
Paso 5. Para asegurarse de que la base de datos se ejecute en el momento del procedimiento de
reemplazo, quite Galera del control de marcapasos y ejecute este comando en uno de los
controladores activos.
[root@pod1-controller-0 ~] # sudo pcs resource unmanage galera
[root@pod1-controller-0 ~]# sudo pcs status
Cluster name: tripleo_cluster
Stack: corosync
Current DC: pod1-controller-0 (version 1.1.15-11.el7_3.4-e174ec8) - partition with quorum
Last updated: Thu Nov 16 16:51:18 2017
                                                     Last change: Thu Nov 16 16:51:12 2017
by root via crm_resource on pod1-controller-0
3 nodes and 22 resources configured
Online: [ pod1-controller-0 pod1-controller-1 ]
OFFLINE: [ pod1-controller-2 ]
Full list of resources:
ip-11.120.0.109
                        (ocf::heartbeat:IPaddr2):
                                                       Started pod1-controller-0
ip-172.25.22.109
                      (ocf::heartbeat:IPaddr2):
                                                       Started pod1-controller-1
ip-192.200.0.107
                      (ocf::heartbeat:IPaddr2):
                                                       Started pod1-controller-0
Clone Set: haproxy-clone [haproxy]
   Started: [ pod1-controller-0 pod1-controller-1 ]
   Stopped: [ pod1-controller-2 ]
Master/Slave Set: galera-master [galera] (unmanaged)
                 (ocf::heartbeat:galera):
                                                   Master pod1-controller-0 (unmanaged)
   galera
   galera
                  (ocf::heartbeat:galera):
                                                  Master pod1-controller-1 (unmanaged)
```

```
Stopped: [ pod1-controller-2 ]
ip-11.120.0.110(ocf::heartbeat:IPaddr2):Started pod1-controller-0ip-11.119.0.110(ocf::heartbeat:IPaddr2):Started pod1-controller-1
```

<snip>

### Preparación para agregar un nuevo nodo de controlador

Paso 1. Cree un archivo controllerRMA.json con los nuevos detalles del controlador. Asegúrese de que el número de índice del nuevo controlador no se haya utilizado antes. Normalmente, aumente al siguiente número de controlador más alto.

Ejemplo: El más alto anterior era el Controlador-2, así que cree el Controlador-3.

Nota: Tenga en cuenta el formato json.

```
[stack@director ~]$ cat controllerRMA.json
{
   "nodes": [
       {
           "mac": [
               <MAC_ADDRESS>
           ],
           "capabilities": "node:controller-3,boot_option:local",
           "cpu": "24",
           "memory": "256000",
           "disk": "3000",
           "arch": "x86_64",
           "pm_type": "pxe_ipmitool",
           "pm_user": "admin",
           "pm_password": "<PASSWORD>",
           "pm_addr": "<CIMC_IP>"
       }
   ]
}
```

Paso 2. Importe el nuevo nodo con el uso del archivo json creado en el paso anterior.

```
[stack@director ~]$ openstack baremetal import --json controllerRMA.json
Started Mistral Workflow. Execution ID: 67989c8b-1225-48fe-ba52-3a45f366e7a0
Successfully registered node UUID 048ccb59-89df-4f40-82f5-3d90d37ac7dd
Started Mistral Workflow. Execution ID: c6711b5f-fa97-4c86-8de5-b6bc7013b398
Successfully set all nodes to available.
[stack@director ~]$ openstack baremetal node list | grep available
| 048ccb59-89df-4f40-82f5-3d90d37ac7dd | None | None
                                                                                     power
off
    available
                           False
Paso 3. Establezca el nodo para administrar el estado.
```

[stack@director ~]\$ openstack baremetal node manage 048ccb59-89df-4f40-82f5-3d90d37ac7dd [stack@director ~]\$ openstack baremetal node list | grep off | 048ccb59-89df-4f40-82f5-3d90d37ac7dd | None | None | power off | **manageable** | False |

[stack@director ~]\$ openstack overcloud node introspect 048ccb59-89df-4f40-82f5-3d90d37ac7dd -provide
Started Mistral Workflow. Execution ID: f73fb275-c90e-45cc-952b-bfc25b9b5727
Waiting for introspection to finish...
Successfully introspected all nodes.
Introspection completed.
Started Mistral Workflow. Execution ID: a892b456-eb15-4c06-b37e-5bc3f6c37c65
Successfully set all nodes to available
[stack@director ~]\$ openstack baremetal node list | grep available
| 048ccb59-89df-4f40-82f5-3d90d37ac7dd | None | None | power
off | available | False |

Paso 5. Marque el nodo disponible con las nuevas propiedades del controlador. Asegúrese de utilizar el ID del controlador designado para el nuevo controlador, como se utiliza en el archivo **controllerRMA.json**.

[stack@director ~]\$ openstack baremetal node set --property capabilities='node:controller-3,profile:control,boot\_option:local' 048ccb59-89df-4f40-82f5-3d90d37ac7dd

Paso 6. En el script de implementación, hay una plantilla personalizada llamada **Layout.yaml** que, entre otras cosas, especifica qué direcciones IP se asignan a los controladores para las diversas interfaces. En una pila nueva, hay 3 direcciones definidas para el controlador-0, el controlador-1 y el controlador-2. Cuando agrega un nuevo controlador, asegúrese de agregar una siguiente dirección IP secuencialmente para cada subred.

```
ControllerIPs:
internal_api:
- 11.120.0.10
- 11.120.0.11
- 11.120.0.12
 - 11.120.0.13
tenant:
- 11.117.0.10
- 11.117.0.11
- 11.117.0.12
- 11.117.0.13
storage:
- 11.118.0.10
- 11.118.0.11
 11.118.0.12
 -11.118.0.13
storage_mgmt:
- 11.119.0.10
- 11.119.0.11
-11.119.0.12
 -11.119.0.13
```

Paso 7. Ahora ejecute **Deploy-removecontroller.sh** que se creó anteriormente, para quitar el nodo antiguo y agregar el nuevo nodo.

**Nota:** Se espera que este paso falle en ControllerNodesDeployment\_Step1. En ese momento, es necesaria la intervención manual.

```
START with options: [u'overcloud', u'deploy', u'--templates', u'-r', u'/home/stack/custom-
templates/custom-roles.yaml', u'-e', u'/usr/share/openstack-tripleo-heat-
templates/environments/puppet-pacemaker.yaml', u'-e', u'/usr/share/openstack-tripleo-heat-
templates/environments/network-isolation.yaml', u'-e', u'/usr/share/openstack-tripleo-heat-
templates/environments/storage-environment.yaml', u'-e', u'/usr/share/openstack-tripleo-heat-
templates/environments/neutron-sriov.yaml', u'-e', u'/home/stack/custom-templates/network.yaml',
u'-e', u'/home/stack/custom-templates/ceph.yaml', u'-e', u'/home/stack/custom-
templates/compute.yaml', u'-e', u'/home/stack/custom-templates/layout-removeController.yaml',
u'-e', u'/home/stack/custom-templates/rabbitmq.yaml', u'--stack', u'newtonoc', u'--debug', u'--
log-file', u'overcloudDeploy_11_15_17__07_46_35.log', u'--neutron-flat-networks',
u'phys_pcie1_0,phys_pcie1_1,phys_pcie4_0,phys_pcie4_1', u'--neutron-network-vlan-ranges',
u'datacentre:101:200', u'--neutron-disable-tunneling', u'--verbose', u'--timeout', u'180']
 :
DeploymentError: Heat Stack update failed
END return value: 1
        42m1.525s
real
user
        0m3.043s
        0m0.614s
svs
```

El progreso/estado de la implementación se puede monitorear con estos comandos:

[stack@director~]\$ openstack stack	listnested   grep -iv compl	ete
+	+	
	-++	++
·····		
ID Name	Stack	
Time   Updated Time	Parent	Stack Status   Creation 
+	+	
+	-++	
<pre>cle338f2-877e-4817-93b4-9a3f0c0b3 ComputeDeployment_Step1-swnuzjixac4</pre>	3d37   pod1-AllNodesDeploySteps 13	-5psegydpwxij-
2017-10-08T14:06:07Z   2017-11-16T2	18:09:43Z   e90f00ef-2499-4ec3-	90b4-d7def6e97c47
1db4fef4-45d3-4125-bd96-2cc3297a6 ControllerDeployment_Step1- hmn3hpruubcn	59ff   pod1-AllNodesDeploySteps	-5psegydpwxij-
UPDATE_FAILED   2017-10-08T1 d7def6e97c47	14:03:05z   2017-11-16T18:12:12	Z   e90f00ef-2499-4ec3-90b4-
e90f00ef-2499-4ec3-90b4-d7def6e97	7c47   pod1-AllNodesDeploySteps	-
16T18:09:25Z   6c4b604a-55a4-4a19-5	UPDATE_FAILED   20 9141-28c844816c0d	17-10-08T13:59:25z   2017-11-
6c4b604a-55a4-4a19-9141-28c844816 pod1	5c0d	
08T12:37:11Z   2017-11-16T17:35:352	Z   None	UPDATE_FAILED   2017-10- 
+	+	
++	-++	++

### Intervención manual

Paso 1. En el servidor OSP-D, ejecute el comando OpenStack server list para enumerar los controladores disponibles. El controlador recién agregado debe aparecer en la lista.

```
[stack@director ~]$ openstack server list | grep controller
| 3e6c3db8-ba24-48d9-b0e8-1e8a2eb8b5ff | pod1-controller-3 | ACTIVE | ctlplane=192.200.0.103 |
overcloud-full |
| 457f023f-d077-45c9-bbea-dd32017d9708 | pod1-controller-1 | ACTIVE | ctlplane=192.200.0.154 |
overcloud-full |
| 5813a47e-af27-4fb9-8560-75decd3347b4 | pod1-controller-0 | ACTIVE | ctlplane=192.200.0.152 |
overcloud-full |
```

Paso 2. Conéctese a uno de los controladores activos (no al controlador recién agregado) y vea el archivo **/etc/corosync/corosycn.conf**. Busque la **lista de nodos** que asigna un **nodo** a cada controlador. Busque la entrada para el nodo fallido y observe su **nodo**:

```
[root@pod1-controller-0 ~]# cat /etc/corosync/corosync.conf
totem {
  version: 2
  secauth: off
  cluster_name: tripleo_cluster
   transport: udpu
   token: 10000
}
nodelist {
  node {
      ring0_addr: pod1-controller-0
      nodeid: 5
   }
  node {
      ring0_addr: pod1-controller-1
      nodeid: 7
   }
  node {
      ring0_addr: pod1-controller-2
       nodeid: 8
   }
}
```

Paso 3. Inicie sesión en cada uno de los controladores activos. Quite el nodo que ha fallado y reinicie el servicio. En este caso, quite **pod1-controller-2**. No realice esta acción en el controlador recién agregado.

```
[root@pod1-controller-0 ~]# sudo pcs cluster localnode remove pod1-controller-2
pod1-controller-2: successfully removed!
[root@pod1-controller-0 ~]# sudo pcs cluster reload corosync
Corosync reloaded
[root@pod1-controller-1 ~]# sudo pcs cluster localnode remove pod1-controller-2
pod1-controller-2: successfully removed!
[root@pod1-controller-1 ~]# sudo pcs cluster reload corosync
Corosync reloaded
```

Paso 4. Ejecute este comando desde uno de los controladores activos para eliminar el nodo fallido del clúster.

[root@pod1-controller-0 ~] # sudo crm\_node -R pod1-controller-2 --force Paso 5. Ejecute este comando desde uno de los controladores activos para eliminar el nodo fallido del clúster rabbitmq.

[root@pod1-controller-0 ~]# sudo rabbitmqctl forget\_cluster\_node rabbit@pod1-controller-2
Removing node 'rabbit@newtonoc-controller-2' from cluster ...

Paso 6. Elimine el nodo fallido de la base de datos de mongo. Para ello, debe encontrar el nodo Mongo activo. Utilice **netstat** para buscar la dirección IP del host.

[root@pod1-controller-0 ~]# **sudo netstat -tulnp | grep 27017** tcp 0 0 11.120.0.10:27017 0.0.0.0:\* LISTEN 219577/mongod

Paso 7. Inicie sesión en el nodo y verifique para ver si es el maestro con el uso de la dirección IP y el número de puerto del comando anterior.

```
[heat-admin@pod1-controller-0 ~]$ echo "db.isMaster()" | mongo --host 11.120.0.10:27017
MongoDB shell version: 2.6.11
connecting to: 11.120.0.10:27017/test
{
        "setName" : "tripleo",
        "setVersion" : 9,
        "ismaster" : true,
        "secondary" : false,
        "hosts" : [
                 "11.120.0.10:27017",
                 "11.120.0.12:27017",
                 "11.120.0.11:27017"
        ],
        "primary" : "11.120.0.10:27017",
        "me" : "11.120.0.10:27017",
        "electionId" : ObjectId("5a0d2661218cb0238b582fb1"),
        "maxBsonObjectSize" : 16777216,
        "maxMessageSizeBytes" : 48000000,
        "maxWriteBatchSize" : 1000,
        "localTime" : ISODate("2017-11-16T18:36:34.473Z"),
        "maxWireVersion" : 2,
        "minWireVersion" : 0,
        "ok" : 1
}
```

Si el nodo no es el maestro, inicie sesión en el otro controlador activo y realice el mismo paso.

Paso 8. Desde el maestro, enumere los nodos disponibles con el uso del comando **rs.status()**. Busque el nodo antiguo/sin respuesta e identifique el nombre del nodo mongo.

```
[root@pod1-controller-0 ~]# mongo --host 11.120.0.10
MongoDB shell version: 2.6.11
connecting to: 11.120.0.10:27017/test
<snip>
tripleo:PRIMARY> rs.status()
{
    "set" : "tripleo",
    "date" : ISODate("2017-11-14T13:27:14Z"),
```

```
"myState" : 1,
"members" : [
        {
                  "_id" : 0,
                  "name" : "11.120.0.10:27017",
                  "health" : 1,
                  "state" : 1,
                  "stateStr" : "PRIMARY",
                  "uptime" : 418347,
                  "optime" : Timestamp(1510666033, 1),
                  "optimeDate" : ISODate("2017-11-14T13:27:13Z"),
                  "electionTime" : Timestamp(1510247693, 1),
                  "electionDate" : ISODate("2017-11-09T17:14:53Z"),
                  "self" : true
         },
         {
                  "_id" : 2,
                  "name" : "11.120.0.12:27017",
                  "health" : 1,
                  "state" : 2,
                  "stateStr" : "SECONDARY",
                  "uptime" : 418347,
                  "optime" : Timestamp(1510666033, 1),
                  "optimeDate" : ISODate("2017-11-14T13:27:13Z"),
                  "lastHeartbeat" : ISODate("2017-11-14T13:27:13Z"),
                  "lastHeartbeatRecv" : ISODate("2017-11-14T13:27:13Z"),
                  "pingMs" : 0,
                  "syncingTo" : "11.120.0.10:27017"
         },
         {
                  "_id" : 3,
                  "name" : "11.120.0.11:27017
                  "health" : 0,
                  "state" : 8,
                  "stateStr" : "(not reachable/healthy)",
                  "uptime" : 0,
                  "optime" : Timestamp(1510610580, 1),
                  "optimeDate" : ISODate("2017-11-13T22:03:00Z"),
                  "lastHeartbeat" : ISODate("2017-11-14T13:27:10Z"),
                  "lastHeartbeatRecv" : ISODate("2017-11-13T22:03:01Z"),
                  "pingMs" : 0,
                  "syncingTo" : "11.120.0.10:27017"
         }
],
"ok" : 1
```

}

Paso 9. Desde el maestro, elimine el nodo fallido con el uso del comando **rs.remove**. Se observan algunos errores al ejecutar este comando, pero verifique el estado una vez más para descubrir que el nodo se ha eliminado:

```
[root@pod1-controller-0 ~]$ mongo --host 11.120.0.10
<snip>
tripleo:PRIMARY> rs.remove('11.120.0.12:27017')
2017-11-16T18:41:04.999+0000 DBClientCursor::init call() failed
2017-11-16T18:41:05.000+0000 Error: error doing query: failed at src/mongo/shell/query.js:81
2017-11-16T18:41:05.001+0000 trying reconnect to 11.120.0.10:27017 (11.120.0.10) failed
2017-11-16T18:41:05.003+0000 reconnect 11.120.0.10:27017 (11.120.0.10) ok
tripleo:PRIMARY> rs.status()
{
    "set" : "tripleo",
    "date" : ISODate("2017-11-16T18:44:112"),
```

```
"myState" : 1,
        "members" : [
                 {
                           "_id" : 3,
                           "name" : "11.120.0.11:27017",
                           "health" : 1,
                           "state" : 2,
                           "stateStr" : "SECONDARY",
                           "uptime" : 187,
                           "optime" : Timestamp(1510857848, 3),
                           "optimeDate" : ISODate("2017-11-16T18:44:08Z"),
                           "lastHeartbeat" : ISODate("2017-11-16T18:44:11Z"),
                           "lastHeartbeatRecv" : ISODate("2017-11-16T18:44:09Z"),
                           "pingMs" : 0,
                           "syncingTo" : "11.120.0.10:27017"
                 },
                 {
                           "_id" : 4,
                           "name" : "11.120.0.10:27017",
                           "health" : 1,
                           "state" : 1,
                           "stateStr" : "PRIMARY",
                           "uptime" : 89820,
                           "optime" : Timestamp(1510857848, 3),
                           "optimeDate" : ISODate("2017-11-16T18:44:08Z"),
                           "electionTime" : Timestamp(1510811232, 1),
                           "electionDate" : ISODate("2017-11-16T05:47:12Z"),
                           "self" : true
                 }
        1,
        "ok" : 1
tripleo:PRIMARY> exit
bve
```

Paso 10. Ejecute este comando para actualizar la lista de nodos del controlador activo. Incluya el nuevo nodo del controlador en esta lista.

```
[root@pod1-controller-0 ~] # sudo pcs resource update galera wsrep_cluster_address=gcomm://pod1-
controller-0, pod1-controller-1, pod1-controller-2
Paso 11. Copie estos archivos de un controlador que ya existe en el nuevo controlador:
```

#### /etc/sysconfig/clustercheck

### /root/.my.cnf

}

```
On existing controller:
[root@pod1-controller-0 ~]# scp /etc/sysconfig/clustercheck stack@192.200.0.1:/tmp/.
[root@pod1-controller-0 ~]# scp /root/.my.cnf stack@192.200.0.1:/tmp/my.cnf
On new controller:
[root@pod1-controller-3 ~]# cd /etc/sysconfig
[root@pod1-controller-3 sysconfig]# scp stack@192.200.0.1:/tmp/clustercheck .
[root@pod1-controller-3 sysconfig]# cd /root
[root@pod1-controller-3 ~]# scp stack@192.200.0.1:/tmp/my.cnf .my.cnf
```

#### Paso 12. Ejecute el comando cluster node add desde uno de los controladores que ya existe.

```
[root@pod1-controller-1 ~]# sudo pcs cluster node add pod1-controller-3
Disabling SBD service...
pod1-controller-3: sbd disabled
pod1-controller-0: Corosync updated
pod1-controller-1: Corosync updated
Setting up corosync...
pod1-controller-3: Succeeded
Synchronizing pcsd certificates on nodes pod1-controller-3...
pod1-controller-3: Success
Restarting pcsd on the nodes in order to reload the certificates...
```

pod1-controller-3: Success

Paso 13. Inicie sesión en cada controlador y vea el archivo

**/etc/corosync/corosync.conf**. Asegúrese de que el nuevo controlador esté en la lista y que el **nodo** asignado a ese controlador sea el siguiente número en la secuencia que no se ha utilizado previamente. Asegúrese de que este cambio se realice en los 3 controladores.

```
[root@pod1-controller-1 ~]# cat /etc/corosync/corosync.conf
totem {
  version: 2
  secauth: off
   cluster_name: tripleo_cluster
   transport: udpu
   token: 10000
}
nodelist {
  node {
      ring0_addr: pod1-controller-0
      nodeid: 5
   }
  node {
      ring0_addr: pod1-controller-1
      nodeid: 7
   }
  node {
      ring0_addr: pod1-controller-3
       nodeid: 6
   }
}
quorum {
  provider: corosync_votequorum
3
logging {
  to_logfile: yes
  logfile: /var/log/cluster/corosync.log
   to_syslog: yes
}
```

Por ejemplo, /etc/corosync/corosync.conf después de la modificación:

```
totem {
version: 2
secauth: off
cluster_name: tripleo_cluster
```

```
transport: udpu
token: 10000
}
nodelist {
  node {
      ring0_addr: pod1-controller-0
      nodeid: 5
   }
   node {
      ring0_addr: pod1-controller-1
      nodeid: 7
   }
  node {
      ring0_addr: pod1-controller-3
      nodeid: 9
   }
}
quorum {
  provider: corosync_votequorum
}
logging {
   to_logfile: yes
   logfile: /var/log/cluster/corosync.log
   to_syslog: yes
}
```

que se inicien los servicios.

Paso 14. Reinicie **corosync** en los controladores activos. No inicie **corosync** en el nuevo controlador.

[root@pod1-controller-0 ~]# sudo pcs cluster reload corosync [root@pod1-controller-1 ~]# sudo pcs cluster reload corosync Paso 15. Inicie el nuevo nodo de controlador desde uno de los controladores que actúan.

[root@pod1-controller-1 ~]# sudo pcs cluster start pod1-controller-3
Paso 16. Reinicie Galera desde uno de los controladores de actuación.

```
[root@pod1-controller-1 ~]# sudo pcs cluster start pod1-controller-3
pod1-controller-0: Starting Cluster...
[root@pod1-controller-1 ~]# sudo pcs resource cleanup galera
Cleaning up galera:0 on pod1-controller-0, removing fai1-count-galera
Cleaning up galera:0 on pod1-controller-1, removing fai1-count-galera
Cleaning up galera:0 on pod1-controller-3, removing fai1-count-galera
* The configuration prevents the cluster from stopping or starting 'galera-master' (unmanaged)
Waiting for 3 replies from the CRMd... OK
[root@pod1-controller-1 ~]#
[root@pod1-controller-1 ~]# sudo pcs resource manage galera
Paso 17. El clúster está en modo de mantenimiento. Inhabilite el modo de mantenimiento para
```

[root@pod1-controller-2 ~]# sudo pcs property set maintenance-mode=false --wait Paso 18. Compruebe el estado de los PC para Galera hasta que los 3 controladores aparezcan como maestros en Galera. **Nota:** Para configuraciones grandes, puede tomar algún tiempo sincronizar las bases de datos.

[root@pod1-controller-1 ~]# sudo pcs status | grep galera -A1

Master/Slave Set: galera-master [galera]

Masters: [ pod1-controller-0 pod1-controller-1 pod1-controller-3 ]

Paso 19. Cambie el clúster al modo de mantenimiento.

pod1-controller-3: Online pod1-controller-0: Online pod1-controller-1: Online

Paso 20. Vuelva a ejecutar el script de implementación que ejecutó anteriormente. Esta vez debería tener éxito.

```
[stack@director ~]$ ./deploy-addController.sh
START with options: [u'overcloud', u'deploy', u'--templates', u'-r', u'/home/stack/custom-
templates/custom-roles.yaml', u'-e', u'/usr/share/openstack-tripleo-heat-
templates/environments/puppet-pacemaker.yaml', u'-e', u'/usr/share/openstack-tripleo-heat-
templates/environments/network-isolation.yaml', u'-e', u'/usr/share/openstack-tripleo-heat-
templates/environments/storage-environment.yaml', u'-e', u'/usr/share/openstack-tripleo-heat-
templates/environments/neutron-sriov.yaml', u'-e', u'/home/stack/custom-templates/network.yaml',
u'-e', u'/home/stack/custom-templates/ceph.yaml', u'-e', u'/home/stack/custom-
templates/compute.yaml', u'-e', u'/home/stack/custom-templates/layout-removeController.yaml',
u'--stack', u'newtonoc', u'--debug', u'--log-file', u'overcloudDeploy_11_14_17__13_53_12.log',
u'--neutron-flat-networks', u'phys_pcie1_0,phys_pcie1_1,phys_pcie4_0,phys_pcie4_1', u'--neutron-
network-vlan-ranges', u'datacentre:101:200', u'--neutron-disable-tunneling', u'--verbose', u'--
timeout', u'180']
options: Namespace(access_key='', access_secret='***', access_token='***',
access_token_endpoint='', access_token_type='', aodh_endpoint='', auth_type='',
auth_url='https://192.200.0.2:13000/v2.0', authorization_code='', cacert=None, cert='',
client_id='', client_secret='***', cloud='', consumer_key='', consumer_secret='***', debug=True,
default_domain='default', default_domain_id='', default_domain_name='', deferred_help=False,
discovery_endpoint='', domain_id='', domain_name='', endpoint='', identity_provider='',
identity_provider_url='', insecure=None, inspector_api_version='1', inspector_url=None,
interface='', key='', log_file=u'overcloudDeploy_11_14_17__13_53_12.log', murano_url='',
old_profile=None, openid_scope='', os_alarming_api_version='2',
os_application_catalog_api_version='1', os_baremetal_api_version='1.15', os_beta_command=False,
os_compute_api_version='', os_container_infra_api_version='1',
os_data_processing_api_version='1.1', os_data_processing_url='', os_dns_api_version='2',
os_identity_api_version='', os_image_api_version='1', os_key_manager_api_version='1',
os_metrics_api_version='1', os_network_api_version='', os_object_api_version='',
os_orchestration_api_version='1', os_project_id=None, os_project_name=None,
os_queues_api_version='2', os_tripleoclient_api_version='1', os_volume_api_version='',
os_workflow_api_version='2', passcode='', password='***', profile=None, project_domain_id='',
project_domain_name='', project_id='', project_name='admin', protocol='', redirect_uri='',
```

```
region_name='', roles='', timing=False, token='***', trust_id='', url='', user='',
user_domain_id='', user_domain_name='', user_id='', username='admin', verbose_level=3,
verify=None)
Auth plugin password selected
Starting new HTTPS connection (1): 192.200.0.2
"POST /v2/action_executions HTTP/1.1" 201 1696
HTTP POST https://192.200.0.2:13989/v2/action_executions 201
Overcloud Endpoint: http://172.25.22.109:5000/v2.0
Overcloud Deployed
clean_up DeployOvercloud:
END return value: 0
       54m17.197s
real
     0m3.421s
user
sys
         0m0.670s
```

## Verificar los servicios de nube excesiva en el controlador

Asegúrese de que todos los servicios administrados se ejecuten correctamente en los nodos del controlador.

[heat-admin@pod1-controller-2 ~]\$ sudo pcs status

## Finalización de los Routers de Agente L3

Verifique los routers para asegurarse de que los agentes L3 estén correctamente alojados. Asegúrese de generar el archivo overcloudrc cuando realice esta comprobación.

Paso 1. Busque el nombre del router.

<pre>[stack@director~]\$ source corerc [stack@director ~]\$ neutron router-list</pre>		
++	⊦4 ⊦	
id external_gateway_info	name	distributed   ha
++	+4 +	
d814dc9d-2b2f-496f-8c25-24911e464d02   a955157d50b5",   False <b>En este ejemplo, el nombre del router es</b>	main     True s main.	{"network_id": "18c4250c-e402-428c-87d6- 

Paso 2. Enumera todos los agentes L3 para encontrar UUID del nodo fallido y el nuevo nodo.

```
[stack@director ~]$ neutron agent-list | grep "neutron-l3-agent"
| 70242f5c-43ab-4355-abd6-9277f92e4ce6 | L3 agent | pod1-controller-0.localdomain |
nova | :-) | True | neutron-l3-agent |
| 8d2ffbcb-b6ff-42cd-b5b8-da31d8da8a40 | L3 agent | pod1-controller-2.localdomain |
nova | xxx | True | neutron-l3-agent |
| a410a491-e271-4938-8a43-458084ffe15d | L3 agent | pod1-controller-3.localdomain |
```

nova	:-)	True		neutron-13-agent		
cb4bc1ad-ac50-42	2e9-ae69-	8a256d375136	L3	agent	pod1-controller-1.localdomain	
nova	:-)	True		neutron-13-agent		

Paso 3. En este ejemplo, el agente L3 que corresponde a **pod1-controller-2.localdomain** debe ser eliminado del router y el que corresponde a **pod1-controller-3.localdomain** debe ser agregado al router.

```
[stack@director ~]$ neutron 13-agent-router-remove 8d2ffbcb-b6ff-42cd-b5b8-da31d8da8a40 main
Removed router main from L3 agent
[stack@director ~]$ neutron 13-agent-router-add a410a491-e271-4938-8a43-458084ffe15d main
```

Added router main to L3 agent

Paso 4. Verifique la lista actualizada de agentes L3.

[stack@director ~]\$ neutron 13-agent-list-hosting-router main

```
----+
lid
                    host
                                      | admin state up |
alive | ha_state |
---+
| 70242f5c-43ab-4355-abd6-9277f92e4ce6 | pod1-controller-0.localdomain | True
                                             :-)
standbv
| a410a491-e271-4938-8a43-458084ffe15d | pod1-controller-3.localdomain | True
                                             | :-)
| standby |
cb4bc1ad-ac50-42e9-ae69-8a256d375136 | pod1-controller-1.localdomain | True
                                             :-)
active
```

----+

Paso 5. Enumere cualquier servicio que se ejecute desde el nodo de controlador eliminado y quítelos.

```
[stack@director ~]$ neutron agent-list | grep controller-2
877314c2-3c8d-4666-a6ec-69513e83042d | Metadata agent
                                                     pod1-controller-2.localdomain
                 xxx True neutron-metadata-agent
                                                                 | 8d2ffbcb-b6ff-42cd-b5b8-da31d8da8a40 | L3 agent | pod1-controller-2.localdomain |
               | xxx | True
                                     neutron-13-agent
nova
                                                               911c43a5-df3a-49ec-99ed-1d722821ec20 | DHCP agent | pod1-controller-2.localdomain |
               xxx True neutron-dhcp-agent
nova
                                                            | a58a3dd3-4cdc-48d4-ab34-612a6cd72768 | Open vSwitch agent | pod1-controller-2.localdomain
                xxx True neutron-openvswitch-agent
[stack@director ~]$ neutron agent-delete 877314c2-3c8d-4666-a6ec-69513e83042d
Deleted agent(s): 877314c2-3c8d-4666-a6ec-69513e83042d
[stack@director ~]$ neutron agent-delete 8d2ffbcb-b6ff-42cd-b5b8-da31d8da8a40
Deleted agent(s): 8d2ffbcb-b6ff-42cd-b5b8-da31d8da8a40
[stack@director ~]$ neutron agent-delete 911c43a5-df3a-49ec-99ed-1d722821ec20
Deleted agent(s): 911c43a5-df3a-49ec-99ed-1d722821ec20
[stack@director ~]$ neutron agent-delete a58a3dd3-4cdc-48d4-ab34-612a6cd72768
Deleted agent(s): a58a3dd3-4cdc-48d4-ab34-612a6cd72768
[stack@director ~]$ neutron agent-list | grep controller-2
[stack@director ~]$
```

## Finalización de servicios de cálculo

Paso 1. Verifique los elementos nova service-list que quedan del nodo eliminado y elimínelos.

```
[stack@director ~]$ nova service-list | grep controller-2
| 615 | nova-consoleauth | pod1-controller-2.localdomain | internal | enabled | down
| 2017-11-16T16:08:14.000000 | - |
| 618 | nova-scheduler | pod1-controller-2.localdomain | internal | enabled | down
| 2017-11-16T16:08:13.000000 | - |
| 621 | nova-conductor | pod1-controller-2.localdomain | internal | enabled | down
| 2017-11-16T16:08:14.000000 | -
[stack@director ~]$ nova service-delete 615
[stack@director ~]$ nova service-delete 618
[stack@director ~]$ nova service-delete 621
```

stack@director ~]\$ nova service-list | grep controller-2

Paso 2. Asegúrese de que el proceso **consoleauth** se ejecute en todos los controladores o reiniciarlo con el uso de este comando: **pcs resource restart openstack-nova-consoleauth**:

[stack@director ~]\$ nova service-list | grep consoleauth
| 601 | nova-consoleauth | pod1-controller-0.localdomain | internal | enabled | up
| 2017-11-16T21:00:10.000000 | - |
| 608 | nova-consoleauth | pod1-controller-1.localdomain | internal | enabled | up
| 2017-11-16T21:00:13.000000 | - |
| 622 | nova-consoleauth | pod1-controller-3.localdomain | internal | enabled | up
| 2017-11-16T21:00:13.000000 | -

## Reiniciar el vallado en los nodos del controlador

Paso 1. Verifique todos los controladores para la ruta IP a la nube inferior 192.0.0.0/8

```
[root@pod1-controller-3 ~]# ip route
default via 172.25.22.1 dev vlan101
11.117.0.0/24 dev vlan17 proto kernel scope link src 11.117.0.12
11.118.0.0/24 dev vlan18 proto kernel scope link src 11.118.0.12
11.119.0.0/24 dev vlan19 proto kernel scope link src 11.119.0.12
11.120.0.0/24 dev vlan20 proto kernel scope link src 11.120.0.12
169.254.169.254 via 192.200.0.1 dev eno1
172.25.22.0/24 dev vlan101 proto kernel scope link src 172.25.22.102
192.0.0.0/8 dev eno1 proto kernel scope link src 192.200.0.103
Paso 2. Verifique la configuración actual de Stonith. Elimine cualquier referencia al nodo del
controlador antiguo.
```

```
[root@pod1-controller-3 ~]# sudo pcs stonith show --full
Resource: my-ipmilan-for-controller-6 (class=stonith type=fence_ipmilan)
Attributes: pcmk_host_list=pod1-controller-1 ipaddr=192.100.0.1 login=admin
passwd=Csco@123Starent lanplus=1
Operations: monitor interval=60s (my-ipmilan-for-controller-6-monitor-interval-60s)
Resource: my-ipmilan-for-controller-4 (class=stonith type=fence_ipmilan)
Attributes: pcmk_host_list=pod1-controller-0 ipaddr=192.100.0.14 login=admin
passwd=Csco@123Starent lanplus=1
Operations: monitor interval=60s (my-ipmilan-for-controller-4-monitor-interval-60s)
```

#### Resource: my-ipmilan-for-controller-7 (class=stonith type=fence\_ipmilan) Attributes: pcmk\_host\_list=pod1-controller-2 ipaddr=192.100.0.15 login=admin passwd=Csco@123Starent lanplus=1 Operations: monitor interval=60s (my-ipmilan-for-controller-7-monitor-interval-60s)

[root@pod1-controller-3 ~]# pcs stonith delete **my-ipmilan-for-controller-7** Attempting to stop: my-ipmilan-for-controller-7...Stopped Paso 3. Agregue la configuración **stonith** para el nuevo controlador.

[root@pod1-controller-3 ~]sudo pcs stonith create my-ipmilan-for-controller-8 fence\_ipmilan
pcmk\_host\_list=pod1-controller-3 ipaddr=<CIMC\_IP> login=admin passwd=<PASSWORD> lanplus=1 op
monitor interval=60s

Paso 4. Reinicie el cercado desde cualquier controlador y verifique el estado.

[root@pod1-controller-1 ~]# sudo pcs property set stonith-enabled=true
[root@pod1-controller-3 ~]# pcs status
<snip>
my-ipmilan-for-controller-1 (stonith:fence\_ipmilan): Started pod1-controller-3
my-ipmilan-for-controller-0 (stonith:fence\_ipmilan): Started pod1-controller-3
my-ipmilan-for-controller-3 (stonith:fence\_ipmilan): Started pod1-controller-3