# Configurazione e gestione di un server standalone da Intersight

Sommario	
Introduzione	
Prerequisiti	
Requisiti	
Componenti usati	
Premesse	
Procedura	

## Introduzione

In questo documento viene descritto come richiedere, creare e distribuire un profilo di server UCS per un server autonomo.

## Prerequisiti

Requisiti

#### Componenti usati

Questa procedura può essere eseguita per i server standalone delle serie M5, M6 e M7.

Le informazioni discusse in questo documento fanno riferimento a dispositivi usati in uno specifico ambiente di emulazione. Su tutti i dispositivi menzionati nel documento la configurazione è stata ripristinata ai valori predefiniti. Se la rete è operativa, valutare attentamente eventuali conseguenze derivanti dall'uso dei comandi.

### Premesse

Questa procedura può essere eseguita per i server standalone delle serie M5, M6 e M7.

## Procedura

Passare alla pagina Web Cisco IMC per il dispositivo per cui è possibile richiedere l'assistenza.

Undessis / Sum	mary 🖈			
Server Proper	ties	Cisco Integrated M	Management Controller (Cisco IN	AC) Informatio
Product Name:	UCS C220 M6S	Hostname:	C220-WZP24430N7K	
Serial Number:	WZP24430N7K	IP Address:	10.31.123.34	
PID:	UCSC-C220-M6S	MAC Address:	BC:4A:56:59:3D:FC	
UUID:	3ADAE7CA-DEBC-4118-80E9-F5FCA72545E2	Firmware Version:	4.2(2a)	
BIOS Version:	C220M6.4.2.2d.0.0610220138	Current Time (UTC):	Mon Oct 31 23:36:48 2022	
Description:		Local Time:	Mon Oct 31 23:36:48 2022 UTC +0000 (Local)	
Asset Tag:	Unknown	Timezone:	UTC	Select Timezone
Chassis Statu	s	Server Utilization		
Chassis Status	S	Server Utilization	5 1971 - N/A	
Chassis Statu: Power	S state: On Status: Not-Completed	Server Utilization	ion (%): N/A	
Chassis Statu: Power Post Completion : Overall Server :	S state: On Status: Not-Completed Status: Severe Fault	Server Utilization Overall Utilizat CPU Utilizat	ion (%): N/A ion (%): N/A	
Chassis Statu: Power Post Completion : Overall Server : Tempe	S state: On Status: Not-Completed Status: Severe Fault rature: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	
Chassis Statu: Power Post Completion : Overall Server : Tempe Overall DIMM :	S state: On Status: Not-Completed Status: Severe Fault rature: Good Status: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	
Chassis Statu: Power Post Completion : Overall Server : Tempe Overall DIMM : Power Su	S state: On Status: Not-Completed Status: Severe Fault rature: Good Status: Good pplies: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	
Chassis Statu: Power Post Completion : Overall Server : Tempe Overall DIMM : Power Su	S status: On Status: Not-Completed Status: Severe Fault rature: Good Status: Good pplies: Good Fans: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	
Chassis Statu: Power Post Completion 3 Overall Server 3 Tempe Overall DIMM 3 Power Su	S state: On Status: Not-Completed Status: Severe Fault rature: Good Status: Good pplies: Good pans: Good r LED: Off	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	ion (%): N/A ion (%): N/A ion (%): N/A	

Sito server

Quindi, selezionare Admin > Device Connector (Amministratore > Connettore dispositivo).

	Service Cisco Integrated Management Controller
	Admin / Device Connector 🔺
Chassis •	The Device Connector is an embedded management controller that enables the capa
Compute	Device Connector
Networking	
Storage •	
Admin 🗸	
User Management	Device Connector
Networking	
Communication Services	A Not Claimed
Security Management	The connection to the Cisco Intersight Portal is successful, but device is still not cla
Event Management	1.0.11-2316
Firmware Management	
Utilities	
Device Connector	

Device Connector

Verificare che il server sia in grado di raggiungere Intersight Cloud o l'accessorio Intersight.

In Impostazioni modificare Configurazione proxy e Gestione certificati.

A / Admin / Device Connector *		Rathesh   Host Power   Laund	WVM   Peg   CIMC Reboot   Locator LED   0	0 0
The Device Connector is an embedded management controller that enables the capabilities of Cisco Int	ersight, a cloud-based management platform. For detailed info	rmation about configuring the device connector, please visit Help C	erter	
Device Connector			Settings 🔿 Ref	
Device Connector	ACCESS MOON ALLOW CONTROL	A	Device ID WZP24430N7K Calim Code 169464073EA4	B
Not Claimed				- 1
The connection is the Cisco Intensignt Portal is successful, but device is still not claimed. To claim the Claim a New Device for existing account.	device open Cisco Intersight, create a new account and follow	v the guidance or go to the Targets page and click Open Intersight		



Configurazione del proxy

Una volta stabilita la connessione al portale Cisco Intersight, è possibile richiedere il dispositivo. A tale scopo, copiare l'ID dispositivo e il codice attestazione e quindi accedere all'account Intersight.

Device Connector	(i) Set	ings   C Refresh
Device Connector	Oreiter D WZP24430N7K Claim Code E87C363F30E0 C	8
A Not Claimed		
The connection to the Cisco Intensight Portal is successful, but device is still not claimed. To claim the device open Cisco Intensight, create a new account and follow the guidance or go to the Targets page at Claim a New Device for existing account.	nd click Open Internight	

ID dispositivo e codice attestazione

Sul portale di Intersight, selezionare Admin > Targets (Amministratore > Destinazioni).



Fare clic su Richiedi nuova destinazione.

ADMIN > Tarpets		🗘 🖪 298 🔺 250	⊖ 1 \$P\$ 33 Q,	🕲 💿 Jaime Islas Tolentino 🔔
* All Targets 0 +				
P B Q ANFRH				10 v perpage K C 1 of3 🤉 🕅
Connection X Connected S Connected S Conn	Vendor 29 • Elsoo Systems, Inc. 29			

Richiedi una nuova destinazione

In Calcola/Fabric, selezionare Cisco UCS Server (Standalone) e fare clic su Start.

	Select Targe	et Type	
Filters	Q Search		
Available for Claiming	Compute / Fabric		
Categories	Cisco UCS Server (Standalone)	Cisco UCS Domain (Intersight Managed)	t? ())) HPE OneView
Cloud			
Compute / Fabric     Hyperconverged	습니다. Cisco UCS Domain (UCSM Managed)	cisco Cisco UCS C890	Constraints Server
Hypervisor     Network			

Cisco UCS Server

Nella pagina Generale, incollare sia l'ID dispositivo che il codice attestazione.

Se si seleziona il gruppo di risorse, è possibile specificare le organizzazioni a cui aggiungere il dispositivo. Questa operazione non è obbligatoria.

Per impostazione predefinita, Gruppo risorse = Tutto.

Fare clic su Attestazione.

				Ľ	Claim Cisco UCS (Standalone) Targ To claim your target, provi Code and select the appro	Server get de the Device ID, Claim priate Resource Groups.				
Genera	al									
Device WZP2	1D * 24430N7K		Claim Code * F6A6893E26B	4					0	
Resour	rce Groups									
•	Select the Resource Grou type 'AI''.	ps if required. How	wer, this selection is	s not mandatory a	is one or more Resource Gro	up type is 'AI'. The claimed target 1 items found	will be part of all Organizatio	ns with the Resource G	roup O	
	Select the Resource Grou type 'AE'. Name	ps if required. How Usage	ever, this selection is	s not mandatory a	is one or more Resource Gro	up type is 'Alf'. The claimed target 1 items found Description	vill be part of all Organizatio	ns with the Resource G	oup O	
	Select the Resource Grou type 'AI'. Name IMM-rp	usage	ever, this selection is	s not mandatory a	s one or more Resource Gro	up type is 'All'. The claimed target 1 items found Description	vill be part of all Organizatio	ns with the Resource G	тонр ()	
	Select the Resource Grou type 'AIT. Name IMM-rg	Usage	rver, this selection is	s not mandatory a	s one or more Resource Gro	up type is 'Alf'. The claimed target 1 items found Description	vill be part of all Organizatio	ns with the Resource G	•	
	Select the Resource Grou type 'AIT. Name IMM-rg	usage	iver, this selection i	s not mandatory a	s one or more Resource Gro	up type is 'All'. The claimed target  I items found  Description	vill be part of all Organizatio	ns with the Resource G	> X	

Pagina Generale

Se l'operazione ha esito positivo, il dispositivo viene visualizzato in Targets (Destinazioni).

* A	I Targets ⊜ +									
0	Add Filter								30 items	found 10 v per pag
	Not Connected 15	тор (	28 • UCS Domain 19 • UCS Domain 19 • HyperFile Chatter 4 • HyperFile Chatter 4 • Internight Appliance 3 • Other 7	Vendor 30	Cisco Systema, Inc. 3	0				
	Name		Status		Туре		Claimed Time			Claimed By
	C220-WZP24430N7K		Connected		Standalone M6 Server		a few seconds ag	0		jislasto@cisco.com

Tutte le destinazioni

Dopo aver aggiunto correttamente il server a Intersight, è possibile creare un profilo del server UCS.

Fare clic su Configura > Profili e quindi su Profili server UCS.

≡	-diada cisco Intersight	CONFIGURE > Profiles	🗘 🔳 297
<u>elo</u>	MONITOR	HyperFlex Cluster Profiles UCS Chassis Profiles UCS Domain Profiles UCS Server Profiles	
ø	OPERATE ^		
	Servers	* All UCS Server Profiles	
	Chauda	/ / 🗊 9. Add Filter	
	Unassis		
	Fabric Interconnects		
	Networking		
	HyperFlex Clusters		
	Integrated Systems		
×	CONFIGURE ^		ļ ,
	Orchestration		
(	Profiles	<b>←</b>	
	Templates		
	Policies		
	Pools		

Profili server UCS

Fare clic su Crea profilo server UCS.

CONFIGURE > Profiles				Q 🛯 300 🔺 251	0 ⊗ 0	Jaime Islas Tolentino 🔔
HyperFlex Cluster Profiles		UCS Server Profiles				Create UCS Server Profile
* All UCS Server Profiles @						
	Add Filter					rpage 🖂 C 0 of 0 🖂
Name Name						
			~			

Crea profilo server UCS

Assegnare un nome al profilo del server e selezionare Server autonomo sulla piattaforma di destinazione, quindi fare clic su Avanti.

	Progress		~	Shep 1
P			Ē <b>ģ</b>	General Enter a name, description, tag and select a platform for the server profile.
	Server Assignment			
	Compute Configuration		Organization * default	
	Management Configuration		Name *	
Ģ	Storage Configuration		Server_Profile_C-S	ieries O
é	Network Configuration		Target Platform ©	
ø	Summary		UCS Server (Star	ndalone) 🔿 UCS Server (Fi-Attached)
			Set Tags	
			Server Profile for 5	Itandalone Server
				<+ 1024
	< Back	Close		

Assegnazione server autonomo

Nella schermata Assegnazione server selezionare Server autonomo e fare clic su Avanti.



Schermata Assegnazione server

Nei cinque passaggi successivi, assegnare i criteri server in base alle proprie esigenze. Per terminare, fare clic su Riepilogo e Distribuisci.

E	Progress				Shep 7											
စု	Ceneral				Summary Verify details of the profile and the pol errors and deploy.	icies, resolve										
Ŷ	Server Assignment															
φ	Compute Configuration		Ceneral													
þ	Management Configuration		Organization Name	default Server_Profile_C-Series	Status Management IP	A Not Deployed										
Ŷ	Storage Configuration		Assigned Server	C220-WZP24430N7K UCS Server (Standalone)												
Ý	Network Configuration															
¢			Description Server Profile for Stand	lalone Server												
			Compute Configuration	Management Configuration	Storage Configuration Netwo	rk Configuration Errors/Warnin										
			BIOS				bios-policy 🗐									
C	< Back	Close						(	C		Dep	Deplo	Deploy	Deploy	Deploy	Deplay

Distribuzione riepiloghi server

Intersight può convalidare la configurazione e, se corretto, verificare lo stato.

* 4	* All UCS Server Profiles (a) +													
•••			G Export 39 items found	15 v perpage K € 1 of 3 D Ø										
	Name :	Status :	Target Platform :	UCS Server Template		Last Update :								
0			UCS Server (Standalone)			a few seconds ago								
0		Not Assigned	UCS Server (Standalone)			an hour ago								
						/								

Profili finali

È ora possibile gestire il server UCS Standalone da Intersight.

#### Informazioni su questa traduzione

Cisco ha tradotto questo documento utilizzando una combinazione di tecnologie automatiche e umane per offrire ai nostri utenti in tutto il mondo contenuti di supporto nella propria lingua. Si noti che anche la migliore traduzione automatica non sarà mai accurata come quella fornita da un traduttore professionista. Cisco Systems, Inc. non si assume alcuna responsabilità per l'accuratezza di queste traduzioni e consiglia di consultare sempre il documento originale in inglese (disponibile al link fornito).