# Intersightからのスタンドアロンサーバの設定と 管理

内容	
<u>はじめに</u>	
前提条件	
<u>要件</u>	
<u>使用するコンポーネント</u>	
<u>背景説明</u>	
<u>手順</u>	

## はじめに

このドキュメントでは、スタンドアロンサーバのUCSサーバプロファイルを要求、作成、および 導入する方法について説明します。

#### 前提条件

要件

使用するコンポーネント

この手順は、M5、M6、およびM7シリーズのスタンドアロンサーバに対して実行できます。

このドキュメントの情報は、特定のラボ環境にあるデバイスに基づいて作成されました。このド キュメントで使用するすべてのデバイスは、クリアな(デフォルト)設定で作業を開始していま す。本稼働中のネットワークでは、各コマンドによって起こる可能性がある影響を十分確認して ください。

#### 背景説明

この手順は、M5、M6、およびM7シリーズのスタンドアロンサーバに対して実行できます。

### 手順

請求可能なデバイスのCisco IMC Webページに移動します。

Server Proper	ties	Cisco Integrated M	Management Controller (Cisco IN	Information
Product Name:	UCS C220 M6S	Hostname:	C220-WZP24430N7K	
Serial Number:	WZP24430N7K	IP Address:	10.31.123.34	
PID:	UCSC-C220-M6S	MAC Address:	BC:4A:56:59:3D:FC	
UUID:	3ADAE7CA-DEBC-4118-80E9-F5FCA72545E2	Firmware Version:	4.2(2a)	
BIOS Version:	C220M6.4.2.2d.0.0610220138	Current Time (UTC):	Mon Oct 31 23:36:48 2022	
Description:		Local Time:	Mon Oct 31 23:36:48 2022 UTC +0000 (Local)	
Asset Tag:	Unknown	Timezone:	UTC	Select Timezone
Chassis Statu	S	Server Utilization		
Chassis Status	S State: On	Server Utilization	tion (%): N/A	
Chassis Statu: Power Post Completion 5	S State: On Status: Not-Completed	Server Utilization Overall Utilizat CPU Utilizat	tion (%): N/A	
Chassis Status Power Post Completion S Overall Server S	S State: On Status: Not-Completed Status: Severe Fault	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat	tion (%): N/A tion (%): N/A	
Chassis Statu: Power Post Completion S Overall Server S Tempe	S State: On Status: Not-Completed Status: Severe Fault rature: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	tion (%): N/A tion (%): N/A tion (%): N/A	
Chassis Statu: Power Post Completion S Overall Server S Tempe Overall DIMM S	S State: On Status: Not-Completed Status: Severe Fault rature: Good Status: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	tion (%): N/A tion (%): N/A tion (%): N/A	
Chassis Statu: Power Post Completion S Overall Server S Tempe Overall DIMM S Power Su	S Status: On Status: Not-Completed Status: Severe Fault rature: Good Status: Good pplies: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	tion (%): N/A tion (%): N/A tion (%): N/A	
Chassis Statu: Power Post Completion S Overall Server S Tempe Overall DIMM S Power Su	S State: On Status: Not-Completed Status: Severe Fault rature: Good Status: Good pplies: Good	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	tion (%): N/A tion (%): N/A tion (%): N/A	
Chassis Status Power Post Completion S Overall Server S Tempe Overall DIMM S Power Su Locato	S State: On Status: Not-Completed Status: Severe Fault rature: Good Status: Good pplies: Good Fans: Good r LED: Off	Server Utilization Overall Utilizat CPU Utilizat Memory Utilizat IO Utilizat	tion (%): N/A tion (%): N/A tion (%): N/A	

次に、Admin > Device Connectorの順に移動します。

	Services Cisco Integrated Management Controller
	Admin / Device Connector 🔺
Chassis •	The Device Connector is an embedded management controller that enables the capa
Compute	Device Connector
Networking	
Storage •	
Admin 👻	
User Management	Device Connector
Networking	
Communication Services	A Not Claimed
Security Management	The connection to the Cisco Intersight Portal is successful, but device is still not cla
Event Management	1.0.11-2316
Firmware Management	
Utilities	
Device Connector	

デバイス コネクタ

サーバがIntersight CloudまたはIntersightアプライアンスに到達できることを確認します。

Settingsで、Proxy ConfigurationとCertificate Managerを変更します。

A / Admin / Device Connector *		Refresh   Host	Power   Launch v	CVM   Ping   CIMC Reboot	Locator LED   🛛 🖨
The Device Connector is an embedded management controller that enables the capabilities of Cisco Intersig	ht, a cloud-based management pla	rform. For detailed information about configuring the device connector, p	lease visit Help Cert	*	
Device Connector					Settings 🗇 Refresh
Device Convector	• USE ALON CONTROL		<u></u> Intersight	Device ID WZP24430N7K Claim Code 169464073EA4	8
A Not Claimed					
The connection to the Cloco Intensight Portal is successful, but device is still not claimed. To claim the devi Claim a New Device for existing account.	ce open Cisco Intersight, create a r	new account and follow the guidance or go to the Targets page and click	Open Intersight		

Settings	
General	
DNS Configuration	<ul> <li>Configure proxy settings</li> </ul>
NTP Configuration	Enable Proxy
Proxy Configuration	Proxy Hostname/IP *
Certificate Manager	proxy.esi.cisco.com
Connection	Authentication

プロキシ設定

Cisco Intersightポータルへの接続が成功すると、デバイスを要求できます。これを行うには、デ バイスIDとクレームコードの両方をコピーし、Intersightアカウントにログインします。

Device Connector		() Settings	Citeteet
	ACCESS MODE, ALLOW CONTROL	Device ID	
		WZP24430N7K	B
		Claim Code	
· · · · · · · · · · · · · · · · · · ·	•••• 🌐 •••••• 🛆 •••••• 🛆	E87C363F30E0	B
Device Connector	Internet Intersight		
A Not Claimed			
The connection to the Claco Intensight Portal is successful, but device is still not claimed. To claim t Claim a New Device for existing account.	he device open Cisco Intensight, create a new account and follow the guidance or go to the Targets page and click Open Intensig	•	

デバイスIDとクレームコード

Intersightポータルで、Admin > Targetsの順に移動します。



Claim a New Targetをクリックします。

ADMIN > Targets			🗘 🖪 298 🔺 250	⊕ 1	65 33	<b>q</b>	0 ()	Jaime Islas Tolentino 🔔
								Chim a New Target
* All Targets © +								
2 0 4 ANTON							<u>10 v</u> perpage 🖂	< <u>1</u> of 3 (3 (3
Connected 5 Not Connected 15	Top Targets by Types 2 UCS Doman 10 UCS DOMA 10	Vendor 29 + Cisco Systems, Inc. 29						Ø

新しいターゲットの要求

Compute/Fabricの下で、Cisco UCS Server (Standalone)を選択し、Startをクリックします。

Select Target Type									
Filters	Q Search								
Available for Claiming	Compute / Fabric								
Categories		cisco							
	(Standalone)	(Intersight Managed)	HPE OneView						
Cloud									
Compute / Fabric									
Hyperconverged	Cisco UCS Domain (UCSM	Cisco UCS C890							
	Managed)		Redfish Server						
O Network									

Cisco UCSサーバ

Generalページで、Device IDとClaim Codeの両方を貼り付けます。

リソースグループを選択した場合は、デバイスを追加する組織を指定できます。これは必須では ありません。

デフォルトでは、リソースグループはAllです。

Claimをクリックします。

			<u>ن</u>	Claim Cise (Standalor To claim your to Code and selec	co UCS Server ne) Target arget, provide the Device ID, Claim It the appropriate Resource Groups.			
Gene	ral							
Devis WZP	e ID * *24430N7K		Claim Code * F6A6893E2682					٥
Reso	urce Groups							
	Select the Resource Gro type 'Air'.	ups if required. How	ever, this selection is not ma	indatory as one or more Re	source Group type is 'All'. The claimed target 1 items found Description	vill be part of all Organization	s with the Resource Gr	oup ©
	Select the Resource Gro type 'AI'.	ups if required. How Usage	ever, this selection is not ma	ndatory as one or more Re	source Group type is 'All'. The claimed target 1 items found Description	Nill be part of all Organization	s with the Resource Gr	•••
	Select the Resource Gro type 'AI'. Name	Ussge	ever, this selection is not ma	ndatory as one or more Re	source Group type is 'AIT. The claimed target 1 items found Description	vill be part of all Organization	1 of 1 2 2	∞¢ ⊙
	Select the Resource Gro type 'AI'. Name   IM/Mep	Usage	ever, this selection is not ma	ndatory as one or more Re	Source Group type is 'All'. The claimed target I items found Description	10 v per page 😢 🤇	1 of 1 2 2	

正常に実行されると、Targetsの下にデバイスが表示されます。

* A	I Targets ⊜ +							
0	Add Filter						30 items	found 10 v per pa
	Not Connected 15	Top	Targets by Types R UCS Domain 19 HyperFiles Chatter 4 HyperFiles Chatter 4 Estandalore MIS Server 4 Entersight Appliance 3 Other 7	Vendor 30	Cisco Systems, Inc. 30			
	Name		Status		Туре	Claimed Time		Claimed By
	C220-WZP24430N7K		Connected		Standalone M6 Server	a few seconds ago		jislasto@cisco.com

すべてのターゲット

サーバがIntersightに正しく追加されたので、UCSサーバプロファイルを作成できます。

Configure > Profilesの順にクリックし、次にUCS Server Profilesをクリックします。

≡	-dudu cisco Intersight	CONFIGURE > Profiles	🗘 💶 297
<u>elo</u>	MONITOR	HyperFlex Cluster Profiles UCS Chassis Profiles UCS Domain Profiles UCS Server Profiles	
ø	OPERATE ^	* All LICS Server Profiles (i) +	
	Servers	··· / / 前 Q. Add Filter	
	Chassis	Name : Status : Target Platform : UCS Server Term	plate
	Fabric Interconnects		
	Networking		
	HyperFlex Clusters		
1.0	Integrated Systems		
^			
C	Profiler	4	
L	Templates		
	Policies		
	Pools		

UCSサーバプロファイル

Create UCS Server Profileをクリックします。

CONFIGURE > Profiles				Q 🖬 300 🔺 251	9	1 95 33	۹. 😔	③ Jaime Islas Tolentino 岛
HyperFlex Cluster Profiles		UCS Server Profiles						Create UCS Server Profile
* All UCS Server Profiles ()								
0 0 0 4	Add Filter						0 items found 15	v perpage ≤ < 0 of0 > H
Name								
			~					



Server Profileに名前を付け、Target PlatformでStandalone Serverを選択して、Nextをクリックし





スタンドアロンサーバの割り当て

Server Assignment画面で、Standalone Serverを選択し、Nextをクリックします。



サーバ割り当て画面

次の5つのステップでは、要件に基づいてサーバポリシーを割り当てます。SummaryとDeployを クリックして終了します。

⊑ ¶	Progress			Step 7 Summary Verify details of the profile and t errors and deploy.	he policies, resolve		
Ŷ	Server Assignment						
φ	Compute Configuration	General					
9	Management Configuration	Organization Name Assigned Server	default Server_Profile_C-Sories C220 WZP34430N7K	Status Management IP	A Not Deployed		
ģ	Network Configuration	Target Platform	UCS Server (Standalone)				
7		Description Server Profile for Stand	alone Server				
		Compute Configuration	Management Configuration	Storage Configuration	Vetwork Configuration Erro		
		BIOS				.27-bios-policy 🗐	
	c Back						

サーバの概要の導入

Intersightは設定を検証し、正しければステータスを確認できます。



最終プロファイル

IntersightからUCSスタンドアロンサーバを管理できるようになりました。

翻訳について

シスコは世界中のユーザにそれぞれの言語でサポート コンテンツを提供するために、機械と人に よる翻訳を組み合わせて、本ドキュメントを翻訳しています。ただし、最高度の機械翻訳であっ ても、専門家による翻訳のような正確性は確保されません。シスコは、これら翻訳の正確性につ いて法的責任を負いません。原典である英語版(リンクからアクセス可能)もあわせて参照する ことを推奨します。