무선 액세스 포인트에서 QoS(Client Quality of Service) 전역 설정 활성화

목표

QoS(Quality of Service) 연결은 무선 및 이더넷 인터페이스의 특정 QoS 측면에 대한 추가 제 어 기능을 제공합니다.또한 개별 클라이언트가 보내고 받을 수 있는 대역폭의 양을 제어합니 다.클라이언트 QoS 전역 설정 페이지를 사용하여 WAP(무선 액세스 포인트)에서 QoS 기능을 활성화하거나 비활성화할 수 있습니다. 비활성화되면 속도 제한 및 DiffServ 구성이 전역적으 로 비활성화됩니다.활성화된 경우 특정 VAP(Virtual Access Point) 또는 이더넷에서 클라이언 트 QoS 모드를 활성화하거나 비활성화할 수도 있습니다.

이 문서에서는 무선 액세스 포인트에서 클라이언트 QoS 전역 설정을 활성화하는 방법을 보여 줍니다.

적용 가능한 디바이스

- WAP131
- WAP150
- WAP351
- WAP361
- WAP571
- WAP571E

소프트웨어 버전

- 1.0.1.7 WAP150, WAP361
- 1.0.2.8 WAP131, WAP351
- 1.0.0.17 WAP571, WAP571E

클라이언트 QoS 활성화

1단계. WAP571 또는 WAP571E를 사용하는 경우 웹 기반 유틸리티에 로그인하고 **클라이언 트 QoS > 전역 설정을** 선택합니다.

Getting Started
Run Setup Wizard
 Status and Statistics
 Administration
► LAN
 Wireless
 Spectrum Analyzer
 System Security
Client QoS
Client QoS Global Settings
Client Qo S Global Settings Class Map
Client QoS Global Settings Class Map Policy Map
Client QoS Global Settings Class Map Policy Map Client QoS Association
 Client Qo S Global Settings Class Map Policy Map Client QoS Association Client QoS Status
 Client QoS Global Settings Class Map Policy Map Client QoS Association Client QoS Status ACL
 Client QoS Global Settings Class Map Policy Map Client QoS Association Client QoS Status ACL SNMP
 Client Qo S Global Settings Class Map Policy Map Client QoS Association Client QoS Status ACL SNMP Captive Portal

WAP131, WAP150, WAP351 또는 WAP361을 사용하는 경우 웹 기반 유틸리티에 로그인하 고 Quality of Service > Global Settings를 선택합니다.

	Getting Started
	Run Setup Wizard
٠	Status and Statistics
۲	Administration
۲	LAN
•	Wireless
۲	System Security
Ŧ	Quality of Service
	state of the second sec
	Global Settings Class Map Policy Map QoS Association QoS Status
•	Global Settings Class Map Policy Map QoS Association QoS Status ACL
•	Global Settings Class Map Policy Map QoS Association QoS Status ACL SNMP
•	Global Settings Class Map Policy Map QoS Association QoS Status ACL SNMP Captive Portal

2단계. Enable **Client QoS** Mode 확인란을 선택합니다.



WAP131, WAP150, WAP351 또는 WAP361을 사용 중인 경우 Enable QoS Mode(QoS 모드 **활성화**) 확인란을 선택합니다.



3단계. **저장**을 클릭합니다.

Global Settings			
Client QoS Mode: 🕑	Enable		
Save			

이제 WAP에서 QoS 전역 설정을 성공적으로 활성화해야 합니다.