Instalar o SO do ISE em um dispositivo SNS usando o NFS

Contents

Introdução
Pré-requisitos
Requisitos
Componentes Utilizados
Configuração
Seção 1. Habilitando o servidor NFS no Ubuntu
Seção 2. Mapeamento do ISO para o dispositivo de inicialização no hardware
Seção 3. Instalação do ISE do hardware 37xx
Seção 4. Instalação do ISE do hardware 36xx
Seção 5: Desmontando a imagem ISO da caixa do CIMC (SNS 36xx e SNS 37xx)

Introdução

Este documento descreve as etapas para instalar o ISE em um dispositivo SNS usando o NFS em vez de uma unidade virtual KVM.

Pré-requisitos

- Servidor SNS
- ISO do Identity Services Engine (ISE)
- Servidor NFS (Network File System)

Requisitos

A Cisco recomenda que você tenha conhecimento básico do ISE e do SNS Cisco Integrated Management Controller (CIMC).

Componentes Utilizados

As informações neste documento são baseadas nestas versões de software e hardware:

- SNS-36xx
- SNS-37xx

As informações neste documento foram criadas a partir de dispositivos em um ambiente de laboratório específico. Todos os dispositivos utilizados neste documento foram iniciados com uma configuração (padrão) inicial. Se a rede estiver ativa, certifique-se de que você entenda o impacto potencial de qualquer comando.

Configuração

Seção 1. Habilitando o servidor NFS no Ubuntu

Etapa 1. Instale o servidor NFS no Ubuntu usando o comando sudo apt install nfs-kernel-server.

Etapa 2. Crie um diretório para o compartilhamento NFS com o comando sudo mkdir -p /mnt/nfs_share.

Etapa 3. Remova a restrição na pasta com sudo chown -R superadmin:admin_group /mnt/nfs_share/.

De acordo com o comando, superadmin se refere ao usuário e admin_group se refere ao grupo de usuários. Com isso, você pode restringir o usuário de acordo com a conta de usuário e o grupo de usuários.

Etapa 4. Forneça os privilégios de **Leitura e Gravação** para a pasta usando sudo chmod 327 /mnt/nfs_share. De acordo com chmod, o nome de pasta 327 dá permissão de gravação e execução (3) para o usuário, w (2) para o grupo e leitura, gravação e execução para os usuários.

Etapa 5. Conceder Acesso ao sistema cliente para a pasta NFS com sudo vim /etc/exports.

Após executar o comando, pressione I para inserir o caminho do arquivo e a sub-rede do cliente para acessar o compartilhamento NFS usando /mnt/nfs_share 192.168.146.0/24(rw,sync,nosubtree_check).

/mnt/nfs_share: a pasta NFS que foi criada no sistema

192.168.146.0/24: a sub-rede adicionada é a sub-rede do cliente que pode acessar o compartilhamento NFS

rw: permissão de leitura e gravação para a pasta

sync: permissão de gravação no disco rígido

no_subtree_check: Para ignorar a verificação de subárvore na pasta

Pressione esc e digite :wq para gravar e sair do arquivo /etc/exports.

Etapa 6. Exporte o diretório compartilhado NFS no sistema usando sudo exportfs -a.

Passo 7. Reinicie o serviço NFS no sistema para que as alterações tenham efeito usando sudo systemctl restart nfs-kernel-server.



Observação: certifique-se de que a porta NFS esteja aberta no sistema operacional e estabeleça comunicação entre o servidor NFS e o servidor ISE para evitar interrupções.

Seção 2. Mapeamento do ISO para o dispositivo de inicialização no hardware

Para baixar o ISO do ISE de Cisco.com, navegue até Downloads > Products > Security > Access Control and Policy > Identity Services Engine > Identity Services Engine Software, aqui.



Nota: verifique as notas de versão do hardware suportado antes de preparar a instalação do ISO no hardware.

Etapa 1. O servidor NFS deve ser mapeado para a caixa SNS para continuar a instalação. No CIMC, navegue até Compute > Remote Management > Virtual Media > Add New Mapping.

Add New Mapp	bing	⊗ ×	
)	
Volume	NFS	J	
Mount Type:	NFS]	d 0 / Total 0 🛛 4
Remote Share:	10.127.196.169:/NFS]	
 Remote File:	test.iso]	
Mount Optio	nolock	0	tatus
		neel	
	Save	ncei	
			-

No volume, o nome da Unidade é fornecido e o Tipo de Montagem deve ser escolhido como NFS.

Em Compartilhamento Remoto, insira o caminho do servidorIP:/File para buscar a imagem do servidor NFS. No Arquivo remoto, digite o nome do arquivo da imagem a ser carregada na caixa Hardware SNS.

Cos Remote Management Power Polices Pill Catalog Persistent Memory intual KVM Virtual Media Serial over LAN Serial over LAN v KVM Console Based vMedia Properties Enabled Active Sessions 1 Low Power USB Enabled Low Power USB Enabled ✓ Cisco IMC-Mapped vMedia Last Mapping Status Success Selected 0 / Total 1		Demate	de a conservation de la conserva	Devues Delision	DID Catalan	Demistrat Manua				
Initial KVM Virtual Media Serial over LAN v vKVM Console Based vMedia Properties Enabled Image: Console Based vMedia Active Sessions 1 Image: Console Based vMedia Image: Console Based vMedia Low Power USB Enabled Image: Console Based vMedia Image: Console Based vMedia Image: Console Based vMedia Cisco IMC-Mapped vMedia Image: Console Based vMedia Image: Console Based vMedia Image: Console Based vMedia Last Mapping Status Success Image: Console Based vMedia Image: Console Based vMedia Add New Mapping Properties Ummap Defete Image: Console Based vMedia Volume Mount Type Remote Share Remote File Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped	103	Remote	vianagement	Power Policies	PID Catalog	Persistent Memory	·			
<pre>vKVM Console Based vMedia Properties Enabled Ø Active Sessions 1 Low Power USB Enabled Ø Cisco IMC-Mapped vMedia Last Mapping Status Success urrent Mappings Volume Mount Type Remap Defete Volume Mount Type Remote Share Remote File Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped</pre>	Virtua	KVM Vi	rtual Media	Serial over LAN						
Enabled ✓ Active Sessions 1 Low Power USB Enabled Low Power USB Enabled ✓ * Cisco IMC-Mapped vMedia Last Mapping Status Success urrent Mappings Selected 0 / Total 1 🔅 × Add New Mapping Properties Unmap Properties Unmap Defete Volume Mount Type Remote Share Remote File Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped		VM Consol	lo Basad yMa	dia Proportion						
Enabled Active Sessions 1 Low Power USB Enabled Cisco IMC-Mapped vMedia Last Mapping Status Success vertile Add New Mapping Properties Ummap Delete Volume Mount Type Remote File Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped		CVIN CONSO	ie Daseu vivie							
Active Sessions 1 Low Power USB Enabled Image: Success * Cisco IMC-Mapped vMedia Last Mapping Status Success 'urrent Mappings Selected 0 / Total 1 Add New Mapping Properties Unmap Remote File Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped			Enable	d 🗹						
Low Power USB Enabled Image: Cisco IMC-Mapped vMedia Last Mapping Status Success Surrent Mappings Selected 0 / Total 1 ** * Add New Mapping Properties Unmap Properties Unmap Delete Volume Mount Type Remote File Status NFS nfs 10.127.196.169/NFS test.iso			Active Session	s 1						
▼ Cisco IMC-Mapped vMedia Last Mapping Status Success Surrent Mappings Selected 0 / Total 1 ↓ ↓ Add New Mapping Properties Unmap Delete Volume Mount Type Remote File Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped		Low Pov	wer USB Enable	d 🗹						
Last Mapping Status Success Surrent Mappings Selected 0 / Total 1 \$\$ * Add New Mapping Properties Unmap Remap Delete Volume Mount Type Remote File Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped	-	Cisco IMC N	Ioppod yMod	in .						
Last Mapping Status Selected 0 / Total 1 \$\$ * Add New Mapping Properties Ummap Delete Volume Mount Type Remote Share Remote File Mapping Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped		JISCO IMIC-IN	apped vived	ia.						
Selected 0 / Total 1 ** Add New Mapping Properties Unmap Delete Volume Mount Type Remote Share Remote File Mapping Status Image: Colspan="4">Colspan="4">Colspan="4">Colspan= 400 / Total 1 ** NFS nfs 10.127.196.169/NFS testiso OK Mapped		La	ast Mapping Stat	us Success						
Wirent Mappings Selected 0 / Total 1 K K Add New Mapping Properties Unmap Remap Delete Volume Mount Type Remote Share Remote File Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped										
Volume Mount Type Remote Share Remote File Status Mapping Status NFS nfs 10.127.196.169./NFS test.iso OK Mapped										
Volume Mount Type Remote Share Remote File Status Mapping Status NFS nfs 10.127.196.169/NFS test.iso OK Mapped	urre	nt Mapping	gs						Selected 0 / Tota	al1 ¦Çiv
NFS nfs 10.127.196.169./NFS test.iso OK Mapped	urre Ac	ent Mapping Id New Mappir	gs Propert	es Unmap	Remap Dele	te			Selected 0 / Tota	al1 ¦Çi v
	A	ent Mapping Id New Mappir Volume	gs Propert Mount Type	Remote Share	Remap Dele Remo	te Dite File	Status	м	Selected 0 / Tota	al1 ζ‡ v
	A	ent Mapping Id New Mappir Volume NFS	gS ng Propert Mount Type nfs	Remote Share	Remap Dele Remo	te ote File	Status OK	M	Selected 0 / Tota	al 1 🌣 🗸
		ent Mapping Id New Mappir Volume NFS	gs Propert Mount Type nfs	Remote Share	Remap Dele Remo IFS test.ise	te Dite File	Status OK	M	Selected 0 / Tota lapping Status apped	al 1 🖧 🗸
	A	nt Mapping d New Mappin Volume NFS	gS Propert Mount Type nfs	es Unmap Remote Share 10.127.196.169/N	Remap Dele Remo IFS test.is	ote File	Status OK	M	Selected 0 / Tota	al 1 🔅 🗸
		nt Mapping Id New Mappir Volume NFS	ng Propert	es Unmap Remote Share 10.127.196.169/N	Remap Dele Remo IFS test.iso	ote File	Status OK	M	Selected 0 / Tota	al 1 🔅 🗸
		nt Mapping Id New Mappir Volume NFS	ng Propert	es Unmap Remote Share 10.127.196.169/N	Remap Dele Remo	ote File	Status OK	M	Selected 0 / Tota	al 1 🌣 -
		nt Mapping d New Mappir Volume NFS	gs Properti Mount Type nfs	es Unmap Remote Share 10.127.196.169/N	Remap Dele Remo	te File 0	Status OK	M	Selected 0 / Tota	al1 ☆ -

Verifique o status da unidade mapeada para Êxito.

Etapa 2. Depois disso, a ordem de inicialização deve ser configurada para que o ISO do ISE possa ser inicializado a partir da caixa SNS.



Em seguida, clique na guia Advanced e escolha Add Virtual Media na lista de Add Boot Device List.

asic Advanced	vanced							
Add Boot Device	Advanced Boot C	order Config	guration				Selected 0 / To	tal 0 🔅 👻
Add Local HDD	Enable/Disable	Modify	Delete	Clone	Re-Apply	Move Up	Move Down	
Add SAN Boot	Name		Туре		Order	State		
Add ISCSI Boot Add USB Add Virtual Media Add PCHStorage Add UEFISHELL Add NVME Add Local CDD	No data available							

No campo Nome, você pode atualizar o nome de sua preferência. Você deve escolher CIMC Mapped DVD no subtipo e salvar as alterações.

UEFI VEFI (UEFI Secure Boot is enal	bled, disable it to modify Configured Boot Mode.)
Configure Boot Order	0 ×
Configured Boot Level: Advanced Basic Advanced	
Add Boot Device Advanced Boot Order (Configuration Selected 0 / Total 0 🔅 🗸
Add Local HDD Add Virtual Media	X
Add PXE Boot	
Add SAN Boot	me NFS
Add iSCSI Boot Sub Ty	PPE CIMC MAPPED DVD V
Add USB Sta	ate Enabled
Add Virtual Media Ord	der 1 (1 - 1)
Add PCHStorage	
Add UEFISHELL	Save Changes Cancel
Add NVME	
Add Local CDD	
Add HTTP Boot	
Add Embedded Storage	
	Save Changes Reset Values Close
	Configure Boot Order

O nome da mídia virtual é preenchido em Advanced na Configure Boot Order.

BIOS	Remote Management	Power	Policies	PID Catalog	Persis	tent Memory
Configu	re BIOS Configure Bo	oot Order	Config	ure BIOS Profile	Secu	re Boot Certificate Management
BIOS P	roperties					
	Runnir	ng Version	C220M6.	4.2.3c.0_ISE		
	UEFI Se	ecure Boot	\checkmark			
	Actual E	Boot Mode	Uefi			
	Configured E	Boot Mode	UEFI		V	(UEFI Secure Boot is enabled, disable it to modify Configured Boot Mode.)
	Last Configured Boot Ord	der Source	CIMCOn	eTimeBoot		
	Configured One time b	oot device				
▼ Co	onfigured Boot Devices				Save C	Actual Boot Devices
	Basic					UEFI: Cisco CIMC-Mapped vDVD2.00 (NFS)
-	Advanced					Cisco Identity Services Engine (NonPolicyTarget)
1 E	NFS					UEFI: Built-in EFI Shell (NonPolicyTarget)
						UEFI: HTTP IPv4 Cisco X550-TX 10 Gig LOM (NonPolicyTarget)
					h	UEFI: PXE IPv4 Cisco X550-TX 10 Gig LOM (NonPolicyTarget)
						UEFI: HTTP IPv6 Cisco X550-TX 10 Gig LOM (NonPolicyTarget)
					Ų	UEFI: HTTP IPv4 Cisco X550-TX 10 Gig LOM (NonPolicyTarget)
						UEFI: PXE IPv4 Cisco X550-TX 10 Gig LOM (NonPolicyTarget)
						UEFI: HTTP IPv6 Cisco X550-TX 10 Gig LOM (NonPolicyTarget)
						Configure Boot Order



Observação: o mapeamento da unidade de inicialização para 36xx e 37xx segue etapas semelhantes.

Seção 3. Instalação do ISE do hardware 37xx

Etapa 1. Inicie o console do teclado/vídeo/mouse (KVM) na caixa SNS clicando em Launch vKVM no canto superior direito da GUI do CIMC.

Server Properties Cisco Integrated Management Controller (Cisco IMC) Information Product Name: Bits Promotion: Diversity: Dive	/ Chassis / Sum	mary ★				Refresh Host Power	Launch vKVM Ping	CIMC Reboot Locator LED	00
Product Name: SNS-3715-69	Server Proper	ties	Cisco Integrated M	Management Controller (Cisco	IMC) Information				
Serial Number: IP address: PID: SNS-3715 4/9 MAC Address: MAC Address: Mac Add	Product Name:	SNS-3715-K9	Hostname:						
PD: SNS-3715-K9 UUD: Z26054B0-0FB1-4945969608000033248 Pirmware Versite: 4.3(3) BiOS Versite: C220M6.4.2.3.c., USE Current Time: Wed old: 25 01:04:23 2023 Description: Image: Wed old: 25 01:04:23 2023 UTC +0000 (Local) Asset Tag: Unincomn Chassis Status Power State: On Power State: On (%) Overall Server Utilization Power State: Cod Secure Utilization Power State: Cod Power State: Cod Overall Server State: Cod Overall Server State: Cod Overall Server State: Cod Overall Server State: Cod	Serial Number:		IP Address:						
UUDE: 72080480-0FB1-4945-9196-089000032A18 Firmware Version: 4.2(3g) BIOS Version: C220M6.4.2.3.c.0_JSE Current Time (UTC): Ved Od: 25 01:04:23 2023 Description: Asset Tag: Unknown UTC Select Timezone Chassis Status Power State: © On (5) Power State: © Ond (6) Power State	PID:	SNS-3715-K9	MAC Address:						
BIOS Version: c220M6.4.2.3e.0_ISE Current Time (UTC): Wed Oct 25 01:04:23 2023 Description: Local Time: Wed Oct 25 01:04:23 2023 UTC +0000 (Local) Asset Tag: Urknown Timezone: UTC Select Timezone Chassis Status On Server Utilization Power State: On (5) Power State: On (5) Overall Server State: On (5) Overall Server State: On (5) Power State: On (5) Overall State: Ocd Odd Odd Odd Odd Odd Odd Odd Odd Odd	UUID:	720B048D-0FB1-4945-9196-0B90C0332A18	Firmware Version:	4.2(3g)					
Description: Asset Tag: Unknown Chassis Status Power State: On Power State: Orreral Server Utilization Server Utilization Overal Status: Good Power Status: Power Status: <t< th=""><th>BIOS Version:</th><th>C220M6.4.2.3c.0_ISE</th><th>Current Time (UTC):</th><th>Wed Oct 25 01:04:23 2023</th><th></th><th></th><th></th><th></th><th></th></t<>	BIOS Version:	C220M6.4.2.3c.0_ISE	Current Time (UTC):	Wed Oct 25 01:04:23 2023					
Asset Tag: Unknown Timezone: UTC Select Timezone Chassis Status Power State: On Post Completion Status: Condition Coveral Status: Coveral Status: Coveral Status: Coveral Status:	Description:		Local Time:	Wed Oct 25 01:04:23 2023 UTC +0000 (Local)					
Chassis Status Server Utilization Power State: © On Post Completion Status: © Completion Status: Overall Server Status: © Codd Overall Status: © Good Power Status: © Good	Asset Tag:	Unknown	Timezone:	UTC	Select Timezone				
Temperature: © Coverall DIMM Status: © Coverall Common Status: © Codd 0 Power Supplies: © Codd 0 Fans: © Codd 0 Locator LED: © Off 00 Server	Power Post Completion : Overall Server :	r State: On Status: Completed Status: Good	(%) 90-		Overall Utilization (%)				
Overall DIMM Status: I Coold I O Ulikation (%) Power Supplies: I Coold I O Ulikation (%) Fans: I Coold I O Ulikation (%) Locator LED: Otr I O Ulikation (%) Overall Storage Status: I Coold I O Ulikation (%)	Tempe	rature: Good	80 -		Memory Utilization (%)				
Power Supplies: 2 Good 55 Fans: 2 Good 40 Locator LED: 0 Off 20 Overall Storage Status: 2 Good 10 Server	Overall DIMM :	Status: 🗹 Good	70 - 60 -		IO Utilization (%)				
Fans: Cood 40 Locator LED: Off 20 Overall Storage Status: Cood 40 Server	Power Su	pplies: 🗹 Good	50-						
Locator LED: Off 20 Overall Storage Status: Cood 10 Server		Fans: Good	40 -						
Overall Storage Status: Cood	Locate	r LED: Off	30 -						
	Overall Storage	Status: 🗹 Good	10						
			0	Server	-				

Etapa 2. O console KVM é iniciado em uma nova guia no navegador. No lado esquerdo da tela, clique em **Boot Device** (**Dispositivo de inicialização**) e escolha o nome da mídia virtual que você criou.



Depois de escolher a Virtual Media (Mídia virtual) no console KVM, um prompt é preenchido na tela. Clique em **confirmar** para continuar com a inicialização da caixa SNS a partir da imagem ISO do servidor NFS.

Boot Device

You are about to change the one-time boot device. The server will boot from the selected boot device only for the next server boot, without disrupting the currently configured boot order. Once the server boots from the one-time boot device, all its future reboots occur from the previously configured boot order. Are you sure you want to continue?



Etapa 3. Desligue e ligue a caixa SNS ou ligue o servidor SNS para inicializar o servidor a partir do ISO. Para ligar a caixa SNS ou desligar e ligar a caixa, navegue para **Power** no console **KVM**.

=	cisco vKVM	KVM Console SNS-3715-K9	WZP27110UYA		¢
53	Console				
íl.					
۲	View				
\$	Macros				
×	Tools				
Ċ	Power	Power On System			
\uparrow	Boot Device				
۵	Virtual Media				
Q	Chat				
			No Signal Reason: Host power is off		

Após o servidor concluir o processo de inicialização, você é direcionado para o menu de instalação do ISE. Escolha **Cisco ISE Installation** (Keyboard/Monitor) para continuar a instalação.



Seção 4. Instalação do ISE do hardware 36xx

No 36xx SNS Box, as etapas para iniciar a instalação do ISE são semelhantes, mas a GUI do console KVM do 36xx é diferente da do 37xx.

Etapa 1. Inicie o console KVM na caixa SNS clicando no Launch vKVM no canto superior direito da GUI do CIMC.

→E dualu Cisco					÷ 🗹 O	admin@10.142.188.102 - C220-V	WZP232111YZ 🌣
A / Chassis / Sum	imary ★				Refresh Host Power Launch v	KVM Ping CIMC Reboot Loc	cator LED 🚱 🚯
Server Proper	rties	Cisco Integrated M	Management Controller (Cisco	MC) Information			
Product Name:	SNS-3655-K9	Hostname:					
Serial Number:		IP Address:					
PID:	SNS-3655-K9	MAC Address:	2C:4F:52:95:3C:D8				
UUID:	61C0F227-2018-4B23-8F09-560D17F7B355	Firmware Version:	4.1(3d)				
BIOS Version:	C220M5.4.0.4q.0_ISE	Current Time (UTC):	Thu Oct 26 00:36:23 2023				
Description:		Local Time:	Thu Oct 26 00:36:23 2023 UTC +0000 (Local)				
Asset Tag:	Unknown	Timezone:	UTC	Select Timezone			
Powe Overall Server Tempi	r State: On Status: Good erature: Good	Overall Utilizat CPU Utilizat Memory Utilizat	tion (%): N/A tion (%): N/A				
Overall DIMM	Status: Scool	IO Utilizat	tion (%): N/A				
Power Su	ipplies: 🗹 Good						
	Fans: Good						
Locate	or LED: Off						
Overall Storage	Status: 🗹 Good						
						Save Changes	Reset Values

Etapa 2. O console KVM é exibido na nova janela do navegador. Clique em Boot Device e escolha o nome da mídia virtual que você criou.



Depois de escolher a Virtual Media (Mídia virtual) no console KVM, um prompt é preenchido na tela. Clique em **Confirmar** para continuar com a inicialização da caixa SNS a partir da imagem ISO do servidor NFS.

•••	C220-WZP232111YZ - vKVM Console	
▲ Not Secure https://	/html/kvmViewer.html	
A Not Secure https://	(html/kvmViewer.html) The following boot device will be used one time, on the next boot only: NFS OK Cancel	admin - C220-WZP232111YZ

Etapa 3. Desligue e ligue a caixa SNS ou ligue o servidor SNS para inicializar o servidor a partir do ISO. Para ligar a caixa SNS ou desligar e

religar a caixa, navegue para Power no console KVM.

C220-WZP232111YZ - vKVM Console										
A N	ot Seci	ure http	ps://		/html/kvn	nViewer.html				
uluu ciso	l; Ci	sco Int	tegra	ted M	anageme	nt Control	ler	admin - C220-WZP232111YZ 🔅		
File	View	Macros	Tools	Power	Boot Device	Virtual Media	Help	A I S		
				Power	r On System					
				Power						
				Reset						
				Power	r Cycle System	n (cold boot)				
							No Signal			

Após o servidor concluir o processo de inicialização, você é direcionado para o menu de instalação do ISE. Escolha **Cisco ISE Installation** (Keyboard/Monitor) para continuar a instalação.



Seção 5: Desmontando a imagem ISO da caixa do CIMC (SNS 36xx e SNS 37xx)

Etapa 1. No CIMC, navegue até BIOS > Configure Boot Order > Configure Boot Order. Consulte a próxima captura de tela para navegar para o local.



Etapa 2. Em seguida, clique na guia Advanced e escolha Add Virtual Media.

Configure Boot Order					0 ×
Configured Boot Level: Advance	ced				
Add Boot Device	Advanced Boot Orde	r Configuration		Selected 1 / Total 1	\$\$ v
Add Local HDD	Enable/Disable	odify Delete Clone	Re-Apply Mo	we Up Move Down	
Add PXE Boot					
Add SAN Boot	Name	Туре	Order Sta	te	
Add iSCSI Boot	V NFS	VMEDIA	1 Ena	bled	
Add USB					
Add Virtual Media					
Add PCHStorage					
Add UEFISHELL					
Add NVME					
Add Local CDD					
Add HTTP Boot					
Add Embedded Storage					
			5	Save Changes Reset Value	Close

Etapa 3. Escolha a Mídia virtual na lista e clique em Excluir na lista. Isso desmonta o ISO do CIMC.

Sobre esta tradução

A Cisco traduziu este documento com a ajuda de tecnologias de tradução automática e humana para oferecer conteúdo de suporte aos seus usuários no seu próprio idioma, independentemente da localização.

Observe que mesmo a melhor tradução automática não será tão precisa quanto as realizadas por um tradutor profissional.

A Cisco Systems, Inc. não se responsabiliza pela precisão destas traduções e recomenda que o documento original em inglês (link fornecido) seja sempre consultado.