使用Web用户界面进行Catalyst 1200和1300交换 机的零日设置

目标

本文的目的是使用Web用户界面(UI)完成Catalyst 1200或1300交换机的零日设置。

适用设备 | 软件版本

- Catalyst 1200 | 4.0.0.91(数据<u>手册</u>)
- Catalyst 1300 | 4.0.0.91(数据<u>手册</u>)

简介

您是否正在为中小型企业寻找经济实惠、易于部署的交换机?Cisco Catalyst 1200和 1300交换机适合提供高级交换功能、增强的安全性并可使用Cisco Business Dashboard或Cisco Business Mobile App轻松管理的账单。

有关Catalyst 1200和1300交换机的详细信息,请查看以下页面。

- 为什么升级到Cisco Catalyst 1200或1300系列交换机功能比较
- Cisco Catalyst 1200和1300系列交换机概览

您还可以参阅以下硬件安装指南开始使用。

- <u>Cisco Catalyst 1200硬件安装指南</u>
- Cisco Catalyst 1300硬件安装指南

让我们从使用Web UI进行Catalyst 1200或1300交换机的零日设置开始。

零日设置

第1步

通过输入用户名和密码登录交换机。由于它是新的开箱即用交换机,因此默认用户名和 密码为Cisco。单击登录。



登录后,系统将提示您设置新的用户名和密码。新用户名必须不是Cisco。在本示例中,它是admin。

device management.
d

步骤 3

您可以通过单击Suggested Password选项来使用该选项。它会给你一个强密码。单击 Copy to Clipboard,并将其粘贴到Password字段中。

Change Def	ault User		
For security reasons This will delete the d For password streng	, it is required to creat lefault user. th requirements, refer	e a new adm to the user ç	inistration user for device management. guide.
User Name:	admin Suggest Passw	I	(5/20 characters used)

或者,您也可以键入符合标准要求的密码。

- 不能使用Cisco或Cisco一词的变体。
- 公认用户名和密码不会被接受。
- 不能使用单词"password"或"Catalyst"。
- 不允许在行中使用三个以上的重复字符。例如,111不会被接受。
- 不允许在一行中使用两个以上的连续字符,如123。

在提供的字段中输入密码,再次输入密码并点击Apply。

Change Defau	lt User	2 Apply Cancel				
For security reasons, it is required to create a new administration user for device management. This will delete the default user. For password strength requirements, refer to the user guide.						
🗴 User Name:	admin	(5/20 characters used)				
	Suggest Password					
Password:	•••••	(10/64 characters used)				
Confirm Password:	•••••					
Password Strength Mete	r: Weak					

步骤 5

然后系统将提示您登录。输入在上一步中配置的用户名和密码,然后单击Log In。



Switch



初始配置选项

如果要设置静态IP地址而不是使用DHCP,请按照以下步骤操作。

第1步

导航至主菜单中的IPv4配置 > IPv4接口。



步骤 2

选择接口并单击edit。

IPv4 Interface							
IPv4 Routing: Stable							
IPv4 Interface Table							
+ 🖉 🖻							
	1	Interface	IP Address Type	IP Address	Mask	Status	
1	ſ	VLAN 1	DHCP	10.0.0.206	255.255.255.0	Valid	
)	Bluetooth	Static	172.16.1.100	255.255.255.0	Valid	

在Edit IP Interface窗口中,在IP Address type下选择Static IP Address,然后单击 Apply。

Edit IP Interface

Interface:	VLAN 1 ~		
IP Address Type:	Dynamic IP AddStatic IP Addres	aress	
IP Address:	10.0.0.206		
o Mask:	 Network Mask 	255.255.255.0	
	O Prefix Length		(Range: 8 - 30)
Renew IP Address Now:	Enable		
Auto Configuration via DHCP:	Enabled		
			2
			Apply Close

Х

如果要将此地址更改为新的地址,请点击加号图标以添加IP接口。

IPv4 Interface Table Image: Status Image: Status

步骤 5

选择IP Address Type作为Static,然后在提供的字段中输入您选择的IP Address,后跟 子网掩码。单击 Apply。

Add IP In	terface				Х
Interface:	O Port GE1	O LAG 1	• VLAN	1 ~	
IP Address Type:	Dynamic IP AddStatic IP Addres	lress			
IP Address:	172.16.1.32	2			
Mask:	Network Mask	255.255.255.0			
	O Prefix Length			(Range: 8 - 30)	



Note:

请务必记住,IP地址已更改。断开与当前Web浏览器会话的连接,并使用其他窗口登录。

步骤 6

系统将显示一个弹出窗口,其中显示一条警告,说明使用静态地址时将会删除DHCP地址,因为两者将位于同一VLAN和同一子网中。单击OK进行确认。

Confirm Interface Creation

A

This interface already has a dynamic IP address. Adding the static IP address will delete the dynamic IP address from this interface.

Do you want to continue?

Don't show me this again



Х

步骤 7

使用具有相同用户名和密码的新IP地址登录。



再次保存配置,以便IP地址保持不变,并且在重新启动时不更改。

CISCO C1300-8P-E-2G - switch525566	
Getting Started	

步骤 9

要添加默认网关的IP地址,请转到IPv4配置> IPv4静态路由。



单击加号图标,并输入Destination IP Prefix、subnet mask和Next Hop Router IP Address。单击 Apply。

IPv4	Static Routes					
IPv4	Static Routes Table					
Ŧ	I					
	Destination IP Prefix	Prefix Length	Route Type	Next Hop Router IP Address	Metric	Outgoing Interface
0 re	esults found.					

Note: 前缀为零的所有零表示它是最后选用路由。

步骤 11



输入服务器IP地址,然后单击Apply。

DNS Settings			2 Apply	Cancel
i Some configurati	ions made on this screen are on	ly available in advanced display mode.		
Server Definition:	By IP Address Disabled			
Server IP Address:	8.8.8.8	0		
Default Domain Name:		(0/158 characters used)		

结论

现在,您已设置为使用Web用户界面管理Catalyst 1200或1300交换机。

有关其他配置和功能,请参阅Catalyst系列管理指南。

观看与本文相关的视频...

点击此处查看思科的其他技术讲座

关于此翻译

思科采用人工翻译与机器翻译相结合的方式将此文档翻译成不同语言,希望全球的用户都能通过各 自的语言得到支持性的内容。

请注意:即使是最好的机器翻译,其准确度也不及专业翻译人员的水平。

Cisco Systems, Inc. 对于翻译的准确性不承担任何责任,并建议您总是参考英文原始文档(已提供 链接)。