SX500系列堆叠式交换机上的风暴控制配置

目标

当数据包泛洪LAN时,会发生流量风暴,这会导致大量流量并降低网络性能。当收到广播、组 播或未知单播帧时,它们会重复,并且副本会发送到多个或所有出口端口。这样,一个数据包 就变成了许多数据包,这可能导致流量风暴。

流量风暴控制使用配置的阈值检查传入流量级别,并在达到此阈值后端口丢弃流量。端口被阻 塞,直到流量级别降至阈值级别以下。之后,它再次正常转发。本文旨在说明在Sx500系列堆 叠式交换机上配置风暴控制的步骤。

适用设备

·Sx500系列堆叠式交换机

软件版本

•v1.2.7.76

风暴控制配置

步骤1.登录Web配置实用程序并选择Security > Storm Control。"风暴控制"页面打开:

Storm Control Table								
Filter: Interface Type equals to Port of Unit 1/2 Go								
	Entry No.	Port	Storm Control	Storm Control Rate Threshold (Kbits/sec.)	Storm Control Rate Threshold (%)	Storm Control Mode		
0	1	FE1	Disabled	10000	10.0	Broadcast Only		
\bigcirc	2	FE2	Disabled	10000	10.0	Broadcast Only		
\bigcirc	3	FE3	Disabled	10000	10.0	Broadcast Only		
\odot	4	FE4	Disabled	10000	10.0	Broadcast Only		
0	5	FE5	Disabled	10000	10.0	Broadcast Only		
\odot	6	FE6	Disabled	10000	10.0	Broadcast Only		
\bigcirc	7	FE7	Disabled	10000	10.0	Broadcast Only		
\odot	8	FE8	Disabled	10000	10.0	Broadcast Only		
0	9	FE9	Disabled	10000	10.0	Broadcast Only		
\bigcirc	10	FE10	Disabled	10000	10.0	Broadcast Only		
Copy Settings		Edit						

	Entry No.	Port	Storm Control	Storm Control Rate Threshold (Kbits/sec.)	Storm Control Rate Threshold (%)	Storm Control Mode
٥		FE1	Disabled	10000	10.0	Broadcast Only
0	2	FE2	Disabled	10000	10.0	Broadcast Only
0	3	FE3	Disabled	10000	10.0	Broadcast Only
0	4	FE4	Disabled	10000	10.0	Broadcast Only
0	5	FE5	Disabled	10000	10.0	Broadcast Only
0	6	FE6	Disabled	10000	10.0	Broadcast Only
0	7	FE7	Disabled	10000	10.0	Broadcast Only
0	8	FE8	Disabled	10000	10.0	Broadcast Only
0	9	FE9	Disabled	10000	10.0	Broadcast Only
\odot	10	FE10	Disabled	10000	10.0	Broadcast Only
	Copy Settings		Edit			

步骤2.单击端口并单击"编辑"。此时将显示"编辑风暴控制"页。

Interface:	Unit/Slot 1/2 - Port	FE1 💌	
Storm Control:	Enable		
Storm Control Rate Threshold:	10000	kbits/sec. (Range: 70 - 100000, Default: 10000)	
Storm Control Mode:	 Unknown Unicast, Multicast & Broadcast Multicast & Broadcast Broadcast Only 		
Apply Close			

步骤3.(可选)从接口右侧的下拉列表中选择端口以启用风暴控制。

步骤4.选中"风暴控制"右侧的**启用**,以启用风暴控制。

步骤5.在风暴控制率阈值字段中输入所需值。这是转发数据包的最大速率,单位为千位每秒。 此阈值的默认值是FE设备10,000,GE设备100,000。

步骤6.单击"风暴控制模式"字段中的单选按钮之一,以定义将哪些流量计入阈值。

·未知单播、组播和广播 — 广播、组播和未知单播流量计入带宽阈值。

·组播和广播 — 广播和组播流量计入带宽阈值。

·仅广播 — 仅广播流量计入带宽阈值。

步骤7.单击Apply,修改风暴控制并更新运行配置文件。