在SPA100系列上配置调配参数

目标

调配参数控制重新同步操作,固件升级除外。

本文档的目的是向您展示如何更改调配参数,以便在发生某些重新同步操作时进行调整。

适用设备

·SPA112 · SPA122

逐步程序

配置配置文件

Provisioning

Configuration Profile				
Provision Enable:	yes 🔻	Resync On Rese	y y	es 🔻
Resync Random Delay:	2	Resync At (HHm	n).	200
Resync At Random Delay: Resync Error Retry Delay:	600	Resync Periodic:		3600
	3600	Forced Resync D	elay:	4400
Resync From SIP:	yes 🔻	Resync After Up	grade Attempt: y	es 🔻
Resync Trigger 1:				
Resync Trigger 2:				
Resync Fails On FNF:	yes 🔻			
Profile Rule:	/spa\$PSN.cfg			
Profile Rule B:				
Profile Rule C:				
Profile Rule D:			_	
Profile Name:		Profile Region:		
Log Resync Request Msg:	SPN SMAC Requesting) resync \$SCHEME://\$SERVIP:\$PORT\$PATH		
Log Resync Success Msg:	SPN SMAC Successfu	I resync \$SCHEME://\$SERVIP:\$PORT\$PATH		
Log Resync Failure Msg:	\$PN \$MAC Resync fa	iled: \$ERR		
Report Rule:				
Firmware Upgrade				
Upgrade Enable:	yes 🔻			
Upgrade Error Retry Delay:	3600	Downgrade Rev	Limit:	
Upgrade Rule:				
Log Upgrade Request Msg:	SPN SMAC Requesting	upgrade \$SCHEME://\$SERVIP:\$PORT\$PATH		
Log Upgrade Success Msg:	\$PN \$MAC Successfu	II upgrade \$SCHEME://\$SERVIP:\$PORT\$PATH \$ERR		
Log Upgrade Failure Msg:	SPN SMAC Upgrade failed: SERR			
License Keys:				
Canada Dumana Damanata				
General Purpose Paramete	ers			
OPP R.				
OPP C:				
GPP C.				
GPP D.				
OPP E.				
GPP F.			_	
GPP G:			_	
GPP H:				
GPP I:				
GPP J:				
GPP K:				
GPP L:				
GPP M:				
GPP N:				
GPP O:				
GPP P:				
Submit Cancel	Refresh			

步骤1.从Phone Adapter Configuration Utility**中选择Voice > Provisioning。**这将打开"*调配*"窗口。

Configuration Profile			
Provision Enable:	yes 🔻	Resync On Reset:	yes 🔻
Resync Random Delay:	2	Resync At (HHmm):	
Resync At Random Delay:	600	Resync Periodic:	3600
Resync Error Retry Delay:	3600	Forced Resync Delay:	14400
Resync From SIP:	yes 🔻	Resync After Upgrade Attempt:	yes 🔻
Resync Trigger 1:			
Resync Trigger 2:			
Resync Fails On FNF:	yes 🔻		
Profile Rule:	/spa\$PSN.cfg		
Profile Rule B:			
Profile Rule C:			
Profile Rule D:			
Profile Name:		Profile Region:	

步骤2.从Provision Enable下拉列表中选择Yes。

步骤3.从"重置时重新同步"下拉列表中选择"是"。这会在每次重新启动后触发重新同步。

注意:参数更新或固件升级导致重新启动后,将不会触发重新同步。

步骤4.为"重新同步随机延迟"字段输入值。默认值为2。

注意:该字段以20秒为单位(即,默认值2表示40秒)

步骤5.为"重新同步定期"字段输入值。默认时间为 3600 秒钟。

注意:如果在"重新同步期间"*字段中输*入零,则会禁用定期重新同步。

步骤6.为Resync Error Retry Delay 字段输入值。默认时间为 3600 秒钟。

步骤7.为"强制重新同步延迟"字段输入值。默认值为 14,400 秒。

Configuration Profile			
Provision Enable:	yes 🔻	Resync On Reset:	yes 🔻
Resync Random Delay:	2	Resync At (HHmm):	
Resync At Random Delay:	600	Resync Periodic:	3600
Resync Error Retry Delay:	3600	Forced Resync Delay:	14400
Resync From SIP:	yes 🔻	Resync After Upgrade Attempt:	yes 🔻
Resync Trigger 1:			
Resync Trigger 2:			
Resync Fails On FNF:	yes 🔻		J
Profile Rule:	/spa\$PSN.cfg		
Profile Rule B:			
Profile Rule C:			
Profile Rule D:			
Profile Name:		Profile Region:	

步骤8.从"从SIP重新同步"下拉列表中选择"是"。

步骤9.要在所有固件升级尝试后触发重新同步,请启用升级尝试后重新同步

步骤10.为"重新同步触发器1"和"重新同步触发器2"字段输入值。

注意:当这两个参数中的逻辑方程求为TRUE时,将触发重新同步。

步骤11.从*Resync Fails on FNF*下拉列表中选择**Yes**,以在确定文件未找到的响应为失败的重 新同步尝试时激活错误重新同步计时器。

步骤12.单击"提交"按钮保存更改。

固件升级

步骤1.从Phone Adapter Configuration Utility**中选择Voice > Provisioning。**这将打开"*调配*"窗口。

Firmware Upgrade		
Upgrade Enable:	yes 🔻	
Upgrade Error Retry Delay:	3600	Downgrade Rev Limit:
Upgrade Rule:		
Log Upgrade Request Msg:	Isg: \$PN \$MAC Requesting upgrade \$SCHEME://\$SERVIP:\$PORT\$PATH	
Log Upgrade Success Msg:	\$PN \$MAC Successful upgrade \$SCH	EME://\$SERVIP:\$PORT\$PATH \$ERR
Log Upgrade Failure Msg:	SPN SMAC Upgrade failed: SERR	
License Keys:		

步骤2.要启用固件升级操作,请从Upgrade Enable下拉列表中选择Yes。

步骤3.在Upgrade Error Retry Delay字*段中输入值*,以在升级尝试失败时设置重试间隔。默认 值为 3600 秒。

步骤4.在Downgrade Rev Limit字*段中输入*值。在固件升级或降级期间,这会对可接受的版本 号实施下限。默认设置为空。

步骤5.在Upgrade Rule字段中输入值。此参数定义升级条件和关联的固件URL。

Firmware Upgrade		
Upgrade Enable:	yes 🔻	
Upgrade Error Retry Delay:	3600	Downgrade Rev Limit:
Upgrade Rule:		
Log Upgrade Request Msg:	\$PN \$MAC Requesting upgrade \$SCHEME://\$SERVIP:\$PORT\$PATH	
Log Upgrade Success Msg: Log Upgrade Failure Msg: License Keys:	\$PN \$MAC Successful upgrade \$SCH	ME://\$SERVIP:\$PORT\$PATH \$ERR
	SPN \$MAC Upgrade failed: \$ERR	

步骤6.为Log Upgrade Request Msg字*段输入*值。这是固件升级尝试开始时发出的系统日志消 息。

步骤7.为Log Upgrade Success Msg字*段输入*值。这是固件升级尝试成功完成后发出的系统日 志消息。

步骤8.为Log Upgrade Failure Msg*字段输入*值。这是固件升级尝试失败后发出的系统日志消 息。

步骤9.单击"提交"按钮保存更改。

通用参数

General Purpose Parameters		
GPP A:		
GPP B:		
GPP C:		
GPP D:		
GPP E:		
GPP F:		
GPP G:		
GPP H:		
GPP I:		
GPP J:		
GPP K:		
GPP L:		
GPP M:		
GPP N:		
GPP O:		
GPP P:		

步骤1.从Phone Adapter Configuration Utility**中选择Voice > Provisioning。**这将打开"*调配*"窗口。

注意:这些参数可用作调配和升级规则中的变量。通过在变量名称前加上"\$"字符(例如 \$GPP_A \$GPP_B)来引用它们。