# 解决无线速度问题

## 目录

 简介

 先决条件

 无线网络中的速度问题

 检查客户端设备

 WLC上的配置检查

 使用案例1.数据传输速度

 使用案例2.管制范围

 使用案例3.频段选择

 使用案例5.信道宽度

 使用案例6.Qos

# 简介

本文档介绍无线局域网(LAN)控制器(WLC)上的多个使用案例和配置,这些使用案例和配置有助于缓 解无线速度问题。

## 先决条件

Cisco建议您应具备WLC知识以及路由和交换基础知识。

## 无线网络中的速度问题

无线局域网(WLAN)速度问题可能由无线网络和客户端设备上的各种因素引起。要解决这些问题,需要同时检查网络和设备。

处理WLC时,您需要执行几项配置检查,以确保您的无线网络在速度和性能方面得到优化。以下是 在WLC和客户端上可以执行的一些检查:

## 检查客户端设备

在客户端计算机上检查的最重要的事情是信号强度:

1. 信号强度:检查客户端设备上的Wi-Fi信号强度。如果信号较弱,设备可能无法连接或速度必须较 慢。靠近无线接入点(AP)或Wi-Fi路由器,查看信号是否改善。

1.1. Windows计算机上的信号强度和SSID检查: 首先检查网络性能低下的客户端设备。确认客户端已连接到正确的无线网络并且信号很强。

C:\Users\ <b>each</b> netsh wl	an show interfaces
There is 1 interface on th	e system:
Name	: Wi-Fi
Description	: Intel(R) Wi-Fi 6 AX201 160MHz
GUID	: cef8e258-3571-4c7e-afec-a4fcb5b852d5
Physical address	: bc:6e:e2:b0:53:33
Interface type	: Primary
State	: connected
SSID	
BSSID	: 54:af:97:0a:be:8a
Network type	: Infrastructure
Radio type	: 802.11ac
Authentication	: WPA2-Personal
Cipher	: CCMP
Connection mode	: Profile
Band	: 5 GHz
Channel	: 36
Receive rate (Mbps)	: 702
Transmit rate (Mbps)	: 585
Signal	: 86%
Profile	

用于检验Windows PC上信号强度的命令

1.2. MacBook上的信号强度和SSID检查:

在Mac上,检查Wi-Fi信号强度是一键操作。单击顶部菜单栏中的Wi-Fi图标时,按住选项键。现在,您可以在下拉菜单中看到Wi-Fi信号强度(以dBm表示的RSSI值)以及其他网络相关信息。

# Known Networks



IP Address: 192.168.0.103

Router: 192.168.0.1

Security: WPA/WPA2 Personal

BSSID: ac:84:c6:f5:f8:4c

Channel: 1 (2.4 GHz, 20 MHz)

Country Code:

RSSI: -50 dBm

Noise: -95 dBm

Tx Rate: 144 Mbps

PHY Mode: 802.11n

MCS Index: 15

NSS: 2

MAC的信号强度

WLC上的配置检查

下面是一些由于WLC上的配置问题引起的与速度缓慢问题相关的使用案例:

使用案例1.数据传输速度

数据速率是指无线设备与网络通信的传输速度。这些数据速率通常以兆位每秒(Mbps)为测量单位 ,并且根据WLC支持的无线标准和技术而有所不同。 速度缓慢的一个主要原因是较低的数据速率状 态设置为"强制"和"支持"状态。

Cisco建议禁用无线网络的低数据速率,以提高性能和效率。这是因为客户端设备能够以更高的数据 速率连接,从而获得更快的速度和更好的性能。



注意:全面评估此更改对您的客户端设备的影响和兼容性至关重要。

1. 默认数据速率配置:

默认情况下,较低的数据速率设置为强制和支持的状态。

要查看无线控制器上特定无线电的参数集,请导航到控制器的GUI,选择WIRELESS选项卡,然后选择所需 无线电。

cisco	<u>M</u> ONITOR <u>W</u> LANS <u>C</u> ONTRO	ller w <u>i</u> reless <u>s</u> ecurity	m <u>a</u> nagement c <u>o</u> mmai	NDS HE <u>L</u> P
Wireless	802.11a Global Parameter	S		
Access Points     All APs     Radios	General		Data Rates**	
802.11a/n/ac/ax	802.11a Network Status	Enabled	6 Mbps	Mandatory 🗸
Dual-Band Radios	Beacon Period (millisecs)	100	9 Mbps	Supported 🗙
Dual-5G Radios Global Configuration	Fragmentation Threshold (bytes	) 2346	12 Mbps	Mandatory 🗸
Advanced	DTPC Support.	Enabled	18 Mbps	Supported ¥
Mesh	Maximum Allowed Clients	200	24 Mbps	Mandatory 🗙
AP Group NTP	RSSI Low Check	Enabled	36 Mbps	Supported ¥
▶ ATF	RSSI Threshold (-60 to -90 dBm)	-80	48 Mbps	Supported ¥
RF Profiles	802.11a Band Status		54 Mbps	Supported 🗸
FlexConnect Groups	Low Band	Enabled	CCX Location Measur	ement
FlexConnect ACLs	Mid Band	Enabled	Mode	Enabled
FlexConnect VLAN Templates	High Band	Enabled	TWT Configuration *	**
Network Lists	BSS Color Configuration **	**	Target Waketime	Enabled
<ul> <li>802.11a/n/ac/ax Network</li> </ul>	BSS Color	Enabled	Broadcast TWT Support	Enabled

5 Ghz无线电中的默认数据速率

ululu cisco	<u>M</u> ONITOR <u>W</u> LANS <u>C</u> ONTR	OLLER W <u>I</u> RELESS <u>S</u> E	CURITY M <u>A</u> NAGEM	ent c <u>o</u> mmands he <u>l</u> p	
Wireless	802.11b/g Global Parame	eters			
Access Points     All APs     Radios	General		Data Rat	tes**	1
802.11a/n/ac/ax	802.11b/g Network Status	Enabled	1 Mbps	Mandatory 🗸	
Dual-Band Radios	802.11g Support	Enabled	2 Mbps	Mandatory 🗸	
Dual-5G Radios Global Configuration	Beacon Period (millisecs)	100	5.5 Mbp	s Mandatory 💙	
Advanced	Short Preamble	Enabled	6 Mbps	Supported 💙	
Mesh	Fragmentation Threshold (bytes)	2346	9 Mbps	Supported 💙	
AP Group NTP	DTPC Support.	🗹 Enabled	11 Mbps	Mandatory 🛩	
ATF	Maximum Allowed Clients	200	12 Mbps	Supported 🗙	
RF Profiles	RSSI Low Check	Enabled	18 Mbps	Supported 🗙	
FlexConnect	RSSI Threshold (-60 to -90 dBm)	-80	24 Mbps	Supported 🗙	
Groups	COV Land No.		36 Mbps	Supported 🗸	
FlexConnect ACLs	CCX Location Measureme	nt	48 Mbps	Supported 💙	6. 8.
FlexConnect VLAN Templates	Mode	Enabled	54 Mbps	Supported ¥	2
Network Lists	BSS Color Configuration	***	TWT Cor	ifiguration ***	
<ul> <li>802.11a/n/ac/ax</li> <li>Network</li> <li>RRM</li> </ul>	BSS Color	Enabled	Target V Broadca	Vaketime st TWT Support	🗹 Enable

2.4 Ghz无线电中的默认数据速率

#### 修复程序:

您可以使用CLI或GUI禁用和启用所需的数据速率:

#### 1. 通过CLI对无线电802.11b执行的步骤:

config 802.11b disable network

- config 802.11b 11gSupport enable
- config 802.11b 11nSupport enable
- config 802.11b rate disabled 1
- config 802.11b rate disabled 2
- config 802.11b rate disabled 5.5
- config 802.11b rate disabled 11
- config 802.11b rate disabled 6
- config 802.11b rate disabled 9
- config 802.11b rate mandatory 12
- config 802.11b rate supported 18
- config 802.11b rate supported 24
- config 802.11b rate supported 36
- config 802.11b rate supported 48
- config 802.11b rate supported 54
- config 802.11b enable network

2. 通过GUI禁用/启用:

要更改无线控制器上无线网络的数据速率,请导航到控制器的GUI,选择Wireless 选项卡,然后选择802.11b/g/n/ax,选择Network 选项卡,最后选择所需的数据速率选项(禁用、支持或强制)。

3. 通过802.11a无线电CLI执行的步骤。

config 802.11a disable network config 802.11a 11nSupport enable config 802.11a 11acSupport enable config 802.11a rate disabled 6 config 802.11a rate disabled 9 config 802.11a rate disabled 12 config 802.11a rate disabled 18 config 802.11a rate mandatory 24 config 802.11a rate supported 36 config 802.11a rate supported 48 config 802.11a rate supported 54 4. 通过GUI禁用/启用:

要更改无线控制器上无线网络的数据速率,请导航到GUI of the controller,选择Wireless 选项卡,选择802.11a/n/ac/ax,选Network 中 选项卡,最后选择所需的数据速率选项(禁用、支持或强制)。

5. 岗位验证检查:

،،۱۱،،۱۱، cısco	<u>M</u> ONITOR <u>W</u> LANS <u>C</u> ONTR	OLLER WIRELESS	<u>s</u> ecurity	M <u>a</u> nagement c <u>o</u> mman	NDS HE <u>L</u> P	
Wireless	802.11b/g Global Parame	eters				
Access Points     All APs     Radios	General			Data Rates**		
802.11a/n/ac/ax	802.11b/g Network Status	C Enabled		1 Mbps	Disabled 🗸	0
Dual-Band Radios	802.11g Support	Enabled		2 Mbps	Disabled 🗸	0
Dual-5G Radios Global Configuration	Beacon Period (millisecs)	100		5.5 Mbps	Disabled 🗸	9
Advanced	Short Preamble	Enabled		6 Mbps	Disabled 🗸	3
Mesh	Fragmentation Threshold (bytes)	2346		9 Mbps	Disabled 🗸	0
AP Group NTP	DTPC Support.	Enabled		11 Mbps	Disabled 🗸	0
▶ ATF	Maximum Allowed Clients	200		12 Mbps	Mandatory 🗸	9
RF Profiles	RSSI Low Check	Enabled		18 Mbps	Supported ¥	9
FlexConnect	RSSI Threshold (-60 to -90 dBm)	-80		24 Mbps	Supported 🗸	0
Groups				36 Mbps	Supported 🗸	3
FlexConnect ACLs	CCX Location Measureme	nt		48 Mbps	Supported ¥	n I
FlexConnect VLAN Templates	Mode	Enabled		54 Mbps	Supported ¥	9
Network Lists	BSS Color Configuration '	***		TWT Configuration *	**	10.1
<ul> <li>802.11a/n/ac/ax</li> <li>Network</li> <li>PPM</li> </ul>	BSS Color	Enabled		Target Waketime		Enabled
RF Grouping				broaucast TWT Support		Enabled

建议无线电802.11的数据速率

،،ا،،،ا،، cısco	<u>M</u> onitor <u>W</u> lans <u>C</u> ontro	ller w <u>i</u> reless <u>s</u> ecurity	M <u>a</u> nagement c <u>o</u> mman	ids he <u>l</u> p
Wireless	802.11a Global Parameter	s		
Access Points     All APs     Radios	General		Data Rates**	
802.11a/n/ac/ax	802.11a Network Status	Enabled	6 Mbps	Disabled 🗸
802.11b/g/n/ax Dual-Band Radios	Beacon Period (millisecs)	100	9 Mbps	Disabled 🗸
Dual-5G Radios Global Configuration	Fragmentation Threshold (bytes	) 2346	12 Mbps	Disabled 🗸
Advanced	DTPC Support.	Enabled	18 Mbps	Disabled 🗸
Mesh	Maximum Allowed Clients	200	24 Mbps	Mandatory 🗸
AP Group NTP	RSSI Low Check	Enabled	36 Mbps	Supported ¥
▶ ATF	RSSI Threshold (-60 to -90 dBm)	-80	48 Mbps	Supported 🗸
RF Profiles	802.11a Band Status		54 Mbps	Supported ¥
FlexConnect Groups	Low Band	Enabled	CCX Location Measur	ement
FlexConnect ACLs	Mid Band	Enabled	Mode	Enabled
FlexConnect VLAN Templates	High Band	Enabled	TWT Configuration **	* *
Network Lists	BSS Color Configuration **	**	Target Waketime	C Enabled
<ul> <li>802.11a/n/ac/ax</li> <li>Network</li> </ul>	BSS Color	Enabled	Broadcast TWT Support	Enabled

建议无线电802.11的数据速率a

#### 使用案例2.管制范围

每个国家/地区都有自己的管理机构,负责监管无线频谱的使用,以避免干扰并确保高效的无线通信。

但是,也有一些管制范围相同的国家/地区经常共享与无线通信相关的类似规则和条例,包括频段、功率水平和其他参数。这种协调 使符合一个国家/地区法规的设备可以在同一个监管范围内的另一个国家/地区无缝运行。

如果监管域不受支持,则意味着特定无线设备或技术不符合特定国家或地区监管机构制定的规章制度。

在此场景中,必须确保控制器正确配置为处理不同管制域中的接入点。如果来自中国的接入点与印度的国家/地区代码映射不正确 ,则可能导致不合规问题,并且无线电插槽1会以"不支持"的监管域状态关闭。

如果您观察仅连接到802.11b (2.4 GHz)的站点上的用户,并且无线电1 (802.11a)的运行状态为inoperational,则可以检测到此类问题

以下是识别和解决因国家/地区代码映射不正确而导致问题的步骤:

1. 验证无线电插槽的状态:

访问Status部分并导航到此路径:检**Wireless > AP > <desired AP> > Interfaces**. 查"Regulatory Domain: Not Supported"(管制范围 :不支持)。

II APs > Detai	ils for .		_	TR . 8 1974										
General Cr	recentions	ntertaces	High Ava	mannity	Invento	ry Advanc	ea							
Ethernet Intern	aces													
CDP Contigue	ration													
Ethernet Int	terface#	CDP State												
0														
Interface		Operatio	nal Status	Tx Unicas	Packets	Rx Unicast Pa	ckets	Tx Non-Uni	icast Packets	RH N	on-Unicast Packets			
GigabitEthern	et0	UP		42901		1440660		49042		38713	117			
GioabitEtherm	at1	DOWN		429496729	3	0		э		0				
Radio Interface														
Number of Ra	dio Interfaces	2												
CDP Configur	ration													
Radio Slot#		COP State												
0														
1														
Radio Slot#	Radio Interfac	ce Type M	lodule Type	£			Sub Ba	bm	Admin Stat	4.6	Oper Status	CleanAir/SI Admin Status	CleanAir/SI Oper Status	<b>Regulatory Domai</b>
0	802.11b/g/n								Enable		DOWN	Enable	DOWN	Supported
1	802.11a/n/ac								Enable		DOWN	Enable	DOWN	Not Supported
AN Ports														

802.11a无线电由于接入点运营国家/地区的管制范围支持问题关闭

### 2. 确保管理员处于启用状态

cisco	<u>M</u> ONITOR <u>W</u> LANs	<u>C</u> ONTROLLER	WIRELESS	<u>s</u> ecurity	MANAGEMENT
Wireless	802.11a/n/ac/ax (	Cisco APs > C	onfigure		
<ul> <li>ACCESS POINTS</li> <li>All APs</li> <li>Radios</li> <li>802.11a/n/ac/ax</li> </ul>	General				
802.11b/g/n/ax Dual-Band Radios Dual-5G Radios Global Configuration	AP Name Admin Status		Enable 💙		
Advanced	Operational Sta	tus	DOWN		
Mesh	Slot #		1		

无线接入点的802.11a管理状态

3. 确保在Wireless > Country下启用接入点驻留位置的国家/地区代码(如图所示)。



控制器上启用的国家/地区代码列表

#### 修复程序:

1. 在接入点上映射所需的国家代码,以启动无线电1 (802.11a),如图所示。



选择运营接入点的国家/地区

2. 确保两个均已启用,且用户已连接到5 GHz(如图所示)。

General	Credentials	Interfaces	High A	vailability Inve	entory	Advanced	Intell	igent Capture				
Ethernet In	iterfaces											
CDP Con	figuration											
Etherno	et Interface#	CDP Stat	e									
0												
Interfa	ce	Operatio	nal Status	Tx Unicast Packets	Rx Unic	ast Packets	Tx Non-U	nicast Packets	Rx Non-Unicast Packet	s		
GigabitE	themet0	UP		84856797	261418	006	0		156158298			
Radio Inter	faces											
Number	of Radio Interfaces	3										
CDP Con	figuration											
		5775767755										
Radio S	lot#	CDP Stat	e									
0		<b>2</b>										
1		<b></b>										
2												
Radio Slot#	Radio Interf	ace Type M	odule Type			Sub Ba	nd	Admin Sta	tus Oper Status	CleanAir/SI Admin Status	CleanAir/SI Oper Status	Regulatory Domain
0	802.11b/g/n/	ax -				-		Enable	UP	Enable	UP	Supported
1	802.11a/n/ac	/ax -						Enable	UP	Enable	UP	Supported
2	802.11a/n/ac	/ax -				1.5.1		Disable	DOWN	NA	NA	Supported

确保AP管理状态为up且支持管制域

#### 使用案例3.频段选择

频段方向使能够执行双频(2.4和5 GHz)操作的客户端能够移至拥塞更少的5 GHz接入点。 它通过延迟2.4-GHz信道上的探测响应 ,使5 GHz信道对客户端更具吸引力,因此,客户端选择在5 GHz信道上连接。

建议:虽然此功能旨在帮助支持802.11n的双频客户端选择5GHz频段,但在启用语音的WLAN(使用对时间敏感的语音客户端)上必须谨慎使用,因为它可能会导致漫游延迟或呼叫掉线。



**注意**:在启用之前,请确保使用双频客户端在您的环境中对其进行彻底测试。

在WLAN上启用频段选择的步骤:

GUI:导航到WLAN > Advanced > Client Band Select并启用Band Select > Apply(如图所示)。

General Se	curity	QoS	Policy-Mapping	Advanced						
Allow AAA Ove	erride	🗹 Enab	led			DHCP				
Coverage Hole	Detection	🗹 Enab	led			DHCP Server	Override			
Enable Session	n Timeout	3600	00				_			
		Ses	sion Timeout (secs)			DHCP Addr. Assignment	Required			
Aironet IE		Enabl	ed			Management Frame Protection (MFP)				
Diagnostic Cha	annel 18	Enabl	ed							
Override Inter	face ACL	IPv4 No	one 🗸	None	~	MFP Client Protection 4	Disabled v			
Laver2 Acl		None	~	None		DTIM Period (in beacon i	ntervals)			
		N								
UKL ACL		None	<b>~</b>			802.11a/n (1 - 255)	1			
P2P Blocking A	Action	Disable	d v			802.11b/g/n (1 - 255)	1			
Client Exclusio	n <u>3</u>	Enabled	60			NAC				
			Timeout Value (secs	)		NAC State ISE NAC	~			
Maximum Allow 8	wed Clients	0				Load Balancing and Band	Select			
Static IP Tunne	eling 💶	Enabl	ed			Client Load Balancing				
Wi-Fi Direct Cl	ients Policy	Disable	d v			Client Band Select				

WLAN下的频段选择选项

WLANs > Edit

CLI :

(WLC) >config wlan band-select allow enable

使用案例4.802.11K

802.11k:802.11k或邻居列表功能向客户端提供所有邻居AP的列表。因此,客户端可以使用其RSSI值检查所有可用选项,并且可以做出明智的漫游决策。客户端通过邻居列表选择的AP上可获得更好的信号,从而获得更好的无线性能和速度。此选项适用于支持 802.11k的客户端。

启用邻居列表的步骤:

GUI:导航到WLAN > Advanced > Neighbor List并启用,如Apply 图所示。

<u>M</u> ONITOR	<u>W</u> LANs		WIRELESS	<u>S</u> ECURITY	M <u>A</u> NAGEMEI		
WLANs >	Edit 1						
	~						
General	Secur	ity QoS	Policy-Map	ping Adv	vanced		
Lync							
Lync S	erver	Disable	ed 🗸				
11k							
Neighb	or List			<ul> <li>Enabled</li> </ul>			
Neighb	or List Dual	Band		Enabled			
Assiste	d Roaming	Prediction Optim	ization	Enabled			
802.11ax	BSS Confi	guration					
Down I	Link MU-MIN	10		Enabled			
Up Link MU-MIMO 🗹 Enabled							
Down Link OFDMA 🗹 Enabled							
Up Linl	k ofdma			🔽 Enabled			

已启用邻居列表

CLI:

config wlan assisted-roaming neighbor-list {enable | disable} wlan-id

使用案例5.信道宽度

信道宽度是一个功能,通过该功能,您可以将两个、四个或更多信道合并为一个信道来提高吞吐量。例如:如果将两个信道合并为一 个信道,使客户端可以传递更多数据并提供更快的速度。

此功能专为5 GHz频段设计,因为5 GHz中有更多非重叠信道,可以组合这些信道以提供更快的无线速度。

默认情况下,信道宽度为20 MHz,您可以将其增加到40 MHz、80 MHz或160 MHz。如果合并两个信道,则整个非重叠信道会减少 。因此,如果地板上有大量无线接入点,在使用此功能时需要谨慎。

将信道宽度启用为40 MHz的步骤: GUI: MONITOR WLANS CONTROLLER WIRELESS SECURITY MANAGEMENT COMMANDS HELP 802.11a > RRM > Dynamic Channel Assignment (DCA)

## **Dynamic Channel Assignment Algorithm**

Channel Assignment Method	<ul> <li>Automatic</li> </ul>	Interval: 10 minutes v	AnchorTime: 0 🗸
	OFreeze	Invoke Channel Update	Once
	OOFF		
Avoid Foreign AP interference	🗸 Enabled		
Avoid Cisco AP load	Enabled		
Avoid non-802.11a noise	🗹 Enabled		
Avoid Persistent Non-WiFi Interference	e 🔽 Enabled		
Channel Assignment Leader	ors04-wl-wlc1 (10	.229.242.8)	
Last Auto Channel Assignment	190 secs ago		
DCA Channel Sensitivity	Medium v (15	5 dB)	
Channel Width	<b>○</b> 20 MHz	MHz 080 MHz 0160 MHz	○80+80 MHz ○Best
Avoid check for non-DFS channel	Enabled		
认信道宽度设置为20			

802.11a > RRM > Dynamic Channel Assignment (DCA)

## **Dynamic Channel Assignment Algorithm**

Channel Assignment Method	OAutomatic	Interval: 10 minutes v	AnchorTime: 0 v
	OFreeze	Invoke Channel Update	Once
	OFF		
Avoid Foreign AP interference	Enabled		
Avoid Cisco AP load	Enabled		
Avoid non-802.11a noise	Enabled		
Avoid Persistent Non-WiFi Interference	e 🔽 Enabled		
Channel Assignment Leader	ors04-wl-wlc1 (10	.229.242.8)	
Last Auto Channel Assignment	190 secs ago		
DCA Channel Sensitivity	Medium V (15	5 dB)	
Channel Width	020 MHz 🧿 40 M	MHZ 080 MHZ 0160 MHZ	○80+80 MHz ○Best
Avoid check for non-DFS channel	Enabled		

## **DCA Channel List**

CLI :

(WLC) >config 802.11a disable network y (WLC) >config advanced 802.11a channel dca chan-width-11n 40 (WLC) >config 802.11a enable network

#### 使用案例6.QoS

QoS或服务质量可用于根据WLAN要求确定流量的优先级。您可以配置语音流量WLAN以使用白金级QoS,分配低带宽WLAN以使用 铜级QoS,并在剩余的QoS级别之间分配所有其他流量。

在WLAN上配置白金级Qos的步骤:

GUI:导航到WLAN,选择WLAN ID > QoS,并将服务质量(QoS)设置为,如Platinum (voice)图所示。

MONITOR WLANS CONT	TROLLER W	IRELESS		ITY M <u>A</u> NAG	EMENT
WLANs > Edit					
General Security	QoS Po	olicy-Map	ping	Advanced	
Quality of Service (QoS) Application Visibility AVC Profile Flex AVC Profile Netflow Monitor	Platinum Enables AUTOQOS none v none	(voice) d S-AVC-PROF	V TILE V		
Fastlane	Enable	•			

QOS值设置为白金服务

CLI :

(WLC)> config wlan qos wlan\_id platinum

## 关于此翻译

思科采用人工翻译与机器翻译相结合的方式将此文档翻译成不同语言,希望全球的用户都能通过各 自的语言得到支持性的内容。

请注意:即使是最好的机器翻译,其准确度也不及专业翻译人员的水平。

Cisco Systems, Inc. 对于翻译的准确性不承担任何责任,并建议您总是参考英文原始文档(已提供 链接)。