使用SFTD/ASA和雲服務提供商配置eBGP HA

目錄

<u>簡介</u> <u>必要條件</u> <u>需求</u> 設定 程式 <u>ASA上的配置</u> <u>SFMC上的配置</u> <u>FDM上的配置</u> 驗證 相關資訊

簡介

本檔案介紹使用外部邊界路由通訊協定(eBGP)與雲服務供應商(CSP)建立連線的高可用性。

必要條件

需求

思科建議您瞭解以下主題:

• <u>BGP路徑選取</u>

設定

防火牆上有兩個eBGP對等點,可為雲服務提供商提供高可用性。由於CSP僅限於BGP操作,因此 無法從CSP端選擇主要和輔助對等體。



圖1.圖表

程式

步驟1。 在開始配置防火牆之前,請定義哪個對等體用作主對等體。

步驟2.對主要對等體中的傳入流量使用本地首選項150(預設本地首選項為100)。

步驟3.使用輔助對等體中的傳出流量前面的AS路徑。

ASA上的配置

主要對等體中的傳入流量的本地優先順序:

route-map primary_peer_in permit 10
set local-preference 150

router bgp 65521
address-family ipv4 unicast
neighbor 10.10.10.2 route-map primary_peer_in in

輔助對等體中的傳出流量前面的AS路徑:

route-map secondary_peer_out permit 10
set as-path prepend 65521 65521

router bgp 65521
address-family ipv4 unicast
neighbor 10.10.20.2 route-map secondary_peer_out out

SFMC上的配置

主要對等體中的傳入流量的本地優先順序:

步驟1。按一下Objects,然後按一下Route Map。

步驟2.選擇已分配給BGP對等體的路由對映,以應用本地首選項,或通過點選Add Route Map新增 新路由對映。

步驟3.配置路由對映的名稱,然後點選Entries部分下的Add。

Edit Route Map Object			0
Name			
Local_Preference_RM			
▼ Entries (0)			
			Add
Sequence No 🔺	Redistribution		
No records to display			
Allow Overrides			
		Cancel	Save
		Cancel	Save

圖2.在SFMC上新增路由對映

步驟4.至少配置下一個基本設定:

- 序號。選擇序號的編號。
- 再分發。選擇Allow。

Add Route Map Entry

Sequence No:				
10				
Redistribution:				
Allow	•			
Match Clauses	Set Clauses			
Security Zones	Address (0) Ne	xt Hop (0)	Route Source	(0)
IPv4	Select addresses to m	atch as accer	s list or prefix li	st addresses of route.
IPv6	Access List			
BGP	O Prefix List			
Others	Available Access Lists	11		
	Standard	*		
	Available Standard Ac	cess List C		Selected Standard Access List
	Q, Search			
			Add	

Cancel Add	Cancel

圖3.SFMC上的基本路由對映配置

步驟5. 按一下Set Clauses、BGP Clauses、Others。在Local Preference部分中設定本地首選項 150。

0

Sequence No:	
10	
Redistribution:	
Allow	*
Match Clauses	Set Clauses
Metric Values	AS Path Community List Others
BGP Clauses	Set Automatic Tag
	Local Preference : 150
	Set Weight :
	Range: 0-65535 Origin: Clocal IGP
	Incomplete
	IPv4 settings: Next Hop:
	· · · · · ·
	Specific IP :
	Use comma to separate multiple values Prefix List:
	✓
	IPv6 settings:
	· · · · · · · · · · · · · · · · · · ·
	Use comma to separate multiple values

Cancel	Add	

圖4.SFMC上的本地首選項配置

步驟6.按一下Add,然後Save。

步驟7. 按一下Device,然後按一下Device Management,選擇要應用本機優先順序的裝置。

步驟8.在BGP區段中按一下Routing ,然後按一下IPv4,然後按一下Neighbor。

0

步驟9.單擊主鄰居的編輯圖示,然後在Filtering Routes部分上,從Incoming traffic in the Route Map部分的下拉選單中選擇路由對映。

IP Address*		2	Enabled address	
10.10.10.2			Shutdown administratively	
Remote AS*			Configure graceful restart	
65000			Graceful restart(failover/spanned mode)	
(1-4294967295 or 1.0-6553	(5.65535)			
BFD Fallover		De	scription	
none	٠	1	rimary	
Filtering Routes Route	rs Tim	ers	Advanced Migration	
Incoming			Outgoing	
Access List			Access List	
	٠	+	• +	
Route Map			Route Map	
Local_Preference_RM		+	· · · +	
Prefix List		_	Prefix List	
	*	+	· +	
AS path filter			AS path filter	
	•	+	· +	
Limit the number of prefit	xes allowe	d fro	m the neighbor	
Maximum Prefixes*				
(1-2147483647)				
Threshold Level				
75		%		
Control prefixes received	from the	oeer		

圖5.在主對等體上配置本地首選項

步驟11。按一下OK,然後Save。

輔助對等體中的傳出流量前面的AS路徑:

步驟1。按一下Objects,然後按一下Route Map。

步驟2.選擇已分配給BGP對等體的路由對映,以應用預置的AS路徑,或通過點選Add Route Map新 增新路由對映。

步驟3.配置路由對映的名稱,然後點選Entries部分下的Add。

Name		
AS_Path_Prepend_RM		
▼ Entries (0)		
		Add
Sequence No 🔺	Redistribution	
No records to display		
Allow Overrides		
	Cance	l Save
圖6.在SFMC上新增路由對映		

0

步驟4.至少配置下一個基本設定:

- 序號。選擇序號的編號
- 再分發。選擇Allow

Add Route Map Entry

Sequence No:			
10			
Redistribution:			
C Allow			
Match Clauses	Set Clauses		
Security Zones	Address (0) Next H	op (0) Route Sour	rce (0)
IPv4	Select addresses to match	as access list or prefit	x list addresses of route.
IPv6	Access List		
BGP	O Prefix List		
Others	Available Access Lists :		
	Standard	•	
	Available Standard Access	List C	Selected Standard Access List
	Q, Search		
		Add	1
			·

Gancel Add	
	Cancel

圖7.SFMC上的基本路由對映配置

步驟5. 按一下Set Clauses、BGP Clauses、AS Path。根據以下內容配置預置選項:

• 預置AS路徑。將要新增的AS新增到以逗號分隔的路徑中。

0

Add	Route	Map	Entry
-----	-------	-----	-------

Sequence No:				
10				
Redistribution:				
C Allow	•			
Match Clauses	Set Clauses			
Metric Values	AS Path	Community List	Others	
BGP Clauses	Select AS Pa Prepend AS	ath options: Path :		
	65521,655	i21		
	Prepend last	AS to the AS Path:	15	
	Convert	Route Tag into AS P	ath	
				Cancel Add

圖8.SFMC上的AS路徑預置配置

步驟6.按一下Add,然後Save。

步驟7. 按一下Device, 然後Device Management, 選擇要應用AS路徑前置的裝置。

步驟8.在BGP區段中按一下Routing,然後按一下IPv4,然後按一下Neighbor。

步驟9.單擊輔助鄰居的編輯圖示,然後在Filtering Routes部分,從Outgoing traffic in the Route Map部分的下拉選單中選擇路由對映。

Address*	Enabled address	
10.10.20.2		
10.10.20.2	Shutdown administratively	
emote AS*	Configure graceful restart	
65000	Graceful restart(failover/spanned mode)	
-4294967295 or 1.0-65535.65535	0	
FD Fallover	Description	
none v	Secondary	
Filtering Routes Ti	mers Advanced Migration	
coming	Outgoing	
ccess List	Access List	
*	+ + +	
oute Map	Route Map	
•	+ AS_Path_Perepend_RM +	
refix List	Prefix List	
*	+ + +	
S path filter	AS path filter	
	+ + +	
Limit the number of prefixes allow	ved from the neighbor	
aximum Prefixes*		
-2147483647)		
hreshold Level		
75	%	
Control prefixes received from the	e peer	

圖9.在輔助對等體上配置AS路徑

步驟4.按一下OK,然後Save。

FDM上的配置

輔助對等體中的傳出流量前面的AS路徑:

步驟1。按一下Device,然後在Advanced Configuration部分中按一下View Configuration。

步驟2.在Smart CLI部分單擊Objects,然後點選(+)按鈕。

步驟3.按如下所示配置CLI對象:

Edit Smart CLI Object			0	×
Name		Description		
AS_Path_Prepend_RM				
CLI Template				
Route Map	~			
Template		Show disabled	0.1	Reset
O 1 route-map AS_Path_Prepend_RM				
O 2 permit v 10				
⊙ 3 configure bgp-set-clause v				
⊙ 4 configure set as-path properties -				
S set as-path prepend 65521 65521				
				_

圖10.在FDM上配置AS路徑預掛對象

步驟10.按一下OK。

主要對等體中的傳入流量的本地優先順序:

步驟1。按一下Device,然後在Advanced Configuration部分中按一下View Configuration。

步驟2.在Smart CLI部分單擊Objects,然後點選(+)按鈕。

步驟3.按如下所示配置CLI對象:

Edit Smart CLI Object				0 ×
Name	De	escription		
Local_Preference_RM				
CLI Template				
Route Map	~			
Template			Show disable	d 🔷 Reset
<pre>O 1 route-map Local_Preference_RM O 2 permit + 10</pre>				
 ⊙ 3 configure bgp-set-clause → ⊙ 4 set local-preference 150 				
			CANCEL	OK

圖11.在FDM上配置本地首選項對象

步驟4.按一下OK。

將路由對映配置到BGP配置:

步驟1. 按一下Device,然後按一下「Routing」部分中的View Configuration。

步驟2. 按一下BGP,然後按一下新BGP對等體的(+)按鈕,或按一下現有BGP對等體的「編輯」按 鈕。

步驟3. 設定BGP對象,如下所示:

Edit BGP Object	0 ×					
Name	Description					
Primary_Peer	Primary					
Template	Show disabled Reset					
○ 1 router bgp 65521						
○ 2 configure address-family ipv4 ~	configure address-family ipv4~					
3 address-family ipv4 unicast	address-family ipv4 unicast					
 4 configure address-family ipv4 get 	configure address-family ipv4 general -					
5 distance bgp 20 200 200	distance bgp 20 200 200					
⊙ 6 configure neighbor 10.10.10.2 r	configure neighbor 10.10.10.2 remote-as 65000 properties -					
O 7 neighbor 10.10.10.2 remote-as	neighbor 10.10.10.2 remote-as 65000					
⊙ s configure neighbor 10.10.10.2	configure neighbor 10.10.10.2 activate properties -					
⊙ 9 neighbor 10.10.10.2 activat	neighbor 10.10.10.2 activate					
••• 🗇 10 configure neighbor 10.10.10.	configure neighbor 10.10.10.2 activate filtering ~					
⊙ 11 neighbor 10.10.10.2 route	neighbor 10.10.10.2 route-map Local_Preference_RM ~ in ~					
⊙ 12 configure neighbor 10.10.20.2 r	configure neighbor 10.10.20.2 remote-as 65000 properties ~					
○ 13 neighbor 10.10.20.2 remote-as	neighbor 10.10.20.2 remote-as 65000					
○ 14 configure neighbor 10.10.20.2	configure neighbor 10.10.20.2 activate properties -					
○ 15 neighbor 10.10.20.2 activat	neighbor 10.10.20.2 activate					
○ 16 configure neighbor 10.10.20.	configure neighbor 10.10.20.2 activate filtering ~					
○ 17 neighbor 10.10.20.2 route-map AS_Path_Prepend_RM v out v						

CANCEL

ок

圖12.在FDM上配置BGP對等體

步驟4.按一下OK。



驗證AS路徑預置和本地首選項已配置並分配給對等體:

>

system support diagnostic-cli

Attaching to Diagnostic CLI ... Press 'Ctrl+a then d' to detach. Type help or '?' for a list of available commands. firepower>

enable

Password: firepower# firepower#

show route-map Local_Preference_RM

route-map Local_Preference_RM, permit, sequence 10
Match clauses:

Set clauses:

local-preference 150

firepower#

```
show route-map AS_Path_Perepend_RM
```

```
route-map AS_Path_Perepend_RM, permit, sequence 10
Match clauses:
```

Set clauses:

as-path prepend 65521 65521

firepower#

show running-config router bgp

```
router bgp 65521
bgp log-neighbor-changes
bgp router-id 10.10.10.10
bgp router-id vrf auto-assign
address-family ipv4 unicast
neighbor 10.10.10.2 remote-as 65000
neighbor 10.10.10.2 description Primary
neighbor 10.10.10.2 transport path-mtu-discovery disable
neighbor 10.10.10.2 activate
neighbor 10.10.10.2
```

```
route-map Local_Preference_RM in
```

neighbor 10.10.20.2 remote-as 65000 neighbor 10.10.20.2 description Secondary neighbor 10.10.20.2 transport path-mtu-discovery disable neighbor 10.10.20.2 activate
neighbor 10.10.20.2

route-map AS_Path_Perepend_RM out

redistribute connected no auto-summary no synchronization exit-address-family

在驗證路由表之前,請清除BGP對等體:

clear bgp 10.10.10.2 soft in clear bgp 10.10.20.2 soft out

注意:使用soft命令可避免重置整個對等體,而是僅重新傳送路由更新。

使用先前設定的本地首選項驗證主對等體上的傳出流量:

<#root>

```
firepower# show bgp
BGP table version is 76, local router ID is10.10.10.10
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale, m multipath
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network
                   Next Hop
                                   Metric
LocPrf
Weight Path
                                                    0 65000 ?
* 10.0.4.0/22
                   10.10.20.2
                                        0
*>
10.10.10.2
           0
150
     0 65000 ?
*
  10.2.4.0/24
                   10.10.20.2
                                         0
                                                       0 65000 ?
*>
10.10.10.2
           0
150
     0 65000 ?
```

驗證路由表中安裝的BGP字首是否來自主要對等體:

<#root>

firepower#

show route

```
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2, V - VPN
i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
ia - IS-IS inter area, * - candidate default, U - per-user static route
o - ODR, P - periodic downloaded static route, + - replicated route
SI - Static InterVRF
Gateway of last resort is not set
```

```
в
```

10.0.4.0 255.255.252.0

[20/0] via

10.10.10.2

, 01:04:17

в

10.2.4.0 255.255.255.0

[20/0] via

10.10.10.2

, 01:04:17

相關資訊

• <u>思科技術支援與下載</u>

關於此翻譯

思科已使用電腦和人工技術翻譯本文件,讓全世界的使用者能夠以自己的語言理解支援內容。請注 意,即使是最佳機器翻譯,也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準 確度概不負責,並建議一律查看原始英文文件(提供連結)。