

對PIM模組上的蜂窩網介面執行預檢查

目錄

[簡介](#)

[必要條件](#)

[需求](#)

[採用元件](#)

[疑難排解](#)

[裝置未連線到5G頻段](#)

[確認裝置的蜂窩介面未分配IP地址](#)

[確認裝置檢測到SIM](#)

[確認裝置主動使用所需的SIM](#)

[驗證是否已更新數據機韌體並填充SIM卡資訊](#)

[檢查單選值](#)

[有效無線電範圍](#)

[確認PS狀態是否已連線](#)

[檢查配置檔案配置，並且正在使用正確的APN](#)

[確認檢測到的網路、MCC和MNC值正確](#)

[強制更改以更正MCC和MNC值](#)

[檢查可用的PLMN](#)

[相關資訊](#)

簡介

本文檔介紹在部署PIM模組時如何對其進行預檢查，以及確認為蜂窩介面分配了IP地址。

必要條件

需求

思科建議您瞭解以下主題的基本知識：

- 5G蜂窩網路基礎知識
- 思科P-5GS6-GL模組
- Cisco IOS® XE和Cisco IOS® CG

採用元件

本文中的資訊係根據以下軟體和硬體版本：

- 思科C8300，採用Cisco IOS® XE版本17.06.03a，並插入P-5GS6-GL模組。

這適用於在SD-WAN中以控制器模式連線到路由器的P-5GS6-GL模組。

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除 (預設) 的組態來啟動。如果您的網路運作中，請確保您瞭解任何指令可能造成的影響。

疑難排解

裝置未連線到5G頻段

1. 確保為運營商啟用所獲取的5G頻段網路計畫。
2. 與運營商確認有關5G裝置所在區域的5G覆蓋區域。

確認裝置的蜂窩介面未分配IP地址

```
<#root>
```

```
ISR#sh ip int brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
GigabitEthernet0/0/0	172.16.173.10	YES	other	up	up
GigabitEthernet0/0/1	unassigned	YES	unset	up	up
Gi0/0/1.2989	10.10.22.74	YES	other	up	up
GigabitEthernet0/0/2	unassigned	YES	unset	down	down
GigabitEthernet0/0/3	10.244.182.1	YES	other	up	up
GigabitEthernet0/0/4	unassigned	YES	unset	down	down
GigabitEthernet0/0/5	unassigned	YES	unset	down	down
Cellular0/2/0	unassigned	YES	IPCP	up up	Cellular0/2/1 unassigned YES IPCP administratively down down
Sdwan-system-intf	10.244.182.1	YES	unset	up	up
Loopback65528	192.168.1.1	YES	other	up	up
NVI0	unassigned	YES	unset	up	up
Tunnel0	172.16.173.138	YES	TFTP	up	up
Tunnel2989001	10.10.22.74	YES	TFTP	up	up

確認裝置檢測到SIM

```
<#root>
```

```
ISR#sh controllers cellular 0/X/0 details
```

```
Cellular Dual SIM details:
```

```
-----
```

```
SIM 0 is present
```

```
SIM 1 is not present
```

```
SIM 0 is active SIM
```

<#root>

```
ISR#sh cellular 0/X/0 security
```

```
Active SIM = 0
```

```
SIM switchover attempts = 0
```

```
Card Holder Verification (CHV1) = Disabled
```

```
SIM Status = OK
```

```
SIM User Operation Required = None
```

```
Number of CHV1 Retries remaining = 3
```

確認裝置主動使用所需的SIM

<#root>

```
ISR#sh controllers cellular 0/2/0 details
```

```
Cellular Dual SIM details:
```

```
-----
```

```
SIM 0 is present
```

```
SIM 1 is not present
```

```
SIM 0 is active SIM
```

驗證是否已更新數據機韌體並填充SIM卡資訊

如果未填充SIM卡資訊，請確保已插入SIM卡且沒有故障：

<#root>

```
isr#show cellular 0/X/0 all
```

```
Hardware Information
```

```
=====
```

```
Modem Firmware Version = MOH.020202
```

```
Host Firmware Version = AOH.000292
```

```
Device Model ID = FN980
```

```
International Mobile Subscriber Identity (IMSI) = XXXXXXXXXXXXXXXXX
```

```
International Mobile Equipment Identity (IMEI) = XXXXXXXXXXXXXXXXX
```

```
Integrated Circuit Card ID (ICCID) = XXXXXXXXXXXXXXXXX
```

```
Mobile Subscriber Integrated Services
```

```
Digital Network-Number (MSISDN) = XXXXXXXXX
```

```
*
```

```
*
```

檢查單選值

如果無線電值超出有效範圍，請確保所有天線均已連線且無故障。

有效無線電範圍

RSSI: 「良好」值大於-80 dBm (例如79大於-80)

RSRP: 「良好」值大於-105 dBm (例如-104大於-105)

RSRQ: 「良好」值大於-12 dBm (例如11大於-12)

SNR: 「良好」值大於5 dBm (6大於5)

RSSI = -128 dBm通常表示數據機已關閉或天線未連線。完全沒有無線電訊號。

```
<#root>
```

```
Isr#sh cellular 0/2/0 radio
```

```
*
```

```
Current RSSI = -65 dBm
```

```
Current RSRP = -94 dBm
```

```
Current RSRQ = -12 dB
```

```
Current SNR = 8.4 dB
```

```
*
```

```
*
```

確認PS狀態是否已連線

如果未連線PS狀態，請確保使用正確的APN並在運營商端進行調配：

```
<#root>
```

```
isr#sh cellular 0/2/0 network
```

```
Current System Time = Sun Jan 6 3:11:7 1980
```

```
Current Service Status = No service
```

```
Current Service = Unknown
```

```
Current Roaming Status = Home
```

```
Network Selection Mode = Automatic
```

```
Network = 420 212
```

```
Mobile Country Code (MCC) = 420
```

Mobile Network Code (MNC) = 4

Packet switch domain(P.S) state = Not attached

Registration state(EMM) = Searching/Not Registered

EMM Sub State = No IMSI

Tracking Area Code (TAC) = 0

Cell ID = 0

Network MTU = Not Available

檢查配置檔案配置，並且正在使用正確的APN

<#root>

isr#show cellular 0/x/0 profile

Profile password Encryption level = 7

Profile 1 = INACTIVE* **

PDP Type = IPv4

Access Point Name (APN) = SAMIS.M2M

Authentication = None

Profile 2 = INACTIVE

PDP Type = IPv4v6

Access Point Name (APN) = ims

Authentication = None

Profile 5 = INACTIVE

PDP Type = IPv4

Access Point Name (APN) = SAMIS.M2M

Authentication = None

* - Default profile

** - LTE attach profile

Configured default profile for active SIM 0 is profile 1.

確認檢測到的網路、MCC和MNC值正確

<#root>

```
isr#sh cellular 0/2/0 network
Current System Time = Sun Jan 6 3:11:7 1980
Current Service Status = No service
Current Service = Unknown
Current Roaming Status = Home
Network Selection Mode = Automatic
```

Network = 420 212

Mobile Country Code (MCC) = 420

Mobile Network Code (MNC) = 4

```
Packet switch domain(P.S) state = Not attached
Registration state(EMM) = Searching/Not Registered
EMM Sub State = No IMSI
Tracking Area Code (TAC) = 0
Cell ID = 0
```

Network MTU = Not Available

如果顯示的值不正確，請使用<https://www.mcc-mnc.com/>確認：

Show 25 entries Search: 420

MCC	MNC	ISO	Country	Country Code	Network
230	210	cz	Czech Republic	420	Tesco Mobile
230	210	cz	Czech Republic	420	TOPtelek
230	210	cz	Czech Republic	420	TT Quality
230	210	cz	Czech Republic	420	Uniphone
230	09	cz	Czech Republic	420	Uniphone
230	03	cz	Czech Republic	420	Vodafone
420	210	sa	Saudi Arabia	966	Fixed Calls
420	999	sa	Saudi Arabia	966	Fix Line
420	06	sa	Saudi Arabia	966	Lebara Mobile
420	03	sa	Saudi Arabia	966	Mobily
420	210	sa	Saudi Arabia	966	Red Bull MOBILE
420	210	sa	Saudi Arabia	966	Salam
420	01	sa	Saudi Arabia	966	STC / Al Jawal
420	05	sa	Saudi Arabia	966	Virgin Mobile
420	04	sa	Saudi Arabia	966	Zain

Showing 26 to 40 of 40 entries (filtered from 3,115 total entries)

強制更改以更正MCC和MNC值

1.關閉手機網路介面：

```
conf t
int cellular 0/X/0
shut
```

2.執行PLMN搜尋，這會強制數據機搜尋區域中的可用網路：

```
cellular 0/X/0 lte plmn search //This command is entered in PRIV mode, no config mode.
```

3.完成PLMN搜尋後，請參閱具有以下內容的可用網路：

```
show cellular 0/X/0 network
```

4.選擇所需網路，其方式為：

```
cellular 0/X/0 lte plmn select manual MCC MNC INDX RAT //Enter the desired MCC,MNC,INDX and RAT from
```

5.要強制選擇所需的網路：

```
cellular 0/X/0 lte plmn select force MCC MNC INDX RAT //Enter the desired MCC,MNC,INDX and RAT from
```

檢查可用的PLMN

```
<#root>
```

```
isr#sh cellular 0/2/0 network
Current System Time = Tue Jan 8 23:43:48 1980
Current Service Status = No service
Current Service = Unknown
Current Roaming Status = Roaming
Network Selection Mode = Automatic
Network = Zain KSA
Mobile Country Code (MCC) = 420
Mobile Network Code (MNC) = 4
Packet switch domain(PS) state = Not attached
Registration state(EMM) = Not registered
EMM Sub State = Attach needed
Tracking Area Code (TAC) = 0
Cell ID = 0

Available PLMNs at = 11:31:30 AST Thu Nov 21 2024
```

Idx	MCC	MNC	RAT	Desc
1	420	1	lte	stc
2	420	3	lte	Mobily
3	420	4	lte	Zain KSA

相關資訊

- [硬體安裝指南](#)
- [PIM軟體配置指南](#)
- [數據機韌體升級指南 \(CG和PIM\)](#)

關於此翻譯

思科已使用電腦和人工技術翻譯本文件，讓全世界的使用者能夠以自己的語言理解支援內容。請注意，即使是最佳機器翻譯，也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準確度概不負責，並建議一律查看原始英文文件（提供連結）。