示例配置:執行CatOS的Catalyst交換器之間的 EtherChannel

目錄

簡介 必要條件 需求 採用元件 慣例 背景理論 設定 網路圖表 組態 驗證 show命令 show命令輸出示例 Catalyst 5500交換器 Catalyst 6500交換器 在通道模式下使用無條件的特殊注意事項 相關資訊

<u>簡介</u>

本文討論執行Catalyst OS(CatOS)的Cisco Catalyst 5500交換器和Catalyst 6500交換器之間的 EtherChannel設定。在此案例中,可能會使用任何執行CatOS的Catalyst 4500/4000、 5500/5000或6500/6000系列交換器來取得相同的結果。EtherChannel可以稱為快速 EtherChannel(FEC)或Gigabit EtherChannel(GEC),具體取決於用來形成EtherChannel的介面或連 線埠的速度。

在本例中,每台交換機的兩個快速乙太網(FE)埠已捆綁到FEC中。在本文檔中,術語「快速 EtherChannel」、「Gigabit EtherChannel」、「埠通道」、「通道」和「埠組」均指的是 EtherChannel。

本檔案僅包含交換器的組態檔以及相關範例**show**命令的輸出。有關如何在Catalyst交換器之間設定 EtherChannel的進一步詳細資訊,請參閱以下檔案:

• <u>在執行CatOS的Catalyst 4000、5000和6000交換器之間設定EtherChannel</u>

本文檔不提供使用鏈路聚合控制協定(LACP)的配置。有關配置LACP的詳細資訊,請參閱以下文檔 :

• 在Catalyst 6000和Catalyst 4000之間配置LACP(802.3ad)



<u>需求</u>

本文件沒有特定需求。

<u>採用元件</u>

本文中的資訊係根據以下軟體和硬體版本:

• 執行CatOS 6.3(7)軟體的Catalyst 5500交換器

•執行CatOS 7.2(2)軟體的Catalyst 6500交換器

注意: 在CatOS交換機之間配置通道之前, 請參閱以下文檔:

• 在Catalyst交換機上實施EtherChannel的系統要求

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除(預設))的組態來啟動。如果您的網路正在作用,請確保您已瞭解任何指令可能造成的影響。

<u>慣例</u>

如需文件慣例的詳細資訊,請參閱<u>思科技術提示慣例</u>。

<u>背景理論</u>

可以無條件配置EtherChannel(使用開啟通道模式),也可以通過讓交換機使用埠聚合協定 (PAgP)(使用通道模式desirable)與遠端協商通道來配置EtherChannel。

注意:運行CatOS的Catalyst交換機支援PAgP,因此建議在這些裝置之間設定EtherChannel時使用 desirable模式。PAgP可防止兩台裝置之間的任何配置錯誤。當遠端裝置不支援PAgP且您需要無條 件設定通道時,開啟的通道模式可能會很有用。silent或non-silent關鍵字可用於自動和理想的通道 模式。Catalyst 4500/4000或6500/6000的所有連線埠和Catalyst 5500/5000系列交換器的銅纜連線 埠預設啟用silent關鍵字。Catalyst 5500/5000系列交換器的所有光纖連線埠(FE和Gigabit乙太網路 [GE])預設啟用non-silent關鍵字。建議在Cisco交換機之間連線時使用預設的silent或non-silent關鍵 字。

如需PAgP和EtherChannel的詳細資訊,請參閱思科交換器產品頁面上有關您的CatOS軟體<u>版本</u>的 技術檔案。請參閱*配置快速EtherChannel和Gigabit EtherChannel*或*配置EtherChannel*部分。您可 能希望使用瀏覽器的「查詢」功能來查詢這些部分。

另一個很好的參考是以下文檔的EtherChannel/埠聚合協定部分:

• Catalyst 4000、5000和6000系列交換機配置和管理的最佳實踐

<u>設定</u>

本節提供用於設定本文件中所述功能的資訊。

注意:要查詢有關本文檔中使用的命令的其他資訊,請使用<u>命令查詢工具</u> (僅限<u>註冊</u>客戶)。

本檔案會使用以下網路設定:



Catalyst 5500

Catalyst 6509

<u> 組態</u>

本檔案會使用以下設定:

- <u>Catalyst 5500交換器</u>
- <u>Catalyst 6500交換器</u>

注意:本文檔中列出的配置是通過在建議的desirable模式下使用PAgP協商配置EtherChannel來實 現的。

Catalyst 5500交換器
#version 6.3(7)
!
set option fddi-user-pri enabled
!
#system
set system name cat5500 !
#frame distribution method
set port channel all distribution mac both
#ip
! This is the IP address used for management. set
interface sc0 1 10.10.10.2/255.255.255.0 10.10.10.255
!
#set boot command
set boot config-register 0x2102
<pre>set boot system flash bootflash:cat5000-sup3.6-3-7.bin !</pre>
#port channel
! Ports are assigned to admin group 50. This admin
group is assigned ! automatically when the port
channel is configured, or it can be assigned manually.
! If the admin group does not need to be assigned
manually, this command should not be ! manually set
either. Let the switch create it automatically. !
Also note that ports $4/1$ through $4/4$ are set for port
channel even though only ! 4/1-2 are configured. This
is normal behavior. The ports 4/3 and 4/4 can ! be
used for any other purpose. set port channel 4/1-4 50
!

```
# default port status is enable
#module 1 : 2-port 1000BaseSX Supervisor
#module 2 empty
#module 3 empty
1
#module 4 : 24-port 10/100BaseTX Ethernet
!--- Port channeling is enabled. set port channel 4/1-2
mode desirable silent
#module 5 : 12-port 10/100BaseTX Ethernet
#module 6 empty
#module 7 : 2-port MM OC-3 Dual-Phy ATM
#module 8 empty
1
#module 9 empty
#module 10 empty
#module 11 empty
#module 12 empty
#module 13 empty
end
Catalyst 6500交換器
#version 7.2(2)
!
#system
set system name cat6500
!
#!
#ip
!--- This is the IP address used for management. set
interface sc0 1 10.10.10.1/255.255.255.0 10.10.10.255
#set boot command
set boot config-register 0x2102
set boot system flash bootflash:cat6000-supk8.7-2-2.bin
1
#igmp
set igmp leave-query-type mac-gen-query
#port channel
!--- The ports are assigned to admin group 63. This
admin group is assigned !--- automatically when the port
channel is configured or it can be assigned manually. !-
-- If admin group does not need to be assigned manually,
this command should not be !--- manually set. Let the
switch create it automatically. !--- Also note that
ports 4/1 through 4/4 are set for the port channel even
though !--- only 4/1-2 are configured. This is normal
```

```
behavior. The ports 4/3 and 4/4 !--- can be used for any
other purpose. set port channel 4/1-4 63
#
 default port status is enable
!
!
#module 1 : 2-port 1000BaseX Supervisor
!
#module 2 : 2-port 1000BaseX Supervisor
1
#module 3 empty
1
#module 4 : 48-port 10/100BaseTX Ethernet
!--- Port channeling is enabled. set port channel 4/1-2
mode desirable silent
#module 5 empty
#module 6 empty
1
#module 15 : 1-port Multilayer Switch Feature Card
!
#module 16 : 1-port Multilayer Switch Feature Card
end
```

<u>驗證</u>

本節提供的資訊可用於確認您的組態是否正常運作。

<u>show命令</u>

<u>Output Interpreter Tool</u> (僅供<u>註冊</u>客戶使用)支援某些**show**命令,這允許您檢視<u>show</u>命令輸出的分 析。

要檢查CatOS交換機中的埠通道,請發出以下命令:

- show port capabilities module
- show port channel
- show port channel module/port
- show port channel info

要檢查CatOS交換機中的生成樹協定(STP)狀態,請發出以下命令:

- show spantree
- show spantree vlan
- show spantree module/port



Catalyst 5500交換器

show port capabilities module

此命令用於檢查模組是否能夠進行通道化。還顯示了允許哪些其他埠使用此埠形成通道。

cat5500> (enable) show port capabilities 4 Model WS-X5225R 4/1 Port 10/100BaseTX Type auto,10,100 Speed half,full Duplex 802.1Q,ISL on,off,desirable,auto,nonegotiate Trunk encap type Trunk mode Channel 4/1-2,4/1-4 Broadcast suppression percentage(0-100) Flow control receive-(off,on), send-(off,on) Security yes Dot1x yes static,dynamic Membership Fast start ves QOS scheduling rx-(none),tx-(none) CoS rewrite yes IP-Precedence ToS rewrite Rewrite no UDLD yes AuxiliaryVlan 1..1000, untagged, dot1p, none SPAN source,destination _____ Model WS-X5225R Port 4/2 10/100BaseTX Туре Speed auto,10,100 half,full Duplex 802.1Q,ISL on,off,desirable,auto,nonegotiate -Trunk encap type Trunk mode Channel 4/1-2,4/1-4 Broadcast suppression percentage(0-100) Flow control receive-(off,on),send-(off,on) Security yes Dot1x yes Membership static,dynamic Fast start yes QOS scheduling rx-(none),tx-(none) yes CoS rewrite ToS rewrite IP-Precedence Rewrite no UDLD yes AuxiliaryVlan 1..1000, untagged, dot1p, none SPAN source, destination

!--- Output suppressed.

show port channel

此命令以及show port channel info命令用於檢查連線埠通道的狀態。

cat550	0> (enable)	show port ch	annel		
Port	Status	Channel		Admin	Ch
		Mode		Group	Id
4/1	connected	desirable sil	ent	50	865
4/2	connected	desirable sil	ent	50	865

Port	Device-ID	Port-ID	Platform
4/1	TBA04380080(cat6500)	4/1	WS-C6506
4/2	TBA04380080(cat6500)	4/2	WS-C6506

註:如果埠4/3和4/4處於未連線狀態,則會在上述輸出中顯示。

如果您的Cisco裝置具有**show port channel**命令的輸出,可以使用<u>Output Interpreter Tool</u> (僅限<u>註冊</u> 客戶)來顯示潛在問題和修正程式。

show spantree module/port

cat5500>	(enable)	show	spantre	e 4/1					
Port			Vlan	Port-State	Cost		Prio	Portfast	Channel_id
4/1-2			1	forwarding		12	32	disabled	865
cat5500>	(enable)	show	spantre	ee 4/2					
Port			Vlan	Port-State	Cost		Prio	Portfast	Channel_id
4/1-2			1	forwarding		12	32	disabled	865

注意:連線埠4/1和4/2的show spantree *module/port* 命令的輸出相同,因為這些連線埠都以通道 ID為865的一個通道進行分組。

Catalyst 6500交換器

show port capabilities module

此命令用於檢查模組是否能夠進行通道化。還顯示了允許哪些其他埠使用此埠形成通道。

cat6500> (enable) show po	ort capabilities 4/1
Model	WS-X6248-RJ-45
Port	4/1
Туре	10/100BaseTX
Speed	auto,10,100
Duplex	half,full
Trunk encap type	802.1Q,ISL
Trunk mode	on,off,desirable,auto,nonegotiate
Channel	yes
Broadcast suppression	no
Flow control	receive-(off,on),send-(off)
Security	yes
Dot1x	yes
Membership	static,dynamic
Fast start	yes
QOS scheduling	rx-(1q4t),tx-(2q2t)
CoS rewrite	yes
ToS rewrite	DSCP
UDLD	yes
Inline power	no
AuxiliaryVlan	11000,10254094,untagged,dot1p,none
SPAN	source,destination
COPS port group	4/1-48
Link debounce timer	yes

show port channel

此命令以及show port channel info命令用於檢查連線埠通道的狀態。

cat650	00> (enable)	show port channel		
Port	Status	Channel	Admin Ch	
		Mode	Group Id	
4/1	connected	desirable silent	63 865	
4/2	connected	desirable silent	63 865	
Port	Device-ID		Port-ID	Platform
4/1	069001645(0	cat5500)	4/1	WS-C5500
4/2	069001645(0	cat5500)	4/2	WS-C5500

註:如果埠4/3和4/4處於未連線狀態,則會在上述輸出中顯示。

如果您的Cisco裝置具有**show port channel**命令的輸出,可以使用<u>Output Interpreter Tool</u> (僅限<u>註冊</u> 客戶)來顯示潛在問題和修正程式。

show port channel info

cat6500> (enable) show port channel info Switch Frame Distribution Method: ip both									
Port	Status	Channel mode		Admin group	Channel id	Speed	Duplex	Vlan	
4/1 4/2	connected connected	desirabl desirabl	e silent e silent	63 63	865 865	a-100 a-100	a-full a-full	1 1	
Port	Channel Ope ifIndex	er-group	Neighbor Oper-group	Oper-Dis Method	stributio	on Port Dyna	Securit amic por	cy/ rt	
4/1 4/2	215 215	241 241	1	ip both ip both					
Port	Device-ID			Port-1	[D		I	Platform	
4/1 4/2	069001645(d 069001645(d	cat5500) cat5500)		4/1 4/2			D D	NS-C5500 NS-C5500	

!--- Output suppressed.

show spantree vlan

show spantree命令用於驗證通道中的所有埠是否都分組在一起並處於轉發狀態。

cat6500>	(enable)	show	spantree	1
VLAN 1				
Spanning	tree mod	le	PVST	' +
Spanning	tree typ	be	ieee	!
Spanning	tree ena	abled		

Designated Root 00-04-6d-82-88-00 Designated Root Priority 0

38	3				
4,	/25				
Hello	Time 2 sec	Forward De	elay 1	L5 sec	
0 0)-03-a0-e9-0c-(00			
32	2768				
Hello	Time 2 sec	Forward De	elay 1	L5 sec	
Vlan	Port-State	Cost	Prio	Portfast	Channel_id
1	not-connected	4	32	disabled	0
1	not-connected	4	32	disabled	0
1	not-connected	4	32	disabled	0
1	not-connected	4	32	disabled	0
1	forwarding	12	32	disabled	865
1	forwarding	19	32	disabled	0
1	forwarding	19	32	disabled	0
1	not-connected	100	32	disabled	0
1	not-connected	100	32	disabled	0
1	not-connected	100	32	disabled	0
1	not-connected	100	32	disabled	0
1	not-connected	100	32	disabled	0
1	not-connected	100	32	disabled	0
1	not-connected	100	32	disabled	0
1	not-connected	100	32	disabled	0
1	not-connected	100	32	disabled	0
1	not-connected	100	32	disable	
	38 4, Hello 00 32 Hello Vlan 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	38 4/25 Hello Time 2 sec 00-03-a0-e9-0c-0 32768 Hello Time 2 sec Vlan Port-State 	38 4/25 Hello Time 2 sec Forward De 00-03-a0-e9-0c-00 32768 Hello Time 2 sec Forward De Vlan Port-State Cost 	38 4/25 Hello Time 2 sec Forward Delay 1 00-03-a0-e9-0c-00 32768 Hello Time 2 sec Forward Delay 1 Vlan Port-State Cost Prio 	38 4/25 Hello Time 2 sec Forward Delay 15 sec 00-03-a0-e9-0c-00 32768 Hello Time 2 sec Forward Delay 15 sec Vlan Port-State Cost Prio Portfast

!--- Output suppressed.

如果您的Cisco裝置具有**show spantree**指令的輸出,可以使用<u>Output Interpreter Tool</u> (僅限<u>註冊</u>客 戶)來顯示潛在問題和修正程式。

show spantree module/port

4/1-2			1	forwarding		12	32	disabled	865
cat6500> Port 	(enable)	show	spantre Vlan	e 4/2 Port-State	Cost		Prio	Portfast	Channel_id
4/1-2			1	forwarding		12	32	disabled	865
cat6500> Port	(enable)	show	spantre Vlan	Port-State	Cost		Prio	Portfast	Channel_id

注意:連線埠3/1和3/2的show spantree module/port 命令的輸出相同,因為這些連線埠以通道ID為 865的同一個通道組合在一起。

<u>在通道模式下使用無條件的特殊注意事項</u>

思科建議使用PAgP進行埠通道配置,如上述<u>背景理論</u>中所述。如果由於任何原因而無條件配置 EtherChannel(使用開啟通道模式),建議您按照以下步驟建立埠通道。這樣可避免在配置過程中 出現STP可能的問題。如果一端配置為通道,另一端配置為通道,則STP環路檢測可能會禁用埠。

- 1. 發出set port disable *module/port* 命令,將連線埠通道中要使用的連線埠設定為第一台交換器 上的停用模式。
- 2. 在第一個交換機上建立埠通道(埠組),並將通道模式設定為on。
- 3. 在第二個交換機上建立埠通道,並將通道模式設定為on。

4. 發出set port enable *module*/port命令,重新啟用之前在第一個交換器上停用的連線埠。

相關資訊

- <u>在執行CatOS的Catalyst 4000、5000和6000交換器之間設定EtherChannel</u>
- 在Catalyst交換機上實施EtherChannel的系統要求
- <u>LAN 產品支援頁面</u>
- <u>LAN 交換支援頁面</u>
- <u>技術支援 Cisco Systems</u>