將UCS伺服器證書配置為CIMC

目錄

<u>簡介</u>	
<u>必要條件</u>	
<u>採用元件</u>	
<u>背景資訊</u>	
<u>設定</u>	
<u>產生CSR</u>	
<u>建立自簽名證書</u>	
<u>驗證</u>	
<u>疑難排解</u>	
相關資訊	

簡介

本文說明如何產生憑證簽署請求(CSR)以取得新憑證。

必要條件

需求

思科建議您瞭解以下主題:

- 您必須以具有管理員許可權的使用者身份登入才能配置證書。
- 確保CIMC時間設定為當前時間。

採用元件

本文中的資訊係根據以下軟體和硬體版本:

- CIMC 1.0或更高版本
- Openssl

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除(預設))的組態來啟動。如果您的網路運作中,請確保您瞭解任何指令可能造成的影響。

背景資訊

可將證書上傳到思科整合管理控制器(CIMC)以替換當前伺服器證書。 伺服器憑證可以由公用憑證授 權單位(CA) (例如Verisign)簽署,或由您自己的憑證授權單位簽署。產生的憑證金鑰長度為

\sim	~	• ~		_	_	
•)	11/	າບ	177	-	-	
<u>∠</u>	J4	ŧΟ	1 1		L,	0
_	•	•••		-	-	v

設定

步驟 1.	從CIMC生成CSR。
步驟 2.	將CSR檔案提交給CA以簽署證書。如果您的組織生成自己的自簽名證書,則可以使用 CSR檔案生成自簽名證書。
步驟 3.	將新證書上傳到CIMC。

✤ 注意:上傳的證書必須從CIMC生成的CSR中建立。請勿上傳不是由此方法建立的憑證。

產生CSR

導航到管理頁籤> 安全管理 > 證書管理 > 生成證書簽名請求 (CSR), 然後填寫以*標籤的詳細資訊。

此外,請參閱<u>生成證書簽名請求</u>指南。

😕 📲 Cisco Integrated Management Contro	oller			÷ 😣 3	\$	
/ / Security Management / Certificate Manag	gement 🚖		Refresh	Host Power Launch vKVM Ping	CIMC Reboot Locator LED 🚱 🚯	
Certificate Management Secure Key Management Sec	urity Configuration MCTP SPDM	C				
Generate Certificate Signing Request Upload Server Certificate Up	load External Certificate Upload Externa	al Private Key Activate External Certifica	ste			
	Generate Certificate Signir	ng Request	0>	<		
Current Certificate	* Common Name:	Host01				
	Subject Alternate Name:	Subject Alternate Name	dNSName v +			
Subject Information:	* Organization Name:	Cisco				
Country Code (CC) : MX State (S) : Mexico	Organization Unit:	Cisco				
Locality (L) : Mexico Organization (O) : Cisco Organizational Unit (OU) : CoSeries	* Locality:	CA				
Common Name (CN) : Host01	* State Name:	California				
Issuer Information: Country Code (CC) : MX	* Country Code:	United States	-			
Locality (L) : Mexico	Email:	Please enter Valid Email Address				
Organizational Unit (OU) : C-Series Common Name (CN) : Host01	Signature Algorithm:	SHA384	•			
Valid From : Jun 15 22:47:56 2023	GHT Challenge Password:					
Valid To : Sep 17 22:47:56 2025	GMT String Mask:	Select	•			
	Selecting this option will prom	Selecting this option will prompt Cisco IMC to generate Self Signed Certificate.				
	WARNING: After successful ce	rtificate generation, the Cisco IMC Web	GUI will be restarted.			
Certificate Signing Request Status	gement controller may be lost moment	arily and you will need to re-login.				
Status: Not in progress.	Even SSH, vKVM and vMedia s	essions will be disconnected.				
External Certificate External Private Key		Generate CSR	Reset Values Cancel			

⚠ 注意:請使用主體替代名稱指定此伺服器的其他主機名稱。未配置dNSName或將其從上傳的 證書中排除,可能會導致瀏覽器阻止對Cisco IMC介面的訪問。 下一步要做什麼?

執行下列工作:

- 如果您不想從公共證書頒發機構獲取證書,並且您的組織不運行自己的證書頒發機構,則可以 允許CIMC從CSR內部生成自簽名證書並立即將其上傳到伺服器。選中 Self Signed Certificate框以執行此任務。
- 如果您的組織操作自己的自簽名證書,請複製-----BEGIN ...to END CERTIFICATE REQUEST-----的命令輸出並貼上到名為csr.txt的檔案。將CSR檔案輸入到證書伺服器以生成 自簽名證書。
- 如果您從公共證書頒發機構獲取證書,請將-----BEGIN ... to END CERTIFICATE REQUEST- ---的命令輸出複製到名為csr.txt的檔案中。將CSR檔案提交到證書頒發機構以獲取簽名證書。
 確保證書屬於伺服器型別。
- ✤ 注意:成功生成證書後,Cisco IMC Web GUI將重新啟動。與管理控制器的通訊可能會暫時遺失,需要重新登入。

如果您沒有使用第一個選項(其中CIMC在內部生成並上傳自簽名證書),則必須建立新的自簽名證書 並將其上傳到CIMC。

建立自簽名證書

作為公共CA和簽署伺服器證書的替代方案,請運行您自己的CA並簽署您自己的證書。本節介紹用 於建立CA和使用OpenSSL伺服器證書生成伺服器證書的命令。有關OpenSSL的詳細資訊,請參閱 <u>OpenSSL</u>。

步驟 1.生成RSA私鑰,如圖所示。

<#root>

[root@redhat ~]#

openssl genrsa -out ca.key 1024

步驟 2.如圖所示,生成新的自簽名證書。

<#root>

[root@redhat ~]#

openssl req -new -x509 -days 1095 -key ca.key -out ca.crt

You are about to be asked to enter information that will be incorporated into your certificate request. What you are about to enter is what is called a Distinguished Name or a DN. There are quite a few fields but you can leave some blank For some fields there will be a default value, If you enter '.', the field will be left blank. Country Name (2 letter code) [XX]: US State or Province Name (full name) []: California Locality Name (eg, city) [Default City]: California Organization Name (eg, company) [Default Company Ltd]: Cisco Organizational Unit Name (eg, section) []: Cisco Common Name (eg, your name or your server's hostname) []: Host01 Email Address []: [root@redhat ~]# 步驟 3.確保證書型別為「server」,如圖所示。 <#root> [root@redhat ~]# echo "nsCertType = server" > openssl.conf

步驟 4.指示CA使用您的CSR檔案生成伺服器證書,如圖所示。

<#root>

[root@redhat ~]#

openssl x509 -req -days 365 -in csr.txt -CA ca.crt -set_serial 01 -CAkey ca.key -out server.crt -extfile

步驟 5.驗證產生的憑證的型別是否為Server,如下圖所示。

```
<#root>
```

```
[root@redhat ~]#
openssl x509 -in server.crt -purpose
Certificate purposes:
SSL client : No
SSL client CA : No
SSL server :
Yes
SSL server CA : No
Netscape SSL server : Yes
Netscape SSL server CA : No
S/MIME signing : No
S/MIME signing CA : No
S/MIME encryption : No
S/MIME encryption CA : No
CRL signing : Yes
CRL signing CA : No
Any Purpose : Yes
Any Purpose CA : Yes
OCSP helper : Yes
OCSP helper CA : No
Time Stamp signing : No
Time Stamp signing CA : No
----BEGIN CERTIFICATE----
MIIDFzCCAoCgAwIBAgIBATANBgkqhkiG9w0BAQsFADBoMQswCQYDVQQGEwJVUzET
MBEGA1UECAwKQ2FsaWZvcm5pYTETMBEGA1UEBwwKQ2FsaWZvcm5pYTEOMAwGA1UE
CgwFQ21zY28xDjAMBgNVBAsMBUNpc2NvMQ8wDQYDVQQDDAZIb3N0MDEwHhcNMjMw
NjI3MjIONDE1WhcNMjQwNjI2MjIONDE1WjBgMQswCQYDVQQGEwJVUzETMBEGA1UE
CAwKQ2FsaWZvcm5pYTELMAkGA1UEBwwCQ0ExDjAMBgNVBAoMBUNpc2NvMQ4wDAYD
VQQLDAVDaXNjbzEPMA0GA1UEAwwGSG9zdDAxMIIBIjANBgkqhkiG9w0BAQEFAAOC
AQ8AMIIBCgKCAQEAuhJ50V004MZNV3dgQw0Mns9sgzZwjJS8Lv0tHt+GA4uzNf1Z
WKNyZbzD/yLoXiv8ZFgaWJbqEe2yijVzEcguZQTGFRkAWmDecKM9Fieob03B5FNt
pC8M9Dfb3YMkIx29abrZKFEIrYbabbG4gQyfzgOB6D9CK1WuoezsE7zH0oJX4Bcy
ISEORsOd9bsXvxyLk2cauS/zvI9hvrWW9P/Og8nF3Y+PGtm/bnfodEnNWFWPLtvF
dGuG5/wBmmMbEb/GbrH9uVcy0z+3HReDcQ+kJde7PoFK3d6Z0dkh7Mmtjpvk5ucQ
NgzaeoCDL0Bn+Z10800/eciSCsGIJKxYD/FY1QIDAQABo1UwUzARBg1ghkgBhvhC
AQEEBAMCBkAwHQYDVR00BBYEFEJ20TeuP27jyCJRiAKKfflNc0hbMB8GA1UdIwQY
MBaAFA4QR965FinE4GrhkiwRV62ziPj/MA0GCSqGSIb3DQEBCwUAA4GBAJuL/Bej
DxenfCt6pBA709Gtk1tWUS/rEtpQX190hd1ahjwbfG/67MYIpIEbidL1BCw55da1
LI7sgu1dnItnIGsJI1L7h6IeFBu/coCvBtopOYUanaBJ1BgxBWhT2FAnmB9wIvYJ
5rMx95vWZXt3KGE8Q1P+eGkmAHWA8M0yhwHa
----END CERTIFICATE-----
[root@redhat ~]#
```

步驟 6.上傳伺服器憑證,如圖所示。

/ Security Mana	agement / Certificate N	nanagement 🕷	ок	Refresh Host Power Launch vKVM Ping CIMC Reboot Locator LED 4
ertificate Management	Secure Key Management	Security Configuration	IT O DI	
Generate Certificate Signing	g Request Upload Server Certifica	ate Upload External Certificate Up	load External Private Key Activate External Certificate	
Current Certificate				
Serial Number	: 212DAF6E68B5841	8158BD04804D64B2C5EE08B6B		
Subject Informatic Country Code (CC) State (S) Locality (L) Organization (O) Organizational Uni Common Name (CN)	DR: : MX : Mexico : Mexico : Cisco it (OU) : C-Series : HostOl			
Issuer Information Country Code (CC) State (S) Locality (L) Organization (O) Organizational Uni Common Name (CN)	n: : MX : Mexico : Cisco it (OU): C-Series : HostOl			
Valid From Valid To	: Jun 15 22:47:56 : Sep 17 22:47:56	2023 GMT 2025 GMT		
Certificate Signing I	Request Status			
Status: Not	in progress.			
External Certificat	e External Private	Key		

驗證

使用本節內容,確認您的組態是否正常運作。

導航到管理>證書管理,驗證當前證書,如圖所示。

・ ::::::::::::::::::::::::::::::::::::				🐥 🔀 3 admin@		
				Refresh Host Power Launch vKVM Ping CIMC Reboot Locator LED 🕘		
Certificate Management	Secure Key Management	Security Configuration	MCTP SPDM			
Generate Certificate Signin	ng Request Upload Server Certific	ate Upload External Certificate	Upload External Private Key Activate External C	ertificate		
Current Certificate						
Serial Number Subject Informati Country Code (CC) State (S) Locality (L) Organization (0) Organizational Un Common Name (CN) Issuer Informatio Country Code (CC) State (S) Locality (L) Organizational Un Common Name (CN) Valid From Valid To	: 01 	2023 GMT 2024 GMT				
Certificate Signing Status: No	Request Status t in progress.					
External Certificat	te	Key				

疑難排解

目前沒有特定資訊可用於對此組態進行疑難排解。

相關資訊

- <u>思科漏洞ID CSCup26248</u>-無法將第三方CA SSL憑證上傳到CIMC 2.0。(1a)
- <u>技術支援與文件 Cisco Systems</u>

關於此翻譯

思科已使用電腦和人工技術翻譯本文件,讓全世界的使用者能夠以自己的語言理解支援內容。請注 意,即使是最佳機器翻譯,也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準 確度概不負責,並建議一律查看原始英文文件(提供連結)。