# RV315W VPN路由器上的配置管理設定

## 目標

配置管理和相關工具允許匯入或匯出配置。當設定多個裝置之間的相似或相同的配置時,匯入 和匯出配置非常有用。

本文檔的目的是向您展示如何在RV315W VPN路由器上儲存當前配置或恢復配置。

### 適用的裝置

·RV315W

#### 軟體版本

•1.01.03

#### 組態管理

步驟1.登入到Web配置實用程式,然後選擇System Management > Configuration Management。將開啟*匯入或匯出系統配置*頁:

. Small Bus	siness	Language: English 👻	ut Help
cisco RV315	W Broadband Wireless VPN Router		
System Summary			
Setup Wizard	Import or export system configuration		 _
Port Settings	Please select a configuration file to import.		
Networking	Note, Import configuration file.		
▶ VPN			
▶ QoS	Backup Configuration		
Security	Note: Export configuration file.		
System Management			
Reboot	Upload Configuration		
Password Complexity	Caution: The system only supports uploading the configuration file to a TR-069 server.		
User Management	You must first configure a valid remote TR-069 server on the TRO69 Settings page before you upload the configuration file.		
Reset to Factory Default			
Configuration Managem			
Firmware Upgrade			
<ul> <li>Diagnostic Utilities</li> </ul>			
Time Settings			
TR-U69 Settings			
> Remote Management			
, Logo			
۰ III ا			
@ 2012 Olare Outland Inc.	All should be an an and		

#### 步驟2.要匯入配置檔案,請按一下Browse。然後選擇要匯入的配置。

Import or export system configuration		
Please select a configuration file to import:	Browse	Import

步驟3.按一下Import以匯入路由器要使用的配置。

Import or export system configuration		
Please select a configuration file to import: RV315W_1.01.03.cfg	Browse	Import
Note: Import configuration file.		

步驟4.要匯出配置檔案,請按一下Backup Configuration。此功能將路由器的配置傳輸到連線 的電腦。選擇要下載檔案的位置。

Backup Configuration Note: Export configuration file.	
Upload Configuration Caution: The system only supports uploading the configuration file to a TR-069 server	
You must first configure a valid remote TR-069 server on the TRO69 Settings page before you upload the configuration file.	

步驟5.若要將組態上傳到上層網路管理系統(NMS),請按一下**Upload Configuration**。如警告所述,必須在系統上傳之前配置TR-069伺服器。



附註:要配置TR-069伺服器,請參閱<u>RV315W VPN路由器上的TR-069設定</u>。