在無線區域網控制器上配置VLAN

目錄

簡介 必要條件 需求 <u>採用元件</u> <u>慣例</u> WLC上的動態介面 配置動態介面的前提條件 配置動態介面的限制 設定 運行Cisco IOS軟體的Catalyst交換機 GUI中的WLAN控制器VLAN配置 CLI中的WLAN控制器VLAN配置 驗證 <u>Catalyst交換器驗證</u> WLAN控制器VLAN驗證 疑難排解 疑難排解程式

簡介

本檔案介紹如何在無線LAN控制器(WLC)上設定虛擬LAN (VLAN)。

必要條件

需求

此程式假設有一個功能正常的DHCP伺服器,可為註冊到控制器的存取點(AP)提供IP位址。

採用元件

- 運行Cisco IOS[®]軟體的Catalyst交換機。
- 運行軟體版本8.10.190.0的Cisco WLC 8540。
- 存取點

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除(預設))的組態來啟動。如果您的網路運作中,請確保您瞭解任何指令可能造成的影響。

慣例

如需文件慣例的詳細資訊,請參閱思科技術提示慣例。

WLC上的動態介面

動態介面(也稱為VLAN介面)由使用者建立,類似於無線LAN客戶端的VLAN。

一個控制器最多可支援512個動態介面(VLAN)。 每個動態介面都單獨配置,並允許控制器的任何或 所有分佈系統埠上存在單獨的通訊流。 每個動態介面控制控制器和所有其他網路裝置之間的 VLAN和其他通訊,並且每個動態介面充當與對映到介面的無線LAN (WLAN)關聯的無線客戶端的 DHCP中繼。

可以將動態介面分配給分散式系統埠、WLAN、第2層管理介面和第3層ap管理器介面。 還可以將動 態介面對映到備份埠。

在分佈系統埠上配置零動態介面、一個動態介面或多個動態介面。 但是,所有動態介面必須與埠上 配置的所有其他介面位於不同的VLAN或IP子網中。 如果埠未標籤,則所有動態介面必須與埠上配 置的任何其他介面位於不同的IP子網上。

有關Cisco WLC平台支援的最大VLAN數的資訊,請參閱相應的Cisco WLC平台資料表。 Cisco建議 為動態介面使用標籤的VLAN。

具有WLAN控制器的VLAN使用以下型號:



配置動態介面的前提條件

要配置controller的動態介面,請為動態介面使用標籤的VLAN。

配置動態介面的限制

在控制器上設定動態介面時有下列限制:

- 有線客戶端無法使用AP管理器介面的IP地址訪問Cisco 2504 WLC的管理介面。
- 對於來自配置為動態介面的子網的SNMP請求,控制器會做出響應,但響應不會到達發起會話的裝置。
- 如果使用DHCP代理和/或RADIUS源介面,請確保動態介面具有有效的可路由地址。不支援跨 控制器介面的重複或重疊地址。
- 請勿使用ap-manager作為介面名稱來配置動態介面,因為ap-manager是保留名稱。

設定

本節提供用於設定本檔案中所述功能的資訊。

✤ 附註:使用<u>命令查詢工具</u>(僅限registeredcustomers)查詢關於用於本文的命令的更多資訊。

運行Cisco IOS軟體的Catalyst交換機

w-backbone-6#configure terminal Enter configuration commands, one per line. End with CNTL/Z. w-backbone-6(config)#interface gigabitethernet 8/25 w-backbone-6(config-if)#switchport w-backbone-6(config-if)#switchport trunk encapsulation dot1q w-backbone-6(config-if)#switchport trunk native vlan 999 w-backbone-6(config-if)#switchport trunk allowed vlan 1,81,82,171,999 w-backbone-6(config-if)#switchport mode trunk w-backbone-6(config-if)#switchport mode trunk w-backbone-6(config-if)#end w-backbone-6#

注意:此處將VLAN編號999用作本地VLAN。這表示到達WLC連線埠的未標籤流量來自vlan 999。在本文檔中,WLC的管理埠帶有標籤的VLAN 1,這意味著與WLC管理介面之間的流量 進入VLAN 1,並且WLC未使用VLAN 999。

GUI中的WLAN控制器VLAN配置

在WLAN控制器上完成以下步驟。

1. 從WLC GUI中,導航至Controller > Interfaces. Interfaces頁面,該頁面列出在WLC上配置的所有介面。要建立新的 動態介面,請按一下 New.

ululu cisco		WIRFLESS		IAGEMENT C		FFFDBACK	Saye Configuration Ping Logout Refresh
Controller	Interfaces	MALLESS	growart Hav		2 PENED TEP	TEDDACK	Entries 1 - 6 of 6
Icons	Interface Name	VLAN Identifier	IP Address	Interface Type	Dynamic AP Management	IPv6 Address	
Inventory	171	171	192.168.171.30	Dynamic	Disabled		
Interfaces	management	1	10.48.39.46	Static	Enabled	2001:1::46/64	
Interface Groups	redundancy-management	1	10.48.39.52	Static	Not Supported		
Multicast	redundancy-port	untagged	172.16.39.52	Static	Not Supported		
Network Routes	service-port	N/A	0.0.00	DHCP	Disabled	::/128	
Redundancy	virtual	N/A	10.2.3.4	Static	Not Supported		
 Mobility Management Ports NTP CDP PMIPv6 Tunneling IPv6 mDNS 			•				

輸入 Interface Name 和 VLAN Identifier, 並按一下Apply.

•

٠

cisco	MONITOR	<u>W</u> LANs	CONTROLLER	WIRELESS	SECURITY	MANAGEMENT	COMMANDS	HELP	<u>F</u> EEDBACK	Sa <u>v</u> e Configuration Ping Logout <u>R</u> efresh
Controller	Interfaces	> New)				< Back Apply
General Icons Inventory Interfaces Interface Groups	Interface N VLAN Id	ame	VLAN 81 81			J				
Multicast Network Routes										
Redundancy										
 Mobility Management Ports 										
 NTP CDP 										
▶ PMIPv6										
 Tunneling IPv6 										
▶ mDNS										

輸入此VLAN的特定引數。部分引數包括 IP Address、 Netmask、 Gateway和 Primary DHCP Server IP地址,然後按一下 Apply.

ahaha					Sa <u>v</u> e Confi	iguration	<u>P</u> ing	Logout Refresh	
CISCO MONITOR	WLANS CONTROLLER	WIRELESS	SECURITY	MANAGEMENT	C <u>O</u> MMANDS	HELP	<u>F</u> EEDB/	ACK 🔒 <u>H</u> ome	
Controller	Interfaces > Edit					< Bac	k	Apply	
General Icons	General Informatio	P							
Inventory					13				
Interfaces	Interface Name	vlan 81							
Interface Groups	MAC Address	74:a0:21	f:2a:75:7e						
Multicast Network Routes 	Configuration								
Redundancy	Guest Lan								
Mobility Management	Quarantine								
Ports	Quarantine Vlan Id	0							
▶ NTP	NAS-ID	none							
▶ CDP	Physical Information	on							
▶ PMIPv6	Port Number	1							
Tunneling	Backup Port	0							
▶ IPv6	Active Port	1							
▶ mDNS	Enable Dynamic AP Ma	anagement 🗌							
Advanced									
	Interface Address								
	VLAN Identifier	81							
	IP Address	192.	168.81.46						
	Netmask	255.2	255.255.0						
	Gateway	192.	168.81.1						
	DHCP Information								
	Primary DHCP Server		10.48.3	9.5					
	Secondary DHCP Serve	er							
	DHCP Proxy Mode		Global	•					
	Enable DHCP Option 8	2							
	Access Control List								
	ACL Name	n	one 🔻						
	mDNS								
	mDNS Profile	n	one	•					
	External Module								
	3G VLAN				25.1				
	Note: Changing the Inter temporarily disabled and	face parameters thus may result i	causes the W in loss of con	LANs to be nectivity for					

注意:分配給此介面的IP地址將充當DHCP中繼,以供客戶端從DHCP伺服器獲取IP地址。例如,當客戶端嘗試關聯到 對映到此動態介面的WLAN/SSID(此配置中的步驟5)時,它會執行本地子網廣播以標識DHCP伺服器。控制器向 DHCP伺服器傳送請求(如果它是網段的DHCP伺服器,則向自身傳送請求),並將此動態介面的IP地址作為中繼IP傳 送到為此介面配置的DHCP伺服器。DHCP伺服器從配置的DHCP作用域向客戶端分配IP地址。

注意:由於技術原因,必須有有效的IP地址,但是除非啟用了DHCP代理或RADIUS介面覆蓋(在WLAN配置下),否則不使用此IP地址。

檢驗介面配置。按一下窗口頂部選單中的 Controller 頁籤,然後從左側選單選擇Interfaces。

•

•

	MONITOR WLANS CONTROLLER	WIRELESS	SECURITY I	MANAGEMENT	COMMANDS HELP	FEEDBACK	Sage Configuration Ping Logout Refrest	•
Controller General Icons	Interfaces	VLAN Identifier	IP Address	Interface Type	Dynamic AP Management	IPv6 Address	Entries 1 - 8 of 8 New	
Inventory Interfaces Interface Groups Multicast Network Routes	121 management redundancy-management redundancy-port service-port	171 1 untagged N/A	192.168.171.30 10.48.39.46 10.48.39.52 172.16.39.52 0.0.00	0 Dynamic Static Static Static DHCP	Disabled Enabled Not Supported Not Supported Disabled	2001:1::46/64 ::/128		
 Redundancy Mobility Management Ports 	virtual vian.81 vian.82	N/A 81 82	10.2.3.4 192.168.81.46 192.168.82.46	Static Dynamic Dynamic	Not Supported Disabled Disabled			
 Ports NTP CDP PMIPv6 Tunneling IPv6 IPv6 mDNS 								

按一WLANs下視窗頂端選單中的標籤,然後按一下Create New.

սիսիս					Save Configuration	Ping Logout Refresh
CISCO	MONITOR WLANS C	ONTROLLER WIRELESS SECURITY	MANAGEMENT	COMMANDS HELP EEEDBACK		🔒 Home
WLANs	WLANs			1		Entries 1 - 1 of 1
VLANs WLANS	Current Filter: None	[Change Filter] [Clear Filter]		Create New	Go	
Advanced	WLAN ID Type	Profile Name	WLAN SSID	Admin Status	Security Policies	
	1 WLAN	self-anchor	self-anchor	Disabled	None	

輸入服務集識別符號(SSID), Profile Name然後Apply.按一下此示例使用VLAN 81以便於理解。

cisco	MONITOR WLANS	CONTROLLER WIRELESS	SECURITY MANAGEMENT	COMMANDS HELP	EEEDBACK	Save configuration Ping Logout Refresh
WLANs	WLANs > New					< Back Apply
VLANs	Туре	WLAN •				
Advanced	Profile Name	Students				
	SSID	Students				
	ID	2 🔻				

從窗口底部的Interface Name下拉選單中選擇VLAN 81,然後按一下Apply. In this case, SSID Students is lined to Interface Name VLAN 81.

ululu cisco	MONITOR WLANS CONTRO	DLLER WIRELESS SECURITY MANAGEME	ent c <u>o</u> mmands he <u>l</u> p <u>f</u> eedback	Saye Configuration Ping Logout Befresh n Home
WLANs	WLANs > Edit 'Students	i'		< Back Apply
WLANS	General Security C	QoS Policy-Mapping Advanced		
Advanced	Profile Name	Students		
	Туре	WLAN		
	SSID	Students		
	Status	S Enabled		
	Security Policies	[WPA2][Auth(802.1X)] (Modifications done under security tab will appea	ar after applying the changes.)	
	Radio Policy	All		
	Interface/Interface Group(G) vlan 81 🔻		
	Multicast Vlan Feature	Enabled		
	Broadcast SSID	C Enabled		
	NAS-ID	W-8540-1		
	Multicast Vian Feature Broadcast SSID NAS-ID	Enabled K-8540-1		

CLI中的WLAN控制器VLAN配置

•

使用本節內容,透過指令行介面(CLI)設定您的VLAN。

• 建立介面和關聯的VLAN標籤。命令為config interface create interface_namevlan_id。

(W-8540-1) >config interface create "VLAN 81" 81

✤ 注意:如果VLAN/WLAN名稱中有空格(如本示例所示),請確保該名稱在引號中。

2. 定義IP地址和預設網關。命令為config interface interface_nameIP_addressnetmaskgateway。

• 定義DHCP伺服器。命令為config interface dhcp dynamic-interface<interface-name>primary<primary-server>[secondary]<secondary-server>。

(W-8540-1) >config interface dhcp dynamic-interface "VLAN 81" primary 10.48.39.5

• 發出以下命令以將介面對映到物理埠: config interface port operator_defined_interface_name physical_ds_port_number。

(W-8540-1) >config interface port "VLAN 81" 1

▶ 檢驗介面配置。命令為 show interface summary.

<#root>

(W-8540-1) > show interface summary

Interface Name Port Vlan Id IP Address Type Ap Mgr Guest 171 1 171 192.168.171.30 Dynamic No No management 1 1 10.48.39.46 Static Yes No redundancy-management 1 10.48.39.52 Static No 1 No redundancy-port - untagged 172.16.39.52 Static No No 0.0.0.0 N/A N/A DHCP No No service-port virtual N/A N/A 10.2.3.4 Static No No

<#root>

٠

٠

驗證WLAN和關聯的介面。命令為 show wlan summary.

(W-8540-1) >config wlan interface 2 "vlan 81"

定義WLAN的介面。命令為config wlan interface wlan_idinterface_name。

(W-8540-1) >config wlan create 2 Students Students

• 定義WLAN。命令為config wlan create wlan_idname。

vlan 82

1

82

No

No

Numbo WLAN	er of WLANs	Status Inter	face Name PMIPv6 N	Iobility	
1	self-anchor / self-anchor Disabled	management	none		
2	Students / Studen	ts 1	Enabled	vlan 81	none

(W-8540-1) >

驗證

使用本節內容,確認您的組態是否正常運作。

Catalyst交換器驗證

.

運行Cisco IOS軟體的Catalyst交換機: show running-config interface interface_type interface_number。

<#root>

w-backbone-6k#

show running-config interface gigabitethernet 2/1

Building configuration... Current configuration : 190 bytes ! interface GigabitEthernet2/1 no ip address switchport switchport trunk encapsulation dot1q switchport trunk native vlan 999 switchport trunk allowed vlan 1,81,82,171,999 switchport mode trunk

WLAN控制器VLAN驗證

• 檢驗介面配置。命令為 show interface summary.

<#root>

(W-8540-1) >show interface summary

Number of Interfac	es		8					
Interface Name	F	Port V	lan Id	IP Addr	ess T	ype	Ap Mg	gr Guest
171	1 1	171	192.1	68.171.30	Dynam	nic N	o N	D
management	1	1	10).48.39.46	Static	Ye	s No)
redundancy-manag	ement	1	1	10.48.	39.52	Static	No	No
redundancy-port	-	- unt	agged	172.16.3	39.52 S	tatic	No	No
service-port	N/A	N/A	0	0.0.0.0	DHCP	No	o No)
virtual	N/A	N/A	10	0.2.3.4	Static	No	No	

vlan 81	1	81	192.168.81.46 Dynamic	No	No

vlan 82	1 82	192.168.82.46 Dynamic	No	No
---------	------	-----------------------	----	----

end

• 驗證WLAN和關聯的介面。命令為 show wlan summary.

<#root>

(W-8540-1) >show wlan summary

1 self-anchor / self-anchor Disabled management none

2 Students / Students Enabled vlan 81 none

(W-8540-1) >

疑難排解

使用本節內容,對組態進行疑難排解。

疑難排解程式

•

.

完成以下說明以排解組態的疑難問題。

從WLAN控制器ping VLAN路由介面上設定的預設閘道,然後向相反方向執行ping。

無線區域網控制器:

(W-8540-1) >ping 192.168.81.1

Send count=3, Receive count=3 from 192.168.81.1

(W-8540-1) >

VLAN路由介面:

٠

w-backbone-6k#ping 192.168.81.46

Type escape sequence to abort. Sending 5, 100-byte ICMP Echos to 192.168.81.46, timeout is 2 seconds: !!!!! Success rate is 100 percent (5/5), round-trip min/avg/max = 1/1/1 ms w-backbone-6k#

如果ping失敗,請在交換器上部署封包擷取/監聽器並進行檢查,以驗證正確的VLAN標籤。

♦ 註:從控制器向與動態介面位於同一子網的第3層網關發出ping命令時,控制器似乎會從動態介面發出ping命令。

關於此翻譯

思科已使用電腦和人工技術翻譯本文件,讓全世界的使用者能夠以自己的語言理解支援內容。請注 意,即使是最佳機器翻譯,也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準 確度概不負責,並建議一律查看原始英文文件(提供連結)。