排除無線速度問題

目錄

 簡介

 必要條件

 無線網路中的速度問題

 檢查客戶端裝置

 WLC上的配置檢查

 使用案例1.資料速率

 使用案例2.法規領域

 使用案例3.頻帶選擇

 使用案例5.色版寬度

 使用案例6.Qos

簡介

本檔案介紹無線區域網路(LAN)控制器(WLC)上的多個使用案例和組態,以協助緩解無線速度問題。

必要條件

Cisco建議您瞭解WLC以及路由和交換的基本知識。

無線網路中的速度問題

無線區域網路(WLAN)速度問題可能是由無線網路和使用者端裝置上的各種因素所造成。要解決這些問題,必須同時檢查網路和裝置。

處理WLC時,您需要執行幾項組態檢查,以確保無線網路達到最佳的速度和效能。以下是在WLC和 使用者端上可以執行的一些檢查:

檢查客戶端裝置

在客戶端電腦上檢查的最重要內容是訊號強度:

1. 訊號強度:檢查客戶端裝置上的Wi-Fi訊號強度。如果訊號很弱,裝置可能無法連線,或必須經歷 慢速。靠近無線存取點(AP)或Wi-Fi路由器,檢視訊號是否改善。

1.1.在Windows電腦上檢查訊號強度和SSID: 首先檢查網路效能低下的客戶端裝置。確認使用者端已連線到正確的無線網路,而且訊號很強。

C:\Users\	wlan show interfaces
There is 1 interface on t	the system:
Name	: Wi-Fi
Description	: Intel(R) Wi-Fi 6 AX201 160MHz
GUID	: cef8e258-3571-4c7e-afec-a4fcb5b852d5
Physical address	: bc:6e:e2:b0:53:33
Interface type	: Primary
State	: connected
SSID	
BSSID	: 54:af:97:0a:be:8a
Network type	: Infrastructure
Radio type	: 802.11ac
Authentication	: WPA2-Personal
Cipher	: CCMP
Connection mode	: Profile
Band	: 5 GHz
Channel	: 36
Receive rate (Mbps)	: 702
Transmit rate (Mbps)	: 585
Signal	: 86%
Profile	

用於檢驗Windows PC上訊號強度的命令

1.2. MacBook上的訊號強度和SSID檢查:

在Mac上,檢查Wi-Fi訊號強度是一次按一下操作。按住選項鍵,同時按一下頂部選單欄中的Wi-Fi圖 示。現在,您可以在下拉式功能表中看到Wi-Fi訊號強度(以dBm表示)以及其他網路相關資訊的主 機。

Known Networks



IP Address: 192.168.0.103

Router: 192.168.0.1

Security: WPA/WPA2 Personal

BSSID: ac:84:c6:f5:f8:4c

Channel: 1 (2.4 GHz, 20 MHz)

Country Code:

RSSI: -50 dBm

Noise: -95 dBm

Tx Rate: 144 Mbps

PHY Mode: 802.11n

MCS Index: 15

NSS: 2

MAC的訊號強度

WLC上的配置檢查

以下是一些由於WLC上的配置問題引起的與速度緩慢問題相關的使用案例:

使用案例1.資料速率

資料速率是指無線裝置與網路通訊的傳輸速度。這些資料速率通常以每秒百萬位元(Mbps)測量,並 根據WLC支援的無線標準和技術而有所不同。 速度緩慢的主要原因之一是資料速率狀態設定為「強 制」和「支援」時的資料速率較低。

Cisco建議停用無線網路上的低資料速率,以提高效能和效率。這是因為客戶端裝置能夠以更高的資料速率連線,從而獲得更快的速度和更好的效能。



注意:全面評估此更改對您的客戶端裝置的影響和相容性非常重要。

1. 預設資料速率組態:

預設情況下,較低的資料速率設定為強制和支援的狀態。

要檢視無線控制器上特定無線電的引數設定,請導航到控制器的GUI,選擇WIRELESS頁籤,然後選擇所需的無線電。

cisco	<u>M</u> ONITOR <u>W</u> LANS <u>C</u> ONTROL	ler w <u>i</u> reless <u>s</u> ecurity	M <u>a</u> nagement c <u>o</u> mmai	NDS HE <u>L</u> P
Wireless	802.11a Global Parameters	ŝ		
 Access Points All APs Radios 	General		Data Rates**	
802.11a/n/ac/ax	802.11a Network Status	Enabled	6 Mbps	Mandatory 🗙
Dual-Band Radios	Beacon Period (millisecs)	100	9 Mbps	Supported 🗸
Dual-5G Radios Global Configuration	Fragmentation Threshold (bytes)	2346	12 Mbps	Mandatory 🗸
Advanced	DTPC Support.	Enabled	18 Mbps	Supported 🗸
Mesh	Maximum Allowed Clients	200	24 Mbps	Mandatory 🗸
AP Group NTP	RSSI Low Check	Enabled	36 Mbps	Supported 🗸
▶ ATF	RSSI Threshold (-60 to -90 dBm)	-80	48 Mbps	Supported 🗸
RF Profiles	802.11a Band Status		54 Mbps	Supported 🗙
FlexConnect Groups	Low Band	Enabled	CCX Location Measur	ement
FlexConnect ACLs	Mid Band	Enabled	Mode	Enabled
FlexConnect VLAN Templates	High Band	Enabled	TWT Configuration *	**
Network Lists	BSS Color Configuration **	*	Target Waketime	Enabled
 802.11a/n/ac/ax Network 	BSS Color	Enabled	Broadcast TWT Support	Enabled

5 Ghz無線電中的預設資料速率

ululu cisco	<u>M</u> ONITOR <u>W</u> LANS <u>C</u> ONTR	oller w <u>i</u> reless <u>s</u> ecu	rity m <u>a</u> nagement c <u>c</u>	<u>o</u> mmands he <u>l</u> p
Wireless	802.11b/g Global Parame	eters		
Access Points All APs Radios	General		Data Rates**	
802.11a/n/ac/ax	802.11b/g Network Status	Enabled	1 Mbps	Mandatory 🗸
Dual-Band Radios	802.11g Support	Enabled	2 Mbps	Mandatory 🗸
Dual-5G Radios Global Configuration	Beacon Period (millisecs)	100	5.5 Mbps	Mandatory 🗸
Advanced	Short Preamble	🗹 Enabled	6 Mbps	Supported 🗸
Mesh	Fragmentation Threshold (bytes)	2346	9 Mbps	Supported 🗸
AP Group NTP	DTPC Support.	🗹 Enabled	11 Mbps	Mandatory 🗸
ATF	Maximum Allowed Clients	200	12 Mbps	Supported 🗸
RF Profiles	RSSI Low Check	Enabled	18 Mbps	Supported 🗸
FlexConnect	RSSI Threshold (-60 to -90 dBm)	-80	24 Mbps	Supported 🗸
Groups			36 Mbps	Supported 🗸
FlexConnect ACLs	CCX Location Measureme	nt	48 Mbps	Supported 🗸
FlexConnect VLAN Templates	Mode	Enabled	54 Mbps	Supported 🗸
Network Lists	BSS Color Configuration	***	TWT Configurati	on ***
 802.11a/n/ac/ax Network RRM 	BSS Color	Enabled	Target Waketime Broadcast TWT Su	Enable

2.4 Ghz無線電中的預設資料速率

修正:

您可以使用CLI或GUI來停用和啟用所需的資料速率:

1. 透過CLI為無線電802.11b執行的步驟:

config 802.11b disable network

- config 802.11b 11gSupport enable
- config 802.11b 11nSupport enable
- config 802.11b rate disabled 1
- config 802.11b rate disabled 2
- config 802.11b rate disabled 5.5
- config 802.11b rate disabled 11
- config 802.11b rate disabled 6
- config 802.11b rate disabled 9
- config 802.11b rate mandatory 12
- config 802.11b rate supported 18
- config 802.11b rate supported 24
- config 802.11b rate supported 36
- config 802.11b rate supported 48
- config 802.11b rate supported 54
- config 802.11b enable network

2. 透過GUI停用/啟用:

要更改無線控制器上無線網路的資料速率,請導航到控制器的GUI,選擇Wireless 頁籤,然後選擇802.11b/g/n/ax,選擇Network 頁籤,最後選擇所需的資料速率選項(停用、支援或強制)。

3. 透過802.11a無線電CLI執行的步驟。

config 802.11a disable network config 802.11a 11nSupport enable config 802.11a 11acSupport enable config 802.11a rate disabled 6 config 802.11a rate disabled 9 config 802.11a rate disabled 12 config 802.11a rate disabled 18 config 802.11a rate mandatory 24 config 802.11a rate supported 36 config 802.11a rate supported 48 config 802.11a rate supported 54 4. 透過GUI停用/啟用:

要更改無線控制器上無線網路的資料速率,請導航到GUI of the controller,選擇Wireless 頁籤,然後選擇802.11a/n/ac/ax,選擇Network 頁籤,最後選擇所需的資料速率選項(停用、支援或強制)。

5. 驗證後檢查:

،،۱۱،،۱۱، cısco	<u>M</u> ONITOR <u>W</u> LANS <u>C</u> ONTR	oller W <u>i</u> reless	<u>s</u> ecurity	M <u>a</u> nagement c <u>o</u> mman	NDS HE <u>L</u> P	
Wireless	802.11b/g Global Parame	eters				
Access Points All APs Radios	General			Data Rates**		
802.11a/n/ac/ax	802.11b/g Network Status	Enabled		1 Mbps	Disabled 🗸	0
Dual-Band Radios	802.11g Support	Enabled		2 Mbps	Disabled 🗸	0
Dual-5G Radios Global Configuration	Beacon Period (millisecs)	100		5.5 Mbps	Disabled 🗸	•
Advanced	Short Preamble	Enabled		6 Mbps	Disabled 🗸	0
Mesh	Fragmentation Threshold (bytes)	2346		9 Mbps	Disabled 🗸	0
AP Group NTP	DTPC Support.	Enabled		11 Mbps	Disabled 🗸	<u> </u>
▶ ATF	Maximum Allowed Clients	200		12 Mbps	Mandatory 🗸	2
RF Profiles	RSSI Low Check	Enabled		18 Mbps	Supported ¥	-
FlexConnect	RSSI Threshold (-60 to -90 dBm)	-80		24 Mbps	Supported 🗸	9
Groups				36 Mbps	Supported ¥	<u> </u>
FlexConnect ACLs	CCX Location Measureme	nt		48 Mbps	Supported V	٦ I
FlexConnect VLAN Templates	Mode	Enabled		54 Mbps	Supported ¥	ē
Network Lists	BSS Color Configuration	***		TWT Configuration **	**	
 802.11a/n/ac/ax Network 	BSS Color	Enabled		Target Waketime		Enabled
➡ RRM RF Grouping				Broadcast TWT Support		🗹 Enabled

無線電的建議資料速率802.11

،،ا،،،ا،، cısco	<u>M</u> onitor <u>W</u> lans <u>C</u> ontrol	ler w <u>i</u> reless <u>s</u> ecurity	M <u>a</u> nagement c <u>o</u> mman	ids he <u>l</u> p
Wireless	802.11a Global Parameters	5		
Access Points All APs Padios	General		Data Rates**	
802.11a/n/ac/ax	802.11a Network Status	Enabled	6 Mbps	Disabled 🗸
Dual-Band Radios	Beacon Period (millisecs)	100	9 Mbps	Disabled 💙
Dual-5G Radios Global Configuration	Fragmentation Threshold (bytes)	2346	12 Mbps	Disabled 🗸
Advanced	DTPC Support.	Enabled	18 Mbps	Disabled 🗸
Mesh	Maximum Allowed Clients	200	24 Mbps	Mandatory 🗸
AP Group NTP	RSSI Low Check	Enabled	36 Mbps	Supported V
▶ ATF	RSSI Threshold (-60 to -90 dBm)	-80	48 Mbps	Supported 🗸
RF Profiles	802.11a Band Status		54 Mbps	Supported ¥
FlexConnect Groups	Low Band	Enabled	CCX Location Measur	ement
FlexConnect ACLs	Mid Band	Enabled	Mode	Enabled
FlexConnect VLAN Templates	High Band	Enabled	TWT Configuration **	**
Network Lists	BSS Color Configuration **	*	Target Waketime	C Enabled
 802.11a/n/ac/ax Network 	BSS Color	Enabled	Broadcast TWT Support	Enabled

b無線電的建議資料速率802.11a

使用案例2.法規領域

每個國家都有自己的監管機構,負責監管無線頻譜的使用,以避免干擾並確保高效的無線通訊。

但是,有一些國家擁有相同的監管領域,卻經常共用與無線通訊相關的類似規則和法規,包括頻帶、功率水準和其他引數。這種協調 使符合某個國家/地區法規的裝置可以在同一監管領域的另一個國家/地區無縫運行。

不支援管制範圍時,即表示特定無線裝置或技術不符合特定國家或地區之管制當局所訂立的規則與規例。

在此案例中,務必確保控制器已正確設定以處理不同法規領域的存取點。如果來自中國的存取點與印度的國家代碼對映不正確,則可 能導致不合規問題,並且無線電插槽1以「不受支援」的監管域狀態關閉。

當您觀察到站點上的使用者僅連線到802.11b (2.4 GHz),並且Radio 1 (802.11a)的運行狀態不工作時可以檢測到此類問題。

以下是辨識和解決因不正確的國家代碼對映造成的問題的步驟:

1. 驗證無線電插槽的狀態:

訪問Status部分並導航到此路徑:檢Wireless > AP > <desired AP> > Interfaces. 查「Regulatory Domain: Not Supported」。

General Cr	edentials I	nterfaces	High Ava	ilability Inve	ntory	Advanced							
hernet Interfa	ices												
CDP Configur	ation												
Ethernet Int	erface#	CDP State											
0													
1 Interface		Operation	al Status	Tx Unicast Packe	ts Reth	nicast Packets	Tx Non-Uni	cast Packets	Rx Non	-Unicast Packets			
GigabitEtherne	etQ	UP		42901	14404	660	49042		387131	,			
GioabitEtherne	#11	DOWN		4294967293	0		3		0				
dio Interface	•												
Number of Rac	Sio Interfaces	2											
CDP Configur	ation												
Radio Slot#		COP State											
0													
1 Radio Slot#	Radio Interfac	e Type M	odule Type			Sub Ba	nd	Admin State	-	Oper Status	CleanAir/ST Admin Status	CleanAir/SI Oper Status	Regulatory Dom
0	802.11b/g/n							Enable		DOWN	Enable	DOWN	Supported
	802.11a/n/ac							Enable		DOWN	Enable	DOWN	Not Supported
and the second	00211100000												and the second

802.11a無線電由於存取點操作國家/地區的監管域支援問題而關閉

2. 確保管理員處於啟用狀態

cisco	<u>M</u> ONITOR <u>W</u> LANs	<u>C</u> ONTROLLER	WIRELESS	<u>s</u> ecurity	M <u>A</u> NAGEMENT
Wireless	802.11a/n/ac/ax C	cisco APs > Co	onfigure		
 ★ Access Points All APs ★ Radios	General				
802.11b/g/n/ax Dual-Band Radios Dual-5G Radios Global Configuration	AP Name Admin Status		Enable 🗸		
Advanced Mesh	Operational Stat Slot #	us	DOWN 1		

無線電802.11a上存取點的管理狀態

3. 確保在Wireless > Country下啟用存取點駐留位置的國家/地區代碼(如圖所示)。



控制器上啟用的國家代碼清單

修正:

1. 在存取點上對映所需的國家代碼, 使無線電1 (802.11 a)打開, 如圖所示。



選擇存取點所運營的國家/地區

2. 確保已啟動,且使用者已連線到5 GHz,如圖所示。

General	Credentials	Interfaces	High A	vailability Inve	entory	Advanced	Intell	igent Capture				
Ethernet In	iterfaces											
CDP Con	figuration											
Etherno	et Interface#	CDP Stat	e									
0												
Interfa	ce	Operatio	nal Status	Tx Unicast Packets	Rx Unic	ast Packets	Tx Non-U	nicast Packets	Rx Non-Unicast Packet	s		
GigabitE	themet0	UP		84856797	261418	006	0		156158298			
Radio Inter	faces											
Number	of Radio Interfaces	3										
CDP Con	figuration											
		5775767755										
Radio S	lot#	CDP Stat	e									
0		2										
1												
2												
Radio Slot#	Radio Interf	ace Type M	odule Type			Sub Ba	nd	Admin Sta	tus Oper Status	CleanAir/SI Admin Status	CleanAir/SI Oper Status	Regulatory Domain
0	802.11b/g/n/	ax -				-		Enable	UP	Enable	UP	Supported
1	802.11a/n/ac	/ax -						Enable	UP	Enable	UP	Supported
2	802.11a/n/ac	/ax -				1.5.1		Disable	DOWN	NA	NA	Supported

確保AP管理狀態為打開並且支援管制域

使用案例3.頻帶選擇

頻帶方向使能夠執行雙頻(2.4和5 GHz)操作的客戶端能夠移動到不太擁塞的5 GHz存取點。 它透過延遲2.4 GHz通道上的探測響應 ,使5 GHz通道對客戶端更具吸引力,因此,客戶端選擇在5 GHz上連線。

建議:雖然此功能旨在幫助支援802.11n的雙頻客戶端選擇5GHz頻段,但在啟用語音的WLAN(使用對時間敏感的語音客戶端)上必 須謹慎使用該功能,因為它可能會導致漫遊延遲或呼叫掉線。



注意:啟用之前,請確保在環境中使用雙頻客戶端對其進行徹底測試。

在WLAN上啟用頻帶選擇的步驟:

GUI: 導航到WLAN > Advanced > Client Band Select並啟用Band Select > Apply(如圖所示)。

General Se	curity	QoS	Policy-Mapping	Advanced				
Allow AAA Ove	erride	🗹 Enab	led			DHCP		
Coverage Hole	Detection	🗹 Enab	led			DHCP Server	Override	
Enable Session	n Timeout	3600	00				_	
		Ses	sion Timeout (secs)			DHCP Addr. Assignment	Required	
Aironet IE		Enabl	ed			Management Frame Prot	ection (MFP)	
Diagnostic Cha	annel 18	Enabl	ed					
Override Inter	face ACL	IPv4 No	one 🗸	None	~	MFP Client Protection 4	Disabled v	
Laver2 Acl		None	~	None		DTIM Period (in beacon i	ntervals)	
		N						
UKL ACL		None	~			802.11a/n (1 - 255)	1	
P2P Blocking A	Action	Disable	d v			802.11b/g/n (1 - 255)	1	
Client Exclusio	n <u>3</u>	Enabled	60			NAC		
			Timeout Value (secs)		NAC State ISE NAC	~	
Maximum Allow 8	wed Clients	0				Load Balancing and Band	Select	
Static IP Tunne	eling 💶	Enabl	ed			Client Load Balancing		
Wi-Fi Direct Cl	ients Policy	Disable	d v			Client Band Select		

WLAN下的頻帶選擇選項

WLANs > Edit

CLI :

(WLC) >config wlan band-select allow enable

使用案例4.802.11K

802.11k:802.11k或鄰居清單功能向客戶端提供所有鄰居AP的清單。因此,使用者端可以使用其RSSI值來檢查所有可用的選項,並 可做出漫遊的明智決定。客戶端透過鄰居清單選擇的AP獲得更好的訊號,因此無線效能和速度也更高。此選項適用於具有802.11k功 能的客戶端。

啟用鄰居清單的步驟**:**

GUI: 導航到WLAN > Advanced > Neighbor List並啟用Apply ,如下圖所示。

<u>M</u> ONITOR	<u>W</u> LANs	<u>C</u> ONTROLLER	WIRELESS	<u>s</u> ecur	ITY M <u>A</u> NA	GEME
WLANs >	Edit 1					
General	Securi	ty QoS	Policy-Map	ping	Advanced	
Lync						
Lync S	erver	Disable	ed 🗸			
11k						
Neighb	or List			🗸 Ena	abled	
Neighb	or List Dual	Band		🗌 Ena	abled	
Assiste	ed Roaming F	Prediction Optim	ization	🗌 Ena	abled	
802.11ax	BSS Config	juration				
Down I	Link MU-MIM	0		🔽 Ena	bled	
Up Linl	k MU-MIMO		🔽 Ena	bled		
Down Link OFDMA Common Enabled						
Up Lin	k ofdma			🔽 Ena	abled	

啟用的鄰居清單

CLI:

config wlan assisted-roaming neighbor-list {enable | disable} wlan-id

使用案例5.色版寬度

通道寬度是一項功能,您可以透過此功能將兩個、四個或更多的通道組合在一起,以增加輸送量。例如:如果您將兩個通道合併成一 個通道,讓使用者端能傳遞更多資料並提供更快的速度。

此功能專為5 GHz頻段而設計,因為5 GHz中有更多非重疊通道,這些通道可以組合在一起,在無線上提供更快的速度。 預設情況下,通道寬度為20 MHz,您可以將其增加到40 MHz、80 MHz或160 MHz。如果合併兩個色版,則整體非重疊色版會減少 。因此,如果地板上有大量AP,則在使用此功能時需要小心。

啟用通道寬度為40 MHz的步驟: GUI: MONITOR WLANS CONTROLLER WIRELESS SECURITY MANAGEMENT COMMANDS HELP

802.11a > RRM > Dynamic Channel Assignment (DCA)

Dynamic Channel Assignment Algorithm

Channel Assignment Method	 Automatic 	Interval: 10 minutes v	AnchorTime: 0 🗸
	OFreeze	Invoke Channel Update	Once
	OOFF		
Avoid Foreign AP interference	Enabled		
Avoid Cisco AP load	Enabled		
Avoid non-802.11a noise	Enabled		
Avoid Persistent Non-WiFi Interference	e 🗹 Enabled		
Channel Assignment Leader	ors04-wl-wlc1 (10).229.242.8)	
Last Auto Channel Assignment	190 secs ago		
DCA Channel Sensitivity	Medium Y (1	5 dB)	
Channel Width	O 20 MHz ○ 40 I	MHz 080 MHz 0160 MHz	○80+80 MHz ○Best
Avoid check for non-DFS channel	Enabled		

預設通道寬度設定為20

802.11a > RRM > Dynamic Channel Assignment (DCA)

Dynamic Channel Assignment Algorithm

Channel Assignment Method	OAutomatic	Interval: 10 minutes v	AnchorTime: 0 v
	OFreeze	Invoke Channel Update	Once
	OFF		
Avoid Foreign AP interference	Enabled		
Avoid Cisco AP load	Enabled		
Avoid non-802.11a noise	Enabled		
Avoid Persistent Non-WiFi Interference	e 🔽 Enabled		
Channel Assignment Leader	ors04-wl-wlc1 (10	.229.242.8)	
Last Auto Channel Assignment	190 secs ago		
DCA Channel Sensitivity	Medium V (15	5 dB)	
Channel Width	○20 MHz	MHz 080 MHz 0160 MHz	○80+80 MHz ○Best
Avoid check for non-DFS channel	Enabled		

DCA Channel List

CLI :

(WLC) >config 802.11a disable network y (WLC) >config advanced 802.11a channel dca chan-width-11n 40 (WLC) >config 802.11a enable network

使用案例6.Qos

QoS或服務品質可用於根據WLAN要求確定流量的優先順序。您可以將語音流量WLAN配置為使用白金QoS,將低頻寬WLAN配置為 使用銅牌QoS,並在剩餘的QoS級別之間分配所有其他流量。

在WLAN上配置白金Qos的步驟:

GUI: 導航到WLAN,選擇WLAN ID > QoS,並將Quality of Service (QoS)設定為Platinum (voice),如圖所示。

	<u>W</u> LANs		ER W <u>I</u> RI	ELESS	SECUR	RITY	MANAG	EMENT
WLANs >	Edit							
General	Secu	rity Qos	6 Polic	:у-Мар	ping	Adva	nced	
Quality Applica AVC Pro Flex AV Netflow Fastlan	of Service tion Visibili ofile /C Profile v Monitor e	(QoS) F ty f r E	latinum (vo Enabled UTOQOS-A one v one	ice) VC-PROF	TILE V			

QOS值設定為「白金服務」

CLI :

(WLC)> config wlan qos wlan_id platinum

關於此翻譯

思科已使用電腦和人工技術翻譯本文件,讓全世界的使用者能夠以自己的語言理解支援內容。請注 意,即使是最佳機器翻譯,也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準 確度概不負責,並建議一律查看原始英文文件(提供連結)。