



Configuring SSH and Telnet

This chapter describes how to configure Secure Shell Protocol (SSH) and Telnet on Cisco NX-OS devices.

This chapter includes the following sections:

- [About SSH and Telnet, on page 1](#)
- [Prerequisites for SSH and Telnet, on page 3](#)
- [Guidelines and Limitations for SSH and Telnet, on page 3](#)
- [Default Settings for SSH and Telnet, on page 4](#)
- [Configuring SSH , on page 4](#)
- [Configuring Telnet, on page 19](#)
- [Verifying the SSH and Telnet Configuration, on page 21](#)
- [Configuration Example for SSH, on page 21](#)
- [Configuration Example for SSH Passwordless File Copy, on page 22](#)
- [Configuration Example for X.509v3 Certificate-Based SSH Authentication, on page 24](#)
- [Additional References for SSH and Telnet, on page 25](#)

About SSH and Telnet

This section includes information about SSH and Telnet.

SSH Server

You can use the SSH server to enable an SSH client to make a secure, encrypted connection to a Cisco NX-OS device. SSH uses strong encryption for authentication. The SSH server in the Cisco NX-OS software can interoperate with publicly and commercially available SSH clients.

The user authentication mechanisms supported for SSH are RADIUS, TACACS+, LDAP, and the use of locally stored usernames and passwords.

SSH Client

The SSH client feature is an application that runs over the SSH protocol to provide device authentication and encryption. The SSH client enables a Cisco NX-OS device to make a secure, encrypted connection to another Cisco NX-OS device or to any other device that runs the SSH server. This connection provides an outbound

connection that is encrypted. With authentication and encryption, the SSH client allows for a secure communication over an insecure network.

The SSH client in the Cisco NX-OS software works with publicly and commercially available SSH servers.

SSH Server Keys

SSH requires server keys for secure communications to the Cisco NX-OS device. You can use SSH server keys for the following SSH options:

- SSH version 2 using Rivest, Shamir, and Adelman (RSA) public-key cryptography
- SSH version 2 using the Digital System Algrithm (DSA)

Be sure to have an SSH server key-pair with the appropriate version before enabling the SSH service. You can generate the SSH server key-pair according to the SSH client version used. The SSH service accepts the following types of key-pairs for use by SSH version 2:

- The **dsa** option generates the DSA key-pair for the SSH version 2 protocol.
- The **rsa** option generates the RSA key-pair for the SSH version 2 protocol.

By default, the Cisco NX-OS software generates an RSA key using 1024 bits.

SSH supports the following public key formats:

- OpenSSH
- IETF Secure Shell (SECSH)
- Public Key Certificate in Privacy-Enhanced Mail (PEM)



Caution If you delete all of the SSH keys, you cannot start the SSH services.

SSH Authentication Using Digital Certificates

SSH authentication on Cisco NX-OS devices provide X.509 digital certificate support for host authentication. An X.509 digital certificate is a data item that ensures the origin and integrity of a message. It contains encryption keys for secured communications and is signed by a trusted certification authority (CA) to verify the identity of the presenter. The X.509 digital certificate support provides either DSA or RSA algorithms for authentication.

The certificate infrastructure uses the first certificate that supports the Secure Socket Layer (SSL) and is returned by the security infrastructure, either through a query or a notification. Verification of certificates is successful if the certificates are from any of the trusted CAs configured and if not revoked or expired.

You can configure your device for SSH authentication using an X.509 certificate. If the authentication fails, you are prompted for a password.

Telnet Server

The Telnet protocol enables TCP/IP connections to a host. Telnet allows a user at one site to establish a TCP connection to a login server at another site and then passes the keystrokes from one device to the other. Telnet can accept either an IP address or a domain name as the remote device address.

The Telnet server is disabled by default on the Cisco NX-OS device.

Prerequisites for SSH and Telnet

Make sure that you have configured IP on a Layer 3 interface, out-of-band on the mgmt 0 interface, or inband on an Ethernet interface.

Guidelines and Limitations for SSH and Telnet

SSH and Telnet have the following configuration guidelines and limitations:

- The Cisco NX-OS software supports only SSH version 2 (SSHv2).
- When you use the **no feature ssh feature** command, port 22 is not disabled . Port 22 is always open and a deny rule is pushed to deny all incoming external connections.
- Due to a Poodle vulnerability, SSLv3 is no longer supported.
- IPSG is not supported on the following:
 - The last six 40-Gb physical ports on the Cisco Nexus® 3550-T switches.
 - All 40G physical ports on the Cisco Nexus® 3550-T switches.
- You can configure your device for SSH authentication using an X.509 certificate. If the authentication fails, you are prompted for a password.
- The SFTP server feature does not support the regular SFTP **chown** and **chgrp** commands.
- When the SFTP server is enabled, only the admin user can use SFTP to access the device.
- SSH public and private keys imported into user accounts that are remotely authenticated through a AAA protocol (such as RADIUS or TACACS+) for the purpose of SSH Passwordless File Copy will not persist when the Nexus device is reloaded unless a local user account with the same name as the remote user account is configured on the device before the SSH keys are imported.
- SSH timeout period must be longer than the time of the tac-pac generation time. Otherwise, the VSH log might show %VSHD-2-VSHD_SYSLOG_EOL_ERR error. Ideally, set to 0 (infinity) before collecting tac-pac or showtech.



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Default Settings for SSH and Telnet

This table lists the default settings for SSH and Telnet parameters.

Table 1: Default SSH and Telnet Parameters

Parameters	Default
SSH server	Enabled
SSH server key	RSA key generated with 1024 bits
RSA key bits for generation	1024
Telnet server	Disabled
Telnet port number	23
Maximum number of SSH login attempts	3
SCP server	Disabled
SFTP server	Disabled

Configuring SSH

This section describes how to configure SSH.

Generating SSH Server Keys

You can generate an SSH server key based on your security requirements. The default SSH server key is an RSA key that is generated using 1024 bits.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config) #	Enters global configuration mode.
Step 2	no feature ssh Example: switch(config) # no feature ssh	Disables SSH.
Step 3	feature ssh Example:	Enables SSH.

	Command or Action	Purpose
	switch(config)# feature ssh	
Step 4	exit Example: <pre>switch(config)# exit switch#</pre>	Exits global configuration mode.
Step 5	(Optional) show ssh key [dsa rsa] [] Example: <pre>switch# show ssh key</pre>	Displays the SSH server keys.
Step 6	(Optional) copy running-config startup-config Example: <pre>switch# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

Specifying the SSH Public Keys for User Accounts

You can configure an SSH public key to log in using an SSH client without being prompted for a password. You can specify the SSH public key in one of these formats:

- OpenSSH format
- IETF SECSH format

Specifying the SSH Public Keys in IETF SECSH Format

You can specify the SSH public keys in IETF SECSH format for user accounts.

Before you begin

Generate an SSH public key in IETF SCHSH format.

Procedure

	Command or Action	Purpose
Step 1	copy server-file bootflash:filename Example: <pre>switch# copy tftp://10.10.1.1/secsh_file.pub bootflash:secsh_file.pub</pre>	Downloads the file containing the SSH key in IETF SECSH format from a server. The server can be FTP, secure copy (SCP), secure FTP (SFTP), or TFTP.
Step 2	configure terminal Example: <pre>switch# configure terminal switch(config) #</pre>	Enters global configuration mode.

Specifying the SSH Public Keys in OpenSSH Format

	Command or Action	Purpose
Step 3	username <i>username</i> sshkey file bootflash:<i>filename</i> Example: switch(config)# username User1 sshkey file bootflash:secsh_file.pub	Configures the SSH public key in IETF SECSH format.
Step 4	exit Example: switch(config)# exit switch#	Exits global configuration mode.
Step 5	(Optional) show user-account Example: switch# show user-account	Displays the user account configuration.
Step 6	(Optional) copy running-config startup-config Example: switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

Specifying the SSH Public Keys in OpenSSH Format

You can specify the SSH public keys in OpenSSH format for user accounts.

Before you begin

Generate an SSH public key in OpenSSH format.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config) #	Enters global configuration mode.
Step 2	username <i>username</i> sshkey <i>ssh-key</i> Example: switch(config)# username User1 sshkey ssh-rsa AAAQABJQ2MWEVAMN...19FGz19G3ExsK0IVH7uyx50v7gSP hOBmsiCAKuiIfDqmlNpEab7dOHVRFY/GhNQjgig30c66 Xn+NjnLB7ihpM7dLbbDWOnHYshMsSiH3UD/VyzIEh5S4Tpx8=	Configures the SSH public key in OpenSSH format.

	Command or Action	Purpose
Step 3	exit Example: switch(config)# exit switch#	Exits global configuration mode.
Step 4	(Optional) show user-account Example: switch# show user-account	Displays the user account configuration.
Step 5	(Optional) copy running-config startup-config Example: switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring a Maximum Number of SSH Login Attempts

You can configure the maximum number of SSH login attempts. If the user exceeds the maximum number of permitted attempts, the session disconnects.



Note The total number of login attempts includes attempts through public-key authentication, certificate-based authentication, and password-based authentication. If public-key authentication is enabled, it takes priority. If only certificate-based and password-based authentication are enabled, certificate-based authentication takes priority. If you exceed the configured number of login attempts through all of these methods, a message appears indicating that too many authentication failures have occurred.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#[/td> <td>Enters global configuration mode.</td>	Enters global configuration mode.
Step 2	ssh login-attempts <i>number</i> Example: switch(config)# ssh login-attempts 5	Configures the maximum number of times that a user can attempt to log into an SSH session. The default maximum number of login attempts is 3. The range is from 1 to 10.

Starting SSH Sessions

	Command or Action	Purpose
		Note The no form of this command removes the previous login attempts value and sets the maximum number of login attempts to the default value of 3.
Step 3	(Optional) show running-config security all Example: switch(config)# show running-config security all	Displays the configured maximum number of SSH login attempts.
Step 4	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Copies the running configuration to the startup configuration.

Starting SSH Sessions

You can start SSH sessions using IPv4 to connect to remote devices from the Cisco NX-OS device.

Before you begin

Obtain the hostname for the remote device and, if needed, the username on the remote device.

Enable the SSH server on the remote device.

Procedure

	Command or Action	Purpose
Step 1	ssh [username@]{ipv4-address hostname} Example: switch# ssh 10.10.1.1	Creates an SSH IPv4 session to a remote device using IPv4.

Starting SSH Sessions from Boot Mode

You can start SSH sessions from the boot mode of the Cisco NX-OS device to connect to remote devices.

Before you begin

Obtain the hostname for the remote device and, if needed, the username on the remote device.

Enable the SSH server on the remote device.

Procedure

	Command or Action	Purpose
Step 1	ssh [username@]hostname Example: switch(boot) # ssh user1@10.10.1.1	Creates an SSH session to a remote device from the boot mode of the Cisco NX-OS device.
Step 2	exit Example: switch(boot) # exit	Exits boot mode.
Step 3	copy scp://[username@]hostname/filepath directory Example: switch# copy scp://user1@10.10.1.1/users abc	Copies a file from the Cisco NX-OS device to a remote device using the Secure Copy Protocol (SCP).

Configuring SSH Passwordless File Copy

You can copy files from a Cisco NX-OS device to a secure copy (SCP) or secure FTP (SFTP) server without a password. To do so, you must create an RSA or DSA identity that consists of public and private keys for authentication with SSH.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config) #	Enters global configuration mode.
Step 2	[no] username username keypair generate {rsa [bits [force]] dsa [force]} Example: switch(config) # username user1 keypair generate rsa 2048 force	Generates the SSH public and private keys and stores them in the home directory (\$HOME/.ssh) of the Cisco NX-OS device for the specified user. The Cisco NX-OS device uses the keys to communicate with the SSH server on the remote machine. The <i>bits</i> argument is the number of bits used to generate the key. The range is from 768 to 2048. The default value is 1024. Use the force keyword to replace an existing key. The SSH keys are not generated if the force keyword is omitted and SSH keys are already present.
Step 3	(Optional) show username username keypair	Displays the public key for the specified user.

	Command or Action	Purpose
	Example: <pre>switch(config)# show username user1 keypair</pre>	Note For security reasons, this command does not show the private key.
Step 4	<p>Required: username username keypair export {bootflash:filename volatile:filename} {rsa dsa} [force]</p> <p>Example:</p> <pre>switch(config)# username user1 keypair export bootflash:key_rsa rsa</pre>	Exports the public and private keys from the home directory of the Cisco NX-OS device to the specified bootflash or volatile directory. Use the force keyword to replace an existing key. The SSH keys are not exported if the force keyword is omitted and SSH keys are already present. To export the generated key pair, you are prompted to enter a passphrase that encrypts the private key. The private key is exported as the file that you specify, and the public key is exported with the same filename followed by a .pub extension. You can now copy this key pair to any Cisco NX-OS device and use SCP or SFTP to copy the public key file (*.pub) to the home directory of the server.
Step 5	<p>Required: username username keypair import {bootflash:filename volatile:filename} {rsa dsa} [force]</p> <p>Example:</p> <pre>switch(config)# username user1 keypair import bootflash:key_rsa rsa</pre>	Imports the exported public and private keys from the specified bootflash or volatile directory to the home directory of the Cisco NX-OS device. Use the force keyword to replace an existing key. The SSH keys are not imported if the force keyword is omitted and SSH keys are already present. To import the generated key pair, you are prompted to enter a passphrase that decrypts the private key. The private key is imported as the file that you specify, and the public key is imported with the same filename followed by a .pub extension.

What to do next

On the SCP or SFTP server, use the following command to append the public key stored in the *.pub file (for example, key_rsa.pub) to the authorized_keys file:

```
$ cat key_rsa.pub >> $HOME/.ssh/ authorized_keys
```

You can now copy files from the Cisco NX-OS device to the server without a password using standard SSH and SCP commands.

Configuring SCP and SFTP Servers

You can configure an SCP or SFTP server on the Cisco NX-OS device in order to copy files to and from a remote device. After you enable the SCP or SFTP server, you can execute an SCP or SFTP command on the remote device to copy the files to or from the Cisco NX-OS device.



Note The arcfour and blowfish cipher options are not supported for the SCP server.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	[no] feature scp-server Example: switch(config)# feature scp-server	Enables or disables the SCP server on the Cisco NX-OS device.
Step 3	Required: [no] feature sftp-server Example: switch(config)# feature sftp-server	Enables or disables the SFTP server on the Cisco NX-OS device.
Step 4	Required: exit Example: switch(config)# exit switch#	Exits global configuration mode.
Step 5	(Optional) show running-config security Example: switch# show running-config security	Displays the configuration status of the SCP and SFTP servers.
Step 6	(Optional) copy running-config startup-config Example: switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring X.509v3 Certificate-Based SSH Authentication

You can configure SSH authentication using X.509v3 certificates.

Before you begin

Enable the SSH server on the remote device.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: <pre>switch# configure terminal switch(config) #</pre>	Enters global configuration mode.
Step 2	username user-id [password [0 5] password] Example: <pre>switch(config) # username jsmith password 4Ty18Rnt</pre>	<p>Configures a user account. The <i>user-id</i> argument is a case-sensitive, alphanumeric character string with a maximum length of 28 characters. Valid characters are uppercase letters A through Z, lowercase letters a through z, numbers 0 through 9, hyphen (-), period (.), underscore (_), plus sign (+), and equal sign (=). The at symbol (@) is supported in remote usernames but not in local usernames.</p> <p>Usernames must begin with an alphanumeric character.</p> <p>The default password is undefined. The 0 option indicates that the password is clear text, and the 5 option indicates that the password is encrypted. The default is 0 (clear text).</p> <p>Note If you do not specify a password, the user might not be able to log in to the Cisco NX-OS device.</p> <p>Note If you create a user account with the encrypted password option, the corresponding SNMP user will not be created.</p>
Step 3	username user-id ssh-cert-dn dn-name {dsa rsa} Example: <pre>switch(config) # username jsmith ssh-cert-dn "/O = ABCcompany, OU = ABC1, emailAddress = jsmith@ABCcompany.com, L = Metropolis, ST = New York, C = US, CN = jsmith" rsa</pre>	Specifies an SSH X.509 certificate distinguished name and DSA or RSA algorithm to use for authentication for an existing user account. The distinguished name can be up to 512 characters and must follow the format shown in the examples. Make sure the email address and state are configured as emailAddress and ST, respectively.
Step 4	[no] crypto ca trustpoint trustpoint	Configures a trustpoint.

	Command or Action	Purpose
	Example: <pre>switch(config)# crypto ca trustpoint winca switch(config-trustpoint)#{/pre} </pre>	Note Before you delete a trustpoint using the no form of this command, you must first delete the CRL and CA certificate, using the delete crt and delete ca-certificate commands.
Step 5	crypto ca authenticate trustpoint Example: <pre>switch(config-trustpoint)#{ crypto ca authenticate winca{/pre} </pre>	Configures a CA certificate for the trustpoint. Note To delete a CA certificate, enter the delete ca-certificate command in the trustpoint configuration mode.
Step 6	(Optional) crypto ca crt request trustpoint bootflash:static-crl.crl Example: <pre>switch(config-trustpoint)#{ crypto ca crl request winca bootflash:crllist.crl{/pre} </pre>	This command is optional but highly recommended. Configures the certificate revocation list (CRL) for the trustpoint. The CRL file is a snapshot of the list of revoked certificates by the trustpoint. This static CRL list is manually copied to the device from the Certification Authority (CA). Note Static CRL is the only supported revocation check method. Note To delete the CRL, enter the delete crt command.
Step 7	(Optional) show crypto ca certificates Example: <pre>switch(config-trustpoint)#{ show crypto ca certificates{/pre} </pre>	Displays the configured certificate chain and associated trustpoint.
Step 8	(Optional) show crypto ca crt trustpoint Example: <pre>switch(config-trustpoint)#{ show crypto ca crt winca{/pre} </pre>	Displays the contents of the CRL list of the specified trustpoint.
Step 9	(Optional) show user-account Example: <pre>switch(config-trustpoint)#{ show user-account{/pre} </pre>	Displays configured user account details.
Step 10	(Optional) show users Example: <pre>switch(config-trustpoint)#{ show users{/pre} </pre>	Displays the users logged into the device.
Step 11	(Optional) copy running-config startup-config Example: <pre>switch(config-trustpoint)#{ copy running-config startup-config{/pre} </pre>	Copies the running configuration to the startup configuration.

	Command or Action	Purpose
	switch(config-trustpoint)# copy running-config startup-config	

Configuring Legacy SSH Algorithm Support

You can configure support for legacy SSH security algorithms, message authentication codes (MACs), key types, and ciphers.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#?	Enters the global configuration mode.
Step 2	(Optional) ssh kexalgos [all] Example: switch(config)# ssh kexalgos all	Use the all keyword to enable all supported KexAlgorithms which are the key exchange methods that are used to generate per-connection keys. Supported KexAlgorithmns are: <ul style="list-style-type: none">• curve25519-sha256• diffie-hellman-group-exchange-sha256• diffie-hellman-group1-sha1• diffie-hellman-group14-sha1• diffie-hellman-group1-sha1• ecdh-sha2-nistp256• ecdh-sha2-nistp384
Step 3	(Optional) ssh macs all Example: switch(config)# ssh macs all	Enables all supported MACs which are the message authentication codes used to detect traffic modification. Supported MACs are: <ul style="list-style-type: none">• hmac-sha1
Step 4	(Optional) ssh ciphers [all] Example: switch(config)# ssh ciphers all	Use the all keyword to enable all supported ciphers to encrypt the connection. Supported ciphers are: <ul style="list-style-type: none">• aes128-cbc• aes192-cbc

	Command or Action	Purpose
		<ul style="list-style-type: none"> • aes256-cbc • aes128-ctr • aes192-ctr • aes256-ctr • aes256-gcm@openssh.com • aes128-gcm@openssh.com
Step 5	(Optional) ssh keytypes all Example: switch(config)# ssh keytypes all	<p>Enables all supported PubkeyAcceptedKeyTypes which are the public key algorithms that the server can use to authenticate itself to the client.</p> <p>Supported key types are:</p> <ul style="list-style-type: none"> • ssh-dss • ssh-rsa

Algorithms Supported - FIPs Mode Enabled

The list of algorithms supported when the FIPs mode is enabled are as follows:

Table 2: Algorithms Supported - FIPs Mode Enabled

Algorithms	Supported	Unsupported
ciphers	<ul style="list-style-type: none"> • aes128-ctr • aes256-ctr • aes256-gcm@openssh.com • aes128-gcm@openssh.com 	<ul style="list-style-type: none"> • aes192-ctr • aes128-cbc • aes192-cbc • aes256-cbc
hmac	<ul style="list-style-type: none"> • hmac-sha2-256 • hmac-sha2-512 • hmac-sha1 	<ul style="list-style-type: none"> • hmac-sha2-256-etm@openssh.com • hmac-sha2-512-etm@openssh.com • hmac-sha1-etm@openssh.com

Changing the Default SSH Server Port

Algorithms	Supported	Unsupported
kexalgo	<ul style="list-style-type: none"> • ecdh-sha2-nistp256 • ecdh-sha2-nistp384 • ecdh-sha2-nistp521 • diffie-hellman-group16-sha512 • diffie-hellman-group14-sha1 • diffie-hellman-group14-sha256 	<ul style="list-style-type: none"> • curve25519-sha256 • curve25519-sha256@libssh.org
keytypes	<ul style="list-style-type: none"> • rsa-sha2-256 • ecdsa-sha2-nistp256 • ecdsa-sha2-nistp384 • ecdsa-sha2-nistp521 	ssh-rsa

Changing the Default SSH Server Port

You can change the SSHv2 port number from the default port number 22. Encryptions used while changing the default SSH port provides you with connections that support stronger privacy and session integrity.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config) #	Enters global configuration mode.
Step 2	no feature ssh Example: switch(config) # no feature ssh	Disables SSH.
Step 3	show sockets local-port-range Example: switch(config) # show sockets local port range (15001 - 58000) switch(config) # local port range (58001 - 63535) and nat port range (63536 - 65535)	Displays the available port range.
Step 4	ssh port local-port Example: switch(config) # ssh port 58003	Configures the port.

	Command or Action	Purpose
Step 5	feature ssh Example: switch(config)# feature ssh	Enables SSH.
Step 6	exit Example: switch(config)# exit switch#	Exits global configuration mode.
Step 7	(Optional) show running-config security all Example: switch# ssh port 58003	Displays the security configuration.
Step 8	(Optional) copy running-config startup-config Example: switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

Clearing SSH Hosts

When you download a file from a server using SCP or SFTP, or when you start an SSH session from this device to a remote host, you establish a trusted SSH relationship with that server. You can clear the list of trusted SSH servers for your user account.

Procedure

	Command or Action	Purpose
Step 1	clear ssh hosts Example: switch# clear ssh hosts	Clears the SSH host sessions and the known host file.

Disabling the SSH Server

By default, the SSH server is enabled on the Cisco NX-OS device. You can disable the SSH server to prevent SSH access to the switch.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.

	Command or Action	Purpose
Step 2	no feature ssh Example: switch(config)# no feature ssh	Disables SSH.
Step 3	exit Example: switch(config)# exit switch#	Exits global configuration mode.
Step 4	(Optional) show ssh server Example: switch# show ssh server	Displays the SSH server configuration.
Step 5	(Optional) copy running-config startup-config Example: switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

Deleting SSH Server Keys

You can delete SSH server keys on the Cisco NX-OS device after you disable the SSH server.



Note To reenable SSH, you must first generate an SSH server key.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config) #	Enters global configuration mode.
Step 2	no feature ssh Example: switch(config)# no feature ssh	Disables SSH.
Step 3	exit Example: switch(config)# exit switch#	Exits global configuration mode.

	Command or Action	Purpose
Step 4	(Optional) show ssh key Example: switch# show ssh key	Displays the SSH server key configuration.
Step 5	(Optional) copy running-config startup-config Example: switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

Related Topics[Generating SSH Server Keys](#), on page 4

Clearing SSH Sessions

You can clear SSH sessions from the Cisco NX-OS device.

Procedure

	Command or Action	Purpose
Step 1	show users Example: switch# show users	Displays user session information.
Step 2	clear line vty-line Example: switch(config)# clear line pts/12	Clears a user SSH session.

Configuring Telnet

This section describes how to configure Telnet on the Cisco NX-OS device.

Enabling the Telnet Server

You can enable the Telnet server on the Cisco NX-OS device. By default, the Telnet server is disabled.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config) #	Enters global configuration mode.

	Command or Action	Purpose
Step 2	feature telnet Example: switch(config)# feature telnet	Enables the Telnet server. The default is disabled.
Step 3	exit Example: switch(config)# exit switch#	Exits global configuration mode.
Step 4	(Optional) show telnet server Example: switch# show telnet server	Displays the Telnet server configuration.
Step 5	(Optional) copy running-config startup-config Example: switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

Starting Telnet Sessions to Remote Devices

You can start Telnet sessions to connect to remote devices from the Cisco NX-OS device. You can start Telnet sessions using either IPv4.

Before you begin

Obtain the hostname or IP address for the remote device and, if needed, the username on the remote device.

Enable the Telnet server on the Cisco NX-OS device.

Enable the Telnet server on the remote device.

Procedure

	Command or Action	Purpose
Step 1	telnet {ipv4-address host-name} [port-number] Example: switch# telnet 10.10.1.1	Starts a Telnet session to a remote device using IPv4. The default port number is 23. The range is from 1 to 65535.

Related Topics

[Enabling the Telnet Server](#), on page 19

Clearing Telnet Sessions

You can clear Telnet sessions from the Cisco NX-OS device.

Before you begin

Enable the Telnet server on the Cisco NX-OS device.

Procedure

	Command or Action	Purpose
Step 1	show users Example: switch# show users	Displays user session information.
Step 2	clear line vty-line Example: switch(config)# clear line pts/12	Clears a user Telnet session.

Verifying the SSH and Telnet Configuration

To display the SSH and Telnet configuration information, perform one of the following tasks:

Command	Purpose
show ssh key [dsa rsa] []	Displays the SSH server keys.
show running-config security [all]	Displays the SSH and user account configuration in the running configuration. The all keyword displays the default values for the SSH and user accounts.
show ssh server	Displays the SSH server configuration.
show telnet server	Displays the Telnet server configuration.
show username <i>username</i> keypair	Displays the public key for the specified user.
show user-account	Displays configured user account details.
show users	Displays the users logged into the device.

Configuration Example for SSH

The following example shows how to configure SSH with an OpenSSH key:

Procedure

Step 1 Disable the SSH server.

Example:

Configuration Example for SSH Passwordless File Copy

```
switch# configure terminal
switch(config)# no feature ssh
```

- Step 2** Generate an SSH server key.

Example:

```
switch(config)# ssh key rsa
generating rsa key(1024 bits).....
generated rsa key
```

- Step 3** Enable the SSH server.

Example:

```
switch(config)# feature ssh
```

- Step 4** Display the SSH server key.

Example:

- Step 5** Specify the SSH public key in OpenSSH format.

Example:

```
switch(config)# username User1 sshkey ssh-rsa
AAAAB3NzaC1yc2EAAQABIwAAAIEAy19oF6QaZ19G+3f1XswK3OiW4H7YyUyuA50r
v7gsEPjhOBYmsi6PAVKui1nIf/DQhum+1JNqJP/eLowb7ubO+1VKRXFY/G+1JNlQ
W3g9igG30c6k6+XVn+NjnII1B7ihvpVh7dLddMOXwOnXHYshXmSiH3UD/vKyzieh5
4Tp1x8=
```

- Step 6** Save the configuration.

Example:

```
switch(config)# copy running-config startup-config
```

Configuration Example for SSH Passwordless File Copy

The following example shows how to copy files from a Cisco NX-OS device to a secure copy (SCP) or secure FTP (SFTP) server without a password:

Procedure

- Step 1** Generate the SSH public and private keys and store them in the home directory of the Cisco NX-OS device for the specified user.

Example:

```
switch# configure terminal
switch(config)# username admin keypair generate rsa
generating rsa key(1024 bits).....
```

```
generated rsa key
```

Step 2 Display the public key for the specified user.

Example:

```
switch(config)# show username admin keypair
*****
rsa Keys generated: Thu Jul  9 11:10:29 2013
ssh-rsa
AAAAB3NzaC1yc2EAAAABIwAAIAAxWmjJT+oQhIcvnrMbx2BmD0P8boZE1TfJ
Fx9fexWp6rOiztlwODtehnjadWc6A+DE2DvYNvqsrU9TBypYDPQkR/+Y6cKubyFW
VxSBG/NHztQc3+QC1zdkIxGNJbEHyFoaajzNEO8LLOVFIMCZ2Td7gxUGRZc+fbq
S33GZsCAX6v0=
bitcount:262144
fingerprint:
8d:44:ee:6c:ca:0b:44:95:36:d0:7d:f2:b5:78:74:7d
*****
could not retrieve dsa key information
*****
```

Step 3 Export the public and private keys from the home directory of the Cisco NX-OS device to the specified bootflash directory.

Example:

```
switch(config)# username admin keypair export bootflash:key_rsa rsa
Enter Passphrase:
switch(config)# dir
.
.
.
951      Jul  9 11:13:59 2013  key_rsa
221      Jul  9 11:14:00 2013  key_rsa.pub
.
.
```

Step 4 After copying these two files to another Cisco NX-OS device using the **copy scp** or **copy sftp** command, import them to the home directory of the Cisco NX-OS device.

Example:

```
switch(config)# username admin keypair import bootflash:key_rsa rsa
Enter Passphrase:
switch(config)# show username admin keypair
*****
rsa Keys generated: Thu Jul  9 11:10:29 2013
ssh-rsa
AAAAB3NzaC1yc2EAAAABIwAAIAAxWmjJT+oQhIcvnrMbx2BmD0P8boZE1TfJ
Fx9fexWp6rOiztlwODtehnjadWc6A+DE2DvYNvqsrU9TBypYDPQkR/+Y6cKubyFW
VxSBG/NHztQc3+QC1zdkIxGNJbEHyFoaajzNEO8LLOVFIMCZ2Td7gxUGRZc+fbq
S33GZsCAX6v0=
```

Configuration Example for X.509v3 Certificate-Based SSH Authentication

```

bitcount:262144
fingerprint:
8d:44:ee:6c:ca:0b:44:95:36:d0:7d:f2:b5:78:74:7d
*****
could not retrieve dsa key information
*****
switch(config)#

```

- Step 5** On the SCP or SFTP server, append the public key stored in key_rsa.pub to the authorized_keys file.

Example:

```
$ cat key_rsa.pub >> $HOME/.ssh/ authorized_keys
```

You can now copy files from the Cisco NX-OS device to the server without a password using standard SSH and SCP commands.

- Step 6** (Optional) Repeat this procedure for the DSA keys.
-

Configuration Example for X.509v3 Certificate-Based SSH Authentication

The following example shows how to configure SSH authentication using X.509v3 certificates:

```

configure terminal
username jsmith password 4Ty18Rnt
username jsmith ssh-cert-dn "/O = ABCcompany, OU = ABC1,
emailAddress = jsmith@ABCcompany.com, L = Metropolis, ST = New York, C = US, CN = jsmith"
rsa
crypto ca trustpoint tp1
crypto ca authenticate tp1
crypto ca crl request tp1 bootflash:crl1.crl

show crypto ca certificates
Trustpoint: tp1
CA certificate 0:
subject= /CN=SecDevCA
issuer= /CN=SecDevCA
serial=01AB02CD03EF04GH05IJ06KL07MN
notBefore=Jun 29 12:36:26 2016 GMT
notAfter=Jun 29 12:46:23 2021 GMT
SHA1 Fingerprint=47:29:E3:00:C1:C1:47:F2:56:8B:AC:B2:1C:64:48:FC:F4:8D:53:AF
purposes: sslserver sslclient

show crypto ca crl tp1
Trustpoint: tp1 CRL: Certificate Revocation List (CRL):
    Version 2 (0x1)
    Signature Algorithm: sha1WithRSAEncryption
    Issuer: /CN=SecDevCA
    Last Update: Aug 8 20:03:15 2016 GMT
    Next Update: Aug 16 08:23:15 2016 GMT
    CRL extensions:
        X509v3 Authority Key Identifier:
            keyid:30:43:AA:80:10:FE:72:00:DE:2F:A2:17:E4:61:61:44:CE:78:FF:2A

```

```

show user-account
user:user1
    this user account has no expiry date
    roles:network-operator
    ssh cert DN : /C = US, ST = New York, L = Metropolis, O = cisco , OU = csg, CN =
user1; Algo: x509v3-sign-rsa

show users
NAME      LINE          TIME           IDLE        PID      COMMENT
user1     pts/1        Jul 27 18:43  00:03     18796   (10.10.10.1) session=ssh

```

Additional References for SSH and Telnet

This section describes additional information related to implementing SSH and Telnet.

Related Documents

Related Topic	Document Title
Cisco NX-OS licensing	<i>Cisco NX-OS Licensing Guide</i>
VRF configuration	<i>Cisco Nexus® 3550-T Unicast Routing Configuration Guide</i>

MIBs

MIBs	MIBs Link
MIBs related to SSH and Telnet	To locate and download supported MIBs, go to the following URL: ftp://ftp.cisco.com/pub/mibs/supportlists/nexus9000/ Nexus9000MIBSupportList.html

Additional References for SSH and Telnet