



# Configuration Partitioning

---

**Last Updated: November 29, 2011**

The Configuration Partitioning feature provides modularization (“partitioning”) of the running configuration state to provide granular access to the running configuration in Cisco IOS software.

This feature is enabled by default in Cisco IOS software images that include this feature.

The configuration state of a device is retrieved dynamically whenever a user issues the **showrunning-config** command. When the Configuration Partitioning feature is enabled, the system groups the configuration state of the device into parts (called “partitions”) so that only the configuration state the user wishes to review is retrieved when generating a displayed list of commands in the running configuration. This feature improves performance for high-end systems with complex configurations because only a part of the running configuration state is processed when generating the running configuration command list, as opposed to the existing method of processing the entire system configuration state.

Default configuration partitions are provided by the introduction of this feature; other Cisco IOS software features may define their own command partitions in later releases.

- [Finding Feature Information, page 1](#)
- [Information About Configuration Partitioning, page 2](#)
- [How to Use the Configuration Partitioning Feature, page 3](#)
- [Configuration Examples for Configuration Partitioning, page 6](#)
- [Additional References, page 14](#)
- [Feature Information for Configuration Partitioning, page 16](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.



---

**Americas Headquarters:**  
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

# Information About Configuration Partitioning

- [System Running Configurations, page 2](#)
- [Retrieving the Running Configuration for Display or Copy Operations, page 2](#)
- [Benefits of Partitioning the Running Configuration, page 2](#)

## System Running Configurations

Managing the configuration of any Cisco IOS software-based device involves managing the startup configuration (startup-config), which is a file stored in nonvolatile memory, and the running configuration (running-config), which is the set of all configuration options currently in effect on the system. Typically, the startup configuration file is loaded when the system boots, and changes to the system's running configuration, applied using the command-line interface (CLI), are saved by copying the running configuration to a configuration file (either locally or on the network), which can then be used to configure the device at startup, or used to configure other devices.

## Retrieving the Running Configuration for Display or Copy Operations

In the Cisco IOS software configuration model, the configuration state is maintained in a distributed manner, with each component storing its own configuration state. To retrieve global configuration information, the software must poll every component to collect the distributed information. This configuration state retrieval operation is performed by a process known as nonvolatile generation (NVGEN), and it is invoked by commands such as **showrunning-config**, which is used to display the current configuration state, and **copysystem:running-configuration**, which is used to save the running configuration by copying it to a file. When invoked, the NVGEN process queries each system component, each interface instance, and all other configured component objects in a standard sequence. A running configuration file is constructed as NVGEN traverses the system performing these queries, and it is this "virtual file" that is displayed or copied.

## Benefits of Partitioning the Running Configuration

The Configuration Partitioning feature is the latest in a series of Configuration Generation Performance Enhancement Features for Cisco IOS software. (See the "Related Documents" section for related features.) This feature improves the system's response time by providing a method for querying only the system component you wish to review when issuing the **showrunning-config** command.

When the Configuration Partitioning feature is enabled, the system groups the configuration state of the device into parts (called "partitions") for the purpose of generating the virtual running configuration file (the list of configuration commands). A new command, **showrunning-configpartition**, allows you to display only the part of the running configuration that you want to examine, rather than having to display the entire running configuration at once, or displaying only lines that match a certain string.

The key benefit of this feature is that it increases system performance by allowing the system to run the NVGEN process for only the collection of system components (such as specific interfaces) that you need to display. This is in contrast to other existing extensions to the **showrunning-config** command, which only filter the generated list after all system components have been processed.

The selective processing of the system's configuration state for the purpose of generating a partial running configuration is called "configuration partitioning."

More granular access to configuration information offers important performance benefits for high-end routing platforms with very large configuration files, while also enhancing configuration management by

allowing advanced configuration features to be implemented at a more granular level. Advanced configuration options include Cisco IOS software support for provisioning of customer services, Config Rollback, Config Locking, and configuration access control.

## How to Use the Configuration Partitioning Feature

- [Displaying Configuration Partitions, page 3](#)
- [Disabling the Configuration Partitioning Feature, page 5](#)

### Displaying Configuration Partitions

The main method of taking advantage of this feature is by using the **showrunning-configpartition***part* command in priveledge exec mode, which is a specialized extension to the **showrunning-config** command.

**Note**

The **partition***part* command extension is not available for the **more:systemrunning-config** command.

Because this feature offers improved performance for existing commands, this feature is enabled by default in Cisco IOS software images that support this feature. To quickly determine if this feature is supported and running on your system, issue the **showrunning-configpartition?** command in privileged EXEC mode.

#### SUMMARY STEPS

1. **show running-config partition ?**
2. **show running-config partition** *part*

#### DETAILED STEPS

**Step 1****show running-config partition ?**

Issuing this command will show you the list of running configuration parts available for display on your system.

If the Configuration Partitioning feature is supported on your system and is enabled, you will see the string “ config partition is TRUE ” as the first line of help output.

If you receive an error message when entering the command syntax shown here, this feature is not supported on your system. See the command documentation for the **showrunning-config** command for existing extensions of that command in other releases that allow you to show only part of the running configuration.

**Note** The list of available configuration parts may vary by software image and is dependent on what features are currently configured.

**Example:**

```
Router# show running-config partition ?
config partition is TRUE
access-list      All access-list configurations
boot             All boot configurations
class-map        All class-map configurations
common          All remaining unregistered configurations
```

global-cdp	All global cdp configurations
interface	All Interface specific Configurations
ip-as-path	All IP as-path configurations
ip-community	All IP community list configurations
ip-domain-list	All ip domain list configurations
ip-prefix-list	All ip prefix-list configurations
ip-static-routes	All IP static configurations
line	All line mode configurations
policy-map	All policy-map configurations
route-map	All route-map configurations
router	All routing configurations
snmp	All SNMP configurations
tacacs	All TACACS configurations

Choose the part of the running configuration you want to display, and use the associated keyword as the *part* argument in Step 2.

## Step 2 **show running-config partition part**

As an example, to have the system perform the NVGEN process on only the components associated with the access-list parts of the running configuration state, and display only the access-list related configurations, you would enter the **showrunning-configpartitionaccess-list** command:

### Example:

```
Router# show running-config partition access-list
Building configuration...
Current configuration : 127 bytes
!
Configuration of Partition access-list
!
!
!
access-list 90 permit 0.0.0.0 1.2.3.5
access-list 100 permit 10 any any
!
end
```

**Note** This command also allows you to run the NVGEN process and display the resulting output for specific interfaces. This is a key capability of this feature, as it was designed for systems with numerous active interfaces.

In the following example, the main configuration partition is the interface configuration, and the specific part of the configuration to be generated is the configuration for Fast Ethernet interface 0/0.

### Example:

```
Router# show running-config partition interface fastethernet0/0
Building configuration...
Current configuration : 213 bytes
!
Configuration of Partition interface FastEthernet0/0
!
!
interface FastEthernet0/0
 ip address 10.4.2.39 255.255.255.0
 no ip route-cache cef
 no ip route-cache
 duplex half
 ipv6 enable
 no cdp enable
!
!
end
```

## Disabling the Configuration Partitioning Feature

Because this feature offers improved performance for existing commands, this feature is enabled by default for Cisco IOS software images that support this feature. However, you may want to disable this feature if you determine that it is not needed, as this feature does use a small amount of system resources (memory and CPU utilization). To disable configuration partitioning, perform the following task, which assumes you are starting in user EXEC mode.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **no parser config partition**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>no parser config partition</b>  <b>Example:</b> Router(config)# no parser config partition  <b>Example:</b> Disabling config partitioning  <b>Example:</b> Router(config)#	Disables the configuration partitioning feature.

- [What to Do Next, page 6](#)

## What to Do Next

To reenable the feature after it has been disabled, use the **parserconfigpartition** command in global configuration mode.



### Note

As this feature is enabled by default, only the **no** form will appear in the running configuration file, or will be written to the startup configuration file when you issue the **copyrunning-configstartup-config** command.

# Configuration Examples for Configuration Partitioning

This section provides examples of displaying configuration partitions with the **show running-config partition** command:

- [Displaying Configuration Partitions Example, page 6](#)

## Displaying Configuration Partitions Example

In this example, the **showrunning-configpartition** command is used with related commands in a series of steps an administrator might take to check the status of a specific interface and the current configuration of some of the system's other components. Comparable filtered output from the standard **showrunning-config** command (for example, **showrunning-configincludeaccess-list**) is included for demonstration purposes.



### Note

The *part* argument can consist of multiple partition name keywords, as in **showrunning-configpartroutereigrp1**.

```
gt3-7200-3# show running-config partition ?
access-list      All access-list configurations
boot             All boot configurations
class-map        All class-map configurations
global-cdp       All global cdp configurations
interface        All Interface specific Configurations
ip-as-path       All IP as-path configurations
ip-community     All IP community list configurations
ip-domain-list   All ip domain list configurations
ip-static-routes All IP static configurations
line             All line mode configurations
policy-map       All policy-map configurations
route-map        All route-map configurations
router           All routing configurations
service          All service configurations
snmp             All SNMP configurations
gt3-7200-3# show running-config partition access-list

Building configuration...
Current configuration : 87 bytes
!
!
!
!
access-list 90 permit 0.0.0.0 1.2.3.5
access-list 100 permit 10 any any
```

```

!
end
gt3-7200-3# show running-config | include access-list

access-list 90 permit 0.0.0.0 1.2.3.5
access-list 100 permit 10 any any
gt3-7200-3#
gt3-7200-3# show running-config partition boot

Building configuration...
Current configuration : 51 bytes
!
boot network tftp://service_config.txt
!
!
!
end
gt3-7200-3# show running-config partition class-map

Building configuration...
Current configuration : 78 bytes
!
!
!
class-map match-all abc
  match any
class-map match-all xyz
!
!
!
end
gt3-7200-3# show running-config | begin class-map

class-map match-all abc
  match any
class-map match-all xyz
!
!
gt3-7200-3# show running-config partition global-cdp

Building configuration...
Current configuration : 43 bytes
!
!
!
cdp timer 20
cdp holdtime 100
!
end
gt3-7200-3# show running-config | include

global-cdp

cdp timer 20
cdp holdtime 100
gt3-7200-3#
gt3-7200-3# show ip interface brief
Interface                IP-Address      OK? Method Status          Protocol
FastEthernet0/0          unassigned     YES NVRAM   administratively down  down
Ethernet2/0              10.4.2.32      YES NVRAM   up              up
Ethernet2/1              unassigned     YES NVRAM   administratively down  down
Ethernet2/2              unassigned     YES NVRAM   administratively down  down
Ethernet2/3              unassigned     YES NVRAM   administratively down  down
Serial3/0                unassigned     YES NVRAM   administratively down  down
Serial3/1                unassigned     YES NVRAM   administratively down  down
Serial3/2                unassigned     YES NVRAM   administratively down  down
Serial3/3                unassigned     YES NVRAM   administratively down  down
Loopback0                unassigned     YES NVRAM   administratively down  down
Loopback234              unassigned     YES NVRAM   administratively down  down
gt3-7200-3# show running-config partition interface fastethernet0/0
Building configuration...
Current configuration : 98 bytes
!

```

```
!  
!  
interface FastEthernet0/0  
  no ip address  
  no ip route-cache  
  shutdown  
  duplex half  
!  
!  
end  
gt3-7200-3# show running-config partition interface ethernet2/0  
  
Building configuration...  
Current configuration : 122 bytes  
!  
!  
!  
interface Ethernet2/0  
  ip address 10.4.2.32 255.255.255.0  
  no ip proxy-arp  
  no ip route-cache  
  duplex half  
!  
!  
end  
gt3-7200-3# show running-config partition interface ethernet2/1  
Building configuration...  
Current configuration : 94 bytes  
!  
!  
!  
interface Ethernet2/1  
  no ip address  
  no ip route-cache  
  shutdown  
  duplex half  
!  
!  
end  
gt3-7200-3# show running-config partition interface ethernet2/2  
  
Building configuration...  
Current configuration : 94 bytes  
!  
!  
!  
interface Ethernet2/2  
  no ip address  
  no ip route-cache  
  shutdown  
  duplex half  
!  
!  
end  
gt3-7200-3# show running-config partition interface ethernet2/3  
Building configuration...  
Current configuration : 94 bytes  
!  
!  
!  
interface Ethernet2/3  
  no ip address  
  no ip route-cache  
  shutdown  
  duplex half  
!  
!  
end  
gt3-7200-3# show running-config partition interface serial3/0  
Building configuration...  
Current configuration : 103 bytes  
!  
!
```



```
!
interface Serial3/0
  no ip address
  no ip route-cache
  shutdown
  serial restart-delay 0
!
!
end
gt3-7200-3# show running-config partition interface serial3/1
Building configuration...
Current configuration : 103 bytes
!
!
!
interface Serial3/1
  no ip address
  no ip route-cache
  shutdown
  serial restart-delay 0
!
!
end
gt3-7200-3# show running-config partition interface serial3/2
Building configuration...
Current configuration : 103 bytes
!
!
!
interface Serial3/2
  no ip address
  no ip route-cache
  shutdown
  serial restart-delay 0
!
!
end
gt3-7200-3# show running-config partition interface serial3/3
Building configuration...
Current configuration : 103 bytes
!
!
!
interface Serial3/3
  no ip address
  no ip route-cache
  shutdown
  serial restart-delay 0
!
!
end
gt3-7200-3# show running-config partition interface loopback0
Building configuration...
Current configuration : 79 bytes
!
!
!
interface Loopback0
  no ip address
  no ip route-cache
  shutdown
!
!
end
gt3-7200-3# show running-config partition interface loopback1
Building configuration...
Current configuration : 79 bytes
!
!
!
interface Loopback1
  no ip address
  no ip route-cache
  shutdown
!
!
end
gt3-7200-3# show running-config partition interface loopback234
Building configuration...
Current configuration : 81 bytes
!
!
!
% Invalid input detected at '^' marker.
gt3-7200-3# show running-config partition interface loopback234
Building configuration...
Current configuration : 81 bytes
!
!
!
```

```

interface Loopback234
  no ip address
  no ip route-cache
  shutdown
!
!
end
gt3-7200-3# configure terminal

Enter configuration commands, one per line. End with CNTL/Z.
gt3-7200-3(config)# interface ethernet 2/0.1
gt3-7200-3(config-subif)# exit
gt3-7200-3(config)# exit
gt3-7200-3#
00:13:05: %SYS-5-CONFIG_I: Configured from console by console
gt3-7200-3# show running-config partition interface ethernet2/0.1
Building configuration...
Current configuration : 58 bytes
!
!
!
interface Ethernet2/0.1
  no ip route-cache
!
!
end
gt3-7200-3# show run partition ip?
ip-as-path ip-community ip-domain-list ip-static-routes
gt3-7200-3#sh run part ip-as
gt3-7200-3#sh run part ip-as-path

Building configuration...
Current configuration : 125 bytes
!
!
!
ip as-path access-list 2 permit $ABC
ip as-path access-list 2 permit $xyz*
ip as-path access-list 2 permit qwe*
!
end
gt3-7200-3# show running-config partition ip-community

Building configuration...
Current configuration : 92 bytes
!
!
!
ip community-list standard asd permit
ip community-list expanded qwe deny uio*
!
end
gt3-7200-3# show running-config | include ip community
ip community-list standard asd permit
ip community-list expanded qwe deny uio*
gt3-7200-3#
gt3-7200-3# show running-config partition ip-domain-list

Building configuration...
Current configuration : 70 bytes
!
!
!
ip domain-list iop
ip domain-list tyu
ip domain-list jkl
!
!
end
gt3-7200-3# show running-config partition ip-static-routes

Building configuration...
Current configuration : 98 bytes

```

```
!  
!  
!  
ip route 0.0.0.0 0.0.0.0 Ethernet2/0  
ip route 171.69.1.129 255.255.255.255 10.4.29.1  
!  
end  
gt3-7200-3# show running-config partition line  
Building configuration...  
Current configuration : 489 bytes  
!  
!  
!  
!  
line con 0  
  exec-timeout 0 0  
  transport output lat pad v120 mop telnet rlogin udptn nasi  
  stopbits 1  
line aux 0  
  transport output lat pad v120 mop telnet rlogin udptn nasi  
  stopbits 1  
line vty 0  
  password lab  
  login  
  transport input lat pad v120 mop telnet rlogin udptn nasi  
  transport output lat pad v120 mop telnet rlogin udptn nasi  
line vty 1 4  
  login  
  transport input lat pad v120 mop telnet rlogin udptn nasi  
  transport output lat pad v120 mop telnet rlogin udptn nasi  
!  
end  
gt3-7200-3# show running-config partition policy-map  
Building configuration...  
Current configuration : 162 bytes  
!  
!  
!  
policy-map qwer  
  description policy-map qwer.  
  class xyz  
    shape peak 8000 32 32  
policy-map pl  
policy-map sdf  
  class abc  
    set precedence 4  
!  
!  
!  
end  
gt3-7200-3# show running-config partition route-map  
Building configuration...  
Current configuration : 65 bytes  
!  
!  
!  
route-map iop permit 10  
!  
route-map rty permit 10  
!  
!  
end  
gt3-7200-3#sh run part router bgp 1  
Building configuration...  
Current configuration : 111 bytes  
!  
!  
!  
router bgp 1  
  no synchronization  
  bgp log-neighbor-changes  
  distance bgp 2 2 2  
  no auto-summary
```

```

!
!
end
gt3-7200-3#sh run part router egp ?
<0-65535> Remote autonomous system number
gt3-7200-3#sh run part router egp 1
Building configuration...
Current configuration : 46 bytes
!
!
!
router egp 1
  timers egp 20 20
!
!
end
gt3-7200-3# show running-config partition router ?
  bgp      Border Gateway Protocol (BGP)
  egp      Exterior Gateway Protocol (EGP)
  eigrp    Enhanced Interior Gateway Routing Protocol (EIGRP)
  isis     ISO IS-IS
  iso-igrp IGRP for OSI networks
  mobile   Mobile routes
  odr      On Demand stub Routes
  ospf     Open Shortest Path First (OSPF)
  rip      Routing Information Protocol (RIP)
gt3-7200-3# show running-config partition router eigrp ?
<1-65535> Autonomous system number
gt3-7200-3# show running-config partition router eigrp 1
Building configuration...
Current configuration : 13 bytes
!
!
!
!
end
gt3-7200-3#
gt3-7200-3# sh run part router eigrp 2

Building configuration...
Current configuration : 57 bytes
!
!
!
router eigrp 2
  variance 10
  auto-summary
!
!
end
gt3-7200-3# show running-config partition router ?
  bgp      Border Gateway Protocol (BGP)
  egp      Exterior Gateway Protocol (EGP)
  eigrp    Enhanced Interior Gateway Routing Protocol (EIGRP)
  isis     ISO IS-IS
  iso-igrp IGRP for OSI networks
  mobile   Mobile routes
  odr      On Demand stub Routes
  ospf     Open Shortest Path First (OSPF)
  rip      Routing Information Protocol (RIP)
gt3-7200-3# show running-config partition router isis ?
  WORD    ISO routing area tag
  |       Output modifiers
  <cr>
gt3-7200-3# show running-config partition router isis qwe
Building configuration...
Current configuration : 86 bytes
!
!
!
router isis qwe
  set-attached-bit route-map qwer
  use external-metrics

```

```

!
!
end
gt3-7200-3# show running-config partition router isis ?
WORD ISO routing area tag
| Output modifiers
<cr>
gt3-7200-3# show running-config partition router iso
gt3-7200-3# show running-config partition router iso-igrp ?
WORD ISO routing area tag
| Output modifiers
<cr>
gt3-7200-3# show running-config partition router iso-igrp

Building configuration...
Current configuration : 31 bytes
!
!
!
router iso-igrp
!
!
end
gt3-7200-3# show running-config | begin iso
router iso-igrp
!
router isis qwe
set-attached-bit route-map qwer
use external-metrics
!
router egp 1
timers egp 20 20
!
router bgp 1
no synchronization
bgp log-neighbor-changes
distance bgp 2 2 2
no auto-summary
!

gt3-7200-3# show running-config partition router ?
bgp Border Gateway Protocol (BGP)
egp Exterior Gateway Protocol (EGP)
eigrp Enhanced Interior Gateway Routing Protocol (EIGRP)
isis ISO IS-IS
iso-igrp IGRP for OSI networks
mobile Mobile routes
odr On Demand stub Routes
ospf Open Shortest Path First (OSPF)
rip Routing Information Protocol (RIP)
gt3-7200-3# show running-config partition router mobile ?
| Output modifiers
<cr>
gt3-7200-3# show running-config partition router mobile

Building configuration...
Current configuration : 42 bytes
!
!
!
router mobile
distance 20
!
!
end
gt3-7200-3# sh run | include router

router mobile
router odr
router eigrp 2
router ospf 4
router iso-igrp
router isis qwe

```

```

router egp 1
router bgp 1
gt3-7200-3# show running-config partition router ?
  bgp      Border Gateway Protocol (BGP)
  egp      Exterior Gateway Protocol (EGP)
  eigrp    Enhanced Interior Gateway Routing Protocol (EIGRP)
  isis     ISO IS-IS
  iso-igrp IGRP for OSI networks
  mobile   Mobile routes
  odr      On Demand stub Routes
  ospf     Open Shortest Path First (OSPF)
  rip      Routing Information Protocol (RIP)
gt3-7200-3# show running-config partition router ospf ?
<1-65535> Process ID
gt3-7200-3# show running-config partition router ospf 4
Building configuration...
Current configuration : 64 bytes
!
!
!
router ospf 4
  log-adjacency-changes
  distance 4
!
!
end
gt3-7200-3# sh run part service
Building configuration...
Current configuration : 190 bytes
!
no service pad
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
service internal
service udp-small-servers
service tcp-small-servers
!
!
!
end
gt3-7200-3# sh run part snmp
Building configuration...
Current configuration : 84 bytes
!
!
!
snmp-server community user101 RW
snmp mib target list qwe host 0.0.0.0
!
end

```

## Additional References

The following sections provide references related to the Configuration Partitioning feature.

### Related Documents

Related Topic	Document Title
Running configuration performance enhancement-- <b>parserconfigcache</b> for interfaces.	Configuration Generation Performance Enhancement

Related Topic	Document Title
Provisioning of customer services, Config Rollback, Config Locking, and configuration access control	Contextual Configuration Diff Utility
Configuration management--Config change logging.	Configuration Change Notification and Logging
Configuration management --Quick-save for config change logging <sup>1</sup> .	Configuration Logger Persistency
Cisco IOS software configuration access control and config session locking (“Config Lock”).	Exclusive Configuration Change Access and Access Session Locking

**Standards**

Standard	Title
No standards are associated with this feature.	--

**MIBs**

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	--

**RFCs**

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	--

<sup>1</sup> The “Configuration Logger Persistency” feature allows saving just the commands entered since the last startup-config file was generated, rather than saving the entire startup configuration.

### Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password..</p>	<p><a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a></p>

## Feature Information for Configuration Partitioning

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.



**Table 1**      **Feature Information for Configuration Partitioning**

Feature Name	Releases	Feature Information
Configuration Partitioning	12.2(33)SRB 12.2(33)SB 12.2(33)SXI	<p>The Configuration Partitioning feature provides modularization (“partitioning”) of the running configuration state to provide granular access to the running configuration in Cisco IOS software. This feature is enabled by default in Cisco IOS software images that include this feature.</p> <p>In 12.2(33)SB, this feature was implemented on the Cisco 10000 series.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> <li>• Information About Configuration Partitioning</li> <li>• How to Use the Configuration Partitioning Feature</li> </ul>

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2011 Cisco Systems, Inc. All rights reserved.