

IPv6 RA Guard

Last Updated: January 22, 2013

The IPv6 RA Guard feature provides support for allowing the network administrator to block or reject unwanted or rogue router advertisement (RA) guard messages that arrive at the network device platform.

- Finding Feature Information, page 1
- Restrictions for IPv6 RA Guard, page 1
- Information About IPv6 RA Guard, page 2
- How to Configure IPv6 RA Guard, page 2
- Configuration Examples for IPv6 RA Guard, page 6
- Additional References, page 7
- Feature Information for IPv6 RA Guard, page 8

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Restrictions for IPv6 RA Guard

- The IPv6 RA Guard feature does not offer protection in environments where IPv6 traffic is tunneled.
- This feature is supported only in hardware when the ternary content addressable memory (TCAM) is programmed.
- This feature can be configured on a switch port interface in the ingress direction.
- This feature supports host mode and router mode.
- This feature is supported only in the ingress direction; it is not supported in the egress direction.
- This feature is supported on EtherChannel, but not on EtherChannel port members.
- This feature is not supported on trunk ports with merge mode.



- This feature is supported on auxiliary VLANs and private VLANs (PVLANs). In the case of PVLANs, primary VLAN features are inherited and merged with port features.
- Packets dropped by the IPv6 RA Guard feature can be spanned.
- If the platform ipv6 acl icmp optimize neighbor-discovery command is configured, the IPv6 RA
 Guard feature cannot be configured and an error message will be displayed. This command adds
 default global Internet Control Message Protocol (ICMP) entries that will override the RA guard
 ICMP entries.

Information About IPv6 RA Guard

- IPv6 Global Policies, page 2
- IPv6 RA Guard, page 2

IPv6 Global Policies

IPv6 global policies provide storage and access policy database services. IPv6 ND inspection and IPv6 RA guard are IPv6 global policies features. Every time an ND inspection or RA guard is configured globally, the policy attributes are stored in the software policy database. The policy is then applied to an interface, and the software policy database entry is updated to include this interface to which the policy is applied.

IPv6 RA Guard

The IPv6 RA Guard feature provides support for allowing the network administrator to block or reject unwanted or rogue RA guard messages that arrive at the network device platform. RAs are used by devices to announce themselves on the link. The IPv6 RA Guard feature analyzes these RAs and filters out RAs that are sent by unauthorized devices. In host mode, all RA and router redirect messages are disallowed on the port. The RA guard feature compares configuration information on the Layer 2 (L2) device with the information found in the received RA frame. Once the L2 device has validated the content of the RA frame and router redirect frame against the configuration, it forwards the RA to its unicast or multicast destination. If the RA frame content is not validated, the RA is dropped.

How to Configure IPv6 RA Guard

- Configuring the IPv6 RA Guard Policy on the Device, page 3
- Configuring IPv6 RA Guard on an Interface, page 5

Configuring the IPv6 RA Guard Policy on the Device

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. ipv6 nd raguard policy policy-name
- 4. device-role {host | router}
- **5.** hop-limit {maximum | minimum limit}
- 6. managed-config-flag {on | off}
- 7. match ipv6 access-list ipv6-access-list-name
- **8.** match ra prefix-list ipv6-prefix-list-name
- 9. other-config-flag $\{on \mid off\}$
- **10.** router-preference maximum {high | low | medium}
- 11. trusted-port
- **12**. exit

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ipv6 nd raguard policy policy-name	Defines the RA guard policy name and enters RA guard policy configuration mode.
	Example:	
	Device(config)# ipv6 nd raguard policy policy1	
Step 4	device-role {host router}	Specifies the role of the device attached to the port.
	Example:	
	Device(config-ra-guard)# device-role router	

	Command or Action	Purpose
Step 5	hop-limit {maximum minimum limit}	(Optional) Enables verification of the advertised hop count limit.
	<pre>Example: Device(config-ra-guard)# hop-limit minimum 3</pre>	If not configured, this check will be bypassed.
Step 6	managed-config-flag {on off}	(Optional) Enables verification that the advertised managed address configuration flag is on.
	Example: Device(config-ra-guard)# managed-config-flag on	If not configured, this check will be bypassed.
Step 7	match ipv6 access-list ipv6-access-list-name	(Optional) Enables verification of the sender's IPv6 address in inspected messages from the configured authorized device source access list.
	<pre>Example: Device(config-ra-guard)# match ipv6 access- list list1</pre>	If not configured, this check will be bypassed.
Step 8	match ra prefix-list ipv6-prefix-list-name	(Optional) Enables verification of the advertised prefixes in inspected messages from the configured authorized prefix list.
	<pre>Example: Device(config-ra-guard)# match ra prefix-list listname1</pre>	If not configured, this check will be bypassed.
Step 9	other-config-flag $\{on \mid off\}$	(Optional) Enables verification of the advertised "other" configuration parameter.
	<pre>Example: Device(config-ra-guard)# other-config-flag on</pre>	
Step 10	$router-preference\ maximum\ \{high\ \ low\ \ medium\}$	(Optional) Enables verification that the advertised default router preference parameter value is lower than or equal to a specified limit.
	<pre>Example: Device(config-ra-guard)# router-preference maximum high</pre>	
Step 11	trusted-port	(Optional) Specifies that this policy is being applied to trusted ports.
	<pre>Example: Device(config-ra-guard)# trusted-port</pre>	All RA guard policing will be disabled.
Step 12	exit	Exits RA guard policy configuration mode and returns to global configuration mode.
	<pre>Example: Device(config-ra-guard)# exit</pre>	

Configuring IPv6 RA Guard on an Interface

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- **3. interface** *type number*
- **4. ipv6 nd raguard attach-policy** [policy-name [**vlan** { **add** | **except** | **none** | **remove** | **all**} vlan [vlan1, vlan2, vlan3...]]]
- exit
- **6. show ipv6 nd raguard policy** [policy-name]
- 7. debug ipv6 snooping raguard [filter | interface | vlanid]

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface type number	Specifies an interface type and number, and places the device in interface configuration mode.
		praces the device in interface configuration mode.
	Example:	
	Device(config)# interface fastethernet 3/13	
Step 4	ipv6 nd raguard attach-policy [policy-name [vlan {add except none remove all} vlan [vlan1, vlan2, vlan3]]]	Applies the IPv6 RA Guard feature to a specified interface.
	2020 2020 0 0 0 0 0 0 0	
	Example:	
	Device(config-if)# ipv6 nd raguard attach-policy	
Step 5	exit	Exits interface configuration mode.
	Example:	
	Device(config-if)# exit	

	Command or Action	Purpose
Step 6	show ipv6 nd raguard policy [policy-name]	Displays the RA guard policy on all interfaces configured with the RA guard.
	Example:	
	Device# show ipv6 nd raguard policy raguard1	
Step 7	debug ipv6 snooping raguard [filter interface vlanid]	Enables debugging for IPv6 RA guard snooping information.
	Example:	
	Device# debug ipv6 snooping raguard	

Configuration Examples for IPv6 RA Guard

- Example: IPv6 RA Guard Configuration, page 6
- Example: Configuring IPv6 ND Inspection and RA Guard, page 6

Example: IPv6 RA Guard Configuration

```
Device(config)# interface fastethernet 3/13

Device(config-if)# ipv6 nd raguard attach-policy

Device# show running-config interface fastethernet 3/13

Building configuration...

Current configuration: 129 bytes!
interface FastEthernet3/13

switchport

switchport access vlan 222

switchport mode access

access-group mode prefer port

ipv6 nd raguard

end
```

Example: Configuring IPv6 ND Inspection and RA Guard

This example provides information about an interface on which both the Neighbor Discovery Inspection and RA Guard features are configured:

Device# show ipv6 snooping capture-policy interface ethernet 0/0

Hardware pol	icy registered on	Ethernet	0/0		
Protocol	Protocol value	Message	Value	Action	Feature
ICMP	58	RS	85	punt	RA Guard
				punt	ND Inspection
ICMP	58	RA	86	drop	RA guard
				punt	ND Inspection
ICMP	58	NS	87	punt	ND Inspection
ICM	58	NA	88	punt	ND Inspection

Additional References

Related Documents

Related Topic	Document Title	
IPv6 addressing and connectivity	IPv6 Configuration Guide	
Cisco IOS commands	Cisco IOS Master Commands List, All Releases	
IPv6 commands	Cisco IOS IPv6 Command Reference	
Cisco IOS IPv6 features	Cisco IOS IPv6 Feature Mapping	

Standards and RFCs

Standard/RFC	Title
RFCs for IPv6	IPv6 RFCs

MIBs

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for IPv6 RA Guard

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1 Feature Information for IPv6 RA Guard

Feature Name	Releases	Feature Information	
IPv6 RA Guard	12.2(33)SXI4	The IPv6 RA Guard feature	
	12.2(50)SY	provides support for allowing the network administrator to block or reject unwanted or rogue RA	
	12.2(54)SG		
	15.0(2)SE	guard messages that arrive at the	
	15.0(2)SG	network device platform.	
15.2(4)S	15.2(4)S	The following commands were introduced or modified: debug ipv6 snooping raguard , device -	
	15.2(4)M		
	Cisco IOS XE Release 3.8S	role, hop-limit, ipv6 nd raguard	
	Cisco IOS XE Release 3.2SE	attach-policy, ipv6 nd raguard policy, managed-config-flag, match ipv6 access-list, match raprefix-list, other-config-flag, router-preference maximum, show ipv6 nd raguard policy.	
Cisco IOS XE Ro	Cisco IOS XE Release 3.2SG		

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2012-2013 Cisco Systems, Inc. All rights reserved.