

# Troubleshooting ISG with Session Monitoring and Distributed Conditional Debugging

Intelligent Services Gateway (ISG) is a software feature set that provides a structured framework in which edge devices can deliver flexible and scalable services to subscribers. This document describes ISG session monitoring and distributed conditional debugging. Conditional debugging facilitates debug filtering for ISG and is available as distributed conditional debugging.

- Finding Feature Information, page 1
- Prerequisites for ISG Session Monitoring and Distributed Conditional Debugging, page 2
- Restrictions for Distributed Conditional Debugging, page 2
- Information About ISG Session Monitoring and Distributed Conditional Debugging, page 2
- How to Enable ISG Session Monitoring and Distributed Conditional Debugging, page 3
- Configuration Examples for ISG Distributed Conditional Debugging, page 10
- Additional References, page 12
- Feature Information for Distributed Conditional Debugging, page 12

# **Finding Feature Information**

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

# **Prerequisites for ISG Session Monitoring and Distributed Conditional Debugging**

Before using the information in this module, it is recommended that you be familiar with the use of Cisco IOS **debug** commands and conditional debugging. See the "Additional References" section to find information about these topics.

# **Restrictions for Distributed Conditional Debugging**

Conditions that are set for an active session take effect only when the session is terminated and reestablished.



Because debugging output is assigned high priority in the CPU process, it can render the system unusable. For this reason, use the Cisco IOS **debug**commands only to troubleshoot specific problems or during troubleshooting sessions with Cisco technical support staff. Moreover, it is best to use **debug** commands during periods of lower network traffic and fewer users, or on a debug chassis with a single active session. Debugging during these periods decreases the likelihood that increased **debug** command processing overhead will affect system use.

# Information About ISG Session Monitoring and Distributed Conditional Debugging

# **ISG Session and Flow Monitoring**

ISG introduces a mechanism that allows an administrator to monitor ISG sessions and flows continuously. The **show interface monitor** command, which displays interface statistics, and the **show process cpu monitor** command, which displays information about CPU usage, both update the information in their displays at specified intervals. These commands also provide the ability to freeze or clear the information in the display.

# ISG Distributed Conditional Debugging

#### Benefits of Enhanced Conditional Debugging for the ISG Platforms

Because thousands of user sessions run on the ISG platforms, it is not practical to troubleshoot a problem with a session by enabling the various component **debug** commands that are available and trace through the messages for a single session or user. Instead, it is more practical to filter debugging messages for a single session or call across the various components that a session traverses. For this reason, the conditional debugging previously offered in the software has been enhanced to facilitate debug filtering for ISG and is available as distributed conditional debugging.

#### **Cisco IOS XE Software Components Supported by Distributed Conditional Debugging**

The following components are supported for ISG distributed conditional debugging:

- Authentication, authorization, and accounting (AAA) and RADIUS
- Feature Manager
- · Policy Manager
- PPP
- PPP over Ethernet (PPPoE)
- Session Manager
- Virtual Private Dialup Network (VPDN)

See Table 1 and Table 2 for specific commands that are supported for distributed conditional debugging.

# How to Enable ISG Session Monitoring and Distributed Conditional Debugging

# **Monitoring ISG Sessions and Flows**

Perform this task to monitor interface and CPU statistics. The **show** commands are not required and may be entered in any order.

#### **SUMMARY STEPS**

- 1. enable
- 2. show interface type number monitor [interval seconds]
- 3. show processes cpu monitor [interval seconds]

#### **DETAILED STEPS**

| Command or Action                 | Purpose                            |  |  |
|-----------------------------------|------------------------------------|--|--|
| enable                            | Enables privileged EXEC mode.      |  |  |
| <b>Example:</b><br>Router> enable | • Enter your password if prompted. |  |  |
|                                   | enable<br>Example:                 |  |  |

|        | Command or Action  | Purpose   |
|--------|--|---|
| Step 2 | show interface type number monitor [interval seconds]            | Displays interface statistics that are updated at specified intervals.                |
|        | Example:   |   |
|        | Router# show interface gigabitethernet 3/0/0 monitor interval 10 |   |
| Step 3 | show processes cpu monitor [interval seconds]                    | Displays detailed CPU utilization statistics that are updated at specified intervals. |
|        | Example:   |   |
|        | Router# show processes cpu monitor                               |   |

# **Configuring Distributed Conditional Debugging**

Two main tasks are required for configuring distributed conditional debugging: enabling conditional debugging, and issuing one or more supported **debug** commands. These required tasks are described in the following sections:

#### **ISG Debug Condition Commands**

The table below lists the **debug condition** commands that you can issue at the EXEC prompt to enable distributed conditional debugging. You can set more than one condition.

| Command   | Purpose  |  |  |  |  |
|---|--|--|--|--|--|
| debug condition domain domain-name  | Filters messages on the specified domain name.   |  |  |  |  |
| debug condition interface {Fast Ethernet   Gigabit Ethernet<br>  TenGigabit Ethernet} vlan-id <i>ID</i> | Filters messages on the specified VLAN identifier.   |  |  |  |  |
| debug condition mac-address hexadecimal-MAC-address   | Filters messages on the specified MAC address.   |  |  |  |  |
| <b>debug condition portbundle ip</b> <i>IP-address</i> <b>bundle</b> <i>bundle-number</i>               | Filters messages on the specified Port-Bundle Host Key (PBHK).   |  |  |  |  |
| debug condition session-id session-ID   | Filters messages on the specified session identifier.  |  |  |  |  |
|   | <b>Note</b> The session identifier can be obtained by entering the <b>show subscriber session</b> command. |  |  |  |  |
| debug condition username email-address  | Filters messages on the specified Internet username.   |  |  |  |  |

## **Debug Commands That Are Supported by ISG Conditional Debug**

The table below lists the Cisco IOS debugging commands that are supported for distributed conditional debugging. The commands are listed by component. One or more of these commands can be issued after enabling one of the **debug condition** commands listed in Debug Commands That Are Supported by ISG Conditional Debug, on page 5.

Table 2: Debug Commands Supported by ISG Distributed Conditional Debugging

| debug aaa authentication         debug aaa authorization         debug aaa id         PPP Debug Commands         debug ppp authentication         debug ppp bap error         debug ppp bap events         debug ppp bap negotiation         debug ppp ror         debug ppp mppe detailed         debug ppp mppe pack         debug ppp multi events         debug ppp multi frag         debug ppp negotiation   | AAA Debug Commands        |
|--|---------------------------|
| debug asa authorization         debug asa id         PPP Debug Commands         debug ppp authentication         debug ppp bap error         debug ppp bap events         debug ppp bap negotiation         debug ppp error         debug ppp mppe detailed         debug ppp mppe events         debug ppp mppe events         debug ppp mppe negotiation         debug ppp mppe negotiation         debug ppp mppe events         debug ppp mppe negotiation         debug ppp mppe negotiation         debug ppp mppe negotiation | debug aaa accounting      |
| debug ana id         PPP Debug Commands         debug ppp authentication         debug ppp bap error         debug ppp bap negotiation         debug ppp cbcp         debug ppp mppe detailed         debug ppp mppe events         debug ppp mppe negotiation  | debug aaa authentication  |
| PPP Debug Commands debug ppp authentication debug ppp bap error debug ppp bap negotiation debug ppp bap negotiation debug ppp cbcp debug ppp mppe detailed debug ppp mppe events debug ppp mppe pack debug ppp multi data debug ppp multi frag debug ppp negotiation   | debug aaa authorization   |
| debug ppp authentication         debug ppp bap error         debug ppp bap negotiation         debug ppp cbcp         debug ppp mppe detailed         debug ppp mppe events         debug ppp mppe pack         debug ppp multi data         debug ppp multi frag         debug ppp negotiation  | debug aaa id              |
| debug ppp bap error<br>debug ppp bap events<br>debug ppp bap negotiation<br>debug ppp cbcp<br>debug ppp error<br>debug ppp mppe detailed<br>debug ppp mppe events<br>debug ppp mppe pack<br>debug ppp multi data<br>debug ppp multi events<br>debug ppp multi frag<br>debug ppp negotiation  | PPP Debug Commands        |
| debug ppp bap events<br>debug ppp bap negotiation<br>debug ppp cbcp<br>debug ppp error<br>debug ppp mppe detailed<br>debug ppp mppe events<br>debug ppp mppe pack<br>debug ppp multi data<br>debug ppp multi events<br>debug ppp multi frag<br>debug ppp negotiation   | debug ppp authentication  |
| debug ppp bap negotiation<br>debug ppp cbcp<br>debug ppp error<br>debug ppp mppe detailed<br>debug ppp mppe events<br>debug ppp mppe pack<br>debug ppp multi data<br>debug ppp multi events<br>debug ppp multi frag<br>debug ppp negotiation   | debug ppp bap error       |
| debug ppp cbcp   debug ppp error   debug ppp mppe detailed   debug ppp mppe events   debug ppp mppe pack   debug ppp multi data   debug ppp multi events   debug ppp multi frag   debug ppp negotiation  | debug ppp bap events      |
| debug ppp error<br>debug ppp mppe detailed<br>debug ppp mppe events<br>debug ppp mppe pack<br>debug ppp multi data<br>debug ppp multi events<br>debug ppp multi frag<br>debug ppp negotiation  | debug ppp bap negotiation |
| debug ppp mppe detailed<br>debug ppp mppe events<br>debug ppp mppe pack<br>debug ppp multi data<br>debug ppp multi events<br>debug ppp multi frag<br>debug ppp negotiation   | debug ppp cbcp            |
| debug ppp mppe events<br>debug ppp mppe pack<br>debug ppp multi data<br>debug ppp multi events<br>debug ppp multi frag<br>debug ppp negotiation  | debug ppp error           |
| debug ppp mppe pack<br>debug ppp multi data<br>debug ppp multi events<br>debug ppp multi frag<br>debug ppp negotiation   | debug ppp mppe detailed   |
| debug ppp multi data<br>debug ppp multi events<br>debug ppp multi frag<br>debug ppp negotiation  | debug ppp mppe events     |
| debug ppp multi events<br>debug ppp multi frag<br>debug ppp negotiation  | debug ppp mppe pack       |
| debug ppp multi frag<br>debug ppp negotiation  | debug ppp multi data      |
| debug ppp negotiation  | debug ppp multi events    |
|  | debug ppp multi frag      |
| debug ppp pack   | debug ppp negotiation     |
|  | debug ppp pack            |
| debug ppp subscriber   | debug ppp subscriber      |

I

| AAA Debug Commands                              |
|---|
| PPPoE Debug Commands                            |
| debug pppoe data                                |
| debug pppoe error                               |
| debug pppoe event                               |
| debug pppoe packet                              |
| Session Manager Debug Commands                  |
| debug subscriber aaa authorization event        |
| debug subscriber aaa authorization fsm          |
| debug subscriber error                          |
| debug subscriber event                          |
| Feature Manager Debug Commands                  |
| debug subscriber feature access-list error      |
| debug subscriber feature access-list event      |
| debug subscriber feature compression detail     |
| debug subscriber feature compression error      |
| debug subscriber feature compression event      |
| debug subscriber feature detail                 |
| debug subscriber feature error                  |
| debug subscriber feature event                  |
| debug subscriber feature interface-config error |
| debug subscriber feature interface-config event |
| debug subscriber feature modem-on-hold detail   |
| debug subscriber feature modem-on-hold error    |
| debug subscriber feature modem-on-hold event    |
|   |

I

ſ

| AAA Debug Commands                                     |
|--|
| debug subscriber feature portbundle error              |
| debug subscriber feature portbundle event              |
| debug subscriber feature portbundle packet             |
| debug subscriber feature qos-policy error              |
| debug subscriber feature qos-policy event              |
| debug subscriber feature static-routes error           |
| debug subscriber feature static-routes event           |
| debug subscriber feature traffic-classification detail |
| debug subscriber feature traffic-classification error  |
| debug subscriber feature traffic-classification event  |
| Policy Manager Debug Commands                          |
| debug subscriber fsm                                   |
| debug subscriber policy condition                      |
| debug subscriber policy detail                         |
| debug subscriber policy error                          |
| debug subscriber policy event                          |
| debug subscriber policy fsm                            |
| debug subscriber policy rule                           |
| debug subscriber session error                         |
| debug subscriber session event                         |
| VPDN Debug Commands                                    |
| debug vpdn call event                                  |
| debug vpdn call fsm                                    |
| debug vpdn error                                       |

#### **AAA Debug Commands**

debug vpdn event

debug vpdn event disconnect

## Restrictions

The **debug condition session-id** command filters a session only after the session has been established. The session identifier is a unique dynamic number generated internally by the Cisco IOS software and assigned to each session when the session is established.

In VPDN, the **debug** commands and messages associated with tunnels cannot be filtered because they are not associated with a session, but are displayed during the tunnel-establishment phase. The debugging messages will be displayed even if filtering is enabled by one of the conditions.

If multiple conditions are set, the debugging messages corresponding to all the sessions that meet any of the conditions will be displayed. Some conditions, such as domain name, will trigger debugging messages for all the sessions that belong to the particular domain.

### **Enabling Distributed Conditional Debugging**

Perform this task to enable distributed conditional debugging for ISG.

#### **SUMMARY STEPS**

- 1. enable
- 2. debug condition command
- 3. debug command

#### **DETAILED STEPS**

|        | Command or Action                                  | Purpose   |
|--------|--|---|
| Step 1 | enable   | Enables privileged EXEC mode.   |
|        | Example:   | • Enter your password if prompted.  |
|        | Router> enable                                     |   |
| Step 2 | debug condition command                            | Enter one or more of the <b>debug condition</b> commands listed in<br>Enabling Distributed Conditional Debugging, on page 8 to enable |
|        | Example:   | distributed conditional debugging.  |
|        | Router# debug condition username<br>user@cisco.com |   |

|        | Command or Action                              | Purpose   |  |  |
|--------|--|---|--|--|
| Step 3 | debug command                                  | Enter one or more of the supported <b>debug</b> commands from Enablin Distributed Conditional Debugging, on page 8. |  |  |
|        | Example:                                       |   |  |  |
|        | Router# debug subscriber aaa authorization fsm |   |  |  |

## **Displaying Debugging Conditions**

To display the debugging conditions that have been set, perform the following task:

#### **SUMMARY STEPS**

- 1. enable
- 2. show debug condition

#### **DETAILED STEPS**

I

|        | Command or Action            | Purpose   |
|--------|------------------------------|---|
| Step 1 | enable                       | Enables privileged EXEC mode.                         |
|        | Example:                     | • Enter your password if prompted.                    |
|        | Router> enable               |   |
| Step 2 | show debug condition         | Displays conditions that have been set for debugging. |
|        | Example:                     |   |
|        | Router# show debug condition |   |

### **Troubleshooting Tips**

The Cisco IOS software displays messages as you set the conditions for filtering the debugging.

When a condition is set, it is assigned a number, as follows:

Condition 1 set If a condition has already been set, the following message is displayed:

% Condition already set

The following messages and prompt are displayed when you attempt to disable the last condition using the **no** form of a **debug condition** command:

```
This condition is the last interface condition set.
Removing all conditions may cause a flood of debugging messages
to result, unless specific debugging flags are first removed.
Proceed with removal? [yes/no]: yes
Condition 1 has been removed
```

```
<u>)</u>
Tip
```

Use the **no** form of the commands to disable all **debug** commands before disabling all of the debugging conditions that have been set.

# Configuration Examples for ISG Distributed Conditional Debugging

## Monitoring Interface Statistics Example

The following example shows sample output for the **show interface monitor** command. The display will be updated every 10 seconds.

```
Router> show interface gigabitethernet 0/0/0 monitor interval 10
Router Name: Scale3-Router8 Update Secs: 10
Interface Name: GigabitEthernet 0/0/0 Interface Status: UP, line is up
Line Statistics: Total: Rate(/s) Delta
Input Bytes:
                           123456
                                          123
                                                       7890
Input Packets:
                             3456
                                          56
                                                        560
                            1333
Broadcast:
                                           6
                                                         60
OutputBytes:
                            75717
                                          123
                                                      1230
Output Packets:
                             733
                                          44
                                                        440
                           Total:
Error Statistics:
                                          Delta:
                                           0
Input Errors:
                            0
CRC Errors:
                           0
                                             0
Frame Errors:
                            0
                                             0
                            0
Ignored:
                                             0
Output Errors:
                            0
                                             0
                                             0
Collisions:
                            0
No. Interface Resets: 2
End = e Clear = c Freeze = f
Enter Command:
```

## **Monitoring CPU Statistics Example**

The following example shows sample output for the **show processes cpu monitor** command:

Router> show processes cpu monitor

| CPU u | tilization f | for five secor | nds: 0%/0%; | one mi | nute: 0%; | five mi | nutes: 0%          |
|-------|--------------|----------------|-------------|--------|-----------|---------|--------------------|
| PID   | Runtime(ms)  | Invoked        | uSecs       | 5Sec   | 1Min      | 5Min    | TTY Process        |
| 3     | 772          | 712            | 1084        | 0.08%  | 0.04%     | 0.02%   | 0 Exec             |
| 67    | 276          | 4151           | 66          | 0.08%  | 0.03%     | 0.01%   | 0 L2TP mgmt daemon |
| 116   | 604          | 2263           | 266         | 0.16%  | 0.05%     | 0.01%   | 0 IDMGR CORE       |
| End = | e Freeze     | e = f          |             |        |           |         |                    |

Enter Command:

## Enabling ISG Distributed Conditional Debugging Example

The following example shows how to filter PPP, PPPoE, and Session Manager debugs for a PPPoE session with username "user@cisco.com". Only debugging messages for the defined user are displayed on the console. Any other debugging messages associated with other users will not be displayed.

```
Router# debug condition username user@cisco.com
Condition 1 set
Router# debug ppp negotiation
Router# debug pppoe event
Router# debug subscriber session event
```

# **Displaying Debugging Conditions Example**

The following example shows how to display debugging conditions that have been set.

Router# show debug condition

```
Condition 1: domain cisco.com (0 flags triggered)
Condition 2: username user@cisco.com (0 flags triggered)
Condition 3: ip 172.19.200.10 (0 flags triggered)
```

# Filtering Debug Output Example

In the following example, the output of the **debug subscriber packet detail** command is filtered on the basis of the username "cpe6 1@isp.com":

```
Router# debug condition username cpe6_1@isp.com
Condition 1 set
Router# show debug
Condition 1: username cpe6_1@isp.com (0 flags triggered)
Router# debug subscriber packet detail
SSS packet detail debugging is on
Router# show debug
SSS:
SSS packet detail debugging is on
Condition 1: username cpe6 1@isp.com (0 flags triggered)
```

# **Additional References**

#### **Related Documents**

| Related Topic         | Document Title   |
|-----------------------|--|
| ISG commands          | Cisco IOS Intelligent Services Gateway Command<br>Reference                          |
| Debug commands        | Cisco IOS Debug Command Reference  |
| Conditional debugging | "Conditionally Triggered Debugging" chapter in the Cisco IOS Debug Command Reference |

#### **Technical Assistance**

| Description   | Link  |
|---|---|
| The Cisco Support website provides extensive online<br>resources, including documentation and tools for<br>troubleshooting and resolving technical issues with<br>Cisco products and technologies.  | http://www.cisco.com/cisco/web/support/index.html |
| To receive security and technical information about<br>your products, you can subscribe to various services,<br>such as the Product Alert Tool (accessed from Field<br>Notices), the Cisco Technical Services Newsletter,<br>and Really Simple Syndication (RSS) Feeds. |   |
| Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.  |   |

# **Feature Information for Distributed Conditional Debugging**

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

ſ

| Feature Name  | Releases                 | Feature Configuration Information   |
|---|--------------------------|---|
| ISG: Instrumentation: Session and<br>Flow Monitoring    | Cisco IOS XE Release 2.2 | ISG provides a mechanism for<br>continuously monitoring interface<br>and CPU statistics. This feature<br>introduces the <b>show interface</b><br><b>monitor</b> and <b>show processes cpu</b><br><b>monitor</b> commands, which display<br>statistics that are updated at<br>specified intervals. |
| ISG: Instrumentation: Advanced<br>Conditional Debugging | Cisco IOS XE Release 2.2 | ISG provides the ability to define<br>various conditions for filtering<br>debug output. Conditional<br>debugging generates very specific<br>and relevant information that can<br>be used for session, flow,<br>subscriber, and service diagnostics.   |

#### Table 3: Feature Information for ISG Session Monitoring and Distributed Conditional Debugging

I

٦