



INDEX

A

- access control **4-1**
 - access manager **1-7, 3-3**
 - access specifications **4-3**
 - creating new **4-8**
 - deleting **4-12**
 - modifying **4-11**
 - account information **8-6**
 - accounts, viewing MGC host **8-6**
 - accounts dialog box, security policy attribute **8-7**
 - adjacent point code **1-14, 1-18**
 - administrative password **4-12**
 - administrative status, setting **8-5**
 - advanced diagnostics **8-59**
 - alarm and measurement viewer **8-60**
 - alarm log, viewing **8-58**
 - alarm management **A-1**
 - alarms
 - application-related **A-4**
 - application-related for the MGC host and BAMS **A-4**
 - BAMS **A-3**
 - BAMS and MGC **A-2**
 - catalyst **A-5**
 - file system **A-4**
 - ITP-L **A-5**
 - LAN switch **A-5**
 - MGC **A-2**
 - monitoring **6-10**
 - reference tables **A-1**
 - resource alarms **A-4**
 - setting how long they are stored **6-29**
 - understanding **A-2**
 - alarm viewer **8-60**
 - APC **1-14, 1-18**
 - application alarms **A-4**
 - application events **A-4**
 - applications
 - opening and closing **3-3**
 - switching between **3-3**
 - audit trunk groups **8-58**
 - authenticationFailure **A-5**
 - auto-discovery, changing frequency **5-20**
 - average summary rule **7-11**
-

B

- backing up, Cisco MNM database **9-3**
- BAF **1-2**
- balloons, Map Viewer **3-22**
- BAMS **1-2**
 - alarms **A-3**
 - alarms troubleshooting **A-2**
 - CIC availability measurements **B-34, B-40**
 - deploying **5-12**
 - file system properties **8-20**
 - measurements **B-7**
 - messages **A-3**
 - properties dialog box **8-11**
 - view **1-23, 3-18**
- basic operations **3-6**
- bearer capability properties **8-27**
- Bellcore Automatic Message Accounting Format (BAF) **1-2**
- Billing and Measurement Server **1-2**

C

C7 IP link **1-14**
 c7iplnk **1-14**
 call detail record viewer **8-60**
 CALL measurement group **B-4**
 Catalyst 2900 **1-1**
 Catalyst 2900XL traps **A-6**
 Catalyst 5000 **1-1**
 Catalyst alarms **A-5**
 CDR viewer **8-60**
 changing
 device IP address **C-6**
 device password **C-6**
 CISCO-CONFIG-MAN-MIB-V1SMI **A-5, A-6**
 CISCO-SYSLOG-MIB **A-5**
 CISCO-TRANSPATH-MIB **A-2**
 clearing
 method **6-16**
 reason for clearing **6-16**
 time and date **6-16**
 user responsible for clearing **6-16**
 closing Cisco MNM applications **3-3**
 CMM **1-3**
 codec string properties **8-26**
 codes, map viewer **3-22**
 coldStart, alarm / trap **A-5**
 commAlarm **A-2**
 commissioning **6-25**
 conditional routes **8-26**
 configChange **A-5**
 CONFIG-LIB viewer **8-60**
 configuring devices **8-5**
 connectivity network, containment hierarchy **1-16**
 CPC properties **8-26**
 creating scoreboards **6-6**
 Ctrl + **3-6**
 customizing event management **6-4**

D

database
 backup **9-3**
 changing **3-32**
 restoring **9-3**
 data summaries **7-10**
 decommissioning **6-25**
 deleting deployed objects **5-22**
 deploying
 media gateway network **5-11**
 MGC node **5-11**
 network devices **5-12**
 physical site **5-11**
 with a seed file **5-6**
 deployment **5-1, 5-2**
 deleting an object **5-22**
 information required **5-2**
 manual **5-10**
 modifying an object **5-21**
 SSH **5-2**
 troubleshooting **C-6**
 destination point code **1-18**
 devices
 changing **3-32**
 starting **9-2**
 stopping **9-2**
 viewing properties **8-10**
 views **3-15**
 diagnostics **8-57**
 advanced **8-59**
 dialog box **8-58**
 for HSI **8-59**
 for MGC **8-59**
 tools **8-57**
 dialog boxes
 field-level help **3-28**
 for multiple devices **3-28**
 navigating between **3-32**

- properties for multiple software releases **3-30**
 understanding **3-28, 3-30**
- dial plan
 components **8-25**
 properties **8-26**
 viewing **8-25**
- discovery **1-7, 3-3**
 complete alarm **5-21**
 troubleshooting **C-6**
 understanding **5-14**
- disk
 measurements **B-11**
 partition properties **8-23**
- DPC **1-18**
- dual CLI interworking **8-54**
- dynamic updates **3-31**
-
- E**
- Element Manager **1-4**
- EMF
 Element Manager **1-4**
 events **6-10**
 network model **1-8**
 object **1-8**
 object type **1-8**
 object types and attributes **1-8**
 view **1-9**
 What is contained within EMF? **1-6**
 What is EMF? **1-6**
- environmentError **A-2**
- equipmentError **A-2**
- errored state **6-22**
- errors
 deployment **C-6**
 related to SSH **C-1**
- Ethernet
 interface **1-15**
 interface properties **8-16**
- measurements **B-10**
 event browser
 full event description screen **6-15**
 open the query editor **6-16**
 screen information **6-14**
 using **6-10**
- event manager, using **6-4**
 events **1-7, 3-3**
 external node **1-15**
 extnode **1-15**
-
- F**
- farm **1-1**
 seed file example **5-7**
- fault management, introduction **6-1**
- faults, managing Cisco MGX 8260 **6-29**
- feature lists **4-2, 4-3**
- field
 descriptions **3-28**
 in dialog boxes **3-30**
 level help **3-28**
- file
 menu **3-9**
 system properties dialog box **8-21**
- file system alarms **A-4**
- full event description screen
 acknowledge details **6-15**
 clearing details **6-16**
 Event Browser **6-15**
 event description **6-15**
 event state **6-15**
 management domain **6-15**
 object name **6-15**
 severity **6-15**
 time and date **6-15**

G

getting started with Cisco MNM **3-1**
groups **1-7, 3-3, B-13**

H

H.245 measurement group **B-43**
H.323
 tab, trunk group properties **8-53**
 view **1-24**
host, view **1-21, 3-15**
HSI
 diagnostics **8-59**
 host diagnostics **8-59**
 server, launch **8-5**
 view **1-24**

I

icons, map viewer **3-22**

IF-MIB **A-5**
information required for deployment **5-2**
interfaces
 measurements **B-10**
 TDM **B-8**
 viewing properties **8-15**
Internet Transfer Point **1-1**

IP
 changing address for a device **C-6**
 counters **B-1**
 links **1-15**
 views **3-20**
IP FAS path **1-15**
ipfaspath **1-15**
iplnk **1-15**
ITP **1-1**
ITP-L
 alarms **A-5**

deploying **5-12**
measurements **B-8**
properties dialog box **8-11**
SS7 MTP2 channel properties **8-19**
TDM interfaces, measurements **B-8**
view **1-22, 3-16**
IUA measurements **B-44**

L

LAN switch
 1-5
 alarms **A-5**
 deploying **5-12**
 measurements **B-9**
 port properties **8-17**
 properties dialog box **8-11**
 view **3-17**

launching
 CiscoView **8-5**
 configuration tools **8-5**
 WebViewer **8-5**
launchpad **3-4**
linkDown **A-5**
links, properties **8-30**
linkset **1-15**
linkUp **A-5**
lists, selecting from **3-8**
location view **3-20**

logical
 summary rule **7-11**
 view **3-20**
login screen **3-2**
log viewer **8-60**
loopback interface properties **8-16**

M

- M3UA key **8-45**
 M3UA route **8-45**
 M3UA SGP measurements **B-46**
 management tasks **8-1**
 manual deployment **5-10**
 map viewer
 introduced **3-10**
 symbols **3-22**
 views **3-13**
 max summary rule **7-11**
 measurements
 BAMS **B-7**
 disk **B-11**
 groups for signaling and trunk group components **B-13**
 interfaces **B-10**
 ITP-L **B-8**
 LAN switch **B-9**
 memory **B-12**
 MGC host **B-4**
 port **B-9**
 processor **B-11**
 RAM **B-12**
 signaling components **B-12**
 TDM interfaces **B-8**
 trunk groups **B-12**
 Media Gateway Controller (MGC) **1-3**
 memory, measurements **B-12**
 MGC
 alarms **A-2**
 deploying network **5-11**
 deploying the host **5-12**
 deploying the node **5-11**
 diagnostics **8-59, 8-60**
 farm **1-1**
 host alarms **A-2**
 host file system properties **8-20**
 host messages **A-2**
 host properties dialog box **8-11**
 host view **3-15**
 node view **1-10**
 toolbar **8-60**
 toolkit **8-61**
 troubleshooting alarms **A-2**
 MGCP path **1-15**
 mgcppath **1-15**
 MGC toolbar **8-60**
 MGX 8260
 properties dialog box **8-11**
 traps **A-4**
 min summary rule **7-11**
 MML **1-18**
 commands running from Cisco MNM **8-58**
 MNM
 closing an application **3-5**
 database backup **9-3**
 dialog boxes **3-28**
 how it models the network **1-9**
 key features **1-4**
 messages **C-1**
 opening an application **3-4**
 opening functions table **3-24**
 quitting a session **3-3**
 starting a session **3-1**
 switching between applications **3-5**
 troubleshooting **C-1**
 using the map viewer **3-9**
 viewing status information **3-9**
 modifying
 deployed objects **5-21**
 user groups **4-11**
 monitored attributes **7-7**
 monitoring
 dynamically-updated information **3-31**
 file systems **8-20**
 the network **6-10**

mouse **3-6**

mouse, using in Cisco MNM **3-6**

multiple devices, displaying information on **3-28**

multiple Event Browser sessions **6-10**

N

NAS path **1-15**

naspath **1-15**

navigation **3-6, 3-7**

 between dialog boxes **3-32**

menu **3-32**

network

 interfaces, measurements **B-10**

 management **8-1**

 view **1-25, 3-20**

network management **8-1**

node view **3-13**

normal state **6-22**

O

object

 attributes **1-8**

 classes **1-8**

 group **4-4**

 group manager **1-9**

 types **1-8**

objects **1-8**

opening

 MNM applications **3-3**

 the query editor, event browser **6-16**

 X-terminal window **8-5**

OVL measurement group **B-6**

P

password **3-2**

changing administrative **4-12, 4-13**

percentage routes **8-26**

performance data **7-8, 7-20**

performance manager

 printing statistics **7-16**

 refresh button **7-7**

 sample line chart screen **7-9**

 sample table display screen **7-9**

 screen **7-7, 7-8**

 start date data entry box **7-10**

 summary interval **7-7**

 summary rule **7-7**

permission level **4-4**

physical site, deploying **5-11**

physical view **1-24, 3-20**

ping **8-58**

point codes properties **8-30**

polling

 changing defaults **7-15**

 presence **6-22**

 rediscovering devices **6-25**

 setting frequencies **7-4**

 starting on a device **7-5**

POMDynamicReconfiguration trap **5-20**

port

 measurements **B-9**

 properties **8-17**

print **3-9**

printing performance statistics **7-16**

processingError **A-2**

processor

 measurements **B-11**

 properties **8-23**

process status, viewing **8-58**

properties

 dialog boxes **8-9**

 dial plan **8-25**

 signaling components **8-30**

 trunk groups **8-47**

viewing **8-9**
 viewing MGC host **8-9, 8-20**

Q

Q.931 measurement group **B-43**
 Q.931 protocol **1-15**
 qualityOfService **A-2**
 quitting Cisco MNM **3-1**

R

RAM
 measurements **B-12**
 properties **8-23**
 reboot **9-2**
 redeploying **C-6**
 rediscovering **C-6**
 rediscovery
 changing frequency **5-20**
 manual **5-21**
 refresh button **7-8, 7-11**
 resource alarms **A-4**
 restoring, Cisco MNM database **9-3**
 route holiday properties **8-26**
 routine management procedures **8-3**

S

SCO/SLO interface properties **8-16**
 scoreboards, creating **6-6**
 SCTP association measurements **B-44**
 SCTP IUA measurements **B-44**
 security **4-1**
 policy **5-2, 5-20, 7-4**
 seed file **5-6**
 seed file deployment **5-6**
 selecting, in lists **3-8**

serial interface properties **8-16**
 Service Switching Points (SSPs) **1-14**
 session, starting and quitting **3-1**
 setting, threshold-crossing alerts **6-9**
 SGP M3UA measurements **B-46**
 SGP SUA measurements **B-47**
 shortcut keys **3-6**
 signaling components
 measurements **B-12**
 properties **8-30**
 Signaling Transfer Point (STP) **1-16**
 SIP attributes, viewing **8-47**
 SIP to SIP calling **B-27**
 site
 deploying **5-11**
 view **3-20**
 SNMP information, viewing **8-6**
 SNMPv2-MIB **A-5**
 SS7 components
 MTP2 channel properties **8-19**
 network **1-14**
 path **1-16**
 properties **8-30**
 route **1-16**
 subsystem **1-16**
 SSH **5-2, 5-20, 7-4**
 related errors **C-1**
 security policy in accounts dialog box **8-8**
 troubleshooting **C-7**
 Start Date data entry box, performance manager **7-10**
 starting
 a Cisco MNM session **3-1**
 node devices **9-2**
 VSPT **8-5**
 state icons **3-22**
 STATE measurement group **B-7**
 states dialog box **5-20, 6-3, 6-25**
 status bar **3-9**
 status dialog window **3-10**

status information, viewing **3-9**

stopping node devices **9-2**

STP **1-18**

SUA

key **8-45**

route **8-45**

SGP measurements **B-47**

summary interval **7-7**

summary rule **7-7, 7-11**

switching applications **3-3**

switch view **1-23**

symbols, map viewer **3-22**

syslogAlarm **A-5**

system

component properties **8-23**

components measurements **B-11**

log viewing **8-58**

T

TCAs, setting **6-9**

TCP counters **B-1**

TDM

interface measurements **B-8**

interface properties **8-16**

Telnet, to a device **8-5**

threshold-crossing alerts, setting **6-9**

TMR properties **8-26**

TNS properties **8-26**

toolbar **3-8**

basic **3-7**

MGC **8-60**

tooltips **3-8**

tools, for diagnosis **8-57**

total, summary rule **7-11**

traceroute **8-58**

trace viewer **8-60**

translation verification **8-61**

traps

BAMS **A-3**

ITP-L **A-5**

MGC host **6-22**

receipt not guaranteed **6-24**

troubleshooting

alarms **A-2**

Cisco MNM problems **C-1**

deployment **C-6**

discovery **C-6**

SSH **C-7**

trunk groups

audit **8-58**

component properties **8-47**

measurements **B-12**

U

UDP counters **B-1**

UNIX commands, running from CMNM **8-58**

user, modifying **4-10**

user group **4-2, 4-4**

creating **4-7**

modifying **4-11**

user name, Cisco EMF login **3-2**

user password, Cisco EMF login **3-2**

using

event browser **6-10**

map viewer **3-10**

the event manager **6-4**

V

view

network **3-20**

physical **3-20**

site **3-20**

viewer

map **1-7**

multiple applications **3-4**
using **3-10**
viewing, interface properties **8-15**
views
 expanding or collapsing **3-21**
 map viewer **3-13**
virtual memory
 measurements **B-12**
 properties **8-23**
Voice Services Provisioning Tool (VSPT) **1-5**
 launch **8-5**
 launch mode **8-6**

W

warmStart **A-5**
WebViewer, launching **8-5**

X

X-terminal window, opening **8-5**
X window, launching **8-58**

