



INDEX

A

adjacent point code **1-4**

B

backup and restore

 planning **2-4**

 setting up **2-4**

Backup host **2-5**

Backup ID **2-5**

C

Cisco MGC Node Manager (MNM) **1-1**

committing, configuration **4-8**

component

 C7 IP link **1-6**

 external node **1-6**

 H.248 **1-6**

 IP Link for H.248 **1-6**

 IP link for MGCP **1-6**

 linkset **1-4**

 point code **1-4**

 SigMGCP **1-6**

 SS7 Route **1-4**

 SS7 SubSys **1-4**

 SS7SubSys **1-4**

configuration

 committing **4-8**

 deploying **4-8**

D

deploy command **3-4**

deploying, configuration **4-8**

descriptions **1-11**

destination point code **1-4**

E

enabling TFTP on Backup host **2-6**

exit command **3-4**

exiting the VSPT **3-7**

exiting VSPT **2-9**

F

field definitions **1-4**

H

H.248 **1-6**

Help menu **3-3**

I

installing VSPT **2-2**

L

linkset component **1-4**

logging in to the VSPT **3-1**

login screen **3-2**

M

menu

- Help **3-3**
 - Session **3-3**
 - Tools **3-3**
 - View **3-3**
-

N

Number Analysis tab **3-5**

P

planning

- for backup and restore **2-4**

point code component **1-4**

S

secure communication **4-14**

secure communications **4-17**

security enhancements

- installing on VSPT **2-6**

Session menu **3-3**

setting up

- backup and restore **2-4**

SS7 route

- component **1-4**

SS7SubSys component **1-4**

SSH **4-12, 4-14, 4-17**

ssh or Telnet **4-11**

starting

- VSPT **3-1**

STP **1-4**

STP, mated pair **1-4**

sync command **3-4**

T

tabs

- Number Analysis **3-5**
 - Telephony Controller **3-5**
 - Traffic **3-5**
- Telephony Controller tab **3-5**

Telnet or ssh **4-11**

TFTP

- enabling on Backup host **2-6**
 - tips, before provisioning **2-2**
- Tools menu **3-3**
- Traffic tab **3-5**
-

U

user ID for Backup **2-5**

V

View menu **3-3**

VSPT

- exiting **2-9, 3-7**
- installing **2-2**
- logging in **3-1**
- starting **3-1**

VSPT Backup ID **2-5**

X

X windows **3-1**
