



Cisco ONS 15454 Procedure Guide

Product and Documentation Release 4.1.x and Release 4.5
Last Updated: October 16, 2007

Corporate Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100

Customer Order Number: DOC-7815669=
Text Part Number: 78-15669-03



THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: The equipment described in this manual generates and may radiate radio-frequency energy. If it is not installed in accordance with Cisco's installation instructions, it may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in part 15 of the FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

Modifying the equipment without Cisco's written authorization may result in the equipment no longer complying with FCC requirements for Class A or Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

You can determine whether your equipment is causing interference by turning it off. If the interference stops, it was probably caused by the Cisco equipment or one of its peripheral devices. If the equipment causes interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the equipment to one side or the other of the television or radio.
- Move the equipment farther away from the television or radio.
- Plug the equipment into an outlet that is on a different circuit from the television or radio. (That is, make certain the equipment and the television or radio are on circuits controlled by different circuit breakers or fuses.)

Modifications to this product not authorized by Cisco Systems, Inc. could void the FCC approval and negate your authority to operate the product.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCIP, CCSP, the Cisco Arrow logo, the Cisco *Powered* Network mark, Cisco Unity, Follow Me Browsing, FormShare, and StackWise are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, and iQuick Study are service marks of Cisco Systems, Inc.; and Aironet, ASIST, BPX, Catalyst, CCDA, CCDP, CCIE, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, the Cisco IOS logo, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Empowering the Internet Generation, Enterprise/Solver, EtherChannel, EtherSwitch, Fast Step, GigaStack, Internet Quotient, IOS, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, LightStream, MGX, MICA, the Networkers logo, Networking Academy, Network Registrar, *Packet*, PIX, Post-Routing, Pre-Routing, RateMUX, Registrar, ScriptShare, SlideCast, SMARTnet, StrataView Plus, Stratm, SwitchProbe, TeleRouter, The Fastest Way to Increase Your Internet Quotient, TransPath, and VCO are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0401R)



About this Manual	xliv
Revision History	xliv
Document Organization	xliv
Chapter (Director Level)	xlvi
Non-Trouble Procedure (NTP)	xlvi
Detailed Level Procedure (DLP)	xlvi
Document Conventions	xlvi
Where to Find Safety and Warning Information	xlvii
Obtaining Documentation	xlvii
Cisco.com	xlviii
Ordering Documentation	xlviii
Cisco Optical Networking Product Documentation CD-ROM	xlviii
Documentation Feedback	xlviii
Obtaining Technical Assistance	xliv
Cisco TAC Website	xliv
Opening a TAC Case	xliv
TAC Case Priority Definitions	xliv
Obtaining Additional Publications and Information	i

CHAPTER 1

Install the Shelf and Backplane Cable	1-1
Before You Begin	1-1
Required Tools and Equipment	1-2
Cisco-Supplied Materials	1-2
User-Supplied Materials	1-3
Tools Needed	1-3
Test Equipment	1-4
NTP- A1 Unpack and Inspect the ONS 15454 Shelf Assembly	1-4
DLP- A1 Unpack and Verify the Shelf Assembly	1-4
DLP- A2 Inspect the Shelf Assembly	1-5
NTP- A2 Install the Shelf Assembly	1-6
DLP- A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack	1-7
DLP- A4 Install the External Brackets and Air Filter	1-8
DLP- A5 Mount the Shelf Assembly in a Rack (One Person)	1-10
DLP- A6 Mount the Shelf Assembly in a Rack (Two People)	1-11

DLP- A7 Mount Multiple Shelf Assemblies in a Rack	1-12
NTP- A3 Open and Remove the Front Door	1-13
DLP- A8 Open the Front Cabinet Compartment (Door)	1-13
DLP- A9 Remove the Front Door	1-14
NTP- A4 Remove the Backplane Covers	1-16
DLP- A10 Remove the Lower Backplane Cover	1-16
DLP- A11 Remove the Backplane Sheet Metal Cover	1-17
NTP- A5 Install the Electrical Interface Assemblies	1-17
DLP- A12 Install a BNC or High-Density BNC EIA	1-18
DLP- A13 Install an SMB EIA	1-20
DLP- A14 Install the AMP Champ EIA	1-22
NTP- A6 Install the Power and Ground	1-24
DLP- A16 Connect the Office Ground to the ONS 15454	1-26
DLP- A17 Connect Office Power to the ONS 15454 Shelf	1-27
DLP- A18 Turn On and Verify Office Power	1-29
NTP- A7 Install the Fan-Tray Assembly	1-30
NTP- A119 Install the Alarm Expansion Panel	1-32
NTP- A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections	1-36
DLP- A19 Install Alarm Wires on the Backplane	1-37
DLP- A20 Install Timing Wires on the Backplane	1-40
DLP- A21 Install LAN Wires on the Backplane	1-41
DLP- A22 Install the TL1 Craft Interface	1-42
NTP- A120 Install an External Wire-Wrap Panel to the AEP	1-43
NTP- A9 Install the Electrical Card Cables on the Backplane	1-48
DLP- A23 Install DS-1 Cables Using Electrical Interface Adapters (Balun)	1-49
DLP- A24 Install DS-1 AMP Champ Cables on the AMP Champ EIA	1-50
DLP- A25 Install Coaxial Cable With BNC Connectors	1-53
DLP- A26 Install Coaxial Cable With High-Density BNC Connectors	1-54
DLP- A27 Install Coaxial Cable with SMB Connectors	1-55
NTP- A10 Route Electrical Cables	1-56
DLP- A28 Route Coaxial Cables	1-56
DLP- A29 Route DS-1 Twisted-Pair Cables	1-58
NTP- A11 Install the Rear Cover	1-58
NTP- A12 Install Ferrites	1-60
DLP- A30 Install Ferrites to Power Cabling	1-61
DLP- A31 Attach Ferrites to Wire-Wrap Pin Fields	1-62
NTP- A238 Install Optional DWDM Equipment	1-63
DLP- A412 Install the DCU Shelf Assembly	1-63

- DLP- A413 Install the Fiber Patch Panel Shelf **1-64**
- DLP- A414 Install the Fiber Storage Shelf **1-64**
- DLP- A415 Install the Air Ramp **1-65**
- NTP- A13 Perform the Shelf Installation Acceptance Test **1-65**
- DLP- A32 Inspect the Shelf Installation and Connections **1-66**
- DLP- A33 Measure Voltage **1-67**

CHAPTER 2**Install Cards and Fiber-Optic Cable 2-1**

- Before You Begin **2-1**
- NTP- A15 Install the Common Control Cards **2-2**
 - DLP- A36 Install the TCC+/TCC2 Cards **2-7**
 - DLP- A37 Install the XC, XCVT, or XC10G Cards **2-9**
 - DLP- A38 Install the Alarm Interface Controller or Alarm Interface Controller–International Card **2-11**
- NTP- A16 Install the OC-N Cards **2-13**
- NTP- A249 Install the Transponder and Muxponder Cards **2-15**
- NTP- A17 Install the Electrical Cards **2-16**
- NTP- A246 Install Ethernet Cards and Connectors **2-18**
 - DLP- A39 Install Ethernet Cards **2-19**
 - DLP- A469 Install GBIC or SFP Connectors **2-20**
 - DLP- A470 Remove GBIC or SFP Connectors **2-22**
- NTP- A242 Install the DWDM Cards **2-23**
- NTP- A243 Install the DWDM Dispersion Compensating Cards **2-25**
- NTP- A116 Remove and Replace a Card **2-27**
 - DLP- A191 Delete a Card **2-28**
 - DLP- A247 Change an OC-N Card **2-28**
- NTP- A115 Preprovision a Slot **2-29**
- NTP- A247 Install Fiber-Optic Cables on OC-N Cards **2-30**
 - DLP- A207 Install Fiber-Optic Cables on the LGX Interface **2-33**
 - DLP- A428 Install Fiber Optic Cables in a 1+1 Configuration **2-33**
 - DLP- A43 Install Fiber-Optic Cables for Path Protection Configurations **2-34**
 - DLP- A44 Install Fiber-Optic Cables for BLSR Configurations **2-38**
 - DLP- A45 Install the Fiber Boot **2-40**
- NTP- A244 Install Fiber-Optic Cables on DWDM Cards **2-42**
 - DLP- A423 Install Fiber-Optic Cables for Basic OSC on All DWDM Nodes **2-43**
 - DLP- A424 Install Fiber-Optic Cables for a Terminal Node **2-45**
 - DLP- A425 Install Fiber-Optic Cables for a Hub Node **2-46**
 - DLP- A426 Install Fiber-Optic Cables for a Line Amplifier Node **2-48**

- DLP- A427 Install Fiber-Optic Cables for an Amplified or Passive OADM Node **2-51**
- NTP- A245 Route Fiber-Optic Cables **2-57**
- NTP- A20 Replace the Front Door **2-58**

CHAPTER 3

Connect the PC and Log into the GUI 3-1

- Before You Begin **3-1**
- NTP- A21 Set Up Computer for CTC **3-2**
 - DLP- A47 Run the CTC Installation Wizard for Windows **3-2**
 - DLP- A48 Run the CTC Installation Wizard for UNIX **3-7**
 - DLP- A49 Set Up the Java Runtime Environment for UNIX **3-9**
- NTP- A234 Set Up CTC Computer for Local Craft Connection to the ONS 15454 **3-10**
 - DLP- A50 Set Up a Windows PC for Craft Connection to an ONS 15454 on the Same Subnet Using Static IP Addresses **3-12**
 - DLP- A51 Set Up a Windows PC for Craft Connection to an ONS 15454 Using DHCP **3-14**
 - DLP- A52 Set Up a Windows PC for Craft Connection to an ONS 15454 Using Automatic Host Detection **3-16**
 - DLP- A53 Set Up a Solaris Workstation for a Craft Connection to an ONS 15454 **3-19**
- NTP- A235 Set Up a CTC Computer for a Corporate LAN Connection to the ONS 15454 **3-21**
 - DLP- A56 Disable Proxy Service Using Internet Explorer (Windows) **3-22**
 - DLP- A57 Disable Proxy Service Using Netscape (Windows and UNIX) **3-22**
- NTP- A236 Set Up a Remote Access Connection to the ONS 15454 **3-23**
- NTP- A23 Log into the ONS 15454 GUI **3-24**
 - DLP- A59 Connect Computer to the ONS 15454 **3-25**
 - DLP- A60 Log into CTC **3-26**
 - DLP- A418 Install Public-Key Security Certificate **3-28**
 - DLP- A61 Create Login Node Groups **3-30**
 - DLP- A62 Add a Node to the Current Session or Login Group **3-31**

CHAPTER 4

Turn Up Node 4-1

- Before You Begin **4-1**
- NTP- A24 Verify Card Installation **4-2**
- NTP- A30 Create Users and Assign Security **4-4**
 - DLP- A74 Create a New User—Single Node **4-4**
 - DLP- A75 Create a New User—Multiple Nodes **4-5**
- NTP- A25 Set Up Name, Date, Time, and Contact Information **4-6**
- NTP- A169 Set Up CTC Network Access **4-8**
 - DLP- A249 Provision IP Settings **4-9**
 - DLP- A64 Set the IP Address, Default Router, and Network Mask Using the LCD **4-12**

- DLP- A65 Create a Static Route **4-14**
- DLP- A250 Set Up or Change Open Shortest Path First Protocol **4-15**
- DLP- A251 Set Up or Change Routing Information Protocol **4-17**
- NTP- A27 Set Up the ONS 15454 for Firewall Access **4-18**
 - DLP- A67 Provision the ILOP Listener Port on the ONS 15454 **4-19**
 - DLP- A68 Provision the ILOP Listener Port on the CTC Computer **4-20**
- NTP- A28 Set Up Timing **4-21**
 - DLP- A69 Set Up External or Line Timing **4-22**
 - DLP- A70 Set Up Internal Timing **4-24**
- NTP- A170 Create Protection Groups **4-25**
 - DLP- A71 Create a 1:1 Protection Group **4-27**
 - DLP- A72 Create a 1:N Protection Group **4-28**
 - DLP- A73 Create a 1+1 Protection Group **4-29**
 - DLP- A252 Create a Y-Cable Protection Group **4-31**
- NTP- A171 Set Up SNMP **4-32**
- NTP- A34 Create Ethernet RMON Alarm Thresholds **4-34**

CHAPTER 5**Turn Up a DWDM Node 5-1**

- Before You Begin **5-1**
- NTP- A221 Verify TCC2 Installation **5-2**
- NTP- A222 Provision the DWDM Node **5-3**
 - DLP- A400 Import a Cisco MetroPlanner Configuration File **5-4**
 - DLP- A401 Provision DWDM Hub Node Settings **5-4**
 - DLP- A402 Provision DWDM Terminal Node Settings **5-6**
 - DLP- A403 Provision DWDM OADM Node Settings **5-7**
 - DLP- A404 Provision DWDM Line Node Settings **5-10**
 - DLP- A405 Delete a DWDM Connection **5-11**
 - DLP- A406 Create a DWDM Connection **5-11**
 - DLP- A407 Verify OSCM and OSC-CSM Transmit Power **5-12**

CHAPTER 6**Turn Up Network 6-1**

- Before You Begin **6-1**
- NTP- A35 Verify Node Turn Up **6-2**
- NTP- A172 Create a Logical Network Map **6-3**
- NTP- A124 Provision a Point-to-Point Network **6-4**
 - DLP- A253 Provision SONET DCC Terminations **6-5**
 - DLP- A214 Change the Service State for a Port **6-6**
- NTP- A173 Point-to-Point Network Acceptance Test **6-7**

- DLP- A254 TCC+/TCC2 Active/Standby Switch Test **6-9**
- DLP- A255 Cross-Connect Card Side Switch Test **6-10**
- DLP- A88 Optical 1+1 Protection Test **6-11**
- NTP- A38 Provision a Linear ADM Network **6-12**
- NTP- A174 Linear ADM Network Acceptance Test **6-13**
- NTP- A40 Provision BLSR Nodes **6-15**
 - DLP- A89 Remap the K3 Byte **6-17**
- NTP- A126 Create a BLSR **6-17**
 - DLP- A328 Create a BLSR Using the BLSR Wizard **6-18**
 - DLP- A329 Create a BLSR Manually **6-20**
- NTP- A175 Two-Fiber BLSR Acceptance Test **6-21**
 - DLP- A217 BLSR Exercise Ring Test **6-23**
 - DLP- A91 BLSR Switch Test **6-25**
- NTP- A176 Four-Fiber BLSR Acceptance Test **6-28**
 - DLP- A92 Four-Fiber BLSR Exercise Span Test **6-30**
 - DLP- A93 Four-Fiber BLSR Span Switching Test **6-32**
- NTP- A44 Provision Path Protection Nodes **6-34**
- NTP- A177 Path Protection Acceptance Test **6-35**
 - DLP- A94 Path Protection Protection Switching Test **6-37**
- NTP- A216 Provision a Traditional Path Protection Dual Ring Interconnect **6-38**
- NTP- A217 Provision an Integrated Path Protection Dual Ring Interconnect **6-40**
- NTP- A224 Provision an Open-Ended Path Protection **6-42**
- NTP- A225 Open-Ended Path Protection Acceptance Test **6-44**
- NTP- A46 Subtend a Path Protection from a BLSR **6-46**
- NTP- A47 Subtend a BLSR from a Path Protection **6-48**
- NTP- A48 Subtend a BLSR from a BLSR **6-48**

CHAPTER 7

Turn Up DWDM Network 7-1

- Before You Begin **7-1**
- NTP- A232 Verify DWDM Node Turn Up **7-2**
- NTP- A233 Provision a DWDM Ring, Linear Configuration, or Single-Span Link **7-3**
 - DLP- A240 Provision OSC Terminations **7-5**
 - DLP- A491 Provision the Ring ID **7-6**
 - DLP- A492 Check Span Attenuation **7-6**
 - DLP- A493 Create a Test OCHNC **7-8**
 - DLP- A494 Verify the Optical Receive Power **7-8**
 - DLP- A490 Verify the OSNR **7-9**

- DLP- A496 Convert a Pass-Through Connection to an Add/Drop Connection 7-10
- DLP- A497 DWDM Node Acceptance Test 7-11

CHAPTER 8**Create Circuits and VT Tunnels 8-1**

- Before You Begin 8-1
- NTP- A127 Verify Network Turn Up 8-4
- NTP- A181 Create an Automatically Routed DS-1 Circuit 8-6
- NTP- A182 Create a Manually Routed DS-1 Circuit 8-10
- NTP- A183 Create a Unidirectional DS-1 Circuit with Multiple Drops 8-14
 - DLP- A314 Assign a Name to a Port 8-17
 - DLP- A95 Provision a DS-1 Circuit Source and Destination 8-18
- NTP- A184 Create an Automatically Routed DS-3 Circuit 8-20
- NTP- A185 Create a Manually Routed DS-3 Circuit 8-24
- NTP- A186 Create a Unidirectional DS-3 Circuit with Multiple Drops 8-26
 - DLP- A218 Provision Path Protection Selectors During Circuit Creation 8-30
 - DLP- A510 Provision a DS-3 Circuit Source and Destination 8-31
 - DLP- A96 Provision a DS-1 or DS-3 Circuit Route 8-32
- NTP- A133 Create an Automatically Routed VT Tunnel 8-33
- NTP- A134 Create a Manually Routed VT Tunnel 8-36
 - DLP- A219 Provision a VT Tunnel Route 8-37
- NTP- A187 Create a VT Aggregation Point 8-38
- NTP- A135 Test Electrical Circuits 8-41
- NTP- A188 Create an Automatically Routed OC-N Circuit 8-43
- NTP- A189 Create a Manually Routed OC-N Circuit 8-47
- NTP- A190 Create a Unidirectional OC-N Circuit with Multiple Drops 8-49
 - DLP- A97 Provision an OC-N Circuit Source and Destination 8-52
 - DLP- A98 Provision an OC-N Circuit Route 8-53
- NTP- A62 Test OC-N Circuits 8-55
- NTP- A139 Create a Half Circuit on a BLSR or 1+1 Node 8-57
- NTP- A140 Create a Half Circuit on a Path Protection Node 8-59
 - DLP- A311 Provision a Half Circuit Source and Destination—BLSR and 1+1 8-61
 - DLP- A312 Provision a Half Circuit Source and Destination—Path Protection 8-62
- NTP- A191 Create an E-Series EtherSwitch Circuit (Multicard or Single-Card Mode) 8-63
- NTP- A192 Create a Circuit for an E-Series Card in Port-Mapped Mode 8-65
- NTP- A142 Create an E-Series Shared Packet Ring Ethernet Circuit 8-67
- NTP- A143 Create an E-Series Hub and Spoke Ethernet Configuration 8-70
- NTP- A144 Create an E-Series Single-Card EtherSwitch Manual Cross-Connect 8-72

NTP- A145 Create an E-Series Multicard EtherSwitch Manual Cross-Connect **8-74**
 DLP- A99 Determine Available VLANs **8-77**
 DLP- A246 Provision E-Series Ethernet Card Mode **8-78**
 DLP- A220 Provision E-Series Ethernet Ports **8-78**
 DLP- A221 Provision E-Series Ethernet Ports for VLAN Membership **8-79**
 NTP- A146 Test E-Series Circuits **8-81**
 NTP- A147 Create a G-Series STS Circuit **8-82**
 NTP- A148 Create a Manual Cross-Connect for a G-Series or an E-Series in Port-Mapped Mode **8-84**
 DLP- A222 Provision G-Series Ethernet Ports **8-86**
 DLP- A421 Provision G-Series Flow Control Watermarks **8-87**
 NTP- A241 Provision G-Series Ports for Transponder Mode **8-88**
 NTP- A149 Test G-Series Circuits **8-91**
 NTP- A194 Create Overhead Circuits **8-92**
 DLP- A313 Create a DCC Tunnel **8-93**
 DLP- A83 Provision Orderwire **8-94**
 DLP- A212 Create a User Data Channel Circuit **8-95**
 NTP- A227 Provision a DWDM Optical Channel Network Connection **8-96**

CHAPTER 9

Manage Alarms 9-1

Before You Begin **9-1**
 NTP- A195 Document Existing Provisioning **9-2**
 DLP- A138 Print CTC Data **9-2**
 DLP- A139 Export CTC Data **9-4**
 NTP- A196 View Alarms, History, Events, and Conditions **9-5**
 DLP- A110 View Alarm History **9-8**
 DLP- A111 Changing the Maximum Number of Session Entries for Alarm History **9-9**
 DLP- A112 Display Alarms and Conditions Using Time Zone **9-10**
 DLP- A113 Synchronize Alarms **9-11**
 DLP- A114 View Conditions **9-11**
 NTP- A68 Delete Cleared Alarms from Display **9-13**
 NTP- A69 View Alarm-Affected Circuits **9-14**
 NTP- A70 View Alarm Counts on the LCD for a Node, Slot, or Port **9-16**
 NTP- A71 Create, Download, and Assign Alarm Severity Profiles **9-17**
 DLP- A115 Create Alarm Severity Profiles **9-18**
 DLP- A223 Download an Alarm Severity Profile **9-20**
 DLP- A429 Apply Alarm Profiles to Ports **9-21**
 DLP- A117 Apply Alarm Profiles to Cards and Nodes **9-23**
 DLP- A118 Delete Alarm Severity Profiles **9-25**

- NTP- A168 Enable, Modify, or Disable Alarm Severity Filtering **9-26**
 - DLP- A225 Enable Alarm Filtering **9-27**
 - DLP- A226 Modify Alarm and Condition Filtering Parameters **9-27**
 - DLP- A227 Disable Alarm Filtering **9-30**
- NTP- A72 Suppress Alarms and Discontinue Alarm Suppression **9-30**
 - DLP- A119 Suppress Alarm Reporting **9-31**
 - DLP- A120 Discontinue Alarm Suppression **9-32**
- NTP- A32 Provision External Alarms and Controls on the Alarm Interface Controller **9-33**
- NTP- A248 Provision External Alarms and Controls on the Alarm Interface Controller-International **9-35**

CHAPTER 10**Monitor Performance 10-1**

- Before You Begin **10-1**
- NTP- A253 Change the PM Display **10-2**
 - DLP- A124 Refresh PM Counts at 15-Minute Intervals **10-2**
 - DLP- A125 Refresh PM Counts at One-Day Intervals **10-3**
 - DLP- A126 View Near-End PM Counts **10-4**
 - DLP- A127 View Far-End PM Counts **10-4**
 - DLP- A128 Monitor PM Counts for a Selected Signal **10-5**
 - DLP- A129 Reset Current PM Counts **10-6**
 - DLP- A130 Clear Selected PM Counts **10-7**
 - DLP- A260 Set Auto-Refresh Interval for Displayed PM Counts **10-8**
 - DLP- A261 Refresh PM Counts for a Different Port **10-8**
- NTP- A197 Monitor Electrical Performance **10-9**
- NTP- A198 Monitor Ethernet Performance **10-11**
 - DLP- A256 View Ethernet Statistics PM Parameters **10-12**
 - DLP- A257 View Ethernet Utilization PM Parameters **10-13**
 - DLP- A258 View Ethernet History PM Parameters **10-14**
 - DLP- A320 View ML-Series Ether Ports PM Parameters **10-15**
 - DLP- A321 View ML-Series POS Ports PM Parameters **10-16**
 - DLP- A259 Refresh Ethernet PM Counts at a Different Time Interval **10-17**
- NTP- A250 Monitor OC-N Performance **10-18**
 - DLP- A121 Enable/Disable Pointer Justification Count Performance Monitoring **10-19**
 - DLP- A122 Enable/Disable Intermediate Path Performance Monitoring **10-21**
 - DLP- A507 View OC-N PM Parameters **10-23**
- NTP- A251 Monitor Multirate Transport Performance **10-24**
 - DLP- A500 Enable/Disable OTN G.709 Performance Monitoring **10-25**
 - DLP- A501 Enable/Disable OTN FEC Performance Monitoring **10-26**
 - DLP- A317 View Optics PM Parameters **10-27**
 - DLP- A318 View Payload PM Parameters **10-28**

- DLP- A319 View Optical Transport Network PM Parameters **10-30**
- NTP- A252 Monitor DWDM Performance **10-31**
- DLP- A502 View Optical Service Channel PM Parameters **10-32**
- DLP- A503 View Optical Amplifier PM Parameters **10-34**
- DLP- A504 View Optical Multiplexer and Demultiplexer PM Parameters **10-36**
- DLP- A505 View Channel Filter Optical Add/Drop Multiplexer PM Parameters **10-38**
- DLP- A506 View Band Filter Optical Add/Drop Multiplexer PM Parameters **10-40**

CHAPTER 11

Manage Circuits 11-1

- Before You Begin **11-1**
- NTP- A199 Locate and View Circuits **11-2**
 - DLP- A416 View Circuit Information **11-2**
 - DLP- A131 Search for Circuits **11-7**
 - DLP- A262 Filter the Display of Circuits **11-8**
 - DLP- A229 View Circuits on a Span **11-9**
 - DLP- A417 View the BLSR Squelch Table **11-10**
- NTP- A200 View Cross-Connect Card Resource Usage **11-11**
- NTP- A151 Modify Circuit Characteristics **11-12**
 - DLP- A230 Change a Circuit State **11-13**
 - DLP- A231 Edit a Circuit Name **11-14**
 - DLP- A232 Change Active and Standby Span Color **11-15**
 - DLP- A233 Edit Path Protection Circuit Path Selectors **11-16**
 - DLP- A263 Edit Path Protection Dual Ring Interconnect Circuit Hold-Off Timer **11-17**
- NTP- A416 Convert a CTC Circuit to TL1 Cross-Connects **11-18**
- NTP- A417 Upgrade TL1 Cross-Connects to CTC Circuits **11-19**
- NTP- A152 Delete Circuits **11-20**
- NTP- A78 Create a Monitor Circuit **11-21**
- NTP- A79 Create a J1 Path Trace **11-22**
 - DLP- A264 Provision Path Trace on Circuit Source and Destination Ports **11-23**
 - DLP- A137 Provision Path Trace on OC-N Ports **11-28**

CHAPTER 12

Change Node Settings 12-1

- Before You Begin **12-1**
- NTP- A81 Change Node Management Information **12-2**
 - DLP- A140 Change the Node Name, Date, Time, and Contact Information **12-2**
 - DLP- A265 Change the Login Legal Disclaimer **12-3**
- NTP- A201 Change CTC Network Access **12-4**
 - DLP- A266 Change IP Settings **12-5**

- DLP- A142 Modify a Static Route **12-6**
- DLP- A143 Delete a Static Route **12-6**
- DLP- A144 Disable OSPF **12-7**
- NTP- A226 Modify DWDM Node Settings **12-8**
 - DLP- A408 Modify DWDM Hub Node Settings **12-9**
 - DLP- A409 Modify DWDM Terminal Node Settings **12-9**
 - DLP- A410 Modify DWDM OADM Node Settings **12-10**
 - DLP- A411 Modify DWDM Line Node Settings **12-10**
- NTP- A202 Customize the CTC Network View **12-11**
 - DLP- A145 Change the Network View Background Color **12-11**
 - DLP- A267 Change the Default Network View Background Map **12-12**
 - DLP- A268 Apply a Custom Network View Background Map **12-13**
 - DLP- A498 Switch Between TDM and DWDM Network Views **12-13**
 - DLP- A148 Create Domain Icons **12-14**
 - DLP- A149 Manage Domain Icons **12-14**
 - DLP- A269 Enable Dialog Box Do-Not-Display Option **12-15**
- NTP- A203 Modify or Delete Card Protection Settings **12-16**
 - DLP- A150 Modify a 1:1 Protection Group **12-17**
 - DLP- A152 Modify a 1:N Protection Group **12-18**
 - DLP- A154 Modify a 1+1 Protection Group **12-19**
 - DLP- A270 Modify a Y Cable Protection Group **12-20**
 - DLP- A499 Modify a Splitter Protection Group **12-21**
 - DLP- A155 Delete a Protection Group **12-21**
- NTP- A204 Delete a SONET DCC Termination **12-22**
- NTP- A423 Delete a DWDM OSC Termination **12-23**
- NTP- A85 Change Node Timing **12-23**
 - DLP- A157 Change the Node Timing Source **12-24**
- NTP- A205 Modify Users and Change Security **12-26**
 - DLP- A271 Change Security Policy—Single Node **12-26**
 - DLP- A272 Change Security Policy—Multiple Nodes **12-27**
 - DLP- A158 Change User Password and Security Level—Single Node **12-28**
 - DLP- A160 Change User Password and Security Level—Multiple Nodes **12-29**
 - DLP- A315 Log Out a User—Single Node **12-29**
 - DLP- A316 Log Out a User—Multiple Nodes **12-30**
 - DLP- A159 Delete User—Single Node **12-31**
 - DLP- A161 Delete User—Multiple Nodes **12-31**
- NTP- A87 Change SNMP Settings **12-32**
 - DLP- A273 Modify SNMP Trap Destinations **12-33**
 - DLP- A163 Delete SNMP Trap Destinations **12-34**

DLP- A164 Delete Ethernet RMON Alarm Thresholds **12-35**

CHAPTER 13

Change Card Settings 13-1

Before You Begin **13-1**

NTP- A88 Modify Line Settings and PM Parameter Thresholds for Electrical Cards **13-2**

DLP- A165 Change Line and Threshold Settings for the DS1-14 or DS1N-14 Cards **13-3**

DLP- A166 Change Line and Threshold Settings for the DS3-12 or DS3N-12 Cards **13-6**

DLP- A167 Change Line and Threshold Settings for the DS3E-12 or DS3N-12E Cards **13-8**

DLP- A168 Change Line and Threshold Settings for the DS3XM-6 Card **13-12**

DLP- A169 Change Line and Threshold Settings for the EC1-12 Card **13-16**

NTP- A89 Modify Line Settings and PM Parameter Thresholds for OC-N Cards **13-19**

DLP- A170 Change Line Transmission Settings for OC-N Cards **13-19**

DLP- A171 Change Threshold Settings for OC-N Cards **13-21**

DLP- A172 Change an Optical Port to SDH **13-23**

NTP- A206 Modify Line Settings and PM Parameter Thresholds for TXP_MR_10G Cards **13-24**

DLP- A274 Change Card Settings for TXP_MR_10G Cards **13-25**

DLP- A275 Change Line Settings for TXP_MR_10G Cards **13-26**

DLP- A276 Change Line Threshold Settings for TXP_MR_10G Cards **13-27**

DLP- A277 Change Optical Thresholds Settings for TXP_MR_10G Cards **13-28**

DLP- A278 Change Section Trace Settings for TXP_MR_10G Cards **13-29**

DLP- A279 Change Optical Transport Network Settings for TXP_MR_10G Cards **13-30**

NTP- A207 Modify Line Settings and PM Parameter Thresholds for MXP_2.5G_10G Cards **13-32**

DLP- A280 Change Card Settings for MXP_2.5G_10G Cards **13-33**

DLP- A281 Change Line Settings for MXP_2.5G_10G Cards **13-35**

DLP- A282 Change Line Thresholds Settings for MXP_2.5G_10G Cards **13-36**

DLP- A283 Change Optical Thresholds Settings for MXP_2.5G_10G Cards **13-38**

DLP- A284 Change Section Trace Settings for MXP_2.5G_10G Cards **13-39**

DLP- A285 Change Optical Transport Network Settings for MXP_2.5G_10G Cards **13-40**

NTP- A237 Modify Line Settings and PM Parameter Thresholds for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-42**

DLP- A471 Change Card Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-42**

DLP- A472 Change Line Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-44**

DLP- A473 Change Line Threshold Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-46**

DLP- A474 Change Optical Thresholds Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-48**

DLP- A475 Change Section Trace Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-49**

DLP- A476 Change Optical Transport Network Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-50**

NTP- A90 Modify Alarm Interface Controller Settings **13-52**

- DLP- A173 Change External Alarms Using the AIC Card **13-53**
- DLP- A174 Change External Controls Using the AIC Card **13-53**
- DLP- A175 Change Orderwire Settings Using the AIC Card **13-54**
- NTP- A118 Modify Alarm Interface Controller-International Settings **13-55**
 - DLP- A208 Change External Alarms Using the AIC-I Card **13-55**
 - DLP- A209 Change External Controls Using the AIC-I Card **13-56**
 - DLP- A210 Change AIC-I Card Orderwire Settings **13-57**
- NTP- A91 Upgrade DS-1 and DS-3 Protect Cards from 1:1 Protection to 1:N Protection **13-58**
 - DLP- A176 Convert DS1-14 Cards From 1:1 to 1:N Protection **13-58**
 - DLP- A177 Convert DS3-12 Cards From 1:1 to 1:N Protection **13-60**
 - DLP- A178 Convert DS3-12E Cards From 1:1 to 1:N Protection **13-61**
- NTP- A229 Modify Line Settings and PM Parameter Thresholds for Optical Service Channel Cards **13-63**
 - DLP- A477 Change Optical Line Settings for OSCM and OSC-CSM Cards **13-63**
 - DLP- A478 Change Line Threshold Settings for OSCM and OSC-CSM Cards **13-65**
 - DLP- A479 Change Optical Line Settings for OSCM and OSC-CSM Cards **13-66**
 - DLP- A480 Change Channel Settings for OSCM and OSC-CSM Cards **13-67**
- NTP- A230 Modify Line Settings and PM Parameter Thresholds for Amplifier Cards **13-68**
 - DLP- A481 Change Optical Line Settings for OPT-PRE and OPT-BST Amplifiers **13-69**
 - DLP- A482 Change Line Threshold Settings for OPT-PRE and OPT-BST Amplifiers **13-70**
 - DLP- A483 Change Optical Amplifier Line Settings for OPT-PRE and OPT-BST Amplifiers **13-71**
 - DLP- A484 Change Channel Settings for OPT-PRE and OPT-BST Amplifiers **13-72**
- NTP- A231 Modify Line Settings and PM Parameter Thresholds for Multiplexer and Demultiplexer Cards **13-73**
 - DLP- A485 Change Optical Line Settings for Multiplexer and Demultiplexer Cards **13-74**
 - DLP- A486 Change Line Threshold Settings for Multiplexer and Demultiplexer Cards **13-75**
 - DLP- A487 Change Optical Channel Settings for Multiplexer and Demultiplexer Cards **13-76**
 - DLP- A488 Change Channel Settings for Multiplexer and Demultiplexer Cards **13-78**

CHAPTER 14**Upgrade Cards and Spans 14-1**

- Before You Begin **14-1**
- NTP- A92 Upgrade the XC Card to the XCVT Card **14-2**
- NTP- A220 Upgrade the XC or XCVT Card to the XC10G Card **14-3**
- NTP- A419 Upgrade the TCC or TCC+ Card to the TCC2 Card **14-5**
 - DLP- A291 Upgrade the TCC Card to the TCC+ Card **14-6**
 - DLP- A508 Upgrade the TCC+ Card to the TCC2 Card **14-7**
- NTP- A93 Upgrade the DS3-12 Card to the DS3-12E Card **14-9**
- NTP- A254 Downgrade a DS3-12E/DS3NE Card to a DS3-12/DS3N-12 Card **14-11**
- NTP- A153 Upgrade the AIC Card to AIC-I **14-12**

- NTP- A94 Upgrade OC-N Spans Automatically **14-13**
- NTP- A95 Upgrade OC-N Spans Manually **14-16**
 - DLP- A293 Perform a Manual Span Upgrade on a Two-Fiber BLSR **14-18**
 - DLP- A294 Perform a Manual Span Upgrade on a Four-Fiber BLSR **14-19**
 - DLP- A295 Perform a Manual Span Upgrade on a Path Protection **14-21**
 - DLP- A296 Perform a Manual Span Upgrade on a 1+1 Protection Group **14-22**
 - DLP- A297 Perform a Manual Span Upgrade on an Unprotected Span **14-23**

CHAPTER 15

Convert Network Configurations 15-1

- Before You Begin **15-1**
- NTP- A154 Convert a Point-to-Point to a Linear ADM **15-1**
 - DLP- A298 Check the Network for Alarms and Conditions **15-3**
- NTP- A155 Convert a Point-to-Point or a Linear ADM to a Two-Fiber BLSR **15-3**
 - DLP- A189 Verify that a 1+1 Working Slot is Active **15-6**
- NTP- A156 Convert a Point-to-Point or Linear ADM to a Path Protection **15-7**
- NTP- A210 Convert a Path Protection to a Two-Fiber BLSR **15-7**
- NTP- A211 Convert a Two-Fiber BLSR to a Four-Fiber BLSR **15-9**
- NTP- A159 Modify a BLSR **15-11**
 - DLP- A326 Change a BLSR Node ID **15-12**
- NTP- A228 Manage BLSR Manual Ring Switches **15-12**
 - DLP- A301 Initiate a BLSR Manual Ring Switch **15-13**
 - DLP- A241 Clear a BLSR Manual Ring Switch **15-14**

CHAPTER 16

Add and Remove BLSR and Path Protection Nodes 16-1

- Before You Begin **16-1**
- NTP- A212 Add a BLSR Node **16-1**
 - DLP- A302 Check BLSR or Path Protection Alarms and Conditions **16-6**
 - DLP- A242 Create a BLSR on a Single Node **16-6**
 - DLP- A303 Initiate a BLSR Force Ring Switch **16-7**
 - DLP- A194 Clear a BLSR Force Ring Switch **16-9**
- NTP- A213 Remove a BLSR Node **16-10**
 - DLP- A195 Verify Timing in a Reduced Ring **16-12**
 - DLP- A304 Verify BLSR and Path Protection Pass-Through Circuits **16-13**
 - DLP- A422 Verify BLSR Extension Byte Mapping **16-14**
 - DLP- A196 Delete a BLSR from a Single Node **16-15**
- NTP- A105 Add a Path Protection Node **16-15**
 - DLP- A197 Initiate a Path Protection Force Switch **16-17**
 - DLP- A198 Clear a Path Protection Force Switch **16-18**

NTP- A106 Remove a Path Protection Node **16-19**

CHAPTER 17
Maintain the Node 17-1

Before You Begin **17-1**

NTP- A107 Inspect and Maintain the Air Filter **17-2**

DLP- A199 Inspect, Clean, and Replace the Reusable Air Filter **17-2**

DLP- A200 Inspect and Replace the Disposable Air Filter **17-5**

NTP- A108 Back Up the Database **17-7**

NTP- A109 Restore the Database **17-9**

NTP- A163 Restore the Node to Factory Configuration **17-11**

DLP- A244 Use the Reinitialization Tool to Clear the Database and Upload Software (Windows) **17-12**

DLP- A245 Use the Reinitialization Tool to Clear the Database and Upload Software (UNIX) **17-14**

NTP- A214 Off Load the Security Audit Trail Log **17-16**

NTP- A110 Inhibit Card Protection Switching **17-17**

DLP- A201 Apply a Lock On **17-17**

DLP- A202 Apply a Lock Out **17-18**

DLP- A203 Clear a Lock On or Lock Out **17-19**

NTP- A111 Revert to an Earlier Software Load **17-20**

NTP- A112 Clean Fiber Connectors **17-21**

DLP- A204 Scope and Clean Fiber Connectors and Adapters with Alcohol and Dry Wipes **17-22**

DLP- A205 Clean Fiber Connectors with Cletop **17-23**

DLP- A206 Clean the Fiber Adapters **17-23**

NTP- A113 Reset the TCC+/TCC2 Card Using CTC **17-24**

NTP- A215 View G-Series Ethernet Maintenance Information **17-25**

NTP- A239 View E-Series Ethernet Maintenance Information **17-25**

DLP- A309 View the Ethernet MAC Address Table **17-26**

DLP- A310 View Ethernet Trunk Utilization **17-26**

NTP- A218 Change the Node Timing Reference **17-27**

DLP- A322 Manual or Force Switch the Node Timing Reference **17-27**

DLP- A323 Clear a Manual or Force Switch on a Node Timing Reference **17-28**

NTP- A223 View ONS 15454 Timing Report **17-28**

CHAPTER 18
Power Down the Node 18-1

NTP- A114 Power Down the Node **18-1**

APPENDIX A
CTC Information and Shortcuts A-1

Displaying Node, Card, and Network Views **A-1**

Node Icons on the Network View Map **A-2**

Manage the CTC Window **A-3**

 CTC Menu and Toolbar Options **A-3**

 CTC Mouse Options **A-7**

 Node View Shortcuts **A-8**

 Network View Tasks **A-9**

 Table Display Options **A-10**

Equipment Inventory **A-10**

APPENDIX B

Specifications B-1

Bandwidth **B-1**

Configurations **B-1**

Cisco Transport Controller **B-2**

External LAN Interface **B-2**

TL1 Craft Interface **B-2**

Modem Interface **B-2**

Alarm Interface **B-2**

EIA Interface **B-3**

BITS Interface **B-3**

System Timing **B-3**

Power Specifications **B-3**

 System Power **B-3**

 Cards **B-3**

Environmental Specifications **B-7**

 System **B-7**

 Cards **B-7**

Dimensions **B-9**

APPENDIX C

Release 4.1 and 4.5 NTPs C-1

APPENDIX D

Release 4.1 and 4.5 DLPs D-1

GLOSSARY



FIGURES

Figure 1-1	Reversing the Mounting Brackets (23-inch (584.2 mm) Position to 19-inch (482.6 mm) Position)	1-8
Figure 1-2	Installing the External Brackets	1-9
Figure 1-3	Cisco ONS 15454 Front Door	1-14
Figure 1-4	Removing the ONS 15454 Front Door	1-15
Figure 1-5	Installing the BNC EIA	1-19
Figure 1-6	Installing the High-Density BNC EIA	1-20
Figure 1-7	Installing the SMB EIA (Use a Balun for DS-1 Connections)	1-21
Figure 1-8	Installing the AMP Champ EIA	1-23
Figure 1-9	Ground Location on the Backplane	1-26
Figure 1-10	Cisco ONS 15454 Power Terminals	1-28
Figure 1-11	Installing the Fan-Tray Assembly	1-31
Figure 1-12	Replace Backplane Screws with Standoffs	1-33
Figure 1-13	Installing Standoffs and the AEP	1-34
Figure 1-14	AEP Wire-Wrap Connections to Backplane Pins	1-35
Figure 1-15	Cisco ONS 15454 Backplane Pinouts (Release 3.4 or Later)	1-38
Figure 1-16	Cisco ONS 15454 Backplane Pinouts (Release 3.3 and Earlier)	1-39
Figure 1-17	Installing the AEP Cover	1-44
Figure 1-18	Alarm Input Connector	1-46
Figure 1-19	Alarm Output Connector	1-47
Figure 1-20	Backplane with an SMB EIA for DS-1 Cables	1-50
Figure 1-21	Using a Right-Angle Connector to Install Coaxial Cable with BNC Connectors	1-53
Figure 1-22	Installing Coaxial Cable with SMB Connectors	1-55
Figure 1-23	Routing Coaxial Cable (SMB EIA Backplane)	1-57
Figure 1-24	Backplane Attachment for the Rear Cover	1-59
Figure 1-25	Installing the Rear Cover with Spacers	1-60
Figure 1-26	Attaching Block and Oval Ferrites to Power Cabling	1-61
Figure 1-27	Attaching Ferrites to Wire-Wrap Pin Fields	1-62
Figure 2-1	Installing Fiber-Optic Cables	2-34
Figure 2-2	Connecting Fiber to a Four-Node Path Protection	2-35
Figure 2-3	Connecting Fiber to an Eight-Node Traditional Path Protection Dual-Ring Interconnect	2-36
Figure 2-4	Connecting Fiber to a Six-Node Integrated Path Protection Dual-Ring Interconnect	2-37

Figure 2-5	Connecting Fiber to a Four-Node, Two-Fiber BLSR	2-39
Figure 2-6	Connecting Fiber to a Four-Node, Four-Fiber BLSR	2-40
Figure 2-7	Attaching a Fiber Boot	2-41
Figure 2-8	Fibering a Hub Node	2-47
Figure 2-9	Fibering a Line Amplifier Node	2-50
Figure 2-10	Fibering an Amplified OADM Node	2-54
Figure 2-11	Fibering a Passive OADM Node	2-56
Figure 2-12	Installing the Door Ground Strap Retrofit Kit	2-59
Figure 2-13	Shelf Assembly with Door Ground Strap Retrofit Kit Installed	2-60
Figure 3-1	Choosing Setup Type in the CTC Installation Wizard	3-4
Figure 3-2	Choosing CTC Components in the CTC Installation Wizard	3-4
Figure 3-3	Viewing the CTC Online Help Directory in the CTC Installation Wizard	3-5
Figure 3-4	Logging into CTC	3-27
Figure 3-5	Java Plug-in Security Warning dialog box	3-29
Figure 3-6	Login Node Group	3-31
Figure 4-1	Selecting the IP Address Option	4-12
Figure 4-2	Changing the IP Address	4-13
Figure 4-3	Selecting the Save Configuration Option	4-13
Figure 4-4	Saving and Rebooting the TCC+/TCC2	4-13
Figure 4-5	Nodes Behind a Firewall	4-18
Figure 4-6	A CTC Computer and ONS 15454s Residing Behind Firewalls	4-19
Figure 4-7	Creating a 1:1 Protection Group	4-27
Figure 4-8	Creating a 1:N Protection Group	4-29
Figure 4-9	Creating a 1+1 Protection Group	4-30
Figure 4-10	Creating a Y Cable Protection Group	4-32
Figure 4-11	Setting SNMP	4-33
Figure 4-12	Creating RMON Thresholds	4-34
Figure 6-1	Linear ADM Configuration	6-12
Figure 6-2	Four-Node, Two-Fiber BLSR Fiber Connection Example	6-15
Figure 6-3	Four-Node, Four-Fiber BLSR Fiber Connection Example	6-16
Figure 6-4	Protection Operation on a Three-Node BLSR	6-24
Figure 6-5	Path Protection Fiber Connection Example	6-34
Figure 6-6	Traditional Path Protection DRI Fiber Connection Example	6-39
Figure 6-7	Integrated Path Protection DRI Example	6-41
Figure 6-8	ONS 15454 Open-Ended Path Protection Configurations Fiber Connection Example	6-43

Figure 6-9	Path Protection Subtended from a BLSR	6-47
Figure 6-10	BLSR Subtended from a BLSR	6-49
Figure 6-11	Subtended BLSRs on the Network Map	6-50
Figure 8-1	Setting Circuit Attributes For a DS-1 Circuit	8-8
Figure 8-2	Setting Circuit Routing Preferences for a DS-1 Circuit	8-9
Figure 8-3	Setting Circuit Attributes for a Unidirectional DS-1 Circuit	8-15
Figure 8-4	Defining the Circuit Source on a DS-1 Card	8-19
Figure 8-5	Defining the Circuit Source on a DS3XM-6 Card	8-19
Figure 8-6	Setting Circuit Attributes for a DS-3 Circuit	8-21
Figure 8-7	Setting Circuit Routing Preferences for a DS-3 Circuit	8-23
Figure 8-8	Setting Circuit Attributes for a Unidirectional DS-3 Circuit	8-28
Figure 8-9	Manually Routing a DS-1 Circuit	8-32
Figure 8-10	Setting Attributes for a VT Tunnel	8-34
Figure 8-11	Manually Routing a VT Tunnel	8-38
Figure 8-12	Setting Attributes for a VT Aggregation Point	8-40
Figure 8-13	Setting Circuit Attributes for an OC-N Circuit	8-45
Figure 8-14	Setting Circuit Routing Preferences for an OC-N Circuit	8-46
Figure 8-15	Manually Routing an OC-N Circuit	8-54
Figure 8-16	Two Port Bidirectional Transponder Mode	8-88
Figure 8-17	One Port Bidirectional Transponder Mode	8-89
Figure 8-18	Two Port Unidirectional Transponder Mode	8-90
Figure 8-19	Provisioning a DCC Tunnel	8-94
Figure 8-20	Provisioning Local Orderwire	8-95
Figure 9-1	Selecting CTC Data For Print	9-3
Figure 9-2	Selecting CTC Data For Export	9-4
Figure 9-3	CTC Node View	9-6
Figure 9-4	CTC Preferences Dialog Box	9-10
Figure 9-5	Node View Conditions Window	9-12
Figure 9-6	Select Affected Circuits Option	9-15
Figure 9-7	Viewing Alarm-Affected Circuits	9-15
Figure 9-8	The LCD Panel	9-16
Figure 9-9	Network View Alarm Profiles Window	9-18
Figure 9-10	Store Profiles Dialog Box	9-19
Figure 9-11	Card View Port Alarm Profile	9-22
Figure 9-12	Node View Alarm Profile	9-24

Figure 9-13	Select Node/Profile Combination For Delete Dialog Box	9-25
Figure 9-14	Alarm Filter Dialog Box General Tab	9-28
Figure 9-15	Alarm Filter Dialog Box Conditions Tab	9-29
Figure 9-16	AIC Card External Alarms	9-34
Figure 9-17	Provisioning External Alarms On The AIC-I Card	9-36
Figure 10-1	Signal-Type Menus for a DS3XM-6 Card	10-6
Figure 10-2	Viewing Electrical Card Performance Monitoring Information	10-10
Figure 10-3	G-Series Statistics on the Card View Performance Window	10-12
Figure 10-4	G-Series Utilization on the Card View Performance Window	10-14
Figure 10-5	Ethernet History on the Card View Performance Window	10-15
Figure 10-6	Ether Ports on the Card View Performance Window	10-16
Figure 10-7	POS Ports on the Card View Performance Window	10-17
Figure 10-8	Enabling or Disabling Pointer Justification Count Parameters	10-20
Figure 10-9	Pointer Justification Counts in the Performance Window	10-21
Figure 10-10	SONET STS Tab for Enabling or Disabling IPPM	10-22
Figure 10-11	Viewing OC-N Card Performance Monitoring Information	10-23
Figure 10-12	OTN Lines Tab for Enabling/Disabling OTN G.709 Performance Monitoring	10-25
Figure 10-13	OTN Lines Tab for Enabling/Disabling OTN FEC Performance Monitoring	10-26
Figure 10-14	Viewing Optics Performance Monitoring Information	10-28
Figure 10-15	Viewing Payload Performance Monitoring Information	10-29
Figure 10-16	Viewing OTN G.709 Performance Monitoring Information	10-30
Figure 10-17	Viewing OTN FEC Performance Monitoring Information	10-31
Figure 10-18	OC3 Line Tab in the Optical Service Channel Card View Performance Window	10-33
Figure 10-19	Optical Line Tab in the Optical Service Channel Card View Performance Window	10-34
Figure 10-20	Optical Line Tab in the Optical Amplifier Card View Performance Window	10-35
Figure 10-21	Optical Amplifier Line Tab in the Optical Amplifier Card View Performance Window	10-36
Figure 10-22	Optical Channel Tab in the Mux/Demux Card View Performance Window	10-37
Figure 10-23	Optical Line Tab in the Mux/Demux Card View Performance Window	10-38
Figure 10-24	Optical Line Tab in the Channel Filter OADM Card View Performance Window	10-39
Figure 10-25	Optical Channel Tab in the Channel Filter OADM Card View Performance Window	10-40
Figure 10-26	Optical Line Tab in the Band Filter OADM Card View Performance Window	10-41
Figure 10-27	Optical Band Tab in the Band Filter OADM Card View Performance Window	10-42
Figure 11-1	Changing Circuit State	11-13
Figure 11-2	Editing Path Protection Path Selectors	11-17
Figure 11-3	Choosing the Cross-Connects Only Option	11-19

Figure 11-4	VT1.5 Monitor Circuit Received at an EC1-12 Port	11-22
Figure 11-5	Selecting the Edit Path Trace Option	11-25
Figure 11-6	Setting Up a Path Trace	11-27
Figure 11-7	Detailed Circuit Window With Manual Expected String Enabled	11-27
Figure 12-1	Disabling OSPF on the ONS 15454	12-7
Figure 12-2	Viewing Trap Destinations	12-34
Figure 14-1	Span Upgrade Drop-Down Menu	14-15
Figure 14-2	Span Upgrade Wizard	14-15
Figure 15-1	Linear ADM to BLSR Conversion	15-5
Figure 16-1	Three-Node, Two-Fiber BLSR Before a Fourth Node Is Added	16-2
Figure 16-2	Three-Node, Four-Fiber BLSR Before a Fourth Node is Added	16-3
Figure 16-3	Four-Node, Two-Fiber BLSR Before a Node Is Removed	16-11
Figure 16-4	Verifying Pass-Through STSs	16-13
Figure 16-5	Circuits on Span Dialog Box with a Force Switch	16-18
Figure 17-1	Reusable Fan-Tray Air Filter in an External Filter Bracket (Front Door Removed)	17-3
Figure 17-2	Inserting or Removing the Fan-Tray Assembly (Front Door Removed)	17-6
Figure 17-3	Inserting or Removing a Disposable Fan-Tray Air Filter (Front Door Removed)	17-7
Figure 17-4	Backing up the TCC2 Database	17-8
Figure 17-5	Restoring the TCC2 Database	17-10
Figure 17-6	Restoring the Database—Traffic Loss Warning	17-10
Figure 17-7	Restoring the Database – In-Process Notification	17-11
Figure 17-8	Reinitialization Tool in Windows	17-13
Figure 17-9	Confirming NE Restoration	17-14
Figure 17-10	The Reinitialization Tool in UNIX	17-15



TABLES

Table 1-1	Pin Assignments for the AEP	1-36
Table 1-2	External Timing Pin Assignments for BITS	1-40
Table 1-3	LAN Pin Assignments	1-41
Table 1-4	Craft Interface Pin Assignments	1-43
Table 1-5	Alarm Input Pin Assignments	1-44
Table 1-6	Alarm Output Pin Assignments	1-45
Table 1-7	Pin Assignments for AMP Champ Connectors	1-51
Table 1-8	Pin Assignments for AMP Champ Connectors (Shielded DS1 Cable)	1-52
Table 1-9	Shelf Installation Task Summary	1-65
Table 2-1	Card and Slot Compatibility for the XC and XCVT Cards	2-3
Table 2-2	Card and Slot Compatibility for the XC10G Card	2-5
Table 2-3	OC-N Card Transmit and Receive Levels	2-31
Table 2-4	DWDM Card Transmit and Receive Levels	2-42
Table 3-1	CTC Computer Setup for Local Craft Connections to the ONS 15454	3-11
Table 4-1	LED Behavior During TCC+/TCC2 Reboot	4-11
Table 4-2	Ports Used by the TCC+/TCC2 Cards	4-19
Table 4-3	Protection Types	4-26
Table 4-4	Ethernet Threshold Variables (MIBs)	4-35
Table 5-1	DWDM Hub Node Settings	5-5
Table 5-2	DWDM System Types	5-5
Table 5-3	DWDM Terminal Node Settings	5-6
Table 5-4	DWDM OADM Node Settings	5-7
Table 5-5	OADM Channels	5-8
Table 5-6	DWDM Line Node Settings	5-10
Table 8-1	ONS 15454 Circuit Options	8-2
Table 8-2	CTC Circuit Source and Destination Options for VT Circuits	8-3
Table 8-3	CTC Circuit Source and Destination Options for STS Circuits	8-4
Table 8-4	VLAN Settings	8-80
Table 9-1	Alarm Column Descriptions	9-6
Table 9-2	Color Codes for Alarms and Conditions	9-7
Table 9-3	Release 4.0 and Later Port-Based Alarm Numbering Scheme	9-7

Table 10-1	OC-N Cards that Terminate the Line, Called LTEs	10-19
Table 11-1	Circuit Protection Types	11-4
Table 11-2	Cisco ONS 15454 Circuit Status	11-4
Table 11-3	Cisco ONS 15454 Circuit States	11-6
Table 11-4	Path-Trace-Capable ONS 15454 Cards	11-24
Table 12-1	Managing Domains	12-15
Table 13-1	Line Options for DS1-14 and DS1N-14 Cards	13-3
Table 13-2	Line Thresholds Options for DS1-14 and DS1N-14 Cards	13-4
Table 13-3	Electrical Path Threshold Options for DS1-14 and DS1N-14 Cards	13-4
Table 13-4	SONET Threshold Options for DS1-14 and DS1N-14 Cards	13-5
Table 13-5	Line Options for DS3-12 or DS3N-12 Cards	13-6
Table 13-6	Line Threshold Options for DS3-12 or DS3N-12 Cards	13-7
Table 13-7	SONET Threshold Options for DS3-12 or DS3N-12 Cards	13-7
Table 13-8	Line Options for the DS3-12E and DS3N-12E Cards	13-9
Table 13-9	Line Threshold Options for the DS3-12E and DS3N-12E Cards	13-10
Table 13-10	Electrical Path Options for the DS3-12E and DS3N-12E Cards	13-10
Table 13-11	SONET Threshold Options for DS3-12E and DS3N-12E Cards	13-11
Table 13-12	Line Options for the DS3XM-6 Parameters	13-13
Table 13-13	Line Threshold Options for the DS3XM-6 Card	13-13
Table 13-14	Electrical Path Threshold Options for the DS3XM-6 Card	13-14
Table 13-15	SONET Threshold Options for the DS3XM-6 Card	13-15
Table 13-16	Line Options for the EC1-12 card	13-16
Table 13-17	Threshold Options for the EC1-12 Card	13-17
Table 13-18	OC-N Card Line Settings	13-20
Table 13-19	OC-N Threshold Options	13-21
Table 13-20	TXP_MR_10G (Transponder) Card Settings	13-25
Table 13-21	TXP_MR_10G (Transponder) Card Line Settings	13-26
Table 13-22	TXP_MR_10G (Transponder) Card Line Thresholds Settings	13-27
Table 13-23	TXP_MR_10G (Transponder) Card Optical Thresholds Settings	13-29
Table 13-24	TXP_MR_10G (Transponder) Card Section Trace Settings	13-30
Table 13-25	TXP_MR_10G (Transponder) Card OTN Settings	13-30
Table 13-26	MXP_2.5G_10G (Muxponder) Card Settings	13-34
Table 13-27	MXP_2.5G_10G (Muxponder) Card Line Settings	13-35
Table 13-28	MXP_2.5G_10G (Muxponder) Card Line Threshold Settings	13-37
Table 13-29	MXP_2.5G_10G (Muxponder) Card Optical Thresholds Settings	13-38

Table 13-30	MXP_2.5G_10G (Muxponder) Card Section Trace Settings	13-39
Table 13-31	MXP_2.5G_10G (Muxponder) Card OTN Settings	13-40
Table 13-32	TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Settings	13-43
Table 13-33	TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Line Settings	13-45
Table 13-34	TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Line Thresholds Settings for OC-3/STM-1, OC-12/STM-4, and OC-48/STM-16 Payloads	13-46
Table 13-35	TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Line Thresholds Settings for 1G Ethernet, 1G Fiber Channel/FICON Payloads	13-47
Table 13-36	TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Optical Thresholds Settings	13-48
Table 13-37	TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Section Trace Settings	13-49
Table 13-38	TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card OTN Settings	13-50
Table 13-39	OSCM and OSC-CSM Card OC-3 Line Settings	13-64
Table 13-40	OSCM and OSC-CSM Cards Optical Threshold Settings	13-65
Table 13-41	OSCM and OSC-CSM Card Line Settings	13-66
Table 13-42	OSCM and OSC-CSM Cards Optical Thresholds Settings	13-68
Table 13-43	OPT-PRE and OPT-BST Amplifier Line Settings	13-69
Table 13-44	OPT-PRE and OPT-BST Amplifiers Optical Thresholds Settings	13-70
Table 13-45	OSCM and OSC-CSM Card Line Settings	13-71
Table 13-46	OPT-PRE and OPT-BST Cards Optical Thresholds Settings	13-72
Table 13-47	Multiplexer and Demultiplexer Card Line Settings	13-74
Table 13-48	Multiplexer and Demultiplexer Amplifiers Optical Thresholds Settings	13-75
Table 13-49	Multiplexer and Demultiplexer Card Line Settings	13-76
Table 13-50	Multiplexer and Demultiplexer Cards Optical Thresholds Settings	13-78
Table 17-1	ONS 15454 Timing Report	17-29
Table A-1	Change CTC Views	A-2
Table A-2	Description of Node Icons on Network View Map	A-2
Table A-3	CTC Menu and Toolbar Options	A-4
Table A-4	CTC Window Mouse Shortcuts	A-7
Table A-5	Node View Card-Related Shortcuts	A-8
Table A-6	Network Management Tasks in Network View	A-9
Table A-7	Table Display Options	A-10
Table B-1	Individual Card Power Requirements	B-4
Table B-2	Card Temperature Ranges and Product Names	B-7
Table C-1	Procedure (NTP) Number, Title, and Page Number	C-1
Table D-1	Task (DLP) Number, Name, and Page Number	D-1



CHAPTER 1

Install the Shelf and Backplane Cable 1-1

- NTP-A1 Unpack and Inspect the ONS 15454 Shelf Assembly 1-4
- NTP-A2 Install the Shelf Assembly 1-6
- NTP-A3 Open and Remove the Front Door 1-13
- NTP-A4 Remove the Backplane Covers 1-16
- NTP-A5 Install the Electrical Interface Assemblies 1-17
- NTP-A6 Install the Power and Ground 1-24
- NTP-A7 Install the Fan-Tray Assembly 1-30
- NTP-A119 Install the Alarm Expansion Panel 1-32
- NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections 1-36
- NTP-A120 Install an External Wire-Wrap Panel to the AEP 1-43
- NTP-A9 Install the Electrical Card Cables on the Backplane 1-48
- NTP-A10 Route Electrical Cables 1-56
- NTP-A11 Install the Rear Cover 1-58
- NTP-A12 Install Ferrites 1-60
- NTP-A238 Install Optional DWDM Equipment 1-63
- NTP-A13 Perform the Shelf Installation Acceptance Test 1-65

CHAPTER 2

Install Cards and Fiber-Optic Cable 2-1

- NTP-A15 Install the Common Control Cards 2-2
- NTP-A16 Install the OC-N Cards 2-13
- NTP-A249 Install the Transponder and Muxponder Cards 2-15
- NTP-A17 Install the Electrical Cards 2-16
- NTP-A246 Install Ethernet Cards and Connectors 2-18
- NTP-A242 Install the DWDM Cards 2-23
- NTP-A243 Install the DWDM Dispersion Compensating Cards 2-25
- NTP-A116 Remove and Replace a Card 2-27
- NTP-A115 Preprovision a Slot 2-29
- NTP-A247 Install Fiber-Optic Cables on OC-N Cards 2-30
- NTP-A244 Install Fiber-Optic Cables on DWDM Cards 2-42
- NTP-A245 Route Fiber-Optic Cables 2-57
- NTP-A20 Replace the Front Door 2-58

CHAPTER 3**Connect the PC and Log into the GUI 3-1**

NTP-A21 Set Up Computer for CTC 3-2

NTP-A234 Set Up CTC Computer for Local Craft Connection to the ONS 15454 3-10

NTP-A235 Set Up a CTC Computer for a Corporate LAN Connection to the ONS 15454 3-21

NTP-A236 Set Up a Remote Access Connection to the ONS 15454 3-23

NTP-A23 Log into the ONS 15454 GUI 3-24

CHAPTER 4**Turn Up Node 4-1**

NTP-A24 Verify Card Installation 4-2

NTP-A30 Create Users and Assign Security 4-4

NTP-A25 Set Up Name, Date, Time, and Contact Information 4-6

NTP-A169 Set Up CTC Network Access 4-8

NTP-A27 Set Up the ONS 15454 for Firewall Access 4-18

NTP-A28 Set Up Timing 4-21

NTP-A170 Create Protection Groups 4-25

NTP-A171 Set Up SNMP 4-32

NTP-A34 Create Ethernet RMON Alarm Thresholds 4-34

CHAPTER 5**Turn Up a DWDM Node 5-1**

NTP-A221 Verify TCC2 Installation 5-2

NTP-A222 Provision the DWDM Node 5-3

CHAPTER 6**Turn Up Network 6-1**

NTP-A35 Verify Node Turn Up 6-2

NTP-A172 Create a Logical Network Map 6-3

NTP-A124 Provision a Point-to-Point Network 6-4

NTP-A173 Point-to-Point Network Acceptance Test 6-7

NTP-A38 Provision a Linear ADM Network 6-12

NTP-A174 Linear ADM Network Acceptance Test 6-13

NTP-A40 Provision BLSR Nodes 6-15

NTP-A126 Create a BLSR 6-17

NTP-A175 Two-Fiber BLSR Acceptance Test 6-21

NTP-A176 Four-Fiber BLSR Acceptance Test 6-28

NTP-A44 Provision Path Protection Nodes 6-34

NTP-A177 Path Protection Acceptance Test 6-35

NTP-A216 Provision a Traditional Path Protection Dual Ring Interconnect 6-38

- NTP-A217 Provision an Integrated Path Protection Dual Ring Interconnect **6-40**
- NTP-A224 Provision an Open-Ended Path Protection **6-42**
- NTP-A225 Open-Ended Path Protection Acceptance Test **6-44**
- NTP-A46 Subtend a Path Protection from a BLSR **6-46**
- NTP-A47 Subtend a BLSR from a Path Protection **6-48**
- NTP-A48 Subtend a BLSR from a BLSR **6-48**

CHAPTER 7**Turn Up DWDM Network 7-1**

- NTP-A232 Verify DWDM Node Turn Up **7-2**
- NTP-A233 Provision a DWDM Ring, Linear Configuration, or Single-Span Link **7-3**

CHAPTER 8**Create Circuits and VT Tunnels 8-1**

- NTP-A127 Verify Network Turn Up **8-4**
- NTP-A181 Create an Automatically Routed DS-1 Circuit **8-6**
- NTP-A182 Create a Manually Routed DS-1 Circuit **8-10**
- NTP-A183 Create a Unidirectional DS-1 Circuit with Multiple Drops **8-14**
- NTP-A184 Create an Automatically Routed DS-3 Circuit **8-20**
- NTP-A185 Create a Manually Routed DS-3 Circuit **8-24**
- NTP-A186 Create a Unidirectional DS-3 Circuit with Multiple Drops **8-26**
- NTP-A133 Create an Automatically Routed VT Tunnel **8-33**
- NTP-A134 Create a Manually Routed VT Tunnel **8-36**
- NTP-A187 Create a VT Aggregation Point **8-38**
- NTP-A135 Test Electrical Circuits **8-41**
- NTP-A188 Create an Automatically Routed OC-N Circuit **8-43**
- NTP-A189 Create a Manually Routed OC-N Circuit **8-47**
- NTP-A190 Create a Unidirectional OC-N Circuit with Multiple Drops **8-49**
- NTP-A62 Test OC-N Circuits **8-55**
- NTP-A139 Create a Half Circuit on a BLSR or 1+1 Node **8-57**
- NTP-A140 Create a Half Circuit on a Path Protection Node **8-59**
- NTP-A191 Create an E-Series EtherSwitch Circuit (Multicard or Single-Card Mode) **8-63**
- NTP-A192 Create a Circuit for an E-Series Card in Port-Mapped Mode **8-65**
- NTP-A142 Create an E-Series Shared Packet Ring Ethernet Circuit **8-67**
- NTP-A143 Create an E-Series Hub and Spoke Ethernet Configuration **8-70**
- NTP-A144 Create an E-Series Single-Card EtherSwitch Manual Cross-Connect **8-72**
- NTP-A145 Create an E-Series Multicard EtherSwitch Manual Cross-Connect **8-74**
- NTP-A146 Test E-Series Circuits **8-81**

- NTP-A147 Create a G-Series STS Circuit **8-82**
- NTP-A148 Create a Manual Cross-Connect for a G-Series or an E-Series in Port-Mapped Mode **8-84**
- NTP-A241 Provision G-Series Ports for Transponder Mode **8-88**
- NTP-A149 Test G-Series Circuits **8-91**
- NTP-A194 Create Overhead Circuits **8-92**
- NTP-A227 Provision a DWDM Optical Channel Network Connection **8-96**

CHAPTER 9

Manage Alarms 9-1

- NTP-A195 Document Existing Provisioning **9-2**
- NTP-A196 View Alarms, History, Events, and Conditions **9-5**
- NTP-A68 Delete Cleared Alarms from Display **9-13**
- NTP-A69 View Alarm-Affected Circuits **9-14**
- NTP-A70 View Alarm Counts on the LCD for a Node, Slot, or Port **9-16**
- NTP-A71 Create, Download, and Assign Alarm Severity Profiles **9-17**
- NTP-A168 Enable, Modify, or Disable Alarm Severity Filtering **9-26**
- NTP-A72 Suppress Alarms and Discontinue Alarm Suppression **9-30**
- NTP-A32 Provision External Alarms and Controls on the Alarm Interface Controller **9-33**
- NTP-A248 Provision External Alarms and Controls on the Alarm Interface Controller-International **9-35**

CHAPTER 10

Monitor Performance 10-1

- NTP-A253 Change the PM Display **10-2**
- NTP-A197 Monitor Electrical Performance **10-9**
- NTP-A198 Monitor Ethernet Performance **10-11**
- NTP-A250 Monitor OC-N Performance **10-18**
- NTP-A251 Monitor Multirate Transport Performance **10-24**
- NTP-A252 Monitor DWDM Performance **10-31**

CHAPTER 11

Manage Circuits 11-1

- NTP-A199 Locate and View Circuits **11-2**
- NTP-A200 View Cross-Connect Card Resource Usage **11-11**
- NTP-A151 Modify Circuit Characteristics **11-12**
- NTP-A416 Convert a CTC Circuit to TL1 Cross-Connects **11-18**
- NTP-A417 Upgrade TL1 Cross-Connects to CTC Circuits **11-19**
- NTP-A152 Delete Circuits **11-20**
- NTP-A78 Create a Monitor Circuit **11-21**
- NTP-A79 Create a J1 Path Trace **11-22**

CHAPTER 12**Change Node Settings 12-1**

- NTP-A81 Change Node Management Information 12-2
- NTP-A201 Change CTC Network Access 12-4
- NTP-A226 Modify DWDM Node Settings 12-8
- NTP-A202 Customize the CTC Network View 12-11
- NTP-A203 Modify or Delete Card Protection Settings 12-16
- NTP-A204 Delete a SONET DCC Termination 12-22
- NTP-A423 Delete a DWDM OSC Termination 12-23
- NTP-A85 Change Node Timing 12-23
- NTP-A205 Modify Users and Change Security 12-26
- NTP-A87 Change SNMP Settings 12-32

CHAPTER 13**Change Card Settings 13-1**

- NTP-A88 Modify Line Settings and PM Parameter Thresholds for Electrical Cards 13-2
- NTP-A89 Modify Line Settings and PM Parameter Thresholds for OC-N Cards 13-19
- NTP-A206 Modify Line Settings and PM Parameter Thresholds for TXP_MR_10G Cards 13-24
- NTP-A207 Modify Line Settings and PM Parameter Thresholds for MXP_2.5G_10G Cards 13-32
- NTP-A237 Modify Line Settings and PM Parameter Thresholds for TXP_MR_2.5G and TXPP_MR_2.5G Cards 13-42
- NTP-A90 Modify Alarm Interface Controller Settings 13-52
- NTP-A118 Modify Alarm Interface Controller-International Settings 13-55
- NTP-A91 Upgrade DS-1 and DS-3 Protect Cards from 1:1 Protection to 1:N Protection 13-58
- NTP-A229 Modify Line Settings and PM Parameter Thresholds for Optical Service Channel Cards 13-63
- NTP-A230 Modify Line Settings and PM Parameter Thresholds for Amplifier Cards 13-68
- NTP-A231 Modify Line Settings and PM Parameter Thresholds for Multiplexer and Demultiplexer Cards 13-73

CHAPTER 14**Upgrade Cards and Spans 14-1**

- NTP-A92 Upgrade the XC Card to the XCVT Card 14-2
- NTP-A220 Upgrade the XC or XCVT Card to the XC10G Card 14-3
- NTP-A419 Upgrade the TCC or TCC+ Card to the TCC2 Card 14-5
- NTP-A93 Upgrade the DS3-12 Card to the DS3-12E Card 14-9
- NTP-A254 Downgrade a DS3-12E/DS3NE Card to a DS3-12/DS3N-12 Card 14-11
- NTP-A153 Upgrade the AIC Card to AIC-I 14-12
- NTP-A94 Upgrade OC-N Spans Automatically 14-13
- NTP-A95 Upgrade OC-N Spans Manually 14-16

CHAPTER 15	Convert Network Configurations 15-1
	NTP-A154 Convert a Point-to-Point to a Linear ADM 15-1
	NTP-A155 Convert a Point-to-Point or a Linear ADM to a Two-Fiber BLSR 15-3
	NTP-A156 Convert a Point-to-Point or Linear ADM to a Path Protection 15-7
	NTP-A210 Convert a Path Protection to a Two-Fiber BLSR 15-7
	NTP-A211 Convert a Two-Fiber BLSR to a Four-Fiber BLSR 15-9
	NTP-A159 Modify a BLSR 15-11
	NTP-A228 Manage BLSR Manual Ring Switches 15-12
CHAPTER 16	Add and Remove BLSR and Path Protection Nodes 16-1
	NTP-A212 Add a BLSR Node 16-1
	NTP-A213 Remove a BLSR Node 16-10
	NTP-A105 Add a Path Protection Node 16-15
	NTP-A106 Remove a Path Protection Node 16-19
CHAPTER 17	Maintain the Node 17-1
	NTP-A107 Inspect and Maintain the Air Filter 17-2
	NTP-A108 Back Up the Database 17-7
	NTP-A109 Restore the Database 17-9
	NTP-A163 Restore the Node to Factory Configuration 17-11
	NTP-A214 Off Load the Security Audit Trail Log 17-16
	NTP-A110 Inhibit Card Protection Switching 17-17
	NTP-A111 Revert to an Earlier Software Load 17-20
	NTP-A112 Clean Fiber Connectors 17-21
	NTP-A113 Reset the TCC+/TCC2 Card Using CTC 17-24
	NTP-A215 View G-Series Ethernet Maintenance Information 17-25
	NTP-A239 View E-Series Ethernet Maintenance Information 17-25
	NTP-A218 Change the Node Timing Reference 17-27
	NTP-A223 View ONS 15454 Timing Report 17-28
CHAPTER 18	Power Down the Node 18-1
	NTP-A114 Power Down the Node 18-1



CHAPTER 1

Install the Shelf and Backplane Cable 1-1

- DLP-A1 Unpack and Verify the Shelf Assembly **1-4**
- DLP-A2 Inspect the Shelf Assembly **1-5**
- DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack **1-7**
- DLP-A4 Install the External Brackets and Air Filter **1-8**
- DLP-A5 Mount the Shelf Assembly in a Rack (One Person) **1-10**
- DLP-A6 Mount the Shelf Assembly in a Rack (Two People) **1-11**
- DLP-A7 Mount Multiple Shelf Assemblies in a Rack **1-12**
- DLP-A8 Open the Front Cabinet Compartment (Door) **1-13**
- DLP-A9 Remove the Front Door **1-14**
- DLP-A10 Remove the Lower Backplane Cover **1-16**
- DLP-A11 Remove the Backplane Sheet Metal Cover **1-17**
- DLP-A12 Install a BNC or High-Density BNC EIA **1-18**
- DLP-A13 Install an SMB EIA **1-20**
- DLP-A14 Install the AMP Champ EIA **1-22**
- DLP-A16 Connect the Office Ground to the ONS 15454 **1-26**
- DLP-A17 Connect Office Power to the ONS 15454 Shelf **1-27**
- DLP-A18 Turn On and Verify Office Power **1-29**
- DLP-A19 Install Alarm Wires on the Backplane **1-37**
- DLP-A20 Install Timing Wires on the Backplane **1-40**
- DLP-A21 Install LAN Wires on the Backplane **1-41**
- DLP-A22 Install the TL1 Craft Interface **1-42**
- DLP-A23 Install DS-1 Cables Using Electrical Interface Adapters (Balun) **1-49**
- DLP-A24 Install DS-1 AMP Champ Cables on the AMP Champ EIA **1-50**
- DLP-A25 Install Coaxial Cable With BNC Connectors **1-53**
- DLP-A26 Install Coaxial Cable With High-Density BNC Connectors **1-54**
- DLP-A27 Install Coaxial Cable with SMB Connectors **1-55**
- DLP-A28 Route Coaxial Cables **1-56**
- DLP-A29 Route DS-1 Twisted-Pair Cables **1-58**
- DLP-A30 Install Ferrites to Power Cabling **1-61**
- DLP-A31 Attach Ferrites to Wire-Wrap Pin Fields **1-62**

- DLP-A412 Install the DCU Shelf Assembly **1-63**
- DLP-A413 Install the Fiber Patch Panel Shelf **1-64**
- DLP-A414 Install the Fiber Storage Shelf **1-64**
- DLP-A415 Install the Air Ramp **1-65**
- DLP-A32 Inspect the Shelf Installation and Connections **1-66**
- DLP-A33 Measure Voltage **1-67**

CHAPTER 2**Install Cards and Fiber-Optic Cable 2-1**

- DLP-A36 Install the TCC+/TCC2 Cards **2-7**
- DLP-A37 Install the XC, XCVT, or XC10G Cards **2-9**
- DLP-A38 Install the Alarm Interface Controller or Alarm Interface Controller–International Card **2-11**
- DLP-A39 Install Ethernet Cards **2-19**
- DLP-A469 Install GBIC or SFP Connectors **2-20**
- DLP-A470 Remove GBIC or SFP Connectors **2-22**
- DLP-A191 Delete a Card **2-28**
- DLP-A247 Change an OC-N Card **2-28**
- DLP-A207 Install Fiber-Optic Cables on the LGX Interface **2-33**
- DLP-A428 Install Fiber Optic Cables in a 1+1 Configuration **2-33**
- DLP-A43 Install Fiber-Optic Cables for Path Protection Configurations **2-34**
- DLP-A44 Install Fiber-Optic Cables for BLSR Configurations **2-38**
- DLP-A45 Install the Fiber Boot **2-40**
- DLP-A423 Install Fiber-Optic Cables for Basic OSC on All DWDM Nodes **2-43**
- DLP-A424 Install Fiber-Optic Cables for a Terminal Node **2-45**
- DLP-A425 Install Fiber-Optic Cables for a Hub Node **2-46**
- DLP-A426 Install Fiber-Optic Cables for a Line Amplifier Node **2-48**
- DLP-A427 Install Fiber-Optic Cables for an Amplified or Passive OADM Node **2-51**

CHAPTER 3**Connect the PC and Log into the GUI 3-1**

- DLP-A47 Run the CTC Installation Wizard for Windows **3-2**
- DLP-A48 Run the CTC Installation Wizard for UNIX **3-7**
- DLP-A49 Set Up the Java Runtime Environment for UNIX **3-9**
- DLP-A50 Set Up a Windows PC for Craft Connection to an ONS 15454 on the Same Subnet Using Static IP Addresses **3-12**
- DLP-A51 Set Up a Windows PC for Craft Connection to an ONS 15454 Using DHCP **3-14**
- DLP-A52 Set Up a Windows PC for Craft Connection to an ONS 15454 Using Automatic Host Detection **3-16**
- DLP-A53 Set Up a Solaris Workstation for a Craft Connection to an ONS 15454 **3-19**

- DLP-A56 Disable Proxy Service Using Internet Explorer (Windows) **3-22**
- DLP-A57 Disable Proxy Service Using Netscape (Windows and UNIX) **3-22**
- DLP-A59 Connect Computer to the ONS 15454 **3-25**
- DLP-A60 Log into CTC **3-26**
- DLP-A418 Install Public-Key Security Certificate **3-28**
- DLP-A61 Create Login Node Groups **3-30**
- DLP-A62 Add a Node to the Current Session or Login Group **3-31**

CHAPTER 4**Turn Up Node 4-1**

- DLP-A74 Create a New User—Single Node **4-4**
- DLP-A75 Create a New User—Multiple Nodes **4-5**
- DLP-A249 Provision IP Settings **4-9**
- DLP-A64 Set the IP Address, Default Router, and Network Mask Using the LCD **4-12**
- DLP-A65 Create a Static Route **4-14**
- DLP-A250 Set Up or Change Open Shortest Path First Protocol **4-15**
- DLP-A251 Set Up or Change Routing Information Protocol **4-17**
- DLP-A67 Provision the IIOp Listener Port on the ONS 15454 **4-19**
- DLP-A68 Provision the IIOp Listener Port on the CTC Computer **4-20**
- DLP-A69 Set Up External or Line Timing **4-22**
- DLP-A70 Set Up Internal Timing **4-24**
- DLP-A71 Create a 1:1 Protection Group **4-27**
- DLP-A72 Create a 1:N Protection Group **4-28**
- DLP-A73 Create a 1+1 Protection Group **4-29**
- DLP-A252 Create a Y-Cable Protection Group **4-31**

CHAPTER 5**Turn Up a DWDM Node 5-1**

- DLP-A400 Import a Cisco MetroPlanner Configuration File **5-4**
- DLP-A401 Provision DWDM Hub Node Settings **5-4**
- DLP-A402 Provision DWDM Terminal Node Settings **5-6**
- DLP-A403 Provision DWDM OADM Node Settings **5-7**
- DLP-A404 Provision DWDM Line Node Settings **5-10**
- DLP-A405 Delete a DWDM Connection **5-11**
- DLP-A406 Create a DWDM Connection **5-11**
- DLP-A407 Verify OSCM and OSC-CSM Transmit Power **5-12**

CHAPTER 6**Turn Up Network 6-1**

- DLP-A253 Provision SONET DCC Terminations 6-5
- DLP-A214 Change the Service State for a Port 6-6
- DLP-A254 TCC+/TCC2 Active/Standby Switch Test 6-9
- DLP-A255 Cross-Connect Card Side Switch Test 6-10
- DLP-A88 Optical 1+1 Protection Test 6-11
- DLP-A89 Remap the K3 Byte 6-17
- DLP-A328 Create a BLSR Using the BLSR Wizard 6-18
- DLP-A329 Create a BLSR Manually 6-20
- DLP-A217 BLSR Exercise Ring Test 6-23
- DLP-A91 BLSR Switch Test 6-25
- DLP-A92 Four-Fiber BLSR Exercise Span Test 6-30
- DLP-A93 Four-Fiber BLSR Span Switching Test 6-32
- DLP-A94 Path Protection Protection Switching Test 6-37

CHAPTER 7**Turn Up DWDM Network 7-1**

- DLP-A240 Provision OSC Terminations 7-5
- DLP-A491 Provision the Ring ID 7-6
- DLP-A492 Check Span Attenuation 7-6
- DLP-A493 Create a Test OCHNC 7-8
- DLP-A494 Verify the Optical Receive Power 7-8
- DLP-A490 Verify the OSNR 7-9
- DLP-A496 Convert a Pass-Through Connection to an Add/Drop Connection 7-10
- DLP-A497 DWDM Node Acceptance Test 7-11

CHAPTER 8**Create Circuits and VT Tunnels 8-1**

- DLP-A314 Assign a Name to a Port 8-17
- DLP-A95 Provision a DS-1 Circuit Source and Destination 8-18
- DLP-A218 Provision Path Protection Selectors During Circuit Creation 8-30
- DLP-A510 Provision a DS-3 Circuit Source and Destination 8-31
- DLP-A96 Provision a DS-1 or DS-3 Circuit Route 8-32
- DLP-A219 Provision a VT Tunnel Route 8-37
- DLP-A97 Provision an OC-N Circuit Source and Destination 8-52
- DLP-A98 Provision an OC-N Circuit Route 8-53
- DLP-A311 Provision a Half Circuit Source and Destination—BLSR and 1+1 8-61
- DLP-A312 Provision a Half Circuit Source and Destination—Path Protection 8-62

- DLP-A99 Determine Available VLANs **8-77**
- DLP-A246 Provision E-Series Ethernet Card Mode **8-78**
- DLP-A220 Provision E-Series Ethernet Ports **8-78**
- DLP-A221 Provision E-Series Ethernet Ports for VLAN Membership **8-79**
- DLP-A222 Provision G-Series Ethernet Ports **8-86**
- DLP-A421 Provision G-Series Flow Control Watermarks **8-87**
- DLP-A313 Create a DCC Tunnel **8-93**
- DLP-A83 Provision Orderwire **8-94**
- DLP-A212 Create a User Data Channel Circuit **8-95**

CHAPTER 9**Manage Alarms 9-1**

- DLP-A138 Print CTC Data **9-2**
- DLP-A139 Export CTC Data **9-4**
- DLP-A110 View Alarm History **9-8**
- DLP-A111 Changing the Maximum Number of Session Entries for Alarm History **9-9**
- DLP-A112 Display Alarms and Conditions Using Time Zone **9-10**
- DLP-A113 Synchronize Alarms **9-11**
- DLP-A114 View Conditions **9-11**
- DLP-A115 Create Alarm Severity Profiles **9-18**
- DLP-A223 Download an Alarm Severity Profile **9-20**
- DLP-A429 Apply Alarm Profiles to Ports **9-21**
- DLP-A117 Apply Alarm Profiles to Cards and Nodes **9-23**
- DLP-A118 Delete Alarm Severity Profiles **9-25**
- DLP-A225 Enable Alarm Filtering **9-27**
- DLP-A226 Modify Alarm and Condition Filtering Parameters **9-27**
- DLP-A227 Disable Alarm Filtering **9-30**
- DLP-A119 Suppress Alarm Reporting **9-31**
- DLP-A120 Discontinue Alarm Suppression **9-32**

CHAPTER 10**Monitor Performance 10-1**

- DLP-A124 Refresh PM Counts at 15-Minute Intervals **10-2**
- DLP-A125 Refresh PM Counts at One-Day Intervals **10-3**
- DLP-A126 View Near-End PM Counts **10-4**
- DLP-A127 View Far-End PM Counts **10-4**
- DLP-A128 Monitor PM Counts for a Selected Signal **10-5**
- DLP-A129 Reset Current PM Counts **10-6**

- DLP-A130 Clear Selected PM Counts **10-7**
- DLP-A260 Set Auto-Refresh Interval for Displayed PM Counts **10-8**
- DLP-A261 Refresh PM Counts for a Different Port **10-8**
- DLP-A256 View Ethernet Statistics PM Parameters **10-12**
- DLP-A257 View Ethernet Utilization PM Parameters **10-13**
- DLP-A258 View Ethernet History PM Parameters **10-14**
- DLP-A320 View ML-Series Ether Ports PM Parameters **10-15**
- DLP-A321 View ML-Series POS Ports PM Parameters **10-16**
- DLP-A259 Refresh Ethernet PM Counts at a Different Time Interval **10-17**
- DLP-A121 Enable/Disable Pointer Justification Count Performance Monitoring **10-19**
- DLP-A122 Enable/Disable Intermediate Path Performance Monitoring **10-21**
- DLP-A507 View OC-N PM Parameters **10-23**
- DLP-A500 Enable/Disable OTN G.709 Performance Monitoring **10-25**
- DLP-A501 Enable/Disable OTN FEC Performance Monitoring **10-26**
- DLP-A317 View Optics PM Parameters **10-27**
- DLP-A318 View Payload PM Parameters **10-28**
- DLP-A319 View Optical Transport Network PM Parameters **10-30**
- DLP-A502 View Optical Service Channel PM Parameters **10-32**
- DLP-A503 View Optical Amplifier PM Parameters **10-34**
- DLP-A504 View Optical Multiplexer and Demultiplexer PM Parameters **10-36**
- DLP-A505 View Channel Filter Optical Add/Drop Multiplexer PM Parameters **10-38**
- DLP-A506 View Band Filter Optical Add/Drop Multiplexer PM Parameters **10-40**

CHAPTER 11

Manage Circuits 11-1

- DLP-A416 View Circuit Information **11-2**
- DLP-A131 Search for Circuits **11-7**
- DLP-A262 Filter the Display of Circuits **11-8**
- DLP-A229 View Circuits on a Span **11-9**
- DLP-A417 View the BLSR Squelch Table **11-10**
- DLP-A230 Change a Circuit State **11-13**
- DLP-A231 Edit a Circuit Name **11-14**
- DLP-A232 Change Active and Standby Span Color **11-15**
- DLP-A233 Edit Path Protection Circuit Path Selectors **11-16**
- DLP-A263 Edit Path Protection Dual Ring Interconnect Circuit Hold-Off Timer **11-17**
- DLP-A264 Provision Path Trace on Circuit Source and Destination Ports **11-23**
- DLP-A137 Provision Path Trace on OC-N Ports **11-28**

CHAPTER 12**Change Node Settings 12-1**

- DLP-A140 Change the Node Name, Date, Time, and Contact Information **12-2**
- DLP-A265 Change the Login Legal Disclaimer **12-3**
- DLP-A266 Change IP Settings **12-5**
- DLP-A142 Modify a Static Route **12-6**
- DLP-A143 Delete a Static Route **12-6**
- DLP-A144 Disable OSPF **12-7**
- DLP-A408 Modify DWDM Hub Node Settings **12-9**
- DLP-A409 Modify DWDM Terminal Node Settings **12-9**
- DLP-A410 Modify DWDM OADM Node Settings **12-10**
- DLP-A411 Modify DWDM Line Node Settings **12-10**
- DLP-A145 Change the Network View Background Color **12-11**
- DLP-A267 Change the Default Network View Background Map **12-12**
- DLP-A268 Apply a Custom Network View Background Map **12-13**
- DLP-A498 Switch Between TDM and DWDM Network Views **12-13**
- DLP-A148 Create Domain Icons **12-14**
- DLP-A149 Manage Domain Icons **12-14**
- DLP-A269 Enable Dialog Box Do-Not-Display Option **12-15**
- DLP-A150 Modify a 1:1 Protection Group **12-17**
- DLP-A152 Modify a 1:N Protection Group **12-18**
- DLP-A154 Modify a 1+1 Protection Group **12-19**
- DLP-A270 Modify a Y Cable Protection Group **12-20**
- DLP-A499 Modify a Splitter Protection Group **12-21**
- DLP-A155 Delete a Protection Group **12-21**
- DLP-A157 Change the Node Timing Source **12-24**
- DLP-A271 Change Security Policy—Single Node **12-26**
- DLP-A272 Change Security Policy—Multiple Nodes **12-27**
- DLP-A158 Change User Password and Security Level—Single Node **12-28**
- DLP-A160 Change User Password and Security Level—Multiple Nodes **12-29**
- DLP-A315 Log Out a User—Single Node **12-29**
- DLP-A316 Log Out a User—Multiple Nodes **12-30**
- DLP-A159 Delete User—Single Node **12-31**
- DLP-A161 Delete User—Multiple Nodes **12-31**
- DLP-A273 Modify SNMP Trap Destinations **12-33**
- DLP-A163 Delete SNMP Trap Destinations **12-34**

CHAPTER 13

DLP-A164 Delete Ethernet RMON Alarm Thresholds **12-35**

Change Card Settings 13-1

DLP-A165 Change Line and Threshold Settings for the DS1-14 or DS1N-14 Cards **13-3**

DLP-A166 Change Line and Threshold Settings for the DS3-12 or DS3N-12 Cards **13-6**

DLP-A167 Change Line and Threshold Settings for the DS3E-12 or DS3N-12E Cards **13-8**

DLP-A168 Change Line and Threshold Settings for the DS3XM-6 Card **13-12**

DLP-A169 Change Line and Threshold Settings for the EC1-12 Card **13-16**

DLP-A170 Change Line Transmission Settings for OC-N Cards **13-19**

DLP-A171 Change Threshold Settings for OC-N Cards **13-21**

DLP-A172 Change an Optical Port to SDH **13-23**

DLP-A274 Change Card Settings for TXP_MR_10G Cards **13-25**

DLP-A275 Change Line Settings for TXP_MR_10G Cards **13-26**

DLP-A276 Change Line Threshold Settings for TXP_MR_10G Cards **13-27**

DLP-A277 Change Optical Thresholds Settings for TXP_MR_10G Cards **13-28**

DLP-A278 Change Section Trace Settings for TXP_MR_10G Cards **13-29**

DLP-A279 Change Optical Transport Network Settings for TXP_MR_10G Cards **13-30**

DLP-A280 Change Card Settings for MXP_2.5G_10G Cards **13-33**

DLP-A281 Change Line Settings for MXP_2.5G_10G Cards **13-35**

DLP-A282 Change Line Thresholds Settings for MXP_2.5G_10G Cards **13-36**

DLP-A283 Change Optical Thresholds Settings for MXP_2.5G_10G Cards **13-38**

DLP-A284 Change Section Trace Settings for MXP_2.5G_10G Cards **13-39**

DLP-A285 Change Optical Transport Network Settings for MXP_2.5G_10G Cards **13-40**

DLP-A471 Change Card Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-42**

DLP-A472 Change Line Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-44**

DLP-A473 Change Line Threshold Settings for TXP_MR_2.5G
and TXPP_MR_2.5G Cards **13-46**

DLP-A474 Change Optical Thresholds Settings for TXP_MR_2.5G
and TXPP_MR_2.5G Cards **13-48**

DLP-A475 Change Section Trace Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards **13-49**

DLP-A476 Change Optical Transport Network Settings for TXP_MR_2.5G
and TXPP_MR_2.5G Cards **13-50**

DLP-A173 Change External Alarms Using the AIC Card **13-53**

DLP-A174 Change External Controls Using the AIC Card **13-53**

DLP-A175 Change Orderwire Settings Using the AIC Card **13-54**

DLP-A208 Change External Alarms Using the AIC-I Card **13-55**

DLP-A209 Change External Controls Using the AIC-I Card **13-56**

- DLP-A210 Change AIC-I Card Orderwire Settings **13-57**
- DLP-A176 Convert DS1-14 Cards From 1:1 to 1:N Protection **13-58**
- DLP-A177 Convert DS3-12 Cards From 1:1 to 1:N Protection **13-60**
- DLP-A178 Convert DS3-12E Cards From 1:1 to 1:N Protection **13-61**
- DLP-A477 Change Optical Line Settings for OSCM and OSC-CSM Cards **13-63**
- DLP-A478 Change Line Threshold Settings for OSCM and OSC-CSM Cards **13-65**
- DLP-A479 Change Optical Line Settings for OSCM and OSC-CSM Cards **13-66**
- DLP-A480 Change Channel Settings for OSCM and OSC-CSM Cards **13-67**
- DLP-A481 Change Optical Line Settings for OPT-PRE and OPT-BST Amplifiers **13-69**
- DLP-A482 Change Line Threshold Settings for OPT-PRE and OPT-BST Amplifiers **13-70**
- DLP-A483 Change Optical Amplifier Line Settings for OPT-PRE and OPT-BST Amplifiers **13-71**
- DLP-A484 Change Channel Settings for OPT-PRE and OPT-BST Amplifiers **13-72**
- DLP-A485 Change Optical Line Settings for Multiplexer and Demultiplexer Cards **13-74**
- DLP-A486 Change Line Threshold Settings for Multiplexer and Demultiplexer Cards **13-75**
- DLP-A487 Change Optical Channel Settings for Multiplexer and Demultiplexer Cards **13-76**
- DLP-A488 Change Channel Settings for Multiplexer and Demultiplexer Cards **13-78**

CHAPTER 14**Upgrade Cards and Spans 14-1**

- DLP-A291 Upgrade the TCC Card to the TCC+ Card **14-6**
- DLP-A508 Upgrade the TCC+ Card to the TCC2 Card **14-7**
- DLP-A293 Perform a Manual Span Upgrade on a Two-Fiber BLSR **14-18**
- DLP-A294 Perform a Manual Span Upgrade on a Four-Fiber BLSR **14-19**
- DLP-A295 Perform a Manual Span Upgrade on a Path Protection **14-21**
- DLP-A296 Perform a Manual Span Upgrade on a 1+1 Protection Group **14-22**
- DLP-A297 Perform a Manual Span Upgrade on an Unprotected Span **14-23**

CHAPTER 15**Convert Network Configurations 15-1**

- DLP-A298 Check the Network for Alarms and Conditions **15-3**
- DLP-A189 Verify that a 1+1 Working Slot is Active **15-6**
- DLP-A326 Change a BLSR Node ID **15-12**
- DLP-A301 Initiate a BLSR Manual Ring Switch **15-13**
- DLP-A241 Clear a BLSR Manual Ring Switch **15-14**

CHAPTER 16**Add and Remove BLSR and Path Protection Nodes 16-1**

- DLP-A302 Check BLSR or Path Protection Alarms and Conditions **16-6**
- DLP-A242 Create a BLSR on a Single Node **16-6**

- DLP-A303 Initiate a BLSR Force Ring Switch **16-7**
- DLP-A194 Clear a BLSR Force Ring Switch **16-9**
- DLP-A195 Verify Timing in a Reduced Ring **16-12**
- DLP-A304 Verify BLSR and Path Protection Pass-Through Circuits **16-13**
- DLP-A422 Verify BLSR Extension Byte Mapping **16-14**
- DLP-A196 Delete a BLSR from a Single Node **16-15**
- DLP-A197 Initiate a Path Protection Force Switch **16-17**
- DLP-A198 Clear a Path Protection Force Switch **16-18**

CHAPTER 17

Maintain the Node 17-1

- DLP-A199 Inspect, Clean, and Replace the Reusable Air Filter **17-2**
- DLP-A200 Inspect and Replace the Disposable Air Filter **17-5**
- DLP-A244 Use the Reinitialization Tool to Clear the Database and Upload Software (Windows) **17-12**
- DLP-A245 Use the Reinitialization Tool to Clear the Database and Upload Software (UNIX) **17-14**
- DLP-A201 Apply a Lock On **17-17**
- DLP-A202 Apply a Lock Out **17-18**
- DLP-A203 Clear a Lock On or Lock Out **17-19**
- DLP-A204 Scope and Clean Fiber Connectors and Adapters with Alcohol and Dry Wipes **17-22**
- DLP-A205 Clean Fiber Connectors with Cletop **17-23**
- DLP-A206 Clean the Fiber Adapters **17-23**
- DLP-A309 View the Ethernet MAC Address Table **17-26**
- DLP-A310 View Ethernet Trunk Utilization **17-26**
- DLP-A322 Manual or Force Switch the Node Timing Reference **17-27**
- DLP-A323 Clear a Manual or Force Switch on a Node Timing Reference **17-28**

CHAPTER 18

Power Down the Node 18-1



About this Manual



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This guide explains how to install, turn up, provision, and maintain a Cisco ONS 15454 node and network. Two software releases were combined in this guide. Software Release 4.1 applies to all non-DWDM content. Software Release 4.5 applies only to DWDM content. Each DWDM-related chapter, procedure, and task is clearly labeled.

Revision History

Date	Notes
03/30/2007	Revision History Table added for the first time
08/14/2007	Updated About this Manual chapter.

For trouble clearing, alarm troubleshooting, and hardware replacement procedures, refer to the *Cisco ONS 15454 Troubleshooting Guide, R4.1 and R4.5*. For detailed reference information, refer to the *Cisco ONS 15454 Reference Manual, R4.1 and R4.5*.

Document Organization

This guide provides procedures for installation, turn up, provisioning and acceptance of ONS 15454 nodes and ONS 15454 designed networks. It is organized in a Cisco recommended work flow sequence for new installations, in addition to allowing easy access to procedures and tasks associated with adds, moves, and changes for existing installations.

Verification procedures are provided, where necessary, to allow contract vendors to complete the physical installation and then turn the site over to craft personnel for verification, provisioning, turn up and acceptance. The front matter of the book is present in the following sequence:

1. Title Page

2. Table of Contents
3. List of Figures
4. List of Tables
5. List of Procedures
6. List of Tasks

The information in the book follows a task oriented hierarchy using the elements described below.

Chapter (Director Level)

The guide is divided into logical work groups (chapters) that serve as director entry into the procedures. For example, if you are arriving on site after a contractor has installed the shelf hardware, proceed to Chapter 2, “Install Cards and Fiber-Optic Cable” and begin verifying installation and installing cards. You may proceed sequentially (recommended), or locate the work you want to perform from the list of procedures on the first page of every chapter (or turn to the front matter or index).

Non-Trouble Procedure (NTP)

Each NTP is a list of steps designed to accomplish a specific procedure. Follow the steps until the procedure is complete. If you need more detailed instructions, refer to the Detailed Level Procedure (DLP) specified in the procedure steps.



Note

Throughout this guide, NTPs are referred to as “procedures” and DLPs are termed “tasks.” Every reference to a procedure includes its NTP number, and every reference to a task includes its DLP number.

Detailed Level Procedure (DLP)

The DLP (task) supplies additional task details to support the NTP. The DLP lists numbered steps that lead you through completion of a task. Some steps require that equipment indications be checked for verification. When the proper response is not obtained, a trouble clearing reference is provided.

Document Conventions

This publication uses the following conventions:

Convention	Application
boldface	Commands and keywords in body text.
<i>italic</i>	Command input that is supplied by the user.
[]	Keywords or arguments that appear within square brackets are optional.
{ x x x }	A choice of keywords (represented by x) appears in braces separated by vertical bars. The user must select one.

Convention	Application
Ctrl	The control key. For example, where Ctrl + D is written, hold down the Control key while pressing the D key.
screen font	Examples of information displayed on the screen.
boldface screen font	Examples of information that the user must enter.
< >	Command parameters that must be replaced by module-specific codes.

**Note**

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the document.

**Caution**

Means *reader be careful*. In this situation, the user might do something that could result in equipment damage or loss of data.

**Warning****IMPORTANT SAFETY INSTRUCTIONS**

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. To see translations of the warnings that appear in this publication, refer to the translated safety warnings that accompanied this device.

Note: SAVE THESE INSTRUCTIONS

Note: This documentation is to be used in conjunction with the specific product installation guide that shipped with the product. Please refer to the Installation Guide, Configuration Guide, or other enclosed additional documentation for further details.

Where to Find Safety and Warning Information

For safety and warning information, refer to the *Cisco Optical Transport Products Safety and Compliance Information* document that accompanied the product. This publication describes the international agency compliance and safety information for the Cisco ONS 15xxx systems. It also includes translations of the safety warnings that appear in the ONS 15xxx system documentation.

Obtaining Documentation

Cisco documentation and additional literature are available on Cisco.com. Cisco also provides several ways to obtain technical assistance and other technical resources. These sections explain how to obtain technical information from Cisco Systems.

Cisco.com

You can access the most current Cisco documentation on the World Wide Web at this URL:

<http://www.cisco.com/univercd/home/home.htm>

You can access the Cisco website at this URL:

<http://www.cisco.com>

International Cisco websites can be accessed from this URL:

http://www.cisco.com/public/countries_languages.shtml

Ordering Documentation

You can find instructions for ordering documentation at this URL:

http://www.cisco.com/univercd/cc/td/doc/es_inpk/pdi.htm

You can order Cisco documentation in these ways:

- Registered Cisco.com users (Cisco direct customers) can order Cisco product documentation from the Ordering tool:
<http://www.cisco.com/en/US/partner/ordering/index.shtml>
- Nonregistered Cisco.com users can order documentation through a local account representative by calling Cisco Systems Corporate Headquarters (California, USA) at 408 526-7208 or, elsewhere in North America, by calling 800 553-NETS (6387).

Cisco Optical Networking Product Documentation CD-ROM

Optical networking-related documentation, including Cisco ONS 15454 product documentation, is available in a CD-ROM package that ships with your product. The Optical Networking Product Documentation CD-ROM is updated periodically and may be more current than printed documentation.

Documentation Feedback

You can submit e-mail comments about technical documentation to bug-doc@cisco.com.

You can submit comments by using the response card (if present) behind the front cover of your document or by writing to the following address:

Cisco Systems
Attn: Customer Document Ordering
170 West Tasman Drive
San Jose, CA 95134-9883

We appreciate your comments.

Obtaining Technical Assistance

For all customers, partners, resellers, and distributors who hold valid Cisco service contracts, the Cisco Technical Assistance Center (TAC) provides 24-hour-a-day, award-winning technical support services, online and over the phone. Cisco.com features the Cisco TAC website as an online starting point for technical assistance. If you do not hold a valid Cisco service contract, please contact your reseller.

Cisco TAC Website

The Cisco TAC website provides online documents and tools for troubleshooting and resolving technical issues with Cisco products and technologies. The Cisco TAC website is available 24 hours a day, 365 days a year. The Cisco TAC website is located at this URL:

<http://www.cisco.com/tac>

Accessing all the tools on the Cisco TAC website requires a Cisco.com user ID and password. If you have a valid service contract but do not have a login ID or password, register at this URL:

<http://tools.cisco.com/RPF/register/register.do>

Opening a TAC Case

Using the online TAC Case Open Tool is the fastest way to open P3 and P4 cases. (P3 and P4 cases are those in which your network is minimally impaired or for which you require product information.) After you describe your situation, the TAC Case Open Tool automatically recommends resources for an immediate solution. If your issue is not resolved using the recommended resources, your case will be assigned to a Cisco TAC engineer. The online TAC Case Open Tool is located at this URL:

<http://www.cisco.com/tac/caseopen>

For P1 or P2 cases (P1 and P2 cases are those in which your production network is down or severely degraded) or if you do not have Internet access, contact Cisco TAC by telephone. Cisco TAC engineers are assigned immediately to P1 and P2 cases to help keep your business operations running smoothly.

To open a case by telephone, use one of the following numbers:

Asia-Pacific: +61 2 8446 7411 (Australia: 1 800 805 227)

EMEA: +32 2 704 55 55

USA: 1 800 553-2447

For a complete listing of Cisco TAC contacts, go to this URL:

<http://www.cisco.com/warp/public/687/Directory/DirTAC.shtml>

TAC Case Priority Definitions

To ensure that all cases are reported in a standard format, Cisco has established case priority definitions.

Priority 1 (P1)—Your network is “down” or there is a critical impact to your business operations. You and Cisco will commit all necessary resources around the clock to resolve the situation.

Priority 2 (P2)—Operation of an existing network is severely degraded, or significant aspects of your business operation are negatively affected by inadequate performance of Cisco products. You and Cisco will commit full-time resources during normal business hours to resolve the situation.

Priority 3 (P3)—Operational performance of your network is impaired, but most business operations remain functional. You and Cisco will commit resources during normal business hours to restore service to satisfactory levels.

Priority 4 (P4)—You require information or assistance with Cisco product capabilities, installation, or configuration. There is little or no effect on your business operations.

Obtaining Additional Publications and Information

Information about Cisco products, technologies, and network solutions is available from various online and printed sources.

- Cisco Marketplace provides a variety of Cisco books, reference guides, and logo merchandise. Go to this URL to visit the company store:
<http://www.cisco.com/go/marketplace/>
- The Cisco *Product Catalog* describes the networking products offered by Cisco Systems, as well as ordering and customer support services. Access the Cisco Product Catalog at this URL:
<http://cisco.com/univercd/cc/td/doc/pcat/>
- *Cisco Press* publishes a wide range of general networking, training and certification titles. Both new and experienced users will benefit from these publications. For current Cisco Press titles and other information, go to Cisco Press online at this URL:
<http://www.ciscopress.com>
- *Packet* magazine is the Cisco quarterly publication that provides the latest networking trends, technology breakthroughs, and Cisco products and solutions to help industry professionals get the most from their networking investment. Included are networking deployment and troubleshooting tips, configuration examples, customer case studies, tutorials and training, certification information, and links to numerous in-depth online resources. You can access Packet magazine at this URL:
<http://www.cisco.com/packet>
- *iQ Magazine* is the Cisco bimonthly publication that delivers the latest information about Internet business strategies for executives. You can access iQ Magazine at this URL:
<http://www.cisco.com/go/iqmagazine>
- *Internet Protocol Journal* is a quarterly journal published by Cisco Systems for engineering professionals involved in designing, developing, and operating public and private internets and intranets. You can access the Internet Protocol Journal at this URL:
<http://www.cisco.com/ipj>
- Training—Cisco offers world-class networking training. Current offerings in network training are listed at this URL:
<http://www.cisco.com/en/US/learning/index.html>



Install the Shelf and Backplane Cable

This chapter provides procedures for installing the Cisco ONS 15454. To view a summary of the tools and equipment required for installation, see the “Required Tools and Equipment” section on page 1-2.



Note

Except where noted, the procedures and tasks in this chapter apply to DWDM (Software Release 4.5) and non-DWDM (Software R4.1 and earlier) nodes.

Before You Begin

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A1 Unpack and Inspect the ONS 15454 Shelf Assembly, page 1-4—Complete this procedure before continuing with the “NTP-A2 Install the Shelf Assembly” procedure on page 1-6.
2. NTP-A2 Install the Shelf Assembly, page 1-6—Complete this procedure to install the shelf assembly in a rack.
3. NTP-A3 Open and Remove the Front Door, page 1-13—Complete this procedure to access the equipment before continuing with other procedures.
4. NTP-A4 Remove the Backplane Covers, page 1-16—Complete this procedure to access the backplane before continuing with other procedures.
5. NTP-A5 Install the Electrical Interface Assemblies, page 1-17—Complete this procedure if you plan to install electrical cards. This procedure is a prerequisite to the “NTP-A9 Install the Electrical Card Cables on the Backplane” procedure on page 1-48.
6. NTP-A6 Install the Power and Ground, page 1-24—Complete this procedure before continuing with the “NTP-A7 Install the Fan-Tray Assembly” procedure on page 1-30.
7. NTP-A7 Install the Fan-Tray Assembly, page 1-30—Complete this procedure to install the fan-tray assembly in the shelf.
8. NTP-A119 Install the Alarm Expansion Panel, page 1-32—Complete this procedure if you are planning to install the Alarm Interface Controller–International (AIC-I) card and want to increase the number of alarm contacts provided by the AIC-I card.
9. NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections, page 1-36—Complete as needed to set up wire-wrap pin connections.
10. NTP-A120 Install an External Wire-Wrap Panel to the AEP, page 1-43—Complete this procedure to connect an external wire-wrap panel to the alarm expansion panel (AEP).

11. NTP-A9 Install the Electrical Card Cables on the Backplane, page 1-48—Complete this procedure if you plan to install electrical cards.
12. NTP-A10 Route Electrical Cables, page 1-56—Complete this procedure as needed before continuing with the “NTP-A11 Install the Rear Cover” procedure on page 1-58.
13. NTP-A11 Install the Rear Cover, page 1-58—Complete this procedure as needed to install the rear cover.
14. NTP-A12 Install Ferrites, page 1-60—Complete this procedure to attach ferrites to power cables.
15. NTP-A238 Install Optional DWDM Equipment, page 1-63—Complete this procedure if you are installing the optional equipment associated with DWDM applications.
16. NTP-A13 Perform the Shelf Installation Acceptance Test, page 1-65—Complete this procedure to determine if you have correctly completed all other procedures in the chapter.



Warning

Only trained and qualified personnel should be allowed to install, replace, or service this equipment.



Warning

The ONS 15454 is intended for installation in restricted access areas. A restricted access area is where access can only be gained by service personnel through the use of a special tool, lock, key, or other means of security. A restricted access area is controlled by the authority responsible for the location.



Warning

The ONS 15454 is suitable for mounting on concrete or other noncombustible surfaces only.

Required Tools and Equipment

You need the following tools and equipment to install and test the ONS 15454.

Cisco-Supplied Materials

The following materials are required and are shipped with the ONS 15454 shelf (wrapped in plastic). The number in parentheses gives the quantity of the item included in the package.

- #12-24 x 3/4 pan-head Phillips mounting screws (48-1004-XX, 48-1007-XX) (8)
- #12 -24 x 3/4 socket set screws (48-1003-XX) (2)
- T-handle #12-24 hex tool for set screws (1)
- ESD wrist strap with 1.8 m (6 ft) coil cable (1)
- Tie wraps (10)
- Pinned hex (Allen) key for front door (1)
- Spacers (50-1193-XX) (4)
- Spacer mounting brackets (2)
- Clear plastic rear cover (1)
- External (bottom) brackets for the fan-tray air filter

- Standoff kit (53-0795-XX):
 - Plastic fiber management guides (2)
 - Fan filter bracket screws (53-48-0003) (6)

The following materials are required to install the optional Air Ramp. The number in parentheses gives the quantity of the item included in the package

- M4.0x 8mm,SS pan-head Phillips mounting screws (2)
- Mounting Brackets, 19-inch, 23-inch (2)

User-Supplied Materials

The following materials and tools are required but are not supplied with the ONS 15454:

- One or more of the following equipment racks:
 - 19-inch ANSI Standard (GR-63-CORE) (482.6 mm) rack; total width 22 inches (558.8 mm)
 - 23-inch ANSI Standard (GR-63-CORE) (584.2 mm) rack; total width 26 inches (660.4 mm)
- Fuse panel
- Power cable (from fuse and alarm panel to assembly), #10 AWG, copper conductors, 194°F [90°C])



Note If you are installing power on a 15454-SA-NEBS3E, 15454-SA-NEBS3, or 15454-SA-R1, P/N: 800-07149 shelf assembly, a #10 to #12 AWG power cable is required.

- Ground cable #6 AWG stranded



Note If you are installing power on a 15454-SA-NEBS3E, 15454-SA-NEBS3 or 15454-SA-R1, P/N: 800-07149 shelf assembly, the #10 AWG ground cable is required.

- Alarm cable pairs for all alarm connections, #22 or #24 AWG (0.51 mm² or 0.64 mm²), solid tinned
- 100-ohm shielded Building Integrated Timing Supply (BITS) clock cable pair #22 or #24 AWG (0.51 mm² or 0.64 mm²), twisted-pair T1-type
- Single-mode SC fiber jumpers with UPC polish (55 dB or better) for optical (OC-N) cards
- Shielded coaxial cable terminated with SMB or BNC connectors for DS-3 cards
- Shielded ABAM cable terminated with AMP Champ connectors or unterminated for DS1N-14 cards with #22 or #24 AWG (0.51 mm² or 0.64 mm²) ground wire (typically about two feet in length)
- 6-pair #29 AWG double-shielded cable
- Tie wraps and/or lacing cord
- Labels
- Listed pressure terminal connectors such as ring and fork types; connectors must be suitable for #10 AWG copper conductors

Tools Needed

- #2 Phillips screwdriver

- Medium slot-head screwdriver
- Small slot-head screwdriver
- Wire wrapper
- Wire cutters
- Wire strippers
- Crimp tool
- BNC insertion tool

Test Equipment

- Voltmeter
- Optical power meter (for use with fiber optics only)
- Bit error rate (BER) tester, DS-1 and DS-3

NTP-A1 Unpack and Inspect the ONS 15454 Shelf Assembly

Purpose	This procedure unpacks the ONS 15454 and verifies the contents.
Tools/Equipment	Pinned hex (Allen) key for front door
Prerequisite Procedures	None
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

Step 1 Complete the “DLP-A1 Unpack and Verify the Shelf Assembly” task on page 1-4.

Step 2 Complete the “DLP-A2 Inspect the Shelf Assembly” task on page 1-5.

Step 3 Continue with the “NTP-A2 Install the Shelf Assembly” procedure on page 1-6.

Stop. You have completed this procedure.

DLP-A1 Unpack and Verify the Shelf Assembly

Purpose	This task removes the shelf assembly from the package.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** When you receive the ONS 15454 system equipment at the installation site, open the top of the box. The Cisco Systems logo designates the top of the box.
- Step 2** Remove the foam inserts from the box. The box contains the 15454 shelf (wrapped in plastic) and a smaller box of items needed for installation.
- Step 3** To remove the shelf, grasp both rings of the shelf removal strap and slowly lift the shelf out of the box.
- Step 4** Open the smaller box of installation materials, and verify that you have all items listed in the “Cisco-Supplied Materials” section on page 1-2.



Note The fan-tray assembly is shipped separately.

- Step 5** Return to your originating procedure (NTP).
-

DLP-A2 Inspect the Shelf Assembly

Purpose	This task verifies that all parts of the shelf assembly are in good condition.
Tools/Equipment	Pinned hex (Allen) key for front door
Prerequisite Procedures	DLP-A1 Unpack and Verify the Shelf Assembly, page 1-4
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Open the shelf using the pinned hex key. For more information, see the “DLP-A8 Open the Front Cabinet Compartment (Door)” task on page 1-13.
- Step 2** Verify the following:
- Pins are not bent or broken.
 - Frame is not bent.
- Step 3** If the pins are bent or broken, or the frame is bent, call your Cisco sales engineer for a replacement.
- Step 4** Close the front door before installing.
- Step 5** Return to your originating procedure (NTP).
-

NTP-A2 Install the Shelf Assembly

Purpose	This procedure describes how to reverse the mounting bracket and mount shelf assemblies in a rack.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver Pinned hex key Two set screws (48-1003-XX)
Prerequisite Procedures	NTP-A1 Unpack and Inspect the ONS 15454 Shelf Assembly, page 1-4
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None



Warning

To prevent the equipment from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of 131°F (55°C). To prevent airflow restriction, allow at least 1 inch (25.4 mm) of clearance around the ventilation openings.



Warning

The ONS 15454 should be installed in the lower rack position or mounted above another ONS 15454 shelf assembly.



Warning

The ONS 15454 must have 1 inch of airspace below the installed shelf assembly to allow air flow to the fan intake. The air ramp (the angled piece of sheet metal on top of the shelf assembly) provides this spacing and should not be modified in any way.



Note

The 10 Gbps compatible shelf assembly (15454-SA-10G) and fan-tray assembly (15454-FTA3) are required with the ONS 15454 XC10G, OC-192, and OC-48 any slot (AS) cards.

- Step 1** Complete the “DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack” task on page 1-7 if you need to convert from a 23-inch (584.2 mm) to a 19-inch (482.6 mm) rack.
- Step 2** To install the air filter on the bottom of the shelf rather than beneath the fan-tray assembly, complete the “DLP-A4 Install the External Brackets and Air Filter” task on page 1-8.
- Step 3** Complete the necessary rack mount task:
- DLP-A5 Mount the Shelf Assembly in a Rack (One Person), page 1-10
 - DLP-A6 Mount the Shelf Assembly in a Rack (Two People), page 1-11
 - DLP-A7 Mount Multiple Shelf Assemblies in a Rack, page 1-12
- Step 4** Continue with the “NTP-A3 Open and Remove the Front Door” procedure on page 1-13.
- Stop. You have completed this procedure.**

DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack

Purpose	This task installs the mounting bracket to convert a 23-inch (584.2 mm) rack to a 19-inch (482.6 mm) rack.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Caution

Use only the fastening hardware provided with the ONS 15454 to prevent loosening, deterioration, and electromechanical corrosion of the hardware and joined material.


Caution

When mounting the ONS 15454 in a frame with a nonconductive coating (such as paint, lacquer, or enamel) either use the thread-forming screws provided with the ONS 15454 shipping kit, or remove the coating from the threads to ensure electrical continuity.

-
- Step 1** Remove the screws that attach the mounting bracket to the side of the shelf assembly.
- Step 2** Flip the detached mounting bracket upside down.
Text imprinted on the mounting bracket will now also be upside down.
- Step 3** Place the widest side of the mounting bracket flush against the shelf assembly (see Figure 1-1).
The narrow side of the mounting bracket should be towards the front of the shelf assembly. Text imprinted on the mounting bracket should be visible and upside down.
- Step 4** Align the mounting bracket screw holes against the shelf assembly screw holes.
- Step 5** Insert the screws that were removed in Step 1 and tighten them.
- Step 6** Repeat the task for the mounting bracket on the opposite side.

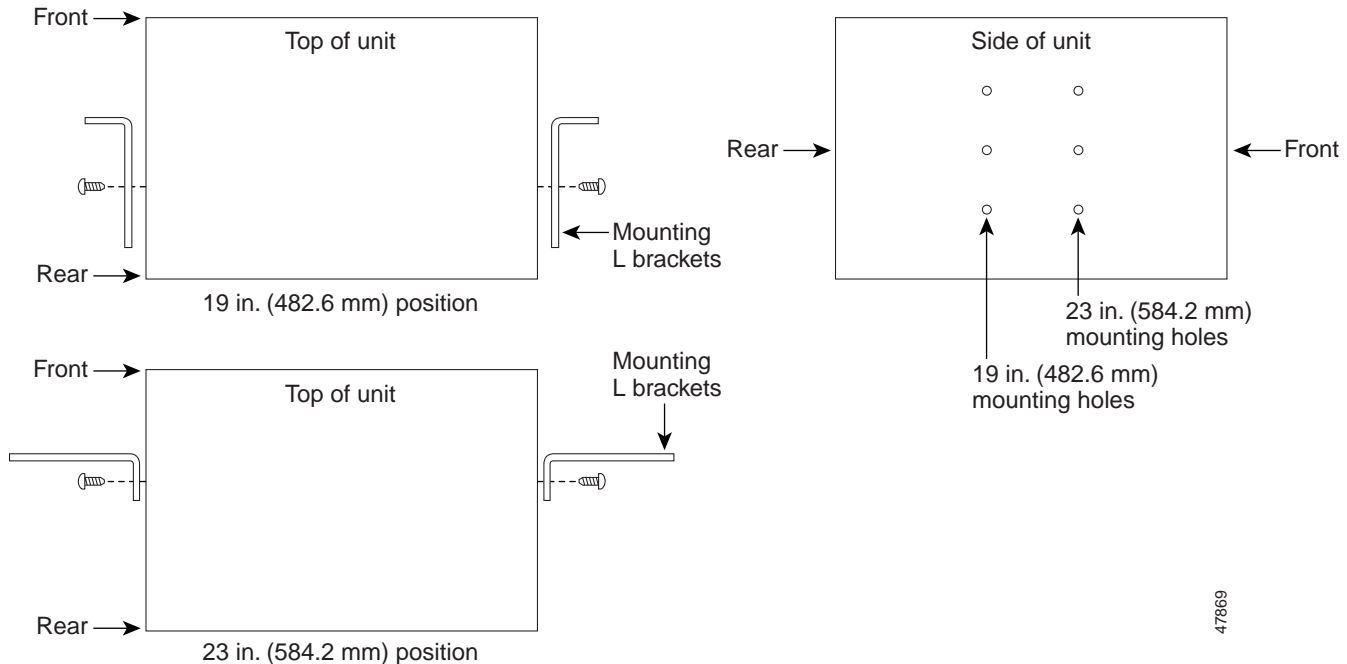Figure 1-1 Reversing the Mounting Brackets (23-inch (584.2 mm) Position to 19-inch (482.6 mm) Position)

Step 7 Return to your originating procedure (NTP).

DLP-A4 Install the External Brackets and Air Filter

Purpose	This task installs the external brackets and air filter on the bottom of the shelf rather than beneath the fan-tray assembly.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver
Prerequisite Procedures	DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack, page 1-7, if applicable
Required/As Needed	As needed; perform this task if you want to access the air filter without removing the fan-tray assembly.
Onsite/Remote	Onsite
Security Level	None



Note

The shelf assembly ships with external (bottom) brackets that you can use to install the air filter on the bottom of the shelf rather than beneath the fan-tray assembly. When you use the brackets to install the fan-tray air filter, you do not need to remove the fan-tray assembly to access the air filter. Attach the brackets to the bottom of the shelf assembly before installing the rack.

**Note**

If you choose not to install the brackets, install the air filter by sliding it into the compartment at the bottom of the shelf assembly. Each time you remove and reinstall the air filter in the future, you must first remove the fan-tray assembly. Do not install an air filter in both filter locations on any shelf assembly.

Step 1 With the fan-tray assembly removed, place the ONS 15454 face down on a flat surface.

**Note**

Although the filter will work if it is installed with either side facing up, Cisco recommends that you install it with the metal bracing facing up to preserve the surface of the filter.


Step 2 Locate the three screw holes that run along the left and right sides of the bottom of the shelf assembly.

Step 3 Secure each bracket to the bottom of the shelf assembly using the screws (48-0003) provided in the backplane standoff kit (53-0795-XX).

Each bracket has a filter stopper and a flange on one end. Make sure to attach the brackets with the stoppers and flanges facing the rear of the shelf assembly (the top, if the ONS 15454 is face-down during installation).

Figure 1-2 illustrates bottom bracket installation. If you do not use the brackets, in the future you must remove the fan-tray assembly before removing the air filter. The brackets enable you to clean and replace the air filter without removing the fan-tray assembly.

Figure 1-2 Installing the External Brackets

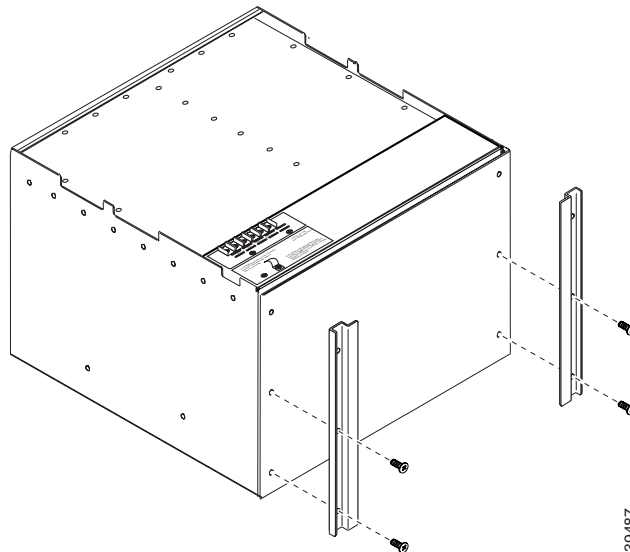

Step 4 Slide the air filter into the shelf assembly.

Step 5 Return to your originating procedure (NTP).

DLP-A5 Mount the Shelf Assembly in a Rack (One Person)

Purpose	This task allows one person to mount the shelf assembly in a rack.
Tools/Equipment	Pinned hex key Two set screws (48-1003-XX) # 2 Phillips screwdriver
Prerequisite Procedures	DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack, page 1-7, if applicable DLP-A4 Install the External Brackets and Air Filter, page 1-8, if applicable
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Verify that the proper fuse and alarm panel has been installed in the top mounting space. If a fuse and alarm panel has not been installed, you must install one according to manufacturer's instructions.
- If installing the 15454-SA-ANSI shelf assembly, a 100-A fuse panel (30-A fuse per shelf minimum) is required.
 - If installing the 15454-SA-NEBS3 shelf assembly, a standard 80-A fuse panel (20-A fuse per shelf minimum) is required.
- Step 2** Ensure that the shelf assembly is set for the desired rack size (either 23 inches [584.2 mm] or 19 inches [482.6 mm]).
- Step 3** Using the hex key that shipped with the assembly, install the two set screws into the screw holes that will not be used to mount the shelf.
- Step 4** Lift the shelf assembly to the desired rack position and set it on the set screws.
- Step 5** Align the screw holes on the mounting ears with the mounting holes in the rack.
- Step 6** Using the Phillips screwdriver, install one mounting screw in each side of the assembly.
- Step 7** When the shelf assembly is secured to the rack, install the remaining mounting screws.



Note Use at least one set of the horizontal screw slots on the ONS 15454 to prevent slippage.

- Step 8** Remove the temporary set screws.
- Step 9** Return to your originating procedure (NTP).
-

DLP-A6 Mount the Shelf Assembly in a Rack (Two People)

Purpose	This task allows two people to mount the shelf assembly in a rack.
Tools/Equipment	Pinned hex key Two set screws (48-1003-XX) # 2 Phillips screwdriver
Prerequisite Procedures	DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack, page 1-7, if applicable DLP-A4 Install the External Brackets and Air Filter, page 1-8, if applicable
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Verify that the proper fuse and alarm panel has been installed in the top mounting space. If a fuse and alarm panel is not present, you must install one according to manufacturer's instructions.
- If installing the 15454-SA-ANSI shelf assembly, a 100-A fuse panel (30-A fuse per shelf minimum) is required.
 - If installing the 15454-SA-NEBS3 shelf assembly, a standard 80-A fuse panel (20-A fuse per shelf minimum) is required.
- Step 2** Ensure that the shelf assembly is set for the desired rack size (either 23 inches [584.2 mm] or 19 inches [482.6 mm]).
- Step 3** Using the hex key that shipped with the shelf assembly, install the two set screws (48-1003-XX) into the screw holes that will not be used to mount the shelf.
- Step 4** Lift the shelf assembly to the desired position in the rack.
- Step 5** Align the screw holes on the mounting ears with the mounting holes in the rack.
- Step 6** While one person holds the shelf assembly in place, the other person can install one mounting screw in each side of the assembly using the Phillips screwdriver.
- Step 7** When the shelf assembly is secured to the rack, install the remaining mounting screws.



Note Use at least one set of the horizontal screw slots on the ONS 15454 to prevent slippage.

- Step 8** Remove the temporary set screws.
- Step 9** Return to your originating procedure (NTP).
-

DLP-A7 Mount Multiple Shelf Assemblies in a Rack

Purpose	This task allows multiple shelves to be assembled in a rack.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver
Prerequisite Procedures	DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack, page 1-7, if applicable DLP-A4 Install the External Brackets and Air Filter, page 1-8, if applicable
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None


Note

The ONS 15454 must have one inch (25.4 mm) of airspace below the installed shelf assembly to allow air flow to the fan intake. If a second ONS 15454 is installed underneath a shelf assembly, the air ramp on top of the bottom shelf assembly provides the desired space. However, if the ONS 15454 is installed above third-party equipment, you must provide a minimum spacing of one inch (25.4 mm) between the third-party shelf assembly and the bottom of the ONS 15454. The third-party equipment must not vent heat upward into the ONS 15454.

-
- Step 1** Verify that the proper fuse and alarm panel has been installed in the top mounting space. If a fuse and alarm panel is not present, you must install one according to manufacturer's instructions.
- If installing the 15454-SA-ANSI shelf assembly, a 100-A fuse panel (30-A fuse per shelf minimum) is required.
 - If installing the 15454-SA-NEBS3 shelf assembly, a standard 80-A fuse panel (20-A fuse per shelf minimum) is required.
- Step 2** Mount the first ONS 15454 directly below the fuse and alarm panel using the "DLP-A5 Mount the Shelf Assembly in a Rack (One Person)" task on page 1-10 or the "DLP-A6 Mount the Shelf Assembly in a Rack (Two People)" task on page 1-11.
- Step 3** Repeat the task with the remaining shelves.
- Step 4** Return to your originating procedure (NTP).
-

NTP-A3 Open and Remove the Front Door

Purpose	This procedure opens and removes the front door to access the equipment.
Tools/Equipment	Open-end wrench Pinned hex key
Prerequisite Procedures	NTP-A2 Install the Shelf Assembly, page 1-6
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Complete the “DLP-A8 Open the Front Cabinet Compartment (Door)” task on page 1-13.
- Step 2** Complete the “DLP-A9 Remove the Front Door” task on page 1-14.
- Step 3** Continue with the “NTP-A4 Remove the Backplane Covers” procedure on page 1-16.
- Stop. You have completed this procedure.**
-

DLP-A8 Open the Front Cabinet Compartment (Door)

Purpose	This task describes how to open the front cabinet compartment door.
Tools/Equipment	Pinned hex key
Prerequisite Procedures	NTP-A2 Install the Shelf Assembly, page 1-6
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None




Note

The ONS 15454 has an ESD plug input and is shipped with an ESD wrist strap. The ESD plug input is located on the outside edge of the shelf assembly on the right-hand side. It is labeled “ESD” on the top and bottom. Always wear an ESD wrist strap and connect the strap to the ESD plug when working on the ONS 15454.

- Step 1** Open the front door lock (Figure 1-3).
- The ONS 15454 comes with a pinned hex key for locking and unlocking the front door. Turn the key counterclockwise to unlock the door and clockwise to lock it.
- Step 2** Press the door button to release the latch.
- Step 3** Swing the door open.

Figure 1-3 Cisco ONS 15454 Front Door

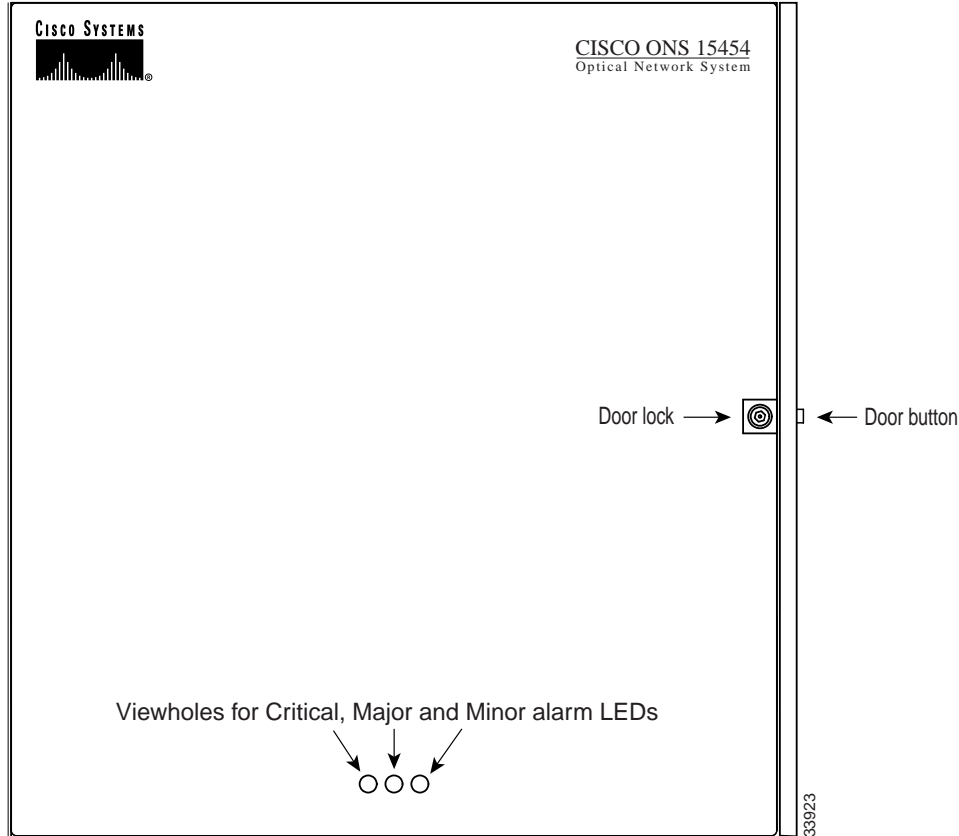

Step 4 Return to your originating procedure (NTP).

DLP-A9 Remove the Front Door


Purpose	Use this task to remove the front cabinet compartment door.
Tools/Equipment	Open-end wrench
Prerequisite Procedures	DLP-A8 Open the Front Cabinet Compartment (Door), page 1-13
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

- Step 1** To remove the door ground strap (available in Release 3.3 and later), perform the following:
- To detach the ground strap from the front door, loosen the #6 kep nut (49-0600-01) using the open-end wrench. Detach the end of the ground strap terminal lug (72-3622-01) from the male stud on the inside of the door.

- b. To detach the other end of the ground strap from the longer screw on the fiber guide, loosen the #4 kee nut (49-0337-01) on the terminal lug using the open-end wrench. Remove the terminal lug and lock washer.

Step 2 Lift the door from its hinges at the top left corner of the door (Figure 1-4).

Figure 1-4 Removing the ONS 15454 Front Door

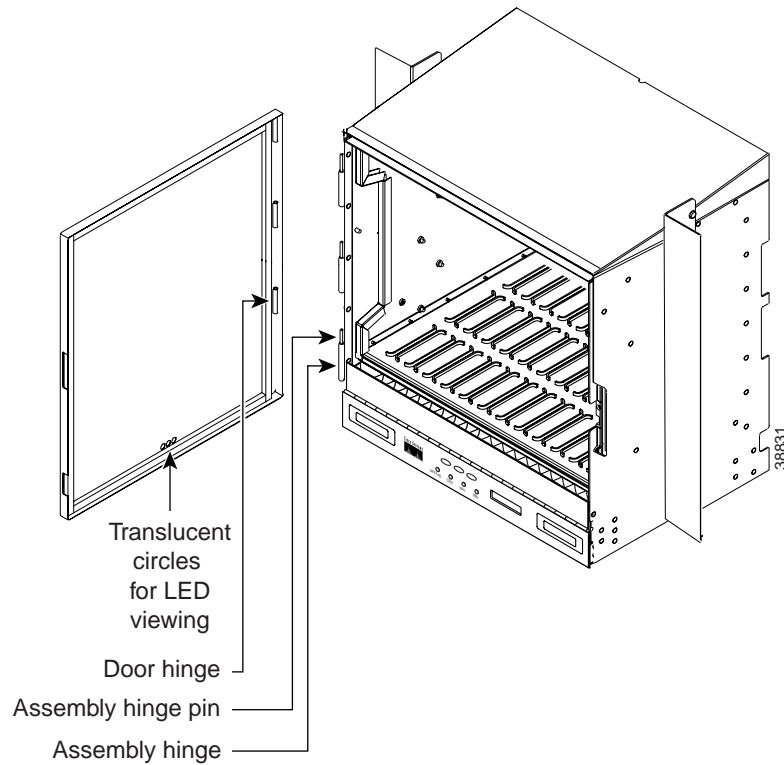

Step 3 Return to your originating procedure (NTP).

NTP-A4 Remove the Backplane Covers

Purpose	This procedure describes how to access the backplane by removing the covers. The backplane has two sheet metal covers (one on either side) and a lower backplane cover at the bottom.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver
Prerequisite Procedures	NTP-A2 Install the Shelf Assembly, page 1-6
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Complete the “DLP-A10 Remove the Lower Backplane Cover” task on page 1-16.
- Step 2** Complete the “DLP-A11 Remove the Backplane Sheet Metal Cover” task on page 1-17.
- Step 3** If you plan to install electrical interface assemblies (EIAs), continue with the “NTP-A5 Install the Electrical Interface Assemblies” procedure on page 1-17. If not, continue with the “NTP-A6 Install the Power and Ground” procedure on page 1-24.
- Stop. You have completed this procedure.**
-

DLP-A10 Remove the Lower Backplane Cover

Purpose	This task removes the lower backplane cover.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver
Prerequisite Procedures	NTP-A3 Open and Remove the Front Door, page 1-13
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Unscrew the five retaining screws that hold the clear plastic cover in place.
- Step 2** Grasp the clear plastic cover on each side.
- Step 3** Gently pull the cover away from the backplane.
- Step 4** Return to your originating procedure (NTP).
-

DLP-A11 Remove the Backplane Sheet Metal Cover

Purpose	This task removes the backplane sheet cover that is installed on the backplane when EIAs are not installed.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver
Prerequisite Procedures	NTP-A3 Open and Remove the Front Door, page 1-13, DLP-A10 Remove the Lower Backplane Cover, page 1-16
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** To remove the lower clear plastic backplane cover, loosen the five screws that secure it to the ONS 15454 and pull it away from the shelf assembly.
- Step 2** Loosen the nine perimeter screws that hold the backplane sheet metal cover(s) in place.
- Step 3** Lift the panel by the bottom to remove it from the shelf assembly.
- Step 4** Store the panel for later use. Attach the backplane cover(s) whenever EIA(s) are not installed.
- Step 5** Return to your originating procedure (NTP).
-

NTP-A5 Install the Electrical Interface Assemblies

Purpose	This procedure describes how to install electrical interface assemblies (EIAs). Typically, an EIA panel is already installed on the backplane when the node is received, but EIA panels can be ordered separately. Refer to the <i>Cisco ONS 15454 Reference Manual</i> for descriptions of the EIAs. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver perimeter screws (9) inner screws (12) backplane cover screws (5) EIA card (SMB, BNC, AMP Champ)
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	Required if the node will use electrical signals
Onsite/Remote	Onsite
Security Level	None

**Caution**

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.

**Note**

EIAs are normally factory installed. Verify that the correct EIA is installed on the shelf assembly. If not, install the correct EIA.

**Note**

You do not need to power down the shelf before removing or installing an EIA. An in-service upgrade of one EIA (A side or B side) is possible if all electrical traffic (DS-1, DS-3, DS3XM-6, and EC-1) is being carried on the other side.

- Step 1** Complete the “DLP-A12 Install a BNC or High-Density BNC EIA” task on page 1-18 as needed. BNCs are locking connectors; the high-density BNC provides access to every port on every card.
- Step 2** Complete the “DLP-A13 Install an SMB EIA” task on page 1-20 as needed. SMBs allow you to access every port on every card using more space and efficient cabling.
- Step 3** Complete the “DLP-A14 Install the AMP Champ EIA” task on page 1-22 as needed. AMP Champs are exclusive to DS-1 cables.

**Note**

To attach cables to the EIAs, see the “NTP-A9 Install the Electrical Card Cables on the Backplane” procedure on page 1-48.

- Step 4** Continue with the “NTP-A6 Install the Power and Ground” procedure on page 1-24.

Stop. You have completed this procedure.

DLP-A12 Install a BNC or High-Density BNC EIA

Purpose	This task installs a BNC or high-density BNC EIA.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver Perimeter screws (9) Inner screws (12) Backplane cover screws (5) BNC or high-density BNC card
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	Required if you are using DS3-12, DS3XM-6, or EC-1 card and prefer a BNC interface to an SMB interface

Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Remove the BNC or high-density BNC card from the packaging. Line up the connectors on the card with the mating connectors on the backplane. Gently push the card until both sets of connectors fit together snugly.
- Step 2** Place the metal EIA panel over the card.
- Step 3** Insert and tighten the nine perimeter screws (P/N 48-0358) at 8 to 10 lb. (3.6 to 4.5 kg) to secure the cover panel to the backplane.
- Step 4** Insert and tighten the twelve (BNC) or nine (high-density BNC) inner screws (P/N 48-0004) at 8 to 10 lb. (3.6 to 4.5 kg) to secure the cover panel to the card and backplane.

Figure 1-5 shows a BNC EIA installation.

Figure 1-5 Installing the BNC EIA


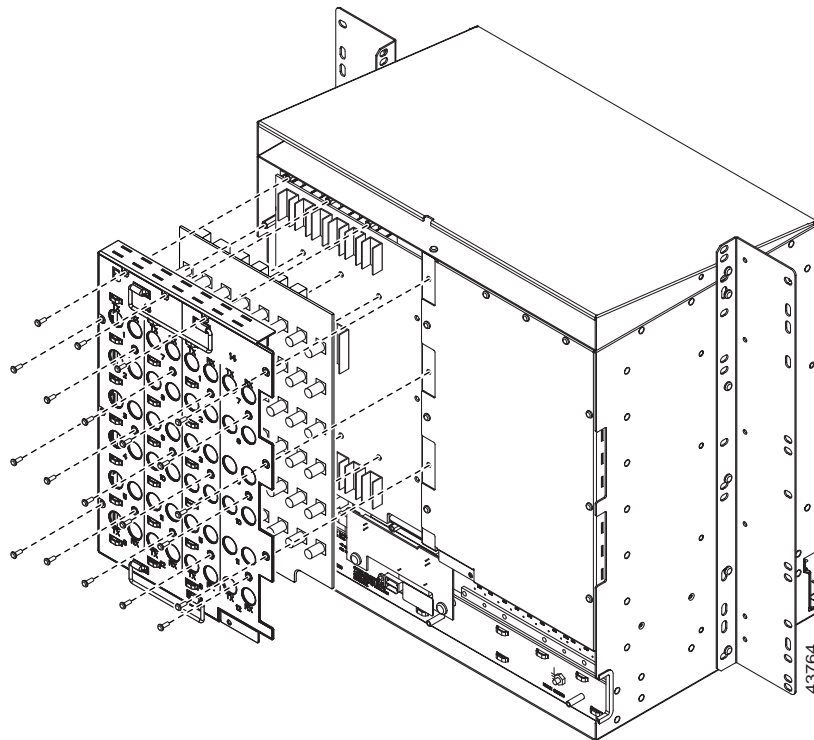


Figure 1-6 shows high-density BNC EIA installation.

Figure 1-6 Installing the High-Density BNC EIA

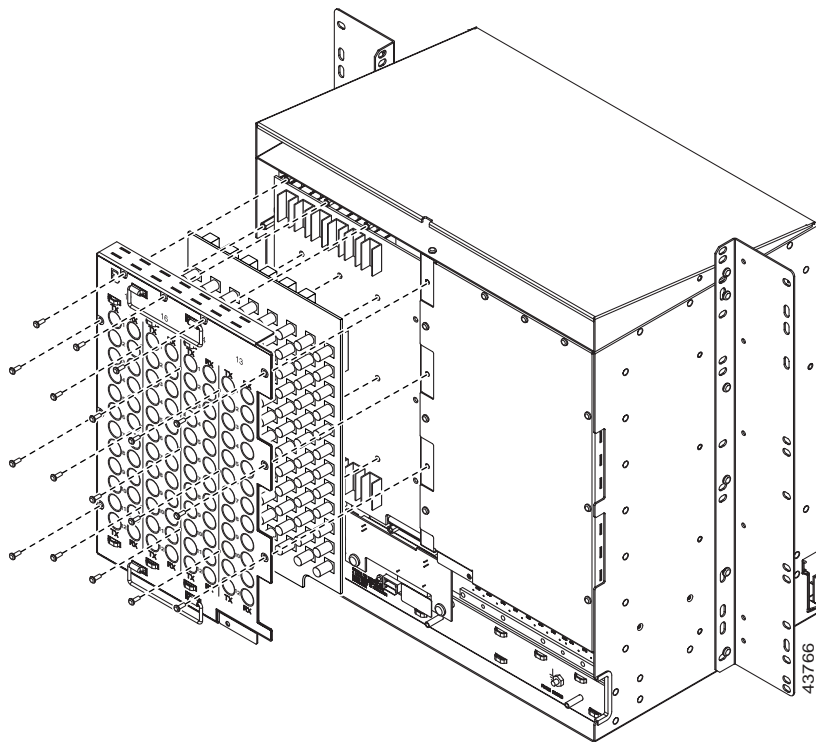

Step 5 Return to your originating procedure (NTP).

DLP-A13 Install an SMB EIA

Purpose	This task installs an SMB EIA.
Tools/Equipment	<ul style="list-style-type: none"> #2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver 9 perimeter screws 12 inner screws 5 backplane cover screws SMB card EIA panel
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	Required if you are using DS1-14 cards and prefer an SMB interface to an AMP interface, or if you are using DS3-12, DS3XM-6, or EC-1 cards and prefer an SMB interface to a BNC interface
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Remove the SMB card from the packaging. Line up the connectors on the card with the mating connectors on the backplane. Gently push the card until both sets of connectors fit together snugly.
- Step 2** Place the EIA panel over the card.
- Step 3** Insert and tighten the nine perimeter screws (P/N 48-0358) at 8 to 10 lb. (3.6 to 4.5 kg) to secure the cover panel to the backplane.
- Step 4** Insert and tighten the twelve inner screws (P/N 48-0004) at 8 to 10 lb. (3.6 to 4.5 kg) to secure the cover panel to the card and backplane.

If you are using SMB EIAs to make DS-1 connections, you need the DS-1 electrical interface adapter, commonly referred to as a balun (P/N 15454-WW-14=).

Figure 1-7 on page 1-21 shows an SMB EIA installation.

Figure 1-7 *Installing the SMB EIA (Use a Balun for DS-1 Connections)*

- Step 5** Return to your originating procedure (NTP).
-


DLP-A14 Install the AMP Champ EIA

Purpose	This task installs an AMP Champ EIA.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver 9 perimeter screws 12 inner screws 5 backplane cover screws 6 AMP Champ cards EIA panel
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	Required if you are using DS1-14 cards and prefer an AMP interface to an SMB interface
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Align the AMP Champ panel with the backplane and insert and tighten the nine perimeter screws (P/N 48-0358) at 8 to 10 lb. (3.6 to 4.5 kg).
- Step 2** Align an AMP Champ card with the backplane connector and push until it fits snugly. Repeat until you have installed all six AMP Champ cards.
- Step 3** To secure each AMP Champ card to the cover panel, insert and tighten a screw (P/N 48-0003) at the top of each card at 8 to 10 lb. (3.6 to 4.5 kg).
- Step 4** Place the AMP Champ fastening plate along the bottom of the cover panel, and hand-tighten the two thumbscrews.

Figure 1-8 shows an AMP Champ EIA installation.

Figure 1-8 Installing the AMP Champ EIA

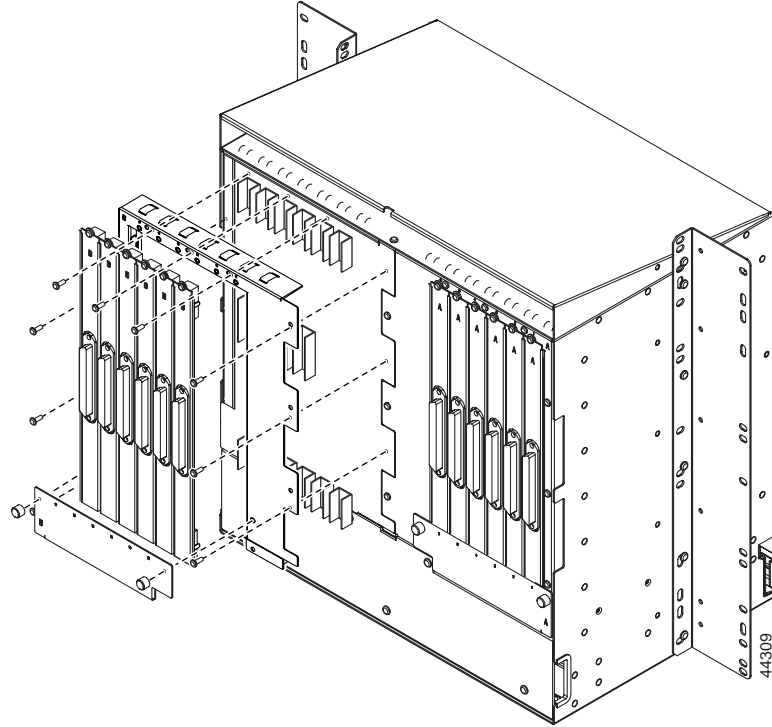

Step 5 Return to your originating procedure (NTP).

NTP-A6 Install the Power and Ground

Purpose	This procedure describes how to install power feeds and ground the ONS 15454.
Tools/Equipment	<p>#2 Phillips screwdriver</p> <p>Medium slot-head screwdriver</p> <p>Small slot-head screwdriver</p> <p>Screws</p> <p>Power cable (from fuse and alarm panel to assembly), #10 AWG, copper conductors, 194°F [90°C])</p> <p>Ground cable #6 AWG stranded</p> <p>Listed pressure terminal connectors such as ring and fork types; connectors must be suitable for #10 AWG copper conductors</p> <p>Wire wrapper</p> <p>Wire cutters</p> <p>Wire strippers</p> <p>Crimp tool</p> <p>Fuse panel</p>
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None



Warning

Shut off the power from the power source or turn off the breakers before beginning work.



Warning

This equipment is intended to be grounded. Ensure that the host is connected to earth ground during normal use.



Warning

Do not mix conductors of dissimilar metals in a terminal or splicing connector where physical contact occurs (such as copper and aluminum, or copper and copper-clad aluminum), unless the device is suited for the purpose and conditions of use.



Warning

Connect the ONS 15454 only to a DC power source that complies with the safety extra-low voltage (SELV) requirements in IEC 60950-based safety standards.



Warning

The ONS 15454 relies on the protective devices in the building installation to protect against short circuit, overcurrent, and grounding faults. Ensure that the protective devices are properly rated to protect the system, and that they comply with national and local codes.

**Warning**

A readily accessible two-poled disconnect device must be incorporated in the fixed wiring.

**Warning**

When installing redundant power feeds, do not use aluminum conductors.

**Warning**

If you use redundant power leads to power the ONS 15454, disconnecting one lead will not remove power from the node.

**Caution**

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.

Step 1

Complete one of the following:

- If using the 15454-SA-ANSI shelf, a 100-A fuse panel (30-A fuse per shelf minimum) is installed. If not, install one according to manufacturer's instructions.
- If using the 15454-SA-NEBS3 shelf, a standard 80-A fuse panel (20-A fuse per shelf minimum) is installed. If not, install one according to manufacturer's instructions.

Step 2

Complete the "DLP-A16 Connect the Office Ground to the ONS 15454" task on page 1-26.

Step 3

Complete the "DLP-A17 Connect Office Power to the ONS 15454 Shelf" task on page 1-27.

Step 4

Complete the "DLP-A18 Turn On and Verify Office Power" task on page 1-29.

Step 5

Continue with the "NTP-A7 Install the Fan-Tray Assembly" procedure on page 1-30.

Stop. You have completed this procedure.

DLP-A16 Connect the Office Ground to the ONS 15454


Purpose	This task connects ground to the ONS 15454 shelf.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver Screws Power cable (from fuse and alarm panel to assembly), #10 AWG, copper conductors, 194°F [90°C]) Ground cable #6 AWG stranded Listed pressure terminal connectors such as ring and fork types; connectors must be suitable for #10 AWG copper conductors
Prerequisite Procedures	DLP-A10 Remove the Lower Backplane Cover, page 1-16
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Verify that the office ground cable (#6 AWG stranded) is connected to the top of the bay according to local site practice.
- Step 2** Attach one end of the shelf ground cable (#10 AWG) to the right side of the backplane ground nut. See Figure 1-9 for the location of the ground on the backplane.



Note When terminating a frame ground, use the kep nut provided with the ONS 15454 and tighten it to a torque specification of 31 in-lb. The kep nut provides a frame ground connection that minimizes the possibility of loosening caused by rotation during installation and maintenance activity. The type of prevention the kep nut provides for the frame ground connection is inherently provided by the terminal block for battery and battery return connections.

Figure 1-9 Ground Location on the Backplane

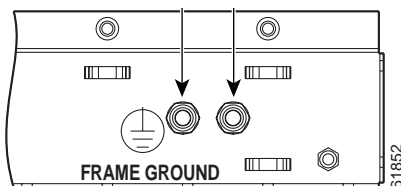

- Step 3** Attach the other end of the shelf ground cable to the bay.
- Step 4** Return to your originating procedure (NTP).
-

DLP-A17 Connect Office Power to the ONS 15454 Shelf

Purpose	This task connects power to the ONS 15454 shelf.
Tools/Equipment	<p>#2 Phillips screwdriver</p> <p>Medium slot-head screwdriver</p> <p>Small slot-head screwdriver</p> <p>Wire wrapper</p> <p>Wire cutters</p> <p>Wire strippers</p> <p>Crimp tool</p> <p>Fuse panel</p> <p>Power cable (from fuse and alarm panel to assembly), #10 AWG, copper conductors, 194°F [90°C]</p> <p>Ground cable #6 AWG stranded</p> <p>Listed pressure terminal connectors such as ring and fork types; connectors must be suitable for #10 AWG copper conductors</p>
Prerequisite Procedures	DLP-A16 Connect the Office Ground to the ONS 15454, page 1-26
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None



Warning

Do not apply power to the ONS 15454 until you complete all installation steps and check the continuity of the -48 VDC and return.



Note

If the system loses power or both TCC+ cards are reset and the system is not provisioned to get the time from a Network Time Protocol/Simple Network Time Protocol (NTP/SNTP) server, you must reset the ONS 15454 clock. After powering down, the date defaults to January 1, 1970, 00:04:15. To reset the clock, see the “NTP-A25 Set Up Name, Date, Time, and Contact Information” procedure on page 4-6. If you are using the TCC2 cards, the system clock will be kept running for up to three hours. In this case, no action would be required.



Note

If you encounter problems with the power supply, refer to the *Cisco ONS 15454 Troubleshooting Guide*.

Step 1 Connect the office power according to the fuse panel engineering specifications.

Step 2 Measure and cut the cables as needed to reach the ONS 15454 from the fuse panel. Figure 1-10 shows the ONS 15454 power terminals.


Step 3 Dress the power according to local site practice.



Warning

When installing the ONS 15454, the ground connection must always be made first and disconnected last.

Figure 1-10 Cisco ONS 15454 Power Terminals

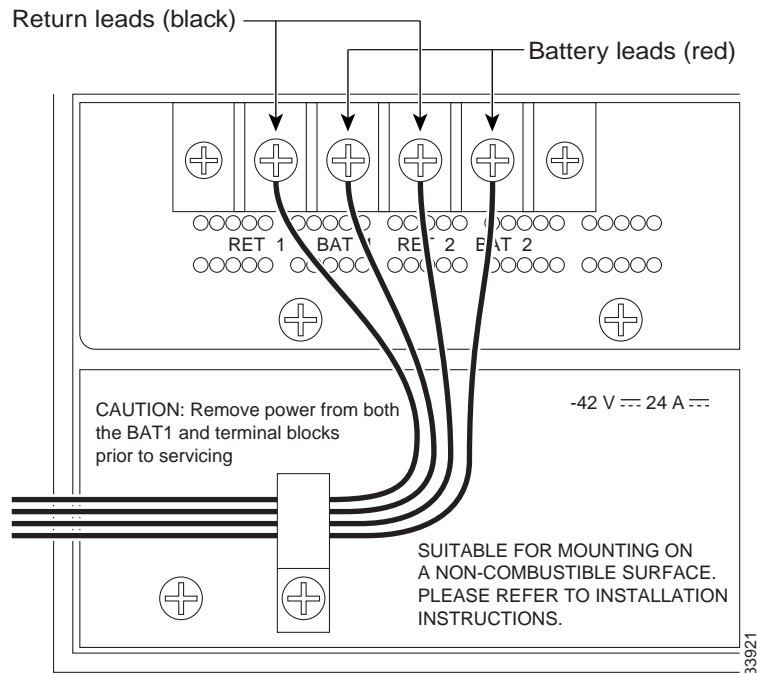

- Step 4** Remove or loosen the #8 power terminal screws on the ONS 15454. To avoid confusion, label the cables connected to the BAT1/RET1 (A) power terminals as 1, and the cables connected to the BAT2/RET2 (B) power terminals as 2.



Note Use only pressure terminal connectors, such as ring and fork types, when terminating the battery, battery return, and frame ground conductors.



Caution Before you make any crimp connections, coat all bare conductors (battery, battery return, and frame ground) with an appropriate antioxidant compound. Bring all unplated connectors, braided strap, and bus bars to a bright finish, then coat with an antioxidant before you connect them. You do not need to prepare tinned, solder-plated, or silver-plated connectors and other plated connection surfaces, but always keep them clean and free of contaminants.



Caution When terminating power, return, and frame ground, do not use soldering lug, screwless (push-in) connectors, quick-connect, or other friction-fit connectors.

- Step 5** Strip 1/2 inch (12.7 mm) of insulation from all power cables that you will use.

- Step 6** Crimp the lugs onto the ends of all power leads.



Note When terminating battery and battery return connections as shown in Figure 1-10, follow a torque specification of 10 in-lb.

- Step 7** Terminate the return 1 lead to the RET1 backplane terminal. Use oxidation-prevention grease to keep connections noncorrosive.



Warning Do not secure multiple connectors with the same bolt assembly.

- Step 8** Terminate the negative 1 lead to the negative BAT1 backplane power terminal. Use oxidation prevention grease to keep connections noncorrosive.
- Step 9** If you use redundant power leads, terminate the return 2 lead to the positive RET2 terminal on the ONS 15454. Terminate the negative 2 lead to the negative BAT2 terminal on the ONS 15454. Use oxidation-preventative grease to keep connections noncorrosive.
- Step 10** Route the cables out below the power terminals using the plastic cable clamp, as shown in Figure 1-10 on page 1-28.
- Step 11** Return to your originating procedure (NTP).

DLP-A18 Turn On and Verify Office Power

Purpose	This task measures the power to verify correct power and returns.
Tools/Equipment	Voltmeter
Prerequisite Procedures	DLP-A16 Connect the Office Ground to the ONS 15454, page 1-26 DLP-A17 Connect Office Power to the ONS 15454 Shelf, page 1-27
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

- Step 1** Using a voltmeter, verify the office battery and ground at the following points on the fuse and alarm panel:
- To verify the power, place the black test lead of the voltmeter to the frame ground. Place the red test lead on the A-side connection and verify that it is between -42 VDC and -57 VDC. Place the red test lead on the B-side connection and verify that it is between -42 VDC and -57 VDC.



Note The voltages -42 VDC and -57 VDC are, respectively, the minimum and maximum voltages required to power the chassis.

- To verify the ground, place the black test lead of the voltmeter to the frame ground. Place the red test lead on the A-side return ground and verify that no voltage is present. Place the red test lead on the B-side return ground and verify that no voltage is present.
- Step 2** Complete one of the following to power up the node:
- If you are using a 80-A fuse panel, insert a 20-A fuse into the fuse position according to site practice.
 - If you are using a 100-A fuse panel, insert a 30-A fuse into the fuse position according to site practice.

- Step 3** Using a voltmeter, verify the shelf for –48 VDC battery and ground:
- a. To verify the A-side of the shelf, place the black lead of the voltmeter to the frame ground. Place the red test lead to the BAT1 (A-side battery connection) red cable. Verify that it reads between –42 VDC and –57 VDC. Then place the red test lead of the voltmeter to the RET1 (A-side return ground) black cable and verify that no voltage is present.



Note The voltages –42 VDC and –57 VDC are, respectively, the minimum and maximum voltages required to power the chassis.

- b. To verify the B-side of the shelf, place the black test lead of the voltmeter to the frame ground. Place the red test lead to the BAT2 (B-side battery connection) red cable. Verify that it reads between –42 VDC and –57 VDC. Then, place the red test lead of the voltmeter to the RET2 (B-side return ground) black cable and verify that no voltage is present.

- Step 4** Return to your originating procedure (NTP).

NTP-A7 Install the Fan-Tray Assembly

Purpose	This procedure installs the fan-tray assembly.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver
Prerequisite Procedures	NTP-A3 Open and Remove the Front Door, page 1-13 NTP-A6 Install the Power and Ground, page 1-24
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None



Caution

Do not operate an ONS 15454 without a fan-tray air filter. A fan-tray air filter is mandatory in order to comply with GR-78-CORE, except for applications in an outside plant cabinet.



Note

If you are installing the ONS 15454 in an outside plant cabinet, remove the air filter to provide maximum cooling capabilities and to comply with GR-487-CORE.



Caution

The 15454-FTA3 fan-tray assembly can only be installed in ONS 15454 Release 3.1 or later shelf assemblies (15454-SA-ANSI, 800-19857). It includes a pin that does not allow it to be installed in ONS 15454 shelf assemblies released earlier than ONS 15454 Release 3.1 (15454-SA-NEBS3E, 15454-SA-NEBS3, and 15454-SA-R1, P/N 800-0714915454). Installing the 15454-FTA3 in a noncompliant shelf assembly might result in failure of the alarm interface panel (AIP), which in turn, will result in power loss to the fan-tray assembly.

**Caution**

You must place the edge of the air filter flush against the front of the fan-tray assembly compartment when installing the fan tray on top of the filter. Failure to do so could result in damage to the filter, the fan tray, or both.

**Caution**

Do not force a fan-tray assembly into place. Doing so can damage the connectors on the fan tray and/or the connectors on the back panel of the shelf assembly.


**Note**

To install the fan-tray assembly, it is not necessary to move any of the cable-management facilities.

- Step 1** Slide the fan tray into the shelf assembly until the electrical plug at the rear of the tray plugs into the corresponding receptacle on the backplane.
- Step 2** To verify that the tray has plugged into the backplane, look at the fan tray and listen to determine that the fans are running.

Figure 1-11 shows the location of the fan tray.

Figure 1-11 Installing the Fan-Tray Assembly

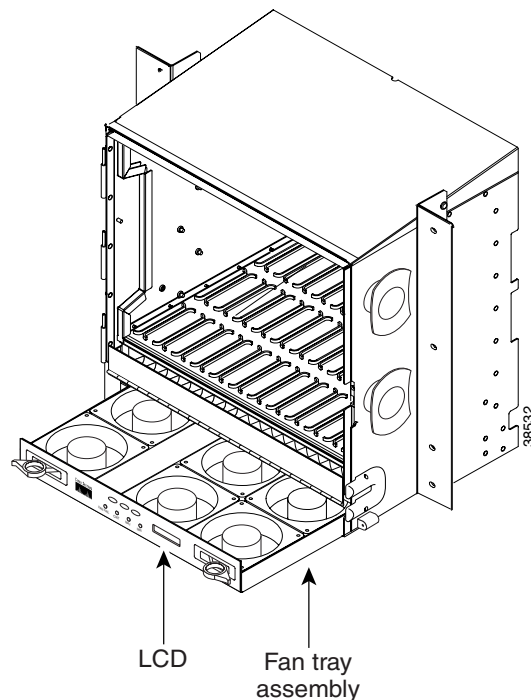

- Step 3** Continue with the “NTP-A119 Install the Alarm Expansion Panel” procedure on page 1-32 if you plan to install an Alarm Expansion Panel (AEP). If not, continue with the “NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections” procedure on page 1-36.

Stop. You have completed this procedure.


NTP-A119 Install the Alarm Expansion Panel

Purpose	This procedure installs an alarm expansion panel (AEP) onto the 15454-SA-ANSI shelf backplane. The AEP provides alarm contacts in addition to the 16 provided by the AIC-I card. Typically, the AEP is pre-installed when ordered with the ONS 15454; however, the AEP can be ordered separately.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver Wire wrapper 6-pair #29 AWG double-shielded cable Standoffs (4)
Prerequisite Procedures	DLP-A10 Remove the Lower Backplane Cover, page 1-16
Required/As Needed	Required if you are terminating more than 16 alarm contacts (16 inputs + 0 outputs or 12 inputs or 4 outputs); the AIC-I card must be installed before you can provision the alarm contacts enabled by the AEP.
Onsite/Remote	Onsite
Security Level	None


Note

The AIC-I card provides direct alarm contacts (external alarm inputs and external control outputs). In the ANSI shelf, these AIC-I alarm contacts are routed through the backplane to wire-wrap pins accessible from the back of the shelf. When you install an AEP, the direct AIC-I alarm contacts cannot be used. Only the AEP alarm contacts can be used.


-
- Step 1** Remove the two backplane screws. Replace the two screws with standoffs. Insert the longer standoff on the left, and the shorter standoff on the right (Figure 1-12).

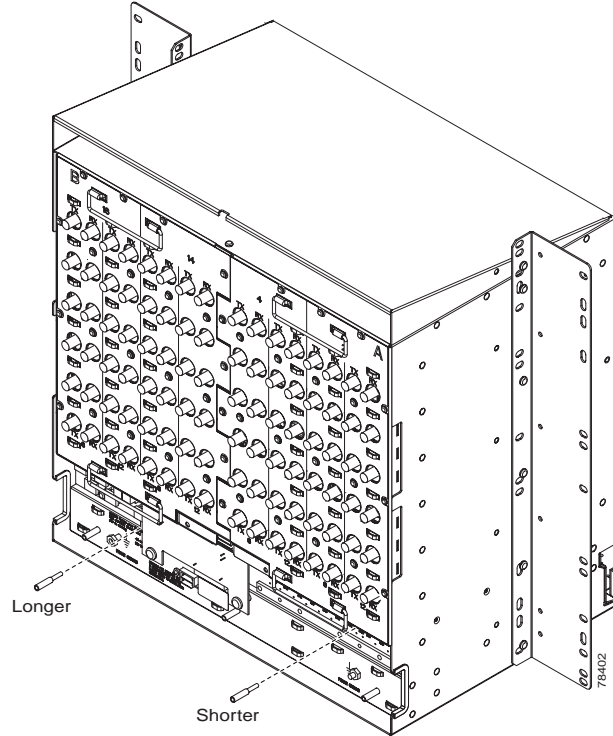Figure 1-12 Replace Backplane Screws with Standoffs

Step 2 Attach the remaining two standoffs on either side of the backplane (Figure 1-13).

Step 3 Position the AEP board over the standoffs.

Figure 1-13 Installing Standoffs and the AEP

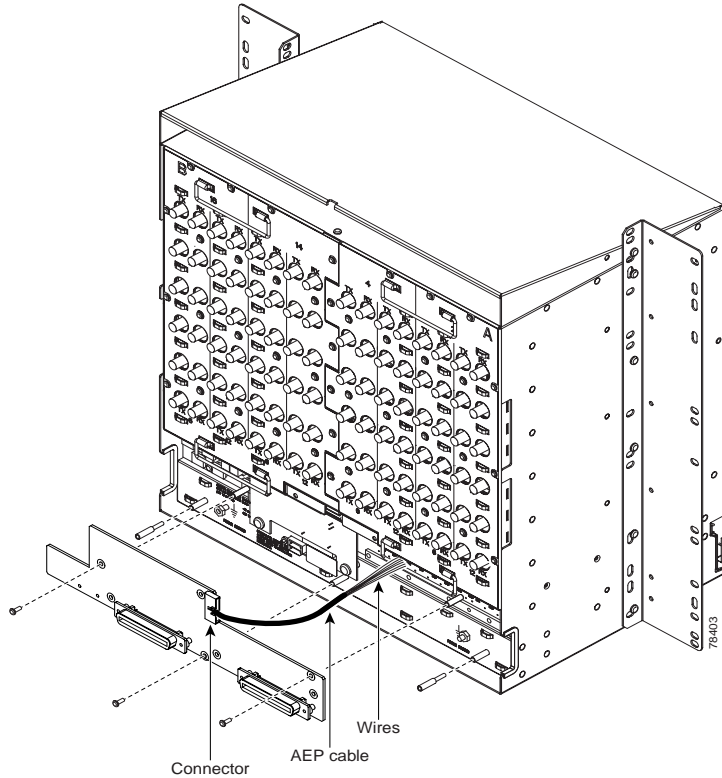


Step 4 Insert and tighten three screws to secure the AEP to the backplane.

Step 5 Connect the AEP cable to the backplane and AEP:

- a. Connect the 10 colored wires to the wire-wrap pins on the backplane. Figure 1-14 shows where the cable wires are connected. Table 1-1 shows AEP and AIC-I signals that each wire carries.
- b. Plug the other end of the AEP cable into AEP connector port. The brown pin is on the top.

Figure 1-14 AEP Wire-Wrap Connections to Backplane Pins

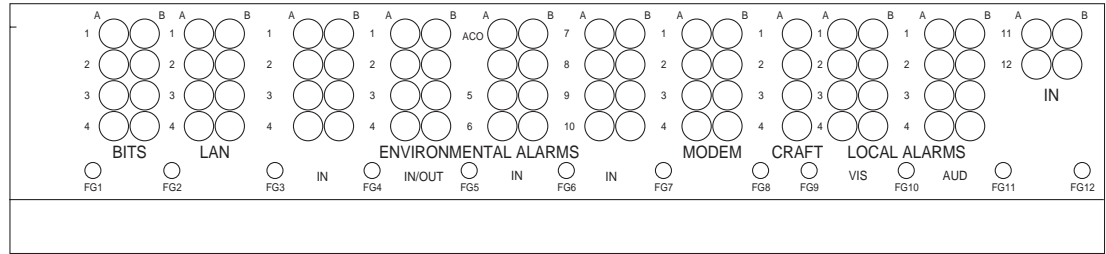

Field	Pin	Function	Field	Pin	Function				
BITS	A1	BITS Output 2 negative (-)	ENVIR ALARMS IN/OUT	A1/A13	Normally open output pair number 1				
	B1	BITS Output 2 positive (+)		B1/B13	Normally open output pair number 2				
	A2	BITS Input 2 negative (-)		A2/A14					
	B2	BITS Input 2 positive (+)		B2/B14	N/O	A3/A15	Normally open output pair number 3		
	A3	BITS Output 1 negative (-)	B3/B15	Normally open output pair number 4					
	B3	BITS Output 1 positive (+)	A4/A16						
	A4	BITS Input 1 negative (-)	B4/B16						
	LAN	Connecting to a hub, or switch		ACO	A1	Normally open ACO pair			
A1		RJ-45 pin 6 RX-	B1						
B1		RJ-45 pin 3 RX+	CRAFT	A1	Receive (PC pin #2)				
A2		RJ-45 pin 2 TX-		A2	Transmit (PC pin #3)				
B2		RJ-45 pin 1 TX+		A3	Ground (PC pin #5)				
A1				Connecting to a PC/Workstation or router	A4	DTR (PC pin #4)			
B1		RJ-45 pin 2 RX-	LOCAL ALARMS AUD (Audible)		A1	Alarm output pair number 1: Remote audible alarm.			
A2		RJ-45 pin 6 TX-		B1					
B2	RJ-45 pin 3 TX+	N/O		A2	Alarm output pair number 2: Critical audible alarm.				
A1				A3		Alarm output pair number 3: Major audible alarm.			
B1	RJ-45 pin 1 RX+		B3						
A2	RJ-45 pin 6 TX-		LOCAL ALARMS VIS (Visual)	A4	Alarm output pair number 4: Minor audible alarm.				
B2	RJ-45 pin 3 TX+	B4							
ENVIR ALARMS IN	A1	Alarm input pair number 1: Reports closure on connected wires.		N/O	A1	Alarm output pair number 1: Remote visual alarm.			
	B1				B1				
	A2	Alarm input pair number 2: Reports closure on connected wires.	LOCAL ALARMS VIS (Visual)		A2	Alarm output pair number 2: Critical visual alarm.			
	B2				B2				
	A3	Alarm input pair number 3: Reports closure on connected wires.		N/O	A3	Alarm output pair number 3: Major visual alarm.			
	B3				B3				
	A4	Alarm input pair number 4: Reports closure on connected wires.	LOCAL ALARMS VIS (Visual)		A4	Alarm output pair number 4: Minor visual alarm.			
	B4				B4				
	A5	Alarm input pair number 5: Reports closure on connected wires.		N/O	A5	Alarm input pair number 5: Reports closure on connected wires.			
	B5				B5				
	A6	Alarm input pair number 6: Reports closure on connected wires.	N/O		A6	Alarm input pair number 6: Reports closure on connected wires.			
	B6				B6				
A7	Alarm input pair number 7: Reports closure on connected wires.	N/O			A7	Alarm input pair number 7: Reports closure on connected wires.			
B7					B7				
A8	Alarm input pair number 8: Reports closure on connected wires.				N/O	A8	Alarm input pair number 8: Reports closure on connected wires.		
B8						B8			
A9	Alarm input pair number 9: Reports closure on connected wires.					N/O	A9	Alarm input pair number 9: Reports closure on connected wires.	
B9							B9		
A10	Alarm input pair number 10: Reports closure on connected wires.						N/O	A10	Alarm input pair number 10: Reports closure on connected wires.
B10								B10	
A11	Alarm input pair number 11: Reports closure on connected wires.			N/O				A11	Alarm input pair number 11: Reports closure on connected wires.
B11								B11	
A12	Alarm input pair number 12: Reports closure on connected wires.		N/O					A12	Alarm input pair number 12: Reports closure on connected wires.
B12								B12	

If you are using an AIC-I card, contacts provisioned as OUT are 1-4. Contacts provisioned as IN are 13-16.

83020

Table 1-1 Pin Assignments for the AEP

AEP Cable Wire	Backplane Pin	AIC-I Signal	AEP Signal
Black	A1	GND	AEP_GND
White	A2	AE_+5	AEP_+5
Slate	A3	VBAT-	VBAT-
Violet	A4	VB+	VB+
Blue	A5	AE_CLK_P	AE_CLK_P
Green	A6	AE_CLK_N	AE_CLK_N
Yellow	A7	AE_DIN_P	AE_DOUT_P
Orange	A8	AE_DIN_N	AE_DOUT_N
Red	A9	AE_DOUT_P	AE_DIN_P
Brown	A10	AE_DOUT_N	AE_DIN_N

Step 6 Continue with the “NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections” procedure on page 1-36.

Stop. You have completed this procedure.

NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections

Purpose	This procedure describes how to install alarm, timing, LAN, and craft wires.
Tools/Equipment	Wire wrapper #22 or #24 AWG (0.51 mm ² or 0.64 mm ²) alarm wires
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Complete the “DLP-A19 Install Alarm Wires on the Backplane” task on page 1-37 if you are using an AIC or AIC-I card and not using an AEP.
- Step 2** Complete the “DLP-A20 Install Timing Wires on the Backplane” task on page 1-40 as needed. Timing wires are necessary to provision external timing.
- Step 3** Complete the “DLP-A21 Install LAN Wires on the Backplane” task on page 1-41 as needed. LAN wires (or the LAN port on the TCC+/TCC2) are necessary to create an external LAN connection.
- Step 4** Complete the “DLP-A22 Install the TL1 Craft Interface” task on page 1-42 as needed. Craft wires (or the EIA/TIA-232 port on the TCC+/TCC2) are required to access TL1 using the craft interface.



Caution Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.

Step 5 Complete one of the following:

- If you installed an alarm expansion panel (AEP), continue with the “NTP-A120 Install an External Wire-Wrap Panel to the AEP” procedure on page 1-43.
- If you did not install an AEP and you plan to install electrical cards, continue with the “NTP-A9 Install the Electrical Card Cables on the Backplane” procedure on page 1-48.
- If you did not install an AEP and do not plan to install electrical cards, continue with the “NTP-A11 Install the Rear Cover” procedure on page 1-58.

Stop. You have completed this procedure.

DLP-A19 Install Alarm Wires on the Backplane

Purpose	This task installs alarm wires on the backplane so that you can provision external (environmental) alarms and controls with the AIC or AIC-I card. If you are using the AEP, do not perform this task.
Tools/Equipment	Wire wrapper #22 or #24 AWG (0.51 mm ² or 0.64 mm ²) wires 100-ohm shielded BITS clock cable pair #22 or #24 AWG (0.51 mm ² or 0.64 mm ²), twisted-pair T1-type
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	Required to create external alarms and controls without the AEP
Onsite/Remote	Onsite
Security Level	None

Step 1 Using 100-ohm shielded BITS clock cable pair #22 or #24 AWG (0.51 mm² or 0.64 mm²) twisted-pair T1-type wires, wrap the alarm wires on the appropriate wire-wrap pins according to local site practice. Ground the shield of the BITS Input cable at the BITS end. For BITS Output, wrap the ground shield of the BITS cable to the frame ground pin (FG1) located beneath the column of BITS Pins.

Figure 1-15 shows alarm pin assignments for the AIC-I in the Release 3.4 or higher ONS 15454 backplane. Figure 1-16 shows alarm pin assignments for the AIC in a shelf for Release 3.3 and earlier.




Note

The AIC-I requires a shelf assembly running Software Release 3.4.0 or later. The backplane of the ANSI shelf contains a wire-wrap field with pin assignment according to the layout in Figure 1-15. The shelf assembly may be an existing shelf that has been upgraded to 3.4. In this case the backplane pin labeling will appear as indicated in Figure 1-16 on page 1-39. But you must use the pin assignments provided by the AIC-I as shown in Figure 1-15.

For information about attaching ferrites to wire-wrap pin fields, see the “NTP-A12 Install Ferrites” section on page 1-60.

Required Tools and Equipment

Figure 1-15 Cisco ONS 15454 Backplane Pinouts (Release 3.4 or Later)

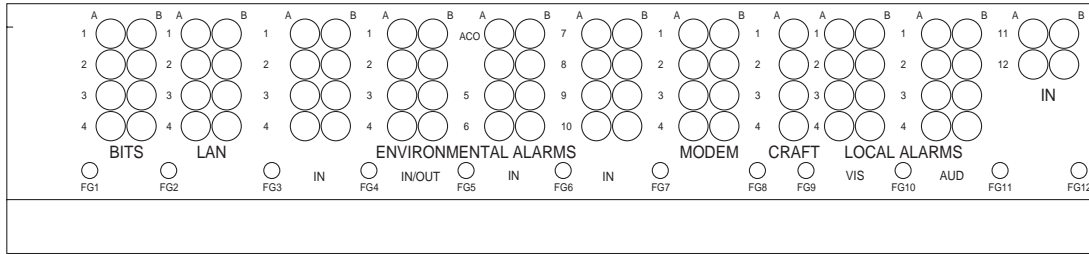

Field	Pin	Function	Field	Pin	Function
BITS	A1	BITS Output 2 negative (-)	ENVIR ALARMS IN/OUT	A1/A13	Normally open output pair number 1
	B1	BITS Output 2 positive (+)		B1/B13	
	A2	BITS Input 2 negative (-)		A2/A14	Normally open output pair number 2
	B2	BITS Input 2 positive (+)		B2/B14	
	A3	BITS Output 1 negative (-)		A3/A15	Normally open output pair number 3
	B3	BITS Output 1 positive (+)		B3/B15	
	A4	BITS Input 1 negative (-)		A4/A16	Normally open output pair number 4
	B4	BITS Input 1 positive (+)		B4/B16	
LAN	Connecting to a hub, or switch		ACO	A1	Normally open ACO pair
	A1	RJ-45 pin 6 RX-		B1	
	B1	RJ-45 pin 3 RX+	CRAFT	A1	Receive (PC pin #2)
	A2	RJ-45 pin 2 TX-		A2	Transmit (PC pin #3)
	B2	RJ-45 pin 1 TX+		A3	Ground (PC pin #5)
	Connecting to a PC/Workstation or router			A4	DTR (PC pin #4)
	A1	RJ-45 pin 2 RX-	LOCAL ALARMS AUD (Audible)	A1	Alarm output pair number 1: Remote audible alarm.
	B1	RJ-45 pin 1 RX+		B1	
A2	RJ-45 pin 6 TX-	A2		Alarm output pair number 2: Critical audible alarm.	
B2	RJ-45 pin 3 TX+	B2			
ENVIR ALARMS IN	A1	Alarm input pair number 1: Reports closure on connected wires.	N/O	A3	Alarm output pair number 3: Major audible alarm.
	B1	Alarm input pair number 2: Reports closure on connected wires.		B3	
	A2	Alarm input pair number 2: Reports closure on connected wires.		A4	Alarm output pair number 4: Minor audible alarm.
	B2	Alarm input pair number 2: Reports closure on connected wires.		B4	
	A3	Alarm input pair number 3: Reports closure on connected wires.	LOCAL ALARMS VIS (Visual)	A1	Alarm output pair number 1: Remote visual alarm.
	B3	Alarm input pair number 3: Reports closure on connected wires.		B1	
	A4	Alarm input pair number 4: Reports closure on connected wires.		A2	Alarm output pair number 2: Critical visual alarm.
	B4	Alarm input pair number 4: Reports closure on connected wires.		B2	
	A5	Alarm input pair number 5: Reports closure on connected wires.	N/O	A3	Alarm output pair number 3: Major visual alarm.
	B5	Alarm input pair number 5: Reports closure on connected wires.		B3	
	A6	Alarm input pair number 6: Reports closure on connected wires.		A4	Alarm output pair number 4: Minor visual alarm.
	B6	Alarm input pair number 6: Reports closure on connected wires.		B4	
A7	Alarm input pair number 7: Reports closure on connected wires.				
B7	Alarm input pair number 7: Reports closure on connected wires.				
A8	Alarm input pair number 8: Reports closure on connected wires.				
B8	Alarm input pair number 8: Reports closure on connected wires.				
A9	Alarm input pair number 9: Reports closure on connected wires.				
B9	Alarm input pair number 9: Reports closure on connected wires.				
A10	Alarm input pair number 10: Reports closure on connected wires.				
B10	Alarm input pair number 10: Reports closure on connected wires.				
A11	Alarm input pair number 11: Reports closure on connected wires.				
B11	Alarm input pair number 11: Reports closure on connected wires.				
A12	Alarm input pair number 12: Reports closure on connected wires.				
B12	Alarm input pair number 12: Reports closure on connected wires.				


If you are using an AIC-I card, contacts provisioned as OUT are 1-4. Contacts provisioned as IN are 13-16.

83020



Note The Modem pin field is not active.

Figure 1-16 Cisco ONS 15454 Backplane Pinouts (Release 3.3 and Earlier)

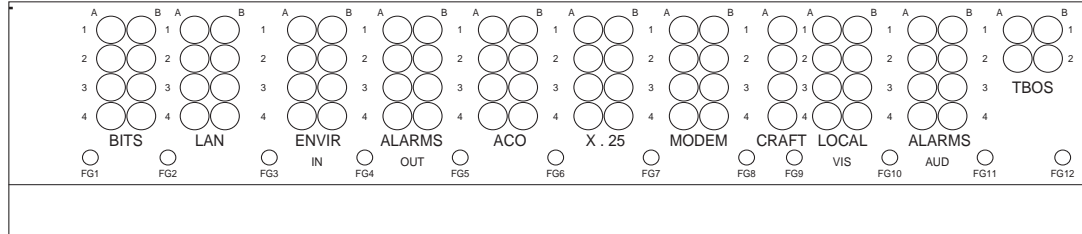

Field	Pin	Function	Field	Pin	Function
BITS	A1	BITS Output 2 negative (-)	ENVIR ALARMS OUT	A1	Normally open output pair number 1
	B1	BITS Output 2 positive (+)		B1	
	A2	BITS Input 2 negative (-)		A2	Normally open output pair number 2
	B2	BITS Input 2 positive (+)		B2	
	A3	BITS Output 1 negative (-)	N/O	A3	Normally open output pair number 3
	B3	BITS Output 1 positive (+)		B3	
	A4	BITS Input 1 negative (-)		A4	Normally open output pair number 4
	B4	BITS Input 1 positive (+)		B4	
LAN	Connecting to a hub, or switch		ACO	A1	Normally open ACO pair
	A1	RJ-45 pin 6 RX-		B1	
	B1	RJ-45 pin 3 RX+	CRAFT	A1	Receive (PC pin #2)
	A2	RJ-45 pin 2 TX-		A2	Transmit (PC pin #3)
	B2	RJ-45 pin 1 TX+		A3	Ground (PC pin #5)
	Connecting to a PC/Workstation or router			A4	DTR (PC pin #4)
	A1	RJ-45 pin 2 RX-	LOCAL ALARMS AUD (Audible)	A1	Alarm output pair number 1: Remote audible alarm.
	B1	RJ-45 pin 1 RX+		B1	
A2	RJ-45 pin 6 TX-	A2		Alarm output pair number 2: Critical audible alarm.	
B2	RJ-45 pin 3 TX+	B2			
ENVIR ALARMS IN	A1	Alarm input pair number 1: Reports closure on connected wires.	N/O	A3	Alarm output pair number 3: Major audible alarm.
	B1	Alarm input pair number 2: Reports closure on connected wires.		B3	
	A2	Alarm input pair number 2: Reports closure on connected wires.		A4	Alarm output pair number 4: Minor audible alarm.
	B2	Alarm input pair number 2: Reports closure on connected wires.		B4	
	A3	Alarm input pair number 3: Reports closure on connected wires.	LOCAL ALARMS VIS (Visual)	A1	Alarm output pair number 1: Remote visual alarm.
	B3	Alarm input pair number 3: Reports closure on connected wires.		B1	
	A4	Alarm input pair number 4: Reports closure on connected wires.		A2	Alarm output pair number 2: Critical visual alarm.
	B4	Alarm input pair number 4: Reports closure on connected wires.		B2	
		N/O	A3	Alarm output pair number 3: Major visual alarm.	
			B3		
			A4	Alarm output pair number 4: Minor visual alarm.	
			B4		

38533



Note The X.25, Modem, and TBOS pin fields are not active.

Step 2 Return to your originating procedure (NTP).

DLP-A20 Install Timing Wires on the Backplane

Purpose	This task installs the timing wires on the backplane.
Tools/Equipment	Wire wrapper 100-ohm shielded BITS clock cable pair #22 or #24 AWG (0.51 mm ² or 0.64 mm ²), twisted-pair T1-type
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	Required if the node is using external BITS timing
Onsite/Remote	Onsite
Security Level	None

Step 1 Using 100-ohm shielded BITS clock cable pair #22 or #24 AWG (0.51 mm² or 0.64 mm²), twisted-pair T1-type, wrap the clock wires on the appropriate wire-wrap pins according to local site practice.

Ground the shield of the BITS input cable at the BITS end. For BITS output, wrap the ground shield of the BITS cable to the frame ground pin (FG1) located beneath the column of BITS Pins. Table 1-2 lists the pin assignments for the BITS timing pin fields.

Table 1-2 External Timing Pin Assignments for BITS

BITS Pin	Tip/Ring	CTC/TL1 Name	Function
A4	ring	BITS-1	Input from BITS device 1
B4	tip	BITS-1	Input from BITS device 1
A3	ring	BITS-1	Output to external device 1
B3	tip	BITS-1	Output to external device 1
A2	ring	BITS-2	Input from BITS device 2
B2	tip	BITS-2	Input from BITS device 2
A1	ring	BITS-2	Output to external device 2
B1	tip	BITS-2	Output to external device 2



Note For more detailed information about timing, refer to the *Cisco ONS 15454 Reference Manual*. To set up system timing, see the “NTP-A28 Set Up Timing” procedure on page 4-21.

Step 2 Return to your originating procedure (NTP).

DLP-A21 Install LAN Wires on the Backplane

Purpose	This task installs the LAN wires on the backplane.
Tools/Equipment	Wire wrapper #22 or #24 AWG (0.51 mm ² or 0.64 mm ²) wire, preferably CAT5 UTP
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	Required if the node is using an external LAN connection
Onsite/Remote	Onsite
Security Level	None



Note

Rather than using the LAN wires, you can use the LAN connection port on the TCC+/TCC2 if preferred. Use either the backplane connection or the TCC+/TCC2 front connection. You cannot use the LAN backplane pins and the LAN connection port on the TCC+/TCC2 simultaneously; however, it is possible for you to make a direct connection from a computer to the LAN connection port on the TCC+/TCC2 while the LAN backplane pins are in use as long as the computer that is connected directly to the TCC+/TCC2 is not connected to a LAN.

Step 1

Using #22 or #24 AWG (0.51 mm² or 0.64 mm²) wire or CAT5 UTP Ethernet cable, wrap the wires on the appropriate wire-wrap pins according to local site practice.



Caution

Cross talk may result if both receive (Rx) and transmit (Tx) pins connect on the same twisted pair of wires from the CAT5 cable. The two Tx pins need to be on one twisted pair, and the two Rx pins need to be on another twisted pair.

A frame ground pin is located beneath each pin field (FG2 for the LAN pin field). Wrap the ground shield of the LAN interface cable to the frame ground pin. Table 1-3 shows the LAN pin assignments.

Table 1-3 LAN Pin Assignments

Pin Field	Backplane Pins	RJ-45 Pins	Function/Color
LAN 1 Connecting to data circuit-terminating equipment (DCE*) (a hub or switch); the ONS 15454 is a DCE	B2	1	TX+ white/green
	A2	2	TX- green
	B1	3	RX+ white/orange
	A1	6	RX- orange
LAN 1 Connecting to data terminal equipment (DTE) (a PC/workstation or router)	B1	1	RX+ white/green
	A1	2	RX- green
	B2	3	TX+ white/orange
	A2	6	TX- orange

**Note**

The TCC2 does not support Ethernet polarity detection; however, the TCC+ supports this feature. If your Ethernet connection has incorrect polarity (this can only occur with cables that have the receive wire pairs flipped) and a TCC2 is installed, a “Lan Connection Polarity Reversed” condition is raised. This condition usually occurs during an upgrade or initial node deployment. To correct the situation, ensure that your Ethernet cable has the correct mapping of the wire-wrap pins.

Step 2 Return to your originating procedure (NTP).

DLP-A22 Install the TL1 Craft Interface

Purpose	This task installs the TL1 craft interface.
Tools/Equipment	Wire wrapper #22 or #24 AWG (0.51 mm ² or 0.64 mm ²) alarm wires
Prerequisite Procedures	NTP-A4 Remove the Backplane Covers, page 1-16
Required/As Needed	Required to access TL1 using the craft backplane pins
Onsite/Remote	Onsite
Security Level	None

**Note**

Rather than using the craft pins, you can use a LAN cable connected to the TCC+/TCC2 EIA/TIA-232 port to access a TL1 craft interface.

Step 1 Using #22 or #24 AWG (0.51 mm² or 0.64 mm²) wire, wrap the craft interface wires on the appropriate wire-wrap pins according to local site practice.

**Note**

For information about attaching ferrites to wire-wrap pin fields, see the “DLP-A31 Attach Ferrites to Wire-Wrap Pin Fields” task on page 1-62.

Step 2 Wrap the ground shield of the craft interface cable to the frame-ground pin.

Wrap the ground wire of your computer cable to pin A3 on the craft pin field. Table 1-4 shows the pin assignments for the CRAFT pin field.

**Note**

You cannot use the craft backplane pins and the EIA/TIA-232 port on the TCC+/TCC2 card simultaneously. Using a combination prevents access to the node or causes a loss in connectivity.

Table 1-4 Craft Interface Pin Assignments

Pin Field	Contact	Function
Craft	A1	Receive
	A2	Transmit
	A3	Ground
	A4	DTR


Step 3 Return to your originating procedure (NTP).

NTP-A120 Install an External Wire-Wrap Panel to the AEP

Purpose	This procedure connects an external wire-wrap panel to the AEP to provide the physical alarm contacts for the AEP.
Tools/Equipment	External wire-wrap panel
Prerequisite Procedures	NTP-A119 Install the Alarm Expansion Panel, page 1-32
Required/As Needed	Required if you installed an AEP
Onsite/Remote	Onsite
Security Level	None

Step 1 Position the lower cover over the AEP. Make sure that the AEP AMP Champ connectors protrude through the cutouts in the lower cover (Figure 1-17).

Figure 1-17 Installing the AEP Cover

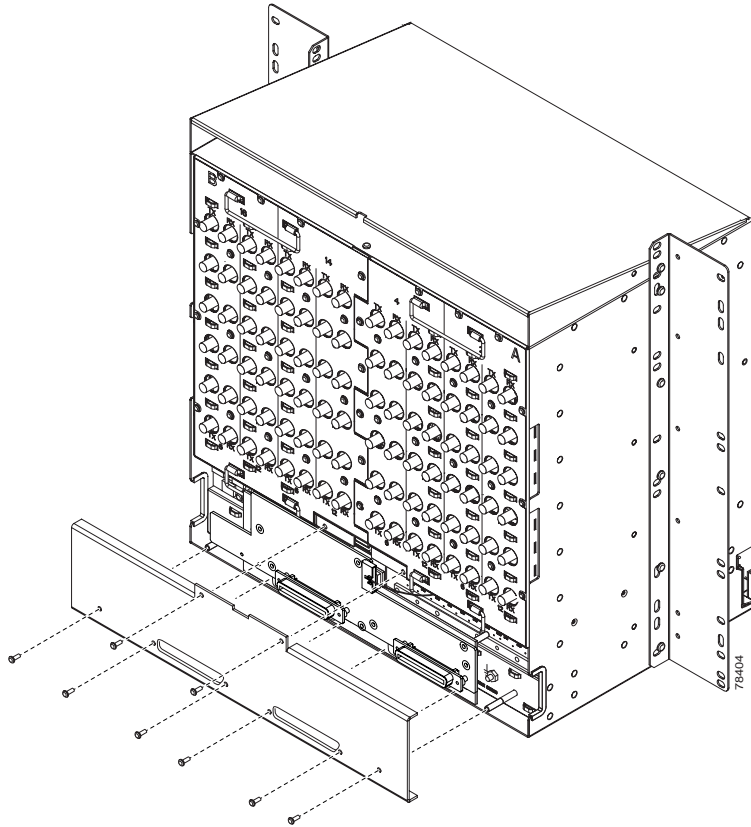

- Step 2** Insert and tighten the eight screws to secure the AEP cover to the AEP.
- Step 3** Connect the cables from the external wire-wrap panel to the AMP Champ connectors on the AEP. Table 1-5 lists the alarm input pin assignments.

Table 1-5 Alarm Input Pin Assignments

AMP Champ Pin	Signal Name	AMP Champ Pin	Signal Name
1	ALARM_IN_1-	27	GND
2	GND	28	ALARM_IN_2-
3	ALARM_IN_3-	29	ALARM_IN_4-
4	ALARM_IN_5-	30	GND
5	GND	31	ALARM_IN_6-
6	ALARM_IN_7-	32	ALARM_IN_8-
7	ALARM_IN_9-	33	GND
8	GND	34	ALARM_IN_10-
9	ALARM_IN_11-	35	ALARM_IN_12-
10	ALARM_IN_13-	36	GND
11	GND	37	ALARM_IN_14-
12	ALARM_IN_15-	38	ALARM_IN_16-

Table 1-5 Alarm Input Pin Assignments (continued)

AMP Champ Pin	Signal Name	AMP Champ Pin	Signal Name
13	ALARM_IN_17-	39	GND
14	GND	40	ALARM_IN_18-
15	ALARM_IN_19-	41	ALARM_IN_20-
16	ALARM_IN_21-	42	GND
17	GND	43	ALARM_IN_22-
18	ALARM_IN_23-	44	ALARM_IN_24-
19	ALARM_IN_25-	45	GND
20	GND	46	ALARM_IN_26-
21	ALARM_IN_27-	47	ALARM_IN_28-
22	ALARM_IN_29-	48	GND
23	GND	49	ALARM_IN_30-
24	ALARM_IN_31-	50	—
25	ALARM_IN_+	51	GND1
26	ALARM_IN_0-	52	GND2

Table 1-6 lists the alarm output pin assignments.

Table 1-6 Alarm Output Pin Assignments

AMP Champ Pin	Signal Name	AMP Champ Pin	Signal Name
1	—	27	COM_0
2	COM_1	28	—
3	NO_1	29	NO_2
4	—	30	COM_2
5	COM_3	31	—
6	NO_3	32	NO_4
7	—	33	COM_4
8	COM_5	34	—
9	NO_5	35	NO_6
10	—	36	COM_6
11	COM_7	37	—
12	NO_7	38	NO_8
13	—	39	COM_8
14	COM_9	40	—
15	NO_9	41	NO_10
16	—	42	COM_10
17	COM_11	43	—

Table 1-6 Alarm Output Pin Assignments (continued)

AMP Champ Pin	Signal Name	AMP Champ Pin	Signal Name
18	NO_11	44	NO_12
19	—	45	COM_12
20	COM_13	46	—
21	NO_13	47	NO_14
22	—	48	COM_14
23	COM_15	49	—
24	NO_15	50	—
25	—	51	GND1
26	NO_0	52	GND2

Figure 1-18 illustrates the alarm input connectors.

Figure 1-18 Alarm Input Connector

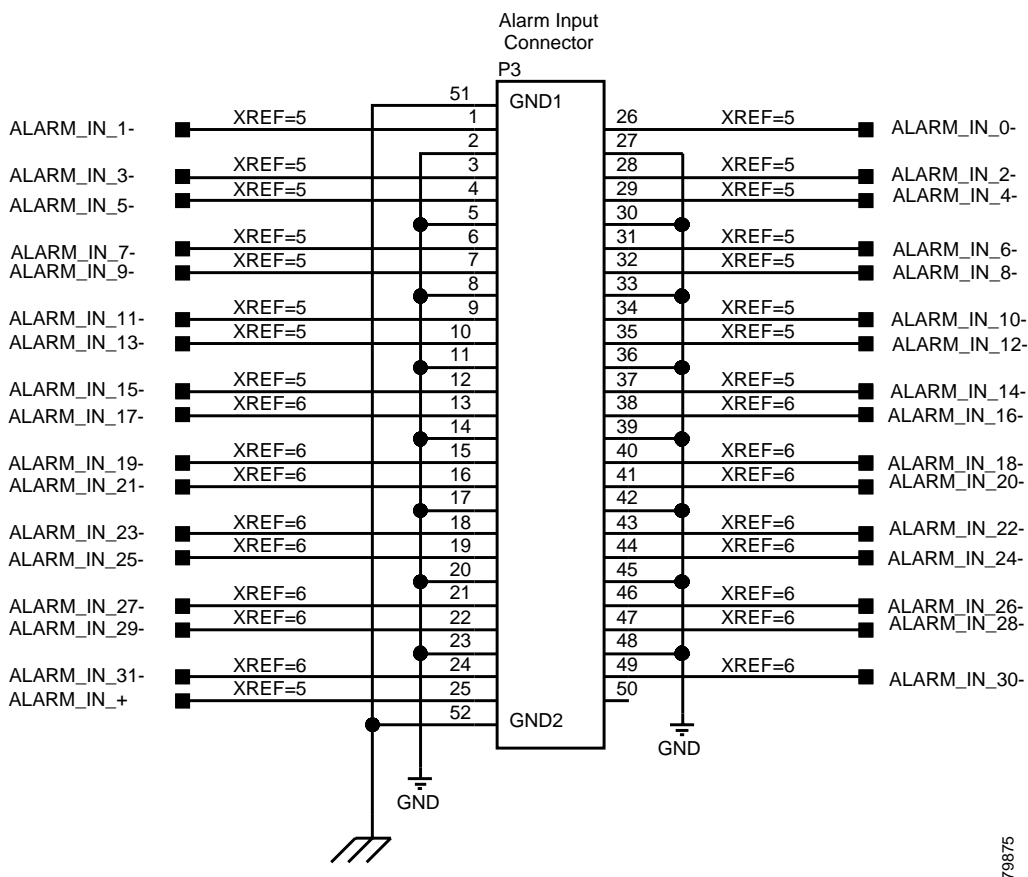
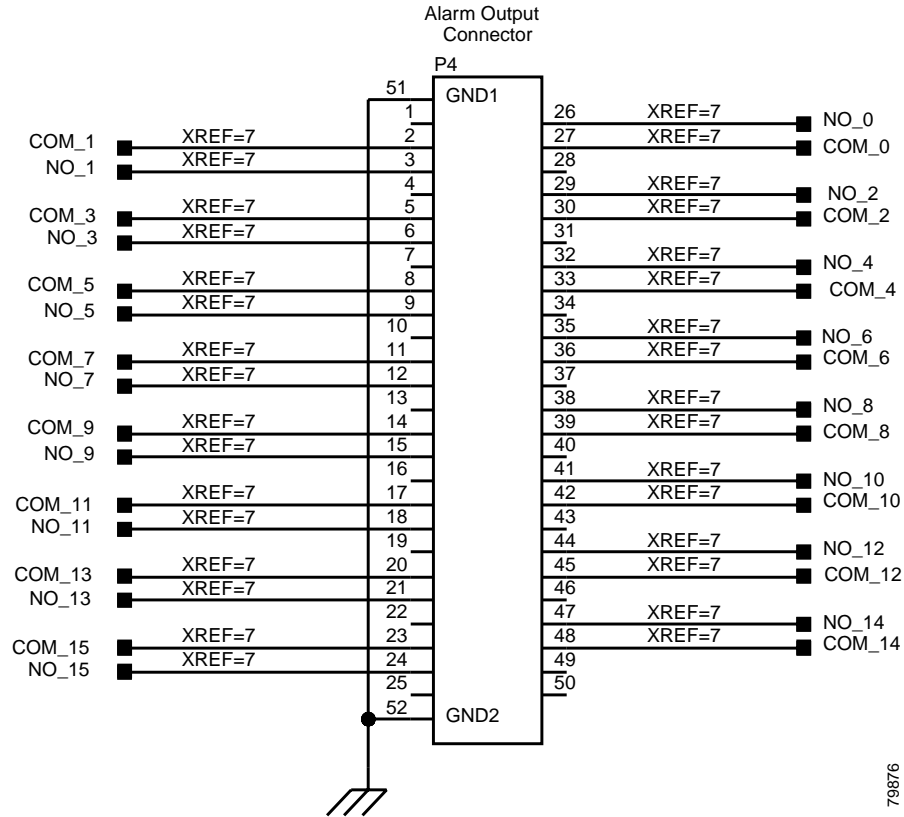


Figure 1-19 illustrates the alarm output connectors.

Figure 1-19 Alarm Output Connector

**Step 4** Complete one of the following:

- If you plan to install electrical cards, continue with the “NTP-A9 Install the Electrical Card Cables on the Backplane” procedure on page 1-48.
- If you do not plan to install electrical cards, continue with the “NTP-A11 Install the Rear Cover” procedure on page 1-58.

Stop. You have completed this procedure.

NTP-A9 Install the Electrical Card Cables on the Backplane

Purpose	Optional EIA backplane covers are typically pre-installed when ordered with the ONS 15454. The following procedure describes how to install the electrical card cables to the backplane. If the shelf was not shipped with the correct EIA interface, you must order and install the correct EIA. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	Wire wrapper Twisted-pair cables BNC insertion tool SMB cable connector
Prerequisite Procedures	NTP-A5 Install the Electrical Interface Assemblies, page 1-17
Required/As Needed	Required if you are using electrical cards
Onsite/Remote	Onsite
Security Level	None


Caution

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.


Note

Refer to the *Cisco ONS 15454 Reference Manual* for more information about EIAs.

-
- Step 1** Complete the “DLP-A23 Install DS-1 Cables Using Electrical Interface Adapters (Balun)” task on page 1-49 as needed. Baluns are used on SMB EIAs to properly terminate DS-1 signals.
- Step 2** To install DS-1 cables using AMP Champ cables, complete the “DLP-A24 Install DS-1 AMP Champ Cables on the AMP Champ EIA” task on page 1-50.
- Step 3** Complete the “DLP-A25 Install Coaxial Cable With BNC Connectors” task on page 1-53 as needed.
- Step 4** Complete the “DLP-A26 Install Coaxial Cable With High-Density BNC Connectors” task on page 1-54 as needed.
- Step 5** Complete the “DLP-A27 Install Coaxial Cable with SMB Connectors” task on page 1-55 as needed.
- Step 6** Continue with the “NTP-A10 Route Electrical Cables” procedure on page 1-56.

Stop. You have completed this procedure.

DLP-A23 Install DS-1 Cables Using Electrical Interface Adapters (Balun)

Purpose	This task installs the DS-1 cables using the electrical interface adapters.
Tools/Equipment	Wire wrapper Twisted-pair cables
Prerequisite Procedures	DLP-A13 Install an SMB EIA, page 1-20
Required/As Needed	Required if you are using an SMB EIA for DS1N-14 cards
Onsite/Remote	Onsite
Security Level	None


Note

All DS-1 cables connected to the ONS 15454 DS-1 ports must terminate with twisted-pair cables to connect to the DS-1 electrical interface adapter. The DS-1 electrical interface adapters project 1.72 inches (43.7 mm) beyond the SMB EIA.


- Step 1** Attach the SMB connector on an adapter to the SMB connector for the port's transmit pair on the backplane.
- Step 2** Attach the SMB connector on an adapter to the SMB connector for the port's receive pair on the backplane.
- Step 3** Terminate the DS-1 transmit and receive cables for the port to the wire-wrap posts on the adapter:
- Using a wire-wrap tool, connect the receive cables to the receive adapter pins on the backplane connector for the desired port.
 - Connect the transmit cables to the transmit adapter pins on the backplane connector for the desired port.
 - Terminate the shield ground wire on the DS-1 cable to ground according to local site practice.



Note If you put DS1N-14 cards in Slots 3 and 15 to form 1:N protection groups, do not wire Slots 3 and 15 for DS-1 electrical interface adapters.

Figure 1-20 shows a ONS 15454 backplane with an SMB EIA. DS-1 electrical interface adapters are attached on both sides of the shelf assembly to create DS-1 twisted-pair termination points.

Figure 1-20 Backplane with an SMB EIA for DS-1 Cables

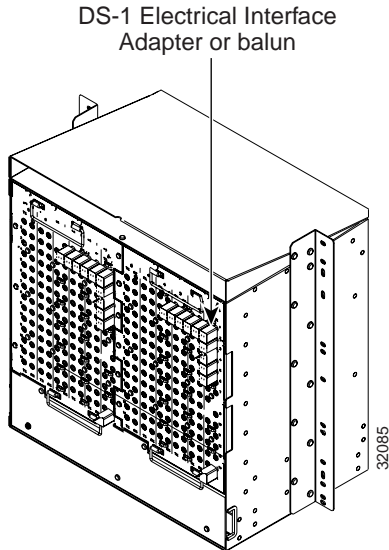

Step 4 Return to your originating procedure (NTP).

DLP-A24 Install DS-1 AMP Champ Cables on the AMP Champ EIA

Purpose	This task installs the DS-1 AMP Champ cables on the AMP Champ EIA.
Tools/Equipment	Wire wrapper Twisted-pair cables
Prerequisite Procedures	DLP-A14 Install the AMP Champ EIA, page 1-22
Required/As Needed	Required if you are using an AMP Champ EIA for DS1N-14 cards
Onsite/Remote	Onsite
Security Level	None

- Step 1** Prepare a 56-wire cable for each DS1N-14 card you will install in the shelf assembly.
- Step 2** Connect the male AMP Champ connector on the cable to the female AMP Champ connector on the ONS 15454 backplane.
- Step 3** Use the clips on the male AMP Champ connector to secure the connection.
The female connector has grooves on the outside edge for snapping the clips into place.
Table 1-7 shows the pin assignments for the AMP Champ connectors on the ONS 15454 AMP Champ EIA.



Note In Table 1-7, the shaded area corresponds to the white/orange binder group. A binder group is a set of 25 pairs of wires coded with an industry-standard color scheme.

Table 1-7 Pin Assignments for AMP Champ Connectors

Signal/Wire	Pin	Pin	Signal/Wire	Signal/Wire	Pin	Pin	Signal/Wire
Tx Tip 1 white/blue	1	33	Tx Ring 1 blue/white	Rx Tip 1 yellow/orange	17	49	Rx Ring 1 orange/yellow
Tx Tip 2 white/orange	2	34	Tx Ring 2 orange/white	Rx Tip 2 yellow/green	18	50	Rx Ring 2 green/yellow
Tx Tip 3 white/green	3	35	Tx Ring 3 green/white	Rx Tip 3 yellow/brown	19	51	Rx Ring 3 brown/yellow
Tx Tip 4 white/brown	4	36	Tx Ring 4 brown/white	Rx Tip 4 yellow/slate	20	52	Rx Ring 4 slate/yellow
Tx Tip 5 white/slate	5	37	Tx Ring 5 slate/white	Rx Tip 5 violet/blue	21	53	Rx Ring 5 blue/violet
Tx Tip 6 red/blue	6	38	Tx Ring 6 blue/red	Rx Tip 6 violet/orange	22	54	Rx Ring 6 orange/violet
Tx Tip 7 red/orange	7	39	Tx Ring 7 orange/red	Rx Tip 7 violet/green	23	55	Rx Ring 7 green/violet
Tx Tip 8 red/green	8	40	Tx Ring 8 green/red	Rx Tip 8 violet/brown	24	56	Rx Ring 8 brown/violet
Tx Tip 9 red/brown	9	41	Tx Ring 9 brown/red	Rx Tip 9 violet/slate	25	57	Rx Ring 9 slate/violet
Tx Tip 10 red/slate	10	42	Tx Ring 10 slate/red	Rx Tip 10 ¹ white/blue	26	58	Rx Ring 10 blue/white
Tx Tip 11 black/blue	11	43	Tx Ring 11 blue/black	Rx Tip 11 white/orange	27	59	Rx Ring 11 orange/white
Tx Tip 12 black/orange	12	44	Tx Ring 12 orange/black	Rx Tip 12 white/green	28	60	Rx Ring 12 green/white
Tx Tip 13 black/green	13	45	Tx Ring 13 green/black	Rx Tip 13 white/brown	29	61	Rx Ring 13 brown/white
Tx Tip 14 black/brown	14	46	Tx Ring 14 brown/black	Rx Tip 14 white/slate	30	62	Rx Ring 14 slate/white
Tx Spare0+ Not applicable	15	47	Tx Spare0- Not applicable	Rx Spare0+ Not applicable	31	63	Rx Spare0- Not applicable
Tx Spare1+ Not applicable	16	48	Tx Spare1- Not applicable	Rx Spare1+ Not applicable	32	64	Rx Spare1- Not applicable

1. Shaded areas correspond to the white/orange binder group. A binder group is a set of 25 pairs of wires coded with an industry-standard color scheme.

Table 1-8 shows the pin assignments for the AMP Champ connectors on the ONS 15454 AMP Champ EIA for a shielded DS-1 cable.

Table 1-8 Pin Assignments for AMP Champ Connectors (Shielded DS1 Cable)

64-Pin Blue Bundle				64-Pin Orange Bundle			
Signal/Wire	Pin	Pin	Signal/Wire	Signal/Wire	Pin	Pin	Signal/Wire
Tx Tip 1 white/blue	1	33	Tx Ring 1 blue/white	Rx Tip 1 white/blue	17	49	Rx Ring 1 blue/white
Tx Tip 2 white/orange	2	34	Tx Ring 2 orange/white	Rx Tip 2 white/orange	18	50	Rx Ring 2 orange/white
Tx Tip 3 white/green	3	35	Tx Ring 3 green/white	Rx Tip 3 white/green	19	51	Rx Ring 3 green/white
Tx Tip 4 white/brown	4	36	Tx Ring 4 brown/white	Rx Tip 4 white/brown	20	52	Rx Ring 4 brown/white
Tx Tip 5 white/slate	5	37	Tx Ring 5 slate/white	Rx Tip 5 white/slate	21	53	Rx Ring 5 slate/white
Tx Tip 6 red/blue	6	38	Tx Ring 6 blue/red	Rx Tip 6 red/blue	22	54	Rx Ring 6 blue/red
Tx Tip 7 red/orange	7	39	Tx Ring 7 orange/red	Rx Tip 7 red/orange	23	55	Rx Ring 7 orange/red
Tx Tip 8 red/green	8	40	Tx Ring 8 green/red	Rx Tip 8 red/green	24	56	Rx Ring 8 green/red
Tx Tip 9 red/brown	9	41	Tx Ring 9 brown/red	Rx Tip 9 red/brown	25	57	Rx Ring 9 brown/red
Tx Tip 10 red/slate	10	42	Tx Ring 10 slate/red	Rx Tip 10 red/slate	26	58	Rx Ring 10 slate/red
Tx Tip 11 black/blue	11	43	Tx Ring 11 blue/black	Rx Tip 11 black/blue	27	59	Rx Ring 11 blue/black
Tx Tip 12 black/orange	12	44	Tx Ring 12 orange/black	Rx Tip 12 black/orange	28	60	Rx Ring 12 orange/black
Tx Tip 13 black/green	13	45	Tx Ring 13 green/black	Rx Tip 13 black/green	29	61	Rx Ring 13 green/black
Tx Tip 14 black/brown	14	46	Tx Ring 14 brown/black	Rx Tip 14 black/brown	30	62	Rx Ring 14 brown/black
Tx Tip 15 black/slate	15	47	Tx Tip 15 slate/black	Rx Tip 15 black/slate	31	63	Rx Tip 15 slate/black
Tx Tip 16 yellow/blue	16	48	Tx Tip 16 blue/yellow	Rx Tip 16 yellow/blue	32	64	Rx Tip 16 blue/yellow


Step 4 Return to your originating procedure (NTP).

DLP-A25 Install Coaxial Cable With BNC Connectors

Purpose	This task installs the coaxial cable with BNC connectors.
Tools/Equipment	None
Prerequisite Procedures	DLP-A12 Install a BNC or High-Density BNC EIA, page 1-18
Required/As Needed	Required if you are using DS3-12, DS3XM-6, or EC-1 cards and are using a non-high-density BNC interface
Onsite/Remote	Onsite
Security Level	None

- Step 1** Place the BNC cable connector over the desired connection point on the backplane.
- Figure 1-21 shows how to connect a coaxial cable to the BNC EIA using a right-angle BNC cable connector.

Figure 1-21 Using a Right-Angle Connector to Install Coaxial Cable with BNC Connectors

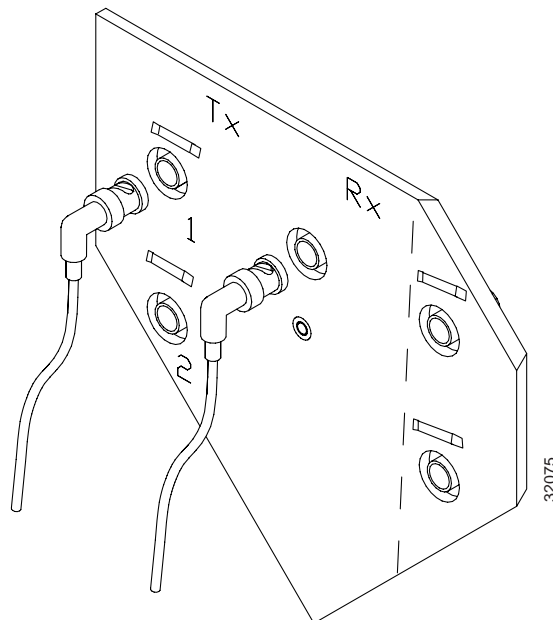

- Step 2** Position the cable connector so that the slot in the connector is over the corresponding notch at the backplane connection point.
- Step 3** Gently push the connector down until the notch backplane connector slides into the slot on the cable connector.
- Step 4** Turn the cable connector clockwise to lock it into place.
- Step 5** Tie wrap or lace the cables to the EIA according to Telcordia standards (GR-1275-CORE) or local site practice.
- Step 6** Route the cables to the nearest side of the shelf assembly through the side cutouts according to local site practice. The rubber-coated edges of the side cutouts prevent the cables from chafing.

**Warning**

Metallic interfaces for connection to outside plant lines (such as T1/E1/T3/E3, etc.) must be connected through a registered or approved device such as CSU/DSU or NT1.

- Step 7** Label all cables at each end of the connection to avoid confusion with cables that are similar in appearance.
- Step 8** Return to your originating procedure (NTP).

DLP-A26 Install Coaxial Cable With High-Density BNC Connectors

Purpose	This task installs the coaxial cable with high-density BNC connectors.
Tools/Equipment	BNC insertion tool
Prerequisite Procedures	DLP-A12 Install a BNC or High-Density BNC EIA, page 1-18
Required/As Needed	Required if you are using DS3-12, DS3XM-6, or EC-1 cards and are using a high-density BNC interface
Onsite/Remote	Onsite
Security Level	None

- Step 1** Place the cable connector over the desired connection point on the backplane.
- Step 2** Using the BNC insertion tool, position the cable connector so that the slot in the connector is over the corresponding notch at the backplane connection point.
- Step 3** Gently push the connector down until the notch backplane connector slides into the slot on the cable connector.
- Step 4** Turn the cable connector clockwise to lock it into place.
- Step 5** Tie wrap or lace the cables to the EIA according to Telcordia standards (GR-1275-CORE) or local site practice.
- Step 6** Route the cables to the nearest side of the shelf assembly through the side cutouts according to local site practice.

**Warning**

Metallic interfaces for connection to outside plant lines (such as T1/E1/T3/E3, etc.) must be connected through a registered or approved device such as CSU/DSU or NT1.

The rubber-coated edges of the side cutouts prevent the cables from chafing.


- Step 7** Return to your originating procedure (NTP).

DLP-A27 Install Coaxial Cable with SMB Connectors

Purpose	This task installs the coaxial cable with SMB connectors.
Tools/Equipment	SMB cable connector
Prerequisite Procedures	DLP-A13 Install an SMB EIA, page 1-20
Required/As Needed	Required if you are using DS3-12, DS3XM-6, or EC-1 cards and are using an SMB interface rather than a BNC interface
Onsite/Remote	Onsite
Security Level	None

- Step 1** Place the SMB cable connector over the desired connection point on the backplane (Figure 1-21).
- Step 2** Gently push the connector until it clicks into place.
- Step 3** Tie wrap or lace the cables to the EIA according to Telcordia standards (GR-1275-CORE) or local site practice.
- Step 4** Route the cables to the nearest side of the shelf assembly into rack runs according to local site practice.

Figure 1-22 Installing Coaxial Cable with SMB Connectors

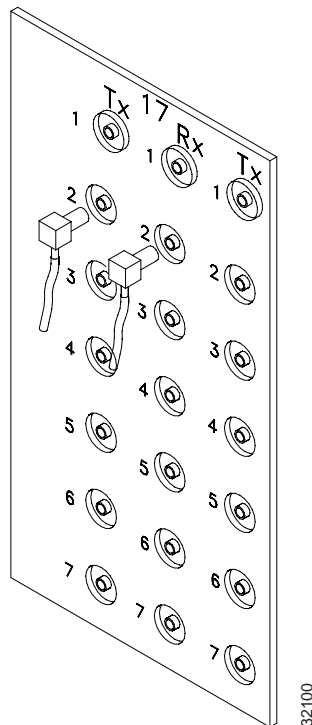

Warning

Metallic interfaces for connection to outside plant lines (such as T1/E1/T3/E3, etc.) must be connected through a registered or approved device such as CSU/DSU or NT1.

- Step 5** Label the transmit, receive, working, and protect cables at each end of the connection to avoid confusion with cables that are similar in appearance.

Step 6 Return to your originating procedure (NTP).

NTP-A10 Route Electrical Cables

Purpose	The following procedure explains how to route and manage electrical (backplane) cables. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	RG179, RG59 (735A) # 26 AWG cable, or RG59 (734A) # 20 AWG cable
Prerequisite Procedures	NTP-A9 Install the Electrical Card Cables on the Backplane, page 1-48
Required/As Needed	Required if using electrical cards
Onsite/Remote	Onsite
Security Level	None

- Step 1** Complete the “DLP-A28 Route Coaxial Cables” task on page 1-56 as needed.
- Step 2** Complete the “DLP-A29 Route DS-1 Twisted-Pair Cables” task on page 1-58 as needed.
- Step 3** Continue with the “NTP-A11 Install the Rear Cover” procedure on page 1-58 as needed.
- Stop. You have completed this procedure.**
-

DLP-A28 Route Coaxial Cables

Purpose	This task routes the coaxial cables.
Tools/Equipment	RG179, RG59 (735A) # 26 AWG cable, or RG59 (734A) # 20 AWG cable
Prerequisite Procedures	One or more of the following tasks, as needed: <ul style="list-style-type: none"> • DLP-A25 Install Coaxial Cable With BNC Connectors, page 1-53 • DLP-A26 Install Coaxial Cable With High-Density BNC Connectors, page 1-54 • DLP-A27 Install Coaxial Cable with SMB Connectors, page 1-55
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

- Step 1** Tie wrap or lace the coaxial cables according to local site practice and route the cables through the side cutouts on either side of the ONS 15454. The rubber coated edges of the side cutouts prevent the cables from chafing.
- Step 2** Use short lengths of pigtail RG179 to terminate the shelf assembly.


Step 3 Use standard RG59 (735A) cable connected to the RG179 for the remainder of the cable run. When using a 10-foot (3.05 m) section of the RG179, you can attach a maximum length of 437 feet (133 m) of RG59 (735A). When using a 30-foot (9.1 m) section of RG179, you can attach a maximum length of 311 feet (94.8 m) of RG59 (735A).

When using the RG179 cable, the maximum distance available (122 feet, 37.2 m) is less than the maximum distance available with standard RG59 (735A) cable (306 feet, 93.3 m). The maximum distance when using the RG59 (734A) cable is 450 feet (137.2 m). The shorter maximum distance available with the RG179 is due to a higher attenuation rate for the thinner cable. Attenuation rates are calculated using a DS-3 signal:

- For RG179, the attenuation rate is 59 dB/kft (dB per kilo-foot) at 22 MHz.
- For RG59 (735A), the attenuation rate is 23 dB/kft at 22 MHz.

Use a figure of 5.0 for total cable loss when making calculations. Figure 1-23 shows an example of proper coaxial cable routing.

Figure 1-23 Routing Coaxial Cable (SMB EIA Backplane)

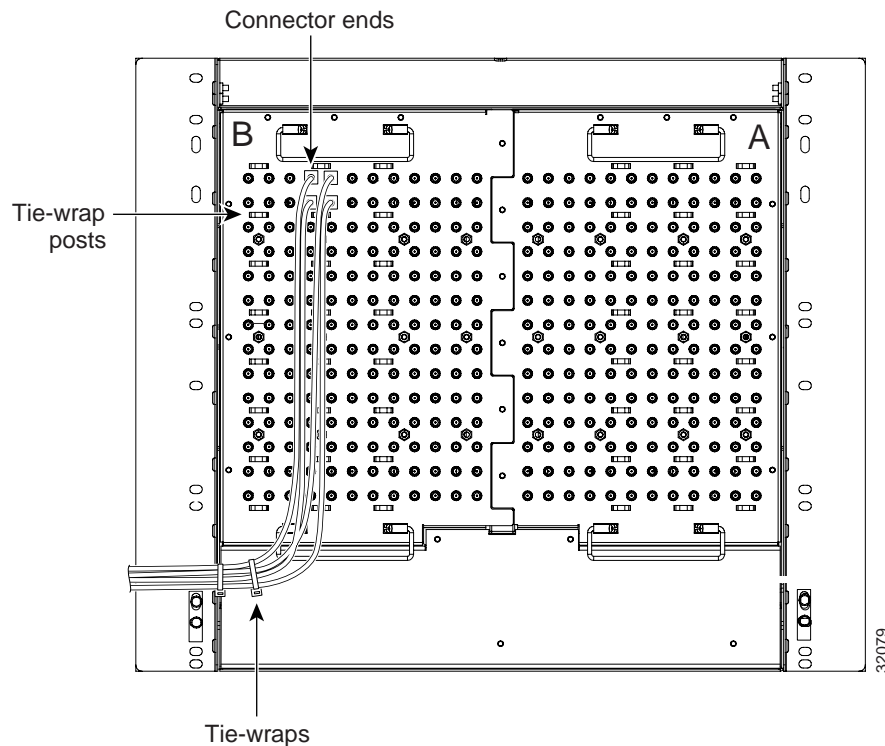

Step 4 Return to your originating procedure (NTP).

DLP-A29 Route DS-1 Twisted-Pair Cables

Purpose	This task routes the DS-1 twisted-pair cables.
Tools/Equipment	None
Prerequisite Procedures	DLP-A23 Install DS-1 Cables Using Electrical Interface Adapters (Balun), page 1-49
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

Step 1 Verify the following:

- DS-1 electrical interface adapters are installed on every transmit and receive connector for DS-1 ports.
- Wire-wrap posts on the DS-1 electrical interface adapters are used to connect the terminated incoming cables.

Step 2 Tie-wrap or lace the twisted-pair cables according to local site practice and route the cables into the side cutouts on either side of the ONS 15454.



Note SMB EIAs feature cable-management eyelets for tie wrapping or lacing cables to the cover panel.

Step 3 Return to your originating procedure (NTP).

NTP-A11 Install the Rear Cover

Purpose	The following procedure explains how to install the rear cover.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver
Prerequisite Procedures	None
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

Step 1 Locate the three screws that run vertically along both edges of the backplane (Figure 1-24).

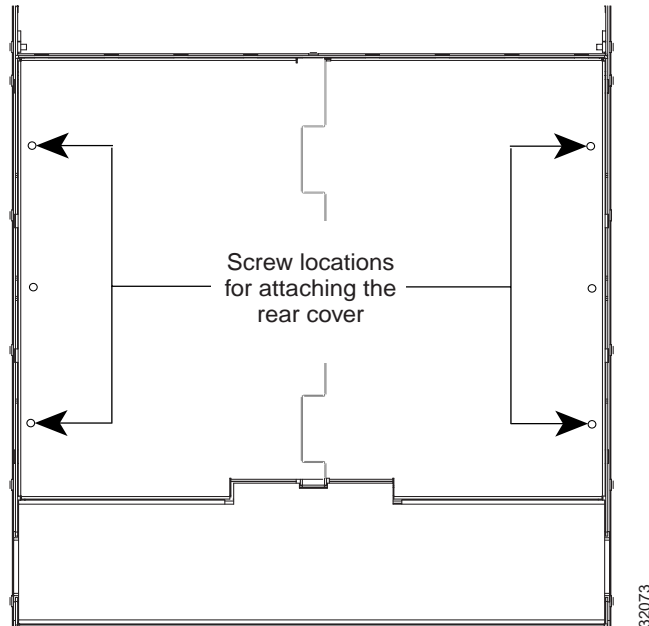
Figure 1-24 Backplane Attachment for the Rear Cover

Tip Only six screws (three on each side) line up with the screw slots on the mounting brackets, making the screws easy to locate.

- Step 2** Loosen the top and bottom screws on one edge of the backplane to provide room to slide the mounting brackets into place using the u-shaped screw slots on each end.
- Step 3** Slide one of the mounting brackets into place and tighten the screws.
- Step 4** Repeat Steps 2 and 3 for the second mounting bracket.
- Step 5** Attach the cover by hanging it from the mounting screws on the back of the mounting brackets and pulling it down until it fits snugly into place.

Figure 1-25 shows rear cover installation using spacers.

Figure 1-25 Installing the Rear Cover with Spacers

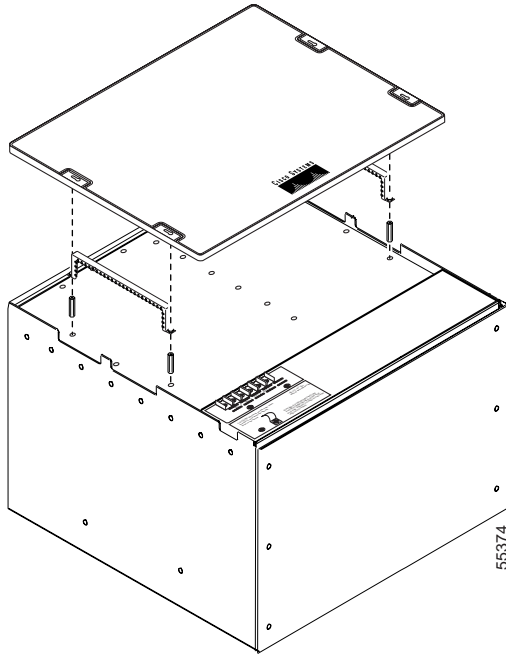

- Step 6** Continue with the “NTP-A12 Install Ferrites” procedure on page 1-60.
Stop. You have completed this procedure.
-

NTP-A12 Install Ferrites

Purpose	This procedure describes how to attach ferrites.
Tools/Equipment	Oval and/or block ferrites
Prerequisite Procedures	NTP-A6 Install the Power and Ground, page 1-24 NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections, page 1-36
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

- Step 1** Complete the “DLP-A30 Install Ferrites to Power Cabling” task on page 1-61 as needed.
- Step 2** Complete the “DLP-A31 Attach Ferrites to Wire-Wrap Pin Fields” task on page 1-62 as needed.
- Step 3** Continue with the “NTP-A13 Perform the Shelf Installation Acceptance Test” procedure on page 1-65.
Stop. You have completed this procedure.
-

DLP-A30 Install Ferrites to Power Cabling

Purpose	This task attaches ferrites to power cabling. Use a single oval ferrite (TDK ZCAT2035-0930) and/or one block ferrite (Fair Rite 0443164151) for each pair of cables, depending on the EIA.
Tools/Equipment	Oval and/or block ferrites
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

Step 1 If you are using block ferrites, wrap the cables once around and through the block ferrites.

Step 2 If you are using oval ferrites, pull the cable straight through the oval ferrites.




Note If you are using both block and oval ferrites, place the oval ferrite between the ONS 15454 and the block ferrite as shown in Figure 1-26 on page 1-61.



Note Place the oval ferrite as close to the power terminals as possible and place the block ferrite within 5 to 6 inches (127 to 152 mm) of the power terminals.

Figure 1-26 Attaching Block and Oval Ferrites to Power Cabling

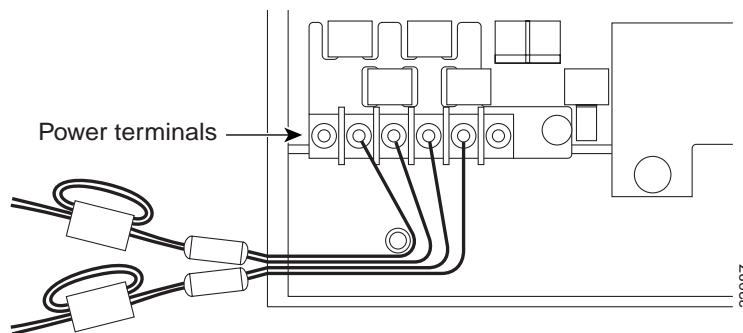


Step 3 Return to your originating procedure (NTP).

DLP-A31 Attach Ferrites to Wire-Wrap Pin Fields

Purpose	This task attaches ferrites to wire-wrap pin fields. Use an oval ferrite (TDK ZCAT1730-0730) and block ferrite (Fair Rite 0443164151) for each pair of cables. Figure 1-27 on page 1-62 shows the suggested method for attaching ferrites to wire-wrap pin fields.
Tools/Equipment	Oval and block ferrites
Prerequisite Procedures	NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections, page 1-36
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Wrap the cables once around and through the block ferrites and pull the cables straight through the oval ferrites.
- Step 2** Place the oval ferrite as close to the wire-wrap pin field as possible and between the ONS 15454 and the block ferrite, as shown in Figure 1-27. The block ferrite should be within 5 to 6 inches (127 to 152 mm) of the wire-wrap pin field.

Figure 1-27 Attaching Ferrites to Wire-Wrap Pin Fields

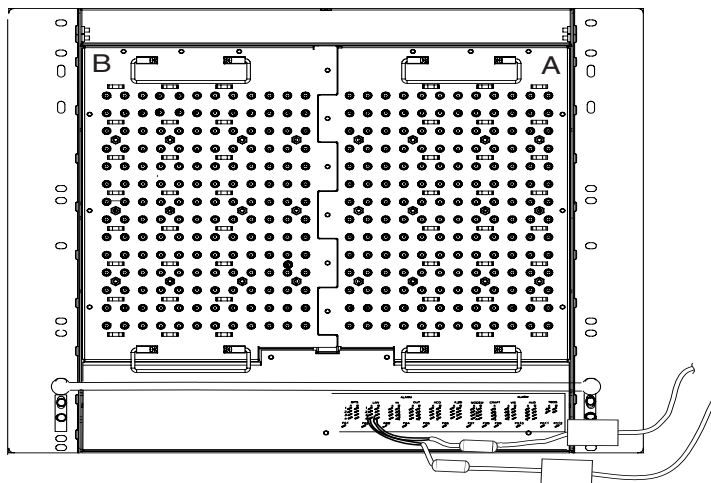

- Step 3** Return to your originating procedure (NTP).
-

NTP-A238 Install Optional DWDM Equipment

Purpose	Use this procedure to install the optional DWDM assemblies. This procedure applies only to DWDM (Software R4.5) nodes.
Tools/Equipment	# 2 Phillips screwdriver Crimping tool (large enough for #10 - #14 AWG) #14 AWG wire
Prerequisite Procedures	NTP-A2 Install the Shelf Assembly, page 1-6
Required/As Needed	As Needed
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Complete the “DLP-A412 Install the DCU Shelf Assembly” task on page 1-63 as needed.
- Step 2** Complete the “DLP-A413 Install the Fiber Patch Panel Shelf” task on page 1-64 as needed.
- Step 3** Complete the “DLP-A414 Install the Fiber Storage Shelf” task on page 1-64 as needed.
- Step 4** Complete the “DLP-A415 Install the Air Ramp” task on page 1-65 as needed.
- Stop. You have completed this procedure.**
-

DLP-A412 Install the DCU Shelf Assembly

Purpose	If you are installing dispersion compensation modules, use this task to install the DCU chassis.
Tools/Equipment	#2 Phillips screwdriver Crimping Tool #14 AWG wire and lug
Prerequisite Procedures	None
Required/As Needed	As Needed
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** The DCU chassis requires 1-RU in a standard 19-inch or 23-inch rack. Locate the RMU space specified in your site plan. Refer to *Cisco ONS 15454 Troubleshooting Guide* for typical DWDM site layout plans.
- Step 2** Two sets of mounting brackets are included with the DCU mounting kit, one set each, for 19-inch or 23-inch racks. Verify that your chassis is equipped with the correct set of brackets for your rack. Change the brackets as required.
- Step 3** Align the chassis with the rack mounting screw holes; one at a time insert and tighten the four screws.

**Warning**

This equipment must be properly grounded per local standards and in compliance with NEBS. If not properly grounded—personal injury or equipment failure could occur.

- Step 4** Connect a frame ground to the ground terminal provided on either side of the chassis. Use minimum #14 AWG wire.
- Step 5** Return to your originating procedure (NTP).

DLP-A413 Install the Fiber Patch Panel Shelf

Purpose	Use this task to install the fiber patch panel shelf.
Tools/Equipment	#2 Phillips screwdriver
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

- Step 1** The Fiber Patch Panel shelf requires 1-RU in a standard 19-inch or 23-inch rack. Locate the RMU space specified in your site plan. Refer to *Cisco ONS 15454 Troubleshooting Guide* for typical DWDM site layout plans.
- Step 2** Verify that the mounting brackets attached to the unit are correct for your rack size. Complete “DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack” task on page 1-7 as required.
- Step 3** Align the chassis with the rack mounting screw holes, then insert and tighten the four screws.
- Step 4** Return to your originating procedure (NTP).

DLP-A414 Install the Fiber Storage Shelf

Purpose	Use this task to install the fiber storage shelf.
Tools/Equipment	#2 Phillips screwdriver
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

- Step 1** The fiber storage shelf requires 1-RU in a standard 19-inch or 23-inch rack. Locate the RMU space specified in your site plan. Refer to *Cisco ONS 15454 Troubleshooting Guide* for typical DWDM site layout plans.
- Step 2** Verify that the mounting brackets attached to the unit are correct for your rack size. Complete “DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack” task on page 1-7 as required.

- Step 3** Align the chassis with the rack mounting screw holes, insert the screws (4) and tighten.
- Step 4** Return to your originating procedure (NTP).

DLP-A415 Install the Air Ramp

Purpose	Use this task to install the air ramp.
Tools/Equipment	#2 Phillips screwdriver
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

- Step 1** The Air Ramp requires 1-RU in a standard 19-inch or 23-inch rack. Locate the RMU space specified in your site plan. Refer to *Cisco ONS 15454 Troubleshooting Guide* for typical DWDM site layout plans.
- Step 2** Verify that the mounting brackets attached to the unit are correct for your rack size. Complete “DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack” task on page 1-7 as required.
- Step 3** Align the chassis with the rack mounting screw holes; one at a time insert the four screws and tighten them.
- Step 4** Return to your originating procedure (NTP).

NTP-A13 Perform the Shelf Installation Acceptance Test

Purpose	Use this procedure to perform a shelf installation acceptance test.
Tools/Equipment	Voltmeter
Tools/Equipment	Oval and/or block ferrites
Prerequisite Procedures	Applicable procedures in Chapter 1
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

- Step 1** Complete Table 1-9 by verifying that each applicable procedure was completed.

Table 1-9 Shelf Installation Task Summary

Description	Completed
NTP-A1 Unpack and Inspect the ONS 15454 Shelf Assembly, page 1-4	
NTP-A2 Install the Shelf Assembly, page 1-6	
NTP-A3 Open and Remove the Front Door, page 1-13	

Table 1-9 Shelf Installation Task Summary (continued)

Description	Completed
NTP-A4 Remove the Backplane Covers, page 1-16	
NTP-A5 Install the Electrical Interface Assemblies, page 1-17	
NTP-A6 Install the Power and Ground, page 1-24	
NTP-A7 Install the Fan-Tray Assembly, page 1-30	
NTP-A119 Install the Alarm Expansion Panel, page 1-32	
NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections, page 1-36	
NTP-A120 Install an External Wire-Wrap Panel to the AEP, page 1-43	
NTP-A9 Install the Electrical Card Cables on the Backplane, page 1-48	
NTP-A10 Route Electrical Cables, page 1-56	
NTP-A11 Install the Rear Cover, page 1-58	
NTP-A12 Install Ferrites, page 1-60	

Step 2 Complete the “DLP-A32 Inspect the Shelf Installation and Connections” task on page 1-66.

Step 3 Complete the “DLP-A33 Measure Voltage” task on page 1-67.

Step 4 Continue with the “NTP-A15 Install the Common Control Cards” procedure on page 2-2.

Stop. You have completed this procedure.

DLP-A32 Inspect the Shelf Installation and Connections

Purpose	Use this task to inspect the shelf installation and connections and to verify that everything is installed and connected properly.
Tools/Equipment	None
Prerequisite Procedures	Complete Table 1-9 on page 1-65.
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

Step 1 Check each wire and cable connection to make sure all cables are locked securely. If a wire or cable is loose, return to the appropriate procedure in this chapter to correct it.

Step 2 To check that the backplane is seated correctly, verify that the screw holes and the backplane interface card holes align properly and that the A and B connectors interlock.

Step 3 Return to your originating procedure (NTP).

DLP-A33 Measure Voltage

Purpose	This task measures the power to verify correct power and returns.
Tools/Equipment	Voltmeter
Prerequisite Procedures	Complete Table 1-9 on page 1-65.
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

- Step 1** Using a voltmeter, verify the office ground and power. Figure 1-10 on page 1-28 shows the power terminals.
- Place the black lead (positive) on the frame ground on the bay. Hold it there while completing Step b.
 - Place the red lead (negative) on the fuse power points and alarm panel to verify that they read between -42 VDC and -57 VDC (power) or 0 (return ground).
- Step 2** Using a voltmeter, verify the shelf ground and power wiring:
- Place the black lead (positive) on the RET1 and the red lead on the BAT1 point. Verify a reading between -42 VDC and -57 VDC. If there is no voltage, check the following and correct if necessary:
 - Battery and ground are reversed to the shelf.
 - Battery is open or missing.
 - Return is open or missing.
 - Repeat Step 2 for the RET2 and BAT2 if the B power feed is provided
- Step 3** Return to your originating procedure (NTP).
-

■ Required Tools and Equipment



Install Cards and Fiber-Optic Cable



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This chapter explains how to install the Cisco ONS 15454 cards and fiber-optic cable (fiber). ONS 15454 cards have symbols and are color-coded with their related slots.

Before You Begin

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A15 Install the Common Control Cards, page 2-2—Complete this procedure first before installing any other cards.

Complete the following procedures only for non-DWDM nodes (Software Release 4.1 and earlier):

2. NTP-A16 Install the OC-N Cards, page 2-13—Complete as needed.
3. NTP-A249 Install the Transponder and Muxponder Cards, page 2-15—Complete as needed.
4. NTP-A17 Install the Electrical Cards, page 2-16—Complete as needed.
5. NTP-A246 Install Ethernet Cards and Connectors, page 2-18—Complete as needed.
6. NTP-A116 Remove and Replace a Card, page 2-27—Complete this procedure as needed to remove and replace a card, including deleting the card from Cisco Transport Controller (CTC) and changing an OC-N card without losing the card's provisioning.
7. NTP-A247 Install Fiber-Optic Cables on OC-N Cards, page 2-30—Complete this procedure to install fiber on OC-N cards or Ethernet Gigabit Interface Converters (GBICs).

Go to Chapter 5, "Turn Up a DWDM Node" before completing any of the following DWDM-only (Software R4.5) procedures:

1. NTP-A242 Install the DWDM Cards, page 2-23—Complete as needed.
2. NTP-A243 Install the DWDM Dispersion Compensating Cards, page 2-25—Complete as needed.
3. NTP-A244 Install Fiber-Optic Cables on DWDM Cards, page 2-42—Complete as needed.

Complete the following procedures as needed for all nodes (Software R4.5 and earlier):

- NTP-A115 Preprovision a Slot, page 2-29—Complete this procedure as needed to provision an empty card slot with a card that will be installed later.
- NTP-A245 Route Fiber-Optic Cables, page 2-57—Complete as needed.
- NTP-A20 Replace the Front Door, page 2-58—If the front door was removed, complete this procedure to replace the front door and ground strap after installing cards and fiber.

**Warning**

Only trained and qualified personnel should be allowed to install, replace, or service this equipment.

**Caution**

Unused card slots should be filled with a blank faceplate (Cisco P/N 15454-BLANK). The blank faceplate ensures proper airflow when operating the ONS 15454 without the front door attached, although Cisco recommends that the front door remain attached.

**Note**

Protection schemes and EIA types can affect slot compatibility. Refer to Table 2-1, Table 2-2, and the *Cisco ONS 15454 Reference Manual* for more detailed compatibility information.

NTP-A15 Install the Common Control Cards

Purpose	This procedure describes how to install the common control cards.
Tools/Equipment	Redundant TCC+/TCC2 cards Redundant XC, XCVT, or XC10G (cross-connect) cards AIC/AIC-I card
Prerequisite Procedures	NTP-A13 Perform the Shelf Installation Acceptance Test, page 1-65
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

**Warning**

During this procedure, wear grounding wrist straps to avoid ESD damage to the card. Do not directly touch the backplane with your hand or any metal tool due to electrical hazard.

**Caution**

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.

**Note**

If you install a card incorrectly, the FAIL LED flashes continuously.

**Note**

The XC/XCVT/XC10G cross-connect cards are not compatible with DWDM cards (amplifier, add/drop, combiner, demultiplexer, dispersion compensator, or multiplexer).



Note If protective clips are installed on the backplane connectors of the cards, remove the clips before installing the cards.

- Step 1** If you plan to install XC/XCVT cards, review Table 2-1 to determine card/slot compatibility. If you plan to install XC10G cards, review Table 2-2 on page 2-5 to determine card/slot compatibility.
- Step 2** Complete the “DLP-A36 Install the TCC+/TCC2 Cards” task on page 2-7.
- Step 3** If you will not be installing DWDM cards, complete the “DLP-A37 Install the XC, XCVT, or XC10G Cards” task on page 2-9. If you are installing a DWDM shelf, omit this step and continue with Step 4.
- Step 4** Complete the “DLP-A38 Install the Alarm Interface Controller or Alarm Interface Controller–International Card” task on page 2-11, if necessary.
- Step 5** If you discover that you installed the wrong card in a slot, see the “NTP-A116 Remove and Replace a Card” procedure on page 2-27.
- Step 6** Install the traffic cards. To determine the appropriate procedure, see the NTP list in Before You Begin, page 2-1.

In Table 2-1, X indicates that a card is supported in the slot. For information on exceptions based on protection schemes and backplanes, see the Card Protection chapter of the *Cisco ONS 15454 Reference Guide*. For descriptions of the card and slot symbols, refer to the Shelf and Backplane Hardware chapter of the *Cisco ONS 15454 Reference Guide*.

Table 2-1 Card and Slot Compatibility for the XC and XCVT Cards

Slot	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Type	MS ¹	MS ¹	MS ¹	MS ¹	HS ²	HS	TCC	XC	AIC	XC	TCC	HS	HS	MS ¹	MS ¹	MS ¹	MS ¹
TCC+							X				X						
XC/XCVT								X		X							
AIC									X								
AIC-I									X								
DS1-14	X	X	X	X	X	X						X	X	X	X	X	X
DS1N-14	X ³	X ³	X	X ³	X ³	X ³						X ³	X ³	X ³	X	X ³	X ³
DS3-12	X	X	X	X	X	X ⁴						X ⁴	X	X	X	X	X
DS3-12E	X	X	X	X	X	X ⁴						X ⁴	X	X	X	X	X
DS3N-12	X ³	X ³	X	X ³	X ³	X ^{3,4}						X ^{3,4}	X ³	X ³	X	X ³	X ³
DS3N-12E	X ³	X ³	X	X ³	X ³	X ^{3,4}						X ^{3,4}	X ³	X ³	X	X ³	X ³
DS3XM-6	X	X	X	X	X	X ⁴						X ⁴	X	X	X	X	X
EC1-12	X	X	X	X	X	X ⁵						X ⁵	X	X	X	X	X
E100T-12	X	X	X	X	X	X						X	X	X	X	X	X
E1000-2	X	X	X	X	X	X						X	X	X	X	X	X
E100T-G	X	X	X	X	X	X						X	X	X	X	X	X
E1000-2-G	X	X	X	X	X	X						X	X	X	X	X	X
G1000-4	Not supported with XC/XCVT cards. Requires XC10G cards.																
G1K-4					X	X						X	X				

Table 2-1 Card and Slot Compatibility for the XC and XCVT Cards (continued)

Slot	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Type	MS ¹	MS ¹	MS ¹	MS ¹	HS ²	HS	TCC	XC	AIC	XC	TCC	HS	HS	MS ¹	MS ¹	MS ¹	MS ¹
ML100-12					X	X						X	X				
ML1000-2					X	X						X	X				
OC3 IR 4/STM1 SH 1310	X	X	X	X	X	X						X	X	X	X	X	X
OC3IR/STM1SH 1310-8	Not supported with XC/XCVT cards. Requires XC10G cards.																
OC12 IR STM4 SH 1310	X	X	X	X	X	X						X	X	X	X	X	X
OC12 LR/STM4 LH 1310	X	X	X	X	X	X						X	X	X	X	X	X
OC12 LR/STM4 LH 1550	X	X	X	X	X	X						X	X	X	X	X	X
OC12 IR/STM4 SH 1310-4	Not supported with XC/XCVT cards. Requires XC10G cards.																
OC48 IR 1310 ⁶					X	X						X	X				
OC48 LR 1550					X	X						X	X				
OC48 IR/STM16 SH AS 1310					X	X						X	X				
OC48 LR/STM16 LH AS 1550					X	X						X	X				
OC48-ELR/STM 16 EH 100 GHz					X	X						X	X				
OC48 ELR 200 GHz					X	X						X	X				
OC192 SR/STM64 IO 1310	Not supported with XC/XCVT cards. Requires XC10G cards.																
OC192 IR/STM64 SH 1550	Not supported with XC/XCVT cards. Requires XC10G cards.																
OC192 LR/STM64 LH 1550	Not supported with XC/XCVT cards. Requires XC10G cards.																
OC192 LR/STM64 LH ITU 15xx.xx	Not supported with XC/XCVT cards. Requires XC10G cards.																
TXP_MR_2.5G	X	X	X	X	X	X						X	X	X	X	X	X
TXPP_MR_2.5G	X	X	X	X	X	X						X	X	X	X	X	X

Table 2-1 Card and Slot Compatibility for the XC and XCVT Cards (continued)

Slot	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Type	MS ¹	MS ¹	MS ¹	MS ¹	HS ²	HS	TCC	XC	AIC	XC	TCC	HS	HS	MS ¹	MS ¹	MS ¹	MS ¹
TXP_MR_10G	X	X	X	X	X	X						X	X	X	X	X	X
MXP_2.5G_10G	X	X	X	X	X	X						X	X	X	X	X	X

1. MS identifies slots 1 to 4 and 14 to 17 (“multispeed” slot).
2. HS identifies slots 5, 6, 12, and 13 (“high-speed” slot).
3. When not used in a 1:N configuration, a DS1 or DS3 card can be installed in this slot.
4. This DS3 card cannot be used in this slot if used with a high-density EIA or in a 1:N configuration.
5. EC1 cards cannot be used in this slot if used with a high-density EIA.
6. The OC48AS will operate in the high speed slots with the XC/XCVT in R3.4 and later. In Release R3.3, OC48AS with XC/XCVT is not supported.

In Table 2-2, X indicates that a card is supported in the slot. For information on exceptions based on protection schemes and backplanes, see the Card Protection chapter of the *Cisco ONS 15454 Reference Guide*. For descriptions of the card and slot symbols, refer to Table 1-13 in the Shelf and Backplane Hardware chapter of the *Cisco ONS 15454 Reference Guide*.

The XC10G card requires the ANSI shelf with high-speed fans.

Table 2-2 Card and Slot Compatibility for the XC10G Card

Slot	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Type	MS ¹	MS ¹	MS ¹	MS ¹	HS ²	HS ²	TCC	XC	AIC	XC	TCC	HS ²	HS ²	MS ¹	MS ¹	MS ¹	MS ¹
TCC2							X				X						
XC10G								X		X							
AIC									X								
AIC-I									X								
DS1-14	X	X	X	X	X	X						X	X	X	X	X	X
DS1N-14	X ³	X ³	X	X ³	X ³	X ³						X ³	X ³	X ³	X	X ³	X ³
DS3-12	X	X	X	X	X	X ⁴						X ⁴	X	X	X	X	X
DS3-12E	X	X	X	X	X	X ⁴						X ⁴	X	X	X	X	X
DS3N-12	X ³	X ³	X	X ³	X ³	X ^{3,4}						X ^{3,4}	X ³	X ³	X	X ³	X ³
DS3N-12E	X ³	X ³	X	X ³	X ³	X ^{3,4}						X ^{3,4}	X ³	X ³	X	X ³	X ³
DS3XM-6	X	X	X	X	X	X ⁴						X ⁴	X	X	X	X	X
EC1-12	X	X	X	X	X	X ⁵						X ⁵	X	X	X	X	X
E100T-12	Not supported with the XC10G card.																
E1000-2	Not supported with the XC10G card.																
E100T-G	X	X	X	X	X	X						X	X	X	X	X	X
E1000-2-G	X	X	X	X	X	X						X	X	X	X	X	X
G1000-4	X	X	X	X	X	X						X	X	X	X	X	X
G1K-4	X	X	X	X	X	X						X	X	X	X	X	X
ML100-12	X	X	X	X	X	X						X	X	X	X	X	X

Table 2-2 Card and Slot Compatibility for the XC10G Card (continued)

Slot	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Type	MS ¹	MS ¹	MS ¹	MS ¹	HS ²	HS ²	TCC	XC	AIC	XC	TCC	HS ²	HS ²	MS ¹	MS ¹	MS ¹	MS ¹
ML1000-2	X	X	X	X	X	X						X	X	X	X	X	X
OC3 IR 4/STM1 SH 1310	X	X	X	X	X	X						X	X	X	X	X	X
OC3IR/STM1SH 1310-8	X	X	X	X										X	X	X	X
OC12 IR STM4 SH 1310	X	X	X	X	X	X						X	X	X	X	X	X
OC12 LR/STM4 LH 1310	X	X	X	X	X	X						X	X	X	X	X	X
OC12 IR/STM4 SH 1310-4	X	X	X	X										X	X	X	X
OC12 LR/STM4 LH 1550	X	X	X	X	X	X						X	X	X	X	X	X
OC48 IR 1310					X	X						X	X				
OC48 LR 1550					X	X						X	X				
OC48 IR/STM16 SH AS 1310	X	X	X	X	X	X						X	X	X	X	X	X
OC48 LR/STM16 LH AS 1550	X	X	X	X	X	X						X	X	X	X	X	X
OC48-ELR/STM1 6 EH 100 GHz					X	X						X	X				
OC48 ELR 200 GHz					X	X						X	X				
OC192 SR/STM64 IO 1310					X	X						X	X				
OC192 IR/STM64 SH 1550					X	X						X	X				
OC192 LR/STM64 LH 1550					X	X						X	X				
OC192 LR/STM64 LH ITU 15xx.xx					X	X						X	X				
TXP_MR_2.5G	X	X	X	X	X	X						X	X	X	X	X	X
TXPP_MR_2.5G	X	X	X	X	X	X						X	X	X	X	X	X
TXP_MR_10G	X	X	X	X	X	X						X	X	X	X	X	X
MXP_2.5G_10G	X	X	X	X	X	X						X	X	X	X	X	X

- MS identifies slots 1 to 4 and 14 to 17 (“multispeed” slot).
- HS identifies slots 5, 6, 12, and 13 (“high-speed” slot).

3. When not used in a 1:N configuration, a DS1 or DS3 card can be installed in this slot.
4. This DS3 card cannot be used in this slot if used with a high-density EIA or in a 1:N configuration.
5. EC1 cards cannot be used in this slot if used with a high-density EIA.

Stop. You have completed this procedure.

DLP-A36 Install the TCC+/TCC2 Cards

Purpose	This task installs redundant TCC+/TCC2 cards. The first card you install in the ONS 15454 must be a TCC+/TCC2, and it must initialize before you install any cross-connect or traffic cards. This task applies to both DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes; however, Release 4.5 nodes can only support TCC2 cards.
Tools/Equipment	Two TCC2 cards
Prerequisite Procedures	None
Required/As Needed	Redundant TCC+/TCC2 cards are required in all nodes.
Onsite/Remote	Onsite
Security Level	None



Note When installing cards, allow each card to boot completely before installing the next card.

- Step 1** Open the latches/ejectors of the first TCC+/TCC2 card that you will install.
- Step 2** Use the latches/ejectors to firmly slide the card along the guide rails until the card plugs into the receptacle at the back of the slot (Slot 7 or 11).
- Step 3** Verify that the card is inserted correctly and close the latches/ejectors on the card.



Note It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

If you insert a card into a slot provisioned for a different card, all LEDs turn off.

- Step 4** Verify the LED activity of the TCC+/TCC2:
 - All LEDs turn on briefly.
 - The red FAIL LED, the yellow ACT/STBY LED, the red REM LED, the green SYNC LED, and the green ACO LED turn on and remain illuminated for about 10 seconds.
 - The red FAIL LED and the green ACT/STBY LED turn on and remain illuminated for about 40 seconds.
 - The red FAIL LED blinks for about 10 seconds.
 - The red FAIL LED illuminates for about 5 seconds.
 - On the TCC2 card, both green PWR LEDs turn on for 5 seconds. The PWR LEDs then illuminate red for 2 to 3 minutes before going to steady green.

- All LEDs (including the CRIT, MAJ, MIN, REM, SYNC, and ACO LEDs) blink once and turn off for about 10 seconds.
- The ACT/STBY LED turns on. (The ACT/STBY LED might take several minutes to illuminate while the DCC processor boots.)



Note It may take up to 3 minutes for the A and B power alarms to clear.



Note If the FAIL LED is illuminated continuously on the TCC+/TCC2 card, see the tip below about the TCC+/TCC2 automatic upload.



Note Alarm LEDs might be illuminated; disregard alarm LEDs until you are logged into CTC and can view the Alarms tab.

Step 5 Verify that the ACT/STBY LED is green for active. The IP address for the node, the temperature of the ONS 15454, and the time of day should be displayed on the LCD. The default time and date is 12:00 AM, January 1, 1970.

Step 6 The LCD cycles through the IP address, node name, and software version. Verify that the correct software version displays on the LCD.

Step 7 If the LCD shows the correct software version, continue with Step 8. If the LCD does not show the correct software version, upgrade the software or remove the TCC+/TCC2 card and install a replacement card.

Refer to the *Cisco ONS 15454 Software Upgrade Guide* or the “NTP-A163 Restore the Node to Factory Configuration” procedure on page 17-11 to replace the software. To exchange the TCC+/TCC2, see the “NTP-A116 Remove and Replace a Card” procedure on page 2-27.

Step 8 Open the latches/ejectors of the redundant TCC+/TCC2 card.

Step 9 Use the latches/ejectors to firmly slide the card along the guide rails until the card plugs into the receptacle at the back of the slot (Slot 7 or 11).

Step 10 Verify that the card is inserted correctly and close the latches/ejectors on the card.



Note It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

Step 11 Verify the LED activity of the redundant TCC+/TCC2:

- All LEDs turn on for a short moment.
- The red FAIL LED, the yellow ACT/STBY LED, the red REM LED, the green SYNC LED, and the green ACO LED turn on for about 10 seconds.
- The red FAIL LED and the green ACT/STBY LED turn on for about 40 seconds.
- The red FAIL LED blinks for about 10 seconds.
- The red FAIL LED illuminates for about 5 seconds.
- All LEDs (including the CRIT, MAJ, MIN, REM, SYNC, and ACO LEDs) blink once and turn off for about 10 seconds.

- The ACT/STBY LED turns on. (The ACT/STBY LED might take several minutes to illuminate while the DCC processor boots.)

**Tip**

If you install a standby TCC+/TCC2 card that has a different software version than the active TCC+/TCC2 card, the newly installed standby TCC+/TCC2 card automatically copies the software version from the active TCC+/TCC2. You do not need to do anything in this situation. However, the loading TCC+/TCC2 card does not boot up in the normal manner. When a standby TCC+ card is first inserted, the red FAIL LED stays on for a short period. The FAIL LED then blinks normally and all LEDs go dark. The FAIL LED and the ACT/STBY LED flash alternately every 30 to 45 seconds for up to 30 minutes as the new software loads onto the active TCC+ card. After loading the new software the upgraded TCC+ card becomes the standby card and the amber LED is illuminated.

When a standby TCC2 card is first inserted, the LEDs follow most of the sequence listed in Step 11. After the red FAIL LED turns on for about 5 seconds, the FAIL LED and the ACT/STBY LED begin to flash alternately for up to 30 minutes while the new software loads onto the active TCC2 card. After loading the new software the upgraded TCC2 card's LEDs repeat the sequence from Step 11, and the amber ACT/STBY LED turns on.

**Note**

If the FAIL LED is illuminated continuously on the TCC+/TCC2 card, see the tip in Step 4 about the TCC+/TCC2 automatic upload.

**Note**

If you insert a card into a slot provisioned for a different card, all LEDs turn off.

**Note**

Alarm LEDs might be illuminated; disregard alarm LEDs until you are logged into CTC and can view the Alarms tab.

Step 12 Verify that the ACT/STBY LED is amber for standby.

Step 13 Return to your originating procedure (NTP).

DLP-A37 Install the XC, XCVT, or XC10G Cards

Purpose	This task installs the cross-connect (XC/XCVT/XC10G) cards. Do not install cross-connect cards in a DWDM (Software R4.5) shelf.
Tools/Equipment	XC/XCVT/XC10G (cross-connect) cards
Prerequisite Procedures	DLP-A36 Install the TCC+/TCC2 Cards, page 2-7
Required/As Needed	Redundant cross-connect cards are required in non-DWDM (Software R4.1 and earlier) shelves.
Onsite/Remote	Onsite
Security Level	None

**Note**

This is not the procedure to use when upgrading from XC to XCVT cards or from XCVT to XC10G cards. If you are performing an XC to XCVT upgrade or an XCVT to a XC10G upgrade, see Chapter 14, “Upgrade Cards and Spans.”

**Note**

When installing cards, let each card completely boot before installing the next card.

- Step 1** Open the latches/ejectors of the first XC, XCVT, or XC10G card that you will install.
- Step 2** Use the latches/ejectors to firmly slide the card along the guide rails until the card plugs into the receptacle at the back of the slot (Slot 8 or 10).
- Step 3** Verify that the card is inserted correctly and close the latches/ejectors on the card.

**Note**

It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

- Step 4** Verify the LED activity:
- The red LED turns on and illuminates for 20 to 30 seconds.
 - The red LED blinks for 35 to 45 seconds.
 - The red LED illuminates for 5 to 10 seconds.
 - All LEDs blink once and turn on.
 - The ACT/STBY LED turns on.

**Note**

If you insert a card into a slot provisioned for a different card, all LEDs turn off.

**Note**

If the red FAIL LED does not illuminate, check the power.

**Note**

If the red FAIL LED is illuminated continuously or the LEDs act erratically, the card is not installed properly. Remove the card and repeat Steps 1 to 4.

- Step 5** Verify that the ACT/STBY LED is green for active.
- Step 6** Use the latches/ejectors to firmly slide the second cross-connect card along the guide rails until the card plugs into the receptacle at the back of the slot (Slot 8 or 10).
- Step 7** Verify that the card is inserted correctly and close the latches/ejectors on the card.

**Note**

It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

- Step 8** Verify the LED activity:
- The red LED turns on and illuminates for 20 to 30 seconds.

- The red LED blinks for 35 to 45 seconds.
- The red LED illuminates for 5 to 10 seconds.
- All LEDs blink once and turn on.
- The ACT/STBY LED turns on.



Note If you insert a card into a slot provisioned for a different card, all LEDs turn off.



Note If the red FAIL LED does not illuminate, check the power.



Note If the red FAIL LED is illuminated continuously or the LEDs act erratically, the card is not installed properly. Remove the card and repeat Steps 6 through 8.

Step 9 Verify that the ACT/STBY LED is amber for standby.

Step 10 Return to your originating procedure (NTP).

DLP-A38 Install the Alarm Interface Controller or Alarm Interface Controller–International Card

Purpose	This task installs the AIC or AIC-I card. The AIC or AIC-I card provides connections for external alarms and controls (environmental alarms). This task can be used for DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	AIC or AIC-I card
Prerequisite Procedures	DLP-A36 Install the TCC+/TCC2 Cards, page 2-7 DLP-A37 Install the XC, XCVT, or XC10G Cards, page 2-9 (R4.1 and earlier only)
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Note When installing cards, let each card completely boot before installing the next card.

Step 1 Open the latches/ejectors on the card.

Step 2 Use the latches/ejectors to firmly slide the card along the guide rails until the card plugs into the receptacle at the back of the slot (Slot 9).

Step 3 Verify that the card is inserted correctly and close the latches/ejectors on the card.



Note It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

Step 4 If you have installed the AIC card, verify the following:

- The red FAIL LED illuminates for 1 second, then blinks for 1 to 5 seconds.
- After 1 to 5 seconds, all LEDs blink once and turn off.
- The ACT LED turns on.

Step 5 If you have installed the AIC-I card, verify the following:

- The red FAIL LED illuminates for 1 second, then blinks for 1 to 5 seconds.
- The PWR A and PWR B LEDs illuminate red and the two INPUT/OUTPUT LEDs illuminate green for approximately 3 seconds.
- The PWR A LED turns green, the INPUT/OUTPUT LEDs turn off, and the ACT LED illuminates.



Note It may take up to 3 minutes for the PWR A and PWR B LEDs to update.



Note If the red FAIL LED does not illuminate, check the power.



Note Before you insert a card into a slot provisioned for a different card, complete the “DLP-A191 Delete a Card” task on page 2-28 for the previously provisioned card.



Note If you do insert a card into a slot provisioned for a different card, no LEDs turn on.



Note If the red FAIL LED is illuminated continuously or the LEDs act erratically, the card is not installed properly. Remove the card and repeat Steps 1 to 5.

Step 6 Return to your originating procedure (NTP).

NTP-A16 Install the OC-N Cards

Purpose	This procedure describes how to install optical (OC-N) cards (OC-3, OC-12, OC-48, and OC-192). This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	OC-3, OC-12, OC-48, and OC-192 cards (as applicable)
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A249 Install the Transponder and Muxponder Cards, page 2-15 (if applicable)
Required/As Needed	Required if the node will carry optical traffic. Install according to site plan, if available.
Onsite/Remote	Onsite
Security Level	None



Warning

During this procedure, wear grounding wrist straps to avoid ESD damage to the card. Do not directly touch the backplane with your hand or any metal tool due to electrical hazard.



Warning

Class I (21 CFR 1040.10 and 1040.11) and Class 1M (IEC 60825-1 2001-01) laser products.



Warning

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam or view directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm may pose an eye hazard. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



Warning

On all OC-N cards except the OC192 LR/STM64 LH 1550 card, the laser is on even when the optical port is not in service. On the OC192 LR/STM64 LH 1550 card, the laser is active when the card is booted and the safety key is in the on position (labeled 1). The laser is off when the safety key is off (labeled 0).



Caution

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.



Note

If protective clips are installed on the backplane connectors of the cards, remove the clips before installing the cards.



Note

To simplify path protection to bidirectional line switch ring (BLSR) conversion and node addition, equip OC-N cards according to a high-speed east (Slots 12 and 13) and west (Slots 5 and 6) configuration. This configuration is not mandatory.



Note If you install a card incorrectly, the FAIL LED flashes continuously.

Step 1 If you installed XC or XCVT cards, review Table 2-1 on page 2-3 to determine card/slot compatibility. If you installed XC10G cards, review Table 2-2 on page 2-5 to determine card/slot compatibility.

Install higher-capacity cards first; for example, install an OC-192 card before installing an OC-48 card. Let each card completely boot before installing the next card.

Step 2 Open the card latches/ejectors.



Warning Before installing an OC192 LR/STM64 LH 1550 card, make sure the safety key on the faceplate is in off position (labeled 0). When in the on position (labeled 1), the laser is activated.

Step 3 Use the latches/ejectors to firmly slide the OC-N card along the guide rails until the card plugs into the receptacle at the back of the slot.

Step 4 Verify that the card is inserted correctly and close the latches/ejectors on the card.



Note It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

Step 5 Verify the LED activity:

- The red FAIL LED turns on and illuminates for 20 to 30 seconds.
- The red FAIL LED blinks for 35 to 45 seconds.
- All LEDs blink once and turn off for 5 to 10 seconds.
- The ACT or ACT/STBY LED illuminates amber. The signal fail (SF) LED can persist until all card ports connect to their far end counterparts and a signal is present.

Step 6 If the card does not boot up properly, or the LED activity does not mirror Step 5, check the following:

- When a physical card type does not match the type of card provisioned for that slot in CTC, the card might not boot. If an OC-N card does not boot, open CTC and ensure that the slot is not provisioned for a different card type before assuming the card is faulty.
- If the red FAIL LED does not illuminate, check the power.
- If you insert a card into a slot provisioned for a different card, all LEDs turn off.
- If the red FAIL LED is illuminated continuously or the LEDs behave erratically, the card is not installed properly. Remove the card and repeat Steps 2 to 5.

Step 7 Complete the “NTP-A247 Install Fiber-Optic Cables on OC-N Cards” procedure on page 2-30.



Note If you discover that you installed the wrong card in a slot, complete the “NTP-A116 Remove and Replace a Card” procedure on page 2-27.

Step 8 As necessary, continue with the “NTP-A17 Install the Electrical Cards” procedure on page 2-16.

Stop. You have completed this procedure.

NTP-A249 Install the Transponder and Muxponder Cards

Purpose	This procedure describes how to install the TXP_MR_10G, TXP_MR_2.5G, TXPP_MR_2.5G (transponder) and MXP_2.5G_10G (muxponder) cards.
Tools/Equipment	TXP_MR_10G, TXP_MR_2.5G, TXPP_MR_2.5G, and MXP_2.5G_10G cards (as applicable)
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Warning

During this procedure, wear grounding wrist straps to avoid ESD damage to the card. Do not directly touch the backplane with your hand or any metal tool due to electrical hazard.



Warning

Class 1 Laser Product.



Warning

Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated July 26, 2001.



Warning

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam or view directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm may pose an eye hazard. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



Caution

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.



Note

If protective clips are installed on the backplane connectors of the cards, remove the clips before installing the cards.



Note

If you install a card incorrectly, the FAIL LED flashes continuously.

- Step 1** If you installed XC or XCVT cards, review Table 2-1 on page 2-3 to determine card/slot compatibility. If you installed XC10G cards, review Table 2-2 on page 2-5 to determine card/slot compatibility.
- Step 2** Open the card latches/ejectors.
- Step 3** Use the latches/ejectors to firmly slide the transponder or muxponder card along the guide rails until the card plugs into the receptacle at the back of the slot.

Step 4 Verify that the card is inserted correctly and close the latches/ejectors on the card.



Note It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

Step 5 Verify the LED activity:

- The red FAIL LED turns on and illuminates for 20 to 30 seconds.
- The red FAIL LED blinks for 35 to 45 seconds.
- All LEDs blink once and turn off for 5 to 10 seconds.
- The ACT or ACT/STBY LED turns on. The signal fail (SF) LED can persist until all card ports connect to their far end counterparts and a signal is present.

Step 6 If the card does not boot up properly, or the LED activity does not mirror Step 5, check the following:

- When a physical card type does not match the type of card provisioned for that slot in CTC, the card might not boot. If a transponder or muxponder card does not boot, open CTC and ensure that the slot is not provisioned for a different card type before assuming the card is faulty.
- If the red FAIL LED does not illuminate, check the power.
- If you insert a card into a slot provisioned for a different card, all LEDs turn off.
- If the red FAIL LED is illuminated continuously or the LEDs behave erratically, the card is not installed properly. Remove the card and repeat Steps 2 to 5.

Step 7 If you installed an MXP_2.5G_10G, TXP_MR_2.5G, or TXPP_MR_2.5G card, complete the “DLP-A469 Install GBIC or SFP Connectors” task on page 2-20.

Step 8 Complete the “NTP-A247 Install Fiber-Optic Cables on OC-N Cards” procedure on page 2-30.

Step 9 If you discover that you installed the wrong card in a slot, complete the “NTP-A116 Remove and Replace a Card” procedure on page 2-27.

Step 10 Continue with the “NTP-A16 Install the OC-N Cards” procedure on page 2-13.

Stop. You have completed this procedure.

NTP-A17 Install the Electrical Cards

Purpose	This procedure describes how to install electrical cards (DS-1, DS-3, DS3XM-6 and EC-1). This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	Electrical cards
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A16 Install the OC-N Cards, page 2-13 (if applicable)
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

**Warning**

During this procedure, wear grounding wrist straps to avoid ESD damage to the card. Do not directly touch the backplane with your hand or any metal tool due to electrical hazard.

**Caution**

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.

**Note**

If protective clips are installed on the backplane connectors of the cards, remove the clips before installing the cards.

**Note**

Install higher-capacity cards first; for example, install a DS-3 card before installing a DS-1 card. Let each card boot completely before installing the next card.

Step 1 If you installed XC or XCVT cards, review Table 2-1 on page 2-3 to determine card/slot compatibility. If you installed XC10G cards, review Table 2-2 on page 2-5 to determine card/slot compatibility.

Step 2 Open the card latches/ejectors.

Step 3 Use the latches/ejectors to firmly slide the card along the guide rails until the card plugs into the receptacle at the back of the slot.

Step 4 Verify that the card is inserted correctly and close the latches/ejectors on the card.

**Note**

It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

Step 5 Verify the LED activity:

- The red FAIL LED turns on and illuminates for 10 to 15 seconds.
- If the red FAIL LED does not illuminate, check the power.
- The red FAIL LED blinks for 30 to 40 seconds.
- All LEDs blink once and turn off for 1 to 5 seconds.
- The ACT or ACT/STBY LED turns on. The SF LED can persist until all card ports connect to their far end counterparts and a signal is present.

**Note**

If you insert a card into a slot provisioned for a different card, all LEDs turn off.

**Note**

If the red FAIL LED is illuminated continuously or the LEDs behave erratically, the card is not installed properly. Remove the card and repeat Steps 2 to 5.

**Note**

If you discover that you installed the wrong card in a slot, complete the “NTP-A116 Remove and Replace a Card” procedure on page 2-27.

- Step 6** Continue with “NTP-A246 Install Ethernet Cards and Connectors” procedure on page 2-18 if necessary.
Stop. You have completed this procedure.
-

NTP-A246 Install Ethernet Cards and Connectors

Purpose	This procedure describes how to install the Ethernet cards(E100T-12, E100T-G, E1000-2, E1000-2-G, G1000-4, G1K-4, ML100-T-12, and ML10002). It does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	Ethernet cards
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A16 Install the OC-N Cards, page 2-13 (if applicable) NTP-A17 Install the Electrical Cards, page 2-16 (if applicable)
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Warning

During this procedure, wear grounding wrist straps to avoid ESD damage to the card. Do not directly touch the backplane with your hand or any metal tool due to electrical hazard.



Warning

Class I (21 CFR 1040.10 and 1040.11) and Class 1M (IEC 60825-1 2001-01) laser products.



Warning

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam or view directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm may pose an eye hazard. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



Caution

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.



Note

If protective clips are installed on the backplane connectors of the cards, remove the clips before installing the cards.

- Step 1** If you installed XC or XCVT cards review Table 2-1 on page 2-3 to determine card/slot compatibility. If you installed XC10G cards, review Table 2-2 on page 2-5 to determine card/slot compatibility.
- Step 2** Complete the “DLP-A39 Install Ethernet Cards” task on page 2-19. Allow each card to boot completely before installing the next card.



Note If you discover that you installed the wrong card in a slot, complete the “NTP-A116 Remove and Replace a Card” procedure on page 2-27 and install the correct card.

Step 3 Complete the “DLP-A469 Install GBIC or SFP Connectors” task on page 2-20 if you are using E1000-2, E1000-2-G, G1000-4, or ML1000-2 cards.



Note If you need to remove a GBIC or SFP, complete the “DLP-A470 Remove GBIC or SFP Connectors” task on page 2-22.

Step 4 Continue with the “NTP-A247 Install Fiber-Optic Cables on OC-N Cards” procedure on page 2-30.
Stop. You have completed this procedure.

DLP-A39 Install Ethernet Cards

Purpose	This task installs the Ethernet cards.
Tools/Equipment	Ethernet cards
Prerequisite Procedures	DLP-A36 Install the TCC+/TCC2 Cards, page 2-7
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

Step 1 Open the card latches/ejectors.

Step 2 Use the latches/ejectors to firmly slide the card along the guide rails until the card plugs into the receptacle at the back of the slot.

Step 3 Verify that the card is inserted correctly and close the latches/ejectors on the card.



Note It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

Step 4 Verify the LED activity:

- The red FAIL LED turns on and illuminates for 20 to 30 seconds.
- The red FAIL LED blinks for 35 to 45 seconds.
- All LEDs blink once and turn off for 1 to 5 seconds.
- The ACT or ACT/STBY LED turns on. The SF LED can persist until all card ports connect to their far end counterparts and a signal is present.



Note If the red FAIL LED does not illuminate, check the power.



Note If you insert a card into a slot provisioned for a different card, all LEDs turn off.

Step 5 Return to your originating procedure (NTP).

DLP-A469 Install GBIC or SFP Connectors

Purpose	This task installs gigabit interface converters, which are required for E-Series and G-Series Ethernet cards, and small-form factor pluggables (SFPs), which are required for ML1000-2 and MXP cards, and attaches fiber to the connectors.
Tools/Equipment	<p>For E1000-2-G use:</p> <ul style="list-style-type: none"> • SX GBIC= for short-reach applications • LX GBIC= for long-reach applications <p>For the G1000-4 or G1K-4 card use:</p> <ul style="list-style-type: none"> • SX GBIC= for short-reach applications • LX GBIC= for long-reach applications • ZX GBIC= for extra long-reach applications • DWDM GBIC= for DWDM applications • CWDM GBIC= for CWDM applications <p>For the ML1000-2 card use:</p> <ul style="list-style-type: none"> • SX SFP= for short-reach applications • LX SFP= for long-reach applications
Prerequisite Procedures	DLP-A39 Install Ethernet Cards, page 2-19
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Note Existing G1000-4 cards are expected to support CWDM and DWDM GBICs, but final qualification testing was not complete at press time. Qualification testing is scheduled to complete in August, 2003. The online version of the 4.1 user documentation and release notes will be updated to reflect the final qualification status of CWDM and DWDM GBICs on the G1000-4 card, when this information is available.



Note Existing G1K-4 cards do not support CWDM or DWDM GBICs. G1K-4 cards with the CLEI code of WM51RWPCAA (manufactured after August 2003) are expected to support CWDM and DWDM GBICs, but final qualification testing was not complete at press time. The online version of the 4.1 user documentation and release notes will be updated to reflect the final qualification status of CWDM and DWDM GBICs on the G1K-4 card with the CLEI code of WM51RWPCAA, when this information is available.



Note The operating temperature range of the DWDM GBICs is -5 degrees C to 40 degrees C.



Note GBICs and SFPs are hot-swappable and can therefore be installed/removed while the card/shelf assembly is powered and running.



Note DWDM and CWDM GBICs are compatible with Software R 4.1 only.

Step 1 Remove the GBIC or SFP from its protective packaging.

Step 2 Check the label to verify that the GBIC or SFP is the correct type for your network.

Step 3 If you are using a GBIC with clips:

- a. Grip the sides of the GBIC with your thumb and forefinger and insert the GBIC into the slot on the E1000-2-G, G1000-4, or G1K-4 card.



Note GBICs are keyed to prevent incorrect installation.

- b. Slide the GBIC through the flap that covers the opening until you hear a click. The click indicates the GBIC is locked into the slot.
- c. When you are ready to attach the network fiber-optic cable, remove the protective plug from the GBIC and save the plug for future use.

Step 4 If you are using a GBIC with a handle:

- a. Remove the protective plug from the SC-type connector.
- b. Grip the sides of the GBIC with your thumb and forefinger and insert the GBIC into the slot on the E1000-2-G, G1000-4, or G1K-4 card.
- c. Lock the GBIC into place by closing the handle down. The handle is in the correct closed position when it does not obstruct access to SC-type connector.
- d. Slide the GBIC through the cover flap until you hear a click.
The click indicates the GBIC is locked into the slot.



Warning GBICs are Class I laser products. These products have been tested and comply with Class I limits.



Warning Invisible laser radiation may be emitted from the aperture ports of the single-mode fiber optic modules when no cable is connected. Avoid exposure and do not stare into open apertures.

Step 5 If you are installing an SFP:

- a. Plug the LC duplex connector of the fiber into a Cisco-supported SFP connector.
- b. If the new SFP connector has a latch, close the latch over the cable to secure it.
- c. Plug the cabled SFP connector into the ML1000-2 or MXP_2.5_10G card port until it clicks.

Step 6 Return to your originating procedure (NTP).

DLP-A470 Remove GBIC or SFP Connectors

Purpose	Use this task to disconnect fiber attached to GBICs or SFPs and to remove the GBICs or SFPs from Ethernet cards or MXP cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A469 Install GBIC or SFP Connectors, page 2-20
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Warning

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.

- Step 1** Disconnect the network fiber cable from the GBIC SC connector or SFP LC duplex connector. If the SFP connector has a latch securing the fiber cable, pull it upward to release the cable.
- Step 2** If you are using a GBIC with clips:
- Release the GBIC from the slot by simultaneously squeezing the two plastic tabs on each side of it.
 - Slide the GBIC out of the Gigabit Ethernet module slot. A flap closes over the GBIC or SFP slot to protect the connector on the Gigabit Ethernet card.
- Step 3** If you are using a GBIC with a handle:
- Release the GBIC by opening the handle.
 - Pull the handle of the GBIC.
 - Slide the GBIC out of the Gigabit Ethernet card slot. A flap closes over the GBIC slot to protect the connector on the Gigabit Ethernet card.
- Step 4** If you are using an SFP:
- If the SFP connector has a latch securing the fiber cable, pull it upward to release the cable.
 - Pull the fiber cable straight out of the connector.
 - Unplug the SFP connector and fiber from the ML1000-2 or MXP_2.5_10G card.
 - Slide the SFP out of the Gigabit Ethernet card slot.
- Step 5** Return to your originating procedure (NTP).
-

NTP-A242 Install the DWDM Cards

Purpose	This procedure describes how to install DWDM cards (OPT-PRE, OPT-BST, 32MUX-O, 32DMX-O, 4MD-xx.x, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, AD-4B-xx.x, OSCM, or OSC-CSM) in Release 4.5 shelves. Complete this procedure before you have provisioned the shelf by completing Chapter 5, “Turn Up a DWDM Node.”
Tools/Equipment	OPT-PRE, OPT-BST, 32MUX-O, 32DMX-O, 4MD-xx.x, AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x, AD-1B-xx.x, AD-4B-xx.x, OSCM, or OSC-CSM cards (as applicable)
Prerequisite Procedures	DLP-A36 Install the TCC+/TCC2 Cards, page 2-7
Required/As Needed	Required if the node will carry DWDM optical traffic. Install according to site plan, if available.
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Warning

During this procedure, wear grounding wrist straps to avoid ESD damage to the card. Do not directly touch the backplane with your hand or any metal tool due to electrical hazard.



Warning

Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated July 26, 2001.



Warning

Class 1M Laser Product.



Warning

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam or view directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm may pose an eye hazard. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



Caution

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.



Note

If protective clips are installed on the backplane connectors of the cards, remove the clips before installing the cards.



Note

If you install a card incorrectly, the FAIL LED flashes continuously.

**Note**

The automatic node setup (ANS) of the ONS 15454 DWDM system begins to determine what kind of site you are installing as soon as you install cards. For more information about node setup, see Chapter 5, “Turn Up a DWDM Node.” The automatic power control (APC) is enabled after ANS initializes and after a channel has been provisioned. For instructions to provision a DWDM channel, see the “NTP-A227 Provision a DWDM Optical Channel Network Connection” procedure on page 8-96. For more information about amplifier power control, see the *Cisco ONS 15454 Reference Manual*.

- Step 1** Plan your node installation or consult the site plan. As soon as you begin installing cards, ANS determines what kind of site to set up based on the following parameters:
- Hub site—Two 32DMX-O and two 32MUX-O cards are provisioned but no AD-xC or AD-xB cards are present
 - Terminal—One 32DMX-O and one 32MUX-O card are provisioned, and no AD-xC or AD-xB cards are present
 - Line site—Only one OPT-PRE or OPT-BST is provisioned per line direction. (Up to two OPT-PRE and/or two OPT-BST cards can be present in the same shelf.)
 - OADM site—At least 1 AD-xC or AD-xB is provisioned and no 32DMX-O or 32MUX-O cards are present
 - Unknown—Provisioned cards do not follow any of the previously listed categories
- Step 2** Open the card latches/ejectors.
- Step 3** Use the latches/ejectors to firmly slide the DWDM card along the guide rails until the card plugs into the receptacle at the back of the slot.
- Step 4** Use the following card placement guidelines. For specific information about each card, refer to the *Cisco ONS 15454 Reference Manual*.
- OPT-BST cards can be installed in any open east and west pair of slots but are often installed in Slot 1 and Slot 17.
 - OPT-PRE cards can be installed in any open east and west pair of slots but are often installed in Slot 2 and Slot 16.
 - OSCM cards, if used, are installed in Slot 8 and Slot 10.
 - OSC-CSM cards, if used (when there is no OPT-BST), can be installed in any open east and west pair of slots.
 - 32MUX-O cards are double-slot width cards and are often installed in Slot 3 or 4 and Slot 14 or 15.
 - 32DMX-O cards are double-slot width and are often installed in Slot 5 or 6 and Slot 12 or 13.
 - AD cards (channel or band) and 4MD-xx.x combiner cards are installed in any open slots.

**Note**

Refer to Figures 2-8, 2-9, 2-10, and 2-11 to see typical site shelf diagrams that contain cards and show cabling schemes.

- Step 5** Verify that the card is inserted correctly and close the latches/ejectors on the card.

**Note**

It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

- Step 6** Verify the LED activity:
- The FAIL LED illuminates for approximately 35 seconds
 - The FAIL LED blinks for approximately 40 seconds
 - All LEDs illuminate and then turn off within 5 seconds
 - If new software is being downloaded to the card, the ACT and SF LEDs blink for 20 seconds to 3.5 minutes, depending on the card type
 - The ACT LED illuminates
 - The signal fail (SF) LED stays illuminated until all card ports connect to their far-end counterparts and a signal is present
- Step 7** If the card does not boot up properly, or the LED activity does not mirror Step 5, check the following:
- When a physical card type does not match the type of card provisioned for that slot in CTC, the card might not boot. If a DWDM card does not boot, open CTC and ensure that the slot is not provisioned for a different card type before assuming the card is faulty.
 - If the red FAIL LED does not illuminate, check the power.
 - If you insert a card into a slot provisioned for a different card, all LEDs turn off.
 - If the red FAIL LED is illuminated continuously or the LEDs behave erratically, the card is not installed properly. Remove the card and repeat Steps 2 to 6.
- Step 8** If you installed OPT-PRE cards, complete the “NTP-A243 Install the DWDM Dispersion Compensating Cards” procedure on page 2-25.
- Step 9** Complete the “NTP-A244 Install Fiber-Optic Cables on DWDM Cards” procedure on page 2-42.



Note If you discover that you installed the wrong card in a slot, complete the “NTP-A116 Remove and Replace a Card” procedure on page 2-27.

Stop. You have completed this procedure.

NTP-A243 Install the DWDM Dispersion Compensating Cards

Purpose	This procedure describes how to install the dispersion compensating cards (DCU-xx.x) for Release 4.5 DWDM shelves. This procedure applies to DWDM (Software R4.5) nodes only.
Tools/Equipment	DCU-xx.x cards
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A242 Install the DWDM Cards, page 2-23
Required/As Needed	Required whether the node bit rate is 2.5 Gbps or 10 Gbps or 2.5Gps, if the span is very long. If Metroplanner is used to generate the bill of materials, the need for DCUs will be indicated.
Onsite/Remote	Onsite
Security Level	Provisioning or higher

**Warning**

During this procedure, wear grounding wrist straps to avoid ESD damage to the card. Do not directly touch the backplane with your hand or any metal tool due to electrical hazard.

**Warning**

Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated July 26, 2001.

**Warning**

Class 1M laser product.

**Warning**

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam or view directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm may pose an eye hazard. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

**Caution**

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.

**Note**

If protective clips are installed on the backplane connectors of the cards, remove the clips before installing the cards.

**Note**

If a DCU is not required, a 4 dB optical attenuated patch cord must be placed between the OPT-PRE DCC Tx and Tx ports.

Step 1 Pull the card latch inward with your finger.

Step 2 Firmly slide the DCU card along the guide rails until the card plugs into the receptacle at the back of the horizontal dispersion compensating card slots at the top of the shelf.

**Note**

The West dispersion compensating card is commonly installed on the left side and the East card is commonly installed on the right.

Step 3 Release the finger latch.

**Note**

It is possible to close the latch when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

Step 4 Verify that the card is engaged with the backplane by grasping and gently pulling the card handle. If the card does not move, it is fully installed. If it moves, repeat Step 2.

Step 5 Complete the “NTP-A244 Install Fiber-Optic Cables on DWDM Cards” procedure on page 2-42.

- Step 6** If you discover that you installed the wrong card in a slot, complete the “NTP-A116 Remove and Replace a Card” procedure on page 2-27.
- Step 7** Continue with the “NTP-A20 Replace the Front Door” procedure on page 2-58 if necessary.
- Stop. You have completed this procedure.**
-

NTP-A116 Remove and Replace a Card

Purpose	This procedure describes how to remove and replace all cards housed in the ONS 15454 shelf and rack. This procedure applies to both DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	A card installation procedure
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** If you are not logged into CTC and you need to remove a card, remove the card as described in Step 3. When you log into CTC, troubleshoot the mismatched equipment alarm (MEA) with the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 2** If you are logged into CTC, complete one of the following:
- Complete the “DLP-A191 Delete a Card” task on page 2-28 and continue with Step 3.
 - Complete the “DLP-A247 Change an OC-N Card” task on page 2-28 to delete a card and replace it with a different OC-N card while maintaining existing provisioning.
- Step 3** Physically remove the card:
- a. Open the card latches/ejectors.
 - b. Use the latches/ejectors to pull the card forward and away from the shelf.
- Step 4** Insert the new card using one of the following procedures as applicable:
- NTP-A15 Install the Common Control Cards, page 2-2
 - NTP-A16 Install the OC-N Cards, page 2-13
 - NTP-A17 Install the Electrical Cards, page 2-16
 - NTP-A246 Install Ethernet Cards and Connectors, page 2-18
 - NTP-A242 Install the DWDM Cards, page 2-23
 - NTP-A243 Install the DWDM Dispersion Compensating Cards, page 2-25
- Step 5** Continue with the “NTP-A247 Install Fiber-Optic Cables on OC-N Cards” procedure on page 2-30.
- Stop. You have completed this procedure.**
-

DLP-A191 Delete a Card

Purpose	This task deletes a card from CTC. This task applies to DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** On the shelf graphic in CTC, right-click the card that you want to remove and choose **Delete Card**. You cannot delete a card if any of the following conditions apply:
- The card is a TCC+/TCC2 card. To replace a TCC+/TCC2 card, refer to the *Cisco ONS 15454 Troubleshooting Guide*.
 - The card is part of a protection group; see the “DLP-A155 Delete a Protection Group” task on page 12-21.
 - The card has circuits; see the “NTP-A152 Delete Circuits” procedure on page 11-20.
 - The card is part of a BLSR; see the “NTP-A213 Remove a BLSR Node” procedure on page 16-10.
 - The card is being used for timing; see the “DLP-A157 Change the Node Timing Source” task on page 12-24.
 - The card has a non-DWDM DCC/GCC termination; see the “NTP-A204 Delete a SONET DCC Termination” procedure on page 12-22.



Note If you delete a card in CTC but do not remove it from the shelf, it will reboot and reappear in CTC.

- Step 2** Return to your originating procedure (NTP).

DLP-A247 Change an OC-N Card

Purpose	This task describes how to change an OC-N card while maintaining existing provisioning, including DCCs/GCCs, circuits, protection, timing, and rings. This task does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

**Caution**

Physically removing an OC-N card can cause a loss of working traffic or a protection switch. See Chapter 14, “Upgrade Cards and Spans” for information on upgrading traffic to a higher speed.

**Note**

You cannot change a multiport card to a card with a smaller number of ports. Do not use this procedure to replace a card with an identical card. Instead, use the “DLP-A191 Delete a Card” task on page 2-28.

- Step 1** If the card the active card in a 1+1 protection group, switch traffic away from the card:
- Log into a node on the network. If you are already logged in, go to Step b.
 - Display the CTC node (login) view.
 - Click the **Maintenance > Protection** tabs.
 - Double-click the protection group that contains the reporting card.
 - Click the active card of the selected group.
 - Click **Switch** and **Yes** in the Confirmation dialog box.
- Step 2** In CTC, right-click the card that you want to remove and choose **Change Card**.
- Step 3** From the Change Card drop-down menu, choose the desired card type and click **OK**. An MEA alarm appears until you replace the card.
- Step 4** Physically remove the card:
- Disconnect any fiber connections to the front of the card. See the *Cisco ONS 15454 Troubleshooting Guide* for fiber connection and fiber boot information.
 - Open the card latches/ejectors.
 - Use the latches/ejectors to pull the card forward and away from the shelf.
- Step 5** Complete the “NTP-A16 Install the OC-N Cards” procedure on page 2-13.
- Step 6** Return to your originating procedure (NTP).

NTP-A115 Preprovision a Slot

Purpose	This procedure describes how to preprovision a card slot in the CTC before completing physical installation. This procedure can be used for DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	Chapter 3, “Connect the PC and Log into the GUI”
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

**Note**

Once you have preprovisioned a card slot, you can place ports in service, create circuits, and set loopbacks for the preprovisioned card.

-
- Step 1** Log into the ONS 15454. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. The node (default) view displays. If you are already logged in, continue with Step 2.
- Step 2** Right-click the empty slot where you will later install a card.
- Step 3** From the Add Card popup menu, choose the card type that will be installed.



Note When you preprovision a slot, the card appears purple in the CTC shelf display, rather than white when a card is physically in the slot.

Stop. You have completed this procedure.

NTP-A247 Install Fiber-Optic Cables on OC-N Cards

Purpose	This procedure describes how to install fiber-optic cables on OC-N cards according to topology. It does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	Fiber-optic cables Fiber boot
Prerequisite Procedures	NTP-A16 Install the OC-N Cards, page 2-13 NTP-A17 Install the Electrical Cards, page 2-16 (if applicable) NTP-A246 Install Ethernet Cards and Connectors, page 2-18
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Warning

Class I (21 CFR 1040.10 and 1040.11) and Class 1M (IEC 60825-1 2001-01) laser products.



Warning

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam or view directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm may pose an eye hazard. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



Warning

On all OC-N cards except the OC192 LR/STM64 LH 1550 card, the laser is on even when the optical port is not in service. On the OC192 LR/STM64 LH 1550 card, the laser is active when the card is booted and the safety key is in the on position (labeled 1). The laser is off when the safety key is off (labeled 0).



Warning

Follow all directions and warning labels when working with optical fibers. To prevent eye damage, never look directly into a fiber or connector.

**Caution**

Do not use fiber loopbacks with the OC192 LR/STM64 LH 1550 or OC192 LR/STM64 LH ITU 15xx.xx card unless you are using a 20-dB attenuator. Never connect a direct fiber loopback. Using fiber loopbacks causes irreparable damage to the OC192 LR/STM64 LH 1550 or OC192 LR/STM64 LH ITU 15xx.xx card.

**Caution**

Do not use fiber loopbacks with the OC192 IR/STM64 SH 1550 card unless you are using a 5-dB attenuator. Never connect a direct, unattenuated fiber loopback. Using unattenuated fiber loopbacks causes irreparable damage to the OC192 IR/STM64 SH 1550 card.

**Caution**

Always use the supplied ESD wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower-right outside edge of the shelf assembly.

**Note**

Fiber boots are not recommended for the OC192 or the OC48AS because of the downward angle of the optical ports.

**Note**

You can install the fiber immediately after installing the cards, or wait until you are ready to turn up the network. See Chapter 6, “Turn Up Network.”

Step 1

Test the optical receive levels for the cards installed and attenuate accordingly. See Table 2-3 for the minimum and maximum levels.

Table 2-3 OC-N Card Transmit and Receive Levels

Card	Transmit		Receive	
	Minimum	Maximum	Minimum	Maximum
OC3 IR 4/STM1 SH 1310	-15 dBm	-8 dBm	-28 dBm	-8 dBm
OC3IR/STM1SH 1310-8	-15 dBm	-8 dBm	-28 dBm	-8 dBm
OC12 IR/STM4 SH 1310	-15 dBm	-8 dBm	-28 dBm	-8 dBm
OC12 LR/STM4 LH 1310	-3 dBm	+2 dBm	-28 dBm	-8 dBm
OC12 LR/STM4 LH 1550	-3 dBm	+2 dBm	-28 dBm	-8 dBm
OC12 IR/STM4 SH 1310-4	-15 dBm	-8 dBm	-30 dBm	-8 dBm
OC48 IR 1310	-5 dBm	0 dBm	-18 dBm	0 dBm
OC48 LR 1550	-2 dBm	+3 dBm	-28 dBm	-8 dBm
OC48 IR/STM16 SH AS 1310	-5 dBm	0 dBm	-18 dBm	0 dBm
OC48 LR/STM16 LH AS 1550	-2 dBm	+3 dBm	-28 dBm	-8 dBm
OC48 ELR/STM16 EH 100 GHz	-2 dBm	0 dBm	-27 dBm at 1E-12 BER	-9 dBm
OC48 ELR/STM16 EH 200 GHz	-2 dBm	0 dBm	-28 dBm	-8 dBm

Table 2-3 OC-N Card Transmit and Receive Levels (continued)

Card	Transmit		Receive	
	Minimum	Maximum	Minimum	Maximum
OC192 SR/STM64 IO 1310	-6 dBm	-1 dBm	-11 dBm	-1 dBm
OC192 IR/STM64 SH 1550	-1 dBm	+2 dBm	-14 dBm	-1 dBm
OC192 LR/STM64 LH 1550	+7 dBm	+10 dBm	-19 dBm	-10 dBm
OC192 LR/STM64 LH ITU 15xx.xx	+3 dBm	+6 dBm	-22 dBm	-9 dBm
TXP_MR_10G (trunk side)	-16 dBm ¹	+3 dBm ¹	-24 dBm	-8 dBm
TXP_MR_10G (client side)	-6 dBm	-1 dBm	-14 dBm	-1 dBm
MXP_2.5G_10G (trunk side)	-16 dBm ¹	+3 dBm ¹	-24 dBm	-8 dBm
MXP_2.5G_10G (client side)	-5 dBm	0 dBm	depends on SFP	depends on SFP

1. On transponder and muxponder cards, the optical output power on the trunk side can be configured from -16 to +3 dBm with an accuracy of +/-0.5 dB.

- Step 2** As needed, complete the “DLP-A207 Install Fiber-Optic Cables on the LGX Interface” task on page 2-33.
- Step 3** Inspect and clean all fiber connectors thoroughly. See the “NTP-A112 Clean Fiber Connectors” procedure on page 17-21 for instructions. Dust particles can degrade performance. Put caps on any fiber connectors that are not used.
- Step 4** Complete the “DLP-A428 Install Fiber Optic Cables in a 1+1 Configuration” task on page 2-33.



Note To install fiber-optic cables on an Ethernet card GBIC, see the “DLP-A469 Install GBIC or SFP Connectors” task on page 2-20.

- Step 5** As needed, complete the “DLP-A43 Install Fiber-Optic Cables for Path Protection Configurations” task on page 2-34.
- Step 6** As needed, complete the “DLP-A44 Install Fiber-Optic Cables for BLSR Configurations” task on page 2-38.
- Step 7** Complete the “DLP-A45 Install the Fiber Boot” task on page 2-40. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for information about the fiber boot.
- Step 8** Continue with “NTP-A245 Route Fiber-Optic Cables” procedure on page 2-57.

Stop. You have completed this procedure.

DLP-A207 Install Fiber-Optic Cables on the LGX Interface

Purpose	This task installs fiber-optic cables on the Lightguide Cross Connect (LGX) interface in the Central Office.
Tools/Equipment	Fiber-optic cables
Prerequisite Procedures	NTP-A112 Clean Fiber Connectors, page 17-21
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Align the keyed ridge of the cable connector with the receiving SC connector on the LGX faceplate connection point. Each module supports at least one transmit and one receive connector to create an optical carrier port.
- Step 2** Gently insert the cable connector into the faceplate connection point until the connector snaps into place.
- Step 3** Connect the fiber optic cable to the OC-N card. See the “DLP-A428 Install Fiber Optic Cables in a 1+1 Configuration” task on page 2-33.
- Step 4** Return to your originating procedure (NTP).
-

DLP-A428 Install Fiber Optic Cables in a 1+1 Configuration

Purpose	This task installs fiber-optic cables on optical (OC-N) cards in a 1+1 linear configuration.
Tools/Equipment	Fiber-optic cables
Prerequisite Procedures	NTP-A16 Install the OC-N Cards, page 2-13 NTP-A112 Clean Fiber Connectors, page 17-21
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None



Note

The Cisco OC-3 IR/STM-1 SH, OC-12 IR/STM-4 SH, and OC-48 IR/STM-16 SH interface optics, all working at 1310 nm, are optimized for the most widely used SMF-28 fiber, available from many suppliers.



Note


Corning MetroCor fiber is optimized for optical interfaces that transmit at 1550 nm or in the C and L DWDM windows. This fiber targets interfaces with higher dispersion tolerances than those found in OC-3 IR/STM-1 SH, OC-12 IR/STM-4 SH, and OC-48 IR/STM-16 SH interface optics. If you are using Corning MetroCor fiber, OC-3 IR/STM-1 SH, OC-12 IR/STM-4 SH, and OC-48 IR/STM-16 SH interface optics will become dispersion limited before they will become attenuation limited. In this case, consider using OC-3 LR/STM-1 LH, OC-12 LR/STM-4 LH, and OC-48 LR/STM-16 LH cards instead of OC-3 IR/STM-1 SH, OC-12 IR/STM-4 SH, and OC-48 IR/STM-16 SH cards.

**Note**

With all fiber types, network planners/engineers should review the relative fiber type and optics specifications to determine attenuation, dispersion, and other characteristics to ensure appropriate deployment.

- Step 1** Align the keyed ridge of the cable connector with the receiving SC connector on the faceplate connection point. Each card supports at least one transmit and one receive connector to create an optical carrier port. Figure 2-1 shows the cable location.

Figure 2-1 Installing Fiber-Optic Cables

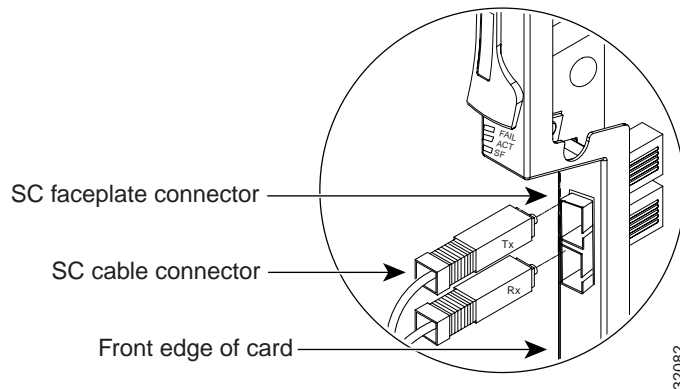

- Step 2** Gently insert the cable connector into the faceplate connection point until the connector snaps into place.
- Step 3** If you are installing fiber-optic cables on a multiport card, repeat Steps 1 and 2 until all SC connectors are in place.
- Step 4** Return to your originating procedure (NTP).

DLP-A43 Install Fiber-Optic Cables for Path Protection Configurations

Purpose	This task connects the fiber-optic cables to the east and west path protection ports at each node. See Chapter 6, “Turn Up Network” to provision and test path protection configurations.
Tools/Equipment	Fiber-optic cables
Prerequisite Procedures	NTP-A16 Install the OC-N Cards, page 2-13 NTP-A112 Clean Fiber Connectors, page 17-21
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

**Note**

To avoid error, connect fiber-optic cable so that the farthest slot to the right represents the east port, and the farthest slot to the left represents the west port. Fiber connected to an east port at one node must plug into the west port on an adjacent node.

**Caution**

Do not provision the path protection east and west ports on the same OC-N card.

- Step 1** Plan your fiber connections. Use the same plan for all path protection nodes.
- Step 2** Plug the fiber into the transmit (Tx) connector of an OC-N card at one node and plug the other end of the fiber into the receive (Rx) connector of an OC-N card at the adjacent node. The card displays an SF LED if the transmit and receive fibers are mismatched (one fiber connects a receive port on one card to a receive port on another card, or the same situation with transmit ports).
- Step 3** Repeat Step 2 until you have configured the ring.

Figure 2-2 shows fiber connections for a four-node path protection with trunk (span) cards in Slot 5 (west) and Slot 12 (east).

Figure 2-2 Connecting Fiber to a Four-Node Path Protection

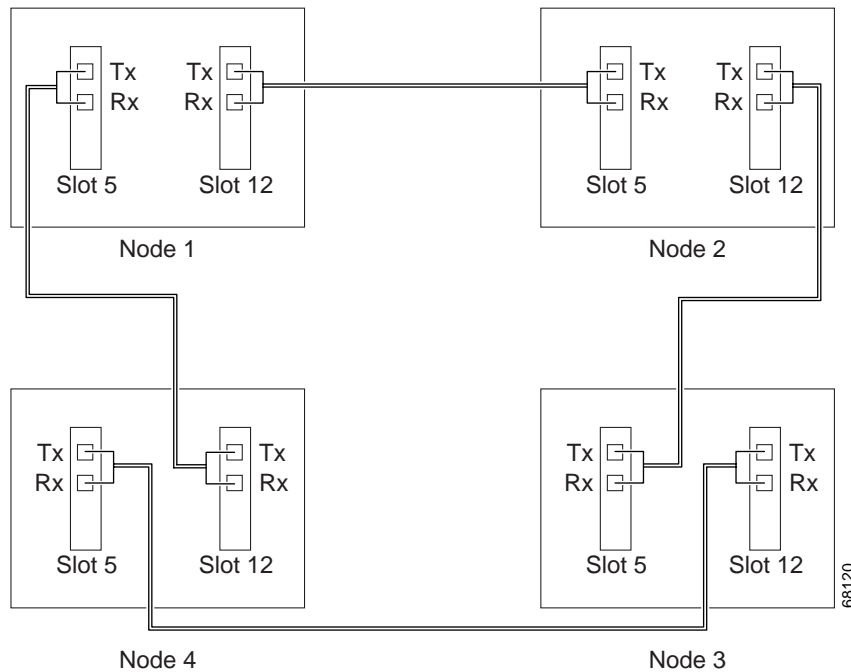


Figure 2-3 shows a traditional path protection dual ring interconnect example. Figure 2-4 shows an integrated dual ring interconnect example.

Figure 2-3 Connecting Fiber to an Eight-Node Traditional Path Protection Dual-Ring Interconnect


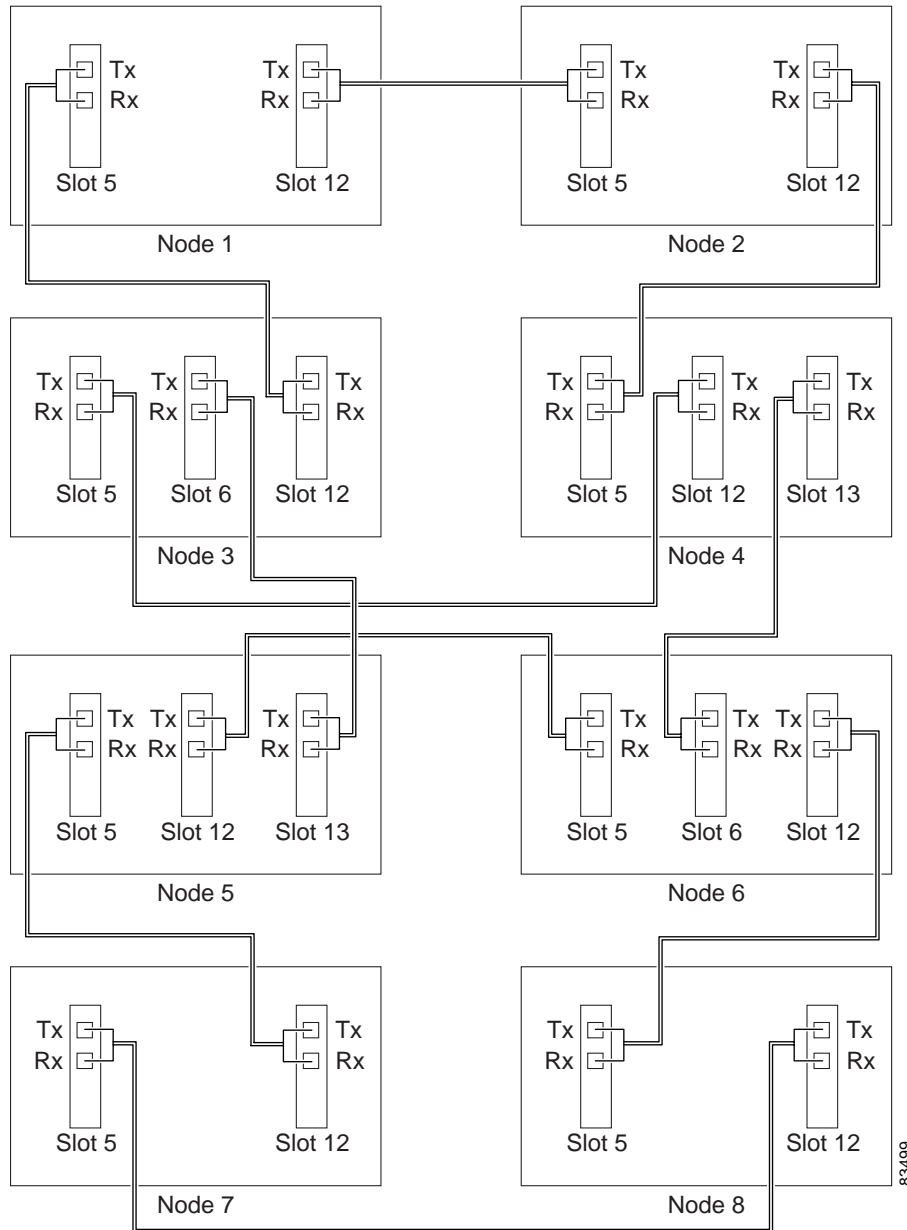


Figure 2-4 Connecting Fiber to a Six-Node Integrated Path Protection Dual-Ring Interconnect

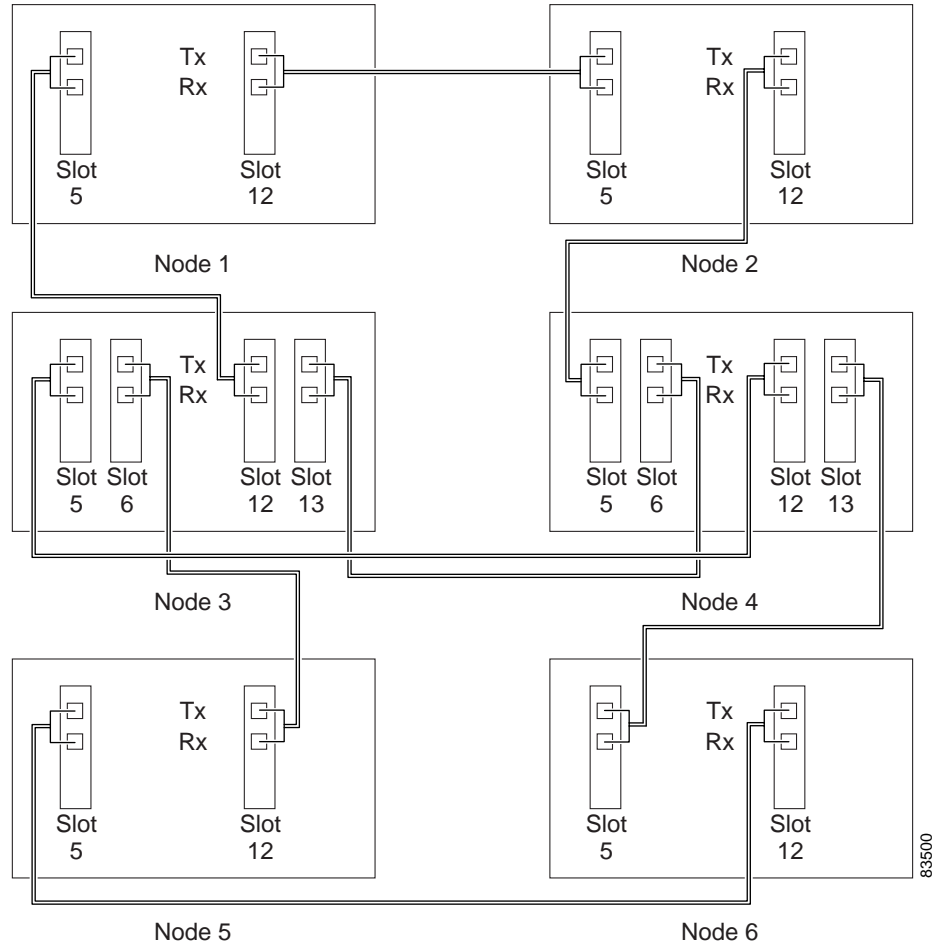

Step 4 Return to your originating procedure (NTP).

DLP-A44 Install Fiber-Optic Cables for BLSR Configurations

Purpose	This task installs the fiber-optics to the east and west BLSR ports at each node. See Chapter 6, “Turn Up Network” to provision and test BLSR configurations.
Tools/Equipment	Fiber-optic cables
Prerequisite Procedures	NTP-A16 Install the OC-N Cards, page 2-13 NTP-A112 Clean Fiber Connectors, page 17-21
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None


Note

To avoid error, connect fiber-optic cable so that the farthest slot to the right represents the east port, and the farthest slot to the left represents the west port. Fiber connected to an east port at one node must plug into the west port on an adjacent node.


Caution

Do not provision the BLSR east and west ports on the same OC-N card.

- Step 1** Plan your fiber connections. Use the same plan for all BLSR nodes.
- Step 2** Plug the fiber into the transmit (Tx) connector of an OC-N card at one node and plug the other end into the receive (Rx) connector of an OC-N card at the adjacent node. The card displays a SF LED if the transmit and receive fibers are mismatched.


Note

Do not mix working and protect card connections when connecting a four-fiber BLSR. The BLSR does not function if working and protect cards are interconnected. See Figure 2-6 on page 2-40 for an example of correct four-fiber BLSR cabling.

- Step 3** Repeat Step 2 until you have configured the ring.

Figure 2-5 shows fiber connections for a two-fiber BLSR with trunk (span) cards in Slot 5 (west) and Slot 12 (east).

Figure 2-5 Connecting Fiber to a Four-Node, Two-Fiber BLSR


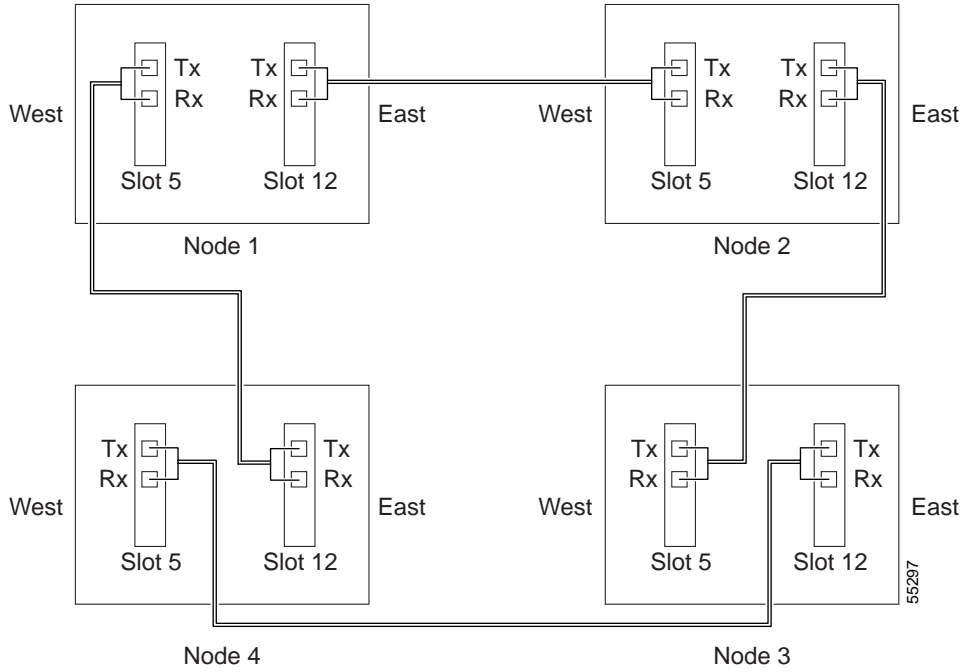


Figure 2-6 shows fiber connections for a four-fiber BLSR. Slot 5 (west) and Slot 12 (east) carry the working traffic. Slot 6 (west) and Slot 13 (east) carry the protect traffic.

Figure 2-6 Connecting Fiber to a Four-Node, Four-Fiber BLSR

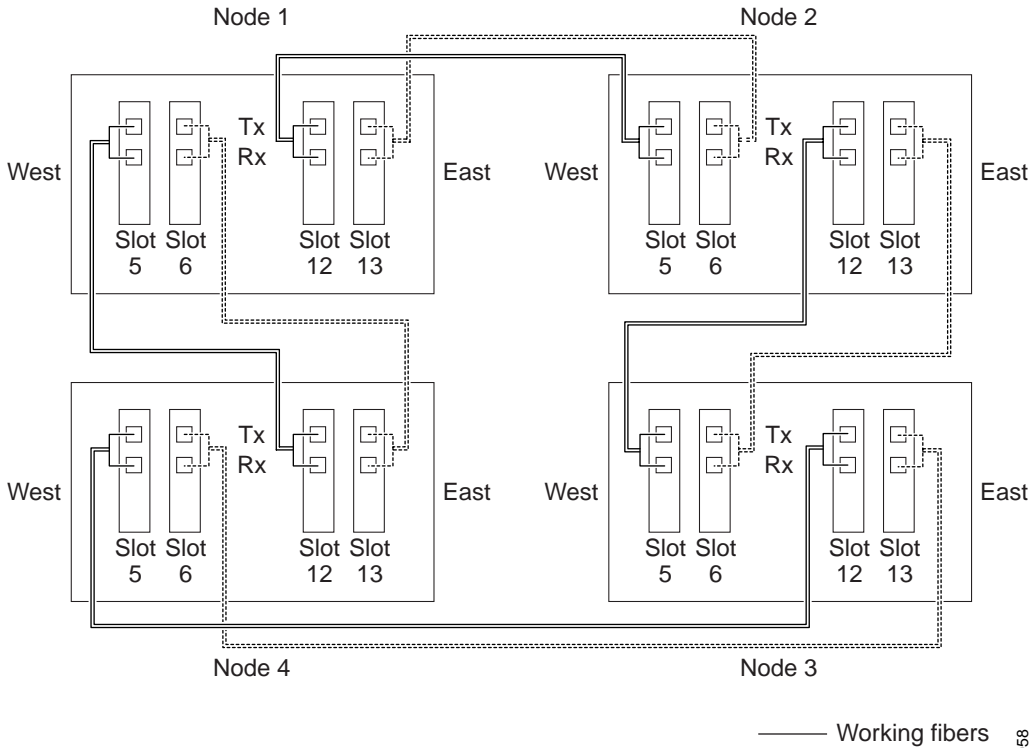

Step 4 Return to your originating procedure (NTP).

DLP-A45 Install the Fiber Boot

Purpose	This task installs the fiber boot.
Tools/Equipment	Fiber boot
Prerequisite Procedures	NTP-A16 Install the OC-N Cards, page 2-13
Required/As Needed	Required for all OC-N cards except the OC-192 and the OC-48 AS
Onsite/Remote	Onsite
Security Level	None



Note

You can install the fiber boots on the fiber-optic cables before or after the fibers are attached to the OC-N card. The fiber boot ensures that the fiber has the appropriate bend radius. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for additional information about the fiber boot.

**Note**


The fiber boot does not support the OC-48 IR/STM-16 SH AS 1310, OC-48 LR/STM-16 LH AS 1550, and OC-192 LR/STM64 LH 1550 cards. The boots are not necessary for these cards because of the angled SC connectors on the cards.

**Note**

If you are installing an OC3IR/STM1SH 1310-8 card, you must use a fiber clip instead of a fiber boot on the port 8 Rx fiber connector.

- Step 1** Position the open slot of the fiber boot underneath the fiber cable.
- Step 2** Push the fiber cable down into the fiber boot. Figure 2-7 shows the fiber boot attachment.
- Step 3** Twist the fiber boot to lock the fiber cable into the tail end of the fiber boot.
- Step 4** Slide the fiber boot forward along the fiber cable until the fiber boot fits snugly over the strain relief shroud onto the end of the SC cable connector. See *Cisco ONS 15454 Troubleshooting Guide* for a description of the Fiber boot.

Figure 2-7 Attaching a Fiber Boot

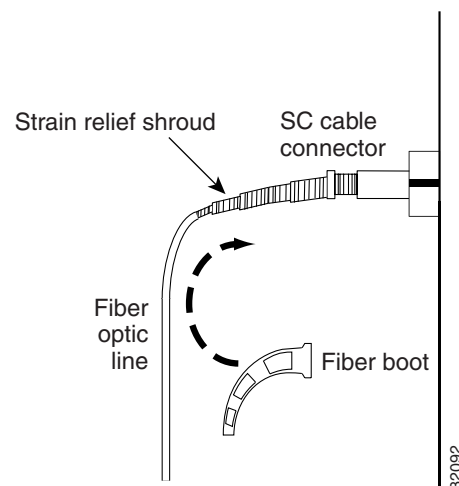

- Step 5** Return to your originating procedure (NTP).

NTP-A244 Install Fiber-Optic Cables on DWDM Cards

Purpose	This procedure installs the fiber-optic cables for DWDM OSC and nodes. DWDM nodes (Software R4.5) use automatic node setup (ANS) to provision initial power settings between cards and nodes. This application depends upon the presence of correct cabling. See Chapter 6, “Turn Up Network” to provision and test DWDM configurations.
Tools/Equipment	Fiber-optic cables
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A242 Install the DWDM Cards, page 2-23 NTP-A243 Install the DWDM Dispersion Compensating Cards, page 2-25 (as applicable)
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

**Warning**

Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated July 26, 2001.

**Warning**

Class 1M laser product.

**Note**

To avoid error, connect fiber-optic cable so that the farthest slot to the right represents the east port, and the farthest slot to the left represents the west port. Fiber connected to an east port at one node must plug into the west port on an adjacent node.

Step 1

Test the optical receive levels for the cards installed and attenuate accordingly. See Table 2-4 for DWDM card minimum and maximum transmit and receive levels.

Table 2-4 DWDM Card Transmit and Receive Levels

Card	Transmit		Receive	
	Minimum	Maximum	Minimum	Maximum
32DMX-O	-29dBm	-8dBm	+2dBm	+17dBm
32MUX-O	-13dBm	+2dBm	-4.5dBm	+6dBm
4MD-xx.x (client side)	-29 dBm	-8dBm	-4.5dBm	+6dBm
AD-1C-xx.x (client side)	-29dBm	-8dBm	-4.5dBm	+6dBm
AD-2C-xx.x (client side)	-29dBm	-8dBm	-4.5dBm	+6dBm
AD-4C-xx.x (client side)	-29dBm	-8dBm	-4.5dBm	+6dBm

Table 2-4 DWDM Card Transmit and Receive Levels (continued)

Card	Transmit		Receive	
AD-1B-xx.x (client side)	-29dBm	-8dBm	-4.5dBm	+6dBm
AD-4B-xx.x (client side)	-29dBm	-8dBm	-4.5dBm	+6dBm
OSCM (OC-3 channel only)	-24dBm	-0.5dBm	-42dBm	-7dBm

- Step 2** Inspect and clean all fiber connectors thoroughly. See the “NTP-A112 Clean Fiber Connectors” procedure on page 17-21 for instructions. Dust particles can degrade performance. Put caps on any fiber connectors that are not used.
- Step 3** Complete the “DLP-A423 Install Fiber-Optic Cables for Basic OSC on All DWDM Nodes” task on page 2-43.
- Step 4** As required, complete the “DLP-A424 Install Fiber-Optic Cables for a Terminal Node” task on page 2-45.
- Step 5** As required, complete the “DLP-A425 Install Fiber-Optic Cables for a Hub Node” task on page 2-46.
- Step 6** As required, complete the “DLP-A426 Install Fiber-Optic Cables for a Line Amplifier Node” task on page 2-48.
- Step 7** As required, complete the “DLP-A427 Install Fiber-Optic Cables for an Amplified or Passive OADM Node” task on page 2-51.
- Step 8** Continue with the “NTP-A245 Route Fiber-Optic Cables” procedure on page 2-57.

Stop. You have completed this procedure.



DLP-A423 Install Fiber-Optic Cables for Basic OSC on All DWDM Nodes

Purpose	This task explains how to install fiber-optic cables for optical service channels on all Release 4.5 DWDM shelves.
Tools	Fiber-optic cables
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A242 Install the DWDM Cards, page 2-23
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None



Note

To avoid error, connect fiber-optic cable so that the farthest slot to the right represents the east port, and the farthest slot to the left represents the west port. Fiber connected to an east port at one node must plug into the west port on an adjacent node.

-
- Step 1** Refer to your site plan when cabling the node. Connect fiber optic cabling for the OSC by consulting the following rules:
- The OPT-BST and the OSC-CSM are the only cards that directly interface with the line (span) fiber.
 - The OSCM only carries supervision channels, not DWDM channels.
 - The OSCM and the OSC-CSM cannot both be used on the same side of the NE (such as both being on the west side). You can have different cards on each side, for example an OSCM on the west side and an OSC-CSM on the east side.
 - When an OPT-BST and an OSC-CSM are both used on the same side of an NE, the OPT-BST combines the supervision channel with the DWDM channels and the OSC-CSM acts as an OSCM; it does not carry DWDM traffic.
 - When an OPT-BST and an OSC-CSM are used on opposite sides of the NE, the supervision channel does not require any additional connection.
 - The East OPT-BST OSC Rx port is connected to East OSCM Tx port.
 - The East OPT-BST OSC Tx port is connected to East OSCM Rx port.
 - The East OPT-BST OSC Rx port is connected to East OSC-CSM Line Tx port.
 - The East OPT-BST OSC Tx port is connected to East OSC-CSM Line Rx port.
 - The West OPT-BST OSC Tx port is connected to West OSCM Rx port.
 - The West OPT-BST OSC Rx port is connected to West OSCM Tx port.
 - The West OPT-BST OSC-Tx port is connected to West OSC-CSM Line Rx port.
 - The West OPT-BST OSC-Rx port is connected to West OSC-CSM Line Tx port.
- Step 2** Plug the fiber into the West Line transmit (Rx) connector of an OPT-BST (or OSC-CSM) card and into the adjacent node East OPT-BST or OSC-CSM Line Tx connector; and then repeat in the other direction (east to west, Rx to Tx). Ensure you are connecting the West Line ports to the adjacent node East Line ports.
-  **Note** The card displays an SF LED if the transmit and receive fibers are mismatched (one fiber connects a receive port on one card to a receive port on another card, or the same situation with transmit ports).
-
- Step 3** Repeat Step 2 until you have connected the nodes according to the site plan.
- Step 4** At the West side of the first node, plug one end of a fiber cable into the West OPT-BST OSC Rx connector and the other end into West OSCM Tx connector. Repeat the cabling from the West OSCM Rx to the OPT-BST OSC Tx.
-  **Note** An OSC-CSM card takes the place of an OPT-BST and OSCM card for that side of the node and does not require OSC cabling.
-
- Step 5** At the East side of the first node, plug one end of a fiber cable into the East OPT-BST OSC Rx connector and the other end into East OSCM Tx connector. Repeat the cabling from the East OSCM Rx to the OPT-BST OSC Tx.
- Step 6** Repeat Steps 4 and 5 at each node.

Step 7 Return to your originating procedure (NTP).

DLP-A424 Install Fiber-Optic Cables for a Terminal Node

Purpose	This task gives instruction and rules to install fiber-optic cables on a terminal node DWDM shelf. See Chapter 7, “Turn Up DWDM Network” to provision and test DWDM configurations.
Tools	Fiber-optic cables
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A242 Install the DWDM Cards, page 2-23 NTP-A243 Install the DWDM Dispersion Compensating Cards, page 2-25 (as applicable)
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Note

To avoid error, connect fiber-optic cable so that the farthest slot to the right represents the east port, and the farthest slot to the left represents the west port. Fiber connected to an east port at one node must plug into the west port on an adjacent node.

Step 1 Refer to your site plan when cabling the node. Connect fiber optic cabling for the terminal site by consulting the following rules:

- A terminal site has only one side (as compared to a hub node, which has two sides).
- The port line direction is not significant.
- The OPT-BST and OPT-PRE cards are not mandatory.
- The OSC-CSM or OPT-BST Tx port is connected to the OPT-PRE COM Rx port.
- The OPT-PRE COM Tx port is connected to the 32DMX-O COM Rx port.
- The 32MUX-O Tx port is connected to the OSC-CSM or OPT-BST COM Rx port.

Refer to Figure 2-8 on page 2-47 for an example of hub node cabling which, as noted above, is similar to a terminal node except that a terminal node only has one side.

Step 2 Plug one fiber cable end into the desired Rx port and other end into the desired Tx port.



Note

The card displays an SF LED if the transmit and receive fibers are mismatched (one fiber connects a receive port on one card to a receive port on another card, or the same situation with transmit ports).

Step 3 Repeat Step 2 until you have connected the nodes according to the site plan.

Step 4 Return to your originating procedure (NTP).

DLP-A425 Install Fiber-Optic Cables for a Hub Node

Purpose	This task gives instructions, rules, and an example to install fiber-optic cables on a hub node DWDM shelf. See Chapter 7, “Turn Up DWDM Network” to provision and test DWDM configurations.
Tools	Fiber-optic cables
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A242 Install the DWDM Cards, page 2-23 NTP-A243 Install the DWDM Dispersion Compensating Cards, page 2-25 (as applicable)
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Note

To avoid error, connect fiber-optic cable so that the farthest slot to the right represents the east port, and the farthest slot to the left represents the west port. Fiber connected to an east port at one node must plug into the west port on an adjacent node.

- Step 1** Refer to your site plan when cabling the node. Connect fiber optic cabling for the hub node by consulting the following rules:
- The West OPT-BST or OSC-CSM card common (COM) Tx port is connected to the West OPT-PRE COM Rx port.
 - The West OPT-PRE COM Tx port is connected to the West 32DMX-O COM Rx port.
 - West 32MUX-O COM Tx port is connected to the West OPT-BST or OSC-CSM COM Rx port
 - The East 32MUX-O COM Tx port is connected to the East OPT-BST or OSC-CSM COM Rx port.
 - The East OPT-BST or OSC-CSM COM Tx port is connected to the OPT-PRE COM Rx port.
 - The East OPT-PRE COM Tx port is connected to the 32DMX-O COM Rx port.

Figure 2-8 shows a sample hub node with cabling.

Figure 2-8 Fibering a Hub Node

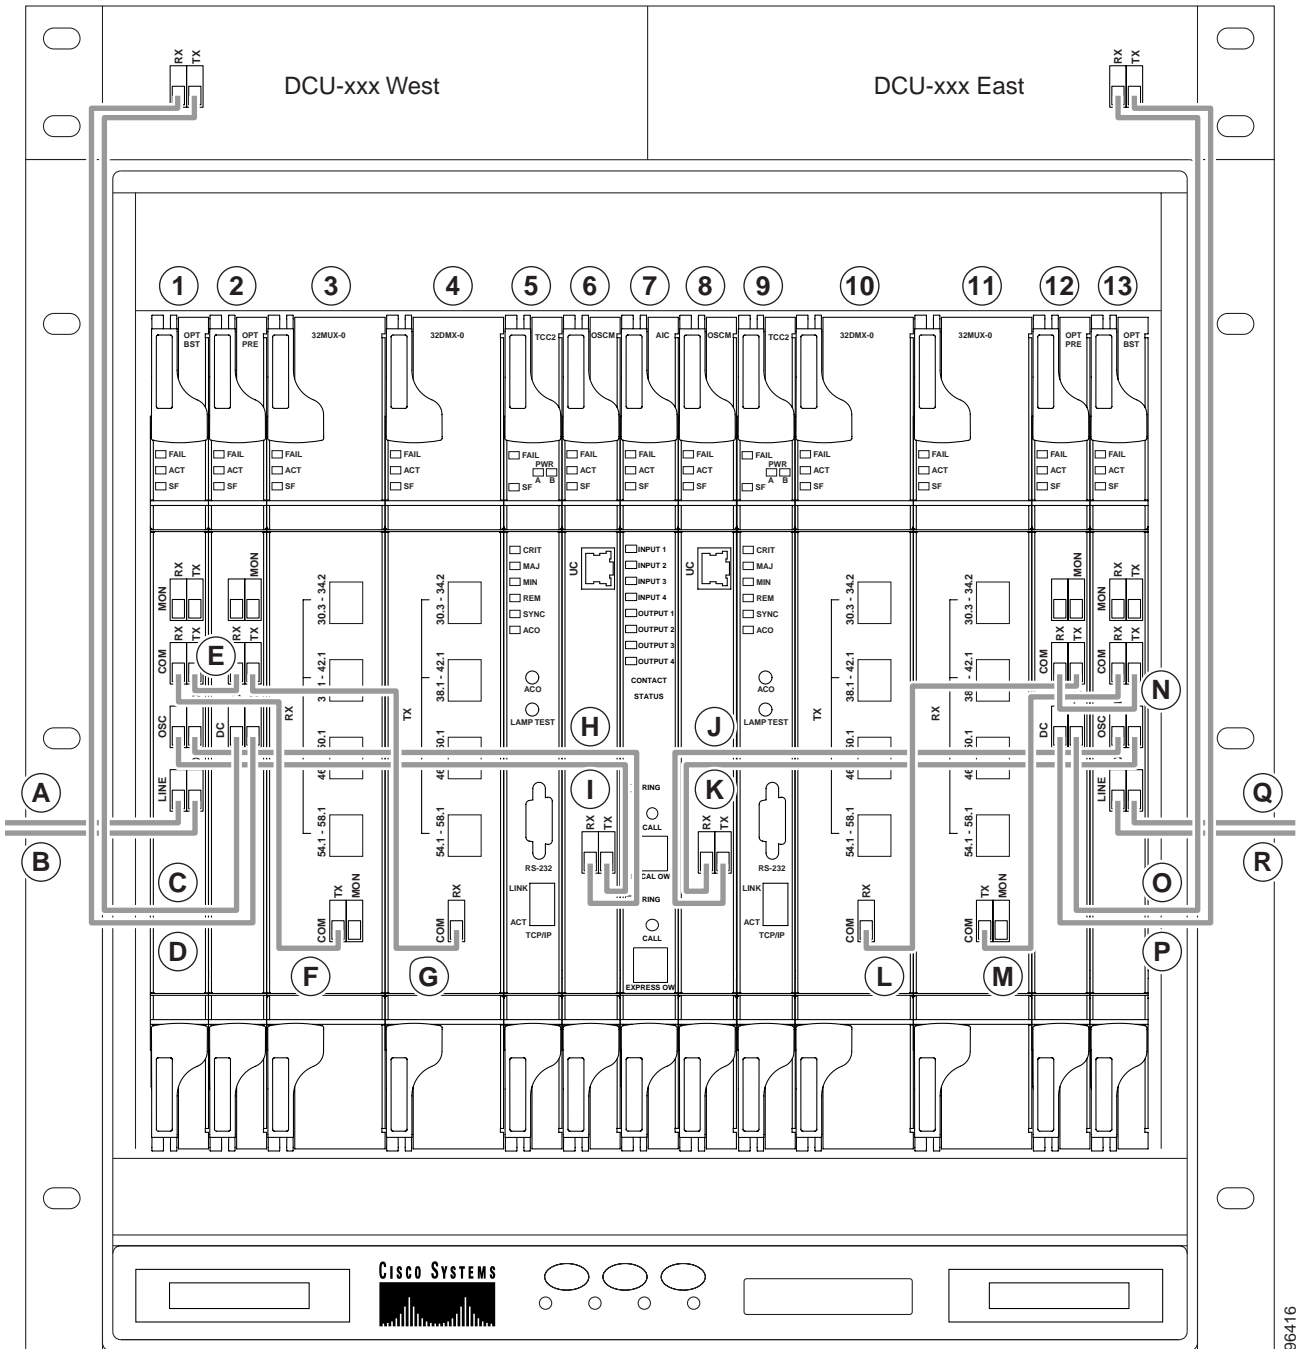

1	Slot 1OPT-BST West	D	DC West Rx from Slot 2 DCC Tx
2	Slot 2 OPT-PRE West	E	Slot 1 COM Tx to Slot 2 COM Rx
3	Slot 3-4 32 MUX-O West	F	Slot 1 COM Rx from Slot 3-4 COM Tx

Before You Begin

4	Slot 5-6 32 DMX-O West	G	Slot 2 COM Tx to Slot 5-6 COM Rx
5	Slot 7 TCC2	H	Slot 1 OSC Tx to slot 8 Rx
6	Slot 8 OSCM West	I	Slot 1 OSC Rx from Slot 8 Tx
7	Slot 9 AIC	J	Slot 10 Tx to Slot 17 OSC Rx
8	Slot 10 OSCM East	K	Slot 10 Rx from Slot 17 OSC Tx
9	Slot 11 TCC2	L	Slot 12-13 COM Rx from Slot 16 COM Tx
10	Slot 12-13 32 DMX-O East	M	Slot 14-15 COM Tx to Slot 17 COM Rx
11	Slot 14-15 32 MUX-O East	N	Slot 16 COM Rx from Slot 17 COM Tx
12	Slot 16 OPT-PRE East	O	Slot 16 DC Tx to DCU East Rx
13	Slot 17 OPT-BST East	P	Slot 16 DC Rx from DCU East Tx
A	Slot 1 Line Rx from span fiber	Q	Slot 17 Line Tx to span fiber
B	Slot 1 Line Tx to span fiber	R	Slot 17 Line Rx from span fiber
C	DCU West Tx to Slot 2 DC Rx	—	

Step 2 Plug one fiber cable end into the desired Rx port and other end into the desired Tx port.



Note The card displays an SF LED if the transmit and receive fibers are mismatched (one fiber connects a receive port on one card to a receive port on another card, or the same situation with transmit ports).

Step 3 Repeat Step 2 until you have connected the nodes according to the site plan.

Step 4 Return to your originating procedure (NTP).

DLP-A426 Install Fiber-Optic Cables for a Line Amplifier Node

Purpose	This task gives instructions, rules, and an example to install fiber-optic cables on a line amplifier node in a DWDM shelf. See Chapter 7, “Turn Up DWDM Network” to provision and test DWDM configurations.
Tools	Fiber-optic cables
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A242 Install the DWDM Cards, page 2-23 NTP-A243 Install the DWDM Dispersion Compensating Cards, page 2-25 (as applicable)
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

**Note**

To avoid error, connect fiber-optic cable so that the farthest slot to the right represents the east port, and the farthest slot to the left represents the west port. Fiber connected to an east port at one node must plug into the west port on an adjacent node.

Step 1


Refer to your site plan when cabling the node. Connect fiber optic cabling for the line amplifier node by consulting the following rules:

- Line amplifier node layout allows all combinations of OPT-PRE and OPT-BST and allows you to use asymmetrical card choices in west-to-east and east-to-west configurations. For a given line direction, you can configure the four following possibilities:
 - Only preamplification
 - Only booster amplification
 - Both pre- and booster amplification
 - Neither pre- nor booster amplification
- If an OPT-PRE card is present west-to-east:
 - The West OSC-CSM or OPT-BST COM Tx is connected to the West OPT-PRE COM Tx port
 - The West OPT-PRE COM Tx port is connected to the East OSC-CSM COM Rx port
- If an OPT-PRE card is not present west-to-east, the West OSC-CSM or OPT-BST COM Tx port is connected to the East OSC-CSM or OPT-BST COM Rx port.
- If an OPT-PRE card is present east-to-west:
 - The East OSC-CSM or OPT-BST COM Tx port is connected to the East OPT-PRE COM Rx port.
 - The East OPT-PRE COM Tx port is connected to the West OSC-CSM or OPT-BST COM Rx port.
- If an OPT-PRE card is not present east-to-west, the East OSC-CSM or OPT-BST COM Tx port is connected to the West OSC-CSM or OPT-BST COM Rx port.

Before You Begin

Figure 2-9 shows a sample line amplifier node with cabling.

Figure 2-9 Fibering a Line Amplifier Node

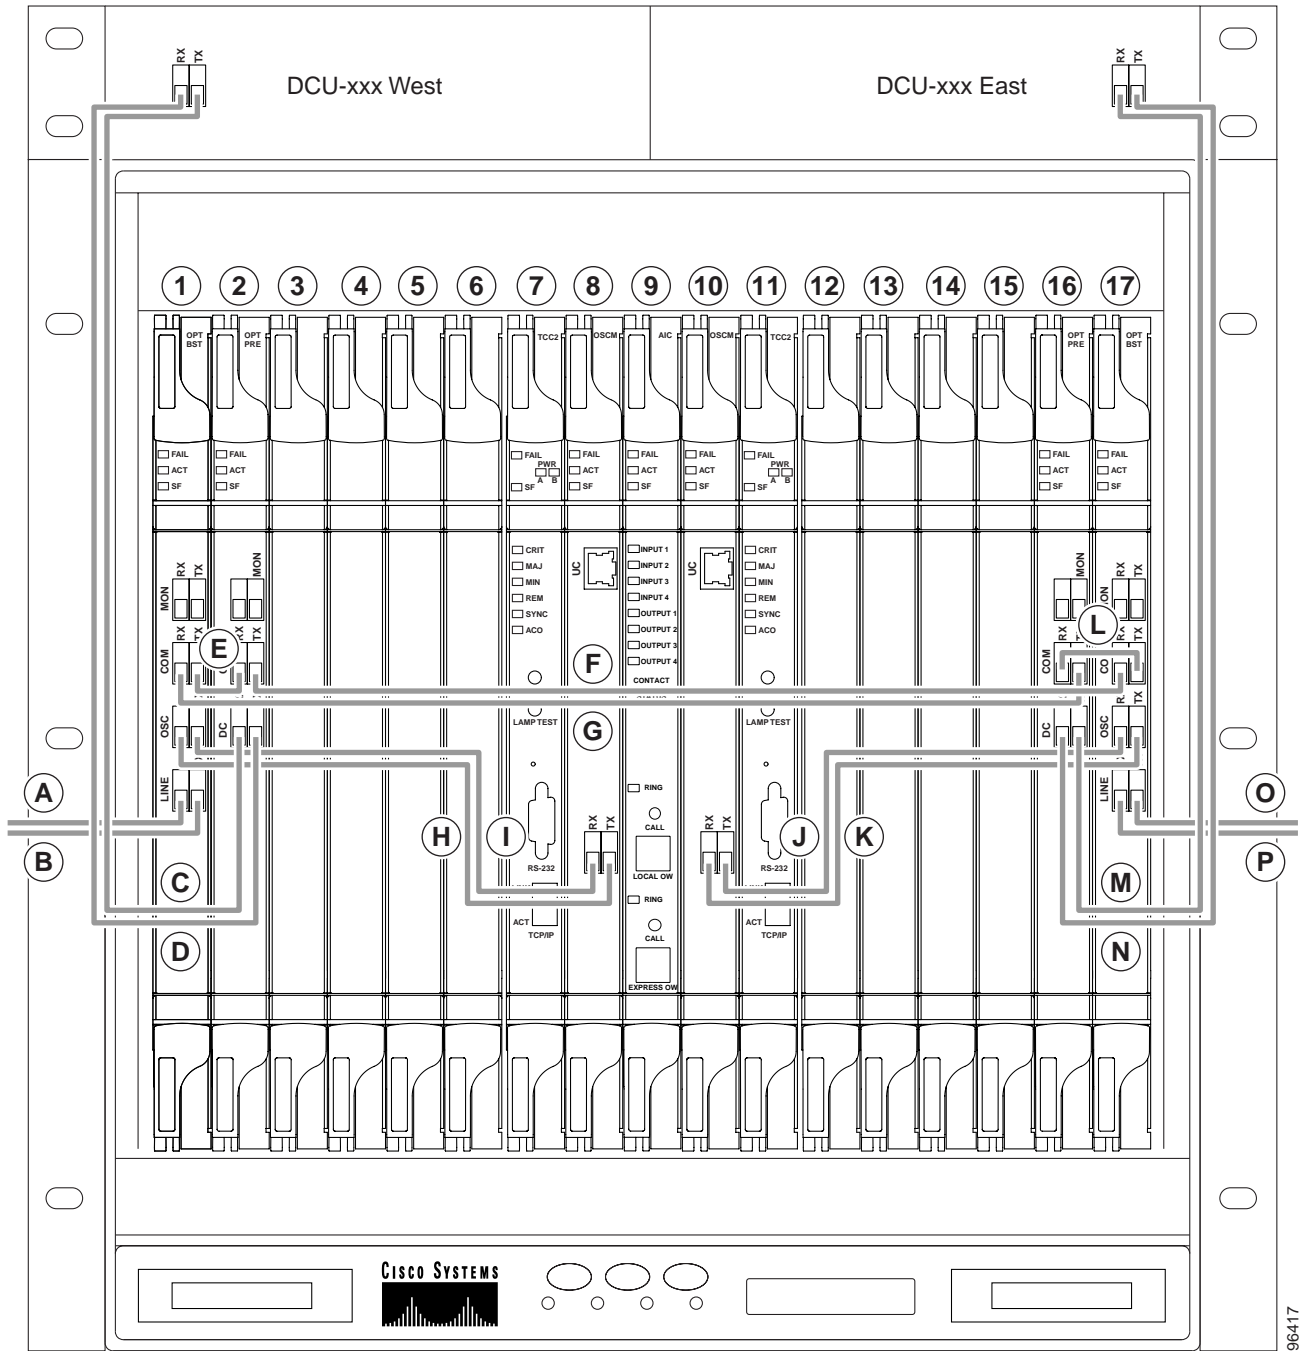

96417

1	Slot 1 OPT-BST West	A	Slot 1 Line Rx from span fiber
2	Slot 2 OPT-PRE West	B	Slot 1 Line Tx to span fiber
3	Slot 3 (not required for configuration)	C	DCU West Tx to Slot 2 DC Rx

4	Slot 4 (not required for configuration)	D	DCU West Rx from Slot 2 DC Tx
5	Slot 5 (not required for configuration)	E	Slot 1 COM Tx to Slot 2COM Rx
6	Slot 6 (not required for configuration)	F	Slot 2 COM Tx to Slot 17 COM Rx
7	Slot 7 TCC2	G	Slot 1 COM Rx from Slot 16 COM Tx
8	Slot 8 OSCM West	H	Slot 1 OSC Rx from Slot 8 Tx
9	Slot 9 AIC	I	Slot 1 OSC Tx to Slot 8 Rx
10	Slot 10 OSCM East	J	Slot 10 Tx to Slot 17 OSC Rx
11	Slot 11 TCC2	K	Slot 10 Rx from Slot 17 OSC Tx
12	Slot 12 (not required for configuration)	L	Slot 16 COM Rx from Slot 17 COM Tx
13	Slot 13 (not required for configuration)	M	Slot 16 DC Tx to DCU-East Rx
14	Slot 14 (not required for configuration)	N	Slot 16 DC Rx from DCU-East Tx
15	Slot 15 (not required for configuration)	O	Slot 17 Line Tx to span fiber
16	Slot 16 OPT-PRE East	P	Slot 17 Line Rx from span fiber
17	Slot 17 OPT-BST East	—	

Step 2 Plug one fiber cable end into the desired Rx port and other end into the desired Tx port.



Note The card displays an SF LED if the transmit and receive fibers are mismatched (one fiber connects a receive port on one card to a receive port on another card, or the same situation with transmit ports).

Step 3 Repeat Step 2 until you have connected the nodes according to the site plan.

Step 4 Return to your originating procedure (NTP).

DLP-A427 Install Fiber-Optic Cables for an Amplified or Passive OADM Node

Purpose	This task gives instructions, rules, and examples to install fiber-optic cables on an amplified or passive optical add/drop multiplexing (OADM) node in a DWDM shelf. See Chapter 7, “Turn Up DWDM Network” to provision and test DWDM configurations.
Tools	Fiber-optic cables
Prerequisite Procedures	NTP-A15 Install the Common Control Cards, page 2-2 NTP-A242 Install the DWDM Cards, page 2-23 NTP-A243 Install the DWDM Dispersion Compensating Cards, page 2-25 (as applicable)
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

**Note**

Amplified OADM nodes contain OPT-PRE cards and OPT-BST cards. Passive OADM nodes do not. Both contain add/drop channel or band cards and/or 32MUX-O and 32DMX-O cards.

**Note**

To avoid error, connect fiber-optic cable so that the farthest slot to the right represents the east port, and the farthest slot to the left represents the west port. Fiber connected to an east port at one node must plug into the west port on an adjacent node.

Step 1

Refer to your site plan when cabling the node. Connect fiber optic cabling for amplified or passive OADM nodes by consulting the following rules:

- The two sides of the OADM node do not need to be symmetrical. On each side, you can create one of the following four configurations:
 - OPT-BST and OPT-PRE
 - OSC-CSM and OPT-PRE
 - Only OSC-CSM
 - Only OPT-BST
- Regardless of direction, the TCC2 supervision always assumes the AD-xC or AD-xB COM Rx port and COM Tx ports are connected.

Step 2

Consult the following rules for OADM node express path cabled connections:

- The TCC2 checks and guarantees that the AD-xB or AD-xC port sequence on the west line side is the same as the AD-xC or AD-xB port sequence on the East side.
- Regardless of direction, the TCC2 supervision always assumes that the AD-xC or AD-xB EXP-Rx and EXP-Tx port are connected.
- When you set a connection between an AD-xC or AD-xB 1 EXP Tx port and an AD-xC or AD-xB 2 COM Rx port, the TCC2 automatically assumes the same connection between the other AD-xC or AD-xB 1 EXP Rx port and AD-xC or AD-xC 2 COM Tx port.
- Tx ports should only be connected to Rx ports.
- EXP ports are connected only to COM ports in between AD-xC or AD-xB cards that all belong to the east side (that is, they are daisy-chained).
- EXP ports are connected only to COM ports in between AD-xC or AD-xB cards that belong to the West side.
- The EXP port of the last AD-xC or AD-xB card in the west side is connected to the EXP port of the first AD-xC or AD-xB card in the east side.
- The OPT-BST COM Rx port is connected to the nearest (in slot position) AD-xC or AD-xB COM Tx port.
- The OPT-PRE COM Tx port is connected to the nearest (in slot position) AD-xC or AD-xB COM Tx port.
- If OADM cards are located in adjacent slots, the TCC2 assumes they are connected in a daisy-chain between the EXP ports and COM ports as noted above.
- The first west AD-xC or AD-xB card COM Rx port is connected to the west OPT-PRE or OSC-CSM COM Tx port.

- The first west AD-xC or AD-xB card COM Tx port is connected to the west OPT-BST or OPT-CSM COM Rx port.
- The last east AD-xC or AD-xB card COM Rx port is connected to the east OPT-PRE or OSC-CSM COM Tx port.
- The last east AD-xC or AD-xB COM Tx port is connected to the east OPT-BST or OSC-CSM Rx port.
- If a west OPT-PRE is present, the west OPT-BST or OSC-CSM is connected to the west OPT-PRE COM Rx port.
- If an east OPT-PRE is present, the east OPT-BST or OSC-CSM is connected to the east OPT-PRE COM Rx port.

Step 3 Consult the following rules for OADM node add/drop path cabled connections:

- AD-xB add/drop (Rx or Tx) ports are only connected to the following ports:
 - 4MD COM Tx or 4MD COM Rx ports
 - another AD-xB add/drop port (a pass-through configuration)
- An AD-xB add/drop band port is only connected to a 4MD card belonging to the same band.
- For each specific AD-xB, the add and drop ports for that band card are connected to the COM Tx and COM Rx ports of the same 4MD card.
- The AD-xB and 4MD card are located in the same direction side (the connected ports will all have the same line direction).


Step 4 Consult the following rules for OADM node pass-through path cabled connections:

- Pass-through connections are only established between add and drop ports on the same band or channel and same line direction.
- Only connect AD-xC or AD-xB channel add/drop ports to other AD-xC or AD-xB add/drop ports (as pass-through configurations).
- An add (Rx) port is only connected to a drop (Tx) port.
- Only connect 4MD client input/output ports to other 4bMD input/outputs.
- Only connect a 32DMX output port to a 32MUX-O input port.
- Add (Rx) ports are connected to drop (Tx) ports.
- A West AD-xB drop (Tx) port is connected to the corresponding west 4MD COM Rx port.
- A West AD-xB add (Rx) port is connected to the corresponding west 4MD COM Tx port.
- an East AD-xB drop (Tx) port is connected to the corresponding east 4MD COM Rx port.
- An East AD-xB add (Rx) port is connected to the corresponding east 4MD COM Tx port.

Before You Begin

Figure 2-10 shows a sample amplified OADM node with cabling. Figure 2-11 on page 2-56 shows a sample passive OADM node.


Figure 2-10 *Fibering an Amplified OADM Node*

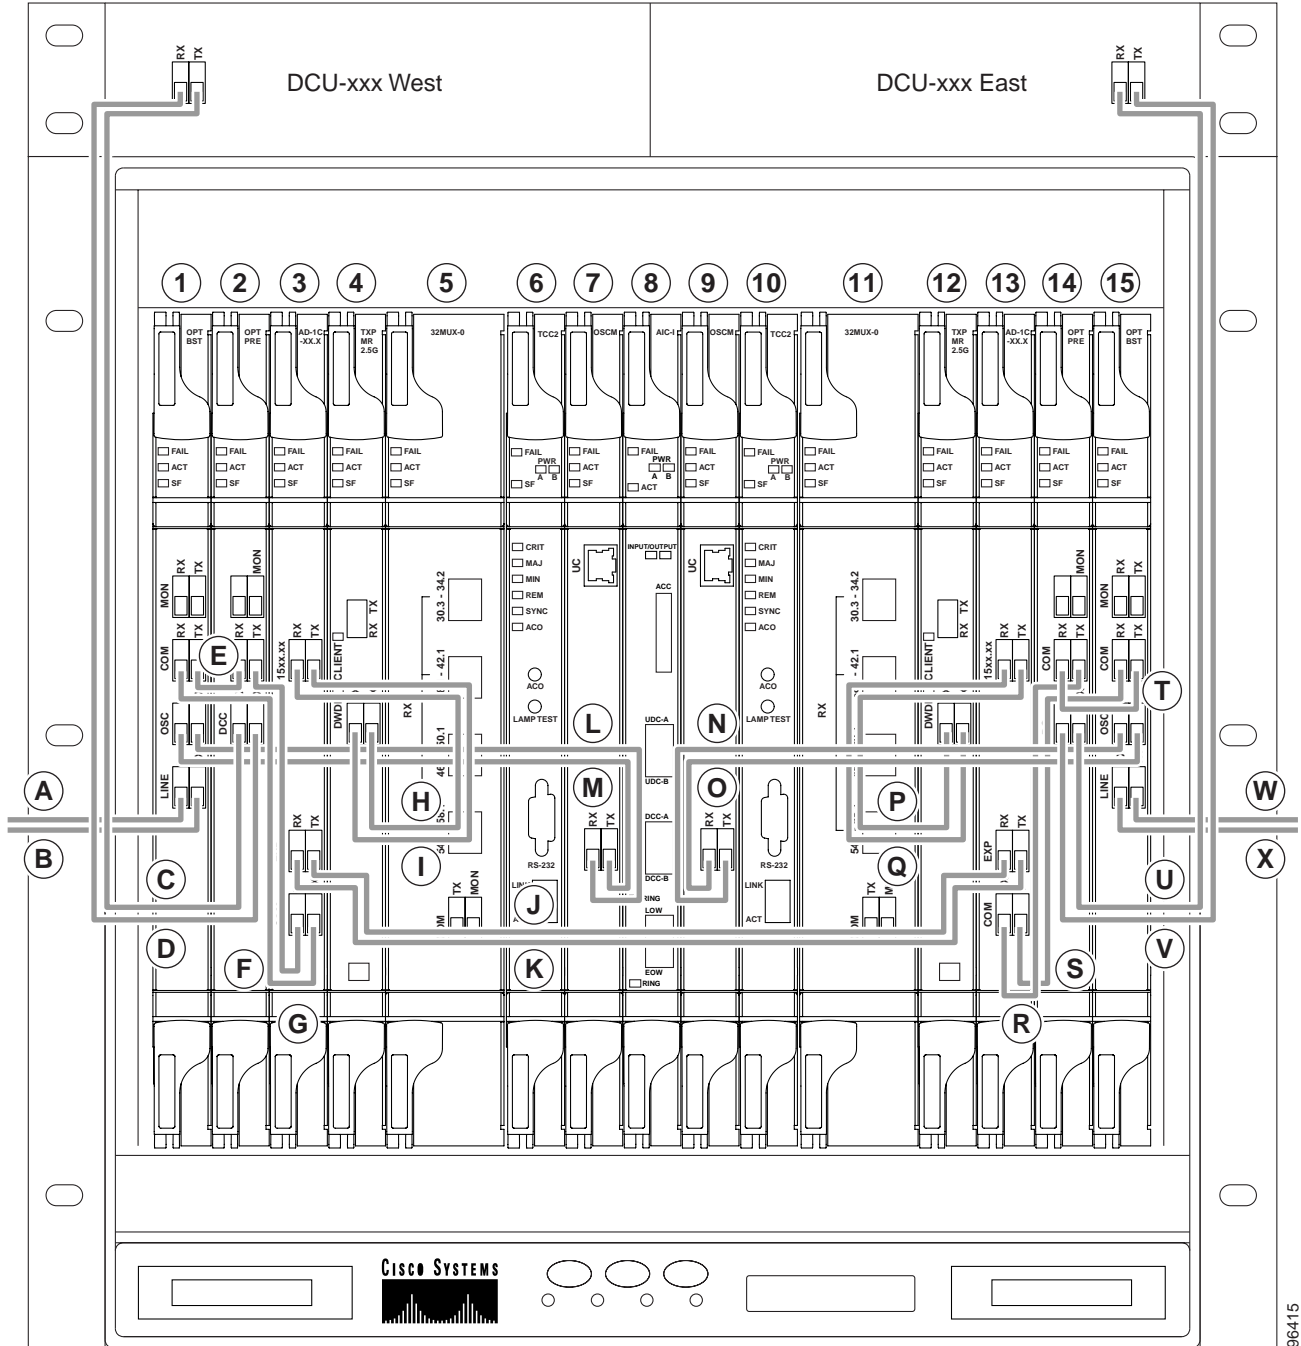

96415

1	Slot 1 OPT-BST West	F	Slot 1 COM Rx from Slot 3 COM Tx
2	Slot 2 OPT-PRE West	G	Slot 2 COM Tx to Slot 3 COM Rx
3	Slot 3 AD-1C-xx.x (OADM card) West	H	Slot 3 channel Rx from Slot 4 DWDM Tx
4	Slot 4 TxP_MR_2.5G (Transponder) West	I	Slot 3 channel Tx to Slot 4 DWDM Rx
5	Slot 5-6 32MUX-O West	J	Slot 3 EXP Tx to Slot 15 EXP Rx
6	Slot 7 TCC2	K	Slot 3 EXP Rx from Slot 15 EXP Tx
7	Slot 8 OSCM West	L	Slot 1 OSC Tx to Slot 8 Rx
8	Slot 9 AIC-I	M	Slot 1 OSC Rx from Slot 8 Tx
9	Slot 10 OSCM East	N	Slot 10 Rx from Slot 17 OSC Tx
10	Slot 11 TCC2	O	Slot 10 Tx to Slot 17 OSC Rx
11	Slot 12-13 32MUX-O East	P	Slot 14 DWDM Rx from Slot 15 Channel Tx
12	Slot 14 TxP_MR_2.5G (Transponder) East	Q	Slot 14 DWDM Tx to Slot 15 Channel Rx
13	Slot 15 AD-1C-xx.x (OADM card) East	R	Slot 15 COM Rx from Slot 16 COM Tx
14	Slot 16 OPT-PRE East	S	Slot 15 COM Tx to Slot 17 COM Rx
15	Slot 17 OPT-BST East	T	Slot 16 COM Rx from Slot 17 COM Tx
A	Slot 1 Line Rx from span fiber	U	Slot 16 DC Tx to DCU-East Rx
B	Slot 1 Line Tx to span fiber	V	Slot 16 DC Rx from DCU-East Tx
C	DCU West Tx to Slot 2 DC Rx	W	Slot 17 Line Tx to span fiber
D	DCU West Rx from Slot 2 DC Tx	X	Slot 17 Line Rx from span fiber
E	Slot 1 COM Tx to Slot 2 COM Rx	—	

Figure 2-11 Fibering a Passive OADM Node

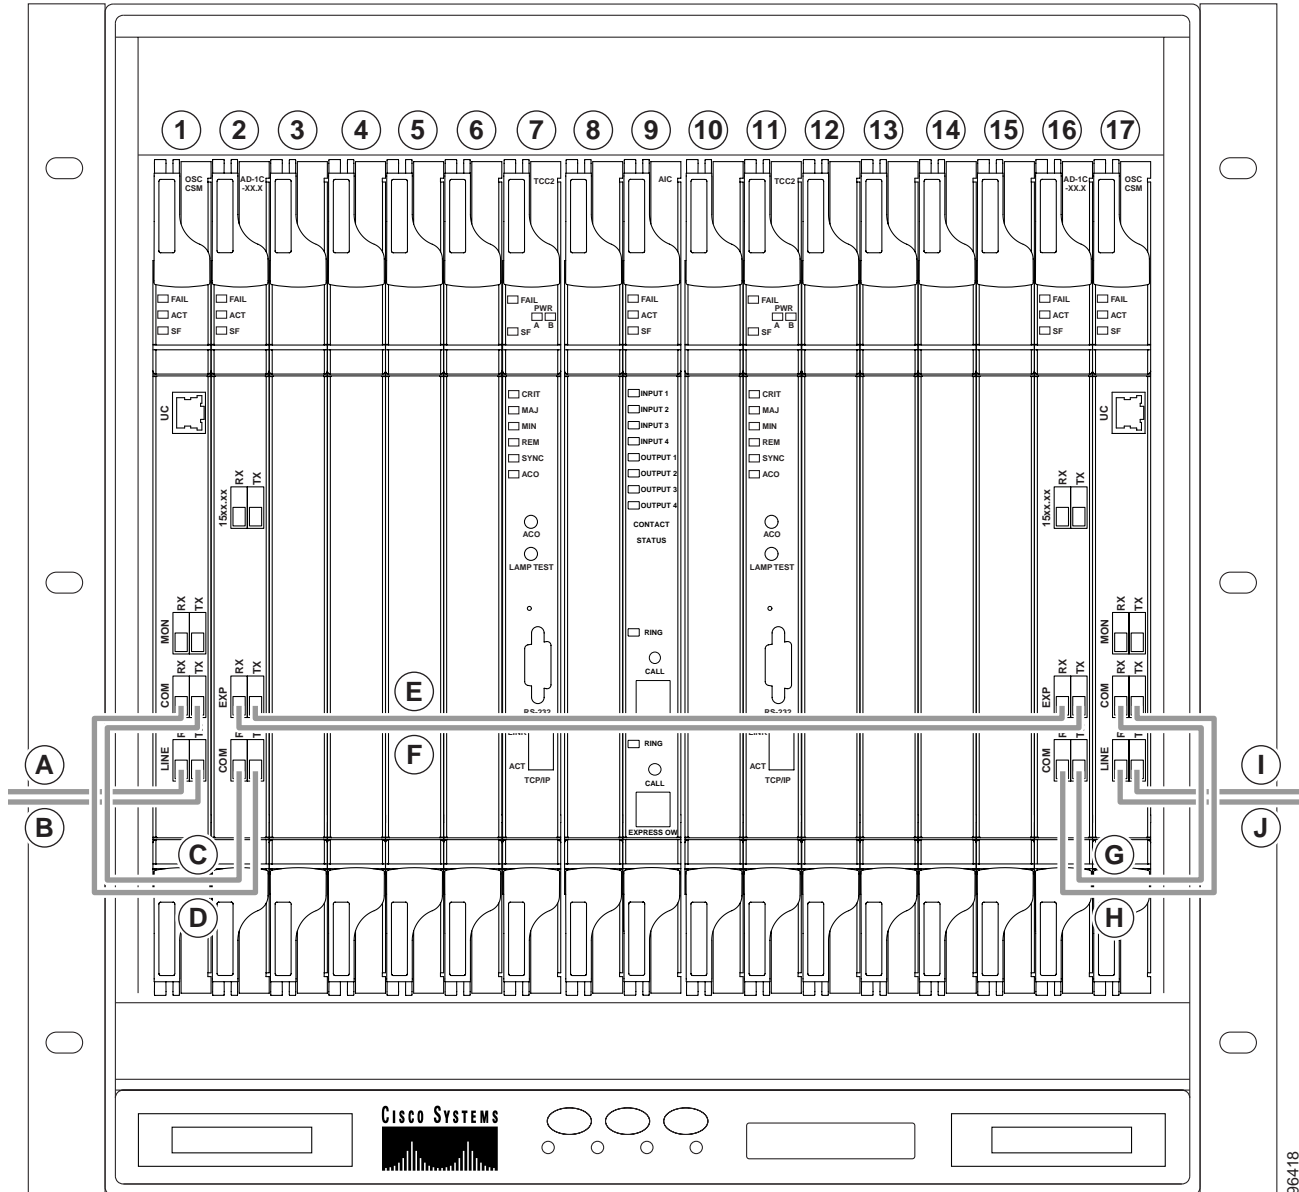

1	Slot 1 OSC-CSM West	15	Slot 15 (not necessary for configuration)
2	Slot 2 AD-1C-xx.x (OADM) West	16	Slot 16 AD-1C-xx.x (OADM) West
3	Slot 3 (not necessary for configuration)	17	Slot 17 OSC-CSM East
4	Slot 4 (not necessary for configuration)	A	Slot 1 Line Rx from span fiber
5	Slot 5 (not necessary for configuration)	B	Slot 1 Line Tx to span fiber
6	Slot 6 (not necessary for configuration)	C	Slot 1 COM Tx to Slot 2 COM Rx
7	Slot 7 TCC2	D	Slot 1 COM Rx from Slot 2 COM Tx
8	Slot 7 TCC2	E	Slot 2 EXP Tx to Slot 16 EXP Rx

9	Slot 9 AIC	F	Slot 2 EXP Rx from Slot 16 EXP Tx
10	Slot 10 (not necessary for configuration)	G	Slot 16 COM Tx to Slot 17 COM Rx
11	Slot 11 TCC2	H	Slot 16 COM Rx from Slot 17 COM Tx
12	Slot 12 (not necessary for configuration)	I	Slot 17 Line Tx to span fiber
13	Slot 13 (not necessary for configuration)	J	Slot 17 Line Rx from span fiber
14	Slot 14 (not necessary for configuration)	—	

Step 5 Plug one fiber cable end into the desired Rx port and other end into the desired Tx port.



Note The card displays an SF LED if the transmit and receive fibers are mismatched (one fiber connects a receive port on one card to a receive port on another card, or the same situation with transmit ports).

Step 6 Repeat Step 5 until you have connected the nodes according to the site plan.

Step 7 Return to your originating procedure (NTP).

NTP-A245 Route Fiber-Optic Cables

Purpose	This task describes how to route fiber-optic cables. This procedure can be used for DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	Any of the following: NTP-A247 Install Fiber-Optic Cables on OC-N Cards, page 2-30 NTP-A244 Install Fiber-Optic Cables on DWDM Cards, page 2-42
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

Step 1 Open the fold-down front door on the cable-management tray.

Step 2 Route the fiber cable on the card faceplate through the fiber clip on the faceplate, if provided. Fiber clips are factory-attached to the faceplate of OC-N card and to some DWDM cards (32MUX-O, 32DMX-O, OSCM, OPT-PRE, and OPT-BST).

GBICs do not have fiber clips; therefore, if you are routing optical cable from an E1000-2-G, E1000-2, G1000-2-G, or G10002 card, skip to Step 3.

Step 3 Route the fiber cables into the cable-management tray.

Step 4 Route the fiber cables out either side of the cable-management tray through the cutouts on each side of the shelf assembly. Use the reversible fiber guides to route cables out the desired side.

Step 5 Close the fold-down front door when all fiber cables in the front compartment are properly routed.

Stop. You have completed this procedure.

NTP-A20 Replace the Front Door

Purpose	This procedure explains how to replace the front door and door ground strap after installing cards and fiber-optic cables. This procedure can be used for DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	#2 Phillips screwdriver Medium slot-head screwdriver Small slot-head screwdriver
Prerequisite Procedures	NTP-A3 Open and Remove the Front Door, page 1-13
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None




Note

Be careful not to crimp any fiber cables that are connected to the OC-N cards or DWDM cards. Some might not have the fiber boot attached.

- Step 1** Insert the front door into the hinges on the shelf assembly.
- Step 2** Attach one end of the ground strap terminal lug (72-3622-01) to the male stud on the inside of the door. Attach and tighten the #6 Kepnut (49-0600-01) using the open-end wrench. See Figure 2-12 on page 2-59.

Figure 2-12 Installing the Door Ground Strap Retrofit Kit

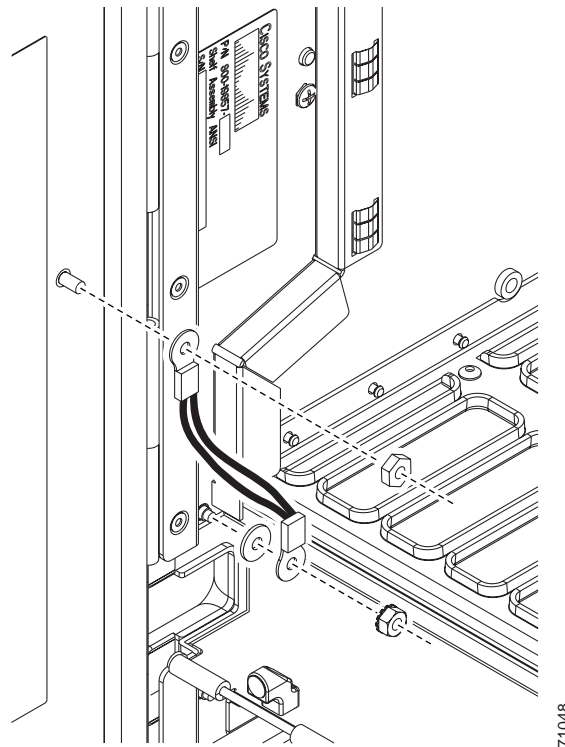

- Step 3** Attach the other end of the ground strap to the longer screw on the fiber guide.
- a. Attach the lock washer.
 - b. Attach the terminal lug.
 - c. Using the open-end wrench, attach and tighten the #4 Kepnut (49-0337-01) on the terminal lug.




Note To avoid interference with the traffic (line) card, make sure the ground strap is in a flat position when the door is open. To move the ground strap into a flat position, rotate the terminal lug counterclockwise before tightening the Kepnut.

- Step 4** Replace the left cable-routing channel.
- Step 5** Using a Phillips screwdriver, insert and tighten the screws for the cable-routing channel.

Figure 2-13 shows the shelf assembly with the front door and ground strap installed.

Figure 2-13 Shelf Assembly with Door Ground Strap Retrofit Kit Installed

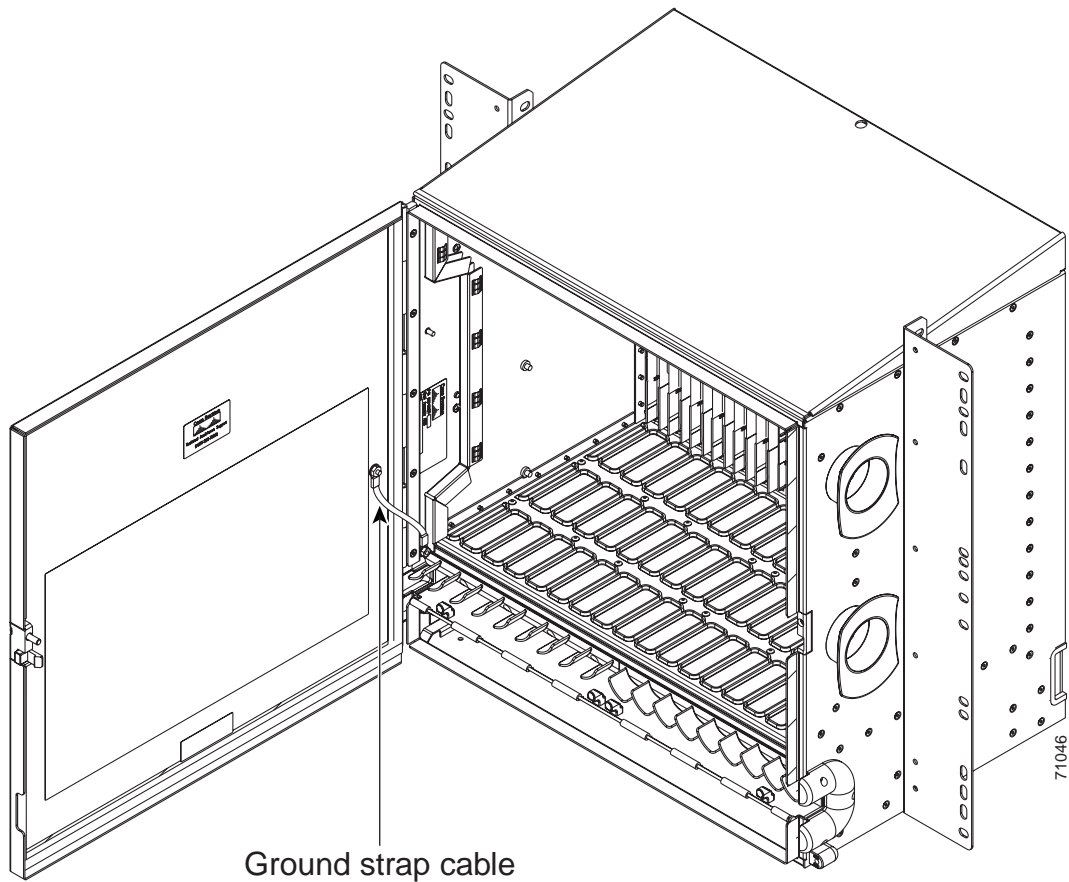

Step 6 Swing the door closed.



Note The ONS 15454 comes with a pinned hex key tool for locking and unlocking the front door. Turn the key counterclockwise to unlock the door and clockwise to lock it.

Stop. You have completed this procedure.



Connect the PC and Log into the GUI

This chapter explains how to connect PCs and workstations to the Cisco ONS 15454 and how to log into Cisco Transport Controller (CTC) software, the Cisco ONS 15454 Operation, Administration, Maintenance and Provisioning (OAM&P) user interface. The chapter provides procedures for creating a local craft, LAN, and remote modem connection to the ONS 15454. Procedures for connecting to the ONS 15454 using TL1 are provided in the *Cisco ONS 15454 and Cisco ONS 15327 TL1 Command Guide*.



Note

Except where noted, the procedures and tasks in this chapter apply to DWDM (Software Release 4.5) and non-DWDM (Software R4.1 and earlier) nodes.

Before You Begin

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A21 Set Up Computer for CTC, page 3-2—Complete this procedure if your PC or workstation has never been connected to an ONS 15454.
2. NTP-A234 Set Up CTC Computer for Local Craft Connection to the ONS 15454, page 3-10—Complete this procedure to set up your computer for an onsite craft connection to the ONS 15454.
3. NTP-A235 Set Up a CTC Computer for a Corporate LAN Connection to the ONS 15454, page 3-21—Complete this procedure to set up your computer to connect to the ONS 15454 using a corporate LAN.
4. NTP-A236 Set Up a Remote Access Connection to the ONS 15454, page 3-23—Complete this procedure to set up your computer for remote modem access to the ONS 15454.
5. NTP-A23 Log into the ONS 15454 GUI, page 3-24—Complete this procedure to log into CTC.

NTP-A21 Set Up Computer for CTC

Purpose	This procedure explains how to configure your PC or UNIX workstation to run Cisco Transport Controller (CTC).
Tools/Equipment	Cisco ONS 15454 Release 4.1 or 4.5 software or documentation CD
Prerequisite Procedures	None
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	None

-
- Step 1** If your computer is a Windows PC, complete the “DLP-A47 Run the CTC Installation Wizard for Windows” task on page 3-2, then go to Step 4.
- Step 2** If your computer is a UNIX workstation, complete the “DLP-A48 Run the CTC Installation Wizard for UNIX” task on page 3-7.
- Step 3** If your computer is a UNIX workstation and you installed the Java Runtime Environment (JRE) in Step 2, complete the “DLP-A49 Set Up the Java Runtime Environment for UNIX” task on page 3-9.
- Step 4** When your PC or workstation is set up, continue with one of the following procedures:
- NTP-A234 Set Up CTC Computer for Local Craft Connection to the ONS 15454, page 3-10
 - NTP-A235 Set Up a CTC Computer for a Corporate LAN Connection to the ONS 15454, page 3-21
 - NTP-A236 Set Up a Remote Access Connection to the ONS 15454, page 3-23

Stop. You have completed this procedure.

DLP-A47 Run the CTC Installation Wizard for Windows

Purpose	This task installs CTC online help as well as programs required to run CTC on Windows PCs: Netscape 4.73 and JRE 1.3.1_02.
Tools/Equipment	Cisco ONS 15454 Release 4.1 or 4.5 software or documentation CD
Prerequisite Procedures	None
Required/As Needed	This task is required if any one of the following is true: <ul style="list-style-type: none"> • Netscape Release 4.73 or later or Internet Explorer Release 4.0 (service pack 2) or later is not installed • JRE 1.3.1_02 is not installed • CTC online help is not installed and is needed
Onsite/Remote	Onsite or remote
Security Level	None

-
- Step 1** Verify that your computer has the following:
- Processor—Pentium II, 300 Mhz or faster.
 - RAM—128 MB.

- Hard drive—2 GB is recommended. 50 MB of space must be available.
- Operating System—Windows 95, Windows 98, Windows NT 4.0, Windows 2000, or Windows XP.
If your operating system is Windows NT 4.0, verify that Service Pack 5 or later is installed. From the Start menu, choose **Programs > Administrative Tools > Windows NT Diagnostics** and check the service pack on the Version tab of the Windows NT Diagnostics dialog box. If Service Pack 5 or later is not installed, do not continue. Install Service Pack 5 following the computer upgrade procedures for your site.
- CD drive.



Note Processor and RAM requirements are guidelines. CTC performance is faster if your computer has a faster processor and more RAM. Refer to the *Cisco ONS 15454 Reference Manual* for computer requirements needed for small, medium, and large ONS 15454 networks.

Step 2 Insert the Cisco ONS 15454 Release 4.1 or 4.5 software or documentation CD into your computer CD drive. The installation program begins running automatically. If it does not start, navigate to your computer's CD directory and double-click **setup.exe**.


The Cisco Transport Controller Installation Wizard displays the components that will be installed on your computer.

Step 3 Click **Next**.

Step 4 Complete one of the following (Figure 3-1):

- Choose **Typical** to install Netscape Communicator, CTC online help, and the Java Runtime Environment.
- Choose **Custom** to install one or two of the following components:
 - Netscape Communicator
 - CTC online help
 - Java Runtime Environment

Figure 3-1 Choosing Setup Type in the CTC Installation Wizard

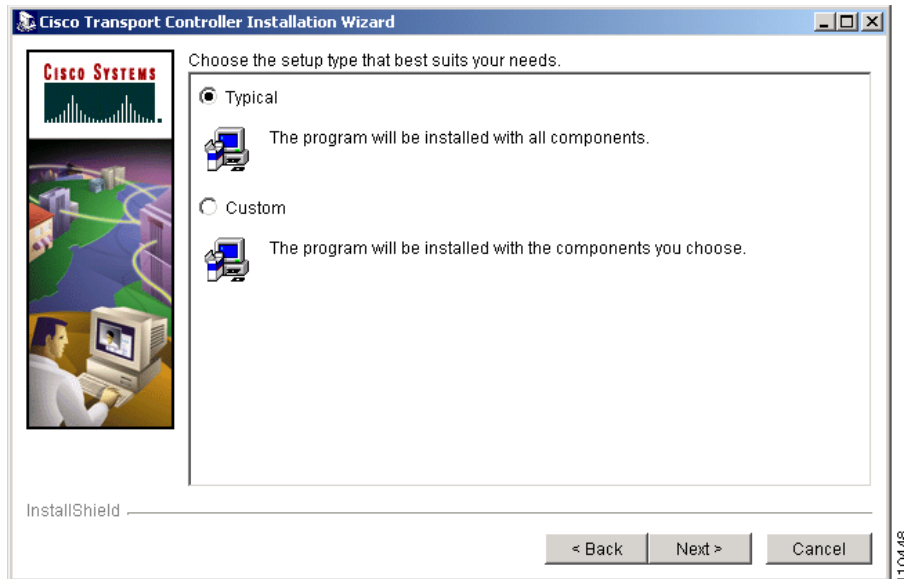


Step 5 Click **Next**.

Step 6 Complete the following, as applicable:


- If you selected **Typical**, skip this step and proceed to Step 7.
- If you selected **Custom** in Step 4, select the CTC components you want to install and click **Next** (Figure 3-2).
 - If you selected CTC online help, proceed to Step 7.
 - If you did not select CTC online help, proceed to Step 9.

Figure 3-2 Choosing CTC Components in the CTC Installation Wizard

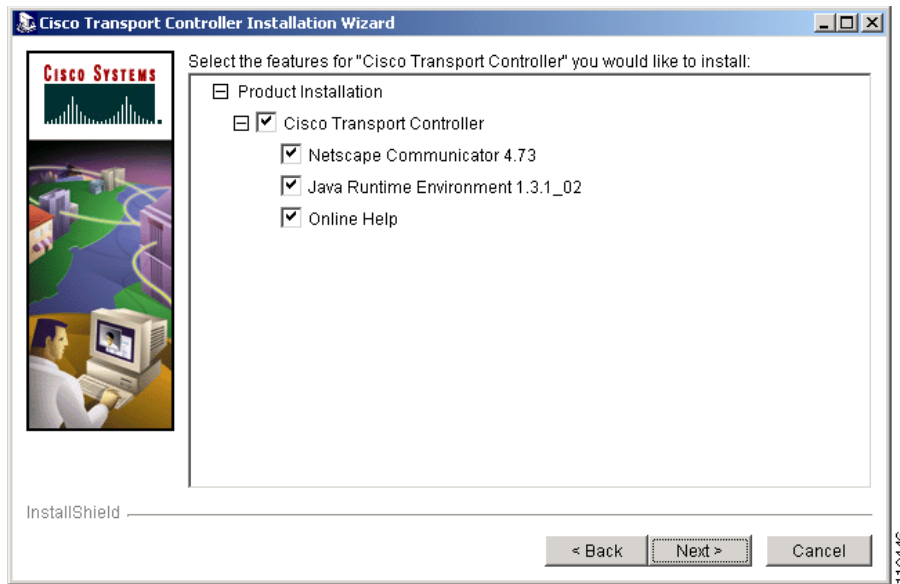

- Step 7** The directory where the installation wizard will install CTC online help appears (Figure 3-3). The default is C:\Program Files\Cisco\CTC\Documentation.
- If you do not want to change the directory, skip this step and proceed to Step 8.
 - If you want to change the CTC online help directory, type the new directory path in the Directory Name field, or click **Browse** to navigate to the directory.

Figure 3-3 Viewing the CTC Online Help Directory in the CTC Installation Wizard

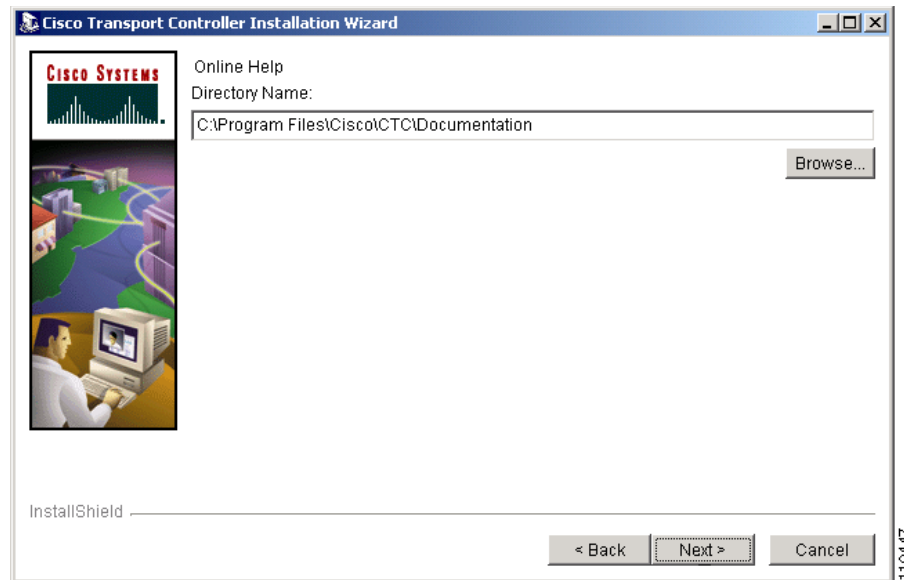

- Step 8** Click **Next**.
- Step 9** Review the components that will be installed.
- If you want to change the components, complete one of the following:
 - If you selected Typical in Step 4, click **Back** twice to return to the installation setup type panel. Choose **Custom** and repeat Steps 5 through 8.
 - If you selected Custom in Step 4, click **Back** once or twice (depending on the components selected) until the component selection panel appears. Repeat Steps 6 through 8.
 - If Netscape Communicator is a selected component, close any active CTC sessions (for example, if you are monitoring alarms or conditions) and proceed to Step 10.
 - If you selected Custom in Step 4 and did not select Netscape Communicator in Step 6, proceed to Step 14.
- Step 10** Click **Next**.
- An Installation Issues dialog box appears.
- Step 11** Review the issues, then click **OK**. The InstallShield program begins the Netscape Communicator 4.73 Setup program.
- Step 12** Complete the Netscape installation:
- In the Netscape Communicator 4.73 Setup dialog box, click **Next**.
 - In the Software License Agreement dialog box, click **Yes**.
 - In the Setup Type dialog box, click **Typical**, then click **Next**.

**Note**

If the Netscape installation hangs when installing RealPlayer G2, restart the CTC installation by pressing **Ctrl-Alt-Del**. In the Windows Security dialog box, click **Task Manager**. In the Windows Task Manager dialog box, click **Cisco Transport Controller Installation Wizard**, then click the **End Task** button. Click **Yes** in the confirmation dialog box. Navigate to the drive containing the CTC CD and double-click **CTC.exe**. Repeat Steps 1 to 11. At Step 12, Step c, click **Custom**, then click **Next**. At the next panel, deselect RealPlayer. Continue with Step d.

- d. In the Netscape Desktop Preferences Options dialog box, check the boxes that apply according to your site requirements (these options do not affect CTC operation), then click **Next**.
- e. In the Select Program Folder dialog box, click **Next**.
- f. In the Start Copying Files dialog box, click **Install**. The program begins the Netscape installation.
- g. In the Question dialog box, click **No**.
- h. In the Information dialog box, click **OK**.
- i. In the Restarting Windows dialog box, click **No, I will restart later**, then click **OK**.

Step 13 Close the Netscape Communicator directory window to display the Cisco Transport Controller Installation Wizard dialog box.

Step 14 In the CTC Installation Wizard dialog box, click **Next**. The Java 2 runtime environment installation begins.

Step 15 At the confirmation dialog box, click **OK**.

Step 16 Complete the JRE installation:

- a. In the Software License Agreement dialog box, click **Yes**.
- b. In the Choose Destination Location dialog box, click **Next**.
- c. In the Select Browser dialog box, complete one of the following and click **Next**:
 - If you want the JRE installed to be the default for Internet Explorer and/or Netscape, check the **Microsoft Internet Explorer** and/or **Netscape 6** check boxes.
 - If you do not want the JRE installed to be the default for Internet Explorer and/or Netscape, uncheck the **Microsoft Internet Explorer** and **Netscape 6** check boxes.

When JRE installation is complete, the Cisco Transport Controller Installation Wizard dialog box appears.

Step 17 Click **Next**. The CTC online help is installed.

Step 18 Click **Finish**.

Step 19 Return to your originating procedure (NTP).

DLP-A48 Run the CTC Installation Wizard for UNIX

Purpose	This task installs CTC online help and programs required to run CTC on Solaris workstations: Netscape 4.76 and JRE 1.3.1_02.
Tools/Equipment	Cisco ONS 15454 Release 4.1 software or documentation CD
Prerequisite Procedures	None
Required/As Needed	Required if any of the following are true: <ul style="list-style-type: none"> • Netscape Release 4.76 is not installed. • JRE 1.3.1_02 is not installed. • CTC online help is not installed and is needed.
Onsite/Remote	Onsite or remote
Security Level	None

Step 1 Verify that your computer has the following:

- RAM—128 MB.
- Hard drive—Verify that 50 MB of space is available.
- Operating System—Solaris 2.5.x or 2.6.x.



Note These requirements are guidelines. CTC performance is faster if your computer has a faster processor and more RAM. Refer to the *Cisco ONS 15454 Reference Manual* for computer requirements needed for small, medium, and large ONS 15454 networks.

Step 2 Change the directory, type:

```
cd /cdrom/cdrom0/
```

Step 3 From the techdoc454 CD directory, type:

```
./setup.bat
```

The Cisco Transport Controller Installation Wizard displays the components that will be installed on your computer:

- Netscape Communicator 4.76.
- Java Runtime Environment 1.3.1_02.
- CTC Online Help.

Step 4 Click **Next**.

Step 5 Complete one of the following:

- Choose **Typical** to install Netscape Communicator, CTC online help, and the Java Runtime Environment.
- Choose **Custom** if you only want to install one or two of these components.

Step 6 Click **Next**.

Step 7 Complete the following, as applicable:

- If you selected **Typical**, skip this step and proceed to Step 8.

- If you selected **Custom** in Step 5, select the CTC components you want to install and click **Next**. Complete one of the following:
 - If you selected CTC online help, proceed to Step 8.
 - If you did not select online help, proceed to Step 10.
- Step 8** The directory where the installation wizard will install CTC online help appears. The default is C:\Program Files\Cisco\CTC\Documentation. If you want to change the CTC online help directory, type the new directory path in the Directory Name field, or click **Browse** to navigate to the directory.
- Step 9** Click **Next**.
- Step 10** Review the components that will be installed. Complete the following, as applicable:
- If you want to change the components, complete one of the following:
 - If you selected Typical in Step 5, click **Back** twice to return to the installation setup type panel. Choose **Custom** and repeat Steps 6 through 9.
 - If you selected Custom in Step 5, click **Back** once or twice (depending on the components selected) you reach the component selection panel and check the desired components. Repeat Steps 7 through 9.
 - If Netscape Communicator is a selected component, close any active CTC sessions (for example, if you are monitoring alarms or conditions) and proceed to Step 11.
 - If you selected **Custom** in Step 5 and did not select Netscape Communicator in Step 7, proceed to Step 13.
- Step 11** Click **Next**. The InstallShield program begins the Netscape Communicator 4.76 Setup program.
- Step 12** Complete the Netscape installation:
- a. In the Netscape Communicator 4.76 Setup dialog box, click **Next**.
 - b. In the Software License Agreement dialog box, click **Yes**.
 - c. In the Setup Type dialog box, click **Typical**.
 - d. In the Netscape Desktop Preferences dialog box, check the boxes that apply, then click **Next**.
 - e. In the Program Folder dialog box, click **Next**.
 - f. In the Start Copying Files dialog box, click **Install**. The program begins the Netscape installation.
 - g. In the Question dialog box, click **No**.
- Step 13** In the Cisco Transport Controller Installation Wizard dialog box, click **Next**. The Java 2 runtime environment installation begins.
- Step 14** Complete the JRE installation:
- a. In the Software License Agreement dialog box, click **Yes**.
 - b. In the Choose Destination Location dialog box, click **Next**.
 - c. Complete one of the following and click **Next**:
 - In the Select Browser dialog box, if you want the JRE installed to be the default for Netscape, check the **Netscape 6** check box.
 - If you do not want the JRE installed to be the default for Netscape, uncheck the **Netscape 6** check box.
- When JRE installation is complete, the Cisco Transport Controller Installation Wizard dialog box appears.
- Step 15** Click **Next**. The CTC online help is installed.

Step 16 Click **Finish**.



Note Be sure to record the names of the directories you choose for Netscape, JRE, and the online documentation.

Step 17 Return to your originating procedure (NTP).

DLP-A49 Set Up the Java Runtime Environment for UNIX

Purpose	This task sets up the JRE for UNIX workstations.
Tools/Equipment	None
Prerequisite Procedures	DLP-A48 Run the CTC Installation Wizard for UNIX, page 3-7
Required/As Needed	Required if you installed the JRE during the CTC installation
Onsite/Remote	Onsite or remote
Security Level	None



Note The JRE might require certain patches to run properly. The patch tar file can be found in the JRE/Solaris directory on the CD. Please read the JRE/Solaris/Solaris.txt file for more information. In addition to installing any needed patches, set up the JRE for use with Cisco Transport Controller on your UNIX system.



Note CTC requires that the location of xterm is also in your path. If you have moved xterm from its default location, /usr/openwin/bin, you must change all occurrences of /usr/openwin/bin in the following procedures to reflect the actual path where xterm exists on your system.

Step 1 Set up the environment variable:



Note Whenever you see a path name in brackets, for example *<Netscape-path>*, insert the path to the application on your computer.

- a. If you are using the csh shell, edit the .cshrc file in your home directory by appending the file with the lines:

```
setenv JRE <JRE-path>
setenv NETSCAPE <Netscape-path>
setenv NPX_PLUGIN_PATH $JRE/j2re1_3_1_02/plugin/sparc/ns4
set path = ( /usr/openwin/bin $NETSCAPE $path)
```

- b. If you are using the ksh or bash shell, edit the .profile file in your home directory by appending the file with the lines:

```
JRE=<JRE-path>
NETSCAPE=<Netscape-path>
```

```
NPX_PLUGIN_PATH=$JRE/j2re1_3_1_02/plugin/sparc/ns4
PATH=/usr/openwin/bin:$NETSCAPE:$PATH
export JRE NPX_PLUGIN_PATH PATH
```

Step 2 Set the JRE reference:

- a. Run the Control Panel by typing:

```
<JRE-path>/j2re1_3_0_02/bin/ControlPanel
```

- b. Click the **Advanced** tab.

- c. From the combo box, select *JRE-path/j2re1_3_1_02*. If the JRE is not found, select **other** and enter the following in the Path text box:

```
<JRE-path>/j2re1_3_1_02
```

- d. Click **Apply**.



Note If you are running multiple shells, before your new environment variable is set you might need to invoke the same shell for which you changed the initialization file. For example, if you added the environment variable to the .cshrc file, you must run your browser under the csh shell.

Step 3 Return to your originating procedure (NTP).

NTP-A234 Set Up CTC Computer for Local Craft Connection to the ONS 15454

Purpose	This procedure explains how to set up a PC running Windows or a Solaris workstation for an onsite local craft connection to the ONS 15454.
Tools/Equipment	Depends on connection type
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	None

Step 1 Complete one of the CTC computer setup tasks shown in Table 3-1 based your CTC connection environment.



Note If you are connecting to an ONS 15454 to perform initial node turnup, complete the “DLP-A50 Set Up a Windows PC for Craft Connection to an ONS 15454 on the Same Subnet Using Static IP Addresses” task on page 3-12 or the “DLP-A52 Set Up a Windows PC for Craft Connection to an ONS 15454 Using Automatic Host Detection” task on page 3-16.

Table 3-1 CTC Computer Setup for Local Craft Connections to the ONS 15454

CTC Connection Environment	CTC Computer Setup Task
<ul style="list-style-type: none"> You are connecting from a Windows PC. All nodes that you will access run software earlier than Release 3.3. You will connect to one ONS 15454. You need to access non-ONS 15454 applications such as ping and tracert. 	<p>“DLP-A50 Set Up a Windows PC for Craft Connection to an ONS 15454 on the Same Subnet Using Static IP Addresses” task on page 3-12</p>
<ul style="list-style-type: none"> You are connecting from a Windows PC. The CTC computer is provisioned for DHCP. The ONS 15454 has DHCP forwarding enabled. The ONS 15454 is connected to a DHCP server. <p>Note The ONS 15454 does not provide IP addresses. If DHCP is enabled, it passes DHCP requests to an external DHCP server.</p>	<p>“DLP-A51 Set Up a Windows PC for Craft Connection to an ONS 15454 Using DHCP” task on page 3-14</p> <p>Note Do not use this task for initial node turnup. Use this task only if DHCP forwarding is enabled on the ONS 15454. By default, DHCP is not enabled. To enable it, see the “NTP-A169 Set Up CTC Network Access” procedure on page 4-8. To connect to a node for initial turnup, use one of the other tasks listed in this table.</p>
<ul style="list-style-type: none"> You are connecting from a Windows PC. All nodes that you will access run software Release 3.3 or later. You will connect to ONS 15454s at different locations and times and do not wish to reconfigure your PC’s IP settings each time. You will not access or use non-ONS 15454 applications such as ping and tracert. You will connect to the ONS 15454 TCC+/TCC2 Ethernet port or backplane LAN pins either directly or through a hub. 	<p>“DLP-A52 Set Up a Windows PC for Craft Connection to an ONS 15454 Using Automatic Host Detection” task on page 3-16</p>
<ul style="list-style-type: none"> You are connecting from a Solaris Workstation. You will connect to one ONS 15454. You need to access non-ONS 15454 applications such as ping and traceroute. 	<p>“DLP-A53 Set Up a Solaris Workstation for a Craft Connection to an ONS 15454” task on page 3-19</p>

Step 2 After setting up your CTC computer, continue with “NTP-A23 Log into the ONS 15454 GUI” procedure on page 3-24.

Stop. You have completed this procedure.

DLP-A50 Set Up a Windows PC for Craft Connection to an ONS 15454 on the Same Subnet Using Static IP Addresses

Purpose	This task sets up your computer for a local craft connection to the ONS 15454 when: <ul style="list-style-type: none"> You will access nodes running software releases earlier than Release 3.3. You will connect to one ONS 15454; if you will connect to multiple ONS 15454s, you might need to reconfigure your computer's IP settings each time you connect to an ONS 15454. You need to use non-ONS 15454 applications such as ping and trace route.
Tools/Equipment	Network interface card (NIC), also referred to as an Ethernet card
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Verify the operating system that is installed on your computer:
- From the Windows Start menu, choose **Settings > Control Panel**.
 - In the Control Panel window, double-click the **System** icon.
 - On the General tab of the System Settings window, verify that the Windows operating system is one of the following: Windows 95, Windows 98, Windows NT 4.0, Windows 2000, or Windows XP.
- Step 2** According to the Windows operating system installed on your computer, perform one of the following steps:
- For Windows 95 or 98, complete Step 3.
 - For Windows NT 4.0, complete Step 4.
 - For Windows 2000, complete Step 5.
 - For Windows XP, complete Step 6.
- Step 3** Complete this step for Windows 95 or 98:
- From the Windows Start menu, choose **Settings > Control Panel**.
 - In the Control Panel dialog box, click the **Network** icon.
 - In the Network dialog box, select **TCP/IP** for your NIC, then click **Properties**.
 - In the TCP/IP Properties dialog box, click the **DNS Configuration** tab and choose **Disable DNS**.
 - Click the **WINS Configuration** tab and choose **Disable WINS Resolution**.
 - Click the **IP Address** tab.
 - In the IP Address window, click **Specify an IP address**.
 - In the IP Address field, enter an IP address that is identical to the ONS 15454 IP address except for the last three digits. The last three digits must be between 1 and 254. This IP address is displayed on the LCD unless its display is suppressed during node provisioning.

- i. In the Subnet Mask field, type the same subnet mask as the ONS 15454. The default is **255.255.255.0** (24 bit).
- j. Click **OK**.
- k. In the TCP/IP dialog box, click the **Gateway** tab.
 - l. In the New Gateway field, type the ONS 15454 IP address. Click **Add**.
- m. Verify that the IP address appears in the Installed Gateways field, then click **OK**.
- n. When the prompt to restart your PC appears, click **Yes**.
- o. Return to your originating procedure (NTP).

Step 4 Complete this step for Windows NT 4.0:

- a. From the Windows Start menu, choose **Settings > Control Panel**.
- b. In the Control Panel dialog box, click the **Network** icon.
- c. In the Network dialog box, click the **Protocols** tab, choose **TCP/IP Protocol**, then click **Properties**.
- d. Click the **IP Address** tab.
- e. In the IP Address window, click **Specify an IP address**.
- f. In the IP Address field, enter an IP address that is identical to the ONS 15454 IP address shown on the ONS 15454 LCD except for the last three digits. The last three digits must be between 1 and 254.
- g. In the Subnet Mask field, type **255.255.255.0**.
- h. Click **Advanced**.
 - i. In the Gateways List, click **Add**. The TCP/IP Gateway Address dialog box is displayed.
 - j. Type the ONS 15454 IP address in the Gateway Address field.
 - k. Click **Add**.
 - l. Click **OK**.
- m. Click **Apply**.
- n. In some cases, Windows NT 4.0 prompts you to reboot your PC. If you receive this prompt, click **Yes**.
- o. Return to your originating procedure (NTP).

Step 5 Complete this step for Windows 2000:

- a. From the Windows Start menu, choose **Settings > Network and Dial-up Connections > Local Area Connection**.
- b. In the Local Area Connection Status dialog box, click **Properties**.
- c. On the General tab, choose **Internet Protocol (TCP/IP)**, then click **Properties**.
- d. Click **Use the following IP address**.
- e. In the IP Address field, enter an IP address that is identical to the ONS 15454 IP address shown on the ONS 15454 LCD except for the last three digits. The last three digits must be between 1 and 254.
- f. In the Subnet Mask field, type **255.255.255.0**.
- g. In the Default Gateway field, type the ONS 15454 IP address.
- h. Click **OK**.
 - i. In the Local Area Connection Properties dialog box, click **OK**.
 - j. In the Local Area Connection Status dialog box, click **Close**.

k. Return to your originating procedure (NTP).

Step 6 Complete this step for Windows XP:

a. From the Windows Start menu, choose **Control Panel > Network Connections**.



Note If the Network Connections menu is not available, click Switch to Classic View.

b. From the Network Connections dialog box, click the **Local Area Connection** icon.

c. From the Local Area Connection Properties dialog box, choose **Internet Protocol (TCP/IP)**, then click **Properties**.

d. In the IP Address field, enter an IP address that is identical to the ONS 15454 IP address shown on the ONS 15454 LCD except for the last three digits. The last three digits must be between 1 and 254.

e. In the Subnet Mask field, type **255.255.255.0**.

f. In the Default Gateway field, type the ONS 15454 IP address.

g. Click **OK**.

h. In the Local Area Connection Properties dialog box, click **OK**.

i. In the Local Area Connection Status dialog box, click **Close**.

j. Return to your originating procedure (NTP).

DLP-A51 Set Up a Windows PC for Craft Connection to an ONS 15454 Using DHCP

Purpose	This task sets up your computer for craft connection to the ONS 15454 using DHCP.
Tools/Equipment	Straight-through (Category 5) LAN cable NIC
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2 NTP-A169 Set Up CTC Network Access, page 4-8
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Note

Do not use this task for initial node turnup. Use the task only if DHCP forwarding is enabled on the ONS 15454. By default, DHCP is not enabled. To enable it, see the “NTP-A169 Set Up CTC Network Access” procedure on page 4-8.



Note

The ONS 15454 does not provide the IP addresses. If DHCP forwarding is enabled, it passes DHCP requests to an external DHCP server.

-
- Step 1** Verify the operating system that is installed on your computer:
- From the Windows Start menu, choose **Settings > Control Panel**.
 - In the Control Panel window, double-click the **System** icon.
 - On the General tab of the System Settings window, verify that the Windows operating system is one of the following: Windows 95, Windows 98, Windows NT 4.0, Windows 2000, or Windows XP.
- Step 2** According to the Windows operating system installed on your computer, perform one of the following steps:
- For Windows 95 or 98, complete Step 3.
 - For Windows NT 4.0, complete Step 4.
 - For Windows 2000, complete Step 5.
 - For Windows XP, complete Step 6.
- Step 3** Complete this step for Windows 95 or 98:
- From the Windows Start menu, choose **Settings > Control Panel**.
 - In the Control Panel dialog box, click the **Network** icon.
 - In the Network dialog box, select **TCP/IP** for your NIC, then click **Properties**.
 - In the TCP/IP Properties dialog box, click the **DNS Configuration** tab and choose **Disable DNS**.
 - Click the **WINS Configuration** tab and choose **Disable WINS Resolution**.
 - Click the **IP Address** tab.
 - In the IP Address window, click **Obtain an IP address from a DHCP Server**.
 - Click **OK**.
 - When the prompt to restart your PC appears, click **Yes**.
 - Return to your originating procedure (NTP).
- Step 4** Complete this step for Windows NT 4.0:
- From the Windows Start menu, choose **Settings > Control Panel**.
 - In the Control Panel dialog box, click the **Network** icon.
 - In the Network dialog box, click the **Protocols** tab, choose **TCP/IP Protocol**, then click **Properties**.
 - Click the **IP Address** tab.
 - In the IP Address window, click **Obtain an IP address from a DHCP Server**.
 - Click **OK**.
 - Click **Apply**.
 - If Windows prompts you to restart your PC, click **Yes**.
 - Return to your originating procedure (NTP).
- Step 5** Complete this step for Windows 2000:
- From the Windows Start menu, choose **Settings > Network and Dial-up Connections > Local Area Connection**.
 - In the Local Area Connection Status dialog box, click **Properties**.
 - On the General tab, choose **Internet Protocol (TCP/IP)**, then click **Properties**.
 - Click **Obtain an IP address from a DHCP Server**.

- e. Click **OK**.
- f. In the Local Area Connection Properties dialog box, click **OK**.
- g. In the Local Area Connection Status dialog box, click **Close**.
- h. Return to your originating procedure (NTP).

Step 6 Complete this step for Windows XP:

- a. From the Windows Start menu, choose **Control Panel > Network Connections**.



Note If the Network Connections menu is not available, click Switch to Classic View.

- b. In the Network Connections dialog box, click **Local Area Connection**.
 - c. In the Local Area Connection Status dialog box, click **Properties**.
 - d. On the General tab, choose **Internet Protocol (TCP/IP)**, then click **Properties**.
 - e. Click **Obtain an IP address automatically**.
 - f. Click **OK**.
 - g. In the Local Area Connection Properties dialog box, click **OK**.
 - h. In the Local Area Connection Status dialog box, click **Close**.
 - i. Return to your originating procedure (NTP).
-

DLP-A52 Set Up a Windows PC for Craft Connection to an ONS 15454 Using Automatic Host Detection

Purpose	This task sets up your computer for local craft connection to the ONS 15454 when: <ul style="list-style-type: none"> • You will connect to the ONS 15454's Ethernet port or backplane LAN pins either directly or through a hub. • All nodes that you will access are running software Release 3.3 or later. • You will connect to multiple ONS 15454s and do not want to reconfigure your IP address each time. • You do not need to access non-ONS 15454 applications such as ping and tracert.
Tools/Equipment	NIC
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

**Note**

If you are using automatic host detection and you disconnect the LAN cable from one node and connect it to another node, you must close CTC and relaunch it to reconnect to the proxy server and communicate with the new node.

Step 1 Verify the operating system that is installed on your computer:

- a. From the Windows Start menu, choose **Settings > Control Panel**.

**Note**

In Windows XP, you can select Control Panel directly from the Start menu. Make sure you are in Classic View before continuing with this procedure.

- b. In the Control Panel window, double-click the **System** icon.
- c. On the General tab of the System Settings window, verify that the Windows operating system is one of the following: Windows 95, Windows 98, Windows NT 4.0, Windows 2000, or Windows XP.

Step 2 According to the Windows operating system installed on your computer, perform one of the following steps:

- For Windows 95 or 98, complete Step 3.
- For Windows NT 4.0, complete Step 4.
- For Windows 2000, complete Step 5.
- For Windows XP, complete Step 6.

Step 3 Complete this step for Windows 95 or 98:

- a. From the Windows Start menu, choose **Settings > Control Panel**.
- b. In the Control Panel dialog box, click the **Network** icon.
- c. In the Network dialog box, select **TCP/IP** for your NIC, then click **Properties**.
- d. In the TCP/IP Properties dialog box, click the **DNS Configuration** tab and choose **Disable DNS**.
- e. Click the **WINS Configuration** tab and choose **Disable WINS Resolution**.
- f. Click the **IP Address** tab.
- g. In the IP Address window, click **Specify an IP address**.
- h. In the IP Address field, enter any legitimate IP address other than the node IP address as indicated on the LCD of the ONS 15454. See the “DLP-A60 Log into CTC” task on page 3-26 for the default IP address.
- i. In the Subnet Mask field, type the same subnet mask as the ONS 15454. The default is **255.255.255.0** (24 bit).
- j. Click **OK**.
- k. In the TCP/IP dialog box, click the **Gateway** tab.
 - l. In the New Gateway field, type the address entered in Step g. Click **Add**.
- m. Verify that the IP address appears in the Installed Gateways field, then click **OK**.
- n. When the prompt to restart your PC appears, click **Yes**.
- o. Return to your originating procedure (NTP).

- Step 4** Perform this step for Windows NT 4.0:
- From the Windows Start menu, choose **Settings > Control Panel**.
 - In the Control Panel dialog box, click the **Network** icon.
 - In the Network dialog box, click the **Protocols** tab, choose **TCP/IP Protocol**, then click **Properties**.
 - Click the **IP Address** tab.
 - In the IP Address window, click **Specify an IP address**.
 - In the IP Address field, enter any legitimate IP address other than the node IP address as indicated on the LCD of the ONS 15454. See the “DLP-A60 Log into CTC” task on page 3-26 for the default IP address.
 - In the Subnet Mask field, type the same subnet mask as the ONS 15454. The default is **255.255.255.0** (24 bit).
 - Click **Advanced**.
 - In the Gateways List, click **Add**. The TCP/IP Gateway Address dialog box is displayed.
 - Type the IP address entered in Step f in the Gateway Address field.
 - Click **Add**.
 - Click **OK**.
 - Click **Apply**.
 - Reboot your PC.
 - Return to your originating procedure (NTP).
- Step 5** Complete this step for Windows 2000:
- From the Windows Start menu, choose **Settings > Network and Dial-up Connections > Local Area Connection**.
 - In the Local Area Connection Status dialog box, click **Properties**.
 - On the General tab, choose **Internet Protocol (TCP/IP)**, then click **Properties**.
 - Click **Use the following IP address**.
 - In the IP Address field, enter any legitimate IP address other than the node IP address as indicated on the LCD of the ONS 15454. See the “DLP-A60 Log into CTC” task on page 3-26 for the default IP address.
 - In the Subnet Mask field, type the same subnet mask as the ONS 15454. The default is **255.255.255.0** (24 bit).
 - Type the IP address entered in Step e in the Gateway Address field.
 - Click **OK**.
 - In the Local Area Connection Properties dialog box, click **OK**.
 - In the Local Area Connection Status dialog box, click **Close**.
 - Return to your originating procedure (NTP).
- Step 6** Complete this step for Windows XP:
- From the Windows Start menu, choose **Control Panel > Network Connections**.



Note If the Network Connections menu is not available, click Switch to Classic View.

- b. From the Network Connections dialog box, click the **Local Area Connection** icon.
- c. From the Local Area Connection Properties dialog box, choose **Internet Protocol (TCP/IP)**, then click **Properties**.
- d. In the IP Address field, enter any legitimate IP address other than the node IP address as indicated on the LCD of the ONS 15454. See the “DLP-A60 Log into CTC” task on page 3-26 for the default IP address.
- e. In the Subnet Mask field, type the same subnet mask as the ONS 15454. The default is **255.255.255.0** (24 bit).
- f. Type the IP address entered in Step d in the Gateway Address field.
- g. Click **OK**.
- h. In the Local Area Connection Properties dialog box, click **OK**.
- i. In the Local Area Connection Status dialog box, click **Close**.
- j. Return to your originating procedure (NTP).

DLP-A53 Set Up a Solaris Workstation for a Craft Connection to an ONS 15454

Purpose	This task sets up a Solaris workstation for a craft connection to the ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None

Step 1 Log into the workstation as the root user.

Step 2 Check to see if the interface is plumbed.

- a. Type `# ifconfig device` (For example, `# ifconfig hme1`)

If the interface is plumbed, a message similar to the following appears:

```
hme1:flags=1000842<BROADCAST,RUNNING,MULTICAST,IPv4>mtu 1500 index 2 inet 0.0.0.0
netmask 0
```

If a message similar to this one appears, go to Step 4.

If the interface is not plumbed, a message similar to the following appears:

```
ifconfig: status: SIOCGLIFFLAGS: hme1: no such interface.
```

If a message similar to this one appears, go to Step 3.

Step 3 Plumb the interface by typing:

```
# ifconfig device plumb (for example: # ifconfig hme1 plumb)
```

Step 4 Configure the IP address on the interface by typing:

```
# ifconfig interface ip-address netmask netmask up
```

For example:

```
# ifconfig hme0 10.20.30.40 netmask 255.255.255.0 up
```



Note Enter an IP address that is identical to the ONS 15454 IP address except for the last three digits. The last group of digits must be between 1 and 254.

Step 5 In the Subnet Mask field, type **255.255.255.0**. Skip this step if you checked **Craft Access Only** on the Provisioning > Network > General > Gateway Settings tab.

Step 6 Test the connection:

- a. Start Netscape Navigator.
- b. Enter the Cisco ONS 15454 IP address in the web address (URL) field. If the connection is established, a Java Console window, CTC caching messages, and the Cisco Transport Controller Login dialog box appear. If this occurs, go to Step 2 of the “DLP-A60 Log into CTC” task on page 3-26 to complete the login. If the Login dialog box does not appear, complete Steps c to d.
- c. At the prompt, type: **ping ONS-15454-IP-address**

For example, to connect to an ONS 15454 with a default IP address of 192.168.1.1, type:

```
ping 192.168.1.1
```

If your workstation is connected to the ONS 15454, the following message appears:

```
IP-address is alive
```



Note Skip this step if you checked the **Craft Access Only** check box at **Provisioning > Network > General > Gateway Settings**.

- d. If CTC is not responding, a “Request timed out” (Windows) or a “no answer fromx.x.x.x” (Unix) message appears. Verify the IP and subnet mask information. Check that the cables connecting the workstation to the ONS 15454 are securely attached. Check the link status by typing:

```
# ndd -set /dev/device instance 0
```

```
# ndd -get /dev/device link_status
```

For example:

```
# ndd -set /dev/hme instance 0
```

```
# ndd -get /dev/hme link_status
```

A result of “1” means the link is up. A result of “0” means the link is down.



Note Check the man page for ndd. For example: # **man ndd**.

Step 7 Return to your originating procedure (NTP).

NTP-A235 Set Up a CTC Computer for a Corporate LAN Connection to the ONS 15454

Purpose	This procedure sets up your computer to access the ONS 15454 through a corporate LAN. To complete this procedure: <ul style="list-style-type: none"> • The ONS 15454 must be provisioned for LAN connectivity, including IP address, subnet mask, default gateway. • The ONS 15454 must be physically connected to the corporate LAN. • The CTC computer must be connected to the corporate LAN that has connectivity to the ONS 15454.
----------------	--

Tools/Equipment	None
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	None

-
- Step 1** If your computer is already connected to the corporate LAN, go to Step 2. If you changed your computer's network settings for craft access to the ONS 15454, change the settings back to the corporate LAN access settings. This generally means:
- Set the IP Address on the TCP/IP dialog box back to "Obtain an IP address automatically" (Windows 95 or 98) or "Obtain an IP address from a DHCP server" (Windows NT 4.0, 2000, or XP).
 - If your LAN requires that DNS or WINS be enabled, change the setting on the DNS Configuration or WINS Configuration tab of the TCP/IP dialog box.
- Step 2** If your computer is connected to a proxy server, disable proxy service or add the ONS 15454 nodes as exceptions. To disable proxy service, complete one of the following tasks, depending on the web browser that you use:
- DLP-A56 Disable Proxy Service Using Internet Explorer (Windows), page 3-22
 - DLP-A57 Disable Proxy Service Using Netscape (Windows and UNIX), page 3-22
- Stop. You have completed this procedure.**
-

DLP-A56 Disable Proxy Service Using Internet Explorer (Windows)

Purpose	This task disables proxy service for PCs running Internet Explorer.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	Required if your computer is connected to a network computer proxy server and your browser is Internet Explorer.
Onsite/Remote	Onsite or remote
Security Level	None

Step 1 From the Start menu, select **Settings > Control Panel**.



Note If your computer is running Windows XP, you can select Control Panel directly from the Start menu. Make sure that you are in Classic View before continuing with this procedure.

Step 2 In the Control Panel window, choose **Internet Options**.

Step 3 In the Internet Properties dialog box, click **Connections > LAN Settings**.

Step 4 In the LAN Settings dialog box, complete one of the following tasks:

- Uncheck **Use a proxy server** to disable the service.
- Leave **Use a proxy server** selected and click **Advanced**. In the Proxy Setting dialog box under Exceptions, enter the IP addresses of ONS 15454 nodes that you will access. Separate each address with a semicolon. You can insert an asterisk for the host number to include all the ONS 15454s on your network. Click **OK** to close each open dialog box.

Step 5 Return to your originating procedure (NTP).

DLP-A57 Disable Proxy Service Using Netscape (Windows and UNIX)

Purpose	This task disables proxy service for PCs and UNIX workstations running Netscape.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	Required if your computer is connected to a network computer proxy server and your browser is Netscape.
Onsite/Remote	Onsite or remote
Security Level	None

Step 1 Open Netscape.

Step 2 From the Edit menu, choose **Preferences**.

Step 3 In the Preferences dialog box under Category, choose **Advanced > Proxies**.

- Step 4** On the right side of the Preferences dialog box under Proxies, perform one of the following options:
- Choose **Direct connection to the Internet** to bypass the proxy server.
 - Choose **Manual proxy configuration** to add exceptions to the proxy server, then click **View**. In the Manual Proxy Configuration dialog box under Exceptions, enter the IP addresses of the ONS 15454 nodes that you will access. Separate each address with a comma. Click **OK** to close each open dialog box.
- Step 5** Return to your originating procedure (NTP).

NTP-A236 Set Up a Remote Access Connection to the ONS 15454

Purpose	This procedure connects an ONS 15454 using a LAN modem. To complete this procedure: <ul style="list-style-type: none"> • A modem must be connected to the ONS 15454. • The modem must be provisioned for ONS 15454. To run CTC, the modem must be provisioned for Ethernet access.
Tools/Equipment	Modem and modem documentation
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2
Required/As Needed	Required to access the Cisco Transport Controller
Onsite/Remote	Onsite
Security Level	None

- Step 1** Connect the modem to the RJ-45 (LAN) port on the TCC+/TCC2 card or to the LAN pins on the ONS 15454 backplane.
- Step 2** While referring to the modem documentation, complete the following tasks to provision the modem for the ONS 15454:
- For CTC access, set the modem for Ethernet access.
 - Assign an IP address to the modem that is on the same subnet as the ONS 15454.
 - The IP address the modem assigns to the CTC computer must be on the same subnet as the modem and the ONS 15454.



Note For assistance on provisioning specific modems, contact the Cisco Technical Assistance Center.

Stop. You have completed this procedure.

NTP-A23 Log into the ONS 15454 GUI

Purpose	This procedure logs into the Cisco Transport Controller, the graphical user interface software used to manage the ONS 15454. This procedure includes optional node login tasks.
Tools/Equipment	None
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2 One of the following procedures: <ul style="list-style-type: none"> • NTP-A234 Set Up CTC Computer for Local Craft Connection to the ONS 15454, page 3-10. or • NTP-A235 Set Up a CTC Computer for a Corporate LAN Connection to the ONS 15454, page 3-21, or • NTP-A236 Set Up a Remote Access Connection to the ONS 15454, page 3-23
Required/As Needed	Required to access the Cisco Transport Controller
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

Step 1 If the computer does not have a physical connection to the ONS 15454, complete the “DLP-A59 Connect Computer to the ONS 15454” task on page 3-25.

Step 2 Complete the “DLP-A60 Log into CTC” task on page 3-26.



Note For information about navigating in CTC, see Appendix A, “CTC Information and Shortcuts.”

Step 3 As needed, complete the “DLP-A61 Create Login Node Groups” task on page 3-30. Login node groups allow you to manage nodes that are not connected to the login node via DCC.

Step 4 As needed, complete the “DLP-A62 Add a Node to the Current Session or Login Group” task on page 3-31.

Stop. You have completed this procedure.

DLP-A59 Connect Computer to the ONS 15454

Purpose	This task connects a CTC computer to the ONS 15454.
Tools/Equipment	Straight-through (Category 5) LAN cable NIC
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2 and one of the following procedures: <ul style="list-style-type: none"> • NTP-A234 Set Up CTC Computer for Local Craft Connection to the ONS 15454, page 3-10. or • NTP-A235 Set Up a CTC Computer for a Corporate LAN Connection to the ONS 15454, page 3-21, or • NTP-A236 Set Up a Remote Access Connection to the ONS 15454, page 3-23
Required/As Needed	Required to access the Cisco Transport Controller
Onsite/Remote	Onsite or remote
Security Level	None

-
- Step 1** If your computer is set up for a local craft connection, connect a straight-through (Category 5) LAN cable from the PC or Solaris workstation NIC to one of the following:
- RJ-45 (LAN) port on the active or standby TCC+/TCC2 card
 - RJ-45 (LAN) port on a hub or switch to which the ONS 15454 is physically connected



Note For instructions on crimping your own straight-through (Category 5) LAN cables, refer to the *Cisco ONS 15454 Troubleshooting Guide*.



Note For initial shelf turn up, you should connect your PC directly to the LAN port on the TCC+/TCC2 card of the ONS 15454.

- Step 2** If your computer is set up for a corporate LAN connection, connect a straight-through (Category 5) LAN cable from the PC or Solaris workstation NIC card to a LAN port.

- Step 3** Return to your originating procedure (NTP).
-

DLP-A60 Log into CTC

Purpose	This task logs into the Cisco Transport Controller, the graphical user interface software used to manage the ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	NTP-A21 Set Up Computer for CTC, page 3-2 One of the following procedures: <ul style="list-style-type: none"> • NTP-A234 Set Up CTC Computer for Local Craft Connection to the ONS 15454, page 3-10, or • NTP-A235 Set Up a CTC Computer for a Corporate LAN Connection to the ONS 15454, page 3-21, or • NTP-A236 Set Up a Remote Access Connection to the ONS 15454, page 3-23 DLP-A59 Connect Computer to the ONS 15454, page 3-25
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher


Note

For information about CTC views and navigation, see Appendix A, “CTC Information and Shortcuts.”

Step 1 From the PC connected to the ONS 15454, start Netscape or Internet Explorer.

Step 2 In the Netscape or Internet Explorer web address (URL) field, enter the ONS 15454 IP address. For initial setup, this is the default IP address, 192.1.0.2. (This IP address can be displayed on the LCD. Software R4.0 allows suppressing the LCD IP address display.) Press **Enter**.


Note

If you are logging into ONS 15454 nodes running different releases of CTC software, log into the node running the most recent release. If you log into a node running an older release, you will receive an INCOMPATIBLE-SW alarm for each node in the network running a new release, and CTC will not be able to manage these nodes. To check the software version of a node, select About CTC from the CTC Help menu. To resolve an alarm, refer to the *Cisco ONS 15454 Troubleshooting Guide*.

If a Java Plug-in Security Warning dialog box appears, complete the “DLP-A418 Install Public-Key Security Certificate” task on page 3-28 to install the public-key security certificate required by Software Release 4.1 and later.

After you complete the security certificate dialog box (or if the certificate is already installed), a Java Console window displays the CTC file download status. The web browser displays information about your Java and system environments. If this is the first login, CTC caching messages appear while CTC files are downloaded to your computer. The first time you connect to an ONS 15454, this process can take several minutes. After the download, the CTC Login dialog box appears (Figure 3-4).

Figure 3-4 Logging into CTC

- Step 3** In the Login dialog box, type a user name and password (both are case sensitive). For initial setup, type the user name “CISCO15.”



Note The CISCO15 user is provided with every ONS 15454. CISCO15 has superuser privileges, so you can create other users. You must create another superuser before you can delete the CISCO15 user. CISCO15 is delivered without a password. To create a password for CISCO15, click the Provisioning > Security tabs after you log in and change the password. To set up ONS 15454 users and assign security, go to the “NTP-A30 Create Users and Assign Security” procedure on page 4-4. Additional information is provided in the *Cisco ONS 15454 Reference Manual*.

- Step 4** Each time you log into an ONS 15454, you can make selections on the following login options:
- **Node Name**—Displays the IP address entered in the web browser and a drop-down menu of previously entered ONS 15454 IP addresses. You can select any ONS 15454 on the list for the login, or you can enter the IP address (or node name) of any new node where you want to log in.
 - **Additional Nodes**—Displays a list of login node groups that are created. To create a login node group or add additional groups, see the “DLP-A61 Create Login Node Groups” task on page 3-30.)



Note Topology hosts that were created in previous ONS 15454 releases by modifying the `ctc.ini` (Windows) or `.ctrc` (UNIX) files are displayed as a Topology Host group under Additional Nodes.

- **Disable Network Discovery**—Check this box to view only the ONS 15454 (and login node group members, if any) entered in the Node Name field. Nodes linked to this node through DCCs are not displayed. Using this option can decrease the CTC startup time in networks with many DCC-connected nodes.

- **Disable Circuit Management**—Check this box to disable discovery of existing circuits. Using this option can decrease the CTC initialization time in networks with many existing circuits. This option does not prevent the creation and management of new circuits.

Step 5 Click **Login**.

If the login is successful, the CTC window appears. From here, you can navigate to other CTC views to provision and manage the ONS 15454. If you need to perform the initial shelf turn up, see Chapter 4, “Turn Up Node.” If login problems occur, refer to the *Cisco ONS 15454 Troubleshooting Guide*.

Step 6 Return to your originating procedure (NTP).

DLP-A418 Install Public-Key Security Certificate

Purpose	Use this task to install the ITU Recommendation X.509 public-key security certificate. The public-key certificate is required to run Software Release 4.1 or later.
Tools/Equipment	None
Prerequisite Procedures	This task is performed during the “DLP-A60 Log into CTC” task on page 3-26. You cannot perform it outside of this task.
Required/As Needed	This task is required to run ONS 15454 Release 4.1 or later.
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 If the Java Plug-in Security Warning dialog box appears (Figure 3-5 on page 3-29), choose one of the following options.

- **Grant This Session**—installs the public-key certificate to your PC only for the current session. After the session is ended, the certificate is deleted. This dialog box will appear the next time you log into the ONS 15454.
- **Deny**—denies permission to install certificate. If you choose this option, you cannot log into the ONS 15454.
- **Grant always**—installs the public-key certificate and does not delete it after the session is over. Cisco recommends this option.
- **View Certificate**—Allows you to view the public-key security certificate.

Figure 3-5 Java Plug-in Security Warning dialog box



Step 2 If the Login dialog box appears, continue with Step 3. If the Change Java Policy File dialog box appears, complete this step. The Change Java Policy File dialog box appears if CTC finds a modified Java policy file (.java.policy) on your PC. In Software Release 4.0 and earlier, the Java policy file was modified to allow CTC software files to be downloaded to your PC. The modified Java policy file is not needed in Release 4.1, so you can remove it unless you will log into ONS 15454s running software earlier to R4.1. Choose one of the following options:

- Yes—removes the modified Java policy file from your PC. Choose this option only if you will log into ONS 15454s running Release 4.1 software or later.
- No—does not remove the modified Java policy file from your PC. Choose this option if you will log into ONS 15454s running software Release 4.0 or earlier. If you choose No, this dialog box will appear every time you log into the ONS 15454. If you do not want it to appear, check the **Do not show the message again** check box.

**Caution**

If you delete the Java policy file, you cannot log into nodes running Software Release 4.0 and earlier. If you delete the file and want to log into an ONS 15454 running an earlier release, insert the software CD for the release into your PC CD-ROM and run the CTC setup wizard to reinstall the Java policy file.

Step 3 Return to your originating procedure (NTP).


DLP-A61 Create Login Node Groups

Purpose	This task creates a login node group to display ONS 15454s that have an IP connection but not a DCC connection to the login node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** From the Edit menu, choose **Preferences**.
- Step 2** Click **Login Node Group** and **Create Group**.
- Step 3** Enter a name for the group in the Create Login Group Name dialog box. Click **OK**.
- Step 4** In the Members area, type the IP address (or node name) of a node you want to add to the group. Click **Add**. Repeat this step for each node you want to add to the group.
- Step 5** Click **OK**.

The next time you log into an ONS 15454, the login node group will be available in the Additional Nodes list of the Login dialog box. For example, in Figure 3-6 on page 3-31, a login node group, “Test Group,” is created that contains the IP addresses for Nodes 1, 4, and 5. During login, if you select the Test Group group under Additional Nodes and Disable Network Discovery is not selected, all nodes in the figure are displayed. If Test Group and Disable Network Discovery are both selected, Nodes 1, 4, and 5 are displayed. You can create as many login groups as you need. The groups are stored in the CTC preferences file and are not visible to other users.

Figure 3-6 Login Node Group

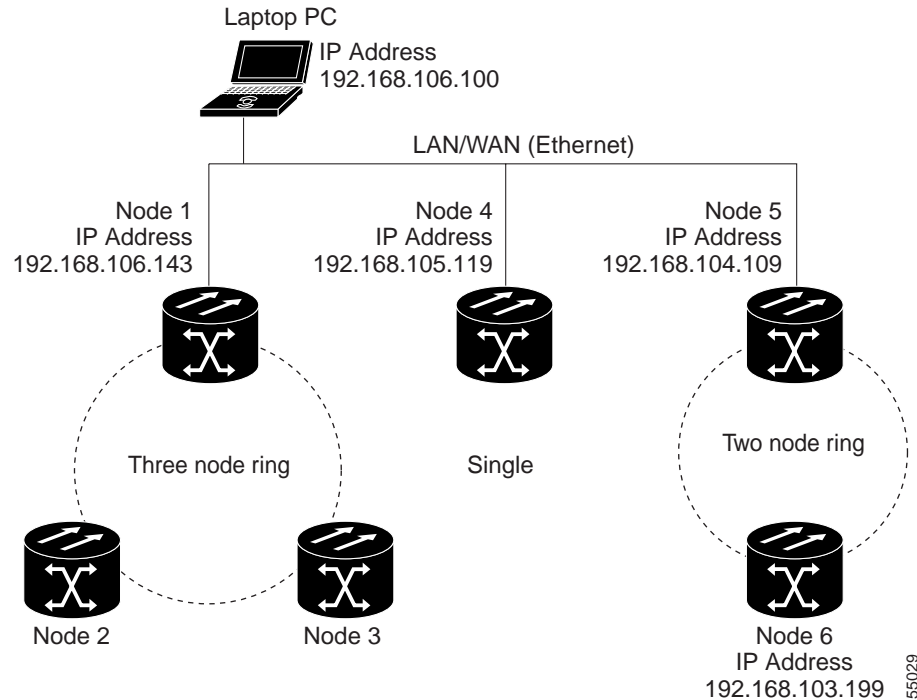

Step 6 Return to your originating procedure (NTP).

DLP-A62 Add a Node to the Current Session or Login Group

Purpose	This task adds a node to the current CTC session or login group.
Tools	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 From the CTC File menu, click **Add Node**.

Step 2 In the Add Node dialog box, enter the node name (or IP address).

Step 3 If you want to add the node to the current login group, check **Add Node to Current Login Group**. Otherwise, leave it unchecked.



Note The Add Node to Current Login Group check box is active only if you selected a login group when you logged into CTC.

Step 4 Click **OK**.

After a few seconds, the new node is displayed on the network view map.

Step 5 Return to your originating procedure (NTP).



Turn Up Node

This chapter explains how to provision a single Cisco ONS 15454 node and turn it up for service, including node name, date and time, timing references, network attributes such as IP address and default router, users and user security, and card protection groups.

If you are provisioning an ONS 15454 for DWDM (Software Release 4.5), go to Chapter 5, “Turn Up a DWDM Node.”



Note

Except where noted, the procedures and tasks in this chapter apply to DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.

Before You Begin

Complete the procedures applicable to your site plan from the following chapters:

- Chapter 1, “Install the Shelf and Backplane Cable”
- Chapter 2, “Install Cards and Fiber-Optic Cable”
- Chapter 3, “Connect the PC and Log into the GUI”

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A24 Verify Card Installation, page 4-2—Complete this procedure first.
2. NTP-A30 Create Users and Assign Security, page 4-4—Complete this procedure to create CTC users and assign their security levels.
3. NTP-A25 Set Up Name, Date, Time, and Contact Information, page 4-6—Continue with this procedure to set the node name, date, time, location, and contact information.
4. NTP-A169 Set Up CTC Network Access, page 4-8—Continue with this procedure to provision the IP address, default router, subnet mask, and network configuration settings.
5. NTP-A27 Set Up the ONS 15454 for Firewall Access, page 4-18—Continue with this procedure if the ONS 15454 will be accessed behind firewalls.
6. NTP-A28 Set Up Timing, page 4-21—Continue with this procedure to set up the node’s SONET timing references.
7. NTP-A170 Create Protection Groups, page 4-25—Complete this procedure, as needed, to set up 1:1, 1:N, 1+1, or Y Cable protection groups for ONS 15454 electrical and optical cards.
8. NTP-A171 Set Up SNMP, page 4-32—Complete this procedure if SNMP will be used for network monitoring.

9. NTP-A34 Create Ethernet RMON Alarm Thresholds, page 4-34—Complete this procedure to set up remote monitoring of Ethernet ports.

NTP-A24 Verify Card Installation

Purpose	This procedure verifies that the ONS 15454 node is ready for turn up.
Tools/Equipment	An engineering work order, site plan, or other document specifying the ONS 15454 card installation.
Prerequisite Procedures	Chapter 1, “Install the Shelf and Backplane Cable” Chapter 2, “Install Cards and Fiber-Optic Cable”
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Retrieve or higher

-
- Step 1** Verify that two TCC+ cards or two TCC2 cards are installed in Slots 7 and 11.



Note Release 4.5 software is compatible with TCC2 cards only.

- Step 2** Verify that the green ACT (active) LED is illuminated on one TCC+/TCC2 and the amber STBY (standby) LED is illuminated on the second TCC+/TCC2.



Note If the TCC+/TCC2s are not installed, or their LEDs are not illuminated as described, do not proceed. Repeat the “DLP-A36 Install the TCC+/TCC2 Cards” task on page 2-7, or refer to the *Cisco ONS 15454 Troubleshooting Guide* to resolve installation problems before proceeding to Step 3.

If you are provisioning a node for DWDM (Release 4.5), continue with Step 17. Otherwise, continue with the next step.

- Step 3** Verify that cross-connect cards (XC, XCVT, or XC10G) are installed in Slots 8 and 10. The cross-connect cards must be the same type.

- Step 4** Verify that the green ACT (active) LED is illuminated on one cross-connect card and the amber STBY (standby) LED is illuminated on the second cross-connect card.



Note If the cross-connect cards are not installed, or their LEDs are not illuminated as described, do not proceed. Repeat the “DLP-A37 Install the XC, XCVT, or XC10G Cards” task on page 2-9, or refer to the *Cisco ONS 15454 Troubleshooting Manual* to resolve installation problems before proceeding to Step 5.

- Step 5** If your site plan requires an AIC or AIC-I card, verify that the AIC/AIC-I card is installed in Slot 9 and its ACT (active) LED displays a solid green light.

- Step 6** Verify that electrical cards (DS-1, DS-3, EC-1, and DS3XM-6) are installed in Slots 1 to 6 or 12 to 17 (multispeed slots) as designated by your installation plan.

- Step 7** If your site plan requires an Ethernet card, verify that the Ethernet card is installed in the specified slot and its ACT (active) LED displays a solid green light:
- The E100T-12, E100T-12-G, E1000-2, E1000-2-G and G1000-4 are installed in Slots 1 to 4 or 14 to 17.
 - The G1K-4, ML1000-2 and ML100T-12 cards can be installed in Slots 1 to 6 or 12 to 17 if an XC10G cross-connect is installed. However, they must be installed in Slots 5, 6, 12, or 13 (high-speed slots) if XC or XCVT cards are installed.
- Step 8** If Ethernet cards are installed, verify that the correct cross-connect cards are installed in Slots 8 and 10:
- E100T-12-G, E1000-2-G, and G1000-4 cards require XC10G cards.
 - G1K-4, ML1000-2, and ML100T-12 cards require XC10G cards if they are installed in Slots 1 to 4 or 14 to 17.
- Step 9** If an E1000-2, E1000-2-G, G1000-4, or ML1000-2 Ethernet card is installed, verify that it has a gigabit interface converter (GBIC) installed. If not, see the “DLP-A469 Install GBIC or SFP Connectors” task on page 2-20.
- Step 10** Verify that OC-N cards (OC-3, OC-3-8, OC-12, OC-12-4, OC-48, OC-48 any slot [AS], and OC-192) are installed in the slots designated by your site plan.
- OC-3, OC-12, and OC-48 AS cards can be installed in Slots 1 to 6 or 12 to 17.
 - OC-3-8 and OC-12-4 can be installed in Slots 1 to 4 and 14 to 17.
 - OC-48 and OC-192 can be installed in Slots 5, 6, 12, or 13.
- Step 11** If OC-N cards are installed, verify that the correct cross-connect cards are installed in Slots 8 and 10:
- If an OC-192 or a OC-12-4 card is installed, an XC10G card must be installed.
 - If an OC-48 AS card is installed in Slots 1 to 4 or 14 to 17, an XC10G card must be installed. If XC or XCVT cards are installed, the OC-48 AS can be installed only in Slots 5, 6, 12, or 13.
- Step 12** Verify that all installed OC-N cards display a solid amber STBY LED.
- Step 13** If transponder or muxponder cards are installed (TXP_MR_10G, TXP_2.5G_10G, 2.5G_MR_TXP, or 2.5G_MR_TXP-P), verify that they are installed in Slots 1 to 6 or 12 to 17.
- Step 14** If transponder or muxponder cards are installed, verify that XC10G cross-connect cards are installed.
- Step 15** Verify that fiber-optic cables (fiber) are installed and connected to the locations indicated in the site plan. If the fiber is not installed, complete the “NTP-A247 Install Fiber-Optic Cables on OC-N Cards” procedure on page 2-30.
- Step 16** Verify that fiber is routed correctly in the shelf assembly and fiber boots are installed properly. If the fiber is not routed on the shelf assembly, complete the “NTP-A245 Route Fiber-Optic Cables” procedure on page 2-57. If the fiber boots are not installed, complete the “DLP-A45 Install the Fiber Boot” task on page 2-40.
- Step 17** Verify that the software release shown on the LCD matches the software release indicated in your site plan. If the release does not match, perform one of the following procedures:
- Perform a software upgrade using a Cisco ONS 15454 software CD. Refer to the *Cisco ONS 15454 Software Upgrade Guide for instructions*.
 - Replace the TCC+/TCC2 cards with cards containing the correct release (see the “NTP-A116 Remove and Replace a Card” procedure on page 2-27).
 - Use the reinitialization tool to install the software. See the “NTP-A163 Restore the Node to Factory Configuration” procedure on page 17-11.
- Step 18** Continue with the “NTP-A30 Create Users and Assign Security” procedure on page 4-4.

Stop. You have completed this procedure.

NTP-A30 Create Users and Assign Security

Purpose	This procedure creates ONS 15454 users and assigns their security levels.
Tools/Equipment	None
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser only

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you need to create users.



Note You must log in as a Superuser to create additional users. The CISCO15 user provided with each ONS 15454 can be used to set up other ONS 15454 users. You can add up to 500 users to one ONS 15454.

Step 2 Complete the “DLP-A74 Create a New User—Single Node” task on page 4-4 or the “DLP-A75 Create a New User—Multiple Nodes” task on page 4-5 as needed.



Note You must add the same user name and password to each node a user will access.

Step 3 If you want to modify the security policy settings, complete the “NTP-A205 Modify Users and Change Security” procedure on page 12-26.

Stop. You have completed this procedure.

DLP-A74 Create a New User—Single Node

Purpose	This task creates a new user for one ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser only

Step 1 In node view, click the **Provisioning > Security > Users** tabs.

Step 2 Click **Create**.

Step 3 In the Create User dialog box, enter the following:

- **Name**—Type the user name. The name must be a minimum of six and a maximum of 20 alphanumeric (a-z, A-Z, 0-9) characters. For TL1 compatibility, the user name must be 6–10 characters.
- **Password**—Type the user password. The password must be a minimum of six and a maximum of 20 alphanumeric (a-z, A-Z, 0-9) and special characters (+, #, %), where at least two characters are non-alphabetic and at least one character is a special character. For TL1 compatibility, the password must be 6 to 10 characters. The password must not contain the user name.
- **Confirm Password**—Type the password again to confirm it.
- **Security Level**—Choose a security level for the user: RETRIEVE, MAINTENANCE, PROVISIONING, or SUPERUSER. Refer to the *Cisco ONS 15454 Reference Manual* for information about the capabilities provided with each level.



Note The idle time is the length of time that CTC can remain idle before it locks up and the password must be reentered. Each security level has a different idle time. The defaults are: Retrieve user = unlimited, Maintenance user = 60 minutes, Provisioning user = 30 minutes, and Superuser = 15 minutes. To change the idle times, refer to the “NTP-A205 Modify Users and Change Security” procedure on page 12-26.

Step 4 Click **OK**.

Step 5 Return to your originating procedure (NTP).

DLP-A75 Create a New User—Multiple Nodes

Purpose	This task adds a new user to multiple ONS 15454s.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note All nodes where you want to add users must be accessible in network view.

Step 1 From the View menu, choose **Go to Network View**.

Step 2 Click the **Provisioning > Security > Users** tabs.

Step 3 Click **Create**.

Step 4 In the Create User dialog box, enter the following:

- **Name**—Type the user name. The name must be a minimum of six and a maximum of 20 alphanumeric (a-z, A-Z, 0-9) characters. For TL1 compatibility, the user name must be 6–10 characters.

- **Password**—Type the user password. The password must be a minimum of six and a maximum of 20 alphanumeric (a-z, A-Z, 0-9) and special characters (+, #, %), where at least two characters are non-alphabetic and at least one character is a special character. For TL1 compatibility, the password must be 6 to 10 characters. The password must not contain the user name.
- **Confirm Password**—Type the password again to confirm it.
- **Security Level**—Choose a security level for the user: RETRIEVE, MAINTENANCE, PROVISIONING, or SUPERUSER. Refer to the *Cisco ONS 15454 Reference Manual* for information about the capabilities provided with each level.



Note The idle time is the length of time that CTC can remain idle before it locks up and the password must be reentered. Each security level has a different idle time. The defaults are: Retrieve user = unlimited, Maintenance user = 60 minutes, Provisioning user = 30 minutes, and Superuser = 15 minutes. To change the idle times, refer to the “NTP-A205 Modify Users and Change Security” procedure on page 12-26.

- Step 5** Under “Select applicable nodes,” deselect any nodes where you do not want to add the user (all network nodes are selected by default).
- Step 6** Click **OK**.
- Step 7** In the User Creation Results dialog box, click **OK**.
- Step 8** Return to your originating procedure (NTP).

NTP-A25 Set Up Name, Date, Time, and Contact Information

Purpose	This procedure provisions identification information for the node, including the node name, a contact name and phone number, the location of the node, and the date, time, and time zone.
Tools/Equipment	None
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 for the node you will turn up.
- Step 2** Click the **Provisioning > General** tabs.
- Step 3** Enter the following information in the fields listed:
- **Node Name**—Type a name for the node. For TL1 compliance, names must not have more than 20 alphanumeric characters.
 - **Contact**—Type the name of the node contact person and the phone number, up to 255 characters (optional).
 - **Latitude**—Enter the node latitude: N (North) or S (South), degrees, and minutes (optional).
 - **Longitude**—Enter the node longitude: E (East) or W (West), degrees, and minutes (optional).

**Tip**

You can also position nodes manually on the network view map. Press Ctrl while you drag and drop the node icon. To create the same network map visible for all ONS 15454 users, complete the “NTP-A172 Create a Logical Network Map” procedure on page 6-3.

CTC uses the latitude and longitude to position ONS 15454 icons on the network view map. To convert a coordinate in degrees to degrees and minutes, multiply the number after the decimal by 60. For example, the latitude 38.250739 converts to 38 degrees, 15 minutes (.250739 x 60 = 15.0443, rounded to the nearest whole number).

- Description—Type a description of the node. The description can be a maximum of 255 characters.
- Use NTP/SNTP Server—When checked, CTC uses a Network Time Protocol (NTP) or Simple Network Time Protocol (SNTP) server to set the date and time of the node.

If you do not use an SNTP or NTP server, complete the Date and Time fields. The ONS 15454 will use these fields for alarm dates and times. (CTC displays all alarms in the login node’s time zone for cross network consistency.)

**Note**

Using an NTP or SNTP server ensures that all ONS 15454 network nodes use the same date and time reference. The server synchronizes the node’s time after power outages or software upgrades.

If you check the Use NTP/SNTP Server check box, type the IP address of either:

- An NTP/SNTP server, or
- The IP address of another ONS 15454 with NTP/SNTP Server enabled.

If you check Enable Firewall for the ONS 15454 proxy server (see “DLP-A249 Provision IP Settings” task on page 4-9), external ONS 15454s must reference the gateway ONS 15454 for NTP/SNTP timing. For more information about the ONS 15454 gateway settings, refer to the *Cisco ONS 15454 Reference Manual*.

**Caution**

If you reference another ONS 15454 for the NTP/SNTP server, make sure the second ONS 15454 references an NTP/SNTP server and not the first ONS 15454 (that is, do not create an NTP/SNTP timing loop by having two ONS 15454s reference each other).

- Date—If Use NTP/SNTP Server is not checked, type the current date in the format mm/dd/yyyy, for example, September 24, 2002 is 09/24/2002.
- Time—If Use NTP/SNTP Server is not checked, type the current time in the format hh:mm:ss, for example, 11:24:58. The ONS 15454 uses a 24-hour clock, so 10:00 PM is entered as 22:00:00.
- Time Zone—Click the field and choose a city within your time zone from the popup menu. The menu displays the 80 World Time Zones from -11 through 0 (GMT) to +14. Continental United States time zones are GMT-05:00 (Eastern), GMT-06:00 (Central), GMT-07 (Mountain), and GMT-08 (Pacific).
- Use Daylight Savings Time—Check this check box if the time zone that you chose is using Daylight Savings Time.
- Insert AIS-V on STS-1 SD-P—Check this check box if you want AIS-Vs inserted on VT circuits carried by STS-1s when the STS-1 crosses its SD-P BER threshold. On protected circuits, traffic will be switched. If the switch cannot be performed, or if circuits are not protected, traffic will be dropped when the STS-1 SD-P BER threshold is reached.

- SD-P BER—If you selected Insert AIS-V, you can choose the SD-P BER level from the SD-P BER drop-down menu.

Step 4 Click **Apply**.

Step 5 In the confirmation dialog box, click **Yes**.

Step 6 Review the node information. If you need to make corrections, repeat Steps 3 through 5 to enter the corrections. If the information is correct, continue with the “NTP-A169 Set Up CTC Network Access” procedure on page 4-8.

Stop. You have completed this procedure.

NTP-A169 Set Up CTC Network Access

Purpose	This procedure provisions network access for a node, including its subnet mask, default router, Dynamic Host Configuration Protocol (DHCP) server, IOP (Internet Inter-Orb Protocol) listener port, proxy server settings, static routes, open shortest path first (OSPF) protocol, and routing information protocol (RIP).
Tools/Equipment	None
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.

Step 2 Complete the “DLP-A249 Provision IP Settings” task on page 4-9 to provision the ONS 15454 IP address, subnet mask, default router, DHCP server, IOP listener port, and proxy server settings.



Tip If you cannot log into the node, you can change its IP address, default router and network mask by using the LCD on the ONS 15454 fan-tray assembly (unless LCD provisioning is suppressed). See the “DLP-A64 Set the IP Address, Default Router, and Network Mask Using the LCD” task on page 4-12 for instructions. However, you cannot use the LCD to provision any other network settings.

Step 3 If static routes are needed, complete the “DLP-A65 Create a Static Route” task on page 4-14. Refer to the *Cisco ONS 15454 Reference Manual* for further information about static routes.

Step 4 As needed, perform one of the following:

- If the ONS 15454 is connected to a LAN or WAN that uses OSPF, complete the “DLP-A250 Set Up or Change Open Shortest Path First Protocol” task on page 4-15.
- If the ONS 15454 is connected to a LAN or WAN that uses RIP, complete the “DLP-A251 Set Up or Change Routing Information Protocol” task on page 4-17.

Stop. You have completed this procedure.

DLP-A249 Provision IP Settings

Purpose	This task provisions IP settings, which includes the IP address, default router, DHCP access, firewall access, and proxy server settings for an ONS 15454 node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser



Caution

All network changes should be approved by your network (or LAN) administrator.

Step 1 In node view, click the **Provisioning > Network** tabs.

Step 2 Complete the following information in the fields listed:

- IP Address—Type the IP address assigned to the ONS 15454 node.
- Suppress CTC IP Display—Check this check box if you want to prevent the node IP address from being displayed in CTC to users with Provisioner, Maintenance, or Retrieve security levels. (The IP address suppression will not be applied to users with Superuser security level.)
- LCD IP Display—Choose one of the following:
 - Allow Configuration—Displays the node IP address on the LCD and allows users to change the IP settings using the LCD, that is, this option enables the “DLP-A64 Set the IP Address, Default Router, and Network Mask Using the LCD” task on page 4-12.
 - Display Only—Displays the node IP address on the LCD but does not allow users to change the IP address using the LCD.
 - Suppress Display—Suppresses the node IP address display on the LCD.
- Default Router—If the ONS 15454 must communicate with a device on a network that the ONS 15454 is not connected to, the ONS 15454 may forward the packets to the default router. Type the IP address of the router in this field.



Note This field is ignored if the node is not connected to a LAN, or if you enable any of the Gateway Settings to implement the ONS 15454 proxy server feature.

- Forward DHCP Request To—Check this check box to enable Dynamic Host Configuration Protocol (DHCP). Also, enter the DHCP server IP address in the Request To field. Unchecked is the default. If you will enable any of the gateway settings to implement the ONS 15454 proxy server features, leave this field blank.



Note If you enable DHCP, computers connected to an ONS 15454 node can obtain temporary IP addresses from an external DHCP server. The ONS 15454 only forwards DHCP requests; it does not act as a DHCP server.

- **MAC Address**—(read only) Displays the ONS 15454 IEEE 802 Media Access Control (MAC) address.
- **Net/Subnet Mask Length**—Type the subnet mask length (decimal number representing the subnet mask length in bits) or click the arrows to adjust the subnet mask length. The subnet mask length is the same for all ONS 15454s in the same subnet.
- **TCC CORBA (IIOP) Listener Port**—Provisions the ONS 15454 IIOP listener port. This listener port enables communication with the ONS 15454 through firewalls. See the “NTP-A27 Set Up the ONS 15454 for Firewall Access” procedure on page 4-18 for more information.
- **Gateway Settings**—Provides three check boxes that enable the ONS 15454 proxy server features. Do not enable any of the check boxes until you review the proxy server scenario in the *Cisco ONS 15454 Reference Manual*. In proxy server networks, the ONS 15454 will be either a gateway network element (GNE) or external network element (ENE). Provisioning must be consistent for each NE type.
 - **Craft Access Only**—If checked, the CTC computer is only visible to the ONS 15454 that the CTC computer is connected to. The computer is not visible to other DCC-connected nodes. This box is normally checked for external NEs and not checked for gateway NEs. If Craft Access Only is checked, Enable Proxy must be selected in order for the directly connected PC to have visibility to DCC-connected nodes.
 - **Enable Proxy**—If checked, the ONS 15454 responds to CTC requests with a list of DCC-connected nodes for which the node serves as a proxy. Gateway and external NEs within a proxy server network should have this box checked.
 - **Enable Firewall**—If checked, the node prevents IP traffic from being routed between the DCC and the LAN port. Gateway and external NEs within a proxy server network should have this box checked. If Enable Firewall is checked, Enable Proxy must be selected in order for the directly connected PC to have visibility to DCC-connected nodes.

Step 3 Click **Apply**.

Step 4 Click **Yes** in the confirmation dialog box.

Both TCC+/TCC2 cards will reboot, one at a time. During this time (approximately 10 to 15 minutes), the active and standby TCC+/TCC2 card LEDs will go through the cycle shown in Table 4-1. Eventually, a “Lost node connection, switching to network view” message appear.

Table 4-1 LED Behavior During TCC+/TCC2 Reboot

Active TCC+/TCC2 LEDs	Standby TCC+/TCC2 LEDs	Reboot Activity
ACT/STBY: flashing green	<p>TCC+/TCC2</p> <ol style="list-style-type: none"> 1. ACT/STBY: flashing yellow 2. FAIL LED: solid red <p>TCC2 only</p> <ol style="list-style-type: none"> 3. All LEDs on except ACT/STBY 4. CRIT turns off 5. MAJ and MIN turn off 6. REM, SYNC, ACO turn off <p>TCC+TCC2</p> <ol style="list-style-type: none"> 7. All LEDs: turn off (1-2 minutes) 8. ACT/STBY: solid yellow 9. Alarm LEDs: flash once 10. ACT/STBY: Solid green 	<p>Standby TCC+/TCC2 card updated with new network information</p> <p>Memory test (1-2 minutes)</p> <p>If an AIC or AIC-I card is installed, AIC FAIL and alarm LEDs light up briefly when the AIC is updated</p> <p>The standby TCC+/TCC2 becomes the active TCC+/TCC2</p>
<p>TCC+/TCC2</p> <ol style="list-style-type: none"> 1. All LEDs: turn off (1-2 minutes) CTC displays “Lost node connection, switching to network view” message 2. FAIL LED: solid red 3. FAIL LED: flashing red <p>TCC2 only</p> <ol style="list-style-type: none"> 4. All LEDs on except ACT/STBY 5. CRIT turns off 6. MAJ and MIN turn off 7. REM, SYNC, ACO turn off; all LEDs off <p>TCC+ and TCC2</p> <ol style="list-style-type: none"> 8. ACT/STBY: solid yellow 9. ACT/STBY: flashing yellow 10. ACT/STBY: solid yellow 	<p>ACT/STBY: solid green</p>	<p>Memory test (1-2 minutes)</p> <p>TCC+/TCC2 updated with new network information</p> <p>The active TCC+/TCC2 becomes the standby TCC+/TCC2</p>

Step 5 Click **OK**. CTC displays the network view. The node icon appears in grey, during which time you cannot access the node.

Step 6 Double-click the node icon when it becomes green.

Step 7 Return to your originating procedure (NTP).

DLP-A64 Set the IP Address, Default Router, and Network Mask Using the LCD

Purpose	This task changes the ONS 15454 IP address, default router, and network mask using the LCD on the fan-tray assembly. Use this task if you cannot log into CTC.
Tools/Equipment	None
Prerequisite Procedures	DLP-A36 Install the TCC+/TCC2 Cards, page 2-7
Required/As Needed	Optional
Onsite/Remote	Onsite
Security Level	None



Note

You cannot perform this task if the LCD IP Display on the node view Provisioning > Network tab is set to Display Only or Suppress Display. See “DLP-A249 Provision IP Settings” task on page 4-9 to view or change the LCD IP Display field.



Note


The LCD reverts to normal display mode after 5 seconds of button inactivity.

Step 1 On the ONS 15454 front panel, repeatedly press the **Slot** button until Node appears on the LCD.


Step 2 Repeatedly press the **Port** button until the following displays:

- To change the node IP address, Status=IpAddress (Figure 4-1)
- To change the node network mask, Status=Net Mask
- To change the default router IP address, Status=Default Rtr

Figure 4-1 Selecting the IP Address Option

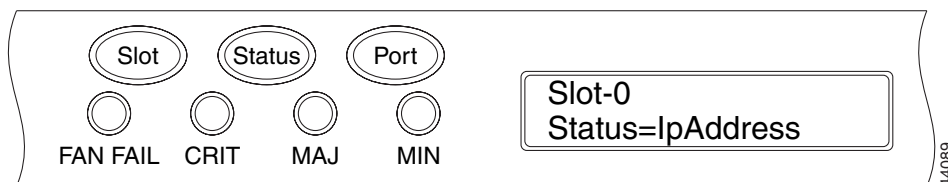

Step 3 Press the **Status** button to display the node IP address (Figure 4-2), the node subnet mask length, or the default router IP address.

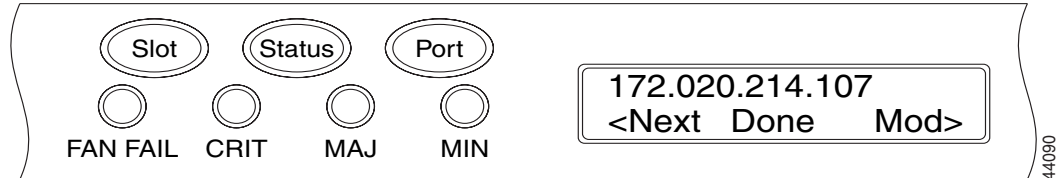
Figure 4-2 Changing the IP Address

- Step 4** Push the **Slot** button to move to the IP address or subnet mask digit you need to change. The selected digit flashes.




Tip The Slot, Status, and Port button positions correspond to the command position on the LCD. For example, in Figure 4-2, you press the Slot button to invoke the Next command and the Port button to invoke the Done command.

- Step 5** Press the **Port** button to cycle the IP address or subnet mask to the correct digit.
- Step 6** When the change is complete, press the **Status** button to return to the Node menu.
- Step 7** Repeatedly press the **Port** button until the Save Configuration option appears (Figure 4-3).

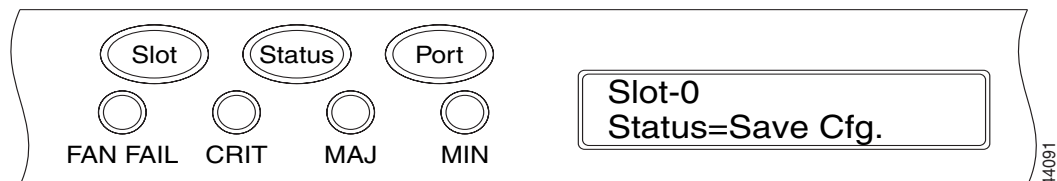Figure 4-3 Selecting the Save Configuration Option

- Step 8** Press the **Status** button to choose the Save Configuration option. A Save and REBOOT message appears (Figure 4-4).

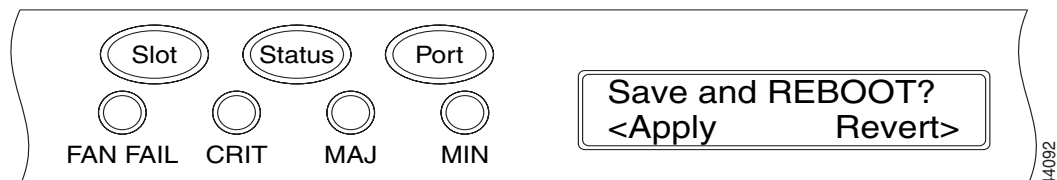Figure 4-4 Saving and Rebooting the TCC+/TCC2

- Step 9** Press the **Slot** button to apply the new IP address configuration or press **Port** to cancel the configuration. Saving the new configuration causes the TCC+/TCC2 cards to reboot. During the reboot, a “Saving Changes - TCC Reset” message displays on the LCD. The LCD returns to the normal alternating display after the TCC+/TCC2 reboot is complete (see Table 4-1 on page 4-11 for reboot behavior).



Note The IP address and default router must be on the same subnet. If not, you cannot apply the configuration.

Step 10 Return to your originating procedure (NTP).

DLP-A65 Create a Static Route

Purpose	This task creates a static route to establish CTC connectivity to a computer on another network.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required if either of the following is true: You need to connect ONS 15454s to CTC sessions on one subnet connected by a router to ONS 15454s residing on another subnet when OSPF is not enabled, and the Enable Proxy box is not checked, or You need to enable multiple CTC sessions among ONS 15454s residing on the same subnet and the Craft Access Only feature is not enabled.
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > Network** tabs.

Step 2 Click the **Static Routing** tab. Click **Create**.

Step 3 In the Create Static Route dialog box enter the following:

- **Destination**—Enter the IP address of the computer running CTC. To limit access to one computer, enter the full IP address and a subnet mask of 255.255.255.255. To allow access to all computers on the 192.168.1.0 subnet, enter 192.168.1.0 and a subnet mask of 255.255.255.0. You can enter a destination of 0.0.0.0 to allow access to all CTC computers that connect to the router.
- **Mask**—Enter a subnet mask. If the destination is a host route (i.e., one CTC computer), enter a 32-bit subnet mask (255.255.255.255). If the destination is a subnet, adjust the subnet mask accordingly, for example, 255.255.255.0. If the destination is 0.0.0.0, CTC automatically enters a subnet mask of 0.0.0.0 to provide access to all CTC computers. You cannot change this value.
- **Next Hop**—Enter the IP address of the router port or the node IP address if the CTC computer is connected to the node directly.
- **Cost**—Enter the number of hops between the ONS 15454 and the computer.

Step 4 Click **OK**. Verify that the static route displays in the Static Route window.



Note Static route networking examples are provided in the IP networking section of the *Cisco ONS 15454 Reference Manual*.

Step 5 Return to your originating procedure (NTP).

DLP-A250 Set Up or Change Open Shortest Path First Protocol

Purpose	This task enables the Open Shortest Path First (OSPF) routing protocol on the ONS 15454. Perform this task if you want to include the ONS 15454 in OSPF-enabled networks.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26 You will need the OSPF Area ID, Hello and Dead intervals, and authentication key (if OSPF authentication is enabled) provisioned on the router to which the ONS 15454 is connected.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, click the **Provisioning > Network > OSPF** tabs.
- Step 2** On the top left side of the OSPF pane, complete the following:
- **DCC/GCC OSPF Area ID Table**—In dotted decimal format, enter the number that identifies the ONS 15454s as a unique OSPF area ID. The Area ID can be any number between 000.000.000.000 and 255.255.255.255, but must be unique to the LAN OSPF area.
 - **DCC Metric**—This value is normally unchanged. It sets a “cost” for sending packets across the DCC, which is used by OSPF routers to calculate the shortest path. This value should always be higher than the LAN metric. The default DCC metric is 10. The metric changes to 100 if you check the OSPF Active on LAN check box in Step 3.
- Step 3** In the OSPF on LAN area, complete the following:
- **OSPF active on LAN**—When checked, enables the ONS 15454 OSPF topology to be advertised to OSPF routers on the LAN. Enable this field on ONS 15454s that directly connect to OSPF routers.
 - **LAN Port Area ID**—Enter the OSPF area ID (dotted decimal format) for the router port where the ONS 15454 is connected. (This number is different from the DCC/GCC OSPF Area ID.)
- Step 4** By default, OSPF is set to No Authentication. If the OSPF router requires authentication, complete the following steps. If not, continue with Step 5.
- Click the **No Authentication** button.
 - On the Edit Authentication Key dialog box, complete the following:
 - **Type**—Choose **Simple Password**.
 - **Enter Authentication Key**—Enter the password.
 - **Confirm Authentication Key**—Enter the same password to confirm it.
 - Click **OK**.
- The authentication button label changes to Simple Password.
- Step 5** Provision the OSPF priority and interval settings:
- The OSPF priority and intervals default to values most commonly used by OSPF routers. In the Priority and Intervals area, verify that these default values match those used by the OSPF router where the ONS 15454 is connected.
- **Router Priority**—Selects the designated router for a subnet.

- Hello Interval (sec)—Sets the number of seconds between OSPF “hello” packet advertisements sent by OSPF routers. Ten seconds is the default.
- Dead Interval—Sets the number of seconds that will pass while an OSPF router’s packets are not visible before its neighbors declare the router down. Forty seconds is the default.
- Transit Delay (sec)—Indicates the service speed. One second is the default.
- Retransmit Interval (sec)—Sets the time that will elapse before a packet is resent. Five seconds is the default.
- LAN Metric—Sets a “cost” for sending packets across the LAN. This value should always be lower than the DCC metric. Ten is the default.

Step 6 Under OSPF Area Range Table, create an area range table if one is needed:



Note Area range tables consolidate the information that is outside an OSPF Area border. One ONS 15454 in the ONS 15454 OSPF area is connected to the OSPF router. An area range table on this node points the router to the other nodes that reside within the ONS 15454 OSPF area.

- a. Under OSPF Area Range Table, click **Create**.
- b. In the Create Area Range dialog box, enter the following:
 - Range Address—Enter the area IP address for the ONS 15454s that reside within the OSPF area. For example, if the ONS 15454 OSPF area includes nodes with IP addresses 10.10.20.100, 10.10.30.150, 10.10.40.200, and 10.10.50.250, the range address would be 10.10.0.0.
 - Range Area ID—Enter the OSPF area ID for the ONS 15454s. This is either the ID in the DCC OSPF Area ID field or the ID in the Area ID for LAN Port field.
 - Mask Length—Enter the subnet mask length. In the Range Address example, this is 16.
 - Advertise—Check if you want to advertise the OSPF range table.
- c. Click **OK**.

Step 7 All OSPF areas must be connected to Area 0. If the ONS 15454 OSPF area is not physically connected to Area 0, use the following steps to create a virtual link table that will provide the disconnected area with a logical path to Area 0:

- a. Under OSPF Virtual Link Table, click **Create**.
- b. In the Create Virtual Link dialog box, complete the following fields (OSPF settings must match OSPF settings for the ONS 15454 OSPF area):
 - Neighbor—The router ID of the Area 0 router.
 - Transit Delay (sec)—The service speed. One second is the default.
 - Hello Int (sec)—The number of seconds between OSPF “hello” packet advertisements sent by OSPF routers. Ten seconds is the default.
 - Auth Type—If the router where the ONS 15454 is connected uses authentication, choose **Simple Password**. Otherwise, choose **No Authentication**.
 - Retransmit Int (sec)—Sets the time that will elapse before a packet is resent. Five seconds is the default.
 - Dead Int (sec)—Sets the number of seconds that will pass while an OSPF router’s packets are not visible before its neighbors declare the router down. Forty seconds is the default.
- c. Click **OK**.

Step 8 After entering ONS 15454 OSPF area data, click **Apply**.

If you changed the Area ID, the TCC+/TCC2 cards will reset, one at a time. The reset will take approximately 10-15 minutes. Table 4-1 on page 4-11 shows the LED behavior during the TCC+/TCC2 reset.

Step 9 Return to your originating procedure (NTP).

DLP-A251 Set Up or Change Routing Information Protocol

Purpose	This task enables routing information protocol (RIP) on the ONS 15454. Perform this task if you want to include the ONS 15454 in RIP-enabled networks.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26 You need to create a static route to the router adjacent to the ONS 15454 for the ONS 15454 to communicate its routing information to non DCC-connected nodes.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > Network > RIP** tabs.

Step 2 Check the **RIP Active** check box if you are activating RIP.

Step 3 Choose either RIP Version 1 or RIP Version 2 from the drop-down menu, depending on which version is supported in your network.

Step 4 Set the RIP metric. The RIP metric can be set to a number between 1 and 15 and represents the number of hops.

Step 5 By default, RIP is set to No Authentication. If the router that the ONS 15454 is connected to requires authentication, complete the following steps. If not, continue with Step 6.

- a. Click the **No Authentication** button.
- b. On the Edit Authentication Key dialog box, complete the following:
 - Type—Choose **Simple Password**.
 - Enter Authentication Key—Enter the password,
 - Confirm Authentication Key—Enter the same password to confirm it.
- c. Click **OK**.

The authentication button label changes to Simple Password.

Step 6 If you want to complete an address summary, complete the following steps. If not, the task is complete. Continue with Step 7. Complete the address summary only if the ONS 15454 is a gateway NE with multiple external ONS 15454 NEs attached with IP addresses in different subnets.

- a. In the RIP Address Summary area, click **Create**.
- b. In the Create Address Summary dialog box, complete the following:
 - Summary Address—Enter the summary IP address.

- Mask Length—Enter the subnet mask length using the up/down arrows.
- Hops—Enter the number of hops. The smaller the number of hops, the higher the priority.

c. Click **OK**.

Step 7 Return to your originating procedure (NTP).

NTP-A27 Set Up the ONS 15454 for Firewall Access


Purpose	This procedure provisions ONS 15454s and CTC computers for access through firewalls.
Tools/Equipment	IIOp listener port number provided by your LAN or firewall administrator
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Log into a node that is behind the firewall. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions.

Step 2 Complete the “DLP-A67 Provision the IIOp Listener Port on the ONS 15454” task on page 4-19.

Figure 4-5 shows ONS 15454s in a protected network and the CTC computer in an external network. For the computer to access the ONS 15454s, you must provision the IIOp listener port specified by your firewall administrator on the ONS 15454.


Figure 4-5 Nodes Behind a Firewall

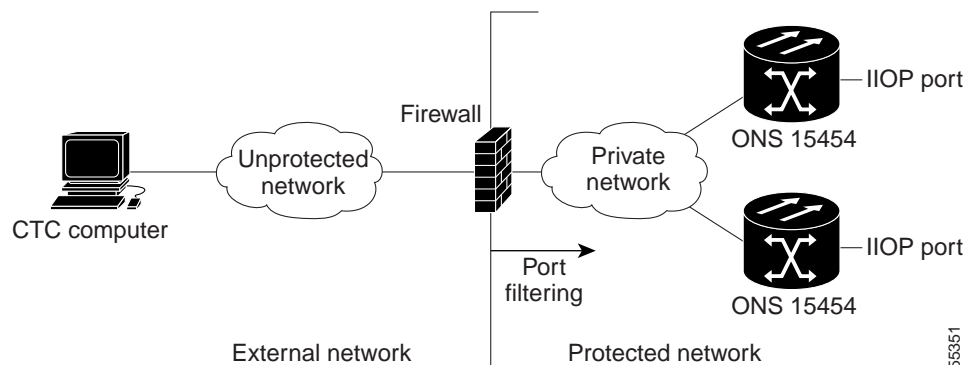

Step 3 If the CTC computer resides behind a firewall, complete the “DLP-A68 Provision the IIOp Listener Port on the CTC Computer” task on page 4-20.

Figure 4-6 shows a CTC computer and ONS 15454 behind firewalls. For the computer to access the ONS 15454, you must provision the IIOp port on the CTC computer and on the ONS 15454.

Figure 4-6 A CTC Computer and ONS 1545s Residing Behind Firewalls

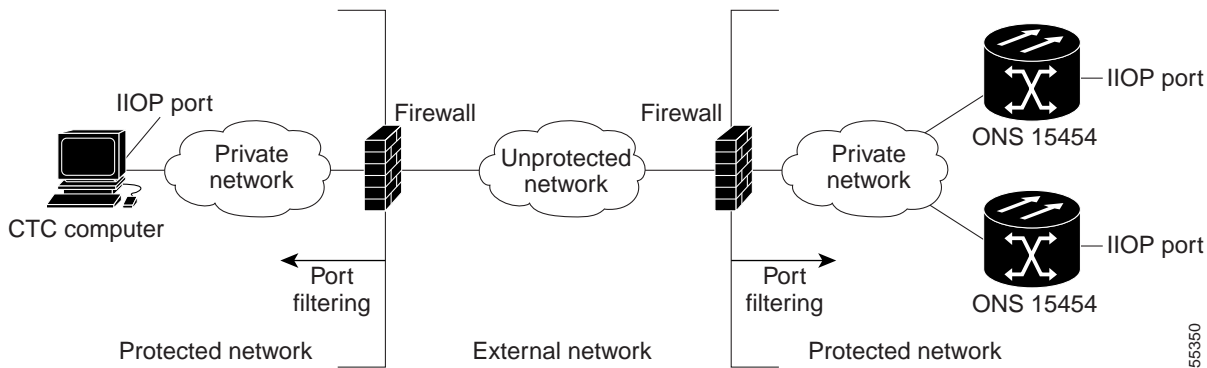

Stop. You have completed this procedure.

DLP-A67 Provision the IIOp Listener Port on the ONS 15454

Purpose	This task sets the IIOp listener port on the ONS 15454, which enables you to access ONS 15454s that reside behind a firewall.
Tools/Equipment	IIOp listener port number provided by your LAN or firewall administrator.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > Network > General** tabs.

Step 2 In the TCC CORBA (IIOp) Listener Port area, choose a listener port option:

- **Default - TCC Fixed**—Uses Port 57790 to connect to ONS 15454s on the same side of the firewall or if no firewall is used (default). This option can be used for access through a firewall if Port 57790 is open.
- **Standard Constant**—Uses Port 683, the CORBA default port number
- **Other Constant**—If Port 683 is not used, type the IIOp port specified by your firewall administrator. The port cannot use any of the ports shown in Table 4-2.

Table 4-2 Ports Used by the TCC+/TCC2 Cards

Port	Function
0	Never used
21	FTP control
23	TELNET
80	HTTP
111	rpc (not used; but port is in use)

Table 4-2 Ports Used by the TCC+/TCC2 Cards (continued)

Port	Function
513	rlogin (not used; but port is in use)
=<1023	Default CTC listener ports
1080	Proxy server
2001-2017	I/O card telnet
2018	DCC processor on active TCC+/TCC2
2361	TL1
3082	TL1
3083	TL1
5001	BLSR server port
5002	BLSR client port
7200, 7209, 7210	SNMP input port
9100	EQM port
9101	EQM port 2
9401	TCC+/TCC2 boot port
9999	Flash manager
57790	Default TCC+/TCC2 listener port

Step 3 Click **Apply**.

Step 4 When the Change Network Configuration message appears, click **Yes**.

Both ONS 15454 TCC+/TCC2s will reboot, one at a time. The reboot will take approximately 15 minutes. See Table 4-1 on page 4-11.

Step 5 Return to your originating procedure (NTP).

DLP-A68 Provision the IOP Listener Port on the CTC Computer

Purpose	This task selects the IOP listener port on CTC.
Tools/Equipment	IOP listener port number from LAN or firewall administrator.
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2 DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required only if the computer running CTC resides behind a firewall.
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 From the Edit menu, choose **Preferences**.

Step 2 In the Preferences dialog box, click the **Firewall** tab.

- Step 3** In the CTC CORBA (IIOP) Listener Port area, choose a listener port option:
- Default - Variable—Used to connect to ONS 15454s from within a firewall or if no firewall is used (default)
 - Standard Constant—Uses Port 683, the CORBA default port number
 - Other Constant—If Port 683 is not used, enter the IIOP port defined by your administrator
- Step 4** Click **Apply**. A warning appears telling you that the port change will apply during the next CTC login.
- Step 5** Click **OK**.
- Step 6** In the Preferences dialog box, click **OK**.
- Step 7** To access the ONS 15454 using the IIOP port, log out of CTC (from the File menu, select **Exit**) then log back in.
- Step 8** Return to your originating procedure (NTP).
-

NTP-A28 Set Up Timing

Purpose	This procedure provisions the ONS 15454 timing.
Tools/Equipment	None
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will set up timing. for instructions. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A69 Set Up External or Line Timing” task on page 4-22 if an external BITS source is available. This is the common SONET timing setup procedure.
- Step 3** If you cannot complete Step 2 (an external BITS source is not available), complete the “DLP-A70 Set Up Internal Timing” task on page 4-24 . This task can only provide Stratum 3 timing.



Note For information about SONET timing, refer to the *Cisco ONS 15454 Reference Manual* or to Telcordia GR-253-CORE.

Stop. You have completed this procedure.

DLP-A69 Set Up External or Line Timing

Purpose	This task defines the SONET timing source (external or line) for the ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > Timing** tabs.

Step 2 In the General Timing area, complete the following information:

- **Timing Mode**—Choose **External** if the ONS 15454 derives its timing from a BITS source wired to the backplane pins; choose **Line** if timing is derived from an OC-N card (non-DWDM nodes) or OSC card (DWDM nodes) that is optically connected to the timing node. A third option, Mixed, allows you to set external and line timing references.



Note Because Mixed timing may cause timing loops, Cisco does not recommend its use. Use this mode with care.

- **SSM Message Set**—Choose an SSM message set. All ONS 15454s can translate Generation 2 message sets, so choose Generation 2 if the ONS 15454 is connected to other ONS 15454s. Choose Generation 1 only when the ONS 15454 is connected to equipment that does not support Generation 2. If a node that has its SSM Message Set set to Generation 1 receives a Generation 2 message, it maps the message down to the next available Generation 1 message. TNC and ST3E will become an ST3.
- **Quality of RES**—If your timing source supports the reserved S1 byte, set the timing quality here. (Most timing sources do not use RES.) Qualities are displayed in descending quality order as ranges. For example, ST3<RES<ST2 means the timing reference is higher than a Stratum 3 and lower than a Stratum 2. Refer to the *Cisco ONS 15454 Reference Manual* for more information about SSM, including definitions of the SONET timing levels.
- **Revertive**—Select this check box if you want the ONS 15454 to revert to a primary reference source after the conditions that caused it to switch to a secondary timing reference are corrected.
- **Revertive Time**—If Revertive is checked, choose the amount of time the ONS 15454 will wait before reverting to its primary timing source. Five minutes is the default.

Step 3 In the BITS Facilities area, complete the following information:



Note The BITS Facilities section sets the parameters for your BITS-1 and BITS-2 timing references. Many of these settings are determined by the timing source manufacturer. If equipment is timed through BITS Out, you can set timing parameters to meet the requirements of the equipment.

- **BITS In State**—If Timing Mode is set to External or Mixed, set the BITS In State for BITS-1 and/or BITS-2 to **IS** (In Service) depending whether one or both BITS input pin pairs on the backplane are connected to the external timing source. If Timing Mode is set to Line, set the BITS In State to **OOS** (Out of Service).

- **BITS Out State**—If equipment is connected to the node's BITS output pins on the backplane and you want to time the equipment from a node reference, set the BITS Out State for BITS-1 and/or BITS-2 to **IS**, depending on which BITS Out pins are used for the external equipment. If equipment is not attached to the BITS output pins, set the BITS Out State to **OOS** (Out of Service).

Step 4 If the BITS In State for BITS-1 and BITS-2 is set to OOS, continue with Step 5. If the BITS In State is set to IS for either BITS-1 or BITS-2, complete the following information:

- **Coding**—Set to the coding used by your BITS reference, either B8ZS or AMI.
- **Framing**—Set to the framing used by your BITS reference, either ESF (Extended Super Frame, or SF (D4) (Super Frame).
- **Sync Messaging**—Check to enable SSM. SSM is not available if Framing is set to Super Frame.
- **AIS Threshold**—If SSM is disabled or Super Frame is used, set the quality level where a node sends an alarm indication signal (AIS) from the BITS-1 Out and BITS-2 Out backplane pins. An AIS is raised when the optical source for the BITS reference falls to or below the SSM quality level defined in this field.
- **LBO**—If you are timing an external device connected to the BITS Out pins, set the distance between the device and the ONS 15454. Options are: 0-133 ft. (default), 124-266 ft., 267-399 ft., 400-533 ft., and 534-655 ft.

Step 5 In the Reference Lists area, complete the following information:



Note Reference Lists defines up to three timing references for the node and up to six BITS Out references. BITS Out references define the timing references used by equipment that can be attached to the node's BITS Out pins on the backplane. If you attach equipment to BITS Out pins, you normally attach it to a node with Line mode because equipment near the external timing reference can be directly wired to the reference.



Note If a 1+1 node will use line timing, make a working OC-N card the Ref-X timing source. The system will automatically choose the corresponding protect OC-N card as the Ref-X protect timing source. This will be visible in the Maintenance > Timing tab.

- **NE Reference**—Allows you to define three timing references (Ref 1, Ref 2, Ref 3). The node uses Reference 1 unless a failure occurs to that reference, in which case the node uses Reference 2. If Reference 2 fails, the node uses Reference 3, which is typically set to Internal Clock. Reference 3 is the Stratum 3 clock provided on the TCC+/TCC2 card. The options displayed depend on the Timing Mode setting.
 - If the Timing Mode is set to External, your options are BITS-1, BITS-2, and Internal Clock.
 - If the Timing Mode is set to Line, your options are the node's working OC-N cards (non-DWDM nodes) or OSC cards (DWDM nodes) and Internal Clock. Choose the cards/ports that are directly or indirectly connected to the node wired to the BITS source, that is, the node's trunk (span) cards. Set Reference 1 to the trunk card that is closest to the BITS source. For example, if Slot 5 is connected to the node wired to the BITS source, choose Slot 5 as Reference 1.
 - If the Timing Mode is set to Mixed, both BITS and OC-N cards are available, allowing you to set a mixture of external BITS and OC-N trunk cards as timing references.

- BITS-1 Out/BITS-2 Out—Sets the timing references for equipment wired to the BITS Out backplane pins. BITS-1 Out and BITS-2 Out are enabled when BITS-1 and BITS-2 facilities are put in service. If Timing Mode is set to external, choose the OC-N card used to set the timing. If Timing Mode is set to Line, you can choose an OC-N card or choose NE Reference to have the BITS-1 Out and/or BITS-2 Out follow the same timing references as the NE.

Step 6 Click **Apply**.



Note Refer to the *Cisco ONS 15454 Troubleshooting Guide* for timing-related alarms.

Step 7 Return to your originating procedure (NTP).

DLP-A70 Set Up Internal Timing

Purpose	This task sets up internal timing (Stratum 3) for an ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed (use only if a BITS source is not available)
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Internal timing is Stratum 3 and not intended for permanent use. All ONS 15454s should be timed to a Stratum 2 or better primary reference source.

Step 1 In node view, click the **Provisioning > Timing** tabs.

Step 2 In the General Timing area, enter the following:

- Timing Mode—Set to External
- SSM Message Set—Set to Generation 1
- Quality of RES—Does not apply to internal timing
- Revertive—Does not apply to internal timing
- Revertive Time—Does not apply to internal timing

Step 3 In the BITS Facilities area, change BITS In State and BITS Out State to OOS (Out of Service). Disregard the other BITS Facilities settings; they are not relevant to internal timing.

Step 4 In the Reference Lists area, enter the following information:

- NE Reference
 - Ref 1—Set to Internal Clock
 - Ref 2—Set to Internal Clock
 - Ref 3—Set to Internal Clock
- BITS-1 Out/BITS-2 Out—Set to None

Step 5 Click **Apply**.

- Step 6** Log into a node that will be timed from the node set up in Steps 1 to 5.
- Step 7** Click the **Provisioning > Timing** tabs.
- Step 8** In the General Timing section, enter the same information as entered in Step 2 with the following exceptions:
- Timing Mode—Set to Line
- Reference Lists
- NE Reference
 - Ref1—Set to the OC-N trunk (span) card (non-DWDM node) or OSC card (DWDM) with the closest connection to the node in Step 3
 - Ref 2—Set to the OC-N trunk (span) card (non-DWDM node) or OSC card (DWDM) with the next closest connection to the node in Step 3
 - Ref 3—Set to Internal Clock
- Step 9** Click **Apply**.
- Step 10** Repeat Steps 6 through 9 at each node that will be timed by the node in Step 3.
- Step 11** Return to your originating procedure (NTP).
-

NTP-A170 Create Protection Groups

Purpose	This procedure creates ONS 15454 card protection groups.
Tools/Equipment	None
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to create the protection group. If you are already logged in, continue with Step 2.
- Step 2** Complete one or more of the following tasks depending on the protection group(s) you want to create:
- DLP-A71 Create a 1:1 Protection Group, page 4-27
 - DLP-A72 Create a 1:N Protection Group, page 4-28
 - DLP-A73 Create a 1+1 Protection Group, page 4-29
 - DLP-A252 Create a Y-Cable Protection Group, page 4-31

Table 4-3 describes the protection types available on the ONS 15454.

Table 4-3 Protection Types

Type	Cards	Description and Installation Requirements
1:1	DS1-14 DS3-12 DS3-12E EC1-12 DS3XM-6	Pairs one working card with one protect card. The protect card should be installed in an odd-numbered slot and the working card in an even-numbered slot next to the protect slot towards the TCC+/TCC2, for example: protect in Slot 1, working in Slot 2; protect in Slot 3, working in Slot 4; protect in Slot 15, working in Slot 14. 1:1 protection can be revertive or non-revertive. Refer to the “Card Protection” chapter in the <i>ONS 15454 Reference Manual</i> .
1:N	DS1N-14 DS3N-12 DS3N-12E	Assigns one protect card for several working cards. The maximum is 1:5. Protect cards (DS1N-14, DS3N-12, DS3N-12E) must be installed in Slots 3 or 15 and the cards they protect must be on the same side of the shelf. Protect cards must match the cards they protect. For example, a DS1N-14 can only protect DS1-14 or DS1N-14 cards. If a failure clears, traffic reverts to the working card after the reversion time has elapsed. Refer to the “Card Protection” chapter in the <i>ONS 15454 Reference Manual</i> .
1+1	Any OC-N	Pairs a working OC-N card/port with a protect OC-N card/port. For multiport OC-N cards, the protect port must match the working port on the working card. For example, Port 1 of an OC-3 card can only be protected by Port 1 of another OC-3 card. The ports on multiport cards must be either working or protect. You cannot mix working and protect ports on the same card. Cards do not need to be in adjoining slots. 1+1 protection can be revertive or non-revertive, bidirectional or unidirectional.
Y Cable	MXP_2.5_10G TXP_MR_10G TXP_MR_2.5G	Pairs a working transponder or muxponder card/port with a protect transponder or muxponder card/port. The protect port must be on a different card than the working port and it must be the same card type as the working port. The working and protect port numbers must be the same, that is, Port 1 can only protect Port 1, Port 2 can only protect Port 2, etc.
Splitter	TXPP_MR_2.5G	Splitter protection is automatically provided with the TXPP_MR_2.5G card.
Unprotected	Any	Unprotected cards can cause signal loss if a card fails or incurs a signal error. However, because no card slots are reserved for protection, unprotected schemes maximize the service available for use on the ONS 15454. Unprotected is the default protection type.

Stop. You have completed this procedure.

DLP-A71 Create a 1:1 Protection Group

Purpose	This task creates a 1:1 electrical card protection group. This task does not apply to DWDM (Release 4.5) nodes.
Tools/Equipment	Redundant DS-1, DS-3, EC-1, or DS3XM-6 cards should be installed in the shelf, or the ONS 15454 slots must be provisioned for two of these cards.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Verify that the cards required for 1:1 protection are installed according to requirements specified in Table 4-3.
- Step 2** In node view, click the **Provisioning > Protection** tabs.
- Step 3** Under Protection Groups, click **Create**.
- Step 4** In the Create Protection Group dialog box, enter the following:
- **Name**—Type a name for the protection group. The name can have up to 32 alphanumeric (a-z, A-Z, 0-9) characters. Special characters are permitted. For TL1 compatability, do not use question mark (?), backslash (\), or double quote (") characters.
 - **Type**—Choose **1:1** from the drop-down menu.
 - **Protect Card**—Choose the protect card from the drop-down menu. The menu displays cards available for 1:1 protection. If no cards are available, no cards appear in the list.

After you choose the protect card, the card available for protection appear in the Available Cards list, as shown in Figure 4-7. If no cards are available, no cards appear. If this occurs, you can not complete this task until you install the physical cards or preprovision the ONS 15454 slots using the “NTP-A115 Preprovision a Slot” procedure on page 2-29.

Figure 4-7 Creating a 1:1 Protection Group

The screenshot shows the 'Create Protection Group' dialog box. At the top, the 'Name' field is 'slot 3 (EC1)' and the 'Type' dropdown is '1:1 (card)'. Below that, the 'Protect Card' dropdown is 'slot 3 (EC1)'. There are two list boxes: 'Available Cards' containing 'slot 4 (EC1)' and 'Working Cards' which is empty. Between these lists are '>>' and '<<' buttons. Below the lists, there is a checkbox for 'Bidirectional switching' (unchecked) and a checked checkbox for 'Revertive' with a 'Reversion time (min): 5.0' dropdown. At the bottom are 'OK' and 'Cancel' buttons.

- Step 5** From the Available Cards list, choose the card that will be protected by the card selected in the Protect Card drop-down menu. Click the top arrow button to move each card to the Working Cards list.
- Step 6** Complete the remaining fields:
- Bidirectional switching—Not available for 1:1 protection
 - Revertive—Check this check box if you want traffic to revert to the working card after failure conditions remain corrected for the amount of time entered in the Reversion Time field.
 - Reversion time—If Revertive is checked, choose the reversion time from the drop-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. This is the amount of time that will elapse before the traffic reverts to the working card after conditions causing the switch are cleared.
- Step 7** Click **OK**, then click **Yes** in the confirmation dialog box.
- Step 8** Return to your originating procedure (NTP).
-

DLP-A72 Create a 1:N Protection Group

Purpose	This task creates a DS-1 or DS-3 1:N protection group. This task does not apply to DWDM (Release 4.5) nodes.
Tools/Equipment	DS1N-14, DS3N-12, or DS3N-12E (protect cards) in Slot 3 or Slot 15; DS1-14, DS3-12, or DS3-12E (working cards) installed on either side of a corresponding protect card.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Verify that the cards are installed according to the 1:N requirements specified in Table 4-3 on page 4-26.
- Step 2** Click the **Provisioning > Protection** tabs.
- Step 3** Under Protection Groups, click **Create**.
- Step 4** In the Create Protection Group dialog box, enter the following:
- Name—Type a name for the protection group. The name can have up to 32 alphanumeric (a-z, A-Z, 0-9) characters. Special characters are permitted. For TL1 compatibility, do not use question mark (?), backslash (\), or double quote (") characters.
 - Type—Choose **1:N** from the drop-down menu.
 - Protect Card—Choose the protect card from the drop-down menu. The menu displays DS1N-14, DS3N-12, or DS3N-12E cards installed in Slots 3 or 15. If these cards are not installed, no cards appear in the drop-down menu.

After you choose the protect card, a list of cards available for protection appear in the Available Cards list, as shown in Figure 4-8. If no cards are available, no cards appear. If this occurs, you can not complete this task until you install the physical cards or preprovision the ONS 15454 slots using the “NTP-A115 Preprovision a Slot” procedure on page 2-29.

Figure 4-8 Creating a 1:N Protection Group

- Step 5** From the Available Cards list, choose the cards that will be protected by the card selected in the Protect Card drop-down menu. Click the top arrow button to move each card to the Working Cards list.
- Step 6** Complete the remaining fields:
- Bidirectional switching—Not available for 1:N protection.
 - Revertive—Always enabled for 1:N protection groups.
 - Reversion time—Click **Reversion time** and select a reversion time from the drop-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. This is the amount of time that will elapse before the traffic reverts to the working card after conditions causing the switch are cleared.
- Step 7** Click **OK**, then click **Yes** in the confirmation dialog box.
- Step 8** Return to your originating procedure (NTP).

DLP-A73 Create a 1+1 Protection Group

Purpose	This task creates a 1+1 protection group for any OC-N card/port (OC-3, OC-3-8, OC-12, OC-12-4, OC-48, OC-48 AS, and OC-192). This task does not apply to DWDM (Release 4.5) nodes.
Tools/Equipment	Installed OC-N cards or preprovisioned slots
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Verify that the cards are installed according to 1+1 requirements specified in Table 4-3 on page 4-26.
- Step 2** In node view, click the **Provisioning > Protection** tabs.
- Step 3** In the Protection Groups area, click **Create**.

- Step 4** In the Create Protection Group dialog box, enter the following:
- **Name**—Type a name for the protection group. The name can have up to 32 alphanumeric (a-z, A-Z, 0-9) characters. Special characters are permitted. For TL1 compatibility, do not use question mark (?), backslash (\), or double quote (") characters.
 - **Type**—Choose **1+1** from the drop-down menu.
 - **Protect Port**—Choose the protect port from the pull-down menu. The menu displays the available OC-N ports, as shown in Figure 4-9. If OC-N cards are not installed, no ports appear in the pull-down menu.
 - After you choose the protect port, a list of ports available for protection appear in the Available Ports list, as shown in Figure 4-9. If no cards are available, no ports are displayed. If this occurs, you can not complete this task until you install the physical cards or preprovision the ONS 15454 slots using the “NTP-A115 Preprovision a Slot” procedure on page 2-29.

Figure 4-9 Creating a 1+1 Protection Group

The screenshot shows a dialog box for creating a protection group. At the top, there are two dropdown menus: 'Name' with the value 'pt 13 (OC12), port 1' and 'Type' with the value '1+1 (port)'. Below these is a 'Protect Port' dropdown menu with the value 'slot 13 (OC12), port 1'. The main area is divided into two panes: 'Available Ports' on the left, which contains a list with one item 'slot 16 (OC12), port 1', and 'Working Ports' on the right, which is currently empty. Between the panes are two arrow buttons: '>>' and '<<'. Below the panes are two checkboxes: 'Bidirectional switching' (unchecked) and 'Revertive' (unchecked). To the right of the 'Revertive' checkbox is a 'Reversion time (min):' field with a dropdown menu showing '5.0'. At the bottom of the dialog are 'OK' and 'Cancel' buttons. A small vertical number '70654' is visible on the right side of the dialog box.

- Step 5** From the Available Ports list, choose the port that will be protected by the port you selected in Protect Ports. Click the top arrow button to move each port to the Working Ports list.
- Step 6** Complete the remaining fields:
- **Bidirectional switching**—Check this check box if you want both Tx and Rx signals to switch to the protect port when a failure occurs to one signal. Leave unchecked if you want only the failed signal to switch to the protect port.
 - **Revertive**—Check this check box if you want traffic to revert to the working card after failure conditions remain corrected for the amount of time entered in the Reversion Time field.
 - **Reversion time**—If Revertive is checked, choose a reversion time from the pull-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. Reversion time is the amount of time that will elapse before the traffic reverts to the working card after conditions causing the switch are cleared.
- Step 7** Click **OK**.
- Step 8** Return to your originating procedure (NTP).

DLP-A252 Create a Y-Cable Protection Group


Purpose	This task creates a Y Cable protection group between the client ports of two transponder (TXP_MR_10G or TXP_MR_2.5G) or two muxponder (MXP_2.5G_10G) cards.
Tools/Equipment	Installed transponder or muxponder cards or preprovisioned slots.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note Loss of Pointer Path (LOP-P) alarms can occur on a split signal if the ports are not in a Y-cable protection group.

-
- Step 1** Verify that the transponder or muxponder cards are installed according to Y Cable requirements specified in Table 4-3 on page 4-26.
- Step 2** In node view, click the **Provisioning > Protection** tabs.
- Step 3** In the Protection Groups area, click **Create**.
- Step 4** In the Create Protection Group dialog box, enter the following:
- **Name**—Type a name for the protection group. The name can have up to 32 alphanumeric (a-z, A-Z, 0-9) characters. Special characters are permitted. For TL1 compatability, do not use question mark (?), backslash (\), or double quote (") characters.
 - **Type**—Choose **Y Cable** from the pull-down menu.
 - **Protect Port**—Choose the protect port from the pull-down menu. The menu displays the available transponder or muxponder ports, as shown in Figure 4-9. If transponder or muxponder cards are not installed, no ports appear in the pull-down menu.
 - After you choose the protect port, a list of ports available for protection appear in the Available Ports list, as shown in Figure 4-10. If no cards are available, no ports appear. If this occurs, you can not complete this task until you install the physical cards or preprovision the ONS 15454 slots using the “NTP-A115 Preprovision a Slot” procedure on page 2-29.

Figure 4-10 Creating a Y Cable Protection Group

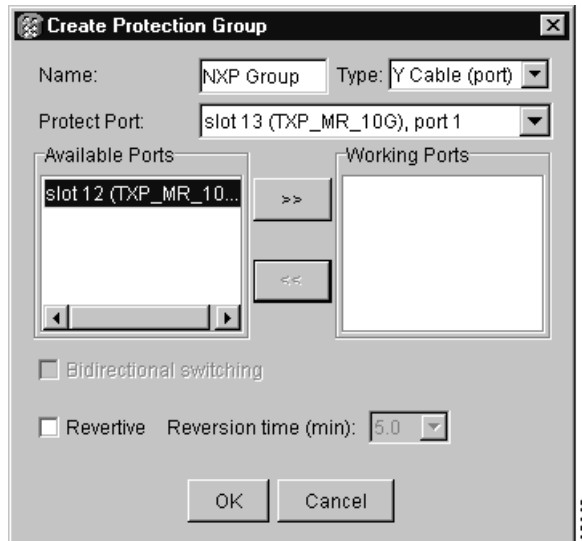

- Step 5** From the Available Ports list, choose the port that will be protected by the port you selected in Protect Ports. Click the top arrow button to move each port to the Working Ports list.
- Step 6** Complete the remaining fields:
- **Revertive**—Check this check box if you want traffic to revert to the working port after failure conditions remain corrected for the amount of time entered in the Reversion Time field.
 - **Reversion time**—If Revertive is checked, select a reversion time from the drop-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. Reversion time is the amount of time that will elapse before the traffic reverts to the working card. Traffic can revert when conditions causing the switch are cleared.
- Step 7** Click **OK**.
- Step 8** Return to your originating procedure (NTP).

NTP-A171 Set Up SNMP

Purpose	This procedure provisions the SNMP parameters so that you can use SNMP management software with the ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	Required if SNMP is used at your installation.
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to set up SNMP. If you are already logged in, continue with the next step.
- Step 2** In node view, click the **Provisioning > SNMP** tabs.

Step 3 If you want the SNMP agent to accept SNMP SET requests on certain MIBs, click the **Allow SNMP Sets** check box. If this box is not checked, SET requests are rejected.

Step 4 Click **Create**.

Step 5 In the SNMP Traps Destination dialog box (Figure 4-11), complete the following:

- **IP Address**—Type the IP address of your network management system. If the node you are logged into is an ENE, set the destination address to the GNE.
- **Community Name**—Type the SNMP community name. For a description of SNMP community names, refer to the SNMP information in the *Cisco ONS 15454 Reference Manual*.



Note The community name is a form of authentication and access control. The community name assigned to the ONS 15454 is case-sensitive and must match the community name of the NMS.

- **UDP Port**—The default UDP port for SNMP is 162. If the node is an ENE in a proxy server network, the UDP port must be set to the GNE's SNMP relay port which is 391.
- **Trap Version**—Choose either SNMPv1 or SNMPv2. Refer to your NMS documentation to determine whether to use SNMP v1 or v2.
- **Max Traps per Second**—Type the maximum traps per second. The default is 0.



Note The Max Traps per Second is the maximum number of traps per second that will be sent to the SNMP manager. If the field is set to 0, there is no maximum and all traps are sent.

Figure 4-11 Setting SNMP

Step 6 Click **OK**. The node IP address of the node where you provisioned the new trap destination appears in the Trap Destinations area.

Step 7 Click the node IP address in the Trap Destinations area. Verify the SNMP information that displays in the Selected Destination list.

Stop. You have completed this procedure.

NTP-A34 Create Ethernet RMON Alarm Thresholds

Purpose	This procedure sets up remote monitoring (RMON) to allow network management systems to monitor Ethernet ports. This procedure does not apply to DWDM (Release 4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note The ONS 15454 ML-Series card uses the Cisco IOS CLI for managing RMON.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to set up RMON. If you are already logged in, continue with Step 2.
- Step 2** Click the **Provisioning > Ether Bridge > Thresholds** tabs.
- Step 3** Click **Create**.
- The Create Ether Threshold dialog box opens (Figure 4-12).

Figure 4-12 Creating RMON Thresholds

- Step 4** From the Slot menu, choose the appropriate Ethernet card.
- Step 5** From the Port pull-down menu, choose the applicable port on the Ethernet card you selected.
- Step 6** From the Variable pull-down menu, choose the variable. See Table 4-4 for a list of the Ethernet threshold variables available in this field.
- Step 7** From the Alarm Type pull-down menu, indicate whether the event will be triggered by the rising threshold, falling threshold, or both the rising and falling thresholds.

- Step 8** From the Sample Type pull-down menu, choose either **Relative** or **Absolute**. Relative restricts the threshold to use the number of occurrences in the user-set sample period. Absolute sets the threshold to use the total number of occurrences, regardless of time period.
- Step 9** Type in an appropriate number of seconds for the Sample Period.
- Step 10** Type in the appropriate number of occurrences for the Rising Threshold.



Note For a rising type of alarm, the measured value must move from below the falling threshold to above the rising threshold. For example, if a network is running below a falling threshold of 400 collisions every 15 seconds and a problem causes 1001 collisions in 15 seconds, the excess occurrences trigger an alarm.

- Step 11** Enter the appropriate number of occurrences in the Falling Threshold field. In most cases a falling threshold is set lower than the rising threshold.

A falling threshold is the counterpart to a rising threshold. When the number of occurrences is above the rising threshold and then drops below a falling threshold, it resets the rising threshold. For example, when the network problem that caused 1001 collisions in 15 minutes subsides and creates only 799 collisions in 15 minutes, occurrences fall below a falling threshold of 800 collisions. This resets the rising threshold so that if network collisions again spike over a 1000 per 15 minute period, an event again triggers when the rising threshold is crossed. An event is triggered only the first time a rising threshold is exceeded (otherwise a single network problem might cause a rising threshold to be exceeded multiple times and cause a flood of events).

- Step 12** Click **OK** to complete the procedure.

Table 4-4 Ethernet Threshold Variables (MIBs)

Variable	Definition
ifInOctets	Total number of octets received on the interface, including framing octets
ifInUcastPkts	Total number of unicast packets delivered to an appropriate protocol
ifInMulticastPkts	Number of multicast frames received error free
ifInBroadcastPkts	The number of packets, delivered by this sub-layer to a higher (sub-)layer, which were addressed to a broadcast address at this sub-layer
ifInDiscards	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol
ifInErrors	Number of inbound packets discarded because they contain errors
ifOutOctets	Total number of transmitted octets, including framing packets
ifOutUcastPkts	Total number of unicast packets requested to transmit to a single address
ifOutMulticastPkts	Number of multicast frames transmitted error free
ifOutBroadcastPkts	The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a broadcast address at this sub-layer, including those that were discarded or not sent

Table 4-4 Ethernet Threshold Variables (MIBs) (continued)

Variable	Definition
ifOutDiscards	The number of outbound packets that were chosen to be discarded even though no errors had been detected to prevent their being transmitted
dot3statsAlignmentErrors	Number of frames with an alignment error, i.e., the length is not an integral number of octets and the frame cannot pass the Frame Check Sequence (FCS) test
dot3StatsFCSErrors	Number of frames with framecheck errors, i.e., there is an integral number of octets, but an incorrect Frame Check Sequence (FCS)
dot3StatsSingleCollisionFrames	Number of successfully transmitted frames that had exactly one collision
dot3StatsMutlipleCollisionFrame	Number of successfully transmitted frames that had multiple collisions
dot3StatsDeferredTransmissions	Number of times the first transmission was delayed because the medium was busy
dot3StatsLateCollision	Number of times that a collision was detected later than 64 octets into the transmission (also added into collision count)
dot3StatsExcessiveCollision	Number of frames where transmissions failed because of excessive collisions
dot3StatsCarrierSenseErrors	The number of transmission errors on a particular interface that are not otherwise counted
dot3StatsSQETestErrors	A count of times that the SQE TEST ERROR message is generated by the PLS sublayer for a particular interface
etherStatsJabbers	Total number of Octets of data (including bad packets) received on the network
etherStatsUndersizePkts	Number of packets received with a length less than 64 octets
etherStatsFragments	Total number of packets that are not an integral number of octets or have a bad FCS, and that are less than 64 octets long
etherStatsPkts64Octets	Total number of packets received (including error packets) that were 64 octets in length
etherStatsPkts65to127Octets	Total number of packets received (including error packets) that were 65 – 172 octets in length
etherStatsPkts128to255Octets	Total number of packets received (including error packets) that were 128 – 255 octets in length
etherStatsPkts256to511Octets	Total number of packets received (including error packets) that were 256 – 511 octets in length
etherStatsPkts512to1023Octets	Total number of packets received (including error packets) that were 512 – 1023 octets in length
etherStatsPkts1024to1518Octets	Total number of packets received (including error packets) that were 1024 – 1518 octets in length
etherStatsJabbers	Total number of packets longer than 1518 octets that were not an integral number of octets or had a bad FCS

Table 4-4 Ethernet Threshold Variables (MIBs) (continued)

Variable	Definition
etherStatsCollisions	Best estimate of the total number of collisions on this segment
etherStatsCollisionFrames	Best estimate of the total number of frame collisions on this segment
etherStatsCRCAlignErrors	Total number of packets with a length between 64 and 1518 octets, inclusive, that had a bad FCS or were not an integral number of octets in length
receivePauseFrames (G series only)	The number of received 802.x pause frames
transmitPauseFrames (G series only)	The number of transmitted 802.x pause frames
receivePktsDroppedInternalCongestion (G series only)	The number of received framed dropped due to frame buffer overflow as well as other reasons
transmitPktsDroppedInternalCongestion (G series only)	The number of frames dropped in the transmit direction due to frame buffer overflow as well as other reasons
txTotalPkts	Total number of transmit packets
rxTotalPkts	Total number of receive packets

Stop. You have completed this procedure.



Turn Up a DWDM Node

This chapter explains how to provision a single Cisco ONS 15454 dense wavelength division multiplexing (DWDM) node and turn it up for service, including node name, date and time, timing references, network attributes such as IP address and default router, users and user security, and DWDM parameters.



Note

The procedures and tasks in this chapter apply to DWDM (Software Release 4.5) nodes only.



Note

To provision an ONS 15454 for DWDM, you must have a DWDM network planning application, such as Cisco MetroPlanner. Cisco MetroPlanner designs the entire network based on your traffic flow and physical topology. The design includes an ONS 15454 shelf plan listing the DWDM cards that need to be installed for each node in the DWDM network. MetroPlanner provides a configuration file that you can import into the node to set its power and attenuation levels automatically. For information about Cisco MetroPlanner, contact your Cisco account representative.

Before You Begin

Complete the following procedures and tasks before you begin DWDM node turn up:

- In Chapter 1, “Install the Shelf and Backplane Cable,” complete all procedures.
- In Chapter 2, “Install Cards and Fiber-Optic Cable,” complete the “DLP-A36 Install the TCC+/TCC2 Cards” task on page 2-7.
- In Chapter 3, “Connect the PC and Log into the GUI,” complete all procedures.
- In Chapter 4, “Turn Up Node,” complete all procedures.

This section lists the procedures (NTPs) that you need to complete to turn up a DWDM node. Turn to a procedure for applicable tasks (DLPs).

1. NTP-A221 Verify TCC2 Installation, page 5-2—Complete this procedure first.
2. Using your DWDM shelf layout plan, complete the following procedures:
 - NTP-A242 Install the DWDM Cards, page 2-23
 - NTP-A243 Install the DWDM Dispersion Compensating Cards, page 2-25, as needed
 - NTP-A244 Install Fiber-Optic Cables on DWDM Cards, page 2-42
3. NTP-A222 Provision the DWDM Node, page 5-3—Complete this procedure last.

NTP-A221 Verify TCC2 Installation

Purpose	This procedure verifies that the ONS 15454 node has TCC2 cards installed and is ready for DWDM provisioning.
Tools/Equipment	None
Prerequisite Procedures	Chapter 1, “Install the Shelf and Backplane Cable” Chapter 2, “Install Cards and Fiber-Optic Cable”
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Retrieve or higher

Step 1 Verify that two TCC2 cards are installed in Slots 7 and 11.

Step 2 Verify that the green ACT (active) LED is illuminated on one TCC2 and the amber STBY (standby) LED is illuminated on the second TCC2.



Note If the TCC2s are not installed, or their LEDs are not illuminated as described, do not proceed. Repeat the “DLP-A36 Install the TCC+/TCC2 Cards” task on page 2-7, or refer to the *Cisco ONS 15454 Troubleshooting Guide* to resolve installation problems before proceeding to the next procedure.

Step 3 Verify that the software release shown on the LCD matches the software release indicated in your site plan. If the release does not match, perform one of the following procedures:

- Perform a software upgrade using a Cisco ONS 15454 software CD. Refer to the *Cisco ONS 15454 Software Upgrade Guide* for instructions.
- Replace the TCC+/TCC2 cards with cards containing the correct release. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for replacement procedures.

Stop. You have completed this procedure.

NTP-A222 Provision the DWDM Node

Purpose	This procedure sets the network and system settings and provisions the node power levels.
Tools/Equipment	None
Prerequisite Procedures	You must use Cisco MetroPlanner or other DWDM network calculation tool to prepare a configuration file for your network. NTP-A221 Verify TCC2 Installation, page 5-2
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the DWDM node you want to provision.
- Step 2** Click the **Connections** tab, then click the **Calculate Connections** button.
- Step 3** Verify that every connection matches the connections specified by your DWDM design plan. If a connection is not correct:
- a. Delete the connection. See the “DLP-A405 Delete a DWDM Connection” task on page 5-11.
 - b. Uninstall the fibers from the incorrect slot/card/port.
 - c. Connect the fiber to the correct slot/card/port.
- Step 4** Perform one of the following tasks:
- If you have a Cisco MetroPlanner configuration file, complete the “DLP-A400 Import a Cisco MetroPlanner Configuration File” task on page 5-4.
 - If you need to provision the node manually, complete one of the following tasks as appropriate:
 - DLP-A401 Provision DWDM Hub Node Settings, page 5-4.
 - DLP-A402 Provision DWDM Terminal Node Settings, page 5-6.
 - DLP-A403 Provision DWDM OADM Node Settings, page 5-7.
 - DLP-A404 Provision DWDM Line Node Settings, page 5-10.
 - d. Create a new connection. See the “DLP-A406 Create a DWDM Connection” task on page 5-11.
- Step 5** Click the **Services** tab. Click **Launch ANS**. Automatic Node Setup (ANS) adjusts the values of the variable optical attenuators (VOAs) to equalize the per-channel power at the amplifier level.
- Step 6** Complete the “DLP-A407 Verify OSCM and OSC-CSM Transmit Power” task on page 5-12.
- Stop. You have completed this procedure.**
-

DLP-A400 Import a Cisco MetroPlanner Configuration File

Purpose	This task imports a Cisco MetroPlanner configuration file into the node to configure the node automatically.
Tools/Equipment	None
Prerequisite Procedures	A Cisco MetroPlanner network configuration file must be located on an available local or network drive. DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

-
- Step 1** In node view, click the **Provisioning > WDS-ANS > NE Update** tabs.
- Step 2** Click the **Import** button.
- Step 3** In the Import Defaults From File dialog box, enter the path to the configuration file, or click **Browse** and navigate to the configuration file using the Open dialog box.
- Step 4** Click **OK**.
- Step 5** Click the **Apply** button.
- Step 6** Return to your originating procedure (NTP).
-

DLP-A401 Provision DWDM Hub Node Settings

Purpose	This task provisions the network types, system types, network power levels, and channel power levels for a DWDM hub node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

-
- Step 1** In node view, click the **Provisioning > WDS-ANS > Provisioning** tabs.
- Step 2** Complete the fields shown in Table 5-1. In the table, the West Side of the node is the one equipped with cards that receive from the west and transmit to the east. The East Side of the node is the one equipped with cards that receive from the east and transmit to the west.

Table 5-1 DWDM Hub Node Settings

Parameter	Description	Default Value	Options
Network type	Defines the DWDM network type	Metro-Core	Metro-Core—Channels are equalized Metro-Access—Channels are not equalized to minimize the number of amplifiers in the ring
West Side			
System Type	Defines the west-side DWDM fiber type, number of channels, and control mode. Table 5-2 shows the per-channel power and control mode for each system type.	SMF-28 32 Ch Control Gain	SMF-28 32 Ch Control Gain SMF-28 32 Ch Control Power SMF-28 8 Ch Control Power SMF-28 16 Ch Control Power
Pdrop	Sets the west-side expected power level on the client interface.	-14 dBm	-50 dBm to 30 dBm
Pexpress	Sets the west-side expected per-channel power on the pass-through interface.	-12 dBm	-50 dBm to 30 dBm
Pout-mux Stage	Sets the per-channel power out at the multiplexing stage.	-18 dBm	-50 dBm to 30 dBm
East Side			
System Type	Defines the east-side DWDM fiber type, number of channels, and control mode. Table 5-2 shows the per-channel power and control mode for each system type.	SMF-28 32 Ch Control Gain	SMF-28 32 Ch Control Gain SMF-28 32 Ch Control Power SMF-28 8 Ch Control Power SMF-28 16 Ch Control Power
Pdrop	Sets the east-side expected power level on the client interface.	-14 dBm	-50 dBm to 30 dBm
Pexpress	Sets the east-side expected per-channel power on the pass-through interface.	-12 dBm	-50 dBm to 30 dBm
Pout-mux Stage	Sets the per-channel power out at the multiplexing stage.	-18 dBm	-50 dBm to 30 dBm

Table 5-2 shows the system types that can be assigned to the node.

Table 5-2 DWDM System Types

System Type	Per-Channel Power	Control Mode
SMF-28 32 Ch Control Gain	2 dBm	Control gain
SMF-28 32 Ch Control Power	2 dBm	Control power
SMF-28 8 Ch Control Power	8 dBm	Control power
SMF-28 16 Ch Control Power	5 dBm	Control power

- Step 3** Click **Apply**.
- Step 4** Return to your originating procedure.

DLP-A402 Provision DWDM Terminal Node Settings

Purpose	This task provisions the network types, system types, network power levels, and channel power levels for a DWDM terminal node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** In node view, click the **Provisioning > WDS-ANS > Provisioning** tabs.
- Step 2** Complete the fields shown in Table 5-3. In the table, the West Side of the node is the one equipped with cards that receive from the west and transmit to the east. The East Side of the node is the one equipped with cards that receive from the east and transmit to the west. The fields that you provision depend on the terminal node type. You will provision West parameters on an East terminal node, and East parameters on a West terminal node.

Table 5-3 DWDM Terminal Node Settings

Parameter	Description	Default Value	Options
Network type	Defines the DWDM network type.	Metro-Core	Metro-Core—Channels are equalized. Metro-Access—Channels are not equalized to minimize the number of amplifiers in the ring.
West Side			
System Type	Defines the west-side DWDM system type (fiber type, number of channels, control mode). Table 5-2 on page 5-5 shows the per-channel power and control mode for each system type.	SMF-28 32 Ch Control Gain	SMF-28 32 Ch Control Gain SMF-28 32 Ch Control Power SMF-28 8 Ch Control Power SMF-28 16 Ch Control Power
Pdrop	Sets the west-side expected power level on the client interface.	-14 dBm/	-50 dBm to 30 dBm
Pout-mux Stage	Sets the west-side per-channel power out at the multiplexing stage.	-18 dBm/	-50 dBm to 30 dBm
East Side			

Table 5-3 DWDM Terminal Node Settings (continued)

Parameter	Description	Default Value	Options
System Type	Defines the east-side DWDM system type (fiber type, number of channels, control mode). Table 5-2 on page 5-5 shows the per-channel power and control mode for each system type.	SMF-28 32 Ch Control Gain	SMF-28 32 Ch Control Gain SMF-28 32 Ch Control Power SMF-28 8 Ch Control Power SMF-28 16 Ch Control Power
Pdrop	Sets the east-side expected power level on the client interface.	-14 dBm	-50 dBm to 30 dBm
Pout-mux Stage	Sets the east-side per-channel power out at the multiplexing stage.	-18 dBm	-50 dBm to 30 dBm

Step 3 Click **Apply**.

Step 4 Return to your originating procedure.

DLP-A403 Provision DWDM OADM Node Settings

Purpose	This task provisions the network types, system types, network power levels, and channel power levels for a DWDM add/drop multiplexing node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

Step 1 In node view, click the **Provisioning > WDS-ANS > Provisioning** tabs.

Step 2 Complete the fields shown in Table 5-4. In the table, the West Side of the node is the one equipped with cards that receive from the west and transmit to the east. The East Side of the node is the one equipped with cards that receive from the east and transmit to the west.

Table 5-4 DWDM OADM Node Settings

Parameter	Description	Default Value	Options
Network type	Defines the DWDM network type.	Metro-Core	Metro-Core—Channels are equalized. Metro-Access—Channels are not equalized to minimize the number of amplifiers in the ring.
West Side			

Table 5-4 DWDM OADM Node Settings (continued)

Parameter	Description	Default Value	Options
System Type	Defines the west-side DWDM system type. Table 5-2 on page 5-5 shows the per-channel power and control mode for each system type.	SMF-28 32 Ch Control Gain	SMF-28 32 Ch Control Gain SMF-28 32 Ch Control Power SMF-28 8 Ch Control Power SMF-28 16 Ch Control Power
Pout-oadm Stage	Sets the west-side per-channel power out at the OADM stage.	+2 dBm	-50 dBm to 30 dBm
Pin-oadm Stage	Sets the west-side per-channel input power at the OADM stage.	-14 dBm	-50 dBm to 30 dBm
Pout Band [nn.n]	Sets the west-side per-band power for a specific drop band, where <i>nn.n</i> is the channel ID. Up to 8 bands might appear, 30.3, 34.2, 38.1, 42.1, 46.1, 50.1, 54.1, and 58.1, depending on the optical filter cards that are installed in the node.	-14 dBm	-50 dBm to 30 dBm
East Side			
System Type	Defines the east-side DWDM system type. Table 5-2 on page 5-5 shows the per-channel power and control mode for each system type.	SMF-28 32 Ch Control Gain	SMF-28 32 Ch Control Gain SMF-28 32 Ch Control Power SMF-28 8 Ch Control Power SMF-28 16 Ch Control Power
Pout-oadm Stage	Sets the east-side per-channel power out from the OADM stage.	+2 dBm	-50 dBm to 30 dBm
Pin-oadm Stage	Sets the east-side per-channel input power from the OADM stage.	-14 dBm	-50 dBm to 30 dBm
Pout Band [nn.n]	Sets the east-side per-band power for a specific drop band, where <i>nn.n</i> is the channel ID. Up to 8 bands might appear, 30.3, 34.2, 38.1, 42.1, 46.1, 50.1, 54.1, and 58.1, depending on the optical filter cards that are installed in the node.	-14 dBm	-50 dBm to 30 dBm

Table 5-5 on page 5-8 shows the OADM channels.

Table 5-5 OADM Channels

Channel No.	Channel ID	Frequency (GHz)	Wavelength (nm)
1	30.3	195.9	1530.33
2	31.2	195.8	1531.12
3	31.9	195.7	1531.90
4	32.6	195.6	1532.68
5	34.2	195.4	1534.25

Table 5-5 OADM Channels (continued)

Channel No.	Channel ID	Frequency (GHz)	Wavelength (nm)
6	35.0	195.3	1535.04
7	35.8	195.2	1535.82
8	36.6	195.1	1536.61
9	38.1	194.9	1538.19
10	38.9	194.8	1538.98
11	39.7	194.7	1539.77
12	40.5	194.6	1540.56
13	42.1	194.4	1542.14
14	42.9	194.3	1542.94
15	43.7	194.2	1543.73
16	44.5	194.1	1544.53
17	46.1	193.9	1546.12
18	46.9	193.8	1546.92
19	47.7	193.7	1547.72
20	48.5	193.6	1548.51
21	50.1	193.4	1550.12
22	50.9	193.3	1550.92
23	51.7	193.2	1551.72
24	52.5	193.1	1552.52
25	54.1	192.9	1554.13
26	54.9	192.8	1544.94
27	55.7	192.7	1555.75
28	56.5	192.6	1556.55
29	58.1	192.4	1558.17
30	58.9	192.3	1558.98
31	59.7	192.2	1559.79
32	60.6	192.1	1560.61

Step 3 Click **Apply**.

Step 4 Return to your originating procedure.

DLP-A404 Provision DWDM Line Node Settings

Purpose	This task provisions the network and system types for DWDM line node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

Step 1 In node view, click the **Provisioning > WDS-ANS > Provisioning** tabs.

Step 2 Complete the fields shown in Table 5-6. In the table, the West Side of the node is the one equipped with cards that receive from the west and transmit to the east. The East Side of the node is the one equipped with cards that receive from the east and transmit to the west.

Table 5-6 DWDM Line Node Settings

Parameter	Description	Options
Network type	Defines the DWDM network type.	Metro-Core—Channels are equalized. Metro-Access—Channels are not equalized to minimize the number of amplifiers in the ring.
West Side		
System Type	Defines the west-side DWDM system type. Table 5-2 on page 5-5 shows the per-channel power and control mode for each system type.	SMF-28 32 Ch Control Gain SMF-28 32 Ch Control Power SMF-28 8 Ch Control Power SMF-28 16 Ch Control Power
East Side		
System Type	Defines the east-side DWDM system type. Table 5-2 on page 5-5 shows the per-channel power and control mode for each system type.	SMF-28 32 Ch Control Gain SMF-28 32 Ch Control Power SMF-28 8 Ch Control Power SMF-28 16 Ch Control Power

Step 3 Click **Apply**.

Step 4 Return to your originating procedure.

DLP-A405 Delete a DWDM Connection

Purpose	This task deletes a DWDM connection.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** In node view, click the **Provisioning > WDS-ANS > Connection** tabs.
- Step 2** Click the connection you want to delete.
- Step 3** Click **Delete**.
- Step 4** Return to your originating procedure.
-

DLP-A406 Create a DWDM Connection

Purpose	This task creates a DWDM connection.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** In node view, click the **Provisioning > WDS-ANS > Connections** tabs.
- Step 2** Click the **Create** button.
- Step 3** In the Create Optical Link dialog box, choose the From and To slots and ports from the drop-down menus.
- Step 4** If the connection is unidirectional, uncheck the bidirectional check box.
- Step 5** Click **OK**.
- Step 6** Return to your originating procedure (NTP).
-

DLP-A407 Verify OSCM and OSC-CSM Transmit Power

Purpose	This task verifies the transmit power of the ONS 15454 Optical Service Channel Module (OSCM) and the Optical Service Channel + Combiner Separator Module (OSC-CSM).
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

-
- Step 1** In the node view shelf graphic, double-click the OSCM or OSC-CSM card in Slot 8.
- Step 2** Click the **Maintenance** tab.
- Step 3** From the ALS Command drop-down menu, choose **Manual Start**.
- Step 4** Click the **Provisioning > Optical Line** tabs.
- Step 5** For the TX (transmit) port entry, verify that the value in the Power column falls within the following ranges:
- For OSCM cards installed on nodes set to Control Gain, the power should be -5dBm .
 - For OSC-CSM card installed on nodes set to Control Gain, the power should be a minimum of -6 dBm on OADM nodes.
 - For OSC-CSM cards installed on nodes configured as a passive or active OADM nodes, the power level depends on the Pout OADM Stage power level on the WDM-ANS > Provisioning tab:
 - If the Pout OADM Stage value is less than $-6.5\text{ dBm} \pm 0.5\text{ dBm}$, the OSC-CSM power should be equal to that power.
 - If the Pout OADM Stage value is greater than $-6.5\text{ dBm} \pm 0.5\text{ dBm}$, the OSC-CSM power should be $-6.5\text{ dBm} \pm 0.5\text{ dBm}$.
- Step 6** If the OSCM or OSC-CSM power levels are not within the ranges specified in Step 5, complete the following steps:
- a. Click the **Maintenance > ALS** tabs. Verify that the ALS Command is set to OSRI off.
 - b. In the ALS Command area, choose **Manual Restart** and click **Apply**.
 - c. Clean the optical connections. See the “NTP-A112 Clean Fiber Connectors” procedure on page 17-21.
 - d. Verify the optical connections inside the unit (need to verify this procedure).
 - e. Relaunch ANS
- Step 7** Return to your originating procedure (NTP).
-



Turn Up Network



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This chapter explains how to turn up and test Cisco ONS 15454 networks, including point-to-point networks, linear add-drop multiplexers (ADMs), path protection configurations, and bidirectional line switched rings (BLSRs).



Note

The procedures and tasks in this chapter do not apply to DWDM (Software Release 4.5) nodes.

Before You Begin

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A35 Verify Node Turn Up, page 6-2—Complete this procedure before beginning network turn up.
2. NTP-A172 Create a Logical Network Map, page 6-3—Complete as needed.
3. NTP-A124 Provision a Point-to-Point Network, page 6-4—Complete as needed.
4. NTP-A173 Point-to-Point Network Acceptance Test, page 6-7—Complete this procedure after you provision a point-to-point network.
5. NTP-A38 Provision a Linear ADM Network, page 6-12—Complete as needed.
6. NTP-A174 Linear ADM Network Acceptance Test, page 6-13—Complete this procedure after you provision a linear ADM.
7. NTP-A40 Provision BLSR Nodes, page 6-15—Complete this procedure to provision ONS 15454s in a two-fiber or four-fiber BLSR.
8. NTP-A126 Create a BLSR, page 6-17—Complete this procedure after you provision the BLSR nodes.
9. NTP-A175 Two-Fiber BLSR Acceptance Test, page 6-21—Complete this procedure after you provision a two-fiber BLSR.

10. NTP-A176 Four-Fiber BLSR Acceptance Test, page 6-28—Complete this procedure after you provision a four-fiber BLSR.
11. NTP-A44 Provision Path Protection Nodes, page 6-34—Complete as needed.
12. NTP-A177 Path Protection Acceptance Test, page 6-35—Complete this procedure after you provision a path protection.
13. NTP-A216 Provision a Traditional Path Protection Dual Ring Interconnect, page 6-38—As needed, complete this procedure after you provision a path protection.
14. NTP-A217 Provision an Integrated Path Protection Dual Ring Interconnect, page 6-40—As needed, complete this procedure after you provision a path protection.
15. NTP-A224 Provision an Open-Ended Path Protection, page 6-42—As needed, complete this procedure after you provision an open-ended path protection.
16. NTP-A225 Open-Ended Path Protection Acceptance Test, page 6-44—As needed, complete this procedure after you provision an open-ended path protection.
17. NTP-A46 Subtend a Path Protection from a BLSR, page 6-46—Complete as needed.
18. NTP-A47 Subtend a BLSR from a Path Protection, page 6-48—Complete as needed.
19. NTP-A48 Subtend a BLSR from a BLSR, page 6-48—Complete as needed.

NTP-A35 Verify Node Turn Up

Purpose	This procedure verifies that each ONS 15454 is ready for network turn up before adding nodes to a network.
Tools/Equipment	None
Prerequisite Procedures	Chapter 4, “Turn Up Node”
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 on the network you will test. If you are already logged in, proceed to Step 2.
- Step 2** Click the **Alarms** tab.
- a. Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - b. Verify that no unexplained alarms appear on the network. If alarms appear, investigate and resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for procedures.
- Step 3** Verify that the SW Version and Defaults shown in the node view status area match the software version and NE defaults shown in your site plan. If either are not correct, complete the following procedures as needed:
- If the software is not the correct version, install the correct version from the ONS 15454 software CD. Upgrade procedures are located on the CD. Follow the upgrade procedures appropriate to the software currently installed on the node.
 - If the node defaults are not correct, import the network element defaults. Refer to the *Cisco ONS 15454 SDH Network Element Defaults* for Software R4.1 or Software R4.5

- Step 4** Click the **Provisioning > General** tabs. Verify that all general node information settings match the settings of your site plan. If not, see the “NTP-A81 Change Node Management Information” procedure on page 12-2.
- Step 5** Click the **Provisioning > Timing** tabs. Verify that timing settings match the settings of your site plan. If not, see the “NTP-A85 Change Node Timing” procedure on page 12-23.
- Step 6** Click the **Provisioning > Network** tabs. Ensure that the IP settings and other CTC network access information is correct. If not, see the “NTP-A201 Change CTC Network Access” procedure on page 12-4.
- Step 7** Click the **Provisioning > Protection** tabs. Verify that all protection groups have been created according to your site plan. If not, see the “NTP-A203 Modify or Delete Card Protection Settings” procedure on page 12-16.
- Step 8** Click the **Provisioning > Security** tabs. Verify that all users have been created and their security levels match the settings indicated by your site plan. If not, see the “NTP-A205 Modify Users and Change Security” procedure on page 12-26.
- Step 9** If SNMP is provisioned on the node, click the **Provisioning > SNMP** tabs. Verify that all SNMP settings match the settings of your site plan. If not, see the “NTP-A87 Change SNMP Settings” procedure on page 12-32.
- Step 10** Provision the network using the applicable procedure shown in the “Before You Begin” section on page 6-1.
- Stop. You have completed this procedure.**
-

NTP-A172 Create a Logical Network Map

Purpose	This procedure positions nodes in the network view and allows a Superuser to create a consistent network view for all nodes on the network.
Tools	None
Prerequisite Procedures	NTP-A35 Verify Node Turn Up, page 6-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 on an ONS 15454 on the network where you want to create the network map. If you are already logged in, continue with Step 2.
- Step 2** From the View menu, choose **Go to Network View**.
- Step 3** Change the position of the nodes in the network view according to your site plan.
- Press the **Ctrl** key while you drag and drop a node icon to a new location.
 - Deselect the previously selected node.
 - Repeat Step a for each node you need to position.
- Step 4** On the network view map, right-click and choose **Save Node Position**.

- Step 5** Click **Yes** in the Save Node Position dialog box.
CTC displays a progress bar and saves the new node positions.



Note Retrieve, Provisioning, and Maintenance users can move nodes on the network map, but only Superusers can save new network map configurations. To restore the view to a previously saved version of the network map, right-click on the network view map and choose Reset Node Position.

Stop. You have completed this procedure.

NTP-A124 Provision a Point-to-Point Network

Purpose	This procedure provisions two ONS 15454s in a point-to-point (terminal) network.
Tools/Equipment	None
Prerequisite Procedures	NTP-A35 Verify Node Turn Up, page 6-2
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 on an ONS 15454 in the network where you want to provision a point-to-point configuration.
- Step 2** Click the **Provisioning > Protection** tabs. Verify that 1+1 protection is created for the OC-N cards. Complete the “DLP-A73 Create a 1+1 Protection Group” task on page 4-29 if protection has not been created.
- Step 3** Repeat Steps 1 and 2 for the second point-to-point node.
- Step 4** Verify that the working and protect cards in the 1+1 protection groups correspond to the physical fiber connections between the nodes, that is, verify that the working card in one node connects to the working card in the other node, and that the protect card in one node connects to the protect card in the other node.
- Step 5** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 for the working OC-N port on both point-to-point nodes.



Note DCC terminations are not provisioned on the protect ports.



Note If the point-to-point nodes are not connected to a LAN, you will need to create the DCC terminations using a direct (craft) connection to the node. Remote provisioning is possible only after all nodes in the network have DCC terminations provisioned to in-service OC-N ports.

- Step 6** Complete the “DLP-A214 Change the Service State for a Port” procedure on page 6-6 to place the protect card in-service.

- Step 7** Verify that timing is set up at both point-to-point nodes. If not, complete the “NTP-A28 Set Up Timing” procedure on page 4-21 for one or both of the nodes. If a node uses line timing, make its working OC-N the timing source. The system will automatically choose the corresponding protect OC-N card as the protect timing source. This will be visible in the Maintenance > Timing tab.
- Step 8** Complete the “NTP-A173 Point-to-Point Network Acceptance Test” procedure on page 6-7.

Stop. You have completed this procedure.

DLP-A253 Provision SONET DCC Terminations

Purpose	This task creates the SONET Data Communications Channel terminations required for alarms, administration data, signal control information and messages.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, click the **Provisioning > DCC/GCC** tabs.



Note The tab is labeled DCC/GCC in Software R4.1 and DCC/GCC/OSC in Software R4.5.

- Step 2** Click **Create**.

- Step 3** In the Create SDCC Terminations dialog box click the ports where you want to create the DCC termination. To select more than one port, press the Shift key or the Ctrl key.



Note SDCC refers to the Section DCC, which is used for ONS 15454 DCC terminations. The SONET Line DCCs and the Section DCC (when not used as a DCC termination by the ONS 15454) can be provisioned as DCC tunnels. See the “DLP-A313 Create a DCC Tunnel” procedure on page 8-93.

- Step 4** In the Port State area, click the **Set to IS** radio button.

- Step 5** Verify that the Disable OSPF on DCC Link check box is unchecked.

- Step 6** Click **OK**.



Note EOC (DCC Termination Failure) and LOS (Loss of Signal) alarms appear until you create all network DCC terminations and put the DCC termination OC-N ports in service.

- Step 7** Return to your originating procedure (NTP).
-

DLP-A214 Change the Service State for a Port

Purpose	This task puts a port in service or removes a port from service.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

To provision Ethernet ports, see the “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78 or the “DLP-A222 Provision G-Series Ethernet Ports” task on page 8-86.

-
- Step 1** In node view on the shelf graphic, double-click the card with the port(s) you want to put in or out of service. The card view appears.
- Step 2** Click the **Provisioning > Line** tabs.
- Step 3** In the State area, choose one of the following:
- **IS**—The port is in-service.
 - **OOS**—The port is out-of-service. Traffic is not passed on the port until the service state is changed to IS, OOS_MT, or OOS_AINS.
 - **OOS_MT**—The port is in a maintenance state. The maintenance state does not interrupt traffic flow, alarm reporting is suppressed, but traffic is carried and loopbacks are allowed. Raised fault conditions, whether their alarms are reported or not, can be retrieved on the CTC Conditions tab or by using the TL1 RTRV-COND command. Use OOS_MT for testing or to suppress alarms temporarily. Change the state to IS, OOS, or OOS_AINS when testing is complete.
 - **OOS_AINS**—The port is in an auto-inservice state; alarm reporting is suppressed, but traffic is carried and loopbacks are allowed. Raised fault conditions, whether their alarms are reported or not, can be retrieved on the CTC Conditions tab or by using the TL1 RTRV-COND command.
- Step 4** If you set State to OOS-AINS, set the soak period time in the AINS Soak field. This is the amount of time that the state will stay in OOS-AINS state after the signal is continuously received.
- Step 5** Click **Apply**.
- Step 6** As needed, repeat this task for each port.
- Step 7** Return to your originating procedure (NTP).
-

NTP-A173 Point-to-Point Network Acceptance Test

Purpose	This procedure tests a point-to-point network.
Tools/Equipment	Test set/cables appropriate to the test circuit you will create
Prerequisite Procedures	NTP-A124 Provision a Point-to-Point Network, page 6-4
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

This procedure might be service affecting if performed on a node carrying traffic.

-
- Step 1** Log into one of the point-to-point nodes. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. The node (default) view appears.
- Step 2** From the View menu, choose **Go to Network View**.
- Step 3** Click the **Alarms** tab.
- Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 4** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export alarm data.
- Step 5** Click the **Conditions** tab. Verify that no unexplained conditions appear on the network. If unexplained conditions appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 6** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the condition information.
- Step 7** On the network map, double-click a point-to-point node to display it in node view.
- Step 8** Create a test circuit from the login node to the other point-to-point node:
- For DS-1 circuits, complete the “NTP-A181 Create an Automatically Routed DS-1 Circuit” procedure on page 8-6. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
 - For DS-3 circuits, complete the “NTP-A184 Create an Automatically Routed DS-3 Circuit” procedure on page 8-20. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
- Step 9** Configure the test set for the test circuit type you created:
- DS-1—If you are testing an unmuxed DS-1, you must have a DSX-1 panel or a direct DS-1 interface into the ONS 15454. Set the test set for DS-1. For information about configuring your test set, consult your test set user guide.
 - DS-3—If you are testing a clear channel DS-3, you must have a DSX-3 panel or a direct DS-3 interface into the ONS 15454. Set the test set for clear channel DS-3. For information about configuring your test set, consult your test set user guide.
 - DS3XM-6—If you are testing a DS-1 circuit on a DS3XM-6 card you must have a DSX-3 panel or a direct DS-3 interface to the ONS 15454. Set the test set for a muxed DS3. After you choose muxed DS-3, choose the DS-1 to test on the muxed DS-3. For information about configuring your test set, consult your test set user guide.

- Step 10** Verify the integrity of all patch cables that will be used in this test by connecting one end to the test set transmit (Tx) connector the other to the test set receive (Rx) connector. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly before going to Step 11.
- Step 11** Create a physical loopback at the circuit destination card. To do so, attach one end of a patch cable to the destination port's transmit (Tx) connector; attach the other end to the port's receive (Rx) connector.
- Step 12** At the circuit source card:
- Connect the transmit (Tx) connector of the test set to the receive (Rx) connector on the circuit source card.
 - Connect the test set receive (Rx) connector to the circuit transmit (Tx) connector on the circuit source card.
- Step 13** Verify that the test set has a clean signal. If a clean signal does not appear, repeat Steps 8 through 12 to make sure the test set and cabling are configured correctly.
- Step 14** Inject BIT errors from the test set. Verify that the errors appear at the test set, indicating a complete end-to-end circuit.
- Step 15** Complete the "DLP-A254 TCC+/TCC2 Active/Standby Switch Test" task on page 6-9.
- Step 16** Complete the "DLP-A255 Cross-Connect Card Side Switch Test" task on page 6-10.
- Step 17** Complete the "DLP-A88 Optical 1+1 Protection Test" task on page 6-11.
- Step 18** Set up and complete a BER Test. Use the existing configuration and follow your site requirements for the specified length of time. Record the test results and configuration.
- Step 19** Remove any loopbacks, switches, or test sets from the nodes after all testing is complete.
- Step 20** From the View menu, choose **Go to Network View**.
- Step 21** Click the **Alarms** tab. Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 22** Complete the "DLP-A139 Export CTC Data" task on page 9-4 to export the alarms information.
- Step 23** Repeat Steps 11 through 22 for the other point-to-point node.
- Step 24** If a node fails any test, repeat the test while verifying correct setup and configuration. If the test fails again, refer to the next level of support.
- Step 25** Delete the test circuit. See the "NTP-A152 Delete Circuits" procedure on page 11-20 for instructions. After all tests are successfully completed and no alarms exist in the network, the network is ready for service application.

Stop. You have completed this procedure.

DLP-A254 TCC+/TCC2 Active/Standby Switch Test

Purpose	This task verifies that the TCC+/TCC2 cards can effectively switch from one to another.
Tools/Equipment	The test set specified by the acceptance test procedure, connected and configured as specified in the acceptance test procedure.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Click the **Alarms** tab.
- Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 3** Click the **Conditions** tab. Verify that no unexplained conditions appear on the network. If unexplained conditions appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 4** Display the node containing the TCC+/TCC2 cards you are testing in node view.
- Step 5** Make a note of which TCC+/TCC2 is active and which is standby by examining the LEDs on the shelf graphic. TCC+/TCC2 cards are installed in Slot 7 and Slot 11. The active TCC+/TCC2 has a green ACT LED, and the standby TCC+/TCC2 has an amber SBY LED.
- Step 6** On the shelf graphic, right-click the active TCC+/TCC2 and choose **Reset** from the shortcut menu.
- Step 7** In the Resetting Card dialog box, click **Yes**. After 20 to 40 seconds, a “lost node connection, changing to network view” message appears.
- Step 8** Click **OK**. On the network view map, the node where you reset the TCC+/TCC2 will be grey.
- Step 9** After the node icon turns green (within 1 to 2 minutes), double-click it. On the shelf graphic, observe the following:
- The previous standby TCC+/TCC2 has a green ACT LED.
 - The previous active TCC+/TCC2 LEDs go through the following LED sequence: NP (card not present), Ldg (software is loading), amber SBY LED (TCC+/TCC2 is in standby mode). The LEDs should complete this sequence within 5 to 10 minutes.
- Step 10** Verify that traffic on the test set connected to the node is still running. If a traffic interruption occurs, do not continue, refer to your next level of support.
- Step 11** Repeat Steps 2 through 10 to return the active/standby TCC+/TCC2 cards to their configuration at the start of the procedure.
- Step 12** Verify that the TCC+/TCC2 cards appear as noted in Step 5.
- Step 13** Return to your originating procedure (NTP).
-

DLP-A255 Cross-Connect Card Side Switch Test

Purpose	This task verifies that the XC, XCVT, and XC10G cards can effectively switch service (active to standby and standby to active).
Tools/Equipment	The test set specified by the acceptance test procedure, connected and configured as specified in the acceptance test procedure.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

Always wait 60 seconds between cross-connect card (side) switches.

-
- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Click the **Alarms** tab.
- Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 3** Click the **Conditions** tab. Verify that no unexplained conditions appear on the network. If unexplained conditions appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 4** Display the node containing the cross-connect cards you are testing in node view.
- Step 5** Click the **Maintenance > Cross-Connect** tabs.
- Step 6** In the Cross-Connect Cards area, make a note of the active and standby slots.
- Step 7** On the shelf graphic, verify that the active cross-connect card has a green ACT LED and the standby cross-connect card has an amber SBY LED. If these conditions are not present, review the “DLP-A37 Install the XC, XCVT, or XC10G Cards” task on page 2-9 or contact your next level of support.
- Step 8** Click **Switch**.
- Step 9** In the Confirm Switch dialog box, click **Yes**.
- Step 10** Verify that the active slot noted in Step 6 becomes the standby slot, and that the standby slot becomes the active slot. The switch should appear within 1 to 2 seconds.
- Step 11** Verify that traffic on the test set connected to the node is still running. Some bit errors are normal, but traffic flow should not be interrupted. If a traffic interruption occurs, do not continue. Refer to your next level of support.
- Step 12** Wait 60 seconds, then repeat Steps 7 through 9 to return the active/standby slots to their configuration at the start of the procedure.
- Step 13** Verify that the cross-connect card appears as you noted in Step 6.
- Step 14** Return to your originating procedure (NTP).
-

DLP-A88 Optical 1+1 Protection Test

Purpose	This task verifies a 1+1 protection group will switch traffic properly.
Tools/Equipment	The test set specified by the acceptance test procedure.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26; a test circuit created as part of the topology acceptance test.
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Click the **Alarms** tab.
- Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 3** Click the **Conditions** tab. Verify that no unexplained conditions appear on the network. If unexplained conditions appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 4** Display the node containing the 1+1 protection group you are testing in node view.
- Step 5** Click the **Maintenance > Protection** tabs.
- Step 6** In the Protection Groups area, click the 1+1 protection group.
- Step 7** Click the working port. Next to Switch Commands, click **Force**.
- Step 8** In the Confirm Manual Operation dialog box, click **Yes**.
- Step 9** In the Selected Group area, verify that the following appears:
 Protect port - Protect/Active [FORCE_SWITCH_TO_PROTECT] [PORT STATE]
 Working port - Working/Standby [FORCE_SWITCH_TO_PROTECT], [PORT STATE]
- Step 10** Verify that traffic on the test set connected to the node is still running. Some bit errors are normal, but traffic flow should not be interrupted. If a traffic interruption occurs, complete Steps 11 and 12, then refer to your next level of support.
- Step 11** Next to Switch Commands, click **Clear**.
- Step 12** In the Confirm Clear Operation dialog box, click **Yes**.
- Step 13** In the Selected Group area, click the protect port. Next to Switch Commands, click **Force**.
- Step 14** In the Confirm Force Operation dialog box, click **Yes**.
- Step 15** In the Selected Group area, verify that the following appears:
 Protect port - Protect/Active [FORCE_SWITCH_TO_WORKING], [PORT STATE]
 Working port - Working/Standby [FORCE_SWITCH_TO_WORKING], [PORT STATE]
- Step 16** Verify that the traffic on the test set connected to the node is still running. If a traffic interruption occurs, complete Steps 17 and 18, then refer to your next level of support.
- Step 17** Next to Switch Commands, click **Clear**.

- Step 18** In the Confirm Clear Operation dialog box, click **Yes**.
- Step 19** In the Selected Group area, verify the following states:
- Protect port - Protect/Standby
 - Working port - Working/Active
- Step 20** Return to your originating procedure (NTP).


NTP-A38 Provision a Linear ADM Network

Purpose	This procedure provisions three or more ONS 15454s in a linear add-drop multiplexer (ADM) configuration.
Tools/Equipment	None
Prerequisite Procedures	NTP-A35 Verify Node Turn Up, page 6-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at an ONS 15454 where you want to provision in a linear ADM network. If you are already logged in, continue with Step 2.

Figure 6-1 shows three ONS 15454s in a linear ADM configuration. In this example, working traffic flows from Slot 5/Node 1 to Slot 5/Node 2, and from Slot 12/Node 2 to Slot 12/Node 3. Slots 6 and 13 contain the protect OC-N cards. Slots 5 and 6 and Slots 12 and 13 are in 1+1 protection.

Figure 6-1 Linear ADM Configuration

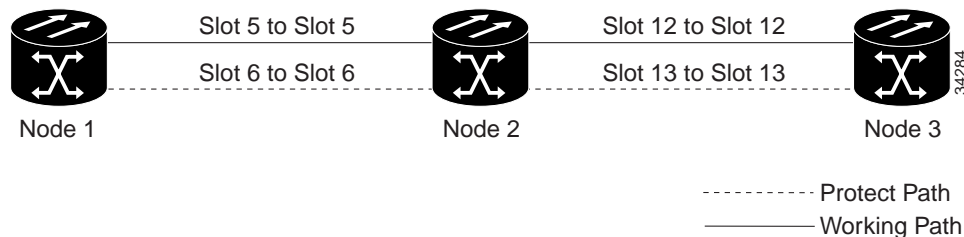

- Step 2** Click the **Provisioning > Protection** tabs. Verify that 1+1 protection is created for the OC-N cards at the node. If the protection group has not been created, go to the “DLP-A73 Create a 1+1 Protection Group” task on page 4-29 to create them.
- Step 3** Repeat Steps 1 and 2 for all other nodes you will include in the linear ADM.
- Step 4** Verify that the working and protect cards in the 1+1 protection groups correspond to the physical fiber connections between the nodes, that is, working cards are fibered to working cards and protect cards are fibered to protect cards.
- Step 5** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 for the working OC-N ports on each linear ADM node.



Note If linear ADM nodes are not connected to a LAN, you will need to create the DCC terminations using a direct (craft) connection to the node. Remote provisioning is possible only after all nodes without LAN connections have DCC terminations provisioned to in-service OC-N ports.



Note Terminating nodes (Nodes 1 and 3 in Figure 6-1) will have one DCC termination, and intermediate nodes (Node 2 in Figure 6-1) will have two DCC terminations (Slots 5 and 12 in the example).

- Step 6** Verify that the timing has been set up at each linear node. If not, complete the “NTP-A28 Set Up Timing” task on page 4-21. If a node is using line timing, use its working OC-N card as the timing source.
- Step 7** Complete the “NTP-A174 Linear ADM Network Acceptance Test” procedure on page 6-13.
- Stop. You have completed this procedure.**

NTP-A174 Linear ADM Network Acceptance Test

Purpose	This procedure tests a linear ADM network.
Tools/Equipment	Test set and cables appropriate to the test circuit you will create.
Prerequisite Procedures	NTP-A38 Provision a Linear ADM Network, page 6-12
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 on a node in the linear ADM network you are testing. If you are already logged in, continue with Step 2.
- Step 2** From the View menu, choose **Go to Network View**.
- Step 3** Click the **Alarms** tab.
- Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 4** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the alarm information.
- Step 5** Click the **Conditions** tab. Verify that no unexplained conditions appear on the network. If unexplained conditions appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 6** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the conditions information.
- Step 7** Display a linear ADM node in node view.
- Step 8** Create a test circuit from that node to an adjacent linear ADM node.

- For DS-1 circuits, complete the “NTP-A181 Create an Automatically Routed DS-1 Circuit” procedure on page 8-6. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
- For DS-3 circuits, complete the “NTP-A184 Create an Automatically Routed DS-3 Circuit” procedure on page 8-20. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.

Step 9 Configure the test set for the test circuit type you created:

- DS-1 card—If you are testing an unmuxed DS-1, you must have a DSX-1 panel or a direct DS-1 interface into the ONS 15454. Set the test set for DS-1. For information about configuring your test set, consult your test set user guide.
- DS-3—If you are testing a clear channel DS-3, you must have a DSX-3 panel or a direct DS-3 interface into the ONS 15454. Set the test set for clear channel DS-3. For information about configuring your test set, consult your test set user guide.
- DS3XM-6—If you are testing a DS-1 circuit on a DS3XM-6 card you must have a DSX-3 panel or a direct DS-3 interface to the ONS 15454. Set the test set for a muxed DS3. After you choose muxed DS-3, choose the DS-1 to test on the muxed DS-3. For information about configuring your test set, consult your test set user guide.

Step 10 Verify the integrity of all patch cables that will be used in this test by connecting one end to the test set transmit (Tx) connector and the other end to the test set receive (Rx) connector. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly before going to the next step.

Step 11 Create a physical loopback at the circuit destination card. To do so, attach one end of a patch cable to the destination port’s transmit (Tx) connector; attach the other end to the destination port’s receive (Rx) connector.

Step 12 At the circuit source card:

- Connect the transmit (Tx) connector of the test set to the circuit receive (Rx) connector.
- Connect the test set receive (Rx) connector to the circuit transmit (Tx) connector.

Step 13 Verify that the test set shows a clean signal. If a clean signal does not appear, repeat Steps 8 through 12 to make sure the test set and cabling are configured correctly.

Step 14 Inject BIT errors from the test set. Verify that the errors appear at the test set, indicating a complete end-to-end circuit.

Step 15 Complete the “DLP-A254 TCC+/TCC2 Active/Standby Switch Test” task on page 6-9.

Step 16 Complete the “DLP-A255 Cross-Connect Card Side Switch Test” task on page 6-10.

Step 17 Complete the “DLP-A88 Optical 1+1 Protection Test” task on page 6-11 to test the OC-N port protection group switching.

Step 18 Set up and complete a BER test. Use the existing configuration and follow your site requirements for length of time. Record the test results and configuration.

Step 19 Remove any loopbacks, switches, or test sets from the nodes after all testing is complete.

Step 20 Click the **Alarms** tab. Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.

Step 21 Delete the test circuit. See the “NTP-A152 Delete Circuits” procedure on page 11-20 for instructions.

Step 22 Display the next linear ADM node in node view and repeat Steps 8 through 21.

Step 23 If a node fails any test, repeat the test while verifying correct setup and configuration. If the test fails again, refer to the next level of support.

After all tests are successfully completed and no alarms exist in the network, the network is ready for service application.

Stop. You have completed this procedure.


NTP-A40 Provision BLSR Nodes

Purpose	This procedure provisions ONS 15454 nodes for a bidirectional line switched ring (BLSR).
Tools/Equipment	None
Prerequisite Procedures	NTP-A35 Verify Node Turn Up, page 6-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A44 Install Fiber-Optic Cables for BLSR Configurations” task on page 2-38, verifying that the following rules are observed:


- Verify that the east port at one node is connected to the west port on an adjacent node, and this east to west port connection is used at all BLSR nodes, similar to Figure 6-3. In the figure, the OC-N drop card on the left side of the shelf is the west port, and the drop card on the right side of the shelf is considered the east port.

Figure 6-2 Four-Node, Two-Fiber BLSR Fiber Connection Example

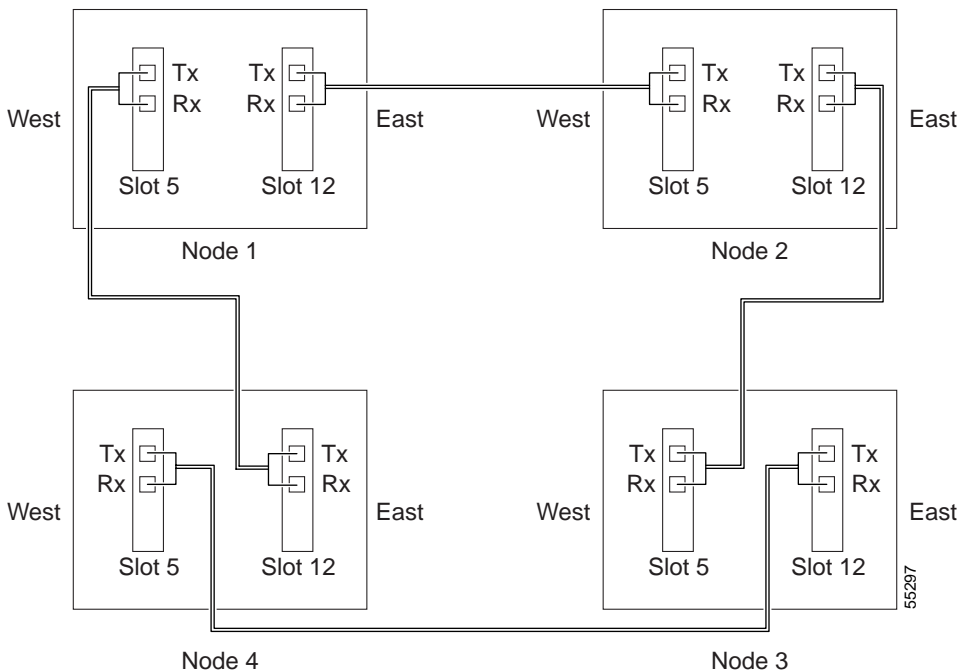

- For four-fiber BLSRs, verify that the same east port to west port connection is used for the working and protect fibers, similar to Figure 6-3. Verify that the working and protect card connections are not mixed. The working cards are the cards where you will provision the DCC terminations.

Figure 6-3 Four-Node, Four-Fiber BLSR Fiber Connection Example

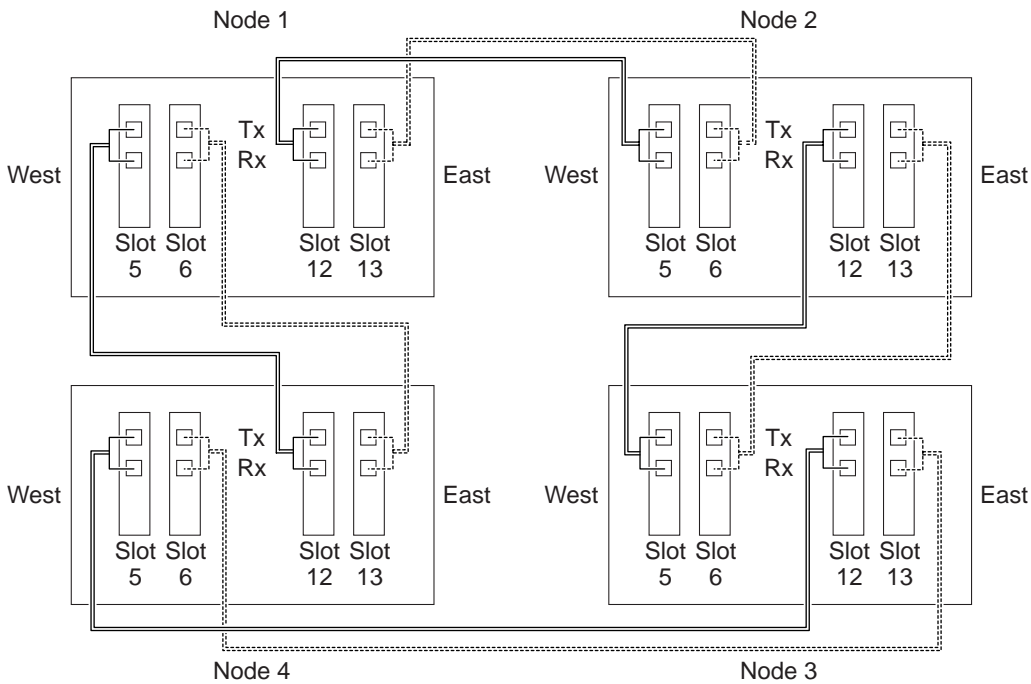

—— Working fibers ¹⁵⁸

- Step 2** Log into an ONS 15454 that you want to configure in a BLSR. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 3.
- Step 3** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5. Provision the two ports/cards that will serve as the BLSR ports at the node. For four-fiber BLSRs, provision the DCC terminations on the OC-N cards that will carry the working traffic, but do not provision DCCs on the protect cards.



Note If an ONS 15454 is not connected to a corporate LAN, DCC provisioning must be performed through a direct (craft) connection to the node. Remote provisioning is possible only after all nodes in the network have DCC provisioned to in-service OC-N ports.

- Step 4** For four-fiber BLSRs, complete the “DLP-A214 Change the Service State for a Port” task on page 6-6 to put the protect OC-N cards/ports in service.
- Step 5** If a BLSR span passes through third-party equipment that cannot transparently transport the K3 byte, complete the “DLP-A89 Remap the K3 Byte” task on page 6-17. This task is not necessary for most users.
- Step 6** Repeat Steps 2 through 4 at each node that will be in the BLSR. Verify that the EOC (DCC Termination Failure) and LOS (Loss of Signal) are cleared after DCCs are provisioned on all nodes in the ring.
- Step 7** Complete the “NTP-A126 Create a BLSR” procedure on page 6-17.

Stop. You have completed this procedure.

DLP-A89 Remap the K3 Byte

Purpose	This task provisions the K3 byte. Do not remap the K3 byte unless specifically required to run an ONS 15454 BLSR through third-party equipment. This task is unnecessary for most users.
Tools/Equipment	OC48AS cards must be installed on the BLSR span that you will remap.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

If you remap the K3 byte, remap to the same extended byte (Z2, E2, or F1) on either side of the span.

- Step 1** In node view, double-click the OC48AS card that connects to the third-party equipment.
- Step 2** Click the **Provisioning > Line** tabs.
- Step 3** Click **BLSR Ext Byte** and choose the alternate byte: Z2, E2, or F1.
- Step 4** Click **Apply**.
- Step 5** For four-fiber BLSRs only, repeat Steps 2 through 4 for each protect card.
- Step 6** Repeat this task at the node and card on the other end of the BLSR span.



Note

The extension byte chosen in Step 3, should match at both ends of the span.

- Step 7** Return to your originating procedure (NTP).
-

NTP-A126 Create a BLSR

Purpose	This procedure creates a BLSR at each BLSR-provisioned node.
Tools/Equipment	None
Prerequisite Procedures	NTP-A40 Provision BLSR Nodes, page 6-15
Required/As Needed	As needed; required to complete BLSR provisioning
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at a node on the network where you will create the BLSR.

- Step 2** Complete one of the following tasks:
- DLP-A328 Create a BLSR Using the BLSR Wizard, page 6-18 – Use this task to create the BLSR using the CTC BLSR wizard. The BLSR wizard checks to see that each node is ready for BLSR provisioning, then provisions all the nodes at once. Using the BLSR wizard is recommended.
 - DLP-A329 Create a BLSR Manually, page 6-20 – Use this task to provision the BLSR manually at each node that will be in the BLSR.
- Step 3** Complete the “NTP-A175 Two-Fiber BLSR Acceptance Test” procedure on page 6-21 or the “NTP-A176 Four-Fiber BLSR Acceptance Test” procedure on page 6-28.
- Stop. You have completed this procedure.**
-

DLP-A328 Create a BLSR Using the BLSR Wizard

Purpose	This procedure creates a BLSR at each BLSR-provisioned node using the CTC BLSR wizard. The BLSR wizard checks to see that each node is ready for BLSR provisioning, then provisions all the nodes at one time.
Tools/Equipment	None
Prerequisite Procedures	NTP-A40 Provision BLSR Nodes, page 6-15 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Click the **Provisioning > BLSR** tabs.
- Step 3** Click **Create BLSR**.
- Step 4** In the BLSR Creation dialog box, set the BLSR properties:
- Ring Type—Choose the BLSR ring type, either two-fiber or four-fiber.
 - Speed—Choose the BLSR ring speed: OC-12 (two-fiber BLSR only), OC-48, or OC-192. The speed must match the OC-N speed of the BLSR trunk (span) cards.



Note If you are creating an OC-12 BLSR and will eventually upgrade it to OC-48 or OC-192, use the single-port OC-12 cards (OC12 IR/STM4 SH 1310, OC12 IR/STM4 SH 1310, or OC12 IR/STM4 SH 1310). You cannot upgrade a BLSR on a four-port OC-12 (OC12/STM4-4) because OC-48 and OC-192 cards are single-port.

- Ring ID—Assign a ring ID (a number between 0 and 9999).
- Reversion time—Set the amount of time that will pass before the traffic reverts to the original working path following a ring switch. The default is 5 minutes. Ring reversions can be set to Never.

For four-fiber BLSRs only, complete the following:

- Span Reversion—Set the amount of time that will pass before the traffic reverts to the original working path following a span switch. The default is 5 minutes. Span reversions can be set to Never.

- Step 5** Click **Next**. If the network graphic appears, go to Step 6.
- If CTC determines that a BLSR cannot be created, for example, not enough optical cards are installed or it finds circuits with path protection selectors, a “Cannot Create BLSR” message appears. If this occurs, complete the following steps:
- Click **OK**.
 - In the Create BLSR window, click **Excluded Nodes**. Review the information explaining why the BLSR could not be created, then click **OK**.
 - Depending on the problem, click **Back** to start over or click **Cancel** to cancel the operation.
 - Complete the “NTP-A40 Provision BLSR Nodes” procedure on page 6-15, making sure all steps are completed accurately, then start this procedure again.
- Step 6** In the network graphic, double-click a BLSR span line. If the span line is DCC connected to other BLSR cards that constitute a complete ring, the lines turn blue and the Finish button appears. If the lines do not form a complete ring, double-click span lines until a complete ring is formed. When the ring is DCC connected, go to Step 7 if you are completing a four-fiber BLSR or go to Step 8 if you are completing a two-fiber BLSR.
- Step 7** For four-fiber BLSRs, click **Next**. For two-fiber BLSRs go to go to Step 8. In the Protect Port Selection section, choose the protect ports from the West Protect and East Protect columns. Go to the next step.
- Step 8** Click **Finish**. If the BLSR window appears with the BLSR you created, go to Step 9. If a “Cannot Create BLSR” or “Error While Creating BLSR” message appears:
- Click **OK**.
 - In the Create BLSR window, click **Excluded Nodes**. Review the information explaining why the BLSR could not be created, then click **OK**.
 - Depending on the problem, click **Back** to start over or click **Cancel** to cancel the operation.
 - Complete the “NTP-A40 Provision BLSR Nodes” procedure on page 6-15, making sure all steps are completed accurately, then start this procedure again.



Note Some or all of the following alarms may briefly appear during BLSR setup: E-W MISMATCH, RING MISMATCH, APSCIMP, APSDFLTK, or BLSROSYNC.

- Step 9** Verify the following:
- On the network view graphic, a green span line appears between all BLSR nodes.
 - All E-W MISMATCH, RING MISMATCH, APSCIMP, DFLTK, and BLSROSYNC alarms are cleared. See the *Cisco ONS 15454 Troubleshooting Guide* for alarm troubleshooting.



Note The numbers in parentheses after the node name are the BLSR node IDs assigned by CTC. Every ONS 15454 in a BLSR is given a unique node ID, 0 through 31. To change it, complete the “NTP-A159 Modify a BLSR” procedure on page 15-11.

- Step 10** Return to your originating procedure (NTP).
-

DLP-A329 Create a BLSR Manually

Purpose	This procedure creates a BLSR at each BLSR-provisioned node manually at each node that will be in the BLSR.
Tools/Equipment	None
Prerequisite Procedures	NTP-A40 Provision BLSR Nodes, page 6-15 DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > Ring** tabs.

Step 2 Click **Create**.

Step 3 On the Suggestion dialog box, click **OK**.

Step 4 In the Create BLSR dialog box, set the BLSR properties:

- Ring Type—Choose the BLSR ring type, either two-fiber or four-fiber.
- Ring ID—Assign a ring ID (a number between 0 and 9999). Nodes in the same BLSR must have the same Ring ID.
- Node ID—Choose a Node ID from the pull-down menu (0 through 31). The Node ID identifies the node to the BLSR. Nodes in the same BLSR must have unique Node IDs.
- Reversion time—Set the amount of time that will pass before the traffic reverts to the original working path. The default is 5 minutes. All nodes in a BLSR ring must have the same reversion time setting, particularly if “never” (i.e., non-revertive) is chosen.
- West Line—Assign the west BLSR port for the node from the pull-down menu.



Note The east and west ports must match the fiber connections and DCC terminations set up in the “NTP-A40 Provision BLSR Nodes” procedure on page 6-15.

- East Line—Assign the east BLSR port for the node from the pull-down menu.

For four-fiber BLSRs, complete the following:

- Span Reversion—Set the amount of time that will pass before the traffic reverts to the original working path following a span reversion. The default is 5 minutes. Span reversions can be set to Never. If you set a reversion time, the times must be the same for both ends of the span. That is, if Node A’s west fiber is connected to Node B’s east port, the Node A west span reversion time must be the same as the Node B east span reversion time. To avoid reversion time mismatches, Cisco recommends that you use the same span reversion time throughout the ring.
- West Protect—Assign the west BLSR port that will connect to the west protect fiber from the pull-down menu.
- East Protect—Assign the east BLSR port that will connect to the east protect fiber from the pull-down menu.

Step 5 Click **OK**.



Note Some or all of the following alarms will appear until all the BLSR nodes are provisioned: E-W MISMATCH, RING MISMATCH, APSCIMP, APSDFLTK, BLSROSYNC. The alarms will clear after you configure all the nodes in the BLSR.

- Step 6** From the View menu, choose **Go to Other Node**.
- Step 7** In the Select Node dialog box, choose the next node that you want to add to the BLSR.
- Step 8** Complete Steps 1 through 5.
- Step 9** Repeat Steps 1 through 8 at each node that you want to add to the BLSR. When all nodes have been added, continue with Step 10.
- Step 10** From the View menu, choose **Go to Network View**. After 10-15 seconds, verify the following:
- A green span line appears between all BLSR nodes
 - All E-W MISMATCH, RING MISMATCH, APSCIMP, DFLTK, and BLSROSYNC alarms are cleared.
- Step 11** Return to your originating procedure (NTP).

NTP-A175 Two-Fiber BLSR Acceptance Test

Purpose	This procedure tests a two-fiber BLSR.
Tools/Equipment	Test set and cables appropriate for the test circuit
Prerequisite Procedures	NTP-A40 Provision BLSR Nodes, page 6-15 NTP-A126 Create a BLSR, page 6-17
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

This procedure might be service affecting if performed on a node carrying traffic.



Note

This procedure requires that you create test circuits and perform span switches around the ring. For clarity, “Node 1” refers to the login node where you begin the procedure. “Node 2” refers to the node connected to the East OC-N trunk (span) card of Node 1, “Node 3” refers to the node connected to the East OC-N trunk card of Node 2, and so on.

- Step 1** Log into one of the ONS 15454s on the BLSR you are testing. (This node will be called Node 1.) See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.
- Step 2** From the View menu, choose **Go to Network View**.

- Step 3** Click the **Alarms** tab.
- a. Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - b. Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 4** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the alarm information.
- Step 5** Click the **Conditions** tab. Verify that no unexplained conditions appear on the network. If unexplained conditions appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 6** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the conditions information.
- Step 7** On the network view, double-click Node 1.
- Step 8** Complete the “DLP-A217 BLSR Exercise Ring Test” task on page 6-23.
- Step 9** Create a test circuit from Node 1 to the node connected to the East OC-N trunk (span) card of Node 1. (This node will be called Node 2.)
- For DS-1 circuits, complete the “NTP-A181 Create an Automatically Routed DS-1 Circuit” procedure on page 8-6. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
 - For DS-3 circuits, complete the “NTP-A184 Create an Automatically Routed DS-3 Circuit” procedure on page 8-20. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
- Step 10** Configure the test set for the test circuit type you created:
- DS-1—If you are testing an unmuxed DS-1, you must have a DSX-1 panel or a direct DS-1 interface into the ONS 15454. Set the test set for DS-1. For information about configuring your test set, consult your test set user guide.
 - DS-3—If you are testing a clear channel DS-3, you must have a DSX-3 panel or a direct DS-3 interface into the ONS 15454. Set the test set for clear channel DS-3. For information about configuring your test set, consult your test set user guide.
 - DS3XM-6—If you are testing a DS-1 circuit on a DS3XM-6 card you must have a DSX-3 panel or a direct DS-3 interface to the ONS 15454. Set the test set for a muxed DS-3. After you choose muxed DS-3, choose the DS-1 to test on the muxed DS-3. For information about configuring your test set, consult your test set user guide.
- Step 11** Verify the integrity of all patch cables that will be used in this test by connecting the test set transmit (Tx) connector to the test set receive (Rx) connector. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly before going to the next step.
- Step 12** Create a physical loopback at the circuit destination card: attach one end of a patch cable to the destination port’s transmit (Tx) connector; attach the other end to the port’s receive (Rx) connector.
- Step 13** At the circuit source card:
- a. Connect the transmit (Tx) connector of the test set to the circuit receive (Rx) connector.
 - b. Connect the test set receive (Rx) connector to the circuit transmit (Tx) connector.
- Step 14** Verify that the test set shows a clean signal. If a clean signal does not appear, repeat Steps 1 through 9 to make sure the test set and cabling are configured correctly.
- Step 15** Inject BIT errors from the test set. Verify that the errors appear at the test set, verifying a complete end-to-end circuit.
- Step 16** Complete the “DLP-A254 TCC+/TCC2 Active/Standby Switch Test” task on page 6-9.

- Step 17** Complete the “DLP-A255 Cross-Connect Card Side Switch Test” task on page 6-10.
- Although a service interruption under 60 ms may occur, the test circuit should continue to work before, during, and after the switches. If the circuit stops working, do not continue. Contact your next level of support.
- Step 18** Complete the “DLP-A91 BLSR Switch Test” task on page 6-25 at Node 1.
- Step 19** Set up and complete a BER test on the test circuit. Use the existing configuration and follow your site requirements for length of time. Record the test results and configuration.
- Step 20** Complete the “NTP-A152 Delete Circuits” procedure on page 11-20 for the test circuit.
- Step 21** Repeating Steps 7 through 20 for Nodes 2 and higher, work your way around the BLSR, testing each node and span in the ring. Work your way around the BLSR creating test circuits between every two consecutive nodes.
- Step 22** After you test the entire ring, remove any loopbacks and test sets from the nodes.
- Step 23** If a node fails any test, repeat the test while verifying correct setup and configuration. If the test fails again, refer to the next level of support.

After all tests are successfully completed and no alarms exist in the network, the network is ready for service application. Continue with Chapter 8, “Create Circuits and VT Tunnels.”

Stop. You have completed this procedure.

DLP-A217 BLSR Exercise Ring Test


Purpose	This task tests the BLSR ring functionality without switching traffic. Ring exercise conditions (including the K-byte pass-through) are reported and cleared within 10-15 seconds.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Click the **Provisioning > BLSR** tabs.
- Step 3** Click the row of the BLSR you will exercise, then click **Edit**.
- Step 4** Right-click the west port of any BLSR node and choose **Set West Protection Operation**. Figure 6-4 shows an example. (To move a graphic icon, press **Ctrl** while you drag and drop it to a new location.)



Note For two fiber BLSRs, the squares on the node icons represent the BLSR working and protect channels. You can right-click either channel. For four-fiber BLSRs, the squares represent ports. Right-click either working or protect ports.

Figure 6-4 Protection Operation on a Three-Node BLSR

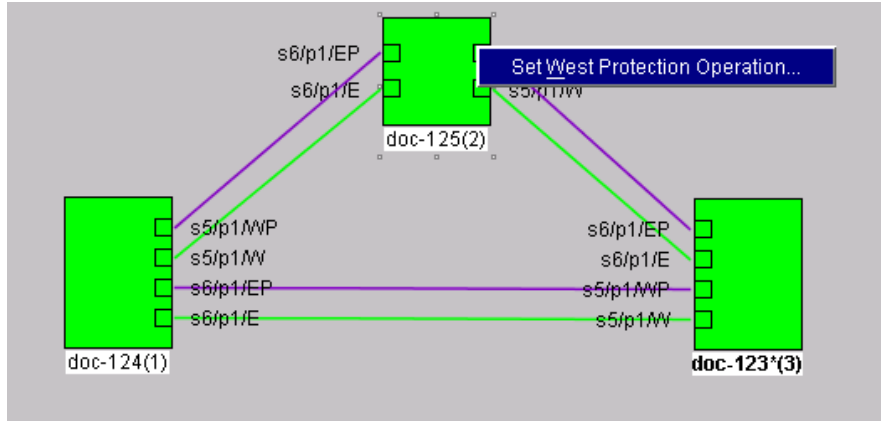

- Step 5** In the Set West Protection Operation dialog box, choose **EXERCISE RING** from the drop-down menu. Click **OK**.
- Step 6** In the Confirm BLSR Operation dialog box, click **Yes**.
- On the network view graphic, an E appears on the working BLSR channel where you invoked the protection switch. The E will appear for 10 to 15 seconds, then disappear.
- Step 7** In the Cisco Transport Controller window, click the **History** tab. Verify that an EXERCISE-RING (Exercising Ring Successfully) condition appears for the node where you exercised the ring. Other conditions that appear include EXERCISE-RING-REQ, KB-PASSTHR, and FE-EXERCISING-RING.
- If you do not see any BLSR exercise conditions, click the **Filter** button and verify that filtering is not turned on. Also, check that alarms and conditions are not suppressed for a node or BLSR drop cards. See the “NTP-A72 Suppress Alarms and Discontinue Alarm Suppression” procedure on page 9-30 for more information.
- Step 8** Click the **Alarms** tab.
- Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 9** From the File menu choose **Close** to close the BLSR window.
- Step 10** Return to your originating procedure (NTP).

DLP-A91 BLSR Switch Test

Purpose	This task verifies that protection switching is working correctly in a BLSR.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** In network view, click the **Provisioning > BLSR** tabs.
- Step 2** Click the row of the BLSR you will switch, then click **Edit**.
- Step 3** Right-click any BLSR node west port and choose **Set West Protection Operation**. Figure 6-4 on page 6-24 shows an example. (To move a graphic icon, click it, then press **Ctrl** while you drag and drop it to a new location.)



Note For two fiber BLSRs, the squares on the node icons represent the BLSR working and protect channels. You can right-click either channel. For four-fiber BLSRs, the squares represent ports. Right-click either working or protect port.

- Step 4** In the Set West Protection Operation dialog box, choose **FORCE RING** from the drop-down menu. Click **OK**.
- Step 5** Click **Yes** in the two Confirm BLSR Operation dialog boxes that appear.
- On the network view graphic, an F appears on the BLSR channel where you invoked the Force Ring switch. The BLSR span lines turn purple where the switch was invoked, and all span lines between other BLSR nodes turn green.
- Step 6** Click the **Conditions** tab, then click **Retrieve**.
- Step 7** Verify that the following conditions are reported on the node where you invoked the Force Ring switch on the West port:
- **FORCE-REQ-RING**—A Force Switch Request On Ring condition is reported against the span's working slot on the west side of the node.
 - **RING-SW-EAST**—A Ring Switch Active on the east side condition is reported against the working span on the east side of the node.



Note Make sure the Filter button in the lower right corner of the window is off. Click the Node column to sort conditions by node.

- Step 8** Verify that the following conditions are reported on the node that is connected to the West line of the node where you performed the switch:
- **FE-FRCDWKSWPR-RING**—A Far-End Working Facility Forced to Switch to Protection condition is reported against the working span on the east side of the node.
 - **RING-SW-WEST**—A Ring Switch Active on the west side condition is reported against the working span on the west side of the node.

- Step 9** (Optional) If you remapped the K3 byte to run an ONS 15454 BLSR through third-party equipment, check the following condition. Verify a FULLPASSTHR-BI condition reported on other nodes that are not connected to the west side of the node where you invoked the Force Ring switch.
- Step 10** Verify the BLSR line status on each node:
- a. From node view, click **Maintenance > BLSR**.
 - b. Verify the following:
 - The line states are shown as Stby/Stby on the west side of the node and Act/Act on the east side of the node where you invoked the Force Ring switch.
 - The line states are shown as Stby/Stby on the east side of the node and Act/Act on the west side of the node that is connected to the west line of the node where you invoked the Force Ring switch.
 - The line states are shown as Act/Act on both East and west sides of the remaining nodes in the ring.
- Step 11** From network view, click the **Alarms** tab.
- a. Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - b. Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 12** Display the BLSR window where you invoked the Force Ring switch (the window may be hidden by the CTC window).
- Step 13** Right-click the west port of the BLSR node where you invoked the Force Ring switch and choose **Set West Protection Operation**.
- Step 14** In the Set West Protection Operation dialog box, choose **CLEAR** from the drop-down menu. Click **OK**.
- Step 15** Click **Yes** in the Confirm BLSR Operation dialog box.
- On the network view graphic, the Force Ring switch is removed, the F indicating the switch is removed, and the span lines between BLSR nodes will be purple and green. The span lines may take a few moments to change color.
- Step 16** From network view, click the **Conditions** tab. Verify that all conditions raised in this procedure are cleared from the network. If unexplained conditions appear, resolve them before continuing.
- Step 17** Verify the BLSR line status on each node:
- a. From node view, click **Maintenance > BLSR**.
 - b. Verify that the line states are shown as Act/Stby on both the East and west sides of each node in the ring.
- Step 18** Right-click the east port of BLSR node and choose **Set East Protection Operation**.
- Step 19** In the Set East Protection Operation dialog box, choose **FORCE RING** from the drop-down menu. Click **OK**.
- Step 20** Click **Yes** in the two Confirm BLSR Operation dialog boxes that appear.
- On the network view graphic, an F appears on the working BLSR channel where you invoked the Force Ring switch. The BLSR span lines are purple where the Force Ring switch was invoked, and all span lines between other BLSR nodes are green. The span lines may take a few moments to change color.
- Step 21** Click the **Conditions** tab, then click **Retrieve**.
- Step 22** Verify that the following conditions are reported on the node where you invoked the Force Ring switch on the East port:

- **FORCE-REQ-RING**—A Force Switch Request On Ring condition is reported against the span's working slot on the east side of the node.
- **RING-SW-WEST**—A Ring Switch Active on the west side condition is reported against the working span on the east side of the node.



Note Make sure the Filter button in the lower right corner of the window is off. Click the Node column to sort conditions by node.

- Step 23** Verify that the following conditions are reported on the node that is connected to the East line of the node where you performed the switch:
- **FE-FRCDWKSWPR-RING**—A Far-End Working Facility Forced to Switch to Protection condition is reported against the working span on the west side of the node.
 - **RING-SW-EAST**—A Ring Switch Active on the east side condition is reported against the working span on the west side of the node.
- Step 24** (Optional) If you remapped the K3 byte to run an ONS 15454 BLSR through third-party equipment, verify a **FULLPASSTHR-BI** condition reported on other nodes that are not connected to the west side of the node where you invoked the Force Ring switch.
- Step 25** Verify the BLSR line status on each node:
- From node view, click **Maintenance > BLSR**.
 - Verify the following:
 - The line states are shown as Stby/Stby on the east side of the node and Act/Act on the west side of the node where you invoked the Force Ring switch.
 - The line states are shown as Stby/Stby on the west side of the node and Act/Act on the east side of the node that is connected to the east line of the node where you invoked the Force Ring switch.
 - The line states are shown as Act/Act on both East and West sides of the remaining nodes in the ring.
- Step 26** From network view, click the **Alarms** tab. Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 27** Display the BLSR window where you invoked the Force Ring switch (the window may be hidden by the CTC window).
- Step 28** Right-click the west port of the BLSR node where you invoked the Force Ring switch and choose **Set East Protection Operation**.
- Step 29** In the Set East Protection Operation dialog box, choose **CLEAR** from the drop-down menu. Click **OK**.
- Step 30** Click **Yes** in the Confirm BLSR Operation dialog box.
- On the network view graphic, the Force Ring switch is removed, the F indicating the switch is removed, and the span lines between BLSR nodes will be purple and green. The span lines may take a few moments to change color.
- Step 31** From network view, click the **Conditions** tab. Verify that all conditions raised in this procedure are cleared from the network. If unexplained conditions appear, resolve them before continuing.
- Step 32** Verify the BLSR line status on each node:
- From node view, click **Maintenance > BLSR**.

- b. Verify that the line states are shown as Act/Stby on both the East and west sides of each node in the ring.

Step 33 From the File menu choose **Close** to close the BLSR window.

Step 34 Return to your originating procedure (NTP).

NTP-A176 Four-Fiber BLSR Acceptance Test

Purpose	This procedure tests a four-fiber BLSR.
Tools/Equipment	Test set and cables appropriate to the test circuit you will create
Prerequisite Procedures	NTP-A40 Provision BLSR Nodes, page 6-15 NTP-A126 Create a BLSR, page 6-17
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

This procedure might be service affecting if performed on a node carrying traffic.



Note

This procedure requires that you create test circuits and perform a ring switch. For clarity, “Node 1” refers to the login node where you begin the procedure. “Node 2” refers to the node connected to the East OC-N trunk (span) card of Node 1, “Node 3” refers to the node connected to the East OC-N trunk card of Node 2, and so on.

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 on the BLSR you are testing. (This node will be called Node 1.) If you are already logged in, continue with Step 2.

Step 2 From the View menu, choose **Go to Network View**.

Step 3 Click the **Alarms** tab.

- a. Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
- b. Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.

Step 4 Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the alarm information.

Step 5 Click the **Conditions** tab. Verify that no unexplained conditions appear on the network. If unexplained conditions appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.

Step 6 Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the conditions information.

Step 7 On the network map, double-click Node 1.

Step 8 Complete the “DLP-A92 Four-Fiber BLSR Exercise Span Test” task on page 6-30.

Step 9 Complete the “DLP-A217 BLSR Exercise Ring Test” task on page 6-23.

Step 10 Create a test circuit between Node 1 and Node 2.

- For DS-1 circuits, complete the “NTP-A181 Create an Automatically Routed DS-1 Circuit” procedure on page 8-6. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
 - For DS-3 circuits, complete the “NTP-A184 Create an Automatically Routed DS-3 Circuit” procedure on page 8-20. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
- Step 11** Configure the test set for the test circuit type you created:
- DS-1—If you are testing an unmuxed DS-1, you must have a DSX-1 panel or a direct DS-1 interface into the ONS 15454. Set the test set for DS-1. For information about configuring your test set, consult your test set user guide.
 - DS-3—If you are testing a clear channel DS-3, you must have a DSX-3 panel or a direct DS-3 interface into the ONS 15454. Set the test set for clear channel DS-3. For information about configuring your test set, consult your test set user guide.
 - DS3XM-6—If you are testing a DS-1 circuit on a DS3XM-6 card you must have a DSX-3 panel or a direct DS-3 interface to the ONS 15454. Set the test set for a muxed DS3. After you choose muxed DS-3, choose the DS-1 to test on the muxed DS-3. For information about configuring your test set, consult your test set user guide.
- Step 12** Verify the integrity of all patch cables that will be used in this test by connecting one end of the cable to the test set transmit (Tx) connector and the other end of the cable to the test set receive (Rx) connector. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly before continuing.
- Step 13** Create a physical loopback at the circuit destination card. To do so, attach one end of a patch cable to the destination port’s transmit (Tx) connector; attach the other end to the port’s receive (Rx) connector.
- Step 14** At the circuit source card:
- a. Connect the transmit (Tx) connector of the test set to the circuit receive (Rx) connector.
 - b. Connect the test set receive (Rx) connector to the circuit transmit (Tx) connector.
- Step 15** Verify that the test set shows a clean signal. If a clean signal does not appear, repeat Steps 8 through 14 to make sure the test set and cabling are configured correctly.
- Step 16** Inject global BIT errors from the test set. Verify that the errors appear at the test set, verifying a complete end-to-end circuit.
- Step 17** This step will lockout both of the spans on the node where you perform this task. Complete the “DLP-A254 TCC+/TCC2 Active/Standby Switch Test” task on page 6-9.
- Step 18** This step will lockout both of the spans on the node where you perform this task. Complete the “DLP-A255 Cross-Connect Card Side Switch Test” task on page 6-10.
- Step 19** Complete the “DLP-A91 BLSR Switch Test” task on page 6-25 to test the BLSR protection switching at Node 1.
- Step 20** Complete the “DLP-A93 Four-Fiber BLSR Span Switching Test” task on page 6-32 at Node 1.
- Step 21** Set up and complete a BER test on the test circuit between Node 1 and 2. Use the existing configuration and follow your site requirements for length of time. Record the test results and configuration.
- Step 22** Complete the “NTP-A152 Delete Circuits” procedure on page 11-20 for the test circuit.
- Step 23** At Node 2, repeat Steps 7 through 23, creating a test circuit between Node 2 and the node connected to the east OC-N trunk (span) card of Node 2 (Node 3). Work your way around the BLSR creating test circuits between every two consecutive nodes.
- Step 24** After you test the entire ring, remove any loopbacks and test sets from the nodes.

- Step 25** Click the **Alarms** tab. Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the alarm information.
- Step 26** Click the **Conditions** tab. Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the conditions information.
- Step 27** If a node fails any test, repeat the test while verifying correct setup and configuration. If the test fails again, refer to the next level of support.

After all tests are successfully completed and no alarms exist in the network, the network is ready for service application. Continue with Chapter 8, “Create Circuits and VT Tunnels.”

Stop. You have completed this procedure.

DLP-A92 Four-Fiber BLSR Exercise Span Test

Purpose	This task exercises a four-fiber BLSR span. Ring exercise conditions (including the K-byte pass-through) are reported and cleared within 10 to 15 seconds.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Click the **Provisioning > BLSR** tabs.
- Step 3** Click the BLSR you will exercise, then click **Edit**.
- Step 4** Exercise the west span:
- Right-click the west port of the four-fiber BLSR node that you want to exercise and choose **Set West Protection Operation**. (To move a graphic icon, press **Ctrl** while you drag and drop it to a new location.)



Note For four-fiber BLSRs, the squares on the network map represent ports. Right-click a working port.

- In the Set West Protection Operation dialog box, choose **EXERCISE SPAN** from the drop-down menu. Click **OK**.
 - In the Confirm BLSR Operation dialog box, click **Yes**.
On the network view graphic, an E appears on the BLSR channel where you invoked the exercise. The E will appear for 10-15 seconds, then disappear.
- Step 5** Click the **Conditions** tab, then click **Retrieve**.
- Step 6** Verify the following conditions:
- EXERCISING-SPAN**—An Exercise Ring Successful condition is reported on the node where the span was exercised.

- FE-EX-SPAN—A Far-End Exercise Span Request condition is reported against the East span of the node connected to the west side of the node where you exercised the span.
- KB-PASSTHR—If applicable, a K Byte Pass Though Active condition is reported.



Note Make sure the Filter button in the lower right corner of the window is off. Click the Node column to sort conditions by node.

Step 7 Click the **Alarms** tab.

- a. Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
- b. Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.

Step 8 Exercise the east span:

- a. Right-click the east port of the four-fiber BLSR node that you want to exercise and choose **Set East Protection Operation**.
- b. In the Set East Protection Operation dialog box, choose **EXERCISE SPAN** from the drop-down menu. Click **OK**.
- c. In the Confirm BLSR Operation dialog box, click **Yes**.

On the network view graphic, an E appears on the BLSR channel where you invoked the exercise. The E will appear for 10-15 seconds, then disappear.

Step 9 From the File menu, choose **Close**.

Step 10 Click the **Conditions** tab, then click **Retrieve**.

Step 11 Verify the following conditions:

- EXERCISING-SPAN—An Exercise Ring Successful condition is reported on the node where the span was exercised.
- FE-EX-SPAN—A Far-End Exercise Span Request condition is reported against the East span of the node connected to the west side of the node where you exercised the span.
- KB-PASSTHR—If applicable, a K Byte Pass Though Active condition is reported.



Note Make sure the Filter button in the lower right corner of the window is off. Click the Node column to sort conditions by node.


Step 12 Click the **Alarms** tab. Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.

Step 13 From the File menu choose **Close** to close the BLSR window.

Step 14 Return to your originating procedure (NTP).

DLP-A93 Four-Fiber BLSR Span Switching Test

Purpose	This task verifies that traffic will switch from working to protect fibers on a four-fiber BLSR span.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Click the **Provisioning > BLSR** tabs.
- Step 3** Click **Edit**. A BLSR window appears containing a graphic of the BLSR.
- Step 4** If the node icons are stacked on the BLSR graphic, press **Ctrl** while you drag and drop each one to a new location so you can see the BLSR port information clearly.
- Step 5** Switch the west span:
- Right-click the west port of the four-fiber BLSR node that you want to exercise and choose **Set West Protection Operation**. Figure 6-4 on page 6-24 shows an example.
-  **Note** For four-fiber BLSRs, the squares on the network map represent ports. Right-click a working port.
- In the Set West Protection Operation dialog box, choose **FORCE SPAN** from the drop-down menu. Click **OK**.
 - Click **Yes** in the two Confirm BLSR Operation dialog boxes that appear.
- On the network view graphic, an F appears on the BLSR channel where you invoked the protection switch. The BLSR span lines turn purple where the Force Span switch was invoked, and all span lines between other BLSR nodes turn green.
- Step 6** Click the **Conditions** tab, then click **Retrieve**.
- Step 7** Verify that a SPAN-SW-WEST (Span Switch West) condition is reported on the node where you invoked the Force Span switch, and a SPAN-SW-EAST (Span Switch East) condition is reported on the node connected to the west line of the node where you performed the switch. Make sure the Filter button in the lower right corner of window is off. Click the Node column to sort conditions by node.
- Step 8** Click the **Alarms** tab.
- Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 9** Display the BLSR window where you invoked the Force Span switch (the window may be hidden by the CTC window).

- Step 10** Clear the west switch:
- Right-click the west port of the BLSR node where you invoked the Force Span switch and choose **Set West Protection Operation**.
 - In the Set West Protection Operation dialog box, choose **CLEAR** from the drop-down menu. Click **OK**.
 - Click **Yes** in the Confirm BLSR Operation dialog box.
On the network view graphic, the Force Span switch is removed, the F disappears, and the span lines between BLSR nodes will be purple and green. The span lines may take a few moments to change color.
- Step 11** Switch the east span:
- Right-click the east port of BLSR node and choose **Set East Protection Operation**.
 - In the Set East Protection Operation dialog box, choose **FORCE SPAN** from the drop-down menu. Click **OK**.
 - Click **Yes** in the two Confirm BLSR Operation dialog boxes that appear.
On the network view graphic, an F appears on the BLSR channel where you invoked the Force Span switch. The BLSR span lines are purple where the Force Span switch was invoked, and all span lines between other BLSR nodes are green. The span lines may take a few moments to change color.
- Step 12** Click the **Conditions** tab, then click **Retrieve**.
- Step 13** Verify that a SPAN-SW-EAST (Span Switch East) condition is reported on the node where you invoked the Force Span switch, and a SPAN-SW-WEST (Span Switch West) condition is reported on the node connected to the west line of the node where you performed the switch. Make sure the **Filter** button in the lower right corner of window is off. Click the Node column to sort conditions by node.
- Step 14** Click the **Alarms** tab. Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 15** Display the BLSR window where you invoked the Force Span switch (the window may be hidden by the CTC window).
- Step 16** Clear the east switch:
- Right-click the east port of the BLSR node where you invoked the Force Span switch and choose **Set East Protection Operation**.
 - In the Set East Protection Operation dialog box, choose **CLEAR** from the drop-down menu. Click **OK**.
 - Click **Yes** in the Confirm BLSR Operation dialog box.
On the network view graphic, the Force Span switch is removed, the F indicating the switch is removed, and the span lines between BLSR nodes will be purple and green. The span lines may take a few moments to change color.
- Step 17** From the File menu, choose **Close** to close the BLSR window.
- Step 18** Return to your originating procedure (NTP).
-

NTP-A44 Provision Path Protection Nodes


Purpose	This procedure provisions nodes for inclusion in a path protection.
Tools/Equipment	None
Prerequisite Procedures	NTP-A35 Verify Node Turn Up, page 6-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher


Note

Path Protection is the default ONS 15454 topology. It is available as soon as you install the path protection OC-N cards, connect the OC-N fibers, and create the DCC terminations. Unlike the BLSRs, ONS 15454 path protection configurations do not require explicit set up.

- Step 1** Verify that the fiber is correctly connected to the path protection trunk (span) OC-N cards similar to Figure 6-5.

Figure 6-5 Path Protection Fiber Connection Example

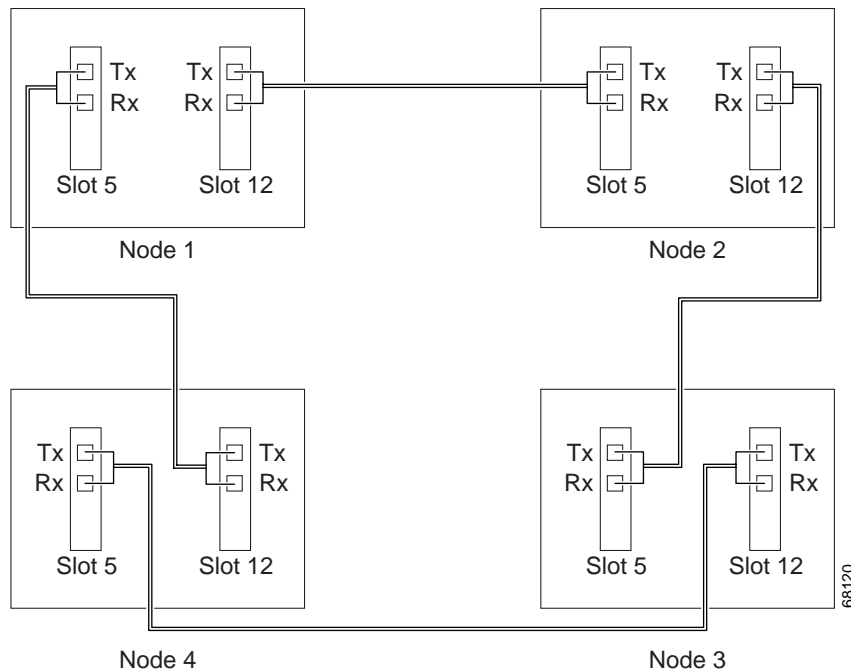

- Step 2** Log into an ONS 15454 in the path protection you are turning up. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 3.
- Step 3** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 for the two cards/ports that will serve as the path protection ports on the node, for example, Slot 5 (OC-48)/Node 1 and Slot 12 (OC-48)/Node 1.



Note If an ONS 15454 is not connected to a corporate LAN, DCC provisioning must be performed through a direct (craft) connection. Remote provisioning is possible only after all nodes in the network have DCC terminations provisioned to in-service OC-N ports.

- Step 4** Repeat Steps 2 and 3 for each node in the path protection.
- Step 5** Complete the “NTP-A177 Path Protection Acceptance Test” procedure on page 6-35.
- Stop. You have completed this procedure.**

NTP-A177 Path Protection Acceptance Test

Purpose	This procedure tests a path protection.
Tools/Equipment	Test set and cables appropriate to the test circuit you will create.
Prerequisite Procedures	NTP-A44 Provision Path Protection Nodes, page 6-34
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution This procedure might be service affecting if performed on a node carrying traffic.

- Step 1** Log into one of the ONS 15454s on the path protection you are testing. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. The node (default) view appears.
- Step 2** From the View menu, choose **Go to Network View**.
- Step 3** Click the **Alarms** tab.
- Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 4** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the alarm information.
- Step 5** Click the **Conditions** tab. Verify that no unexplained conditions appear on the network. If unexplained conditions appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 6** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the conditions information.
- Step 7** On the network map, double-click the node that you logged into in Step 1.
- Step 8** Create a test circuit from that node to the next adjacent path protection node.
- For DS-1 circuits, complete the “NTP-A181 Create an Automatically Routed DS-1 Circuit” procedure on page 8-6. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.

- For DS-3 circuits, complete the “NTP-A184 Create an Automatically Routed DS-3 Circuit” procedure on page 8-20. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
- Step 9** Configure the test set for the test circuit type you created:
- DS-1—If you are testing an unmuxed DS-1, you must have a DSX-1 panel or a direct DS-1 interface into the ONS 15454. Set the test set for DS-1. For information about configuring your test set, consult your test set user guide.
 - DS-3—If you are testing a clear channel DS-3, you must have a DSX-3 panel or a direct DS-3 interface into the ONS 15454. Set the test set for clear channel DS-3. For information about configuring your test set, consult your test set user guide.
 - DS3XM-6—If you are testing a DS-1 circuit on a DS3XM-6 card you must have a DSX-3 panel or a direct DS-3 interface to the ONS 15454. Set the test set for a muxed DS3. After you choose muxed DS-3, choose the DS-1 to test on the muxed DS-3. For information about configuring your test set, consult your test set user guide.
- Step 10** Verify the integrity of all patch cables that will be used in this test by connecting one end to the test set transmit (Tx) connector and the other end to the test set receive (Rx) connector. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly before continuing.
- Step 11** Create a physical loopback at the circuit destination card:
- a. Attach one end of a patch cable to the destination port’s transmit (Tx) connector.
 - b. Attach the other end to the port’s receive (Rx) connector.
- Step 12** At the circuit source card:
- a. Connect the transmit (Tx) connector of the test set to the circuit receive (Rx) connector.
 - b. Connect the test set receive (Rx) connector to the circuit transmit (Tx) connector.
- Step 13** Verify that the test set has a clean signal. If a clean signal does not appear, repeat Steps 1 through 10 to make sure the test set and cabling are configured correctly.
- Step 14** Inject BIT errors from the test set. To verify that you have a complete end-to-end circuit, verify that the errors appear at the test set.
- Step 15** Complete the “DLP-A254 TCC+/TCC2 Active/Standby Switch Test” task on page 6-9.
- Step 16** Complete the “DLP-A255 Cross-Connect Card Side Switch Test” task on page 6-10.
- Although a service interruption under 60 ms may occur, the test circuit should continue to work before, during, and after the switches. If the circuit stops working, do not continue. Contact your next level of support.
- Step 17** From the View menu, choose **Go to Network View**.
- Step 18** Click one of the two spans leaving the circuit source node.
- Step 19** Test the path protection protection switching function on this span. Go to the “DLP-A94 Path Protection Protection Switching Test” task on page 6-37 for instructions.
- Although a service interruption under 60 ms may occur, the test circuit should continue to work before, during, and after the switches. If the circuit stops working, do not continue. Contact your next level of support.
- Step 20** In network view, click the other circuit source span and repeat Step 19.
- Step 21** Set up and complete a BER Test. Use the existing configuration and follow your site requirements for the length of time. Record the test results and configuration.

- Step 22** Complete the “NTP-A152 Delete Circuits” procedure on page 11-20 for the test circuit.
- Step 23** Remove any loopbacks, switches, or test sets from the nodes after all testing is complete.
- Step 24** Click the **Alarms** tab. Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the alarm information.
- Step 25** Click the **Conditions** tab. Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the conditions information.
- Step 26** Repeat Steps 8 through 22 for each node on the network.
- Step 27** If a node fails any test, repeat the test while verifying correct setup and configuration. If the test fails again, refer to the next level of support.

After all tests are successfully completed and no alarms exist in the network, the network is ready for service application. Continue with Chapter 8, “Create Circuits and VT Tunnels.”

Stop. You have completed this procedure.

DLP-A94 Path Protection Protection Switching Test

Purpose	This task verifies that a path protection span is switching correctly.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** From the View menu, choose **Go to the Network View**.
- Step 2** Right-click a network span and choose **Circuits**.
The Circuits on Span dialog box shows the path protection circuits, including circuit names, locations, and a color code showing which circuits are active on the span.
- Step 3** Click the **Perform Path Protection span switching** field and choose **FORCE SWITCH AWAY** from the drop-down menu. Click **Apply**.
- Step 4** In the Confirm Path Protection Switch dialog box, click **Yes**.
- Step 5** In the Protection Switch Result dialog box, click **OK**.
In the Circuits on Span dialog box, the Switch State for all circuits is Force. Unprotected circuits will not switch.
- Step 6** Click the **Perform Path Protection span switching** field and choose **CLEAR** from the drop-down menu. Click **Apply**. Click **Yes** to confirm.
- Step 7** In the Confirm Path Protection Switch dialog box, click **Yes**.
- Step 8** In the Protection Switch Result dialog box, click **OK**.
In the Circuits on Span window, the Switch State for all Path Protection circuits is CLEAR.
- Step 9** Return to your originating procedure (NTP).
-

NTP-A216 Provision a Traditional Path Protection Dual Ring Interconnect

Purpose	This procedure provisions path protection configurations in a traditional dual ring interconnect (DRI) topology. DRIs interconnect two or more path protection configurations to provide an additional level of protection.
Tools/Equipment	None
Prerequisite Procedures	NTP-A35 Verify Node Turn Up, page 6-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.

Step 2 Complete the following steps if you have not provisioned the path protection configurations that you will interconnect in a path protection DRI. If the path protection configurations are created, go to Step 3.

- a. Complete the “NTP-A44 Provision Path Protection Nodes” procedure on page 6-34 to provision the path protection configurations.
- b. Complete the “NTP-A177 Path Protection Acceptance Test” procedure on page 6-35 to test the path protection configurations.




Note All path protection configurations that will be interconnected must be at the same OC-N rate.

Step 3 Verify that the path protection DRI interconnect nodes have OC-N cards installed and have fiber connections to the other interconnect node:

- The OC-N cards that will connect the path protection configurations must be installed at the interconnect nodes. The OC-N cards in the path protection nodes and the interconnect nodes must be the same type.
- The interconnect nodes must have fiber connections. An example is shown in Figure 6-6. This example shows a path protection DRI with two rings, Nodes 1 through 4 and 5 through 8. In the example, an additional OC-N is installed in Slot 13 at Node 4 and connected to an OC-N in Slot 6 at Node 6. Nodes 3 and 5 are interconnected with OC-N cards in Slot 6 (Node 3) and Slot 13 (Node 5).

Figure 6-6 Traditional Path Protection DRI Fiber Connection Example

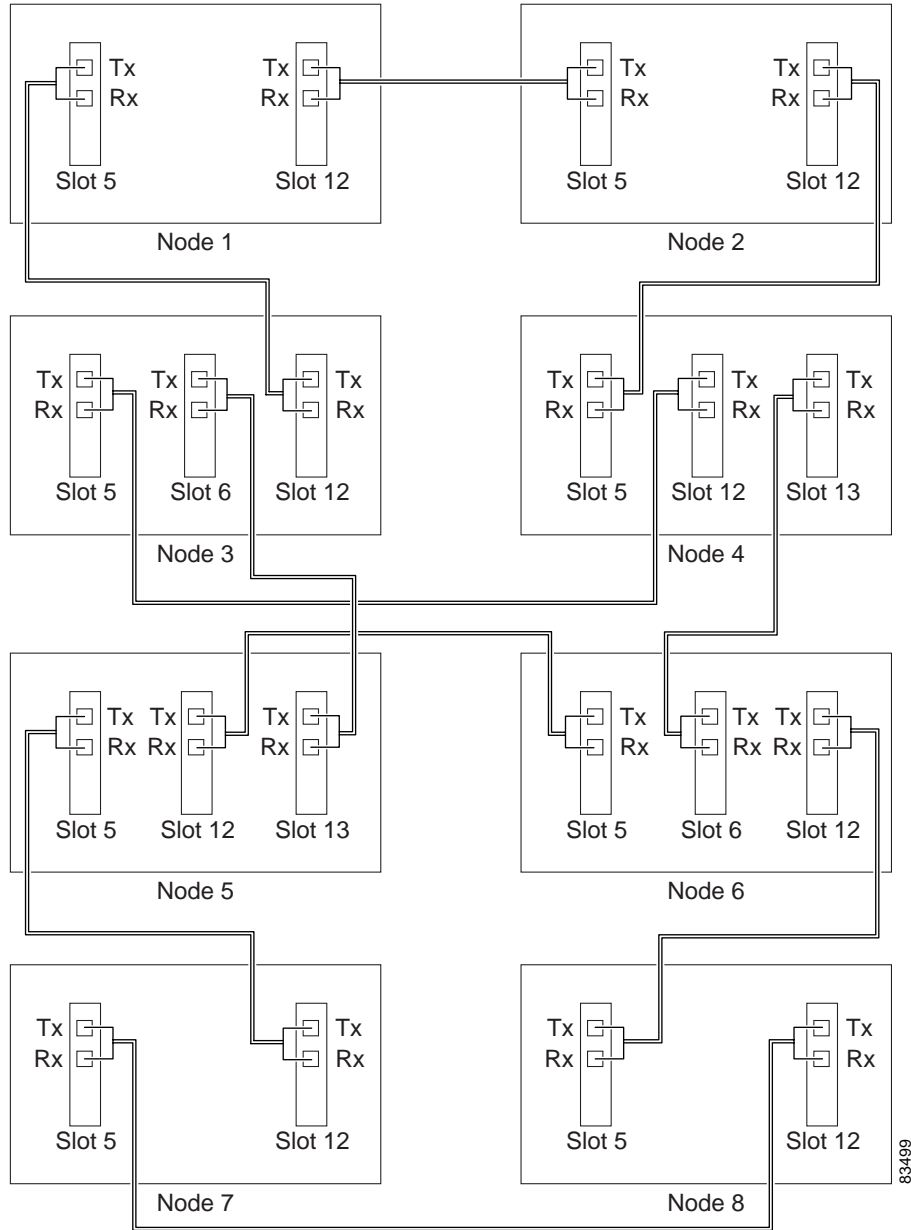

Note To route circuits on the DRI, you must check the Dual Ring Interconnect check box during circuit creation.

Stop. You have completed this procedure.

NTP-A217 Provision an Integrated Path Protection Dual Ring Interconnect

Purpose	This procedure provisions path protection configurations in an integrated dual ring interconnect (DRI) topology.
Tools/Equipment	None
Prerequisite Procedures	NTP-A35 Verify Node Turn Up, page 6-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher


-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at a node in the path protection DRI network. If you are already logged in, continue with Step 2.
- Step 2** Complete the following steps if you have not provisioned the path protection configurations that you will interconnect in a path protection DRI. If the path protection configurations are created, continue with Step 3.
- Complete the “NTP-A44 Provision Path Protection Nodes” procedure on page 6-34 to provision the path protection configurations.
 - Complete the “NTP-A177 Path Protection Acceptance Test” procedure on page 6-35 to test the path protection configurations.



Note All path protection configurations that will be interconnected must have the same OC-N rate.

- Step 3** Verify that the path protection DRI interconnect nodes have OC-N cards installed and have fiber connections to the other interconnect node:
- The OC-N cards that will connect the path protection configurations must be installed at the interconnect nodes. The OC-N cards in the path protection nodes and the interconnect nodes must be the same type.
 - The interconnect nodes must have the correct fiber connections. An example is shown in Figure 6-7. This example shows a path protection DRI with two rings, Nodes 1 to 4 and 5 to 8. In the example, an additional OC-N is installed in Slot 13 at Node 4 and connected to an OC-N in Slot 6 at Node 6. Nodes 3 and 5 are interconnected with OC-N cards in Slot 6 (Node 3) and Slot 13 (Node 5).

Figure 6-7 Integrated Path Protection DRI Example

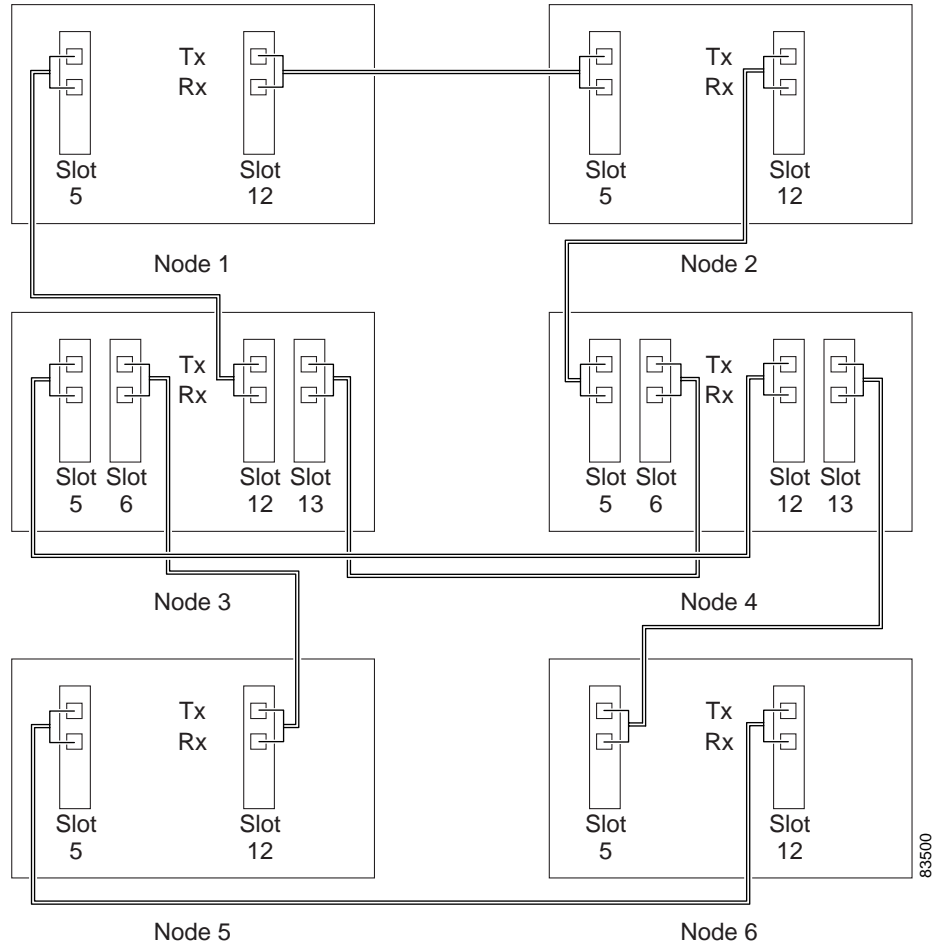


Stop. You have completed this procedure.

NTP-A224 Provision an Open-Ended Path Protection

Purpose	This procedure provisions ONS 15454s in an open-ended path protection connected to a third party vendor network. This topology allows you to route a circuit from one ONS 15454 network to another ONS 15454 network through the third party network.
Tools/Equipment	None
Prerequisite Procedures	NTP-A35 Verify Node Turn Up, page 6-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** Verify that the fiber is correctly connected to the path protection trunk (span) OC-N cards at each open-ended path protection node. Figure 6-8 shows an example. Node 1 is connected to ONS 15454 Nodes 2 and 3 through Slots 12 and 5. Trunk cards at Nodes 2 and 3 are connected to the third party vendor equipment.

Figure 6-8 ONS 15454 Open-Ended Path Protection Configurations Fiber Connection Example

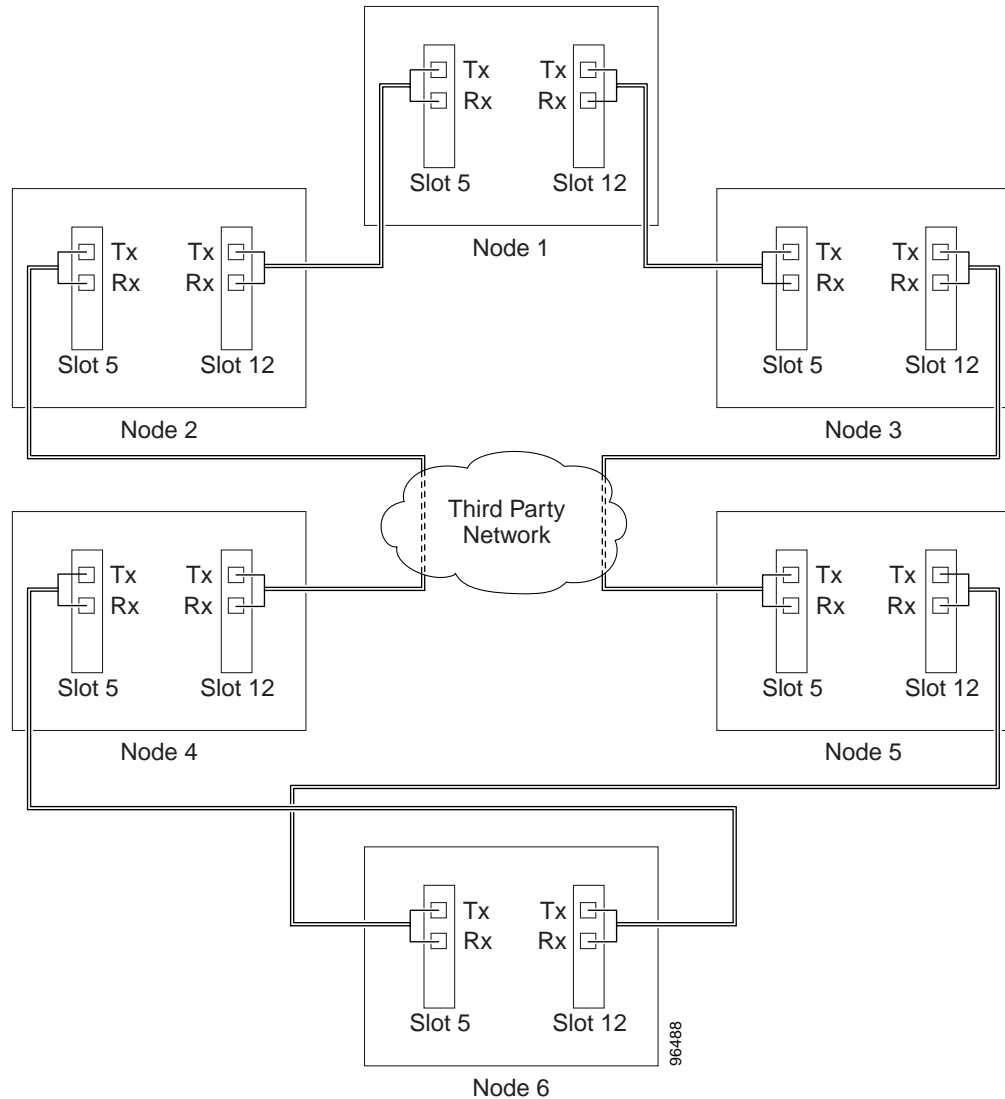

- Step 2** Verify that the third party cards or units to which the ONS 15454 trunk cards are connected are the same OC-N rate as the ONS 15454 trunk cards. The third party time slots must match the ONS 15454 card time slots to which they are connected. For example, if your trunk card is an OC-48, the third party vendor card or unit must have STSs 1-48 available.
- Step 3** Log into an ONS 15454 in the path protection you are turning up. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 4.
- Step 4** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 for the ONS 15454 cards/ports that are connected to another ONS 15454. Do not create a DCC termination for the card/port that connects to the third-party equipment. For example in Figure 6-8, DCC terminations are created at the following cards/ports:
- Nodes 1 and 6—Slot 5 and Slot 12
 - Node 2 and 5—Slot 12
 - Node 3 and 4—Slot 5



Note If an ONS 15454 is not connected to a corporate LAN, DCC provisioning must be performed through a direct (craft) connection. Remote provisioning is possible only after all nodes in the network have DCC terminations provisioned to in-service OC-N ports.

- Step 5** Repeat Steps 2 through 4 for each node in the path protection.
- Step 6** Following the documentation provided by the third party vendor, provision the optical loop leading from the ONS 15454 connection at one end to the connection at the other end. In other words, you will create an open-ended path protection using procedures for the third party equipment.
- Step 7** Complete the “NTP-A177 Path Protection Acceptance Test” procedure on page 6-35.
- Stop. You have completed this procedure.**

NTP-A225 Open-Ended Path Protection Acceptance Test

Purpose	This procedure tests an open-ended path protection.
Tools/Equipment	Test set and cables appropriate to the test circuit you will create.
Prerequisite Procedures	NTP-A224 Provision an Open-Ended Path Protection, page 6-42
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution This procedure might be service affecting if performed on a node carrying traffic.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node that will be the source node for traffic traversing the third party network. See the for instructions. If you are already logged in, continue with Step 2.
- Step 2** From the View menu, choose **Go to Network View**.
- Step 3** Click the **Alarms** tab.
- Verify that the alarm filter is not on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms appear on the network. If unexplained alarms appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 4** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the alarm information.
- Step 5** Click the **Conditions** tab. Verify that no unexplained conditions appear on the network. If unexplained conditions appear, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 6** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the conditions information.
- Step 7** On the network map, double-click the node that you logged into in Step 1.

- Step 8** Create a test circuit from that node to the OC-N trunk (span) cards on the nodes that connect to the third party network. For example, in Figure 6-8 on page 6-43, a circuit is created from Node 1 to the Slot 5 OC-N card at Node 2, and a secondary circuit destination is created on the Slot 12 OC-N card at Node 3. For circuit creation procedures, complete one of the following:
- For DS-1 circuits, complete the “NTP-A181 Create an Automatically Routed DS-1 Circuit” procedure on page 8-6. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
 - For DS-3 circuits, complete the “NTP-A184 Create an Automatically Routed DS-3 Circuit” procedure on page 8-20. When you set the circuit state, choose **IS** and check the **Apply to drop ports** check box.
- Step 9** Create a circuit within the third-party network from ONS 15454 connection ports to the second set of ONS 15454 connection ports on both path protection spans. Refer to the third-party equipment documentation for circuit creation procedures.
- Step 10** Repeat Step 8 to create a second circuit at the terminating node on the other side of the third-party network. In Figure 6-8, this is Node 6. However, this circuit will have two sources, one at Node 4/Slot 12, and one at Node 5/Slot 5. The destination will be a drop card on Node 6.
- Step 11** Configure the test set for the test circuit type you created:
- DS-1—If you are testing an unmuxed DS-1, you must have a DSX-1 panel or a direct DS-1 interface into the ONS 15454. Set the test set for DS-1. For information about configuring your test set, consult your test set user guide.
 - DS-3—If you are testing a clear channel DS-3, you must have a DSX-3 panel or a direct DS-3 interface into the ONS 15454. Set the test set for clear channel DS-3. For information about configuring your test set, consult your test set user guide.
 - DS3XM-6—If you are testing a DS-1 circuit on a DS3XM-6 card you must have a DSX-3 panel or a direct DS-3 interface to the ONS 15454. Set the test set for a muxed DS3. After you choose muxed DS-3, choose the DS-1 to test on the muxed DS-3. For information about configuring your test set, consult your test set user guide.
- Step 12** Verify the integrity of all patch cables that will be used in this test by connecting one end to the test set transmit (Tx) connector and the other end to the test set receive (Rx) connector. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly before continuing.
- Step 13** Create a physical loopback at the circuit destination card:
- a. Attach one end of a patch cable to the destination port’s transmit (Tx) connector.
 - b. Attach the other end to the port’s receive (Rx) connector.
- Step 14** At the circuit source card:
- a. Connect the transmit (Tx) connector of the test set to the circuit receive (Rx) connector.
 - b. Connect the test set receive (Rx) connector to the circuit transmit (Tx) connector.
- Step 15** Verify that the test set shows a clean signal. If a clean signal does not appear, repeat Steps 1 through 10 to make sure the test set and cabling are configured correctly.
- Step 16** Inject BIT errors from the test set. To verify that you have a complete end-to-end circuit, verify that the errors appear at the test set.
- Step 17** Complete the “DLP-A254 TCC+/TCC2 Active/Standby Switch Test” task on page 6-9.
- Step 18** Complete the “DLP-A255 Cross-Connect Card Side Switch Test” task on page 6-10.

Although a service interruption under 60 ms may occur, the test circuit should continue to work before, during, and after the switches. If the circuit stops working, do not continue. Contact your next level of support.

- Step 19** From the View menu, choose **Go to Network View**.
- Step 20** Click one of the two spans leaving the circuit source node.
- Step 21** Test the path protection protection switching function on this span. Go to the “DLP-A94 Path Protection Protection Switching Test” task on page 6-37 for instructions.
- Although a service interruption under 60 ms may occur, the test circuit should continue to work before, during, and after the switches. If the circuit stops working, do not continue. Contact your next level of support.
- Step 22** In network view, click the other circuit source span and repeat Step 21.
- Step 23** Set up and complete a BER Test. Use the existing configuration and follow your site requirements for the length of time. Record the test results and configuration.
- Step 24** Complete the “NTP-A152 Delete Circuits” procedure on page 11-20 for the test circuit.
- Step 25** Remove any loopbacks, switches, or test sets from the nodes after all testing is complete.
- Step 26** Click the **Alarms** tab. Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the alarm information.
- Step 27** Click the **Conditions** tab. Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the conditions information.
- Step 28** Repeat Steps 8 through 27 for each node that will be sources and destinations for circuits traversing the third party network.
- Step 29** If a node fails any test, repeat the test while verifying correct setup and configuration. If the test fails again, refer to the next level of support.

After all tests are successfully completed and no alarms exist in the network, the network is ready for service application. Continue with Chapter 8, “Create Circuits and VT Tunnels.”

Stop. You have completed this procedure.


NTP-A46 Subtend a Path Protection from a BLSR

Purpose	This procedure subtends a path protection from an existing BLSR.
Tools/Equipment	One BLSR node must have OC-N cards and fibers to carry the path protection.
Prerequisite Procedures	NTP-A175 Two-Fiber BLSR Acceptance Test, page 6-21 or NTP-A176 Four-Fiber BLSR Acceptance Test, page 6-28
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** In the node that will subtend the path protection (Node 3 in Figure 6-9), install the two (east/west) OC-N cards that will serve as the path protection trunk (span) cards (Node 3, Slots 6 and 13). See the “NTP-A16 Install the OC-N Cards” procedure on page 2-13. If they are already installed, go to Step 2.

- Step 2** Attach fibers from these cards to the path protection trunk cards on the neighbor path protection node or nodes. In Figure 6-9, Node 3/Slot 6 connects to Node 4/Slot 13, and Node 3/Slot 13 connects to Node 4/Slot 6.

Figure 6-9 Path Protection Subtended from a BLSR

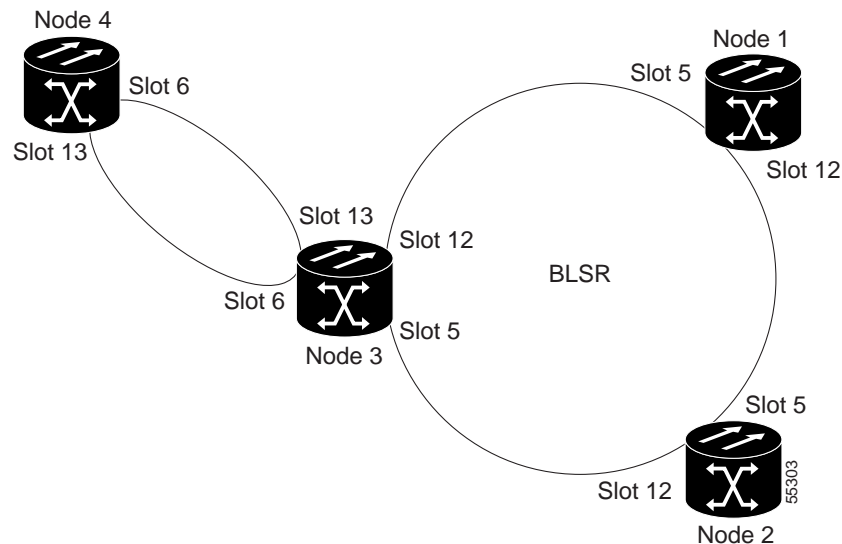

- Step 3** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the ONS 15454 that will subtend the path protection (Node 3 in the example).
- Step 4** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 for each OC-N card that will carry the path protection.
- Step 5** Log into a path protection node that connects to the node in Step 3. (In Figure 6-9, Node 4 is the only other node in the path protection.)
- Step 6** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 for each OC-N card that will carry the path protection.
- Step 7** Repeat Step 6 for each node in the path protection.
- Step 8** From the View menu, choose **Go To Network View**.
- Step 9** Complete the “NTP-A177 Path Protection Acceptance Test” procedure on page 6-35.

Stop. You have completed this procedure.

NTP-A47 Subtend a BLSR from a Path Protection

Purpose	This procedure subtends a BLSR from an existing path protection.
Tools/Equipment	One path protection node must have OC-N cards and fibers to carry the BLSR
Prerequisite Procedures	NTP-A177 Path Protection Acceptance Test, page 6-35
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** In the path protection node that will subtend the BLSR, install the two (east and west) OC-N cards that will serve as the BLSR trunk (span) cards (in Figure 6-9 on page 6-47, Node 3, Slots 5 and 12). See the “NTP-A16 Install the OC-N Cards” procedure on page 2-13.
- Step 2** Attach fibers from the cards in Step 1 to the BLSR trunk cards on another BLSR node or nodes. In Figure 6-9, Slot 5/Node 3 connects to Slot 12/Node 2, and Slot 12/Node 3 connects to Slot 5/Node 1.
- Step 3** Log into the ONS 15454 that will subtend the BLSR (the node in Step 1). See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 4.
- Step 4** Create the DCCs on both OC-N trunk cards (east and west) that will carry the BLSR. See the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 for instructions.
- Step 5** Create the subtending BLSR:
- Complete the “NTP-A40 Provision BLSR Nodes” procedure on page 6-15 for each node that will be in the BLSR. If you have already provisioned the BLSR, perform this procedure for the subtending node only.
 - Complete the “NTP-A126 Create a BLSR” procedure on page 6-17. Include the node in Step 3 (the node that will subtend the BLSR) in the BLSR.
- Step 6** From the View menu, choose **Go to the Network View** to see the subtending ring.

Stop. You have completed this procedure.

NTP-A48 Subtend a BLSR from a BLSR

Purpose	This procedure subtends a BLSR from an existing BLSR.
Tools/Equipment	One BLSR node must have OC-N cards and fibers needed to carry the second BLSR.
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher




Note

This procedure assumes that all nodes are configured for the BLSR. If you need to add a node to a BLSR, see the “NTP-A212 Add a BLSR Node” procedure on page 16-1.

- Step 1** Log into the node that will subtenant the BLSR (Node 4 in Figure 6-10). See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.
- Step 2** Install the OC-N cards that will serve as the BLSR trunk (span) cards if they are not already installed. See the “NTP-A16 Install the OC-N Cards” procedure on page 2-13.

Figure 6-10 shows two BLSRs shared by one ONS 15454. Ring 1 runs on Nodes 1, 2, 3, and 4. Ring 2 runs on Nodes 4, 5, 6, and 7 and represents the subtending ring added by this procedure. Two BLSR rings, Ring 1 and Ring 2, are provisioned on Node 4. Ring 1 uses cards in Slots 5 and 12, and Ring 2 uses cards in Slots 6 and 13.


Figure 6-10 BLSR Subtended from a BLSR

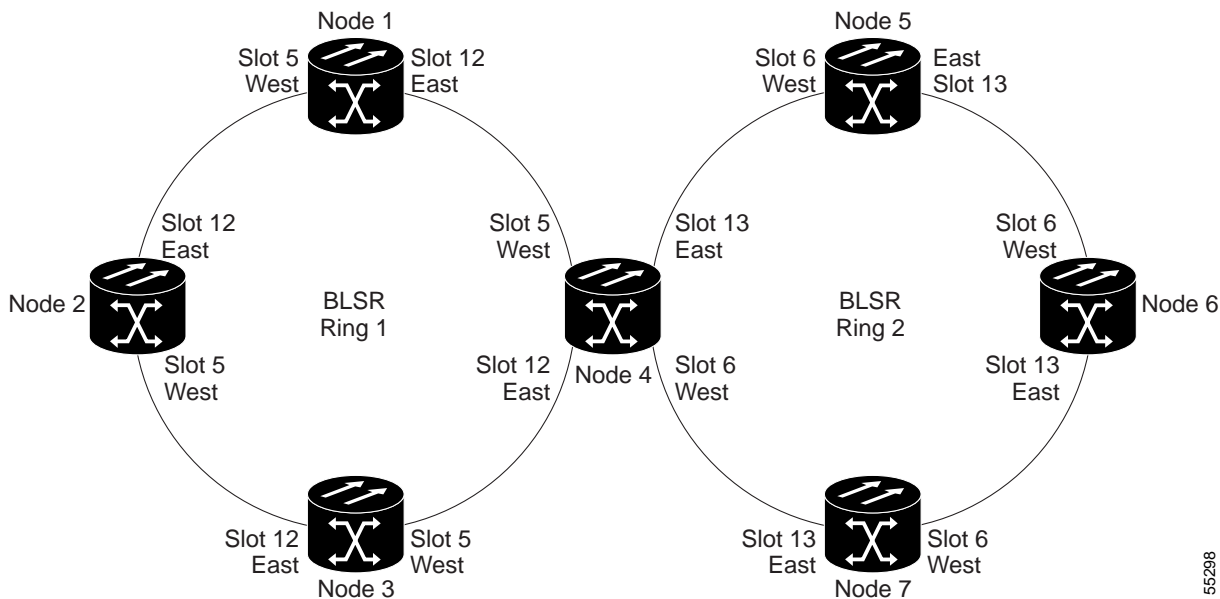

- Step 3** Attach fibers from the trunk cards in the subtending node to the BLSR trunk cards on its two neighboring BLSR nodes. In Figure 6-10, Node 4/Slot 6 connects to Node 7/Slot 13, and Node 4/Slot 13 connects to Node 5/Slot 6.
- Step 4** Create the DCCs on the first OC-N card that will carry the BLSR. See the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 for instructions.
- Step 5** Repeat Step 4 for the second OC-N trunk card that will carry the BLSR.
- Step 6** Complete the “NTP-A40 Provision BLSR Nodes” procedure on page 6-15 for each node that will be in the BLSR. If you have already provisioned the BLSR, perform this procedure for the subtending node only.
- Step 7** If the subtending BLSR is not already created, complete the “NTP-A126 Create a BLSR” procedure on page 6-17 to provision the new BLSR. The subtending BLSR must have a ring ID that differs from the ring ID of the first BLSR. The subtending node can have one Node ID that is used in both BLSRs, or a different Node ID for each BLSR. For example, the same node can be Node 4 in BLSR 1 and Node 2 in BLSR 2.
- Step 8** Display the network view to see the subtending ring.

Figure 6-11 shows an example of two subtending BLSRs.

Figure 6-11 Subtended BLSRs on the Network Map

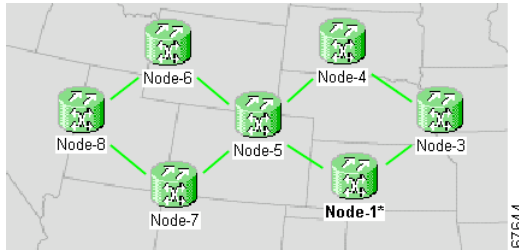

Step 9 Complete the “NTP-A175 Two-Fiber BLSR Acceptance Test” procedure on page 6-21 or the “NTP-A176 Four-Fiber BLSR Acceptance Test” procedure on page 6-28 depending on the type of BLSR.

Stop. You have completed this procedure.



Turn Up DWDM Network

This chapter explains how to turn up and test Cisco ONS 15454 dense wave division multiplexing (DWDM) network. For DWDM topology reference information, refer to the *Cisco ONS 15454 Reference Guide*.



Note

The procedures and tasks in this chapter apply to DWDM (Software Release 4.5) nodes only.

There are two main DWDM network types, metro core, where the channel power is equalized and dispersion compensation is applied, and metro access, where the channels are not equalized and dispersion compensation is not applied. The DWDM network topologies supported are: hubbed rings, multihubbed rings, meshed rings, linear configurations, and single-span links.

Before You Begin

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A232 Verify DWDM Node Turn Up, page 7-2—Complete this procedure before beginning network turn up.
2. NTP-A233 Provision a DWDM Ring, Linear Configuration, or Single-Span Link, page 7-3—Complete as needed.

NTP-A232 Verify DWDM Node Turn Up

Purpose	Use this procedure to verify that each ONS 15454 is ready for DWDM network turn up before adding nodes to a network.
Tools/Equipment	None
Prerequisite Procedures	Chapter 5, “Turn Up a DWDM Node”
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** Log into an ONS 15454 on the network that you will test. See the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, proceed to Step 2.
- Step 2** Verify DWDM node provisioning. See the “NTP-A222 Provision the DWDM Node” procedure on page 5-3.
- Step 3** Verify node cabling. See the “NTP-A244 Install Fiber-Optic Cables on DWDM Cards” procedure on page 2-42.
- Step 4** Click the **Alarms** tab.
- a. Verify that no unexplained alarms are displayed. If alarms are displayed, investigate and resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for procedures.
 - b. Verify that the alarm filter is not turned on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
- Step 5** Verify that the SW Version displayed in the node view status area matches the software version shown in your site plan. If the software is not the correct version, install the correct version from the ONS 15454 software CD.
- Step 6** Click the **Provisioning > General** tabs. Verify that all general node information settings match the settings of your site plan. If not, see the “NTP-A81 Change Node Management Information” procedure on page 12-2.
- Step 7** Click the **Provisioning > Timing** tabs. Verify that timing settings match the settings of your site plan. If not, see the “NTP-A85 Change Node Timing” procedure on page 12-23.
- Step 8** Click the **Provisioning > Network** tabs. Ensure that the IP settings and other CTC network access information is correct. If not, see the “NTP-A201 Change CTC Network Access” procedure on page 12-4.
- Step 9** Click the **Provisioning > Protection** tabs. Verify that all protection groups have been created according to your site plan. If not, see the “NTP-A203 Modify or Delete Card Protection Settings” procedure on page 12-16.
- Step 10** Click the **Provisioning > Security** tabs. Verify that all users have been created and that their security levels match the settings indicated by your site plan. If not, see the “NTP-A205 Modify Users and Change Security” procedure on page 12-26.
- Step 11** If Simple Network Management Protocol (SNMP) is provisioned on the node, click the **Provisioning > SNMP** tabs. Verify that all SNMP settings match the settings of your site plan. If not, see the “NTP-A87 Change SNMP Settings” procedure on page 12-32.

Step 12 Provision the network using the “NTP-A233 Provision a DWDM Ring, Linear Configuration, or Single-Span Link” procedure on page 7-3.

Stop. You have completed this procedure.

NTP-A233 Provision a DWDM Ring, Linear Configuration, or Single-Span Link

Purpose	Use this procedure to provision a DWDM ring, a linear configuration, or a single-span link. For more information about DWDM topologies, refer to the <i>Cisco ONS 15454 Reference Manual</i> .
Tools/Equipment	Optical power meter or spectrum analyzer
Prerequisite Procedures	NTP-A232 Verify DWDM Node Turn Up, page 7-2
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** Log into an ONS 15454 on the network where you want to provision a DWDM ring. See the “DLP-A60 Log into CTC” task on page 3-26.
- Step 2** Complete the “DLP-A240 Provision OSC Terminations” task on page 7-5.
- Step 3** Complete the “DLP-A491 Provision the Ring ID” task on page 7-6.
- Step 4** Complete the “DLP-A492 Check Span Attenuation” task on page 7-6.
- Step 5** Complete the “DLP-A493 Create a Test OCHNC” task on page 7-8.
- Step 6** Verify that the amplifiers are turned on. After detecting input power, if the optical safety remote interlock (OSRI) command is disabled, the amplifiers at both ends of the span automatically switch on.
- From node view, choose **Provisioning > WDM-ANS > Port Status**.
 - Find the amplifier row and verify that the Link Status column says Regulated.



Note The OPT-BST switches on only if an optical service channel (OSC) link is detected as closed for more than three seconds.

- To verify that OSRI is off, go to the OPT-BST amplifier card view and choose **Maintenance > ALS**. In the ALS Command drop-down menu choose **OSRI Off** and click **Apply**.

- Step 7** Verify that the amplifiers have switched to constant gain mode. The amplifiers automatically calculate their gain and then they switch to Constant Gain Mode.
- Go to the OPT-BST amplifier card view.
 - Choose **Provisioning > Opt. Ampli. Line > Parameters**.
 - The Mode column should list Gain.



Note For the gain mode calculation to be accurate, only one channel must be present at the amplifier receive (Rx) port. After the mode switches from Control Power to Control Gain, the Automatic Power Control (APC) regulates the power.

- Step 8** Create the remaining channels according to your site plan. See the “NTP-A227 Provision a DWDM Optical Channel Network Connection” procedure on page 8-96.



Note The amplifiers automatically calculate the optical output power to maintain a constant power level on each channel every time a channel is created on the DWDM network. APC starts every 10 minutes. If the span length changes, APC modifies amplifier gains and express variable optical attenuation (VOA). For more information about APC, refer to the *Cisco ONS 15454 Reference Manual*.

- Step 9** Complete the “DLP-A494 Verify the Optical Receive Power” task on page 7-8.
- Step 10** Complete the “DLP-A490 Verify the OSNR” task on page 7-9.
- Step 11** Repeat the amplifier verification performed in Step 7. If needed, verify that the added channels are equalized within +/-1 dB at the monitor output port (MON Tx) of the OPT-BST amplifier or the OSC-CSM. See the “DLP-A494 Verify the Optical Receive Power” task on page 7-8.
- Step 12** Check the amplifier gain tilt. Tilt is monitored on the OPT-PRE MON port. The pass or fail values are provided by MetroPlanner. Set up all channel links and repeat the amplifier verification. See the “DLP-A490 Verify the OSNR” task on page 7-9.
- Step 13** (Optional) Create new channel links with pass-through connections. Pass-through channel connections can be provided between channel input and output ports for the AD-xC-xx.x, the 4MD-xx.x, the 32 MUX-O, and the 32 DMX-O. The user can set up pass-through connections in nodes that might require more add or drop channel capability or configuration. See the “DLP-A496 Convert a Pass-Through Connection to an Add/Drop Connection” task on page 7-10.
- Step 14** (Optional) Convert a pass-through connection to an add or drop connection. See the “DLP-A496 Convert a Pass-Through Connection to an Add/Drop Connection” task on page 7-10.
- Step 15** Go to network view and choose the next node to provision or log into the OADM node. Repeat this procedure for all the nodes in the network.
- Step 16** (Optional) The following verification steps might be needed for an intermediate node if a pass-through connection is created. The intermediate node is defined as a node or nodes between the source and destination in your channel:
- Verify that the added channels are at the specified power level. See the “DLP-A494 Verify the Optical Receive Power” task on page 7-8 for instructions.
 - Verify that the added channels are equalized with the express channels within 1dB.
 - If the channels are not equalized with the express channels within +/-1 dB, check the attenuation of the VOAs.

- Also check all the fiber adapters to minimize their insertion losses. See the “NTP-A112 Clean Fiber Connectors” procedure on page 17-21 for instructions.

Step 17 Perform the “DLP-A497 DWDM Node Acceptance Test” task on page 7-11.

Stop. You have completed this procedure.

DLP-A240 Provision OSC Terminations

Purpose	This task creates the DWDM OSC terminations required for network setup.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Display the node view.

Step 2 Click the **Provisioning > DCC/GCC/OSC** tabs.

Step 3 Click the **OSC** tab.

Step 4 In the OSC Terminations pane, click **Create**.

Step 5 In the Create OSC Terminations dialog box, click the ports where you want to create the OSC termination. To select more than one port, press the **Shift** key or the **Ctrl** key.



Note OSC on the DWDM node refers to the section data communications channel (DCC), which is used for ONS 15454 DCC terminations.

Step 6 Click **OK**. Ports are automatically placed in service. Until all network OSC terminations are created and the ports are in service, the following alarms might appear: EOC (SDCC Termination Failure) and power failure alarms on the OPT-BST or OSC-CSM, such as TRUE LOS alarms.

Step 7 Return to your originating procedure (NTP).

DLP-A491 Provision the Ring ID

Purpose	This task creates a DWDM ring ID.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, click the **Provisioning > DCC/GCC/OSC** tabs.
- Step 2** Click the **OSC** tab.
- Step 3** In the DWDM Ring ID area, click **Create**.
- Step 4** In the DWDM Ring ID dialog box, enter the following information:
- Ring ID—Enter the same ID for all nodes on the ring. Choose a number from 1 to 255.
 - West Line—Select a card from the drop-down menu. Selectable cards are OSCM or OSC-CSM. Slots 1 through 8 represent the west-side of the node.
 - East Line—Select a card from the drop-down menu. Selectable cards are OSCM or OSC-CSM. Slots 10 through 17 represent the east-side of the node.
 - Click **OK**.
- Step 5** Return to your originating procedure (NTP).
-


DLP-A492 Check Span Attenuation

Purpose	This task checks span attenuation between two DWDM nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** Make sure the OPT-BST is off by performing one of the following:
- Use the OSRI command in Cisco Transport Controller (CTC) or TL1. Go to the OPT-BST card view and choose **Maintenance**. In the ALS Command column, click on the cell and a drop-down menu appears. Choose **OSRI On** and click **Apply**.



Note For TL1 commands, refer to the *Cisco ONS 15454 and Cisco ONS 15327 TL1 Command Guide*.

- Disable all client interfaces. Set the client trunk port to the out of service (OOS) state. Go to card view on the appropriate card. Choose **Provisioning > Optical Line**. In the State column, click on the field that corresponds with the port you want to change. A drop-down menu appears. Choose **OOS** and click **Apply**.
- Step 2** Check span attenuation by calculating the difference between transmitted OSC power at the beginning of the span and the receive power at the end of the span. These calculated values must be consistent with the data provided by the MetroPlanner installation file +/- 2 dB.
- To read the transmit power on an OSCM card at the beginning of the span, go to the OSCM card view and choose **Provisioning > Optical Line > Parameters**. Make note of the line-Tx (OSC output) power level. Next go to the OPT-BST card view and choose **Inventory**. Make note of the insertion loss for the IL03 (OSC Rx > line Tx). Subtract the power level from the insertion loss. Use this value to subtract power on the receiver to calculate the span.
 - To read the transmit power on an OSC-CSM card at the beginning of the span, go to the OSC-CSM card view and choose **Provisioning > Optical Line** and read the power value for Line 3-Tx (output OSC).
 - To read the transmit power on the OSC COM Tx port of an OPT-BST amplifier, go to card view on the OPT-BST amplifier and choose **Provisioning > Optical Line** and read the power value for Line 2-Tx (output OSC).
 - To read the receive power on an OSC-CSM card, go to card view on the OSC-CSM and choose **Provisioning > Optical Line** and read the power value for Line 3-Rx (input OSC).
- Step 3** Turn on the OPT-BST amplifier. Use the OSRI command in Cisco transport controller (CTC) or TL1. Go to the OPT-BST card view and choose **Maintenance**. In the ALS Command column, click on the cell and a drop-down menu appears. Choose **OSRI Off** and click **Apply**.
-  **Note** For TL1 commands, refer to the *Cisco ONS 15454 and Cisco ONS 15327 TL1 Command Guide*.
- Step 4** (Optional) If the calculated span attenuation values are not consistent, check the fiber connection between the line Tx port and the connector at each end of the span. Also check the fiber connection between the OSCM and the OPT-BST.
- Step 5** (Optional) If the calculated span attenuation values are still not consistent, clean the fiber connectors. See the “NTP-A112 Clean Fiber Connectors” procedure on page 17-21.
- Step 6** Return to your originating procedure (NTP).
-

DLP-A493 Create a Test OCHNC

Purpose	This task tests DWDM optical channel network connection (OCHNC) on your DWDM network. The test OCHNCs can be required by your site plan, or you can create test OCHNCs that will be removed after the test is completed.
Tools/Equipment	Tunable laser
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26 DLP-A240 Provision OSC Terminations, page 7-5 DLP-A491 Provision the Ring ID, page 7-6
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** Check the fiber connections. See the “NTP-A112 Clean Fiber Connectors” procedure on page 17-21 for instructions.
- Step 2** Create a test channel for each wavelength that you want to test according to your site plan. See the “NTP-A227 Provision a DWDM Optical Channel Network Connection” procedure on page 8-96.
- Step 3** Use a tunable laser and perform a sweep of the set of wavelengths at the source and destination of your test OCHNC. The tunable laser can be used if no transponder, line cards, or other ITU interfaces are present. Only wavelengths with circuits will be tested. Test circuits can have different destinations, but it is not recommended.



Note For information about using a tunable laser, refer to the tunable laser user guide.

- Step 4** Return to your originating procedure (NTP).
-

DLP-A494 Verify the Optical Receive Power

Purpose	This task verifies the optical receive power.
Tools/Equipment	Optical power meter
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** Using an optical power meter, check the receive optical power on both ends of the span:
- a. Identify a transmit port on an AD-xC-xx.x card or a 32 DMX-O card in the node that you want to test and connect it to the optical power meter.
 - b. Read the values displayed on the optical power meter. These values must be consistent with the data provided by the MetroPlanner installation file +/-1 dB.



Note For information about using an optical power meter, refer to the optical power meter user guide.

- Step 2** If the optical power is too low, check the following depending on your node configuration:
- Check the fiber connections between the OPT-BST amplifier or the OSC-CSM and the OPT-PRE amplifier.
 - Check the fiber connections between the OADM cards and if needed clean the connectors. See the “NTP-A112 Clean Fiber Connectors” procedure on page 17-21.
- Step 3** If the power coming from the AD-xC-xx.x card is higher than required, put an external optical attenuator before the client interface input in order to meet the requirement.
- Step 4** If the power coming from the 32 DMX-O card is higher than required, you can regulate the VOA in CTC. From the 32 DMX-O card view, choose **Provisioning > Optical Chn > Parameters**. The VOA columns including the VOA set point can be manually set according to your site plan. The VOA set point affects the power calibration parameters.
- Step 5** Return to your originating procedure (NTP).

DLP-A490 Verify the OSNR

Purpose	This task verifies the optical signal-to-noise ratio (OSNR). OSNR is the ratio between the signal power level and the noise power level.
Tools/Equipment	Optical spectrum analyzer
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** Using an optical spectrum analyzer, check the receive optical OSNR on both ends of the span:
- Identify a monitor LINE Rx port on an OPT-PRE amplifier or OSC-CSM card in the node that you want to test and connect it to the optical spectrum analyzer.
 - Read the values displayed on the optical spectrum analyzer. These values must be consistent with the data provided by the MetroPlanner installation file +/- 1 dB.



Note For information about using a spectrum analyzer, refer to the spectrum analyzer user guide.

- Step 2** If the OSNR is too low, check the following depending on your node configuration:
- Check the fiber connections between the OPT-BST amplifier or the OSC-CSM and the OPT-PRE amplifier and if needed clean the connectors. See the “NTP-A112 Clean Fiber Connectors” procedure on page 17-21.
 - On the near-end OPT-BST amplifier, check the equalization of the added channels at the monitor output.
 - On the OPT-PRE amplifier, check the output power on both COM-Tx and DC-Tx ports.

- On the far-end OPT-PRE amplifier, check the amplifier gain tilt at the monitor output.



Note The purpose of this step is not to improve the signal-to-noise ratio (SNR), but to match the per channel power level within the receive (Rx) port power range.

Step 3 Return to your originating procedure (NTP).

DLP-A496 Convert a Pass-Through Connection to an Add/Drop Connection

Purpose	This task converts a pass-through connection to two add or drop connections.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** In node view, delete the unidirectional OCHNC from the affected nodes.
- Step 2** Remove the pass-through cabling. See the “NTP-A244 Install Fiber-Optic Cables on DWDM Cards” procedure on page 2-42.
- Step 3** Delete the relevant OSC connection. See “DLP-A240 Provision OSC Terminations” task on page 7-5.
- Step 4** Connect the proper client interface. A pass through connection can be connected in both OADM and HUB node sites.
- For a hub node—connect the 32 DMX-O output port to the 32 MUX-O input port.
 - For an OADM node—connect the AD-xC-xx.x drop (output) port to the AD-xC-xx.x add (input) port.
- Step 5** From node view, choose **Provisioning > WDM-ANS > Port Status** and click the **Launch ANS** button.
- Step 6** Create two new bidirectional OCHNCs (one heading east, the other heading west). See the “NTP-A227 Provision a DWDM Optical Channel Network Connection” procedure on page 8-96.
- Step 7** If it is necessary, add an optical attenuator between the CH Tx port of the OADM card and the client Rx port.



Note If the channel is coming from a 32 DMX-O, the optical power can be adjusted in CTC by modifying the value of the internal per channel VOA.

Step 8 Return to your originating procedure (NTP).

DLP-A497 DWDM Node Acceptance Test

Purpose	Use this procedure to test each node in a network topology.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Click the **Alarms** tab:
- Verify that the alarm filter is not turned on. See the “DLP-A227 Disable Alarm Filtering” task on page 9-30 for instructions.
 - Verify that no unexplained alarms are displayed on the network. If unexplained alarms are displayed, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 3** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export the alarm information.
- Step 4** Click the **Conditions** tab. Verify that no unexplained conditions are displayed on the network. If unexplained conditions are displayed, resolve them before continuing. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 5** Complete the “DLP-A139 Export CTC Data” task on page 9-4 to export condition information.
- Step 6** If a node fails any test, repeat the test while verifying correct setup and configuration. If the test fails again, refer to the next level of support.
- After all tests are successfully completed and no alarms exist in the network, the network is ready for service.
- Step 7** Return to your originating procedure (NTP).
-



Create Circuits and VT Tunnels



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This chapter explains how to create Cisco ONS 15454 electrical circuits, VT tunnels, OC-N circuits, Ethernet circuits, and DWDM optical channel network connections. For additional information about ONS 15454 circuits, refer to the Circuits and Tunnels chapter in the *Cisco ONS 15454 Reference Manual*.

Before You Begin

Before performing any of the following procedures, investigate all alarms and clear any trouble conditions. Refer to the *Cisco ONS 15454 Troubleshooting Guide* as necessary.

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A127 Verify Network Turn Up, page 8-4—Complete this procedure before you create any circuits.
2. NTP-A181 Create an Automatically Routed DS-1 Circuit, page 8-6—Complete as needed.
3. NTP-A182 Create a Manually Routed DS-1 Circuit, page 8-10—Complete as needed.
4. NTP-A183 Create a Unidirectional DS-1 Circuit with Multiple Drops, page 8-14—Complete as needed.
5. NTP-A184 Create an Automatically Routed DS-3 Circuit, page 8-20—Complete as needed.
6. NTP-A185 Create a Manually Routed DS-3 Circuit, page 8-24—Complete as needed.
7. NTP-A186 Create a Unidirectional DS-3 Circuit with Multiple Drops, page 8-26—Complete as needed.
8. NTP-A133 Create an Automatically Routed VT Tunnel, page 8-33—Complete as needed.
9. NTP-A134 Create a Manually Routed VT Tunnel, page 8-36—Complete as needed.
10. NTP-A187 Create a VT Aggregation Point, page 8-38—Complete as needed.
11. NTP-A135 Test Electrical Circuits, page 8-41—Complete this procedure after you create an electrical circuit.

12. NTP-A188 Create an Automatically Routed OC-N Circuit, page 8-43—Complete as needed.
13. NTP-A189 Create a Manually Routed OC-N Circuit, page 8-47—Complete as needed.
14. NTP-A190 Create a Unidirectional OC-N Circuit with Multiple Drops, page 8-49—Complete as needed.
15. NTP-A62 Test OC-N Circuits, page 8-55—Complete this procedure after you create an optical (OC-N) circuit.
16. NTP-A139 Create a Half Circuit on a BLSR or 1+1 Node, page 8-57—Complete this procedure as needed to create a half circuit using an OC-N as a destination in a bidirectional line switched ring (BLSR) or 1+1 topology.
17. NTP-A140 Create a Half Circuit on a Path Protection Node, page 8-59—Complete as needed to create a half circuit using an OC-N as a destination in a path protection.
18. NTP-A191 Create an E-Series EtherSwitch Circuit (Multicard or Single-Card Mode), page 8-63—Complete as needed.
19. NTP-A192 Create a Circuit for an E-Series Card in Port-Mapped Mode, page 8-65—Complete as needed.
20. NTP-A142 Create an E-Series Shared Packet Ring Ethernet Circuit, page 8-67—Complete as needed.
21. NTP-A143 Create an E-Series Hub and Spoke Ethernet Configuration, page 8-70—Complete as needed.
22. NTP-A144 Create an E-Series Single-Card EtherSwitch Manual Cross-Connect, page 8-72—Complete as needed.
23. NTP-A145 Create an E-Series Multicard EtherSwitch Manual Cross-Connect, page 8-74—Complete as needed.
24. NTP-A146 Test E-Series Circuits, page 8-81—Complete this procedure after creating E-Series SONET circuits.
25. NTP-A147 Create a G-Series STS Circuit, page 8-82—Complete as needed.
26. NTP-A148 Create a Manual Cross-Connect for a G-Series or an E-Series in Port-Mapped Mode, page 8-84—Complete as needed.
27. NTP-A241 Provision G-Series Ports for Transponder Mode, page 8-88—Complete as needed.
28. NTP-A149 Test G-Series Circuits, page 8-91—Complete this procedure after creating G-Series SONET circuits.
29. NTP-A194 Create Overhead Circuits, page 8-92—Complete as needed to create DCC tunnels, provision orderwire, or create user data channel circuits.
30. NTP-A227 Provision a DWDM Optical Channel Network Connection, page 8-96—Complete as needed.

Table 8-1 defines ONS 15454 circuit creation terms and options.

Table 8-1 ONS 15454 Circuit Options

Circuit Option	Description
Source	The circuit source is where the circuit enters the ONS 15454 network.
Destination	The circuit destination is where the circuit exits an ONS 15454 network.
Automatic circuit routing	CTC routes the circuit automatically on the shortest available path based on routing parameters and bandwidth availability.

Table 8-1 ONS 15454 Circuit Options (continued)

Circuit Option	Description
Manual circuit routing	Manual routing allows you to choose a specific path, not just the shortest path chosen by automatic routing. You can choose a specific STS or VT for each circuit segment and create circuits from work orders prepared by an operations support system (OSS) like the Telcordia TIRKS system.
VT tunnel	VT tunnels allow VT1.5 circuits to pass through an ONS 15454 without utilizing cross-connect card (XC, XCVT, XC10G) resources. VT circuits using VT tunnels will use cross-connect capacity only at the source and destination nodes. One VT tunnel can carry 28 VT1.5 circuits.
VT Aggregation Point	VT aggregation points (VAPs) allow VT circuits to be aggregated into an STS for hand off to non-ONS 15454 networks or equipment, such as inter office facilities (IOFs), switches, or digital access cross-connect systems. VAPs reduce VT matrix resource utilization at the node where the VT1.5s are aggregated onto the STS. This node is called the STS grooming end. The STS grooming end requires an OC-N, EC-1, or DS3XM-6 card. VT aggregation points can be created on BLSR, 1+1, or unprotected nodes, but cannot be created on path protection nodes.

ONS 15454 circuits are either VT or STS circuits. Table 8-2 shows the circuit source and destination options for VT circuits.

Table 8-2 CTC Circuit Source and Destination Options for VT Circuits

Card	Ports	STSs	VTs	DS1s
DS1-14, DS1N-14	–	–	–	14
DS3-12, DS3N-12, DS3-12E, DS3N-12E	–	–	–	–
DS3XM-6	6	–	–	28 per port
EC1-12	12	–	28 per port	–
OC3 IR 4/STM1	4	3 per port	28 per STS	–
OC3-8	8	3 per port	28 per STS	–
OC12 IR/STM4 OC12 LR/STM4	–	12	28 per STS	–
OC12 IR 4/STM4 OC12 LR 4/STM4	4	12 per port	28 per STS	–
All OC-48 cards	–	48	28 per STS	–
OC-192	–	192	28 per STS	–

Table 8-3 shows the shows the circuit source and destination options for STS circuits.

Table 8-3 CTC Circuit Source and Destination Options for STS Circuits

Card	Ports	STSs
DS1-14, DS1N-14 ¹	–	–
DS3-12, DS3N-12, DS3-12E, DS3N-12E	12	–
DS3XM-6	6	–
EC1-12	12	–
OC3 IR 4/STM1	4	3 per port
OC3-8	8	3 per port
OC12 IR/STM4 OC12 LR/STM4	–	12
OC12 IR 4/STM4 OC12 LR 4/STM4	4	12 per port
All OC-48 cards (includes ML-Series card)	–	48
OC-192	–	192

1. You can route one STS circuit on a DS-1 card to carry all 14 ports within the STS. However, 14 VT1.5s are not utilized.

NTP-A127 Verify Network Turn Up

Purpose	This procedure verifies that the ONS 15454 network is ready for circuit provisioning. This procedure applies to DWDM (Software Release 4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	Chapter 6, “Turn Up Network”
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.

Step 2 From the View menu, choose **Go to Network View**. Wait for all the nodes that are part of the network to appear on the network map. (Large networks may take several minutes to display all the nodes.)



Note If this is the first time your computer has connected to this ONS 15454 network, the node icons will be stacked on the left side of the graphic area, possibly out of view. Use the scroll bar under the network map to display the icons. To separate the icons press **Ctrl** and drag and drop the icon to the new location. Repeat until all the nodes are visible on the graphic area.

Step 3 Verify node accessibility. In the network view, all node icons must be either green, yellow, orange, or red.

If all network nodes do not appear after a few minutes, or if a node icon is grey with an IP address under it, do not continue. Look at the Net box in the lower right corner of the window. If it is grey, log in again, making sure not to check the Disable Network check box in the CTC Login dialog box. If problems persist, see Chapter 6, “Turn Up Network” to review the network turn-up procedure appropriate for your network topology, or refer to the *Cisco ONS 15454 Troubleshooting Guide* for troubleshooting procedures.

- Step 4** Verify DCC connectivity. All nodes must be connected by green lines. If lines are missing or grey in color, do not continue. See Chapter 6, “Turn Up Network” and follow the network turn-up procedure appropriate for your network topology. Verify that all nodes have DCC connectivity before continuing.
- Step 5** Click the **Alarms** tab to view alarm descriptions. Investigate and resolve, if necessary, all critical (red node icon) or major (orange node icon) alarms. Refer to the *Cisco ONS 15454 Troubleshooting Guide* to resolve alarms before continuing.
- Step 6** From the View menu, choose **Go to Home View**. Verify that the node is provisioned according to your site or engineering plan:
- a. View the cards in the shelf map. Verify that the ONS 15454 cards appear in the specified slots.
 - b. Click the **Provisioning > General** tabs. Verify that the node name, contacts, date, time, and NTP/SNTP server IP address (if used) are correctly provisioned. If needed, make corrections using the “NTP-A25 Set Up Name, Date, Time, and Contact Information” procedure on page 4-6.
 - c. Click the **Network** tab. Verify that the IP address, Subnet Mask, Default Router, Prevent LCD IP Config, and Gateway Settings are correctly provisioned. If not, make corrections using the “NTP-A169 Set Up CTC Network Access” procedure on page 4-8.
 - d. Click the **Protection** tab. Verify that protection groups are created as specified in your site plan. If the protection groups are not created, complete the “NTP-A170 Create Protection Groups” procedure on page 4-25.
 - e. If the node is in a BLSR, click the **BLSR** tab. (If the node is not in a BLSR, continue with Step f.) Verify that the following items are provisioned as specified in your site plan:
 - BLSR type (2-Fiber or 4-Fiber)
 - BLSR ring ID and node IDs
 - Ring reversion time
 - East and west card assignments
 - 4-fiber BLSRs: span reversion and east/west protect card assignmentsIf you need to make corrections, see the “NTP-A40 Provision BLSR Nodes” procedure on page 6-15 for instructions.
 - f. Click the **Security** tab. Verify that the users and access levels are provisioned as specified. If not, see the “NTP-A30 Create Users and Assign Security” procedure on page 4-4 to correct the information.
 - g. If SNMP is used, click the **SNMP** tab and verify the trap and destination information. If the information is not correct, see the “NTP-A87 Change SNMP Settings” procedure on page 12-32 to correct the information.
 - h. Click the **DCC/GCC** tab (R4.1) or **DCC/GCC/OSC** tab (R4.5). Verify that DCCs were created to the applicable OC-N slots and ports (TDM nodes) or OSC slots and ports (DWDM nodes). If DCCs were not created for the appropriate OC-N or OSC slots and ports, see Chapter 6, “Turn Up Network” and complete the turn-up procedure appropriate for your network topology.
 - i. Click the **Timing** tab. Verify that timing is provisioned as specified. If not, use the “NTP-A85 Change Node Timing” procedure on page 12-23 to make the changes.

- j. Click the **Alarm Behavior** tab. If you provisioned optional alarm profiles, verify that the alarms are provisioned as specified. If not, see the “NTP-A71 Create, Download, and Assign Alarm Severity Profiles” procedure on page 9-17 to change the information.
 - k. Verify that the network element defaults listed in the status area of the node view window is correct.
- Step 7** Repeat Step 6 for each node in the network.
- Step 8** As appropriate, complete the circuit creation procedure listed on page 8-1.
- Stop. You have completed this procedure.**
-

NTP-A181 Create an Automatically Routed DS-1 Circuit

Purpose	This procedure creates an automatically routed DS-1 circuit, meaning CTC chooses the circuit route based on the parameters you specify and on the software version. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the circuit source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box (Figure 8-1), complete the following fields:
- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters, (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - **Type**—Choose VT. VT cross-connects will carry the DS-1 circuit across the ONS 15454 network.
 - **Size**—VT1.5 is the default. You cannot change it.
 - **Bidirectional**—Leave checked for this circuit (default).
 - **Number of circuits**—Type the number of DS-1 circuits you want to create. The default is 1. If you are creating multiple circuits with the same slot and sequential port numbers, you can use Auto-ranged to create the circuits automatically.
 - **Auto-ranged**—This check box is automatically selected if you enter more than 1 in the Number of circuits field. Auto-ranging creates identical (same source and destination) sequential circuits automatically. Uncheck the box if you do not want CTC to create sequential circuits automatically.
 - **State**—Choose a service state to apply to the circuit:

- IS—The circuit is in service.
- OOS—The circuit is out of service. Traffic is not passed on the circuit.
- OOS-AINS—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
- OOS-MT—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.



Note If VT circuit source and destination ports are in an OOS_AINS, OOS_MT, or IS state, VT circuits in OOS_AINS will change to IS even if a physical signal is not present. Refer to the *Cisco ONS 15454 Reference Manual* for more information.


- Apply to drop ports—Select if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms are generated if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Select this check box if you want the circuit routed on protected drops only, that is, to ONS 15454 cards that are in 1:1, 1:N, or 1+1 protection. If you select this check box, CTC displays only protected cards and ports as source and destination choices.

Figure 8-1 Setting Circuit Attributes For a DS-1 Circuit

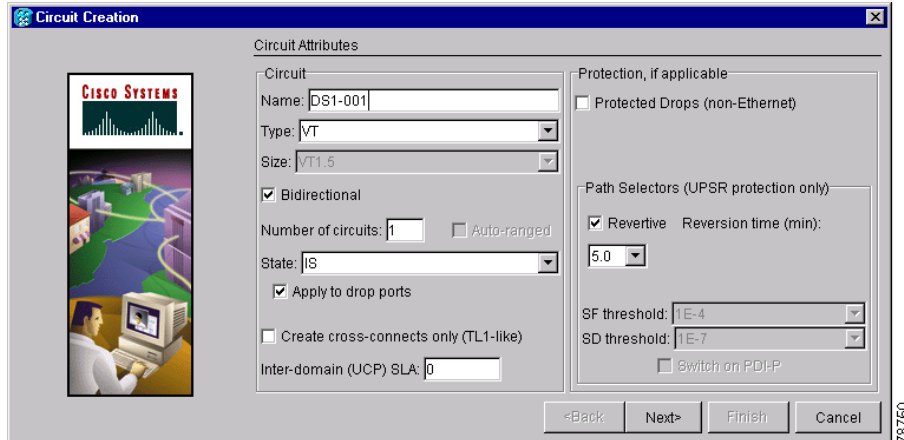

- Step 6** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30. Otherwise, continue with the next step.
- Step 7** Click **Next**.
- Step 8** Complete the “DLP-A95 Provision a DS-1 Circuit Source and Destination” task on page 8-18.
- Step 9** In the Circuit Routing Preferences area (Figure 8-2 on page 8-9), choose **Route Automatically**. Two options are available; choose either, both, or none based on your preferences.
- Using Required Nodes/Spans—Select this check box if you want to specify nodes and spans to include or exclude in the CTC-generated circuit route.
 - Review Route Before Creation—Select this check box if you want to review and edit the circuit route before the circuit is created.
- Step 10** To set the circuit path protection, complete one of the following:
- To route the circuit on a protected path, leave **Fully Protected Path** checked and continue with Step 11. CTC creates a fully-protected circuit route based on the path diversity option you choose. Fully-protected paths may or may not have path protection path segments (with primary and alternate paths), and the path diversity options apply only to path protection path segments, if any exist.
 - To create an unprotected circuit, uncheck **Fully Protected Path** and continue with Step 13.
 - To route the circuit on a BLSR protection channel, if available, uncheck **Fully Protected Path**, check **Protection Channel Access**, click **Yes** in the Warning dialog box, then continue with Step 13.


**Caution**

Circuits routed on BLSR protection channels are not protected. They are preempted during BLSR switches.

- Step 11** If you selected Fully Protected Path in Step 10 and the circuit will be routed on a path protection, choose one of the following:
- Nodal Diversity Required—Ensures that the primary and alternate paths within path protection portions of the complete circuit path are nodally diverse.
 - Nodal Diversity Desired—Specifies that node diversity is preferred, but if node diversity is not possible, CTC creates fiber-diverse paths for the path protection portion of the complete circuit path.

- **Link Diversity Only**—Specifies that only fiber-diverse primary and alternate paths for path protection portions of the complete circuit path are needed. The paths may be node-diverse, but CTC does not check for node diversity.

Figure 8-2 Setting Circuit Routing Preferences for a DS-1 Circuit

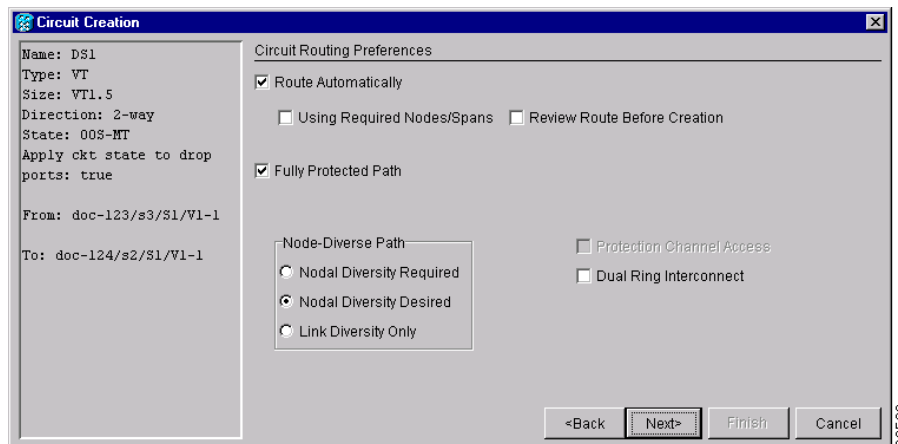

- Step 12** If you selected Fully Protected Path and the circuit will be routed on a path protection dual ring interconnect (DRI), click the **Dual Ring Interconnect** check box.
- Step 13** If you selected Using Required Nodes/Spans in Step 9, complete the following substeps. If not, continue with Step 16.
- Click **Next**.
 - In the Circuit Route Constraints area, click a node or span on the circuit map.
 - Click **Include** to include the node or span in the circuit. Click **Exclude** to exclude the node or span from the circuit. The order in which you choose included nodes and spans is the order in which the circuit will be routed. Click spans twice to change the circuit direction.
 - Repeat Step c for each node or span you wish to include or exclude.
 - Review the circuit route. To change the circuit routing order, choose a node in the Required Nodes/Lines or Excluded Notes Links lists and click the **Up** or **Down** buttons to change the circuit routing order. Click **Remove** to remove a node or span.
- Step 14** Click **Next**. In the VT Circuit area under Create, choose one of the following:
- **VT Tunnel on Transit Nodes**—This option is available if the DS-1 circuit passes through a node that does not have a VT tunnel, or if an existing VT tunnel is full. VT tunnels allow VT circuits to pass through ONS 15454s without consuming cross-connect card resources. VT tunnels can carry 28 VT1.5 circuits. In general, creating VT tunnels is a good idea if you are creating many VT circuits from the same source and destination. Refer to the *Cisco ONS 15454 Reference Manual* for more information.
 - **VT Aggregation Point**—The VT aggregation point option is available if the DS-1 circuit source or destination is on an EC-1, DS3XM-6, or OC-N port on a BLSR, 1+1, or unprotected node. VT aggregation points (VAPs) aggregate DS-1s onto an STS for hand off to non-ONS 15454 networks or equipment, such as an IOF, switch, or DACS. It allows VT1.5 circuits to be routed through the node using one STS connection on the cross-connect card matrix rather than multiple VT connections on the cross-connect card VT matrix. If you want to aggregate the DS-1 circuit you are creating with others onto an STS for transport outside the ONS 15454 network, choose one of the following:

- Use source as the STS grooming end—Creates the VAP on the DS-1 circuit source node. This option is available only if the DS-1 circuit originates on an EC-1, DS3XM-6, or OC-N card.
 - Use destination as the STS grooming end—Creates the VAP on the DS-1 circuit destination node. This option is available only if the DS-1 circuit terminates on an EC-1, DS3XM-6, or OC-N card.
 - None—Choose this option if you do not want to create a VT tunnel or a VAP. This will be the only available option if CTC cannot create a VT tunnel or VAP.
- Step 15** If you chose VT Aggregation Point, complete the following substeps. If not, continue with Step 16.
- a. Click **Next**.
 - b. In the VT Aggregation Point Destination panel, click the node that you want to be the VAP destination, then click **Add Destination**.
- Step 16** If you selected Review Route Before Creation in Step 9, complete the following substeps. If not, continue with Step 17.
- a. Click **Next**.
 - b. Review the circuit route. To add or delete a circuit span, choose a node on the circuit route. Blue arrows show the circuit route. Green arrows indicate spans that you can add. Click a span arrowhead, then click **Include** to include the span or **Remove** to remove the span.
 - c. If the provisioned circuit does not reflect the routing and configuration you want, click **Back** to verify and change circuit information. If the circuit needs to be routed to a different path, see the “NTP-A182 Create a Manually Routed DS-1 Circuit” procedure on page 8-10.
- Step 17** Click **Finish**. One of the following results occurs, depending on the circuit properties you chose in the Circuit Creation dialog box:
- If you entered more than 1 in the Number of Circuits field and selected Auto-ranged, CTC automatically creates the number of circuits entered in the Number of Circuits field. If auto ranging cannot complete all the circuits, for example, because sequential ports are unavailable at the source or destination, a dialog box appears. Set the new source or destination for the remaining circuits, then click **Finish** to continue auto ranging.
 - If you entered more than 1 in the Number of Circuits field and did not choose Auto-ranged, the Circuit Creation dialog box appears so you can create the remaining circuits. Repeat this procedure for each additional circuit.
 - After completing the circuit(s), the Circuits window appears.
- Step 18** In the Circuits window, verify that the new circuit(s) appear in the circuits list.
- Step 19** Complete the “NTP-A135 Test Electrical Circuits” procedure on page 8-41. Skip this step if you built a test circuit.
- Stop. You have completed this procedure.**
-

NTP-A182 Create a Manually Routed DS-1 Circuit

Purpose	This procedure creates a DS-1 circuit and allows you to provision the circuit route. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None

Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the circuit source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box (see Figure 8-1 on page 8-8), complete the following fields:
- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - **Type**—Choose VT. VT cross-connects will carry the DS-1 circuit across the ONS 15454 network.
 - **Size**—VT1.5 is the default. You cannot change it.
 - **Bidirectional**—Leave checked for this circuit (default).
 - **Number of circuits**—Type the number of DS-1 circuits you want to create. The default is 1.
 - **Auto-ranged**—Applies to automatically-routed circuits only. If you entered more than 1 in the Number of Circuits field, uncheck this box. (The box is unavailable if only one circuit is entered in Number of Circuits.)
 - **State**—Choose a service state to apply to the circuit:
 - **IS**—The circuit is in service.
 - **OOS**—The circuit is out of service. Traffic is not passed on the circuit.
 - **OOS-AINS**—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - **OOS-MT**—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.



Note If VT circuit source and destination ports are in an OOS_AINS, OOS_MT, or IS state, VT circuits in OOS_AINS will change to IS even if a physical signal is not present. Refer to the *Cisco ONS 15454 Reference Manual* for more information.

- **Apply to drop ports**—Check this box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Check this box if you want the circuit routed on protected drops only, that is, to ONS 15454 cards that are in 1:1, 1:N, or 1+1 protection. If you select this check box, CTC shows only protected cards and ports as source and destination choices.

Step 6 If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30. Otherwise, continue with the next step.

Step 7 Click **Next**.

Step 8 Complete the “DLP-A95 Provision a DS-1 Circuit Source and Destination” task on page 8-18.

Step 9 In the Circuit Routing Preferences area (Figure 8-2 on page 8-9), uncheck **Route Automatically**.

Step 10 To set the circuit path protection, complete one of the following:

- To route the circuit on a protected path, leave **Fully Protected Path** checked and continue with Step 11. Fully-protected paths may or may not have path protection path segments (with primary and alternate paths), and the path diversity options apply only to path protection path segments, if any exist.
- To create an unprotected circuit, uncheck **Fully Protected Path** and continue with Step 15.
- To route the circuit on a BLSR protection channel, if available, uncheck **Fully Protected Path**, check **Protection Channel Access**, click **Yes** in the Warning dialog box, then continue with Step 15.



Caution Circuits routed on BLSR protection channels are not protected and are preempted during BLSR switches.

Step 11 If you selected Fully Protected Path and the circuit will be routed on a path protection, choose a Node-Diverse Path option:

- Nodal Diversity Required—Ensures that the primary and alternate paths within the path protection portions of the complete circuit path are nodally diverse.
- Nodal Diversity Desired— Specifies that node diversity is preferred, but if node diversity is not possible, CTC creates fiber-diverse paths for the path protection portion of the complete circuit path.
- Link Diversity Only—Specifies that only fiber-diverse primary and alternate paths for path protection portions of the complete circuit path are needed. The paths may be node-diverse, but CTC does not check for node diversity.

Step 12 If you selected Fully Protected Path and the circuit will be routed on a path protection dual ring interconnect (DRI), click the **Dual Ring Interconnect** check box.

Step 13 Click **Next**. In the VT Circuit area under Create, choose one of the following:

- VT Tunnel on Transit Nodes—This option is available if the DS-1 circuit passes through a node that does not have a VT tunnel, or if an existing VT tunnel is full. VT tunnels allow VT circuits to pass through ONS 15454s without consuming cross-connect card resources. VT tunnels can carry 28

VT1.5 circuits. In general, creating VT tunnels is a good idea if you are creating many VT circuits from the same source and destination. Refer to the *Cisco ONS 15454 Reference Manual* for more information.

- **VT Aggregation Point**—The VT aggregation point option is available if the DS-1 circuit source or destination is on an EC-1, DS3XM-6, or OC-N port on a BLSR, 1+1, or unprotected node. VT aggregation points (VAPs) aggregate DS-1s onto an STS for hand off to non-ONS 15454 networks or equipment, such as an IOF, switch, or DACS. It allows VT1.5 circuits to be routed through the node using one STS connection on the cross-connect card matrix rather than multiple VT connections on the cross-connect card VT matrix. If you want to aggregate the DS-1 circuit you are creating with others onto an STS for transport outside the ONS 15454 network, choose one of the following:
 - Use source as the STS grooming end—Creates the VAP on the DS-1 circuit source node. This option is available only if the DS-1 circuit originates on an EC-1, DS3XM-6, or OC-N card.
 - Use destination as the STS grooming end—Creates the VAP on the DS-1 circuit destination node. This option is available only if the DS-1 circuit terminates on an EC-1, DS3XM-6, or OC-N card.
- **None**—Choose this option if you do not want to create a VT tunnel or a VAP. This will be the only available option if CTC cannot create a VT tunnel or VAP.

Step 14 If you chose VT Aggregation Point, complete the following substeps. If not, continue with Step 16.

- a. Click **Next**.
- b. In the VT Aggregation Point Destination panel, click the node that you want to be the VAP destination, then click **Add Destination**.

Step 15 Click **Next**. In the Route Review and Edit area, node icons appear for you to route the circuit. The circuit source node is selected. Green arrows pointing from the source node to other network nodes indicate spans that are available for routing the circuit.

Step 16 Complete the “DLP-A96 Provision a DS-1 or DS-3 Circuit Route” task on page 8-32 for the DS-1 circuit you are creating.

Step 17 Click **Finish**. CTC will compare your manually-provisioned circuit route with the specified path diversity option you chose in Step 11. If the path does not meet the specified path diversity requirement, CTC displays an error message and allows you to change the circuit path. If you entered more than 1 in the Number of Circuits field, the Circuit Creation dialog box appears so you can create the remaining circuits. Repeat this procedure for each additional circuit.

Step 18 When all the circuits are created, the main Circuits window appears. Verify that the circuit(s) you created are correct.

Step 19 Complete the “NTP-A135 Test Electrical Circuits” procedure on page 8-41. Skip this step if you built a test circuit.

Stop. You have completed this procedure.

NTP-A183 Create a Unidirectional DS-1 Circuit with Multiple Drops

Purpose	This procedure creates a unidirectional DS-1 circuit with multiple drops (destinations). This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the circuit source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box (Figure 8-3 on page 8-15), complete the following fields:
- Name—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - Type—Choose VT.
 - Size—VT1.5 is the default. You cannot change it.
 - Bidirectional—Uncheck for this circuit.
 - Number of circuits—Leave the default unchanged (1).
 - Auto-ranged—Unavailable when the Number of Circuits field is 1.
 - State—Choose a service state to apply to the circuit:
 - IS—The circuit is in service.
 - OOS—The circuit is out of service. Traffic is not passed on the circuit.
 - OOS-AINS—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - OOS-MT—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.



Note If VT circuit source and destination ports are in an OOS_AINS, OOS_MT, or IS state, VT circuits in OOS_AINS will change to IS even if a physical signal is not present. Refer to the *Cisco ONS 15454 Reference Manual* for more information.


- Apply to drop ports—Check this box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Check this box if you want the circuit routed to protect drops only, that is, to ONS 15454 cards that are in 1:1, 1:N, or 1+1 protection. If you check this box, CTC displays only protected cards as source and destination choices.

Figure 8-3 Setting Circuit Attributes for a Unidirectional DS-1 Circuit

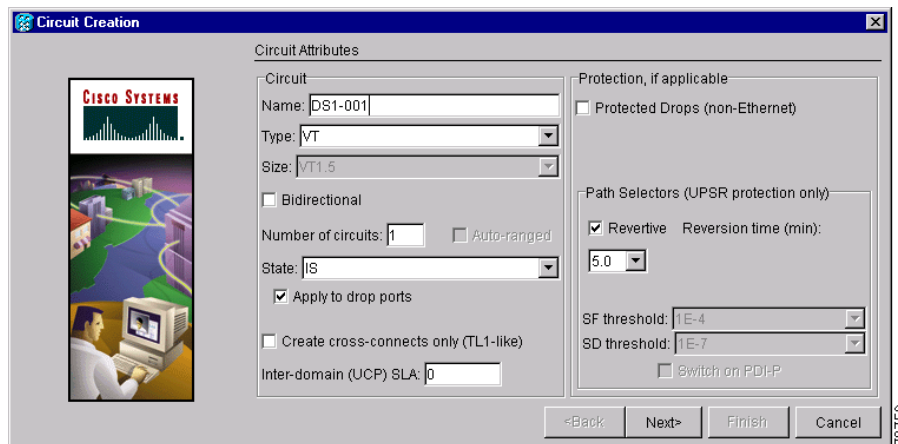

- Step 6** Click **Next**.
- Step 7** Complete the “DLP-A95 Provision a DS-1 Circuit Source and Destination” task on page 8-18.
- Step 8** In the Circuit Routing Preferences area, uncheck **Route Automatically**. When Route Automatically is not selected, Using Required Nodes/Spans and Review Route Before Circuit Creation are unavailable.
- Step 9** To set the circuit path protection, complete one of the following:
- To route the circuit on a protected path, leave **Fully Protected Path** checked and continue with Step 11. Fully-protected paths may or may not have path protection path segments (with primary and alternate paths), and the path diversity options apply only to path protection path segments, if any exist.
 - To create an unprotected circuit, uncheck **Fully Protected Path** and continue with Step 15.
 - To route the circuit on a BLSR protection channel, if available, uncheck **Fully Protected Path**, check **Protection Channel Access**, click **Yes** in the Warning dialog box, then continue with Step 15.

**Caution**

Circuits routed on BLSR protection channels are not protected and are preempted during BLSR switches.

- Step 10** If you selected Fully Protected Path and the circuit will be routed on a path protection, choose one of the following:
- Nodal Diversity Required—Ensures that the primary and alternate paths within the path protection portions of the complete circuit path are nodally diverse.
 - Nodal Diversity Desired—Specifies that node diversity is preferred, but if node diversity is not possible, CTC creates fiber-diverse paths for the path protection portion of the complete circuit path.
 - Link Diversity Only—Specifies that only fiber-diverse primary and alternate paths for path protection portions of the complete circuit path are needed. The paths may be node-diverse, but CTC does not check for node diversity.
- Step 11** If you selected Fully Protected Path and the circuit will be routed on a path protection dual ring interconnect (DRI), click the **Dual Ring Interconnect** check box.
- Step 12** Click **Next**. In the VT Circuit area under Create, choose one of the following:
- VT Tunnel on Transit Nodes—This option is available if the DS-1 circuit passes through a node that does not have a VT tunnel, or if an existing VT tunnel is full. VT tunnels allow VT circuits to pass through ONS 15454s without consuming cross-connect card resources. VT tunnels can carry 28 VT1.5 circuits. In general, creating VT tunnels is a good idea if you are creating many VT circuits from the same source and destination. Refer to the *Cisco ONS 15454 Reference Manual* for more information.
 - VT Aggregation Point—The VT aggregation point option is available if the DS-1 circuit source or destination is on an EC-1, DS3XM-6, or OC-N port on a BLSR, 1+1, or unprotected node. VT aggregation points (VAPs) aggregate DS-1s onto an STS for hand off to non-ONS 15454 networks or equipment, such as an IOF, switch, or DACS. It allows VT1.5 circuits to be routed through the node using one STS connection on the cross-connect card matrix rather than multiple VT connections on the cross-connect card VT matrix. If you want to aggregate the DS-1 circuit you are creating with others onto an STS for transport outside the ONS 15454 network, choose one of the following:
 - Use source as the STS grooming end—Creates the VAP on the DS-1 circuit source node. This option is available only if the DS-1 circuit originates on an EC-1, DS3XM-6, or OC-N card.
 - Use destination as the STS grooming end—Creates the VAP on the DS-1 circuit destination node. This option is available only if the DS-1 circuit terminates on an EC-1, DS3XM-6, or OC-N card.
 - None—Choose this option if you do not want to create a VT tunnel or a VAP. This will be the only available option if CTC cannot create a VT tunnel or VAP.
- Step 13** If you chose VT Aggregation Point, complete the following substeps. If not, continue with Step 16.
- a. Click **Next**.
 - b. In the VT Aggregation Point Destination panel, click the node that you want to be the VAP destination, then click **Add Destination**.
- Step 14** Click **Next**. In the Route Review and Edit area, node icons appear so you can route the circuit manually. The circuit source node is selected. Green arrows pointing from the source node to other network nodes indicate spans that are available for routing the circuit.
- Step 15** Complete the “DLP-A96 Provision a DS-1 or DS-3 Circuit Route” task on page 8-32 for the DS-1 circuit you are creating.

- Step 16** Click **Finish**. CTC completes the circuit and the Circuits window appears.
- Step 17** In the Circuits window, click the circuit that you want to route to multiple drops. The Delete, Edit, and Search buttons become active.
- Step 18** Click **Edit** (or double-click the circuit row). The Edit Circuit window appears with the General tab selected.
- All nodes in the DCC network appear on the network map. Circuit source and destination information appears under the source and destination nodes. To see a detailed view of the circuit, click **Show Detailed Map**. To rearrange a node icon, select the node, press **Ctrl**, then drag and drop the icon to the new location.
- Step 19** In the Edit Circuit dialog box, click the **Drops** tab. A list of existing drops appears.
- Step 20** Click **Create**.
- Step 21** In the Define New Drop dialog box, create the new drop:
- a. Node—Choose the target node for the circuit drop.
 - b. Slot—Choose the target card and slot.
 - c. Port, STS, VT, or DS1—Choose the port, STS, VT, or DS1 from the Port, STS, VT or DS1 drop-down menus. The card selected in Step b determines the fields that appear. See Table 8-2 on page 8-3 for a list of options.
 - d. The routing preferences for the new drop will match those of the original circuit. However, you can modify the following:
 - If the original circuit was routed on a protected path, you can change the nodal diversity options: Required, Desired, Don't Care; Link Diverse only. See Step 10 for options descriptions.
 - If the original circuit was not routed on a protected path, the Protection Channel Access options is available. See Step 10 for a description of the PCA option.
 - e. Click **OK**. The new drop appears in the Drops list.
- Step 22** If you need to create additional drops for the circuit, repeat Steps 20 and 21 to create the additional drops.
- Step 23** Click **Close**. The Circuits window appears.
- Step 24** Verify that the new drops appear in the Destination column for the circuit you edited. If they do not appear repeat Steps 5 through 22, making sure all options are provisioned correctly.
- Step 25** Complete the “NTP-A135 Test Electrical Circuits” procedure on page 8-41. Skip this step if you built a test circuit.
- Stop. You have completed this procedure.**

DLP-A314 Assign a Name to a Port

Purpose	Use this task to assign a name to a port on any ONS 15454 card. This task applies to both DWDM (Software R4.5) and non-DWDM (Release 4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	As needed.

Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to assign a port name for a card or cards
- Step 2** Double-click the card that has the port you want to provision.
- Step 3** Click the **Provisioning** tab.
- Step 4** Click the **Port Name** column for the port number you are assigning a name.
- Step 5** Type the port name.
The port name can be up to 32 alphanumeric/special characters. The field is blank by default.
- Step 6** Click **Apply**.
- Step 7** Return to your originating procedure (NTP).
-

DLP-A95 Provision a DS-1 Circuit Source and Destination

Purpose	This task provisions an electrical circuit source and destination for a DS-1 circuit. This task does not apply to DWDM (Software R4.1) nodes.
Tools/Equipment	None
Prerequisite Procedures	You perform this task during one of the following procedures: NTP-A181 Create an Automatically Routed DS-1 Circuit, page 8-6, or NTP-A182 Create a Manually Routed DS-1 Circuit, page 8-10, or NTP-A183 Create a Unidirectional DS-1 Circuit with Multiple Drops, page 8-14
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note After you have selected the circuit properties in the Circuit Source dialog box according to the specific circuit creation procedure, you are ready to provision the circuit source.

- Step 1** From the Node drop-down menu, choose the node where the source will originate.
- Step 2** From the Slot drop-down menu, choose the slot containing the DS1-14, DS1N-14 (Figure 8-4), or DS3XM-6 card (Figure 8-5) where the circuit will originate.

Figure 8-4 Defining the Circuit Source on a DS-1 Card


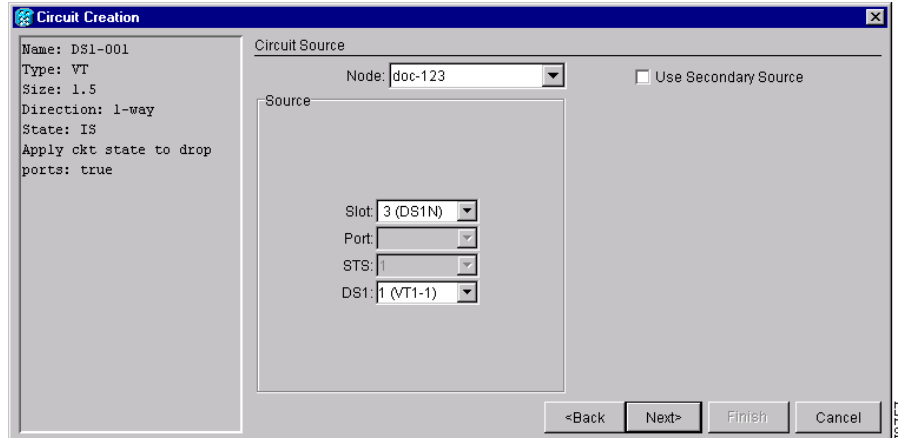


Figure 8-5 Defining the Circuit Source on a DS3XM-6 Card

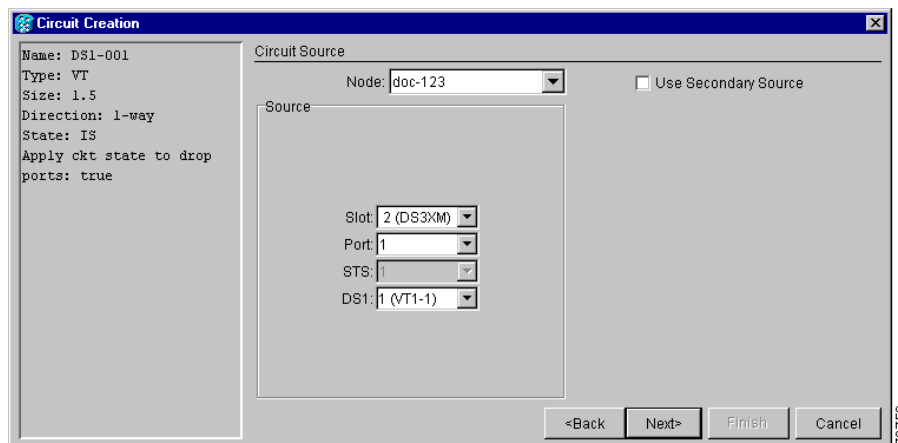

- Step 3** Only if you chose DS3XM-6 as the card, choose the port from the Port drop-down menu.
- Step 4** From the DS-1 drop-down menu, choose the source DS-1.
- Step 5** If you need to create a secondary source, for example, a path protection bridge/selector circuit entry point in a multivendor path protection, click **Use Secondary Source** and repeat Steps 1 through 4 to define the secondary source. If you do not need to create a secondary source, continue with Step 6.
- Step 6** Click **Next**.
- Step 7** From the Node drop-down menu, choose the destination (termination) node.
- Step 8** From the Slot drop-down menu, choose the slot containing the destination card. The destination is typically a DS-1 card. You can also choose an OC-N card to map the DS-1 to a VT1.5 for OC-N transport.
- Step 9** Depending on the destination card, choose the destination port, STS, VT, or DS1 from the sub-menus that appear based on the card selected in Step 8. See Table 8-2 on page 8-3 for a list of valid options. CTC does not display ports, STSs, VTs, or DS1s already used by other circuits. If you and a user working

on the same network choose the same port, STS, VT, port, or DS1 simultaneously, one of you will receive a Path in Use error and be unable to complete the circuit. The user with the incomplete circuit needs to choose new destination parameters.

- Step 10** If you need to create a secondary destination, for example, a path protection bridge-selector circuit exit point in a multivendor path protection, click **Use Secondary Destination** and repeat Steps 7 through 9 to define the secondary destination.
- Step 11** Click **Next**.
- Step 12** Return to your originating procedure (NTP).

NTP-A184 Create an Automatically Routed DS-3 Circuit

Purpose	This procedure creates an automatically routed DS-3 circuit. CTC routes the circuit automatically based on circuit creation parameters and the software version. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the circuit source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box (Figure 8-6 on page 8-21), complete the following fields:
- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - **Type**—Choose STS. STS cross-connects will carry the DS-3 circuit across the ONS 15454 network.
 - **Size**—Choose STS-1.
 - **Bidirectional**—Leave checked for this circuit (default).
 - **Number of circuits**—Type the number of DS-3 circuits you want to create. The default is 1. If you are creating multiple circuits with sequential source and destination ports, you can use Auto-ranged to create the circuits automatically.
 - **Auto-ranged**—This box is automatically selected if you enter more than 1 in the Number of circuits field. Leave selected if you are creating multiple DS-3 circuits with the same source and destination and you want CTC to create the circuits automatically. Uncheck the box if you do not want CTC to create sequential circuits automatically.


- State—Choose a service state to apply to the circuit:
 - IS—The circuit is in service.
 - OOS—The circuit is out of service. Traffic is not passed on the circuit.
 - OOS-AINS—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - OOS-MT—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
- Apply to drop ports—Check this box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Check this box if you want the circuit routed on protected drops only, that is, to ONS 15454 cards that are in 1:1, 1:N, or 1+1 protection. If you check this box, CTC provides only protected cards and ports as source and destination choices.

Figure 8-6 Setting Circuit Attributes for a DS-3 Circuit

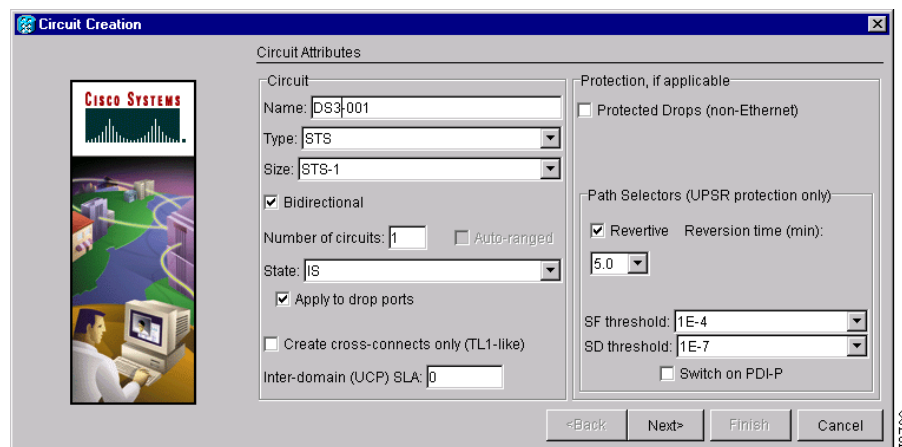

- Step 6** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.


- Step 7** Click **Next**.
- Step 8** Complete the “DLP-A510 Provision a DS-3 Circuit Source and Destination” task on page 8-31.
- Step 9** In the Circuit Routing Preferences area (Figure 8-7 on page 8-23), choose **Route Automatically**. Two options are available; choose either, both, or none based on your preferences:
- Using Required Nodes/Spans—Select this check box to specify nodes and spans to include or exclude in the CTC-generated circuit route.
 - Review Route Before Creation—Select this check box to review and edit the circuit route before the circuit is created.
- Step 10** To set the circuit path protection, complete one of the following:
- To route the circuit on a protected path, leave **Fully Protected Path** checked and continue with Step 14. CTC creates a fully-protected circuit route based on the path diversity option you choose. Fully-protected paths may or may not have path protection path segments (with primary and alternate paths), and the path diversity options apply only to path protection path segments, if any exist.
 - To create an unprotected circuit, uncheck **Fully Protected Path** and continue with Step 13.
 - To route the circuit on a BLSR protection channel, if available, uncheck **Fully Protected Path**, check **Protection Channel Access**, click **Yes** in the Warning dialog box, then continue with Step 13.

**Caution**

Circuits routed on BLSR protection channels are not protected and are preempted during BLSR switches.

- Step 11** If you selected Fully Protected Path in Step 10 and the circuit will be routed on a path protection, choose one of the following:
- Nodal Diversity Required—Ensures that the primary and alternate paths within path protection portions of the complete circuit path are nodally diverse.
 - Nodal Diversity Desired—Specifies that node diversity is preferred, but if node diversity is not possible, CTC creates fiber-diverse paths for the path protection portion of the complete circuit path.
 - Link Diversity Only—Specifies that only fiber-diverse primary and alternate paths for path protection portions of the complete circuit path are needed. The paths may be node-diverse, but CTC does not check for node diversity.

Figure 8-7 Setting Circuit Routing Preferences for a DS-3 Circuit

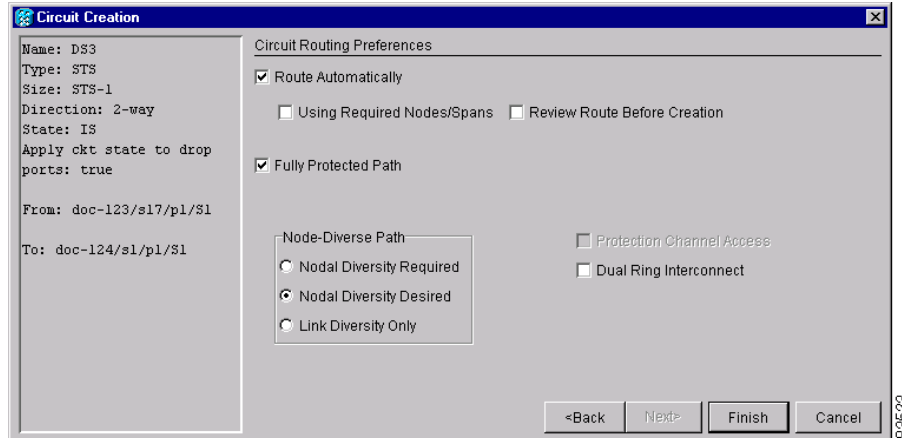

- Step 12** If you selected Fully Protected Path and the circuit will be routed on a path protection dual ring interconnect (DRI), click the **Dual Ring Interconnect** check box.
- Step 13** If you selected Using Required Nodes/Spans in Step 9, complete the following substeps; otherwise, continue with Step 14:
- Click **Next**.
 - In the Circuit Route Constraints area, click a node or span on the circuit map.
 - Click **Include** to include the node or span in the circuit. Click **Exclude** to exclude the node or span from the circuit. The order in which you choose included nodes and spans determines the circuit sequence. Click spans twice to change the circuit direction.
 - Repeat Step c for each node or span you wish to include or exclude.
 - Review the circuit route. To change the circuit routing order, choose a node from the Required Nodes/Lines or Excluded Notes Links lists, then click the **Up** or **Down** buttons to change the circuit routing order. Click **Remove** to remove a node or span.



Note If a node or span stays grey, that node or span is required.

- Step 14** If you selected Review Route Before Creation, complete the following substeps; otherwise, continue with Step 15.
- Click **Next**.
 - Review the circuit route. To add or delete a circuit span, choose a node on the circuit route. Blue arrows show the circuit route. Green arrows indicate spans that you can add. Click a span arrowhead, then click **Include** to include the span or **Remove** to remove the span.
 - If the provisioned circuit does not reflect the routing and configuration you want, click **Back** to verify and change circuit information. If the circuit needs to be routed to a different path, see the “NTP-A185 Create a Manually Routed DS-3 Circuit” procedure on page 8-24.
- Step 15** Click **Finish**. One of the following actions occurs based on the circuit properties you selected:

- If you entered more than 1 in the Number of Circuits field and selected Auto-ranged, CTC automatically creates the number of circuits entered in the Number of Circuits field. If auto ranging cannot complete all the circuits, for example, because sequential ports are unavailable at the source or destination, a dialog box appears. Set the new source or destination for the remaining circuits, then click **Finish** to continue auto ranging.
- If you entered more than 1 in the Number of Circuits field and did not choose Auto-ranged, the Circuit Creation dialog box appears so you can create the remaining circuits. Repeat Steps 8 through 15 for each additional circuit.
- After completing the circuit(s), the Circuits window appears.

Step 16 In the Circuits window, verify that the circuit(s) you just created appear in the circuits list.

Step 17 Complete the “NTP-A135 Test Electrical Circuits” procedure on page 8-41. Skip this step if you built a test circuit.

Stop. You have completed this procedure.

NTP-A185 Create a Manually Routed DS-3 Circuit

Purpose	This procedure creates a DS-3 circuit and allows you to provision the circuit route. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Log into the node where you will create the circuit. See the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 3.

Step 2 If you want to assign a name to the circuit source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 4.

Step 3 From the View menu, choose **Go to Network View**.

Step 4 Click the **Circuits** tab, then click **Create**.

Step 5 In the Circuit Creation dialog box (Figure 8-3 on page 8-15), complete the following fields:

- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave this field blank, CTC will assign a default name to the circuit.
- **Type**—Choose STS. STS cross-connects will carry the DS-3 circuit across the ONS 15454 network.
- **Size**—Choose STS-1.
- **Bidirectional**—Leave this field checked (default).
- **Number of circuits**—Type the number of DS-3 circuits you want to create. The default is 1.

- Auto-ranged—Applies to automatically-routed circuits only. If you entered more than 1 in The number Of Circuits field, uncheck this box. (The box is unavailable if only one circuit is entered in Number of Circuits.)
- State—Choose a service state to apply to the circuit:
 - IS—The circuit is in service.
 - OOS—The circuit is out of service. Traffic is not passed on the circuit.
 - OOS-AINS—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - OOS-MT—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
- Apply to drop ports—Check this box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Select this check box if you want the circuit routed to protect drops only, that is, to ONS 15454 cards that are in 1:1, 1:N, or 1+1 protection. If you select this check box, CTC provides only protected cards as source and destination choices.

Step 6 If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.

Step 7 Click **Next**.

Step 8 Complete the “DLP-A510 Provision a DS-3 Circuit Source and Destination” task on page 8-31.

Step 9 In the Circuit Routing Preferences area (Figure 8-7 on page 8-23), uncheck **Route Automatically**.

Step 10 To set the circuit path protection, complete one of the following:

- To route the circuit on a protected path, leave **Fully Protected Path** checked and continue with Step 11. Fully-protected paths may or may not have path protection path segments (with primary and alternate paths), and the path diversity options apply only to path protection path segments, if any exist.
- To create an unprotected circuit, uncheck **Fully Protected Path** and continue with Step 13.
- To route the circuit on a BLSR protection channel, if available, uncheck **Fully Protected Path**, check **Protection Channel Access**, click **Yes** in the Warning dialog box, then continue with Step 13.

**Caution**

Circuits routed on BLSR protection channels are not protected and are preempted during BLSR switches.

- Step 11** If you selected Fully Protected Path and the circuit will be routed on a path protection, choose one of the following:
- Nodal Diversity Required—Ensures that the primary and alternate paths within the path protection portions of the complete circuit path are nodally diverse.
 - Nodal Diversity Desired—Specifies that node diversity is preferred, but if node diversity is not possible, CTC creates fiber-diverse paths for the path protection portion of the complete circuit path.
 - Link Diversity Only—Specifies that only fiber-diverse primary and alternate paths for path protection portions of the complete circuit path are needed. The paths may be node-diverse, but CTC does not check for node diversity.
- Step 12** If you selected Fully Protected Path and the circuit will be routed on a path protection dual ring interconnect (DRI), click the **Dual Ring Interconnect** check box.
- Step 13** Click **Next**. In the Route Review and Edit area, node icons appear so you can route the circuit manually. The green arrows pointing from the selected node to other network nodes indicate spans that are available for routing the circuit.
- Step 14** Complete the “DLP-A96 Provision a DS-1 or DS-3 Circuit Route” task on page 8-32 for the DS-3 you are creating.
- Step 15** Click **Finish**. If you entered more than 1 in the Number of Circuits field, the Circuit Creation dialog box appears so you can create the remaining circuits. Repeat this procedure for each additional circuit.
- Step 16** When all the circuits are created, the main Circuits window appears. Verify that the circuit(s) you created appear in the window.
- Step 17** Complete the “NTP-A135 Test Electrical Circuits” procedure on page 8-41. Skip this step if you built a test circuit.

Stop. You have completed this procedure.

NTP-A186 Create a Unidirectional DS-3 Circuit with Multiple Drops

Purpose	This procedure creates a unidirectional DS-3 circuit with multiple drops. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.

- Step 2** If you want to assign a name to the circuit source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box (Figure 8-8 on page 8-28), complete the following fields:
- Name—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - Type—Choose STS.
 - Size—Choose STS-1.
 - Bidirectional—Uncheck for this circuit.
 - Number of circuits—Leave the default unchanged (1).
 - Auto-ranged—Unavailable when the Number of Circuits field is 1.
 - State—Choose a service state to apply to the circuit:
 - IS—The circuit is in service.
 - OOS—The circuit is out of service. Traffic is not passed on the circuit.
 - OOS-AINS—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - OOS-MT—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
 - Apply to drop ports—Check this box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Select this check box if you want the circuit routed to protect drops only, that is, to ONS 15454 cards that are in 1:1, 1:N, or 1+1 protection. If you select this check box, CTC provides only protected cards as source and destination choices.

Figure 8-8 Setting Circuit Attributes for a Unidirectional DS-3 Circuit

The screenshot shows the 'Circuit Creation' dialog box with the 'Circuit Attributes' tab selected. The 'Circuit' section includes: Name: Unidirectional DS3, Type: STS, Size: STS-1, Bidirectional: unchecked, Number of circuits: 1, Auto-ranged: unchecked, State: IS, Apply to drop ports: checked, Create cross-connects only (TL1-like): unchecked, and Inter-domain (UCP) SLA: 0. The 'Protection, if applicable' section includes: Protected Drops (non-Ethernet): unchecked, Path Selectors (UPSR protection only): Revertive checked, Reversion time (min): 5.0, SF threshold: 1E-4, SD threshold: 1E-7, and Switch on PDI-P: unchecked. Navigation buttons at the bottom are <Back, Next>, Finish, and Cancel. A small '78906' is visible in the bottom right corner of the dialog box.

- Step 6** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.
- Step 7** Click **Next**.
- Step 8** Complete the “DLP-A510 Provision a DS-3 Circuit Source and Destination” task on page 8-31.
- Step 9** Uncheck **Route Automatically**. When Route Automatically is not selected, Using Required Nodes/Spans and Review Route Before Circuit Creation are unavailable.
- Step 10** To set the circuit path protection, complete one of the following:
- To route the circuit on a protected path, leave **Fully Protected Path** checked and continue with Step 11. Fully-protected paths may or may not have path protection path segments (with primary and alternate paths), and the path diversity options apply only to path protection path segments, if any exist.
 - To create an unprotected circuit, uncheck **Fully Protected Path** and continue with Step 13.
 - To route the circuit on a BLSR protection channel, if available, uncheck **Fully Protected Path**, check **Protection Channel Access**, click **Yes** in the Warning dialog box, then continue with Step 13.

**Caution**

Circuits routed on BLSR protection channels are not protected and are preempted during BLSR switches.

- Step 11** If you selected Fully Protected Path and the circuit will be routed on a path protection, choose one of the following:
- Nodal Diversity Required—Ensures that the primary and alternate paths within the path protection portions of the complete circuit path are nodally diverse.
 - Nodal Diversity Desired—Specifies that node diversity is preferred, but if node diversity is not possible, CTC creates fiber-diverse paths for the path protection portion of the complete circuit path.
 - Link Diversity Only—Specifies that only fiber-diverse primary and alternate paths for path protection portions of the complete circuit path are needed. The paths may be node-diverse, but CTC does not check for node diversity.
- Step 12** If you selected Fully Protected Path and the circuit will be routed on a path protection dual ring interconnect (DRI), click the **Dual Ring Interconnect** check box.

- Step 13** Click **Next**. In the Route Review and Edit area, node icons appear so you can route the circuit manually. The circuit source node is selected. Green arrows pointing from the source node to other network nodes indicate spans that are available for routing the circuit.
- Step 14** Complete the “DLP-A96 Provision a DS-1 or DS-3 Circuit Route” task on page 8-32 for the DS-3 you are creating.
- Step 15** Click **Finish**. After completing the circuit, the Circuits window appears.
- Step 16** In the Circuits window, click the circuit that you want to route to multiple drops. The Delete, Edit, and Search radio buttons become active.
- Step 17** Click **Edit**. The Edit Circuit window appears with the General tab selected. All nodes in the DCC network appear on the network map. Circuit source and destination information appears under the source and destination nodes. To see a detailed view of the circuit, click **Show Detailed Map**. You can rearrange the node icons by selecting the node with the left mouse button while simultaneously pressing **Ctrl**, then dragging the icon to the new location.
- Step 18** In the Edit Circuit dialog box, click the **Drops** tab. A list of existing drops appears.
- Step 19** Click **Create**.
- Step 20** In the Define New Drop dialog box, define the new drop:
- Node—Choose the target node for the circuit drop.
 - Slot—Choose the target card and slot
 - Port, STS—Choose the port and/or STS from the Port and STS drop-down menus. The card selected in Step b determines whether port, STS, or both appear. See Table 8-2 on page 8-3 for a list of options.
 - The routing preferences for the new drop will match those of the original circuit. However, you can modify the following:
 - If the original circuit was routed on a protected path, you can change the nodal diversity options: Required, Desired, Don’t Care; Link Diverse only. See Step 11 for options descriptions.
 - If the original circuit was not routed on a protected path, the Protection Channel Access options is available. See Step 10 for a description of the PCA option.
 - Click **OK**. The new drop appears in the Drops list.
- Step 21** If you need to create additional drops for the circuit, repeat Steps 19 and 20 to create the additional drops.
- Step 22** Click **Close**. The Circuits window appears.
- Step 23** Verify that the new drops appear in the Destination column for the circuit you edited. If they do not appear, repeat this procedure, making sure all options are provisioned correctly.
- Step 24** Complete the “NTP-A135 Test Electrical Circuits” procedure on page 8-41. Skip this step if you built a test circuit.

Stop. You have completed this procedure.

DLP-A218 Provision Path Protection Selectors During Circuit Creation

Purpose	This task provisions path protection selectors during circuit creation. Use this task only if the circuit will be routed on a path protection.
Tools/Equipment	None
Prerequisite Procedures	You must have the Circuit Creation wizard open
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In the Circuit Attributes panel of the Circuit Creation wizard, set the path protection path selectors:
- **Revertive**—Check this box if you want traffic to revert to the working path when the conditions that diverted it to the protect path are repaired. If you do not choose Revertive, traffic remains on the protect path after the switch.
 - **Reversion time**—If Revertive is checked, click the Reversion time field and choose a reversion time from the drop-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. This is the amount of time that will elapse before the traffic reverts to the working path. Traffic can revert when conditions causing the switch are cleared.
 - **SF threshold**—For STS circuits, set the path protection path-level signal failure bit error rate (BER) thresholds. Unavailable for VT circuits.
 - **SD threshold**—For STS circuits, set the path protection path-level signal degrade BER thresholds. Unavailable for VT circuits.
 - **Switch on PDI-P**—For STS circuits, check this box if you want traffic to switch when an STS payload defect indicator is received. Unavailable for VT circuits.
- Step 2** Return to your originating procedure (NTP).
-

DLP-A510 Provision a DS-3 Circuit Source and Destination

Purpose	This task provisions an electrical circuit source and destination for a DS-3 circuit.
Tools/Equipment	None
Prerequisite Procedures	Perform this task during one of the following procedures: NTP-A184 Create an Automatically Routed DS-3 Circuit, page 8-20, or NTP-A185 Create a Manually Routed DS-3 Circuit, page 8-24, or NTP-A186 Create a Unidirectional DS-3 Circuit with Multiple Drops, page 8-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

After you have selected the circuit properties in the Circuit Source dialog box according to the specific circuit creation procedure, you are ready to provision the circuit source.


-
- Step 1** From the Node drop-down menu, choose the node where the source will originate.
 - Step 2** From the Slot drop-down menu, choose the slot containing the DS-3 card where the circuit will originate. If you are configuring a DS-3 circuit with a transmux card, choose the DS3XM-6 card.
 - Step 3** From the Port drop-down menu, choose the source DS-3 or DS3XM-6 card as appropriate.
 - Step 4** If you need to create a secondary source, for example, a path protection bridge-selector circuit entry point in a multivendor path protection, click **Use Secondary Source** and repeat Steps 1 through 3 to define the secondary source. If you do not need to create a secondary source, continue with Step 6.
 - Step 5** Click **Next**.
 - Step 6** From the Node drop-down menu, choose the destination (termination) node.
 - Step 7** From the Slot drop-down menu, choose the slot containing the destination card. The destination is typically a DS3XM-6 or DS-3 card. You can also choose an OC-N card to the map DS-3 circuit to an STS.
 - Step 8** Depending on the destination card, choose the destination port or STS from the sub-menus that appear based on the card selected in Step 2. See Table 8-2 on page 8-3 for a list of valid options. CTC does not display ports, STSs, VTs, or DS1s if they are already in use by other circuits. If you and a user working on the same network choose the same port, STS, VT, port, or DS1 simultaneously, one of you will receive a Path in Use error and be unable to complete the circuit. The user with the incomplete circuit needs to choose new destination parameters.
 - Step 9** If you need to create a secondary destination, for example, a path protection bridge-selector circuit exit point in a multivendor path protection, click **Use Secondary Destination** and repeat Steps 7 and 8 to define the secondary destination.
 - Step 10** Click **Next**.
 - Step 11** Return to your originating procedure (NTP).
-

DLP-A96 Provision a DS-1 or DS-3 Circuit Route

Purpose	This task provisions the circuit route for manually-routed DS-1 or DS-3 circuits. This task does not apply to DWDM nodes.
Tools/Equipment	None
Prerequisite Procedures	You perform this task during one of the following procedures: NTP-A182 Create a Manually Routed DS-1 Circuit, page 8-10, or NTP-A183 Create a Unidirectional DS-1 Circuit with Multiple Drops, page 8-14, or NTP-A185 Create a Manually Routed DS-3 Circuit, page 8-24, or NTP-A186 Create a Unidirectional DS-3 Circuit with Multiple Drops, page 8-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In the Circuit Creation wizard in the Route Review and Edit area, click the source node icon if it is not already selected.
- Step 2** Starting with a span on the source node, click the arrow of the span you want the circuit to travel. The arrow turns white. In the Selected Span area, the From and To fields provide span information. The source STS and VT (DS-1 circuit only) appear. Figure 8-9 shows a DS-1 circuit example.

Figure 8-9 Manually Routing a DS-1 Circuit

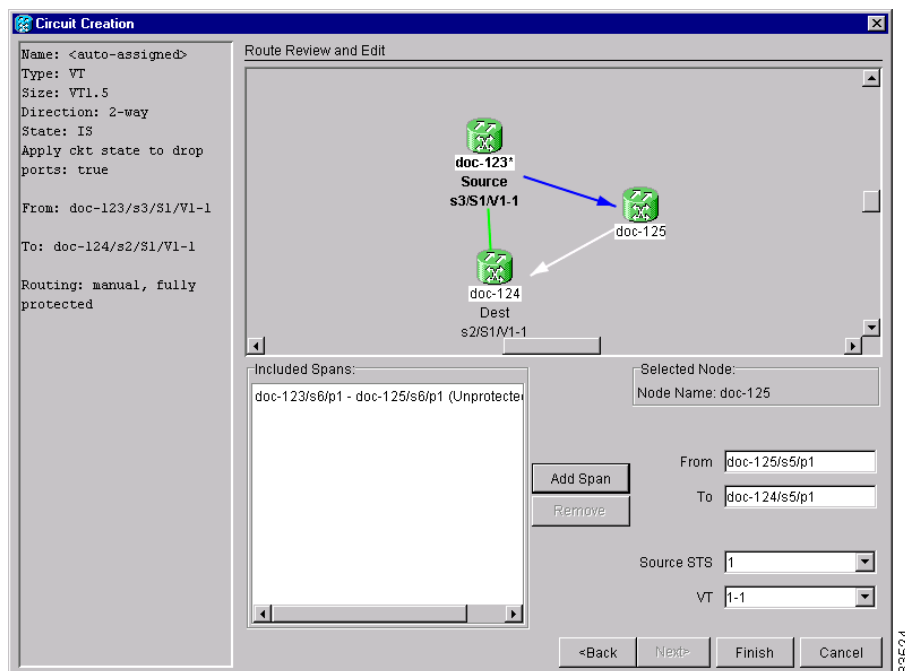

- Step 3** If you want to change the source STS, adjust the Source STS field; otherwise, continue with Step 4.

Step 4 If you want to change the source VT for DS-1 circuits, adjust the Source VT field; otherwise, continue with Step 5.



Note VT is grey (unavailable) for DS-3 circuits.

Step 5 Click **Add Span**. The span is added to the Included Spans list and the span arrow turns blue.

Step 6 Repeat Steps 2 through 5 until the circuit is provisioned from the source to the destination node through all intermediary nodes. If the Fully Protect Path check box is checked on the Circuit Routing Preferences panel, you must:

- Add two spans for all path protection or unprotected portions of the circuit route from the source to the destination. If the Dual Ring Interconnect check box is checked, you must also add bidirectional spans between the DRI nodes. To do this, click a DRI node, then double-click the arrow pointing to the adjacent DRI node to create a bidirectional span.
- Add one span for all BLSR or 1+1 portions of route from the source to the destination. Return to your originating procedure (NTP).

Step 7 Return to your originating procedure (NTP).

NTP-A133 Create an Automatically Routed VT Tunnel

Purpose	This procedure creates an automatically routed VT tunnel from source to destination nodes. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note VT tunnels allow VT circuits to pass through intermediary ONS 15454s without consuming VT matrix resources on the cross-connect card. VT tunnels can carry 28 VT1.5 circuits. In general, creating VT tunnels is a good idea if you are creating many VT circuits from the same source and destination. Refer to the Circuits and Tunnels chapter in the *Cisco ONS 15454 Reference Manual* for more information.

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to create the VT tunnel. If you are already logged in, continue with Step 2.

Step 2 If you want to assign a name to the tunnel source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.


Step 3 From the View menu, choose **Go to Network View**.

Step 4 Click the **Circuits** tab, then click **Create**.

Step 5 In the Circuit Creation dialog box (Figure 8-10 on page 8-34), complete the following fields:

- Name—Assign a name to the VT tunnel. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the tunnel.
- Type—Choose VT Tunnel. The Bidirectional, Number of Circuits, Field Size, and Create cross-connects fields in the dialog box become unavailable.
- Size—Unavailable for VT tunnels.
- Bidirectional—Unavailable for VT tunnels.
- Number of circuits—Unavailable for VT tunnels.
- Auto-ranged—Unavailable for VT tunnels.
- State—Choose a service state to apply to the VT tunnel:
 - IS—The VT tunnel is in service.
 - OOS—The VT tunnel is out of service. Traffic is not passed on the circuit.
 - OOS-AINS—The VT tunnel is in service when it receives a valid signal; until then, the tunnel is out of service.
 - OOS-MT—The VT tunnel is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the tunnel. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
- Apply to drop ports—Uncheck this box.
- Inter-domain (UCP) SLA—If the tunnel will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.

Figure 8-10 Setting Attributes for a VT Tunnel

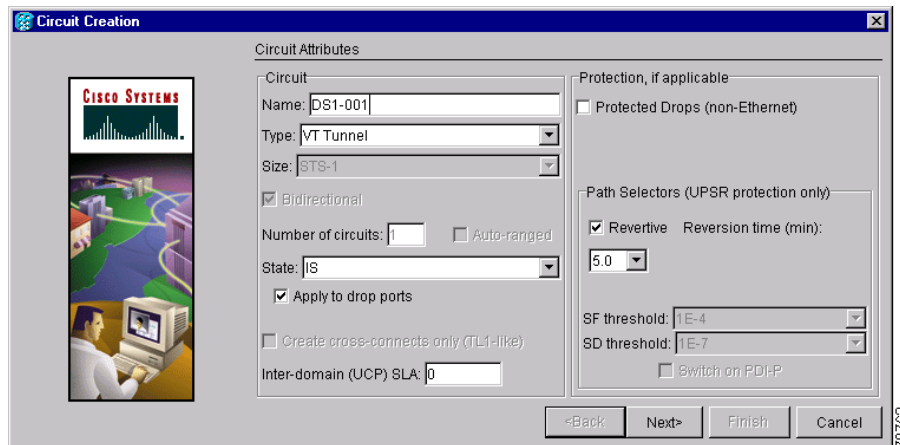

- Step 6** Click **Next**.
- Step 7** In the Circuit Source area, choose the node where the VT tunnel will originate from the Node drop-down menu.
- Step 8** Click **Next**.
- Step 9** In the Circuit Destination area, choose the node where the VT tunnel will terminate from the Node drop-down menu.

- Step 10** Click **Next**.
- Step 11** In the Circuit Routing Preferences area, choose **Route Automatically**. Two options are available; choose either, both, or none based on your preferences.
- Using Required Nodes/Spans—Select this check box to specify nodes and spans to include or exclude in the CTC-generated tunnel route.
 - Review Route Before Creation—Select this check box to review and edit the VT tunnel route before the circuit is created.
- Step 12** If you selected Using Required Nodes/Spans:
- a. Click **Next**.
 - b. In the Circuit Route Constraints area, click a span on the VT tunnel map.
 - c. Click **Include** to include the node or span in the VT tunnel. Click **Exclude** to exclude the node or span from the VT tunnel. The order in which you choose included nodes and spans sets the VT tunnel sequence. Click spans twice to change the circuit direction.
 - d. Repeat Step c for each node or span you wish to include or exclude.
 - e. Review the VT tunnel route. To change the tunnel routing order, choose a node in the Required Nodes/Lines or Excluded Notes Links lists, then click the **Up** or **Down** buttons to change the tunnel routing order. Click **Remove** to remove a node or span.
- Step 13** If you selected Review Route Before Creation:
- a. Click **Next**.
 - b. Review the tunnel route. To add or delete a tunnel span, choose a node on the tunnel route. Blue arrows show the tunnel route. Green arrows indicate spans that you can add. Click a span arrowhead, then click **Include** to include the span or **Remove** to remove the span.
 - c. If the provisioned tunnel does not reflect the routing and configuration you want, click **Back** to verify and change tunnel information.
- Step 14** Click **Finish**. The Circuits window appears.
- Step 15** Verify that the tunnel you just created appears in the circuits list. VT tunnels are identified by VTT in the Type column.
- Stop. You have completed this procedure.**
-

NTP-A134 Create a Manually Routed VT Tunnel

Purpose	This procedure creates a manually routed VT tunnel from source to destination nodes. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

VT tunnels allow VT circuits to pass through intermediary ONS 15454s without consuming VT matrix resources on the cross-connect card. VT tunnels can carry 28 VT1.5 circuits. In general, creating VT tunnels is a good idea if you are creating many VT circuits from the same source and destination. Refer to the Circuits and Tunnels chapter in the *Cisco ONS 15454 Reference Manual* for more information.

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the VT tunnel. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the tunnel source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box (Figure 8-10 on page 8-34), complete the following fields:
- **Name**—Assign a name to the VT tunnel. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the tunnel.
 - **Type**—Choose VT Tunnel. The Bidirectional, Number of Circuits, Field Size, and Create cross-connects fields in the dialog box become unavailable (greyed out).
 - **Size**—Unavailable for VT tunnels.
 - **Bidirectional**—Unavailable for VT tunnels.
 - **Number of circuits**—Unavailable for VT tunnels.
 - **Auto-ranged**—Unavailable for VT tunnels.
 - **State**—Choose a service state to apply to the VT tunnel:
 - **IS**—The VT tunnel is in service.
 - **OOS**—The VT tunnel is out of service. Traffic is not passed on the circuit.
 - **OOS-AINS**—The VT tunnel is in service when it receives a valid signal; until then, the circuit is out of service.
 - **OOS-MT**—The VT tunnel is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed. Use OOS-MT for testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.


- Apply to drop ports—Uncheck this box.
 - Inter-domain (UCP) SLA—If the tunnel will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Step 6** Click **Next**.
- Step 7** In the Circuit Source area, choose the node where the VT tunnel will originate from the Node drop-down menu.
- Step 8** Click **Next**.
- Step 9** In the Circuit Destination area, choose the node where the VT tunnel will terminate from the Node drop-down menu.
- Step 10** Click **Next**.
- Step 11** In the Circuit Routing Preferences area, uncheck **Route Automatically**.
- Step 12** Click **Next**. In the Route Review and Edit area, node icons appear so you can route the tunnel. The circuit source node is selected. Green arrows pointing from the source node to other network nodes indicate spans that are available for routing the tunnel.
- Step 13** Complete the “DLP-A219 Provision a VT Tunnel Route” task on page 8-37 for the tunnel you are creating. The Circuits window appears.
- Step 14** Verify that the tunnel you just created appears in the circuits list. VT tunnels are identified by VTT in the Type column.
- Step 15** Return to your originating procedure (NTP).
-

DLP-A219 Provision a VT Tunnel Route

Purpose	This task provisions the route for a manually-routed VT tunnel.
Tools/Equipment	None
Prerequisite Procedures	Perform this task as part of the “NTP-A134 Create a Manually Routed VT Tunnel” procedure on page 8-36.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In the Circuit Creation wizard in the Route Review and Edit area, click the source node icon if it is not already selected. Arrows indicate the available spans for routing the tunnel from the source node.
- Step 2** Click the arrow of the span you want the VT tunnel to travel. The arrow turns white. In the Selected Span area, the From and To fields show the slot and port that will carry the tunnel. The source STS appears. Figure 8-11 shows an example.

Figure 8-11 Manually Routing a VT Tunnel

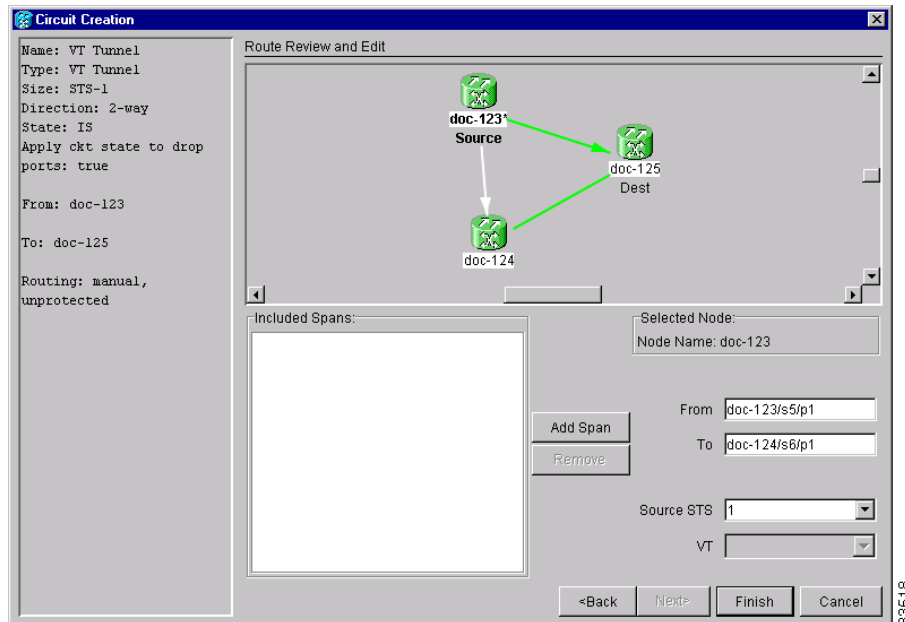

- Step 3** If you want to change the source STS, change it in the Source STS field; otherwise, continue with the next step.
- Step 4** Click **Add Span**. The span is added to the Included Spans list and the span arrow turns blue.
- Step 5** Repeat Steps 3 and 4 until the tunnel is provisioned from the source to the destination node through all intermediary nodes.
- Step 6** Return to your originating procedure (NTP).

NTP-A187 Create a VT Aggregation Point

Purpose	This procedure creates a VT aggregation point (VAP). VAPs allow multiple DS-1 (VT1.5) circuits to be aggregated on a single STS on an OC-N, EC-1, or DS3XM-6 card. VAPs allow multiple VT1.5 circuits to pass through cross-connect cards without utilizing resources on the cross-connect card VT matrix. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note


VT aggregation points can be created for circuits on BLSR, 1+1, or unprotected nodes. They cannot be created for circuits on path protection nodes.

**Note**

The maximum number of VAPs that you can create depends on the node protection topology and number of VT1.5 circuits that terminate on the node. Assuming no other VT1.5 circuits terminate at the node, the maximum number of VAPs that you can terminate at one node is 8 for 1+1 and path protection and 12 for BLSR protection.

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the VT aggregation point. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the tunnel source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box (Figure 8-12 on page 8-40), complete the following fields:
- Name—Assign a name to the VT aggregation point. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the VAP.
 - Type—Choose **VT Aggregation Point**. The Size, Bidirectional, Number of Circuits, and Create cross-connects fields in the dialog box become unavailable.
 - Size—Unavailable for VAPs.
 - Bidirectional—Unavailable for VAPs.
 - Number of circuits—Unavailable for VAPs.
 - Auto-ranged—Unavailable for VAPs.
 - State—Choose a service state to apply to the VAP:
 - IS—The VAP is in service.
 - OOS—The VAP is out of service. Traffic is not passed on the circuit.
 - OOS-AINS—The VAP is in service when it receives a valid signal; until then, the tunnel is out of service.
 - OOS-MT—The VAP is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the VAP. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
 - Apply to drop ports—Uncheck this box.
 - Inter-domain (UCP) SLA—If the VAP will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.

Figure 8-12 Setting Attributes for a VT Aggregation Point

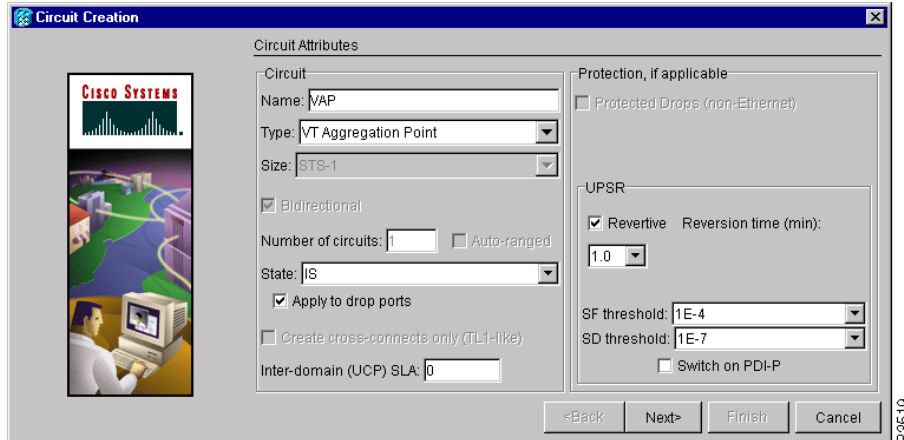

Step 6 Click **Next**.

Step 7 In the Circuit Source area, choose the source node, slot, port, and STS for the VAP. The VAP source is where the DS-1 (VT1.5) circuits will be aggregated into a single STS. The VAP destination is where the DS-1 circuits originate.

- From the Node drop-down menu, choose the node where the VAP will originate.
- From the Slot drop-down menu, choose the slot containing the OC-N, EC-1 or DS3XM-6 card where the VAP will originate.
- Choose either the port or STS:
 - If you choose an EC-1 or DS3XM-6 card, from the Port drop-down menu, choose the source port.
 - If you choose an OC-N card, from the STS drop-down menu, choose the source STS.

Step 8 Click **Next**.

Step 9 In the Circuit Destination area, choose the node where the VT circuits aggregated by the VAP will terminate from the Node drop-down menu.

Step 10 Click **Next**.

Step 11 In the Circuit Routing Preferences area, choose **Route Automatically**. Two options are available; choose either, both, or none based on your preferences.

- Using Required Nodes/Spans—Select this check box to specify nodes and spans to include or exclude in the CTC-generated tunnel route.
- Review Route Before Creation—Select this check box to review and edit the VT tunnel route before the circuit is created.

Step 12 If you selected Using Required Nodes/Spans:

- Click **Next**.
- In the Circuit Route Constraints area, click a span on the VAP map.
- Click **Include** to include the node or span in the VAP. Click **Exclude** to exclude the node or span from the VAP. The sequence in which you choose the nodes and spans sets the VAP sequence. Click spans twice to change the circuit direction.
- Repeat Step c for each node or span you wish to include or exclude.

- e. Review the VAP route. To change the tunnel routing order, choose a node in the Required Nodes/Lines or Excluded Notes Links lists, then click the **Up** or **Down** buttons to change the tunnel routing order. Click **Remove** to remove a node or span.

Step 13 If you selected Review Route Before Creation:

- a. Click **Next**.
- b. Review the tunnel route. To add or delete a tunnel span, choose a node on the tunnel route. Blue arrows show the tunnel route. Green arrows indicate spans that you can add. Click a span arrowhead, then click **Include** to include the span or **Remove** to remove the span.
- c. If the provisioned tunnel does not reflect the routing and configuration you want, click **Back** to verify and change tunnel information.

Step 14 Click **Finish**. The Circuits window appears.

Step 15 Verify that the VAP you just created appears in the circuits list. VAPs are identified in the Type column.

Stop. You have completed this procedure.

NTP-A135 Test Electrical Circuits

Purpose	This procedure tests DS-1 and DS-3 circuits. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	A test set and all appropriate cables
Prerequisite Procedures	This procedure assumes you completed a facility loopback tests on the fibers and cables from the source and destination ONS 15454s to the DSX, and that you created a circuit using one of the following procedures: NTP-A181 Create an Automatically Routed DS-1 Circuit, page 8-6 NTP-A182 Create a Manually Routed DS-1 Circuit, page 8-10 NTP-A183 Create a Unidirectional DS-1 Circuit with Multiple Drops, page 8-14 NTP-A184 Create an Automatically Routed DS-3 Circuit, page 8-20 NTP-A185 Create a Manually Routed DS-3 Circuit, page 8-24 NTP-A186 Create a Unidirectional DS-3 Circuit with Multiple Drops, page 8-26
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to test the electrical circuits. If you are already logged in, continue with Step 2.

Step 2 From the View menu, choose **Go to Network View**.

Step 3 Click the **Circuit** tab.

- Step 4** Set the circuit and circuit ports to the maintenance state (OOS-MT). Take note of the original state because you will return the circuit to that state later.
- Click the circuit you want to test then choose **Circuits > Set Circuit State** from the Tools menu.
 - In the Set Circuit State dialog box, choose **OOS-MT** from the Target State drop-down menu.
 - Check the **Apply to drop ports** check box.
 - Click **Apply**.
- Step 5** Set the source and destination DS-1 card line length:
- In network view, double-click the source node.
 - Double-click the circuit source card and click the **Provisioning > Line** tabs.
 - From the circuit source port Line Length drop-down menu, choose the line length for the distance (in feet) between the DSX (if used) or circuit termination point and the source ONS 15454.
 - Click **Apply**.
 - From the View menu, choose **Go to Network View**.
 - Repeat Steps a. through e. for the destination port line length.
- Step 6** Attach loopback cables to the circuit destination card.
- Verify the integrity of the loopback cable by looping the test set transmit (Tx) connector to the test set receive (Rx) connector. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly before going to Step b.
 - Attach the loopback cable to the port you are testing. Connect the transmit the (Tx) connector to the receive (Rx) connector of the port.
- Step 7** Attach loopback cables to the circuit source node.
- Verify the integrity of loopback cable by looping the test set transmit (Tx) connector to the test set receive (Rx) connector. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly before going to Step b.
 - Attach the loopback cable to the port you are testing. Connect the test set to the circuit source port: (transmit (Tx) port of the test set to the circuit receive (Rx) port; test set receive (Rx) port to the circuit transmit (Tx) port.
- Step 8** Configure the test set for the ONS 15454 card that is the source of the circuit you are testing:
- DS-1—If you are testing an unmuxed DS-1, you must have a DSX-1 panel or a direct DS-1 interface into the ONS 15454. Set the test set for DS-1. For information about configuring your test set, consult your test set user guide.
 - DS-3—If you are testing a clear channel DS-3, you must have a DSX-3 panel or a direct DS-3 interface into the ONS 15454. Set the test set for clear channel DS-3. For information about configuring your test set, consult your test set user guide.
 - DS3XM-6—If you are testing a DS-1 circuit on a DS3XM-6 card you must have a DSX-3 panel or a direct DS-3 interface to the ONS 15454. Set the test set for a muxed DS3. After you choose muxed DS-3, choose the DS-1 to test on the muxed DS-3. For information about configuring your test set, consult your test set user guide.
 - EC-1—If you are testing a DS-1 on an EC1 card, you must have a DSX-3 panel or a direct DS-3 interface to the ONS 15454. Set the test set for an STS-1. After you choose STS-1, choose the DS1 to test the STS-1. For information about configuring your test set, consult your test set user guide.
- Step 9** Verify that the test set shows a clean signal. If a clean signal does not appear, repeat Steps 1 through 8 to make sure the test set and cabling is configured correctly.

- Step 10** Inject errors from the test set. Verify that the errors appear at the source and destination nodes.
- Step 11** Clear the PMs for the ports that you tested. See the “DLP-A130 Clear Selected PM Counts” task on page 10-7 for instructions.
- Step 12** Put the circuit and circuit ports back to the state they were in at the beginning of the test:
- Click the circuit you want to test then choose **Circuits > Set Circuit State** from the Tools menu.
 - In the Set Circuit State dialog box, choose **IS** (in service), **OOS** (out of service) or **OOS-AINS** (auto in service) from the Target State drop-down menu.
 - Check the **Apply to drop ports** check box.
 - Click **Apply**.
- Step 13** Perform the protection switch test appropriate to the SONET topology:
- For path protection configurations, complete the “DLP-A94 Path Protection Protection Switching Test” task on page 6-37
 - For BLSRs complete the “DLP-A91 BLSR Switch Test” task on page 6-25.
- Step 14** Perform a bit error rate test (BERT) for 12 hours or follow your site requirements for length of time. For information about configuring your test set for BERT, see your test set user guide.
- Step 15** After the BERT is complete, print the results or save them to a disk for future reference. For information about printing or saving test results see your test set user guide.
- Stop. You have completed this procedure.**
-

NTP-A188 Create an Automatically Routed OC-N Circuit

Purpose	This procedure creates an automatically-routed bidirectional or unidirectional OC-N circuit, including STS-1 and concatenated STS-3c, STS-6c, STS-9c, STS-12c, STS-24c, STS-48c, or STS-192c speeds. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the tunnel source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box (Figure 8-13 on page 8-45), complete the following fields:


- Name—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
- Type—Choose STS.
- Size—Choose the OC-N circuit size: STS-1, STS-3c, STS-6c, STS-9c, STS-12c, STS-24c, STS-48c, or STS-192c.
- Bidirectional—Leave checked for this circuit (default).
- Number of circuits—Type the number of OC-N circuits you want to create. The default is 1. If you are creating multiple circuits with the same source and destination, you can use auto-ranging to create the circuits automatically.
- Auto-ranged—This check box is automatically selected when you enter more than 1 in the Number of circuits field. Leave this check box selected if you are creating multiple OC-N circuits with the same source and destination and you want CTC to create the circuits automatically. Uncheck the box if you do not want CTC to create the circuits automatically.
- State—Choose a service state to apply to the circuit:
 - IS—The circuit is in service.
 - OOS—The circuit is out of service. Traffic is not passed on the circuit.
 - OOS-AINS—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - OOS-MT—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
- Apply to drop ports—Check this box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.


- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Select this check box if you want the circuit routed to protected drops only, that is, to ONS 15454 cards that are in 1:1, 1:N, or 1+1 protection. If you select this check box, CTC provides only protected cards as source and destination choices.

Figure 8-13 Setting Circuit Attributes for an OC-N Circuit

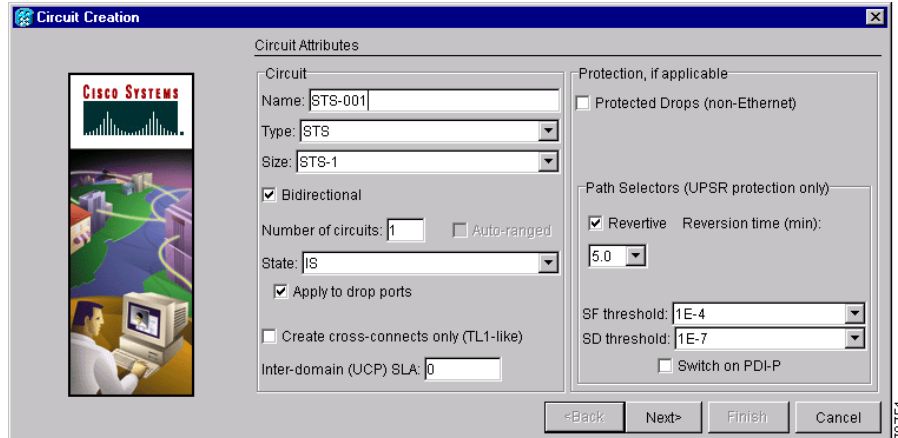

- Step 6** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.
- Step 7** Click **Next**.
- Step 8** Complete the “DLP-A97 Provision an OC-N Circuit Source and Destination” task on page 8-52 for the OC-N circuit you are creating.
- Step 9** In the Circuit Routing Preferences area (Figure 8-14 on page 8-46), choose **Route Automatically**. Two options are available; choose either, both, or none based on your preferences.
- Using Required Nodes/Spans—Choose this check box to specify nodes and spans to include or exclude in the CTC-generated circuit route.
 - Review Route Before Creation—Choose this check box to review and edit the circuit route before the circuit is created.
- Step 10** To set the circuit path protection, complete one of the following:
- To route the circuit on a protected path, leave **Fully Protected Path** checked and continue with Step 11. CTC creates a fully-protected circuit route based on the path diversity option you choose. Fully-protected paths may or may not have path protection path segments (with primary and alternate paths), and the path diversity options apply only to path protection path segments, if any exist.
 - To create an unprotected circuit, uncheck **Fully Protected Path** and continue with Step 13.
 - To route the circuit on a BLSR protection channel, if available, uncheck **Fully Protected Path**, check **Protection Channel Access**, click **Yes** in the Warning dialog box, then continue with Step 13.
- Step 11** If you selected Fully Protected Path and the circuit will be routed on a path protection, choose one of the following:
- Nodal Diversity Required—Ensures that the primary and alternate paths within path protection portions of the complete circuit path are nodally diverse.
 - Nodal Diversity Desired—Specifies that node diversity is preferred, but if node diversity is not possible, CTC creates fiber-diverse paths for the path protection portion of the complete circuit path.
 - Link Diversity Only—Specifies that only fiber-diverse primary and alternate paths for path protection portions of the complete circuit path are needed. The paths may be node-diverse, but CTC does not check for node diversity.

Figure 8-14 Setting Circuit Routing Preferences for an OC-N Circuit

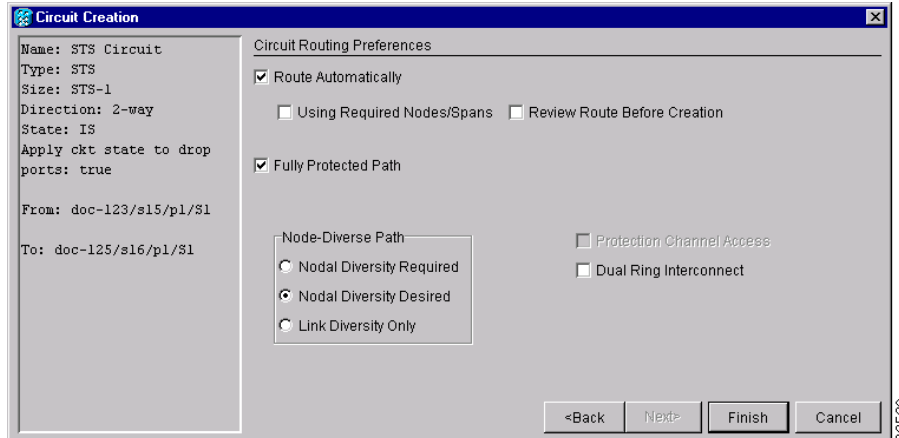

- Step 12** If you selected Fully Protected Path and the circuit will be routed on a path protection dual ring interconnect (DRI), click the **Dual Ring Interconnect** check box.
- Step 13** If you selected Using Required Nodes/Spans in Step 9, complete the following substeps. If not, continue with Step 14:
- Click **Next**.
 - In the Circuit Route Constraints area, click a node or span on the circuit map.
 - Click **Include** to include the node or span in the circuit, or click **Exclude** to exclude the node or span from the circuit. The order in which you choose included nodes and spans is the order in which the circuit will be routed. Click spans twice to change the circuit direction.
 - Repeat Step c. for each node or span you wish to include or exclude.
 - Review the circuit route. To change the circuit routing order, choose a node in the Required Nodes/Lines or Excluded Notes Links lists, then click the **Up** or **Down** buttons to change the circuit routing order. Click **Remove** to remove a node or span.
- Step 14** If you selected Review Route Before Creation in Step 9, complete the following substeps; otherwise, continue with Step 15:
- Click **Next**.
 - Review the circuit route. To add or delete a circuit span, choose a node on the circuit route. Blue arrows show the circuit route. Green arrows indicate spans that you can add. Click a span arrowhead, then click **Include** to include the span or **Remove** to remove the span.
 - If the provisioned circuit does not reflect the routing and configuration you want, click **Back** to verify and change circuit information. If the circuit needs to be routed to a different path, see the “NTP-A189 Create a Manually Routed OC-N Circuit” procedure on page 8-47 to assign the circuit route yourself.
- Step 15** Click **Finish**. One of the following occurs, based on the circuit properties you provisioned in the Circuit Creation dialog box:
- If you entered more than 1 in the number of Circuits field and selected Auto-ranged, CTC automatically creates the number of circuits entered in Number of circuits. If auto ranging cannot complete all the circuits, for example, because sequential ports are unavailable on the source or destination, a dialog box appears. Set the new source or destination for the remaining circuits, then click **Finish** to continue auto ranging.

- If you entered more than 1 in the number of Circuits field and did not choose Auto-ranged, the Circuit Creation dialog box appears so you can create the remaining circuits. Repeat Steps Step 5 through 15 for each additional circuit.
 - After completing the circuit(s), the Circuits window appears.
- Step 16** In the Circuits window, verify that the circuit(s) you created appear in the circuits list.
- Step 17** Complete the “NTP-A62 Test OC-N Circuits” procedure on page 8-55. Skip this step if you built a test circuit.
- Stop. You have completed this procedure.**
-

NTP-A189 Create a Manually Routed OC-N Circuit

Purpose	This procedure creates a manually routed, bidirectional or unidirectional OC-N circuit, including STS-1 and concatenated STS-3c, STS-6c, STS-9c, STS-12c, STS-24c, STS-48c, or STS-192c speeds. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the tunnel source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** In the Circuit Creation dialog box, complete the following fields:
- Name—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - Type—Choose **STS**.
 - Size—Choose the OC-N circuit size. Choices are STS-1, STS-3c, STS-6c, STS-9c, STS-12c, STS-24c, STS-48c, or STS-192c.
 - Bidirectional—Leave checked for this circuit (default).
 - Number of circuits—Type the number of OC-N circuits you want to create. The default is 1.
 - Auto-ranged—Applies to automatically-routed circuits only. If you entered more than 1 in the Number of Circuits field, uncheck this box. (The box is unavailable if only one circuit is entered in Number of Circuits.)
 - State—Choose a service state to apply to the circuit:
 - IS—The circuit is in service.

- OOS—The circuit is out of service. Traffic is not passed on the circuit.
- OOS-AINS—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
- OOS-MT—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
- Apply to drop ports—Check this box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Select this check box if you want the circuit routed to protect drops only, that is, to ONS 15454 cards that are in 1:1, 1:N, or 1+1 protection. If you select this check box, CTC provides only protected cards as source and destination choices.

- Step 5** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.
- Step 6** Click **Next**.
- Step 7** Complete the “DLP-A97 Provision an OC-N Circuit Source and Destination” task on page 8-52 for the OC-N circuit you are creating.
- Step 8** In the Circuit Routing Preferences area (Figure 8-14 on page 8-46), uncheck **Route Automatically**.
- Step 9** To set the circuit path protection, complete one of the following:
- To route the circuit on a protected path, leave **Fully Protected Path** checked and continue with Step 10.
 - To create an unprotected circuit, uncheck **Fully Protected Path** and continue with Step 12.
 - To route the circuit on a BLSR protection channel, if available, uncheck **Fully Protected Path**, check **Protection Channel Access**, click **Yes** in the Warning dialog box, then continue with Step 12.



Caution

Circuits routed on BLSR protection channels are not protected and are preempted during BLSR switches.

- Step 10** If you selected Fully Protected Path and the circuit will be routed on a path protection, choose one of the following:
- **Nodal Diversity Required**—Ensures that the primary and alternate paths within the path protection portions of the complete circuit path are nodally diverse.
 - **Nodal Diversity Desired**—Specifies that node diversity is preferred, but if node diversity is not possible, CTC creates fiber-diverse paths for the path protection portion of the complete circuit path.
 - **Link Diversity Only**—Specifies that only fiber-diverse primary and alternate paths for path protection portions of the complete circuit path are needed. The paths may be node-diverse, but CTC does not check for node diversity.
- Step 11** If you selected Fully Protected Path and the circuit will be routed on a path protection dual ring interconnect (DRI), click the **Dual Ring Interconnect** check box.
- Step 12** Click **Next**. In the Route Review and Edit area, node icons appear so you can route the circuit manually.
- Step 13** Complete the “DLP-A98 Provision an OC-N Circuit Route” task on page 8-53.
- Step 14** Click **Finish**. If the path does not meet the specified path diversity requirement, CTC displays an error message and allows you to change the circuit path. If you entered more than 1 in the number of Circuits field, the Circuit Creation dialog box appears after the circuit is created so you can create the remaining circuits. Repeat Steps 4 through 14 for each additional circuit.
- Step 15** When all the circuits are created, the main Circuits window appears. Verify that the circuit(s) you created appear in the window.
- Step 16** Complete the “NTP-A62 Test OC-N Circuits” procedure on page 8-55.
- Stop. You have completed this procedure.**
-

NTP-A190 Create a Unidirectional OC-N Circuit with Multiple Drops

Purpose	This procedure creates a unidirectional OC-N circuit with multiple traffic drops (circuit destinations). This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Log into the node where you will create the circuit. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the tunnel source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.

Step 5 In the Circuit Creation dialog box, complete the following fields:

- Name—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
- Type—Choose STS.
- Size—Choose the circuit size: STS-1, STS-3c, STS-6c, STS-9c, STS-12c, STS-24c, STS-48c, or STS-192c.
- Bidirectional—Uncheck this check box for this circuit.
- Number of circuits—Leave the default unchanged (1).
- Auto-ranged—Unavailable when the Number of Circuits field is 1.
- State—Choose a service state to apply to the circuit:
 - IS—The circuit is in service.
 - OOS—The circuit is out of service. Traffic is not passed on the circuit.
 - OOS-AINS—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - OOS-MT—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
- Apply to drop ports—Check this box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Select this check box if you want the circuit routed to protect drops only, that is, to ONS 15454 cards that are in 1:1, 1:N, or 1+1 protection. If you select this check box, CTC provides only protected cards as source and destination choices.

Step 6 If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.

Step 7 Click **Next**.

Step 8 Complete the “DLP-A97 Provision an OC-N Circuit Source and Destination” task on page 8-52 for the circuit you are creating.

- Step 9** Uncheck **Route Automatically**. When Route Automatically is not selected, Using Required Nodes/Spans and Review Route Before Circuit Creation are unavailable.
- Step 10** To set the circuit path protection, complete one of the following:
- To route the circuit on a protected path, leave **Fully Protected Path** checked and continue with Step 11. Fully-protected paths may or may not have path protection path segments (with primary and alternate paths), and the path diversity options apply only to path protection path segments, if any exist.
 - To create an unprotected circuit, uncheck **Fully Protected Path** and continue with Step 13.
 - To route the circuit on a BLSR protection channel, if available, uncheck **Fully Protected Path**, check **Protection Channel Access**, click **Yes** in the Warning dialog box, then continue with Step 13.

**Caution**

Circuits routed on BLSR protection channels are not protected and are preempted during BLSR switches.

- Step 11** If you selected Fully Protected Path and the circuit will be routed on a path protection, choose one of the following:
- **Nodal Diversity Required**—Ensures that the primary and alternate paths within the path protection portions of the complete circuit path are nodally diverse.
 - **Nodal Diversity Desired**—Specifies that node diversity is preferred, but if node diversity is not possible, CTC creates fiber-diverse paths for the path protection portion of the complete circuit path.
 - **Link Diversity Only**—Specifies that only fiber-diverse primary and alternate paths for path protection portions of the complete circuit path are needed. The paths may be node-diverse, but CTC does not check for node diversity.

**Note**

For manually-routed circuits, CTC checks your manually-provisioned path against the path diversity option you choose. If the path does not meet the path diversity requirement that is specified, CTC displays an error message.

- Step 12** If you selected Fully Protected Path and the circuit will be routed on a path protection dual ring interconnect (DRI), click the **Dual Ring Interconnect** check box.
- Step 13** Click **Next**. In the Route Review and Edit area, node icons appear so you can route the circuit manually. The green arrows pointing from the selected node to other network nodes indicate spans that are available for routing the circuit.
- Step 14** Complete the “DLP-A98 Provision an OC-N Circuit Route” task on page 8-53.
- Step 15** Click **Finish**. After completing the circuit, the Circuits window appears.
- Step 16** In the Circuits window, click the circuit that you want to route to multiple drops. The Delete, Edit, and Search buttons become active.
- Step 17** Click **Edit**. The Edit Circuit window appears with the General tab selected. All nodes in the DCC network appear on the network map. Circuit source and destination information appears under the source and destination nodes. To see a detailed view of the circuit, click **Show Detailed Map**. You can rearrange the node icons by pressing **Ctrl** while you drag and drop the icon to the new location.
- Step 18** In the Edit Circuit dialog box, click the **Drops** tab. A list of existing drops appears.
- Step 19** Click **Create**.

- Step 20** In the Define New Drop dialog box, define the new drop:
- a. Node—Choose the target node for the circuit drop.
 - b. Slot—Choose the target card and slot.
 - c. Port, STS—Choose the port and/or STS from the Port and STS drop-down menus. The choice in these menus depends on the card selected in Step b. See Table 8-2 on page 8-3 for a list of options.
 - d. The routing preferences for the new drop will match those of the original circuit. However, you can modify the following:
 - If the original circuit was routed on a protected path, you can change the nodal diversity options: Required, Desired, Don't Care; Link Diverse only. See Step 11 for options descriptions.
 - If the original circuit was not routed on a protected path, the Protection Channel Access options is available. See Step 10 for a description of the PCA option.
 - e. Click **OK**. The new drop appears in the Drops list.
- Step 21** If you need to create additional drops on the circuit, repeat Steps 18 through 20.
- Step 22** Click **Close**. The Circuits window appears.
- Step 23** Verify that the new drops appear in the Destination column for the circuit you edited. If they do not appear, repeat Steps 19 through 22 making sure all options are provisioned correctly.
- Step 24** Complete the “NTP-A62 Test OC-N Circuits” procedure on page 8-55.
- Stop. You have completed this procedure.**
-

DLP-A97 Provision an OC-N Circuit Source and Destination

Purpose	This task provisions an OC-N circuit source and destination.
Tools/Equipment	None
Prerequisite Procedures	Perform this task during one of the following procedures: NTP-A188 Create an Automatically Routed OC-N Circuit, page 8-43 NTP-A189 Create a Manually Routed OC-N Circuit, page 8-47 NTP-A190 Create a Unidirectional OC-N Circuit with Multiple Drops, page 8-49
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** From the Node drop-down menu, choose the node where the circuit will originate.
- Step 2** From the Slot drop-down menu, choose the slot containing the OC-N card where the circuit originates. (If a card's capacity is fully utilized, it does not appear in the menu.)
- Step 3** Depending on the circuit origination card, choose the source port and/or STS from the Port and STS menus. The Port menu is only available if the card has multiple ports. STSs do not appear if they are already in use by other circuits.



Note The STSs that appear depend on the card, circuit size, and protection scheme. For example, if you create an STS-3c circuit on an OC-12 card in a path protection, only four STSs are available. If you create an STS-3c circuit on an OC-12 card in a BLSR, two STSs are available because of the BLSR protection characteristics.


- Step 4** If you need to create a secondary source, for example, a path protection bridge/selector circuit entry point in a multivendor path protection, click **Use Secondary Source** and repeat Steps 1 through 3 to define the secondary source.
- Step 5** Click **Next**.
- Step 6** From the Node drop-down menu, choose the destination node.
- Step 7** From the Slot drop-down menu, choose the slot containing the OC-N card where the circuit will terminate (destination card). (If a card's capacity is fully utilized, the card does not appear in the menu.)
- Step 8** Depending on the card selected in Step 2, choose the destination port and/or STS from the Port and STS sub-menus. The Port menu is available only if the card has multiple ports. The STSs that appear depend on the card, circuit size, and protection scheme.
- Step 9** If you need to create a secondary destination, for example, a path protection bridge/selector circuit entry point in a multivendor path protection, click **Use Secondary Destination** and repeat Steps 6 through 8 to define the secondary destination.
- Step 10** Click **Next**.
- Step 11** Return to your originating procedure (NTP).

DLP-A98 Provision an OC-N Circuit Route

Purpose	This task provisions the circuit route for manually-routed OC-N circuits.
Tools/Equipment	None
Prerequisite Procedures	Perform this task during one of the following procedures: NTP-A188 Create an Automatically Routed OC-N Circuit, page 8-43 NTP-A189 Create a Manually Routed OC-N Circuit, page 8-47 NTP-A190 Create a Unidirectional OC-N Circuit with Multiple Drops, page 8-49
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In the Circuit Creation wizard in the Route Review and Edit area, click the source node icon if it is not already selected.
- Step 2** Starting with a span on the source node, click the arrow of the span you want the circuit to travel. The arrow turns white. In the Selected Span area, the From and To fields provide span information. The source STS appears. Figure 8-15 shows an example.

Figure 8-15 Manually Routing an OC-N Circuit

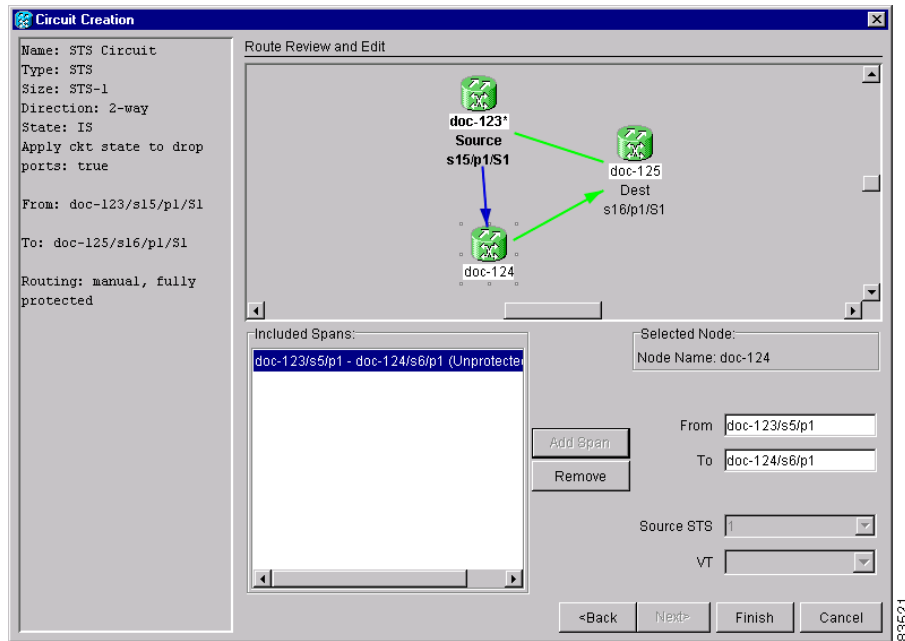

Step 3 If you want to change the source STS, adjust the Source STS field; otherwise, continue with Step 4.



Note VT is grey for OC-N circuits.

Step 4 Click **Add Span**. The span is added to the Included Spans list and the span arrow turns blue.

Step 5 Repeat Steps 2 through 4 until the circuit is provisioned from the source to the destination node through all intermediary nodes. If Fully Protect Path is checked on the Circuit Routing Preferences panel, you must:

- Add two spans for all path protection or unprotected portions of the circuit route from the source to the destination
- Add one span for all BLSR or 1+1 portions of route from the source to the destination

Step 6 Return to your originating procedure (NTP).

NTP-A62 Test OC-N Circuits

Purpose	This procedure tests an OC-N circuit. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	Test set capable of OC-N speeds, appropriate fibers, and attenuators
Prerequisite Procedures	This procedure assumes you completed facility loopback tests to test the fibers and cables from the source and destination ONS 15454s to the fiber distribution panel or the DSX and one of following circuit procedures: NTP-A188 Create an Automatically Routed OC-N Circuit, page 8-43 NTP-A189 Create a Manually Routed OC-N Circuit, page 8-47
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** Log into the node where you will create the circuit. See the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit.
- Step 2** From the View menu, choose **Go to Network View**.
- Step 3** Click the **Circuits** tab.
- Step 4** Set the circuit and circuit ports to Out of Service-Maintenance (OOS_MT):
- Click the circuit you want to test.
 - From the Tools menu, choose **Circuits > Set Circuit State**.
 - In the Set Circuit State dialog box, choose **OOS-MT** from the Target State drop-down menu.
 - If unchecked, check the **Apply to drop ports** check box.
 - Click **Apply**.
- Step 5** Set up the patch cable at the destination node:
- Test the patch cable by connecting one end to the test set transmit (Tx) port and the other end to the test receive (Rx) port. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly.
 - Install the loopback cable on the port you are testing. Connect the transmit (Tx) connector to the receive (Rx) connector of the port being tested.
- Step 6** Set up the loopback cable at the source node:
- Test the loopback cable by connecting one end to the test set transmit (Tx) port and the other end to the test receive (Rx) port. If the test set does not run error-free, check the cable for damage and check the test set to make sure it is set up correctly.
 - At the source node attach the loopback cable to the port you are testing. Connect the test set to the circuit source port: transmit (Tx) port of the test set to the circuit receive (Rx) port; test set receive (Rx) port to the circuit transmit (Tx) port.
- Step 7** Configure the test set for the source ONS 15454 card:
- OC-3 cards—You will test either an OC-3c (the “c” denotes concatenated) or a muxed OC-3. If you are testing an OC-3c, configure the test set for an OC-3c. If you are testing a muxed OC-3, configure the test set for a muxed OC-3 and choose the DS-3 and/or DS-1 you will test. For information about configuring your test set, consult your test set user guide.

- OC-12 cards—You will test either an OC-12c or a muxed OC-12. If you are testing an OC-12c, configure the test set for an OC-12c. If you are testing a muxed OC-12, configure the test set for a muxed OC12 and choose the DS-3 and/or DS-1 you will test. For information about configuring your test set, consult your test set user guide.
- OC-48 cards—You will test either an OC-48c or a muxed OC-48. If you are testing an OC-48c, configure the test set for an OC-48c. If you are testing a muxed OC-48, configure the test set for a muxed OC-48 and choose the DS-3 and/or DS-1 you will test. For information about configuring your test set, consult your test set user guide.
- OC-192 cards—You will test an OC-192c or a muxed OC-192. If you are testing an OC-192c, configure the test set for an OC-192c. If you are testing a muxed OC-192, configure the test set for a muxed OC-192 and choose the DS-3 and/or DS-1 you will test. For information about configuring your test set, consult your test set user guide.

- Step 8** Verify that the test set shows a clean signal. If a clean signal does not appear, repeat Steps 1 through 7 to make sure you have configured the test set and cabling correctly.
- Step 9** Inject errors from the test set. Verify that the errors appear at the source and destination nodes.
- Step 10** Clear the PMs for the ports that you tested. See the “DLP-A130 Clear Selected PM Counts” task on page 10-7 for instructions.
- Step 11** Perform protection switch testing appropriate to SONET topology:
- For path protection configurations, see the “DLP-A94 Path Protection Protection Switching Test” task on page 6-37.
 - For BLSRs see the “DLP-A91 BLSR Switch Test” task on page 6-25.
- Step 12** Perform a bit error rate test (BERT) for 12 hours or follow your site requirements for length of time. For information about configuring your test set for BERT, see your test set user guide.
- Step 13** After the BERT is complete, print the results or save them to a disk for future reference. For information about printing or saving test results see your test set user guide.
- Step 14** Change the circuit and circuit ports from OOS_MT to their previous service states:
- Click the circuit you want to test, then from the Tools menu choose **Circuits > Set Circuit State**.
 - In the Set Circuit State dialog box, choose **IS** (in service), **OOS** (out of service), or **OOS-AINS** (auto inservice) from the Target State drop-down menu.
 - If unchecked, check the **Apply to drop ports** check box.
 - Click **Apply**.

Stop. You have completed this procedure.

NTP-A139 Create a Half Circuit on a BLSR or 1+1 Node

Purpose	This procedure creates a DS-1, DS-3, or OC-N circuit from a drop card to an OC-N trunk card on the same node in a BLSR or 1+1 topology. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Log into a node on the network where you will create the half circuit. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the circuit source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box, complete the following fields:
- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - **Type**—For DS1 circuits, choose VT. VT cross-connects will carry the DS-1 circuit across the ONS 15454 network. For DS-3 or OC-N circuits, choose STS. STS cross-connects will carry the DS-3 circuit across the ONS 15454 network.
 - **Size**—For DS-3 or OC-N circuits, choose STS-1. For DS-1 circuits, VT1.5 is the default. You cannot change it.
 - **Bidirectional**—Leave checked for this circuit (default).
 - **Number of circuits**—Type the number of circuits you want to create. The default is 1.
 - **Auto-ranged**—Uncheck this check box; it is automatically selected if you enter more than 1 in the Number of circuits field.
 - **State**—Choose a service state to apply to the circuit:
 - **IS**—The circuit is in service.
 - **OOS**—The circuit is out of service. Traffic is not passed on the circuit.
 - **OOS-AINS**—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - **OOS-MT**—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
 - **Apply to drop ports**—Check this check box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the

circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Uncheck this box.

Step 6 Click **Next**.

Step 7 Complete the “DLP-A311 Provision a Half Circuit Source and Destination—BLSR and 1+1” task on page 8-61.

Step 8 Click **Finish**. One of the following results occurs, depending on the circuit properties you chose in the Circuit Creation dialog box:

- If you entered more than 1 in the number of Circuits field and selected Auto-ranged, CTC automatically creates the number of circuits entered in Number of circuits. If auto ranging cannot complete all the circuits, for example, because sequential ports are unavailable at the source or destination, a dialog box appears. Set the new source or destination for the remaining circuits, then click **Finish** to continue auto ranging.
- If you entered more than 1 in the Number of Circuits field and did not choose Auto-ranged, the Circuit Creation dialog box appears so you can create the remaining circuits. Repeat this procedure for each additional circuit.
- After completing the circuit(s), the Circuits window appears.

Step 9 In the Circuits window, verify that the new circuits appear in the circuits list.

Step 10 Complete the “NTP-A135 Test Electrical Circuits” procedure on page 8-41. Skip this step if you built a test circuit.

Stop. You have completed this procedure.

NTP-A140 Create a Half Circuit on a Path Protection Node

Purpose	This procedure creates a DS1, DS3, or OC-N circuit from a drop to an OC-N line card on the same path protection node. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the circuit source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box, complete the following fields:
- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - **Type**—For DS1 circuits, choose VT. VT cross-connects will carry the DS-1 circuit across the ONS 15454 network. For DS-3 or OC-N circuits, choose STS. STS cross-connects will carry the DS-3 circuit across the ONS 15454 network.
 - **Size**—For DS-1 circuits, VT1.5 is the default. You cannot change it. For DS-3 or OC-N circuits, choose STS-1.
 - **Bidirectional**—Leave checked for this circuit (default).
 - **Number of circuits**—Type the number of circuits you want to create. The default is 1.
 - **Auto-ranged**—Uncheck this check box; it is automatically selected if you enter more than 1 in the Number of circuits field.
 - **State**—Choose a service state to apply to the circuit:
 - **IS**—The circuit is in service.
 - **OOS**—The circuit is out of service. Traffic is not passed on the circuit.
 - **OOS-AINS**—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - **OOS-MT**—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
 - **Apply to drop ports**—Check this box if you want to apply the state chosen in the State field to the circuit source and destination ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the

circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Check this box if you want to create one or more cross-connects to complete a signal path for TL1-generated circuits. If this box is checked, you cannot assign a name to the circuit. Also, VT tunnels and Ethergroup sources and destinations are unavailable.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Leave this box unchecked.

- Step 6** Set the path protection path selectors. See the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.
- Step 7** Click **Next**.
- Step 8** Complete the “DLP-A312 Provision a Half Circuit Source and Destination—Path Protection” task on page 8-62.
- Step 9** Click **Use Secondary Destination** and repeat Steps 7 through 9 to define the secondary destination.
- Step 10** Click **Finish**. One of the following results occurs, depending on the circuit properties you chose in the Circuit Creation dialog box:
- If you entered more than 1 in the Number of Circuits field and selected Auto-ranged, CTC automatically creates the number of circuits entered in Number of circuits. If auto ranging cannot complete all the circuits, for example, because sequential ports are unavailable at the source or destination, a dialog box appears. Set the new source or destination for the remaining circuits, then click Finish to continue auto ranging.
 - If you entered more than 1 in the Number of Circuits field and did not choose Auto-ranged, the Circuit Creation dialog box appears so you can create the remaining circuits. Repeat this procedure for each additional circuit.
 - After completing the circuit(s), the Circuits window appears.
- Step 11** In the Circuits window, verify that the new circuits appear in the circuits list.
- Step 12** Complete the “NTP-A135 Test Electrical Circuits” procedure on page 8-41. Skip this step if you built a test circuit.

Stop. You have completed this procedure.

DLP-A311 Provision a Half Circuit Source and Destination—BLSR and 1+1

Purpose	This task provisions a half circuit source and destination.
Tools/Equipment	None
Prerequisite Procedures	You perform this task during the NTP-A139 Create a Half Circuit on a BLSR or 1+1 Node, page 8-57 procedure.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher


Note

After you have selected the circuit properties in the Circuit Source dialog box according to the specific circuit creation procedure, you are ready to provision the circuit source.

-
- Step 1** From the Node drop-down menu, choose the node that will contain the half circuit.
 - Step 2** From the Node drop-down menu, choose the node that will contain the circuit.
 - Step 3** From the Slot drop-down menu, choose the slot containing the card where the circuit will originate.
 - Step 4** From the Port drop-down menu, choose the port where the circuit will originate. This field will not be available if a DS-1 card is chosen in Step 3.
 - Step 5** If the circuit is a DS-1 circuit and you choose a DS-1 card as the source, choose the DS-1 where the traffic will originate From the DS1 drop-down menu.
 - Step 6** Click **Next**.
 - Step 7** From the Node drop-down menu, choose the node chosen in Step 1.
 - Step 8** From the Slot drop-down menu, choose the OC-N card to map the DS-1 to a VT1.5 for OC-N transport or to map the DS-3 or OC-N STS circuit to an STS.
 - Step 9** Choose the destination STS or VT from the sub-menus that appear.
 - Step 10** Return to your originating procedure (NTP).
-

DLP-A312 Provision a Half Circuit Source and Destination—Path Protection

Purpose	This task provisions a half circuit source and destination. This task does not apply to DWDM nodes.
Tools/Equipment	None
Prerequisite Procedures	You perform this task during the NTP-A140 Create a Half Circuit on a Path Protection Node, page 8-59 procedure.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note After you have selected the circuit properties in the Circuit Source dialog box according to the specific circuit creation procedure, you are ready to provision the circuit source.

-
- Step 1** From the Node drop-down menu, choose the node that will contain the half circuit.
 - Step 2** From the Node drop-down menu, choose the node that will contain the circuit.
 - Step 3** From the Slot drop-down menu, choose the slot containing the card where the circuit will originate.
 - Step 4** From the Port drop-down menu, choose the port where the circuit will originate. This field will not be available if a DS-1 card is chosen in Step 3
 - Step 5** If the circuit is a DS-1 circuit and you choose a DS-1 card as the source, choose the DS-1 where the traffic will originate From the DS1 drop-down menu.
 - Step 6** Click **Next**.
 - Step 7** From the Node drop-down menu, choose the node chosen in Step 1.
 - Step 8** From the Slot drop-down menu, choose the OC-N card to map the DS-1 to a VT1.5 for OC-N transport or to map the DS-3 or OC-N STS circuit to an STS.
 - Step 9** Choose the destination STS or VT from the sub-menus that appear.
 - Step 10** Click **Use Secondary Destination** and repeat Steps 1 through 9
 - Step 11** Return to your originating procedure (NTP).
-

NTP-A191 Create an E-Series EtherSwitch Circuit (Multicard or Single-Card Mode)

Purpose	This procedure creates a multicard or single-card EtherSwitch circuit. It does not apply to E-Series cards in port-mapped mode. To create a port-mapped mode circuit, see NTP-A192 Create a Circuit for an E-Series Card in Port-Mapped Mode, page 8-65. This procedure does not apply to (Software R4.5) DWDM nodes.
Tools/Equipment	E-Series Ethernet cards (E100T-12/E100T-G, E1000-2/E1000-2-G) must be installed at each end of the Ethernet circuit.
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the EtherSwitch circuit. If you are already logged in, continue with Step 2.
- Step 2** If a high number of VLANs is already used by the network, complete the “DLP-A99 Determine Available VLANs” task on page 8-77 to verify that sufficient VLAN capacity is available (you will create a VLAN during each circuit creation task).
- Step 3** Verify that the circuit source and destination Ethernet cards are provisioned for the mode of the circuit you will create, either multicard or single-card. See the “DLP-A246 Provision E-Series Ethernet Card Mode” task on page 8-78.
- Step 4** Provision and enable the Ethernet ports. See “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78.
- Step 5** From the View menu, choose **Go to Network View**.
- Step 6** Click the **Circuits** tab, then click **Create**.
- Step 7** In the Create Circuits dialog box, complete the following fields:
- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - **Type**—Choose STS.
 - **Size**—Choose the circuit size. Valid circuit sizes for an Ethernet Multicard circuit are STS-1, STS-3c, and STS6c. Valid circuit sizes for an Ethernet Single-card circuit are STS-1, STS-3c, STS6c, and STS12c.
 - **Bidirectional**—Leave the default unchanged (checked).
 - **Number of circuits**—Leave the default unchanged (1).
 - **Auto-ranged**—Unavailable.
 - **State**—Choose **IS** (in service). Ethergroup circuits are stateless and always in service.
 - **Apply to drop ports**—Uncheck this box; states cannot be applied to E-Series Ethernet card ports.
 - **Create cross-connects only (TL1-like)**—Uncheck this box; it does not apply to Ethernet circuits.

- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
 - Protected Drops—Leave the default unchanged (unchecked).
- Step 8** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.
- Step 9** Click **Next**.
- Step 10** Provision the circuit source:
- a. From the Node drop-down menu, choose one of the EtherSwitch circuit endpoint nodes. (Either end node can be the EtherSwitch circuit source.)
 - b. From the Slot drop-down menu, choose one of the following:
 - If you are building a Multicard EtherSwitch circuit, choose **Ethergroup**.
 - If you are building a Single-card EtherSwitch circuit, choose the Ethernet card where you enabled the single-card EtherSwitch.
- Step 11** Click **Next**.
- Step 12** Provision the circuit destination:
- a. From the Node drop-down menu, choose the second EtherSwitch circuit endpoint node.
 - b. From the Slot drop-down menu, choose one of the following:
 - If you are building a Multicard EtherSwitch circuit, choose **Ethergroup**.
 - If you are building a Single-card EtherSwitch circuit, choose the Ethernet card where you enabled the single-card EtherSwitch.
- Step 13** Click **Next**.
- Step 14** In the Circuit VLAN Selection area, click **New VLAN**. If the desired VLAN already exists, continue with Step 17.
- Step 15** In the New VLAN dialog box, complete the following:
- VLAN Name—Assign an easily-identifiable name to your VLAN.
 - VLAN ID—Assign a VLAN ID. The VLAN ID should be the next available number between 2 and 4093 that is not already assigned to an existing VLAN. Each ONS 15454 network supports a maximum of 509 user-provisionable VLANs.
- Step 16** Click **OK**.
- Step 17** In the Circuit VLAN Selection area, highlight the VLAN name and click the arrow button (>>) to move the available VLAN(s) to the Circuit VLANs column.
- Step 18** If you are building a single-card EtherSwitch circuit and want to disable spanning tree protection on this circuit, uncheck the **Enable Spanning Tree** check box and click **OK** on the Disabling Spanning Tree dialog box. The Enable Spanning Tree box will remain checked or unchecked for the creation of the next single-card, point-to-point Ethernet circuit.

**Caution**

Disabling spanning tree protection increases the likelihood of logic loops on an Ethernet network.

**Caution**

Turning off spanning tree on a circuit-by-circuit basis means that the ONS 15454 is no longer protecting the Ethernet circuit and that the circuit must be protected by another mechanism in the Ethernet network.

**Caution**

Multiple circuits with spanning tree protection enabled will incur blocking if the circuits traverse the same E-series card and use the same VLAN.

**Note**

You can disable or enable spanning tree protection on a circuit-by-circuit basis only for single-card, point-to-point Ethernet circuits. Other E-series Ethernet configurations disable or enable spanning tree on a port-by-port basis.

Step 19 Click **Next**.

Step 20 Confirm that the following information about the circuit is correct:

- Circuit name
- Circuit type
- Circuit size
- ONS 15454 circuit nodes

Step 21 Click **Finish**.

Step 22 Complete the “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78.

Step 23 Complete the “DLP-A221 Provision E-Series Ethernet Ports for VLAN Membership” task on page 8-79.

Stop. You have completed this procedure.

NTP-A192 Create a Circuit for an E-Series Card in Port-Mapped Mode

Purpose	This procedure creates an E-Series point-to-point SONET circuit with an E-Series card in port-mapped mode. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	An E-Series Ethernet card must be installed at each end of the circuit and configured in port-mapped mode.
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 4.
- Step 2** Provision the Ethernet cards that will carry the circuit for port-mapped mode. See the “DLP-A246 Provision E-Series Ethernet Card Mode” task on page 8-78.
- Step 3** Complete the “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78.
- Step 4** From the View menu, choose **Go to Network View**.

Step 5 Click the **Circuits** tab and click **Create**.

Step 6 In the Create Circuits dialog box, complete the following fields:

- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
- **Type**—Choose STS.
- **Size**—Choose the circuit size. Valid circuit sizes for an E-Series circuit are STS-1, STS-3c, STS6c, and STS-12c.
- **Bidirectional**—Leave the default unchanged (checked).
- **Number of circuits**—Leave the default unchanged (1).
- **State**—Choose a service state to apply to the circuit:
 - **IS**—The circuit is in service.
 - **OOS**—The circuit is out of service. Traffic is not passed on the circuit.
 - **OOS-AINS**—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - **OOS-MT**—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
- **Apply to drop ports**—Select this checkbox if you want to apply the state chosen in the State field (IS or OOS-MT only) to the Ethernet circuit source and destination ports. You cannot apply OOS-AINS to E-Series Ethernet card ports. CTC will apply the circuit state to the ports only if the circuit bandwidth is the same as the port bandwidth or, if the port bandwidth is larger than the circuit, the circuit must be the first circuit to use the drop port. If not, a Warning dialog box shows the ports where the circuit state could not be applied. If the box is unchecked, CTC will not change the state of the source and destination ports.



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- **Create cross-connects only (TL1-like)**—Uncheck this box.
- **Inter-domain (UCP) SLA**—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- **Auto-ranged**—Unavailable.
- **Protected Drops**—Leave the default unchanged (unchecked).

Step 7 If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.

Step 8 Click **Next**.

Step 9 Provision the circuit source:

- a. From the Node drop-down menu, choose the circuit source node. Either end node can be the point-to-point circuit source.
- b. From the Slot drop-down menu, choose the slot containing the E-Series card that you will use for one end of the point-to-point circuit.

- c. From the Port drop-down menu, choose a port.
- Step 10** Click **Next**.
- Step 11** Provision the circuit destination:
- a. From the Node drop-down menu, choose the circuit destination node.
 - b. From the Slot drop-down menu, choose the slot containing the E-Series card that you will use for other end of the point-to-point circuit.
 - c. From the Port drop-down menu, choose a port.
- Step 12** Click **Next**. The Circuits window appears.
- Step 13** Confirm that the following circuit information is correct:
- Circuit name
 - Circuit type
 - Circuit size
 - ONS 15454 circuit nodes
- Step 14** Click **Finish**.
- Step 15** Complete the “NTP-A146 Test E-Series Circuits” procedure on page 8-81.
- Stop. You have completed this procedure.**
-

NTP-A142 Create an E-Series Shared Packet Ring Ethernet Circuit

Purpose	This procedure creates a shared packet ring Ethernet circuit. It does not apply to E-Series cards in port-mapped mode. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	E-Series Ethernet cards (E100T-12/E100T-G, E1000-2/E1000-2-G) must be installed at both Ethernet circuit endpoint nodes.
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** If a high number of VLANs is already used by the network, complete the “DLP-A99 Determine Available VLANs” task on page 8-77 to verify that sufficient VLAN capacity is available (you will create a VLAN during each circuit creation task).
- Step 3** Verify that the Ethernet cards that will carry the circuit are provisioned for Multi-card EtherSwitch Group. See the “DLP-A246 Provision E-Series Ethernet Card Mode” task on page 8-78.
- Step 4** Provision and enable the Ethernet ports. See “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78.

- Step 5** From the View menu, choose **Go to Network View**.
- Step 6** Click the **Circuits** tab and click **Create**.
- Step 7** In the Create Circuits dialog box, complete the following fields:
- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - **Type**—Choose STS.
 - **Size**—Choose the circuit size. Valid shared packet ring circuit sizes are STS-1, STS-3c, and STS6c.
 - **Bidirectional**—Leave the default unchanged (checked).
 - **Number of circuits**—Leave the default unchanged (1).
 - **Auto-ranged**—Unavailable.
 - **State**—Leave IS—The circuit is in service (default).
 - **Apply to drop ports**—Uncheck this box; states cannot be applied to E-Series ports.
 - **Create cross-connects only (TL1-like)**—Uncheck this box; it does not apply to Ethernet circuits.
 - **Inter-domain (UCP) SLA**—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
 - **Protected Drops**—Leave the default unchanged (unchecked).
- Step 8** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.
- Step 9** Click **Next**.
- Step 10** Provision the circuit source:
- a. From the Node drop-down menu, choose one of the shared packet ring circuit endpoint nodes. (Either end node can be the shared packet ring circuit source.)
 - b. From the Slot drop-down menu, choose **Ethergroup**.
- Step 11** Click **Next**.
- Step 12** Provision the circuit destination:
- a. From the Node drop-down menu, choose the second shared packet ring circuit endpoint node.
 - b. From the Slot drop-down menu, choose **Ethergroup**.
- Step 13** Click **Next**.
- Step 14** Review the VLANs listed in the Available VLANs list. If the VLAN you want to use appears, continue with Step 15. If you need to create a new VLAN, complete the following steps:
- a. Click the **New VLAN** button.
 - b. In the New VLAN dialog box, complete the following:
 - **VLAN Name**—Assign an easily-identifiable name to your VLAN.
 - **VLAN ID**—Assign a VLAN ID. The VLAN ID should be the next available number between 2 and 4093 that is not already assigned to an existing VLAN. Each ONS 15454 network supports a maximum of 509 user-provisionable VLANs.
 - c. Click **OK**.
- Step 15** In the Available VLANs column, click the VLAN you want to use and click the arrow button (>>) to move the VLAN to the Circuit VLANs column.



Note Moving the VLAN from Available VLANs to Circuit VLANs forces all the VLAN traffic to use the shared packet ring you are creating.

Step 16 Click **Next**.

Step 17 In the Circuit Routing Preferences area, uncheck the **Route Automatically** check box and click **Next**.

Step 18 In the Route Review and Edit area, click the source node, then click a span (green arrow) leading away from the source node.

The span turns white.

Step 19 Click **Add Span**.

The span turns blue. CTC adds the span to the Included Spans list.

Step 20 Click the node at the end of the blue span.

Step 21 Click the green span joining the node selected in Step 20.

The span turns white.

Step 22 Click **Add Span**.

The span turns blue.

Step 23 Repeat Steps 19 through 22 for every node in the ring.

Step 24 In the Route Review and Edit area, verify that the new circuit is correctly configured. If the circuit information is not correct, click the **Back** button and repeat the procedure with the correct information.



Note If the circuit is incorrect, you can also click **Finish**, delete the completed circuit, and begin the procedure again.

Step 25 Click **Finish**.

Step 26 Complete the “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78 for each node that carries the circuit.

Step 27 Complete the “DLP-A221 Provision E-Series Ethernet Ports for VLAN Membership” task on page 8-79 for each node that carries the circuit.

Step 28 Complete the “NTP-A146 Test E-Series Circuits” procedure on page 8-81.

Stop. You have completed this procedure.

NTP-A143 Create an E-Series Hub and Spoke Ethernet Configuration

Purpose	This procedure creates a hub and spoke Ethernet configuration, which is made up of multiple circuits that share a common endpoint. It does not apply to E-Series cards in port-mapped mode. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	E-Series Ethernet cards (E100T-12/E100T-G, E1000-2/E1000-2-G) must be installed at all Ethernet circuit endpoint nodes.
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Log into the hub node (the common endpoint). See the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A99 Determine Available VLANs” task on page 8-77 to verify that sufficient VLAN capacity is available (you will create a VLAN during each circuit creation task).
- Step 3** Display the node view.
- Step 4** Verify that the Ethernet card that will carry the hub and spoke circuit is provisioned for Singlecard EtherSwitch Group. See the “DLP-A246 Provision E-Series Ethernet Card Mode” task on page 8-78.
- Step 5** Provision and enable the Ethernet ports. See “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78.
- Step 6** Log into a spoke endpoint node and repeat Steps 3, 4 and 5 for the destination Ethernet card. (You only need to verify that the hub node is provisioned for Singlecard EtherSwitch once.)
- Step 7** Click the **Circuits** tab and click **Create**.
- Step 8** In the Create Circuits dialog box, complete the following fields:
- Name—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - Type—Choose STS.
 - Size—Choose the circuit size.
 - Bidirectional—Leave the default unchanged (checked).
 - Number of circuits—Leave the default unchanged (1).
 - Auto-ranged—Unavailable.
 - State—Leave IS—The circuit is in service (default).
 - Apply to drop ports—Uncheck this box; states cannot be applied to E-Series ports.
 - Create cross-connects only (TL1-like)—Uncheck this box; it does not apply to Ethernet circuits.
 - Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
 - Protected Drops—Leave the default unchanged (unchecked).

- Step 9** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.
- Step 10** Click **Next**.
- Step 11** Provision the circuit source:
- From the Node drop-down menu, choose the hub node.
 - From the Slot drop-down menu, choose the Ethernet card where you enabled the single-card EtherSwitch.
- Step 12** Click **Next**.
- Step 13** Provision the circuit destination:
- From the Node drop-down menu, choose an EtherSwitch circuit endpoint node.
 - From the Slot drop-down menu, choose the Ethernet card where you enabled the single-card EtherSwitch.
- Step 14** Click **Next**.
- Step 15** Review the VLANs listed in the Available VLANs list. If the VLAN you want to use appears, continue with Step 17. If you need to create a new VLAN, complete the following steps:
- Click the **New VLAN** button.
 - In the New VLAN dialog box, complete the following:
 - VLAN Name—Assign an easily-identifiable name to your VLAN.
 - VLAN ID—Assign a VLAN ID. The VLAN ID should be the next available number between 2 and 4093 that is not already assigned to an existing VLAN. Each ONS 15454 network supports a maximum of 509 user-provisionable VLANs.
 - Click **OK**.
- Step 16** In the Available VLANs column, click the VLAN you want to use and click the arrow button (>>) to move the VLAN to the Circuit VLANs column.



Note Moving the VLAN from Available VLANs to Circuit VLANs forces all the VLAN traffic to use the shared packet ring you are creating.

- Step 17** Click **Next**.
- Step 18** Confirm that the following information about the hub and spoke circuit is correct:
- Circuit name
 - Circuit type
 - Circuit size
 - VLAN names
 - ONS 15454 circuit nodes

If the circuit information is not correct, click the **Back** button and repeat the procedure with the correct information.



Note You can also click Finish, delete the completed circuit, and start the procedure from the beginning.

- Step 19** Click **Finish**.
- Step 20** Complete the “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78.
- Step 21** Complete the “DLP-A221 Provision E-Series Ethernet Ports for VLAN Membership” task on page 8-79.
- Step 22** Complete the “NTP-A146 Test E-Series Circuits” procedure on page 8-81.
- Step 23** To create additional circuits (“spokes”):
- Complete the “DLP-A99 Determine Available VLANs” task on page 8-77 to verify that sufficient VLAN capacity is available for the circuit destination node.
 - Repeat Steps 3 through 22.
- Stop. You have completed this procedure.**
-

NTP-A144 Create an E-Series Single-Card EtherSwitch Manual Cross-Connect

Purpose	This procedure manually creates a Single-Card EtherSwitch cross-connect between E-Series Ethernet cards and OC-N cards connected to non-ONS equipment. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	E-Series Ethernet cards (E100T-12/E100T-G, E1000-2/E1000-2-G) must be installed at the circuit source node.
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note In this procedure, cross-connect refers to a circuit connection created within the same node between the Ethernet card and an OC-N card connected to third-party equipment. You create cross-connects at the source and destination nodes so an Ethernet circuit can be routed from source to destination across third-party equipment.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the circuit source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** If a high number of VLANs is already used by the network, complete the “DLP-A99 Determine Available VLANs” task on page 8-77 to verify that sufficient VLAN capacity is available (you will create a VLAN during each circuit creation task).
- Step 4** In the node view, double-click the Ethernet card that will carry the cross-connect.
- Step 5** Verify that the Ethernet cards that will carry the circuit are provisioned for Singlecard EtherSwitch. See the “DLP-A246 Provision E-Series Ethernet Card Mode” task on page 8-78.
- Step 6** From the View menu, choose **Go to Network View**.

- Step 7** Click the **Circuits** tab and click **Create**.
- Step 8** In the Create Circuits dialog box, complete the following fields:
- **Name**—Assign a name to the cross-connect. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the cross-connect.
 - **Type**—Choose **STS**.
 - **Size**—Choose the cross-connect size. For single-card EtherSwitch, the available sizes are STS-1, STS-3c, STS-6c, and STS-12c.
 - **Bidirectional**—Leave the default unchanged (checked).
 - **Number of circuits**—Leave the default unchanged (1).
 - **Auto-ranged**—Unavailable.
 - **State**—Leave **IS**—The circuit is in service (default).
 - **Apply to drop ports**—Uncheck this box.
 - **Create cross-connects only (TL1-like)**—Uncheck this box.
 - **Inter-domain (UCP) SLA**—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
 - **Protected Drops**—Leave the default unchanged (unchecked).
- Step 9** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.
- Step 10** Click **Next**.
- Step 11** Provision the circuit source:
- a. From the Node drop-down menu, choose the cross-connect source node.
 - b. From the Slot drop-down menu, choose the Ethernet card where you enabled the single-card EtherSwitch in Step 5.
- Step 12** Click **Next**.
- Step 13** Provision the circuit destination:
- a. From the Node drop-down menu, choose the cross-connect circuit source node selected in Step 11. (For Ethernet cross-connects, the source and destination nodes are the same.)
 - b. From the Slot drop-down menu, choose the OC-N card that is connected to the non-ONS equipment.
 - c. Depending on the OC-N card, choose the port and/or STS from the Port and STS drop-down menus.
- Step 14** Click **Next**.
- Step 15** Review the VLANs listed in the Available VLANs list. If the VLAN you want to use appears, continue with Step 16. If you need to create a new VLAN, complete the following steps:
- a. Click the **New VLAN** button.
 - b. In the New VLAN dialog box, complete the following:
 - **VLAN Name**—Assign an easily-identifiable name to your VLAN.
 - **VLAN ID**—Assign a VLAN ID. The VLAN ID should be the next available number between 2 and 4093 that is not already assigned to an existing VLAN. Each ONS 15454 network supports a maximum of 509 user-provisionable VLANs.
 - c. Click **OK**.

- Step 16** Click the VLAN you want to use on the Available VLANs column, then click the arrow >> button to move the VLAN to the Circuit VLANs column.
- Step 17** Click **Next**. The Circuit Creation (Circuit Routing Preferences) dialog box opens.
- Step 18** Confirm that the following information about the single-card EtherSwitch manual cross-connect is correct (in this task, “circuit” refers to the Ethernet cross-connect):
- Circuit name
 - Circuit type
 - Circuit size
 - VLAN names
 - ONS 15454 nodes
- If the information is not correct, click the **Back** button and repeat the procedure with the correct information.
- Step 19** Click **Finish**.
- Step 20** Complete the “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78.
- Step 21** Complete the “DLP-A221 Provision E-Series Ethernet Ports for VLAN Membership” task on page 8-79.
- Stop. You have completed this procedure.**
-

NTP-A145 Create an E-Series Multicard EtherSwitch Manual Cross-Connect

Purpose	This procedure manually creates Multicard EtherSwitch cross-connects between E-Series Ethernet cards and an OC-N cards connected to non-ONS equipment. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	E-Series Ethernet cards (E100T-12/E100T-G, E1000-2/E1000-2-G) must be installed at the circuit source node.
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

In this procedure, cross-connect refers to a circuit connection created within the same node between the Ethernet card and an OC-N card connected to third-party equipment. You create cross-connects at the source and destination nodes so an Ethernet circuit can be routed from source to destination across third-party equipment.

- Step 1** Log into a circuit endpoint. See “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A99 Determine Available VLANs” task on page 8-77 to verify that sufficient VLAN capacity is available (you will create a VLAN during each circuit creation task).

- Step 3** Verify that the Ethernet card that will carry the circuit is provisioned for Multicard EtherSwitch Group. See the “DLP-A246 Provision E-Series Ethernet Card Mode” task on page 8-78.
- Step 4** Provision and enable the Ethernet ports. See “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78.
- Step 5** From the View menu, choose **Go to Network View**.
- Step 6** Click the **Circuits** tab and click **Create**.
- Step 7** In the Create Circuits dialog box, complete the following fields:
- **Name**—Assign a name to the source cross-connect. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the source cross-connect.
 - **Type**—Choose STS.
 - **Size**—Choose the size of the circuit that will be carried by the cross-connect. For Multicard EtherSwitch circuits, the available sizes are STS-1, STS-3c, and STS-6c.
 - **Bidirectional**—Leave checked (default).
 - **Number of circuits**—Leave the default unchanged (1).
 - **Auto-ranged**—Unavailable.
 - **State**—Leave IS—The circuit is in service (default).
 - **Apply to drop ports**—Uncheck this box.
 - **Create cross-connects only (TL1-like)**—Uncheck this box.
 - **Inter-domain (UCP) SLA**—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
 - **Protected Drops**—Leave the default unchanged (unchecked).
- Step 8** If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.
- Step 9** Click **Next**.
- Step 10** Provision the cross-connect source:
- a. From the Node drop-down menu, choose the cross-connect source node.
 - b. From the Slot drop-down menu, choose **Ethergroup**.
- Step 11** Click **Next**.
- Step 12** From the Node drop-down menu in the Destination area, choose the circuit source node selected in Step 10. For Ethernet cross-connects, the source and destination nodes are the same.
- The Slot field is provisioned automatically for Ethergroup.
- Step 13** Click **Next**.
- Step 14** Review the VLANs listed in the Available VLANs list. If the VLAN you want to use appears, continue with Step 16. If you need to create a new VLAN, complete the following steps:
- a. Click the **New VLAN** button.
 - b. In the New VLAN dialog box, complete the following:
 - **VLAN Name**—Assign an easily-identifiable name to your VLAN.

- VLAN ID—Assign a VLAN ID. The VLAN ID should be the next available number between 2 and 4093 that is not already assigned to an existing VLAN. Each ONS 15454 network supports a maximum of 509 user-provisionable VLANs.

c. Click **OK**.

Step 15 In the Available VLANs column, click the VLAN you want to use and click the arrow button (>>) to move the VLAN to the Circuit VLANs column.

Step 16 Click **Next**.

The Circuit Creation (Circuit Routing Preferences) dialog box opens.

Step 17 Verify the cross-connect information (in this step, “circuit” refers to the Ethernet cross-connect):

- Circuit name
- Circuit type
- Circuit size
- VLANs
- ONS 15454 nodes

If the information is not correct, click the **Back** button and repeat the procedure with the correct information.

Step 18 Click **Finish**.

Step 19 Complete the “DLP-A220 Provision E-Series Ethernet Ports” task on page 8-78.

Step 20 Complete the “DLP-A221 Provision E-Series Ethernet Ports for VLAN Membership” task on page 8-79.

Step 21 From the View menu, choose **Go to Home View**.

Step 22 Click the **Circuits** tab.

Step 23 Highlight the circuit and click **Edit**.

The Edit Circuit dialog box opens.

Step 24 Click **Drops** and click **Create**.

The Define New Drop dialog box opens.

Step 25 From the Slot menu, choose the OC-N card that links the ONS 15454 to the non-ONS 15454 equipment.

Step 26 From the Port menu, choose the appropriate port.

Step 27 From the STS menu, choose the STS that matches the STS of the connecting non-ONS 15454 equipment.

Step 28 Click **OK**.

Step 29 Confirm the circuit information that appears in the Edit Circuit dialog box and click **Close**.

Step 30 Repeat Steps 2 through 29 at the second Ethernet manual cross-connect endpoint.

The first and second Ethernet manual cross-connect endpoints will be bridged by the OC-N STS cross-connect circuit.



Note The appropriate STS circuit must exist in the non-ONS equipment to connect the two Ethernet manual cross-connect endpoints.

**Caution**

If a CARLOSS alarm repeatedly appears and clears on an Ethernet manual cross-connect, the two Ethernet circuits might have a circuit-size mismatch. For example, a circuit size of STS-3c was configured on the first ONS 15454 and circuit size of STS-12c was configured on the second ONS 15454. Refer to the *Cisco ONS 15454 Troubleshooting Guide* if the alarm persists.

- Step 31** Complete the “NTP-A146 Test E-Series Circuits” procedure on page 8-81.
Stop. You have completed this procedure.

DLP-A99 Determine Available VLANs

Purpose	This task verifies that the network has the capacity to support the additional new VLANs required for the creation E-Series circuits. It does not apply to E-Series cards in port-mapped mode.
Tools/Equipment	E-Series Ethernet cards (E100T-12/E100T-G, E1000-2/E1000-2-G) must be installed at each end of the Ethernet circuit.
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** At any CTC view, click the **Circuits** tab.
- Step 2** Click any existing Ethernet circuit to highlight that row.
- Step 3** Click **Edit**, then click the **VLANs** tab.
- The Edit Circuit dialog shows the number of VLANs used by circuits and the total number of VLANs available for use.
- Step 4** Determine that number of available VLANs listed is sufficient for the number of E-series Ethernet circuits that you will create.

**Caution**

Multiple E-series Ethernet circuits with spanning tree enabled will block each other if the circuits traverse the same E-series Ethernet card and use the same VLAN.

- Step 5** Return to the originating procedure (NTP).

DLP-A246 Provision E-Series Ethernet Card Mode

Purpose	This task provisions an E-Series Ethernet card for multicard EtherSwitch Group, single-card EtherSwitch, or port-mapped mode.
Tools/Equipment	E-Series Ethernet cards (E100T-12/E100T-G, E1000-2/E1000-2-G) must be installed.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution


You cannot change the mode while the Ethernet card is carrying circuits. If you want change the card mode, delete any circuits that it carries first. See the “NTP-A152 Delete Circuits” procedure on page 11-20.

-
- Step 1** In the network view, double-click the node containing the E-Series Ethernet card you want to provision, then double-click the Ethernet card.
- Step 2** Click the **Provisioning > Ether Card** tabs.
- Step 3** In the Card Mode area, choose one of the following:
- For multicard EtherSwitch circuit groups, choose **Multicard EtherSwitch Group**. Click **Apply**.
 - For single-card EtherSwitch circuits, choose **Single-card EtherSwitch**. Click **Apply**.
 - For port-mapped circuits, choose **Port-mapped**. Click **Apply**.
- Step 4** Multicard EtherSwitch circuits only: repeat Steps 2 and 3 for all other Ethernet cards in the node that will carry the multicard EtherSwitch circuits.
- Step 5** Repeat Steps 1 through 4 for other nodes as necessary.
- Step 6** Return to your originating procedure (NTP).
-

DLP-A220 Provision E-Series Ethernet Ports

Purpose	This task enables ports for the E100T-12, E100T-G, E1000-2, and E1000-2-G cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required to enable E-Series Ethernet traffic
Onsite/Remote	Onsite or remote
Security	Provisioning or higher

-
- Step 1** In the node view, double-click the Ethernet card that you want to provision.
- Step 2** Click the **Provisioning > Ether Port** tabs.

- Step 3** For each Ethernet port, provision the following parameters:
- Port Name—If you want to label the port, type a port name.
 - Mode—Choose the appropriate mode for the Ethernet port:
 - Valid choices for the E100T-12/E100T-G card are Auto, 10 Half, 10 Full, 100 Half, or 100 Full.
 - Valid choices for the E1000-2/E1000-2-G card are 1000 Full or Auto.
-  **Note** Both 1000 Full and Auto mode set the E1000-2 port to the 1000 Mbps and Full duplex operating mode; however, flow control is disabled when 1000 Full is selected. Choosing Auto mode enables the E1000-2 card to auto-negotiate flow control. Flow control is a mechanism that prevents network congestion by ensuring that transmitting devices do not overwhelm receiving devices with data. The E1000-2 port handshakes with the connected network device to determine if that device supports flow control.
- Enabled—Click this check box to activate the corresponding Ethernet port.
 - Priority—Choose a queuing priority for the port. Options range from 0 (Low) to 7 (High). Priority queuing (IEEE 802.1Q) reduces the impact of network congestion by mapping Ethernet traffic to different priority levels. Refer to the priority queuing information in the *Cisco ONS 15454 Reference Manual*. This parameter does not apply to an E-Series card in port-mapped mode.
 - Stp Enabled—Click this check box to enable the spanning tree protocol (STP) on the port. This parameter does not apply to an E-Series card in port-mapped mode. Refer to the spanning tree information in the *Cisco ONS 15454 Reference Manual*.
- Step 4** Click **Apply**.
- Step 5** Repeat Steps 1 through 4 for all other cards in the VLAN, or if the E-Series card is in port-mapped mode, repeat Steps 1 through 4 for the other card in a point-to-point circuit.
- Step 6** Your Ethernet ports are provisioned and ready to be configured for VLAN membership. See the “DLP-A221 Provision E-Series Ethernet Ports for VLAN Membership” task on page 8-79 for instructions.
- Step 7** Return to your originating procedure (NTP).

DLP-A221 Provision E-Series Ethernet Ports for VLAN Membership

Purpose	This task provisions E-Series card ports for VLAN membership. It does not apply to E-Series cards in port-mapped mode.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required to enable Ethernet traffic on E-Series Ethernet cards
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the E-Series card graphic to open the card.
- Step 2** Click the **Provisioning > Ether VLAN** tabs.

Step 3 To put a port in a VLAN:

- a. Click the port and choose either Tagged or Untag.
- b. If a port is a member of only one VLAN, choose **Untag** from the Port column in the VLAN's row. Choose -- for all the other VLAN rows in that Port column.



Note The VLAN with **Untag** selected can connect to the port, but other VLANs cannot access that port.

- c. Choose **Tagged** at all VLAN rows that need to be trunked. Choose **Untag** at VLAN rows that do not need to be trunked, for example, the default VLAN.



Note Each Ethernet port must be attached to at least one untagged VLAN. A trunk port connects multiple VLANs to an external device, such as a switch, which also supports trunking. A trunk port must have tagging (802.1Q) enabled for all the VLANs that connect to that external device.

Step 4 After each port is in the appropriate VLAN, click **Apply**.

Table 8-4 VLAN Settings

Setting	Description
--	A port marked with this symbol does not belong to the VLAN.
Untag	The ONS 15454 will tag ingress frames and strip tags from egress frames.
Tagged	The ONS 15454 will process ingress frames according to the VLAN ID; egress frames will not have their tags removed.



Note If Tagged is chosen, the attached external Ethernet devices must recognize IEEE 802.1Q VLANs.



Note Both ports on an E1000-2/E1000-2-G card cannot be members of the same VLAN.

Step 5 Return to your originating procedure (NTP).

NTP-A146 Test E-Series Circuits

Purpose	This procedure tests circuits created on E-Series Ethernet cards provisioned for multcard EtherSwitch, single-card EtherSwitch, or port-mapped mode. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	Ethernet test set and appropriate fibers
Prerequisite Procedures	This procedure assumes you completed facility loopback tests to test the fibers and cables from the source and destination ONS 15454s to the fiber distribution panel or the DSX, and one of the following: NTP-A191 Create an E-Series EtherSwitch Circuit (Multicard or Single-Card Mode), page 8-63 NTP-A142 Create an E-Series Shared Packet Ring Ethernet Circuit, page 8-67 NTP-A143 Create an E-Series Hub and Spoke Ethernet Configuration, page 8-70
Required/As Needed	As needed
Onsite/Remote	Onsite
Security	Provisioning or higher

-
- Step 1** Log into the ONS 15454 source Ethernet node. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions.
- Step 2** On the shelf graphic, double-click the circuit source card.
- Step 3** Click the **Provisioning > Ether Port** tabs.
- Step 4** Verify the following settings:
- Mode—Auto, 10 Half, 10 Full, 100 Half, or 100 Full.
 - Enabled—Checked
 - Priority—Set to the priority level indicated by the circuit or site plan. Priority does not apply to E-Series cards in port-mapped mode.
 - Stp—Checked if Spanning Tree Protocol is enabled for the circuit. STP does not apply to E-Series cards in port-mapped mode.
- Step 5** Click the **Ether VLAN** tab. If the E-Series cards is not in port-mapped mode, verify that the source port is on the same VLAN as the destination port.
- Step 6** Repeat Steps 1 through 5 for the destination node.
- Step 7** At the destination node connect the Ethernet test set to the destination port and configure the test set to send and receive the appropriate Ethernet traffic.



Note At this point, you will not be able to send and receive Ethernet traffic.

- Step 8** At the source node connect an Ethernet test set to the source port and configure the test set to send and receive the appropriate Ethernet traffic.

Step 9 Transmit Ethernet frames between both test sets. If you cannot transmit and receive Ethernet traffic between the nodes, repeat Steps 1 through 8 to make sure you configured the Ethernet ports and test set correctly.

Step 10 Perform protection switch testing appropriate to the SONET topology:

- For path protection configurations, see the “DLP-A94 Path Protection Protection Switching Test” task on page 6-37
- For BLSRs see the “DLP-A91 BLSR Switch Test” task on page 6-25.

Configure your test set according to local site practice. For information about configuring your test set, see your test set user guide.

Step 11 After the Ethernet test is complete, print the results or save them to a disk for future reference. For information about printing or saving test results see your test set user guide.

Stop. You have completed this procedure.

NTP-A147 Create a G-Series STS Circuit

Purpose	This procedure creates a G-Series circuit. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	A G-Series Ethernet card must be installed at each end of the circuit.
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit. If you are already logged in, continue with Step 2.

Step 2 From the View menu, choose **Go to Network View**.

Step 3 Click the **Circuits** tab and click **Create**.

Step 4 In the Create Circuits dialog box, complete the following fields:

- Name—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
- Type—Choose STS.
- Size—Choose the circuit size. Valid circuit sizes for a G-Series circuit are STS-1, STS-3c, STS6c, STS-9c, STS-12c, STS-24c, and STS-48c.



Note Restrictions apply to provisioning multiple circuits on a G-Series card when one of the circuit sizes provisioned is STS-24c. Refer to the *Cisco ONS 15454 Reference Manual* for complete information.

- Bidirectional—Leave the default unchanged (checked).

- Number of circuits—Leave the default unchanged (1).
- State—Choose a service state to apply to the circuit:
 - IS—The circuit is in service.
 - OOS—The circuit is out of service. Traffic is not passed on the circuit.
 - OOS-AINS—The circuit is out of service until it receives a valid signal, at which time the circuit state automatically changes to in service (IS).
 - OOS-MT—The circuit is in a maintenance state. The maintenance state does not interrupt traffic flow; it suppresses alarms and conditions and allows loopbacks to be performed on the circuit. Use OOS-MT for circuit testing or to suppress circuit alarms temporarily. Change the state to IS, OOS, or OOS-AINS when testing is complete. See the “DLP-A230 Change a Circuit State” task on page 11-13.
- Apply to drop ports—Leave this box at the default (unchecked).



Note Loss of Signal alarms appear if in service (IS) ports are not receiving signals.

- Create cross-connects only (TL1-like)—Uncheck this box.
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Auto-ranged—Unavailable.
- Protected Drops—Leave the default unchanged (unchecked).

Step 5 If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.

Step 6 Click **Next**.

Step 7 Provision the circuit source:

- a. From the Node drop-down menu, choose the circuit source node. Either end node can be the point-to-point circuit source.
- b. From the Slot drop-down menu, choose the slot containing the G-Series card that you will use for one end of the point-to-point circuit.
- c. From the Port drop-down menu, choose a port.

Step 8 Click **Next**.

Step 9 Provision the circuit destination:

- a. From the Node drop-down menu, choose the circuit destination node.
- b. From the Slot drop-down menu, choose the slot containing the G-Series card that you will use for other end of the point-to-point circuit.
- c. From the Port drop-down menu, choose a port.

Step 10 Click **Next**. The Circuits window appears.

Step 11 Confirm that the following circuit information is correct:

- Circuit name
- Circuit type
- Circuit size
- ONS 15454 circuit nodes

Step 12 Click **Finish**.



Note To change the capacity of a G-Series circuit, you must delete the original circuit and reprovision a new larger circuit.

Step 13 Complete the “NTP-A149 Test G-Series Circuits” procedure on page 8-91.

Stop. You have completed this procedure.

NTP-A148 Create a Manual Cross-Connect for a G-Series or an E-Series in Port-Mapped Mode

Purpose	This procedure creates a manual cross-connect between a G-Series Ethernet card or an E-Series in port-mapped mode and an OC-N card connected to non-ONS equipment. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	A G-Series or E-Series card must be installed at the circuit source node.
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note In this procedure, cross-connect refers to a circuit connection created within the same node between the Ethernet card and an OC-N card connected to third-party equipment. You create cross-connects at the source and destination nodes so an Ethernet circuit can be routed from source to destination across third-party equipment.

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the cross-connect. If you are already logged in, continue with Step 2.

Step 2 If you are provisioning an E-Series card, verify that the Ethernet card that will carry the circuit is provisioned for port-mapped mode. See the “DLP-A246 Provision E-Series Ethernet Card Mode” task on page 8-78.

Step 3 Click the **Circuits** tab and click **Create**.

Step 4 In the Create Circuits dialog box, complete the following fields:

- **Name**—Assign a name to the source cross-connect. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the source cross-connect.
- **Type**—Choose STS.
- **Size**—Choose the size of the circuit that will be carried by the cross-connect. Valid sizes for a G-Series circuit are STS-1, STS-3c, STS-6c, STS-9c, STS-12c, STS-24c, and STS-48c. For an E-Series in port-mapped mode, valid sizes are STS-1, STS-3c, STS-6c, and STS-12c.

- Bidirectional—Leave the default unchanged (checked).
- Number of circuits—Leave the default unchanged (1).
- Auto-ranged—Unavailable.
- State—IS—The circuit is in service (default).
- Apply to drop ports—Uncheck this box.
- Create cross-connects only (TL1-like)—Uncheck this box
- Inter-domain (UCP) SLA—If the circuit will travel on a unified control plane (UCP) channel, enter the service level agreement number. Otherwise, leave the field set to zero.
- Protected Drops—Leave the default unchanged (unchecked).

Step 5 If the circuit will be routed on a path protection, complete the “DLP-A218 Provision Path Protection Selectors During Circuit Creation” task on page 8-30.

Step 6 Click **Next**.

Step 7 Provision the circuit source:

- a. From the Node drop-down menu, choose the circuit source node.
- b. From the Slot drop-down menu, choose the Ethernet card that will be the cross-connect source.
- c. From the Port drop-down menu, choose the cross-connect source port.

Step 8 Click **Next**.

Step 9 Provision the circuit destination:

- a. From the Node drop-down menu, choose the cross-connect source node selected in Step 9. (For Ethernet cross-connects, the source and destination nodes are the same.)
- b. From the Slot drop-down menu, choose the OC-N card that connects to the non-ONS equipment.
- c. Depending on the OC-N card, choose the port and STS from the Port and STS drop-down menus.

Step 10 Click **Next**.

Step 11 Verify the cross-connect information (in this step, “circuit” refers to the cross-connect):

- Circuit name
- Circuit type
- Circuit size
- ONS 15454 circuit nodes

If the information is not correct, click the **Back** button and repeat the procedure with the correct information.

Step 12 Click **Finish**.

Stop. You have completed this procedure.

DLP-A222 Provision G-Series Ethernet Ports

Purpose	This task provisions G-Series Ethernet ports. This task does not apply to DWDM nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required to enable Ethernet traffic on the G-Series
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In the node view, double-click the G-Series card graphic to open the card.

Step 2 Click the **Provisioning > Port** tabs.

Step 3 For each G-Series port, provision the following parameters:

- Port Name—If you want to label the port, type the port name.
- State—Choose **IS** to put the port in service.
- Flow Control Neg—Click this check box to enable flow control negotiation on the port (default). If you do not want to enable flow control, uncheck the box. If you want to change the default flow control settings, complete the “DLP-A421 Provision G-Series Flow Control Watermarks” task on page 8-87.



Note To activate flow control, the Ethernet device attached to the G-Series card must be set to auto-negotiation. If flow control is enabled but the negotiation status indicates no flow control, check the auto-negotiation settings on the attached Ethernet device.

- Max Size—To permit the acceptance of jumbo size Ethernet frames, choose **Jumbo** (default). If you do not want to permit jumbo size Ethernet frames, choose **1548**.



Note The maximum frame size of 1548 bytes enables the port to accept valid Ethernet frames that use protocols, such as ISL. ISL adds 30 bytes of overhead and may cause the frame size to exceed the traditional 1518 byte maximum.

Step 4 Click **Apply**.

Step 5 Refresh the Ethernet statistics:

- Click the **Performance > Statistics** tabs.
- Click **Refresh**.




Note Reprovisioning an Ethernet port on the G-Series card does not reset the Ethernet statistics for that port.

Step 6 Return to your originating procedure (NTP).

DLP-A421 Provision G-Series Flow Control Watermarks

Purpose	This task provisions the buffer memory levels for flow control on G-Series Ethernet ports.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As Needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher


-
- Step 1** In the node view, double-click the G-Series card graphic to open the card.
- Step 2** Click the **Provisioning** > **Port** tabs.
- Step 3** In the Water Marks column, click the cell in the row for the appropriate port.
- Step 4** To provision the Low Latency flow control watermark:
- Choose **Low Latency** from the drop-down menu.
The values in the Flow Ctrl Lo and Flow Ctrl Hi change.
 - Click **Apply**.
- Step 5** To provision a Custom flow control watermark:
- Choose **Custom** from the drop-down menu.
 - In the Flow Ctrl Lo column, click the cell in the row for the appropriate port.
 - Enter a value in the cell. The Flow Ctrl Lo value has a valid range from 1 to 510 and must be lower than the Flow Ctrl Hi value.
This value sets the flow control threshold for sending the signal to the attached Ethernet device to resume transmission.
 - In the Flow Ctrl Hi column, click the cell in the row for the appropriate port.
 - Enter a value in the cell. The Flow Ctrl Hi value has a valid range from 1 to 511 and must be higher than the Flow Ctrl Lo value.
This value sets the flow control threshold for sending the signal to the attached Ethernet device to pause transmission.
 - Click **Apply**.
-  **Note** Low watermarks are optimum for low latency sub-rate applications, such as VoIP using an STS-1. High watermarks are optimum when the attached Ethernet device has insufficient buffering, best effort traffic or long access line lengths.
-
- Step 6** Return to your originating procedure (NTP).
-

NTP-A241 Provision G-Series Ports for Transponder Mode

Purpose	This procedure provisions G-Series ports into transponder mode. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26 DLP-A222 Provision G-Series Ethernet Ports, page 86
Required/As Needed	As Needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In the node view, double-click the G-Series card graphic to open the card.
- Step 2** Click the **Provisioning > Port** tabs.

Figure 8-16 Two Port Bidirectional Transponder Mode

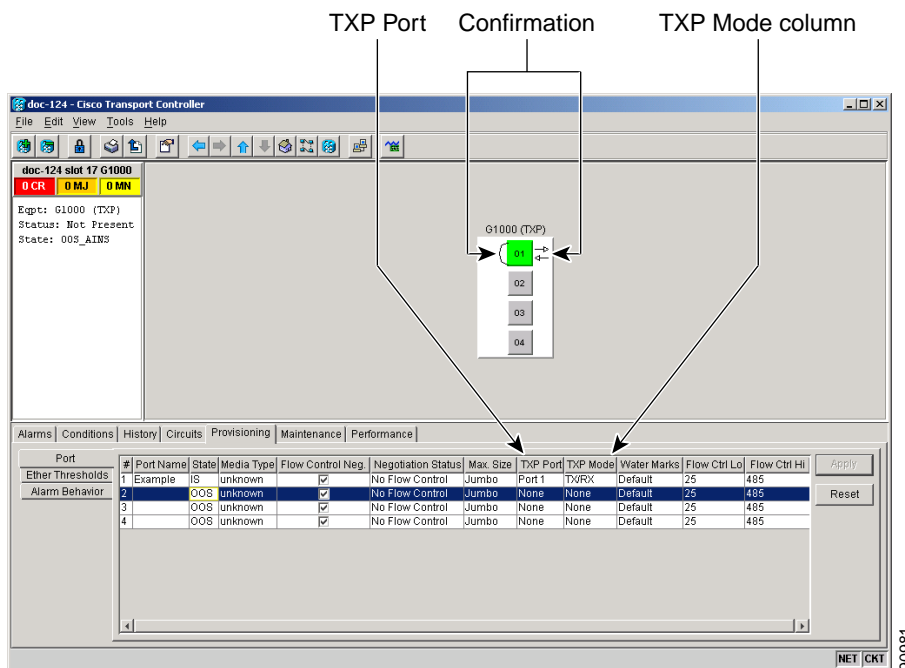


- Step 3** To put a pair of G-Series card ports in two-port bidirectional transponder mode:
- In the TXP Mode column, click a port A row (for example Port 1).
“A” represents the first port in a pair. You can pair any two ports on a G-Series card in two-port bidirectional mode.
 - Choose **TX/RX** from the drop-down menu.
 - In the TXP Port column, click the port A row.
 - Choose a port B (for example **Port 2**).
 - In the TXP Mode column, click the port B row (for example Port 2).

- f. Choose **TX/RX** from the drop-down menu.
- g. In the TXP Port column, click the same port B row (for example Port 2).
- h. Choose Port A (for example **Port 1**) from the drop-down menu.
- i. Click **Apply**.


The ports displayed in the card view have arrows and a connecting line between the backside of the ports.

Figure 8-17 One Port Bidirectional Transponder Mode

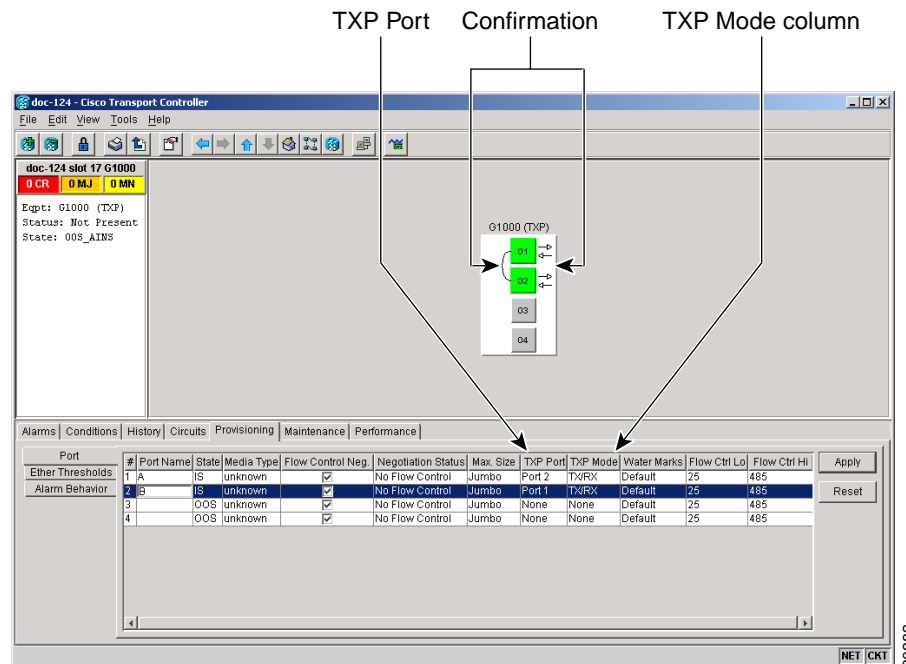

- Step 4** To put a G-Series card port in one-port bidirectional transponder mode:
- a. In the TXP Mode column, click the desired port row (for example **Port 1**).
 - b. Choose **TX/RX** from the drop-down menu.
 - c. In the TXP Port column, click the same desired port row (for example **Port 1**).
 - d. Choose the desired port from the drop-down menu (for example **Port 1**).
 - e. Click **Apply**.
- In card view, the desired port has arrows and a curved line on the backside of the port.

Figure 8-18 Two Port Unidirectional Transponder Mode

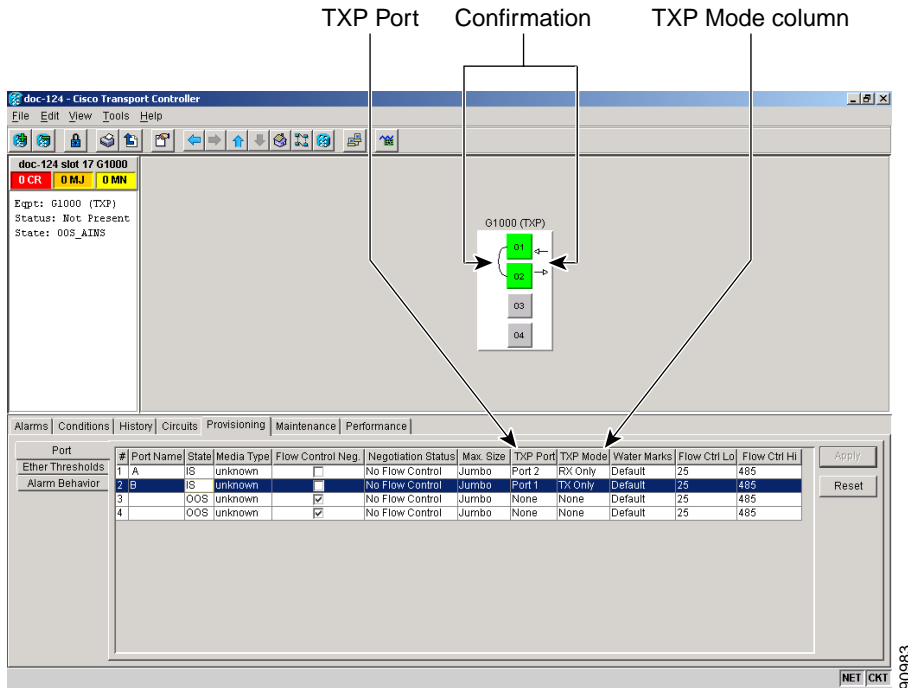

Step 5 To provision two-port unidirectional transponder mode:

- a. In the TXP Mode column, click the port A row (for example port 1).
“A” represents the first port in a pair. You can pair any two ports on a G-Series card in two port unidirectional mode.
- b. Choose **RX Only** from the drop-down menu.
- c. In the TXP Port column, click the port A row (for example Port 1).
- d. Choose Port B (for example Port 2) from the drop-down menu.
- e. In the TXP Mode column, click the port B row (for example Port 2).
- f. Choose **TX Only** from the drop-down menu.
- g. In the TXP Port column, click the port B row (for example Port 2).
- h. Choose Port A (for example Port 1) from the drop-down menu.
- i. Click **Apply**.

The ports displayed on the CTC card level view will display arrows and a line between the backside of the ports.

Stop. You have completed this procedure.

NTP-A149 Test G-Series Circuits

Purpose	This procedure tests circuits created on G-Series cards. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	Ethernet test set and appropriate fibers
Prerequisite Procedures	This procedure assumes you completed facility loopback tests to test the fibers and cables from the source and destination ONS 15454s to the fiber distribution panel or the DSX. NTP-A147 Create a G-Series STS Circuit, page 8-82 or NTP-A148 Create a Manual Cross-Connect for a G-Series or an E-Series in Port-Mapped Mode, page 8-84
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the circuit.

Step 2 Change the circuit and circuit ports to an OOS-MT service state:

- a. Click the **Circuits** tab.
- b. Click the circuit you want to test.
- c. From the Tools menu, choose **Circuits > Change Circuit State**.
- d. In the Change Circuit State dialog box, choose **OOS_MT** from the Target Circuit State drop-down menu.
- e. Check the **Apply to circuit drops** check box.
- f. Click **OK**.

Step 3 On the shelf graphic, double-click the circuit source card.

Step 4 Click the **Provisioning > Port** tabs.

Step 5 Verify the following settings:

- State—OOS_MT
- Flow Control Neg—Checked or unchecked as indicated by the circuit or site plan
- Max Size—Check or unchecked as indicated by the circuit or site plan
- Media Type— SX, LX, ZX, CWDM or DWDM

Step 6 Repeat Steps 1 through 5 for the destination node.

Step 7 At the destination node connect the Ethernet test to the destination port and configure the test set to send and receive the appropriate Ethernet traffic.



Note At this point, you will not be able to send and receive Ethernet traffic.

Step 8 At the source node connect an Ethernet test set to the source port and configure the test set to send and receive the appropriate Ethernet traffic.

- Step 9** Transmit Ethernet frames between both test sets. If you cannot transmit and receive Ethernet traffic between the nodes, repeat Steps 1 through 6 to make sure you configured the Ethernet ports and test set correctly.
- Step 10** Perform protection switch testing appropriate to the SONET topology:
- For path protection configurations, see the “DLP-A94 Path Protection Protection Switching Test” task on page 6-37.
 - For BLSRs see the “DLP-A91 BLSR Switch Test” task on page 6-25.
- Configure your test set according to local site practice. For information about configuring your test set, see your test set user guide.
- Step 11** Change the circuit and circuit ports to the IS service state:
- a. Click the **Circuits** tab.
 - b. Choose the circuit you want to test.
 - c. From the Tools menu, choose **Circuits > Change Circuit State**.
 - d. In the Change Circuit State dialog box, choose **IS** from the Target Circuit State drop-down menu.
 - e. Check the **Apply to circuit drops** check box.
 - f. Click **OK**.
- Step 12** After the circuit test is complete, print the results or save them to a disk for future reference. For information about printing or saving test results see your test set user guide.
- Stop. You have completed this procedure.**
-

NTP-A194 Create Overhead Circuits

Purpose	This procedure creates overhead circuits on an ONS 15454 network. Overhead circuits include DCC tunnels, the AIC and AIC-I card orderwire, and the AIC-I card user data channel. Except where noted, This procedure applies to DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A127 Verify Network Turn Up, page 8-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the overhead circuit. If you are already logged in, continue with Step 2.
- Step 2** From the View menu, choose **Go to Network View**.
- Step 3** As needed, complete the “DLP-A313 Create a DCC Tunnel” task on page 8-93.
- Step 4** As needed, complete the “DLP-A83 Provision Orderwire” task on page 8-94.
- Step 5** As needed, complete the “DLP-A212 Create a User Data Channel Circuit” task on page 8-95.

Stop. You have completed this procedure.

DLP-A313 Create a DCC Tunnel

Purpose	This task creates a DCC tunnel to transport traffic from third-party SONET equipment across ONS 15454 networks. Tunnels can be created on the Section DCC channel (D1-D3) (if not used by the ONS 15454 as a terminated DCC), or any Line DCC channel (D4-D6, D7-D9, or D10-D12). This task does not apply to DWDM nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A35 Verify Node Turn Up, page 6-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher




Note

Each ONS 15454 can have up to 32 DCC tunnel connections. Terminated Section DCCs used by the ONS 15454 cannot be used as a DCC tunnel endpoint, and a Section DCC that is used as an DCC tunnel endpoint cannot be terminated. All DCC tunnel connections are bidirectional.

- Step 1** In network view, click the **Provisioning > Overhead Circuits** tabs.
- Step 2** Click **Create**.
- Step 3** In the Circuit Creation dialog box (Figure 8-19), provision the DCC tunnel:
- Name—Type the tunnel name.
 - Type—Choose one:
 - DCC Tunnel-D1-D3—Allows you to choose either the Section DCC (D1-D3) or a Line DCC (D4-D6, D7-D9, or D10-D12) as the source or destination endpoints.
 - DCC Tunnel-D4-D12—Provisions the full Line DCC as a tunnel.
 - Source Node—Choose the source node.
 - Slot—Choose the source slot.
 - Port—If displayed, select the source port.
 - Channel—These options appear if you chose DCC Tunnel-D1-D3 as the tunnel type. Choose one of the following:
 - DCC1 (D1-D3)—is the Section DCC
 - DCC2 (D4-D6)—is Line DCC 1
 - DCC3 (D7-D9)—is Line DCC 2
 - DCC4 (D10-D12)—is Line DCC 3
- DCC options do not appear if they are used by the ONS 15454 (DCC1) or other tunnels.

Figure 8-19 Provisioning a DCC Tunnel

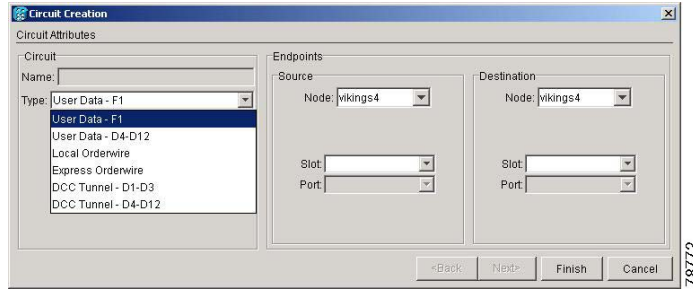

- Step 4** Click **OK**.
- Step 5** Put the ports that are hosting the DCC tunnel in service. See the “DLP-A214 Change the Service State for a Port” task on page 6-6 for instructions.
- Step 6** Return to your originating procedure (NTP).

DLP-A83 Provision Orderwire

Purpose	This task provisions orderwire on the AIC or the AIC-I card. This task applies to both DWDM and non-DWDM nodes.
Tools/Equipment	An AIC or AIC-I card must be installed in Slot 9.
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In the network view, click the **Provisioning > Overhead Circuits** tabs.
- Step 2** Click **Create**.
- Step 3** In the Circuit Creation dialog box, complete the following fields:
- **Name**—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces).
 - **Type**—Choose either LOW (local orderwire) or EOW (express orderwire) appropriate to the orderwire path that you want to create. If regenerators are not used between ONS 15454 nodes, you can use either local or express orderwire channels. If regenerators exist, use the express orderwire channel. You can provision up to four ONS 15454 OC-N ports for each orderwire path.
 - **PCM**—Choose the Pulse Code Modulation voice coding and companding standard, either MU_LAW (North America, Japan) or A_LAW (Europe).

Figure 8-20 shows the Local Orderwire subtab. The provisioning procedures are the same for both types of orderwire.

**Caution**

When provisioning orderwire for ONS 15454s residing in a ring, do not provision a complete orderwire loop. For example, a four-node ring typically has east and west ports provisioned at all four nodes. However, to prevent orderwire loops, provision two orderwire ports (east and west) at all but one of the ring nodes.

Figure 8-20 Provisioning Local Orderwire

The screenshot shows a 'Circuit Attributes' dialog box. On the left, under 'Circuit', there are three fields: 'Name' with the value 'Local', 'Type' with a dropdown menu showing 'Local Orderwire', and 'PCM' with a dropdown menu showing 'Mu-law'. On the right, under 'Endpoints', there are two columns: 'Source' and 'Destination'. Each column has a 'Node' dropdown menu showing 'doc-123', and 'Slot' and 'Port' dropdown menus that are currently empty. At the bottom right of the dialog are four buttons: '<Back', 'Next>', 'Finish', and 'Cancel'. A small number '78992' is visible on the right edge of the dialog box.

- Step 4** In the Endpoints area, choose the source and destination nodes and source and destination OC-N (TDM nodes) or OSC (DWDM nodes) ports and slots from the drop-down menus.
- Step 5** Click **Finish**.
- Step 6** Return to your originating procedure (NTP).

DLP-A212 Create a User Data Channel Circuit

Purpose	This task creates a user data channel (UDC) circuit on the ONS 15454. A UDC circuit allows you to create a dedicated data channel between nodes. This task applies to both DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed.
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In network view, click the **Provisioning > Overhead Circuits** tabs.
- Step 2** Click **Create**.
- Step 3** In the Circuit Creation dialog box, complete the following fields:
- Name—Assign a name to the circuit. The name can be alphanumeric and up to 48 characters (including spaces).

- **Type**—Choose either User Data-F1 or User Data D-4-D-12 from the drop-down menu. (User Data D-4-D-12 is not available if the ONS 15454 is provisioned for DWDM.)
- Step 4** In the Endpoints area, choose the source and destination nodes, slots and ports from the drop-down menu. For non- DWDM nodes, the slots and ports will be OC-N cards. For DWDM nodes, the slots and ports will be OSC cards.
- Step 5** Click **Finish**.
- Step 6** Return to your originating procedure (NTP).
-

NTP-A227 Provision a DWDM Optical Channel Network Connection

Purpose	This procedure creates an optical channel network connection (OCHNC) between ONS 15454s that are provisioned for DWDM. This procedure applies only to DWDM nodes.
Tools/Equipment	DWDM optical passive units (32 MUX-0, 32 DMX-0, 4MD-xx.x) and OADM (band or channel) cards must be installed at the nodes within the OCHNC route.
Prerequisite Procedures	The “NTP-A222 Provision the DWDM Node” procedure on page 5-3 must be completed at all nodes with the OCHNC route.
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will create the DWDM OCHNC. If you are already logged in, continue with Step 2.
- Step 2** If you want to assign a name to the OCHNC source and destination ports before you create the circuit, complete the “DLP-A314 Assign a Name to a Port” task on page 8-17. If not, continue with Step 3.
- Step 3** From the View menu, choose **Go to Network View**.
- Step 4** Click the **Circuits** tab, then click **Create**.
- Step 5** In the Circuit Creation dialog box, complete the following fields:
- **Name**—Assign a name to the OCHNC. The name can be alphanumeric and up to 48 characters (including spaces). Circuit names should be 44 characters or less if you want the ability to create monitor circuits. If you leave the field blank, CTC assigns a default name to the circuit.
 - **Type**—Choose **OCHNC**.
 - **Size**—Choose one of the following options depending upon whether a TXP_MR_10G, MXP_MR_10G, TXP_MR_2.5G, or TXPP_MR_2.5G card is connected to the OCHNC end points:
 - **Equipped non specific**—Choose this option if you do not know which card will be installed at the OCHNC end points.
 - **Multi-rate**—Choose this option if a TXP_MR_2.5G or TXPP_MR_2.5G card that is provisioned for Fiber Channel, Gigabit Ethernet, or ESCON (Enterprise Systems Connection) is connected to the OCHNC end points.

- 2.5 Gb/s No FEC— Choose this option if a TXP_MR_2.5G or TXPP_MR_2.5G card that is not provisioned for forward error correction is connected to the OCHNC end points.
- 2.5 Gb/s FEC—Choose this option if a TXP_MR_2.5G or TXPP_MR_2.5G card that is provisioned for forward error correction is connected to the OCHNC end points.
- 10 Gb/s No FEC—Choose this option if a TXP_MR_10G or MXP_MR_10G card that is not provisioned for forward error correction is connected to the OCHNC end points.
- 10 Gb/s FEC—Choose this option if a TXP_MR_10G or MXP_MR_10G card that is provisioned for forward error correction is connected to the OCHNC end points.
- OCHNC Channel—Choose the wavelength you want to provision. 32 wavelengths are available. See Table 5-5 on page 5-8 for a list of OADM channels.
- OCHNC Direction—Choose OCHNC direction, either east to west or west to east.
- Bidirectional—Check this check box to create a bidirectional OCHNC; uncheck it to create a unidirectional OCHNC.

The remaining fields on the Circuit Attributes panel are not available.

Step 6 Click **Next**.

Step 7 Choose the source node from the Node drop-down menu and Click **Next**.

Step 8 Choose the destination node from the Destination drop-down menu and Click **Finish**.

Stop. You have completed this procedure.



Manage Alarms

This chapter explains how to view and manage the alarms and conditions on a Cisco ONS 15454.

Cisco Transport Controller (CTC) detects and reports alarms generated by the Cisco ONS 15454 and the ONS network. You can use CTC to monitor and manage alarms at a card, node, or network level. You can also view alarm counts on the LCD front panel.



Note

Except where noted, the procedures and tasks in this chapter apply to both DWDM (Software Release 4.5) and non-DWDM (Software R4.1 and earlier) nodes.

Before You Begin

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A195 Document Existing Provisioning, page 9-2—Complete this procedure as needed to print or export node data.
2. NTP-A196 View Alarms, History, Events, and Conditions, page 9-5—Complete this procedure as needed to see alarms and conditions occurring on the node and a complete history of alarm and condition messages.
3. NTP-A68 Delete Cleared Alarms from Display, page 9-13—Complete this procedure as needed to delete cleared alarm information.
4. NTP-A69 View Alarm-Affected Circuits, page 9-14—Complete this procedure as needed to find circuits that are affected by a particular alarm or condition.
5. NTP-A70 View Alarm Counts on the LCD for a Node, Slot, or Port, page 9-16—Complete this procedure as needed to see a statistical count of alarms that have occurred for a slot or port.
6. NTP-A71 Create, Download, and Assign Alarm Severity Profiles, page 9-17—Complete this procedure as needed to change the default severity for certain alarms, assign the new severities to a port, card, or node, and delete alarm profiles.
7. NTP-A168 Enable, Modify, or Disable Alarm Severity Filtering, page 9-26—Complete this procedure as needed to enable, disable, or modify alarm severity filtering in the Conditions, Alarms, or History screens; you can enable, modify, and disable alarm severity filtering at the node or network level.
8. NTP-A72 Suppress Alarms and Discontinue Alarm Suppression, page 9-30—As needed, use these tasks to suppress reported alarms at the port, card, or node level and disable the suppress command to resume normal alarm reporting.

NTP-A195 Document Existing Provisioning

Purpose	This procedure prints card, node, or network CTC information in graphical or tabular form on a Windows-provisioned printer, or to export card, node, or network information as editable delineated text files to other applications. This procedure is useful for network record keeping and troubleshooting.
Tools/Equipment	Printer connected to the CTC computer by a direct or network connection
Prerequisite Procedures	Chapter 4, “Turn Up Node”
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to record or save data. If you are already logged in, continue with Step 2.
- Step 2** As needed, complete the “DLP-A138 Print CTC Data” task on page 9-2.
- Step 3** As needed, complete the “DLP-A139 Export CTC Data” task on page 9-4.
- Stop. You have completed this procedure.**
-

DLP-A138 Print CTC Data

Purpose	This task prints CTC card, node, or network data in graphical or tabular form on a Windows-provisioned printer.
Tools/Equipment	Printer connected to the CTC computer by a direct or network connection
Prerequisite procedures	DLP-A60 Log into CTC, page 3-26
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

-
- Step 1** Click the tab (and subtab, if present) containing the information you want to print. For example, click the **Alarms** tab to print Alarms window data.
- The print operation is available for all network, node, and card view windows.
- Step 2** Click **File > Print**.
- Step 3** In the Print dialog box, click a a printing option (Figure 9-1).
- Entire Frame—Prints the entire CTC window including the graphical view of the card, node, or network. This option is available for all windows.
 - Tabbed View—Prints the lower half of the CTC window containing tabs and data. The printout includes the selected tab (on top) and the data shown in the tab window. For example, if you print the History window Tabbed View, you print only history items appearing in the window. This option is available for all windows.


- Table Contents—Prints CTC data in table format without graphical representations of shelves, cards, or tabs. This option is available only for CTC table data, so it does not apply to:
 - Provisioning > General, Protection, SNMP, or Timing windows
 - Provisioning > Network > General window
 - Provisioning > UCP > Node window
 - Provisioning > WDM-ANS > Provisioning window (Release 4.5)
 - Maintenance > Database, Protection, Diagnostic, or Timing windows
 - Maintenance > Cross-Connect > Cards window

The Table Contents option prints all the data contained in a table and the table column headings. For example, if you print the History window Table Contents view, you print all data included in the table whether or not items appear in the window.

**Tip**

When you print using the Tabbed View option, it can be difficult to distinguish whether the printout applies to the network, node, or card view. To determine the view, compare the tabs on the printout. The network, node, and card views are identical except that network view does not contain an Inventory tab or Performance tab.

Figure 9-1 Selecting CTC Data For Print

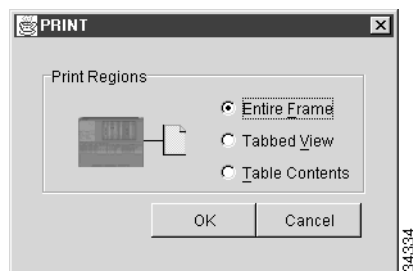


- Step 4** Click **OK**.
- Step 5** In the Windows Print dialog box, click a printer and click **OK**.
- Step 6** Repeat this task for each window that you want to print.
- Step 7** Return to your originating procedure (NTP).

DLP-A139 Export CTC Data

Purpose	This task exports CTC table data as delineated text to view or edit the data in text editor, word processing, spreadsheet, database management, or web browser applications.
Tools/Equipment	None
Prerequisite procedures	DLP-A60 Log into CTC, page 3-26
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

-
- Step 1** Click the tab containing the information you want to export (for example, the Alarms tab or the Circuits tab).
- Step 2** Choose **Export** from the File menu.
- Step 3** In the Export dialog box (Figure 9-2), click a data format:
- As HTML—Saves data as a simple HTML table file without graphics. The file must be viewed or edited with applications such as Netscape Navigator, Microsoft Internet Explorer, or other applications capable of opening HTML files.
 - As CSV—Saves the CTC table as comma-separated values (CSV).
 - As TSV—Saves the CTC table as tab-separated values (TSV).

Figure 9-2 Selecting CTC Data For Export

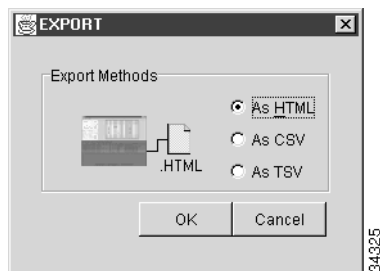

- Step 4** If you want to open a file in a text editor or word processor application, procedures may vary; but typically you can use the File > Open command to display the CTC data, or you can double-click the file name and choose an application such as Notepad.
- Text editor and word processor applications display the data exactly as it is exported, including comma or tab separators. All applications that open the data files allow you to format the data.
- Step 5** If you want to open the file in spreadsheet and database management applications, procedures may vary; but typically you need to open the application and choose File > Import, then choose a delimited file to display the data in cells.

Spreadsheet and database management programs also allow you to manage the exported data.



Note An exported file cannot be opened in CTC.

The export operation only applies to tabular data, so it is not available for the following CTC tabs and subtabs:

- Provisioning > General, Protection, SNMP, or Timing windows
- Provisioning > Network > General window
- Provisioning > UCP > Node window
- Provisioning > WDM-ANS > Provisioning window (Release 4.5)
- Maintenance > Database, Protection, Diagnostic, or Timing windows
- Maintenance > Cross-Connect > Cards window

Step 6 Click **OK**.

Step 7 In the Save dialog box, enter a name in the File name field using one of the following formats:

- [filename].html—for HTML files
- [filename].csv—for CSV files
- [filename].tsv—for TSV files

Step 8 Navigate to a directory where you want to store the file.

Step 9 Click **OK**.

Step 10 Repeat the task for each window that you want to export.

Step 11 Return to your originating procedure (NTP).

NTP-A196 View Alarms, History, Events, and Conditions

Purpose	Use this procedure to view current or historical alarms and conditions for a card, a node, or network. This information is useful for monitoring and troubleshooting hardware and software events.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node that contains the alarms you want to view. If you are already logged in, continue with Step 2.

Step 2 In the card, node, or network view, click the **Alarms** tab to display the alarms for that card, node, or network (Figure 9-3).

Figure 9-3 CTC Node View

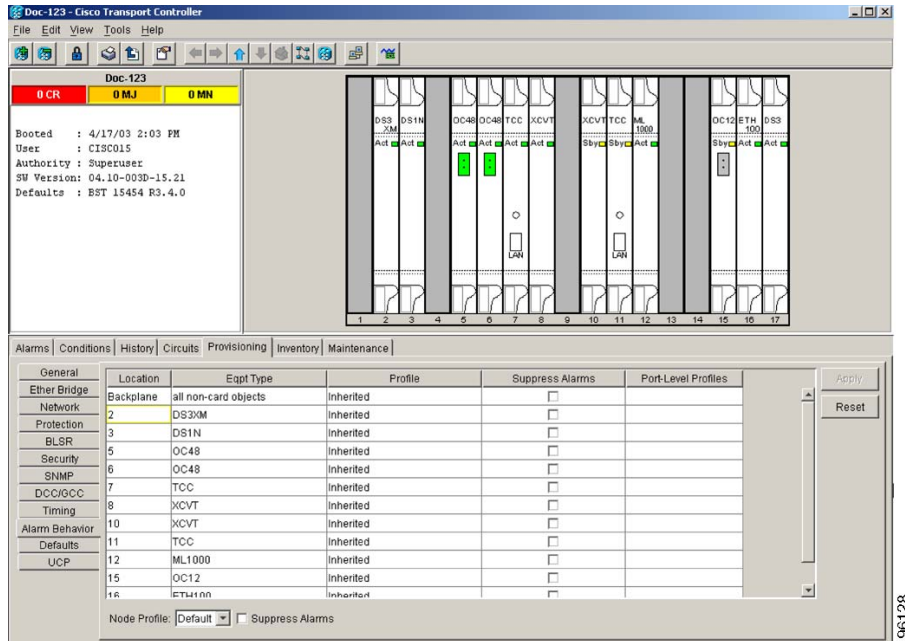


Table 9-1 lists the columns in the Alarms window and their descriptions.

Table 9-1 Alarm Column Descriptions

Column	Information Recorded
New	Indicates a new alarm; to change this status, click either the Synchronize button or the Delete Cleared Alarms button
Date	Date and time of the alarm
Node	Node where the alarm occurred (appears only in network view)
Object	TL1 access identifier (AID) for the alarmed object; for an STSmon or VTmon, this is the monitored STS or VT
Eqpt Type	Card type in this slot
Slot	Slot where the alarm occurred (appears only in network and node view)
Port	Port where the alarm is raised; for STSTerm and VTTerm, the port refers to the upstream card it is partnered with
Sev	Severity level: CR (critical), MJ (major), MN (minor), NA (not-alarmed), NR (not-reported)
ST	Status: R (raised), C (clear)
SA	When checked, indicates a service-affecting alarm
Cond	The error message/alarm name; these names are alphabetically defined in the “Alarm Troubleshooting” chapter of the <i>Cisco ONS 15454 Troubleshooting Guide</i>
Description	Description of the alarm
Num	An incrementing count of alarm messages
Ref	The reference number assigned to the alarm

Table 9-2 lists the color codes for alarm and condition severities.

Table 9-2 Color Codes for Alarms and Conditions

Color	Description
Red	Raised Critical (CR) alarm
Orange	Raised Major (MJ) alarm
Yellow	Raised Minor (MN) alarm
Magenta (pink)	Raised Not-Alarmed (NA) condition
Blue	Raised Not-Reported (NR) condition
White	Cleared (C) alarm or condition

Releases 4.0 and later have specifically numbered STS and VT alarm object identifiers based upon the object TL1 access identifiers (AIDs).

Table 9-3 Release 4.0 and Later Port-Based Alarm Numbering Scheme

Release 4.0 STS and VT Alarm Numbering		
MON object	STS-<Slot>-<Port>-<STS> For example, STS-6-1-6 VT1-<Slot>-<Port>-<STS>- <VT Group>-<VT> For example, VT1-6-1-6-1-1	Port=1
TERM object	<Upstream Slot>-<Port>-<STS> For example, STS-6-3-6 <Upstream Slot>-<Port>-<STS>- <VT Group>-<VT> For example, VT1-6-3-6-1-1	Port=1

- Step 3** If alarms are present, refer to the *Cisco ONS 15454 Troubleshooting Guide* for information and troubleshooting procedures.
- Step 4** Complete the “DLP-A110 View Alarm History” task on page 9-8, the “DLP-A113 Synchronize Alarms” task on page 9-11, or the “DLP-A114 View Conditions” task on page 9-11 as needed.

Stop. You have completed this procedure.

DLP-A110 View Alarm History

Purpose	Use this task to view past cleared and uncleared ONS 15454 alarm messages at the card, node, or network level. This task is useful for troubleshooting configuration, traffic, or connectivity issues that are indicated by alarms.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

Step 1 Decide whether you want to view the alarm message history at the node, network, or card level.

Step 2 To view node alarm history:

- a. Click the **History > Session** tabs to view the alarms and conditions (events) raised during the current session.
- b. Click the **History > Node** tabs to retrieve all available alarm messages for the node.



Tip Double-click an alarm in the alarm table or an event (condition) message in the history table to display the view that corresponds to the alarm message. For example, double-clicking a card alarm takes you to card view. In network view, double-clicking a node alarm takes you to node view.

Step 3 To view network alarm history, from node view:

- a. Click **View > Go to Network View**.
- b. Click the **History** tab.

Alarms and conditions (events) raised during the current session appear.

Step 4 To view card alarm history, from network view click **View > Go to Previous View** to return to the node view.

Step 5 From node view, double-click a card on the shelf graphic to display the card-level view for the card.



Note TCC+/TCC2 and cross-connect cards do not have a card view.

- a. Click the **History > Session** tabs to view the alarm messages raised during the current session.
- b. Click the **History > Card** tabs to retrieve all available alarm messages for the card.



Note The ONS 15454 can store up to 640 critical alarm messages, 640 major alarm messages, 640 minor alarm messages, and 640 condition messages. When any of these limits is reached, the ONS 15454 discards the oldest events in that category.

Step 6 To display Not-Alarmed (NA) and transient event (condition) history from the node or card view:

- a. Check the **Events** check box in the History > Node window or History > Card window.

- b. Click **Retrieve**.

The window displays raised and cleared alarm messages (and events, if selected).



Tip Double-click an alarm in the alarm table or a condition in the history table to display the view that corresponds to the alarm message. For example, double-clicking a card alarm takes you to card view. In network view, double-clicking a node alarm takes you to node view.


- Step 7** Return to your originating procedure (NTP).
-

DLP-A111 Changing the Maximum Number of Session Entries for Alarm History

Purpose	This task changes the maximum number of session entries included in the alarm history. Use this task to extend the history list in order to save information for future reference or troubleshooting.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning

- Step 1** From the Edit menu, choose **Preferences**.
The CTC Preferences Dialog box appears (Figure 9-4).

Figure 9-4 CTC Preferences Dialog Box

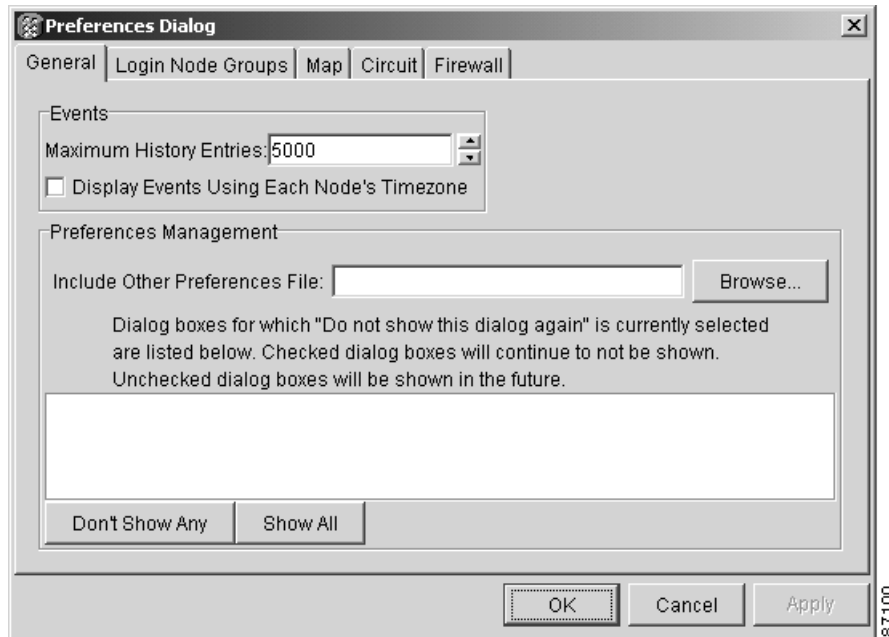

Step 2 Click the up or down arrow buttons next to the Maximum History Entries field to change the entry.

Step 3 Click **Apply** and **OK**.



Note Setting the Maximum History Entries value to the high end of the range uses more CTC memory and could impair CTC performance.



Note This task changes the maximum history entries recorded for CTC sessions. It does not affect the maximum number of history entries viewable for a network, node, or card.

Step 4 Return to your originating procedure (NTP).

DLP-A112 Display Alarms and Conditions Using Time Zone

Purpose	Use this task to change the timestamp for events to the timezone of the ONS node reporting the alarm. By default, the events timestamp is set to the timezone for the CTC workstation.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning

-
- Step 1** From the Edit menu, choose **Preferences**.
The CTC Preferences Dialog box appears (Figure 9-4 on page 9-10).
- Step 2** Check the **Display Events Using Each Node's Timezone** check box. The Apply button is enabled.
- Step 3** Click **Apply** and **OK**.
- Step 4** Return to your originating procedure (NTP).
-

DLP-A113 Synchronize Alarms

Purpose	Use this task to view ONS 15454 events at the card, node, or network level and to refresh the alarm listing while troubleshooting so that you can check for new and cleared alarms and conditions.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

Step 1 At the card, node, or network view, click the **Alarms** tab.

Step 2 Click **Synchronize**.

This button causes CTC to retrieve a current alarm summary for the card, node, or network. This step is optional because CTC updates the Alarms window automatically as raise/clear messages arrive from the node.



Note Alarms that have been raised during the session will have a check mark in the Alarms window New column. When you click Synchronize, the check mark disappears.

Step 3 Return to your originating procedure (NTP).

DLP-A114 View Conditions

Purpose	Use this task to view conditions [events with a Not-Reported (NR) severity] at the card, node, or network level. Conditions give you a clear record of changes or events that do not result in alarms.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

- Step 1** From the card, node, or network view, click the **Conditions** tab.
- Step 2** Click **Retrieve** (Figure 9-5).

The Retrieve button requests the current set of fault conditions from the node, card, or network. The window is not updated when events change on the node. You must click Retrieve to see any changes.

Figure 9-5 Node View Conditions Window

Date	Object	Eqpt Type	Slot	Port	Sev	SA	Cond	Description
01/01/70 18:02:02 CST	SYNC-NE				NA	SWTOPRI	Switch To Primary Reference	
01/01/70 18:02:02 CST	SYNC-NE				NA	SSM-ST3	Stratum 3 Traceable	
01/01/70 18:02:02 CST	BITS-2				NA	SSM-PRS	Stratum 1 Primary Reference Source Trac...	
01/01/70 18:02:02 CST	BITS-1				NA	SSM-PRS	Stratum 1 Primary Reference Source Trac...	
01/01/70 18:02:02 CST	SYNC-NE				NA	FRNGSYNC	Free Running Synchronization Mode	
01/01/70 18:02:08 CST	FAC-6-1	OC48	6	1	NA	AS-CMD	Alarms Suppressed by User Command	
01/01/70 21:27:48 CST	VT1-6-1	OC48	6	1	NR	AS-V	Alarm Indication Signal - VT	
01/01/70 18:02:08 CST	FAC-5-1	OC48	5	1	NA	AS-CMD	Alarms Suppressed by User Command	
01/01/70 21:27:48 CST	VT1-5-1	OC48	5	1	NR	AS-V	Alarm Indication Signal - VT	
01/01/70 18:05:09 CST	SLOT-12	ML1000	12		NA	NO-CONFIG	No Startup Config	

Conditions include all fault conditions raised on the node, whether or not they are reported.



Note Alarms can be unreported when they are filtered out of the display. See the “DLP-A225 Enable Alarm Filtering” task on page 9-27, for information.

Events that are reported as Major (MJ), Minor (MN), or Critical (CR) severities are alarms. Events that are reported as Not-Alerted (NA) are conditions. Conditions that are not reported at all are marked Not-Reported (NR) in the Conditions window severity column.

Conditions that have a default severity of Critical (CR), Major (MJ), Minor (MN), or Not-Alerted (NA) but are not reported due to exclusion or suppression are shown as NR in the Conditions window.



Note For more information about alarm suppression, see the “DLP-A119 Suppress Alarm Reporting” task on page 9-31.

Current conditions are shown with the severity chosen in the alarm profile, if used. For more information about alarm profiles, see the “NTP-A71 Create, Download, and Assign Alarm Severity Profiles” procedure on page 9-17.



Note When ports are placed out of service for maintenance (OOS-MT), they raise an Alarms Suppressed for Maintenance (AS-MT) condition. For information about alarm and condition troubleshooting, refer to the *Cisco ONS 15454 Troubleshooting Guide*.

- Step 3** If you want to apply exclusion rules, check the **Exclude Same Root Cause** check box at the node or network view, but do not check the Exclude Same Root Cause check box in card view.
- An exclusion rule eliminates all lower-level alarms or conditions that originate from the same cause. For example, a fiber break may cause an LOS alarm, an AIS condition, and an SF condition. If you check the Exclude Same Root Cause checkbox, only the LOS alarm will appear. According to Telcordia, exclusion rules apply to a query of “all conditions from a node.”
- Step 4** Return to your originating procedure (NTP).

NTP-A68 Delete Cleared Alarms from Display

Purpose	Use this procedure to delete Cleared (C) status alarms from the alarms window. The procedure can be used to delete transient messages from the CTC History window.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

- Step 1** Log into a node where you want to delete alarms. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, go to Step 2.
- Step 2** To delete cleared node-level alarms:
- In the node view, click the **Alarms** tab.
 - Click the **Delete Cleared Alarms** button, referring to the rules in Step 5.
- This action removes any cleared ONS 15454 alarms from the Alarms display. The rows of cleared alarms turn white and have a C in their status (ST) column (Figure 9-5 on page 9-12).
- Step 3** To delete cleared card-level alarms:
- In the node view, double-click the card graphic for the card you want to open.
 - Click the **Alarms** tab and then click the **Delete Cleared Alarms** button, referring to the rules in Step 5.
- Step 4** To delete cleared network-level alarms:
- In the node view click **View > Go to Network View**.
 - Click the **Alarms** tab and then click the **Delete Cleared Alarms** button, referring to the rules in Step 5.

- Step 5** Consult the following rules when deleting cleared alarms from the display:
- If the Autodelete Cleared Alarms check box is checked, an alarm disappears from the window when it is cleared.
 - If the Autodelete Cleared Alarms check box is not checked, an alarm remains in the window when it is cleared. The alarm appears white in the window and has a Clear (CL) severity. The alarm can be removed by clicking the Delete Cleared Alarms button.
- Step 6** Transient messages are single messages and not raise-and-clear pairs (that is, they do not have companion messages stating they are cleared). Click the **Delete Cleared Alarms** button to remove the transients from the History window.
- Stop. You have completed this procedure.**
-

NTP-A69 View Alarm-Affected Circuits

Purpose	Use this procedure to view all circuits, if any, affected by an alarm or condition.
Tools/Equipment	None
Prerequisite Procedures	NTP-A196 View Alarms, History, Events, and Conditions, page 9-5
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.

Step 2 In the network, node, or card view, click the **Alarms** tab or **Conditions** tab and then right-click anywhere in the row of an active alarm or condition.




Note The node view is the default, but you can also navigate to the Alarms tab in the network view or card view to perform Step 2.



Note The card view is not available for the TCC+/TCC2 or cross-connect cards.

The Select Affected Circuit option appears on the shortcut menu (Figure 9-6).


Figure 9-6 Select Affected Circuits Option

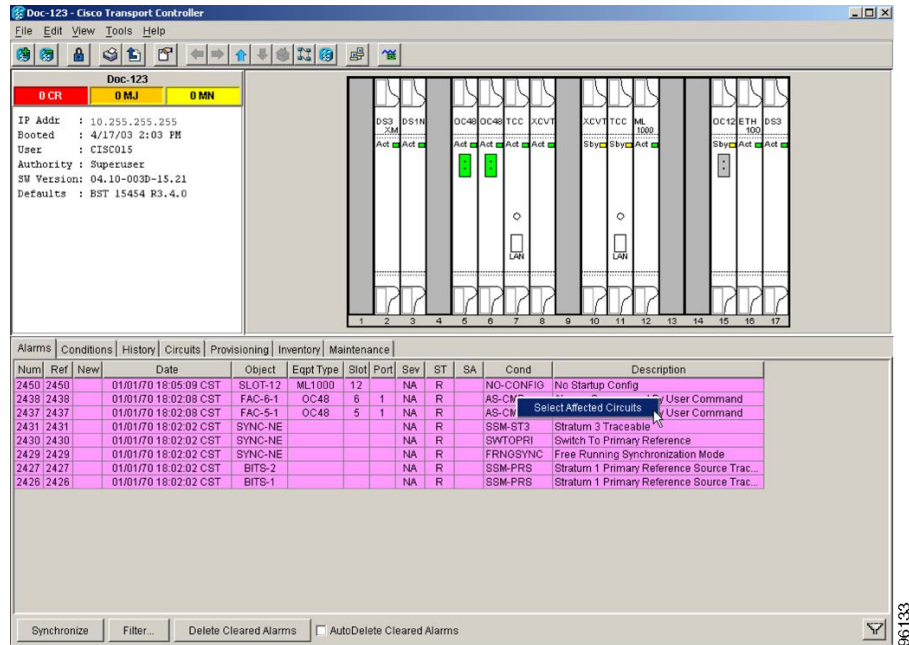

Step 3 Left-click or right-click **Select Affected Circuits**.

The Circuits window appears with the affected circuits highlighted (Figure 9-7).

Figure 9-7 Viewing Alarm-Affected Circuits

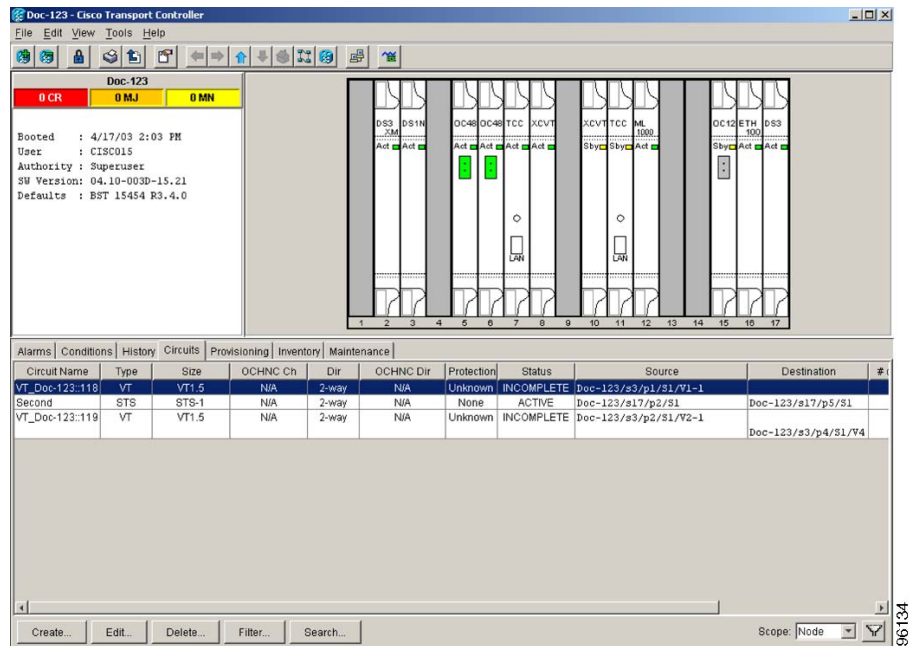

Step 4 If you want to search for particular circuits, see the “DLP-A131 Search for Circuits” task on page 11-7.

Stop. You have completed this procedure.


NTP-A70 View Alarm Counts on the LCD for a Node, Slot, or Port

Purpose	Use this procedure to find out how many alarms have occurred on a node, slot, or port without using CTC.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Retrieve

- Step 1** If you want to view the alarm count for the node, press the **Slot** button on the LCD panel until Node appears on the LCD.
- Step 2** To view the node alarm summary, press the **Status** button.
- Step 3** To view the node-level alarm summary:
- Press the **Port** button to toggle to Port 0.
 - Press the **Status** button.
- Step 4** To view the card-level alarm count, press the **Slot** button.
- Step 5** To view the slot alarm summary, wait 8 seconds after pressing Slot and the LCD is automatically updated with the summary of all alarms for the slot. To toggle to summaries for different slots, press the **Slot** button again.
- Step 6** To view port-level alarm counts:
- Press the **Port** button to toggle to Port 0.
 - Press **Status** to get slot card-level alarm counts.
 - To toggle to a the alarm count for a different port, press the **Port** button again.
 - Press **Slot** to toggle back to the node summary.

Figure 9-8 shows the LCD panel.

Figure 9-8 The LCD Panel

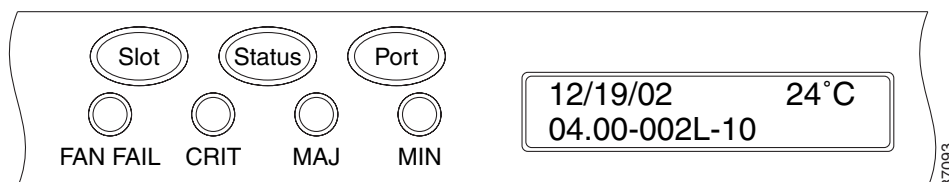



Note A blank LCD results when the fuse on the AIP board is blown. If this occurs, log into <http://www.cisco.com/tac> for more information or log into <http://www.cisco.com/warp/public/687/Directory/DirTAC.shtml> to obtain a directory of Cisco TAC toll-free numbers for your country.

Stop. You have completed this procedure.

NTP-A71 Create, Download, and Assign Alarm Severity Profiles

Purpose	Use this procedure to create a customized copy of the default alarm profile applied to a node, to download a saved custom profile from a network location to another node, to assign custom severities individually to a port, card, or node, and to delete alarm profiles.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to create an alarm profile. If you are already logged in, continue with Step 2 to clone or modify an alarm profile, or go to Step 3 to download an alarm profile.
- Step 2** Complete the “DLP-A115 Create Alarm Severity Profiles” task on page 9-18. This task clones a current alarm profile, renames the profile, and customizes the new profile. Go to Step 4.
- Step 3** Complete the “DLP-A223 Download an Alarm Severity Profile” task on page 9-20. This task downloads an alarm severity profile from a CD or a node.
- Step 4** As necessary, complete the “DLP-A429 Apply Alarm Profiles to Ports” task on page 9-21 or the “DLP-A117 Apply Alarm Profiles to Cards and Nodes” task on page 9-23.

Stop. You have completed this procedure.

DLP-A115 Create Alarm Severity Profiles

Purpose	Use this task to create a custom severity profile by modifying the default severity profile.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** From the View menu choose **Go to Network View**.
- Step 2** Click the **Provisioning > Alarm Profiles** tabs (Figure 9-3 on page 9-6).
- Step 3** Click **Load**.
- Step 4** In the Select Profile(s) from Node or Filename to Load dialog box, click the **From Node** radio button.
- Step 5** Click the node name you are logged into in the Node Names list.
- Step 6** Click **Default** in the Profile Names list.
- Step 7** Click **OK**.

The default alarm severity profile appears in the Alarm Profiles window (Figure 9-9).



Note The alarm profile list contains a master list of alarms that is used for a mixed node network. Some of these alarms may not be used in all ONS nodes.

Figure 9-9 Network View Alarm Profiles Window

AlarmType:Condition	Default
AICI-AEP:EQPT	CR
AICI-AEP:MFGMEM	CR
AICI-AIE:EQPT	CR
AICI-AIE:MFGMEM	CR
AIP:INVMACADR	MJ
AIP:MEA	CR
AIP:MFGMEM	CR
BITS:AIS	NR
BITS:LOF	MJ
BITS:LOS	MJ
BITS:SMM-DUS	NA
BITS:SMM-FAIL	MN
BITS:SMM-OFF	NA

96129

Step 8 Right-click anywhere in the Default profile column to display the profile editing shortcut menu.

Step 9 Click **Clone** in the shortcut menu.



Tip To find out which profiles are available for loading or cloning, click the Available button. You cannot clone Inherited profiles.

Step 10 In the Clone Profile dialog box, enter a name for the copied profile in the New Profile Name field.

Profile names must be unique. If you try to import or name a profile that has the same name as another profile, CTC adds a suffix to create a new name. Long file names are supported.

Step 11 Click **OK**.

A new alarm profile (named in Step 10) is created. This profile duplicates the default profile severities and appears to the right of the default profile in the Alarm Profiles window. You can highlight it and drag it to a different position.

Step 12 Modify (customize) the new alarm profile:


- a. In the new alarm profile column, double-click the alarm severity you want to change.
- b. Click the desired severity in the drop-down menu.
- c. Repeat Steps a and b for each severity you want to customize.

Step 13 After you have customized the new alarm profile, right-click the profile column to highlight it.

Step 14 Click **Store** in the profile editing shortcut menu.

Step 15 Click the **To Node(s)** radio button and go to Step a or click the **To File** radio button and go to Step b (Figure 9-10).

Figure 9-10 Store Profiles Dialog Box

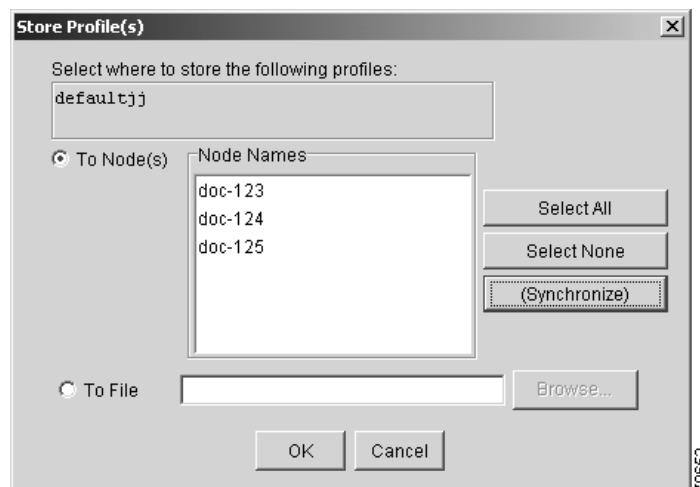

a. Choose the node(s) where you want to save the profile:

- If you want to save the profile to only one node, click the node in the Node Names list.
- If you want to save the profile to all nodes, click **Select All**.
- If you do not want to save the profile to any nodes, click **Select None**.
- If you want to update alarm profile information, click **(Synchronize)**.

b. Navigate to the profile save location by clicking **Browse**.

- Enter a name in the File name field.
- Click **Select** to choose this name and location.



Note Long file names are supported. CTC supplies a suffix of *.pfl to stored files.

c. Click the **OK** button to store the profile.



Note Click the Hide Identical Rows check box to configure the Alarm Profiles window to display rows with dissimilar severities.



Note Click the Hide Reference Values check box to configure the Alarm Profiles window to display severities that do not match the Default profile.

Step 16 Return to your originating procedure (NTP).

DLP-A223 Download an Alarm Severity Profile

Purpose	Use this task to download a custom alarm severity profile from a network-drive accessible CD-ROM, floppy disk, or hard disk location.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 From the View menu choose **Go to Network View**.

Step 2 Click the **Provisioning > Alarm Profiles** tabs.

Step 3 Click **Load**.

Step 4 If you want to download a file from the local PC hard drive, floppy disk, CD-ROM, or a network drive (if connected), click the **From File** radio button in the Select Profile(s) from Node or Filename to Load dialog box.

a. Click **Browse**.

The Open dialog box appears.

b. In the Look in pull-down menu, click to navigate to the folder where the profile file is located.

c. Click the name in the window to highlight it.



Note The file must have the *.pfl extension.

- d. Click **Open**.
- Go to Step 6.
- Step 5** If you want to download a file from the login node or another connected node, click the **From Node** radio button in the Select Profile(s) from Node or Filename to Load dialog box.
- Click the node where the profile is located under the Node Names list.
 - Click the profile under the Profile Names list.
- Step 6** Click **OK** in the Select Profile(s) from Node or Filename to Load dialog box.
- The downloaded profile appears at the right side of the Alarm Profiles window.
- Step 7** Right-click anywhere in the downloaded profile column to display the profile editing shortcut menu.
- Step 8** Click **Store** in the shortcut menu.
- Step 9** In the Store Profile(s) dialog box, click **To Node(s)**.
- Choose the node(s) where you want to save the profile:
 - If you want to save the profile to only one node, click the node in the Node Names list.
 - If you want to save the profile to all nodes, click **Select All**.
 - If you do not want to save the profile to any nodes, click **Select None**.
 - If you want to update alarm profile information, click **Synchronize**.
 - Click **OK**.
- Step 10** Return to your originating procedure (NTP).

DLP-A429 Apply Alarm Profiles to Ports

Purpose	Use this task to apply a custom or default alarm severity profile to a port or ports.
Tools/Equipment	None
Prerequisite Procedures	DLP-A115 Create Alarm Severity Profiles, page 9-18 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In the node view, double-click a card to display the card view.



Note You can also apply alarm profiles to cards using the “DLP-A117 Apply Alarm Profiles to Cards and Nodes” task on page 9-23.




Note The card view is not available for the TCC+/TCC2 or cross-connect cards.

- Step 2** Depending on which card you want to apply the profile to, click the following tabs:

- If the card is an E-Series Ethernet, G-Series Ethernet, MXP, TXP, OC-N, or electrical traffic (DS-1 or DS-3) card, click the **Provisioning > Alarm Behavior** tabs.
- If the card is an ML-Series Ethernet (traffic) card, click the **Provisioning > Ether Alarming** tabs or the **Provisioning > POS Alarming** tabs, depending on whether you want to apply the profile to the front physical ports (“Ether alarming”) or packet over SONET (“POS alarming”). For more information about ML-Series card ports and service, see the *Cisco ONS 15454 SONET/SDH ML-Series Multilayer Ethernet Card Software Feature and Configuration Guide*.
- If the card is an OSCM or OSC-CSM DWDM card, click the **Provisioning > OC3 Line** tab or **Provisioning > Optical Line** tab and the Alarm Behavior subtab.
- If the card is a 32MUX-O or 32DMX-O DWDM card, click the **Provisioning > Optical Chn** or **Provisioning > Line** tab and the Alarm Behavior subtab.
- If the card is an OPT-PRE or OPT-BST DWDM card, click the **Provisioning > Optical Line** or **Provisioning > Optical Ampli. Line** and the Alarm Behavior subtab.
- If the card is a channel add/drop DWDM card (AD-1C-xx.x, AD-2C-xx.x, AD-4C-xx.x) click the **Provisioning > Optical Line** or **Provisioning > Optical Chn** tab and the Alarm Behavior subtab.
- If the card is a band add/drop (AD-1B-xx.x, AD-2B-xx.x, AD-4B-xx.x) DWDM card, click the **Provisioning > Optical Line** or **Provisioning > Optical Band** tab and the Alarm Behavior subtab.

Figure 9-11 shows the alarm profile of Ethernet card ports. CTC shows Parent Card Profile: Inherited.

Figure 9-11 Card View Port Alarm Profile

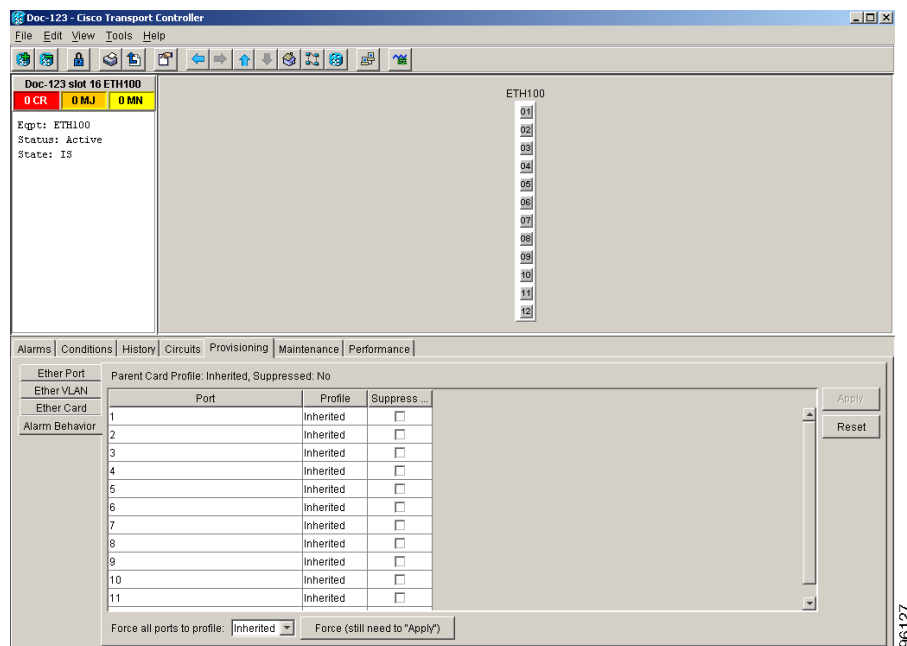

Go to Step 3 to apply profiles to a port. Go to Step 4 to apply profiles to all ports on a card.

Step 3 To apply profiles on a port basis:

- Click the port row under the Profile column.
- Choose the new profile from the drop-down menu.
- Click **Apply**.

- Step 4** To apply profiles to all ports on a card:
- Click the **Force all ports to profile** menu arrow at the bottom of the window.
 - Choose the new profile from the drop-down menu.
 - Click **Force (still need to “Apply”)**.
 - Click **Apply**.



Tip Click Reset to return to the previous profile setting unless you have already clicked Apply. To return to the previous profile if you have already applied it, select the previous profile and click Apply again.


- Step 5** Return to your originating procedure (NTP).

DLP-A117 Apply Alarm Profiles to Cards and Nodes

Purpose	This task applies a custom or default alarm profile to cards or nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A115 Create Alarm Severity Profiles, page 9-18 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provision

- Step 1** In node view, click the **Provisioning > Alarm Behavior** tabs (Figure 9-12).

Figure 9-12 Node View Alarm Profile

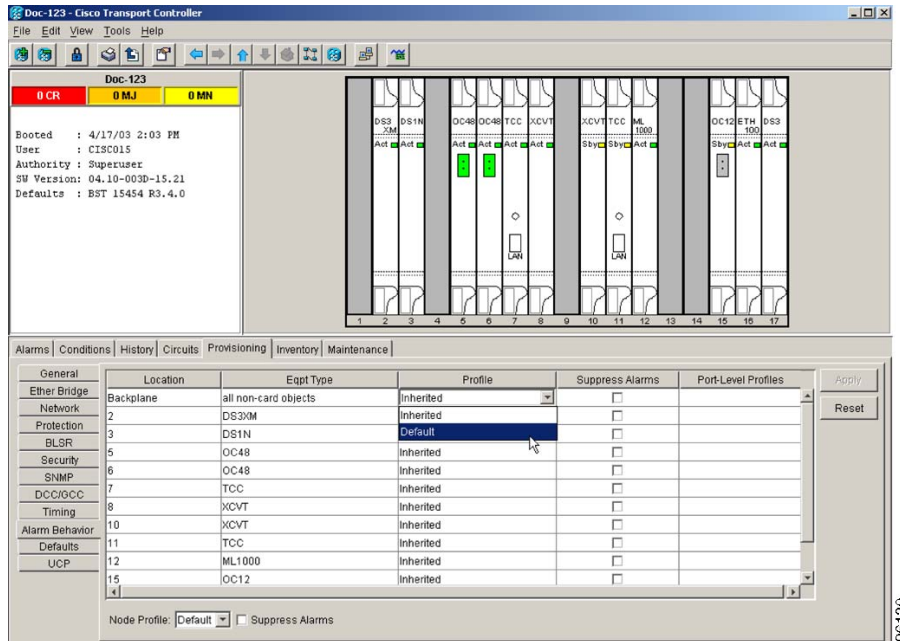

- Step 2** To apply profiles to a card:
- Click the Profile row for the card.
 - Choose the new profile from the drop-down menu.
 - Click **Apply**.
- Step 3** To apply the profile to an entire node:
- Click the **Node Profile** menu arrow at the bottom of the window (Figure 9-12).
 - Click the new alarm profile in the drop-down menu.
 - Click **Apply**.



Tip Click Reset to return to the previous profile setting unless you have already clicked Apply. To return to the previous profile if you have already applied it, select the previous profile and click Apply again.

- Step 4** Return to your originating procedure (NTP).


96130

DLP-A118 Delete Alarm Severity Profiles

Purpose	This task deletes a custom or default alarm severity profile.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provision

- Step 1** From the View menu choose **Go to Network View**.
- Step 2** Click the **Provisioning > Alarm Profiles** tabs.
- Step 3** Click the column heading for the profile column you want to delete.
The selected alarm profile name is displayed in the Description field.
- Step 4** Click **Delete**.
The Select Node/Profile Combination for Delete dialog box appears (Figure 9-13).

Figure 9-13 Select Node/Profile Combination For Delete Dialog Box

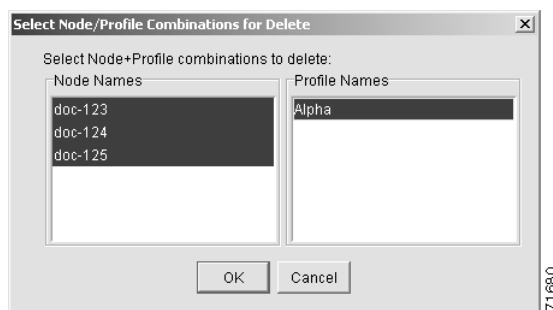

- Step 5** Click the node name(s) in the Node Names list to highlight the profile location.



Tip If you hold the Shift key down, you can select consecutive node names. If you hold the Ctrl key down, you can select any combination of nodes.

- Step 6** Click the profile name(s) you want to delete in the Profile Names list.

- Step 7** Click **OK**.

The Delete Alarm Profile confirmation dialog box appears.

- Step 8** Click **Yes** for each Delete Alarm Profile confirmation dialog box.



Note If you delete a profile from a node, it is still displayed in the network view Provisioning > Alarm Profiles window unless you remove it by choosing Remove.

- Step 9** To remove the alarm profile from the Provisioning > Alarm Profiles window, right-click the column of the profile you deleted and choose **Remove** from the shortcut menu.



Note If a node and profile combination is selected but does not exist, a warning appears: “One or more of the profile(s) selected do not exist on one or more of the node(s) selected.” For example, if node A has only profile 1 and the user tries to delete both profile 1 and profile 2 from node A, this warning appears. However, the operation still removes profile 1 from node A.



Note The Default and Inherited special profiles cannot be deleted and do not appear in the Select Node/Profile Combination for Delete Window.

Return to your originating procedure (NTP).

NTP-A168 Enable, Modify, or Disable Alarm Severity Filtering

Purpose	Use this procedure to start, change, or stop alarm filtering for one or more severities in the Alarms, Conditions, and History windows in all network nodes.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to enable alarm severity filtering. If you are already logged in, continue with Step 2.
- Step 2** As necessary, complete the “DLP-A225 Enable Alarm Filtering” task on page 9-27. This task enables alarm filtering at the card, node, and network views for all nodes in the network. Alarm filtering can be enabled for alarms, conditions, or events.
- Step 3** As necessary, complete the “DLP-A226 Modify Alarm and Condition Filtering Parameters” task on page 9-27 to modify the alarm filtering for network nodes to show or hide particular alarms or conditions.
- Step 4** As necessary, complete the “DLP-A227 Disable Alarm Filtering” task on page 9-30 to disable alarm profile filtering for all network nodes.

Stop. You have completed this procedure.

DLP-A225 Enable Alarm Filtering

Purpose	Use this task to enable alarm filtering for alarms, conditions, or event history in all network nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve


-
- Step 1** At the node, network, or card view, click the **Alarms** tab.
- Step 2** Click the **Filter** tool at the lower-right side of the bottom toolbar.
- Alarm filtering is enabled if the tool is selected and disabled if the tool is raised (not selected).
- Alarm filtering will be enabled in the card, node, and network views of the Alarms tab at the node and for all other nodes in the network. If, for example, the Alarm Filter tool is enabled in the Alarms tab of the node view at one node, the Alarms tab in the network view and card view of that node will also show the tool enabled. All other nodes in the network will also have the tool enabled.
- If you filter an alarm in card view, the alarm will still be displayed in node view. In this view, the card will display the color of the highest-level alarm. The alarm is also shown for the node in the network view.
- Step 3** If you want alarm filtering enabled when you view conditions, repeat Steps 1 and 2 using the Conditions window.
- Step 4** If you want alarm filtering enabled when you view alarm history, repeat Steps 1 and 2 using the History window.
- Step 5** Return to your originating procedure (NTP).
-

DLP-A226 Modify Alarm and Condition Filtering Parameters

Purpose	Use this task to change alarm and condition reporting in all network nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A225 Enable Alarm Filtering, page 9-27 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

-
- Step 1** At the node, network, or card view, click the **Alarms** tab.
- Step 2** Click the **Filter** button at the lower-left of the bottom toolbar.
- The Alarm Filter Dialog box appears, showing the General tab (Figure 9-14).

Figure 9-14 Alarm Filter Dialog Box General Tab

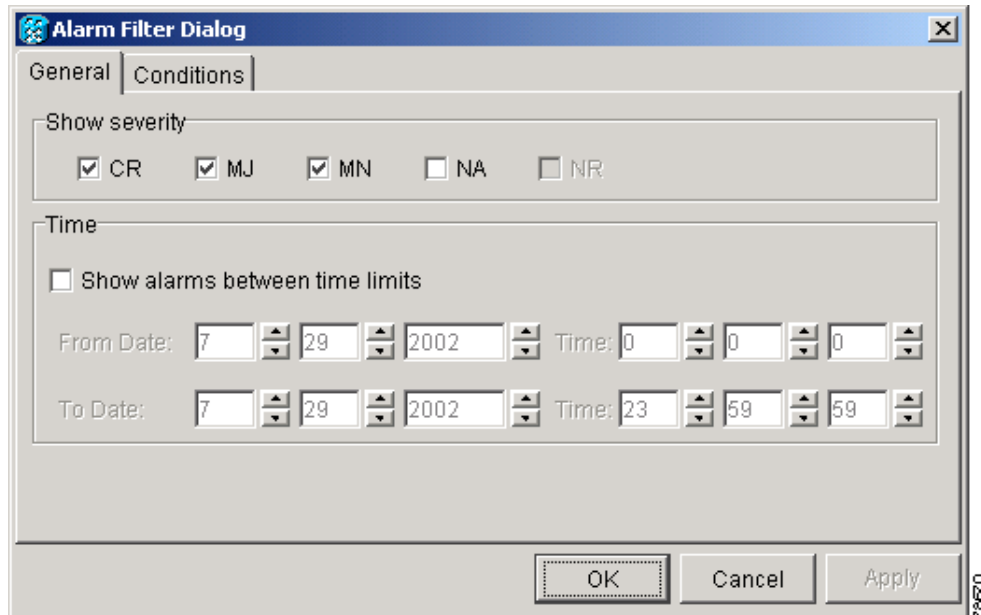

In the General tab Show Severity box, you can choose which alarm severities will show through the alarm filter and provision a time period during which filtered alarms show through the filter. To change the alarm severities shown in the filter, go to Step 3 To change the time period filter for the alarms go to Step 4


- Step 3** In the Show Severity area, click the check boxes for the severities [Critical (CR), Major (MJ), Minor (MN), or Not-Alerted (NA)] you want to be reported at the network level. Leave severity check boxes deselected (unchecked) to keep them from appearing.

When alarm filtering is disabled, all alarms show.

- Step 4** In the Time area, click the **Show alarms between time limits** check box to enable it. Then click the up and down arrows in the From Date, To Date, and Time fields to modify what period of alarms are shown. To modify filter parameters for conditions, continue with Step 5. If you do not need to modify them, continue with Step 6.

- Step 5** Click the **Conditions** tab (Figure 9-15).

Figure 9-15 Alarm Filter Dialog Box Conditions Tab

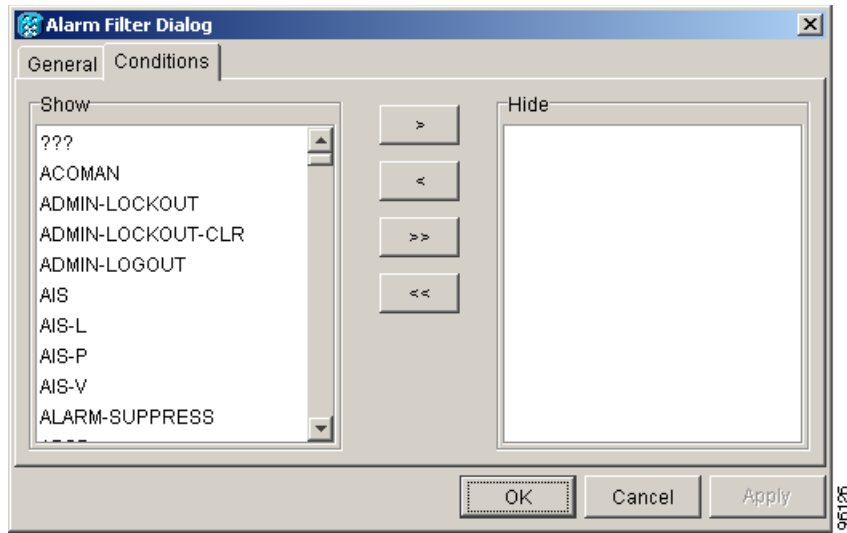

When alarm filtering is enabled, conditions in the Show list are visible and conditions in the Hide list are invisible.

- To move conditions individually from the Show list to the Hide list, click the > button.
- To move conditions individually from the Hide list to the Show list, click the < button.
- To move conditions collectively from the Show list to the Hide list, click the >> button.
- To move conditions collectively from the Hide list to the Show list, click the << button.



Note Conditions include alarms.

Step 6 Click **Apply** and **OK**.

Alarm and condition filtering parameters are enforced when alarm filtering is enabled (see the “DLP-A225 Enable Alarm Filtering” task on page 9-27), and are not enforced when alarm filtering is disabled (see the “DLP-A227 Disable Alarm Filtering” task on page 9-30).

Step 7 Return to your originating procedure (NTP).

DLP-A227 Disable Alarm Filtering

Purpose	Use this task to turn off specialized alarm filtering in all network nodes so that all severities are reported in CTC.
Tools/Equipment	None
Prerequisite Procedures	DLP-A225 Enable Alarm Filtering, page 9-27 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve

-
- Step 1** At the node, network, or card view, click the **Alarms** tab.
- Step 2** Click the **Filter** tool at the lower-right side of the bottom toolbar.
Alarm filtering is enabled if the tool is indented and disabled if the tool is raised (not selected).
- Step 3** If you want alarm filtering disabled when you view conditions, click the **Conditions** tab and repeat Step 2.
- Step 4** If you want alarm filtering disabled when you view alarm history, click the **History** tab and repeat Step 2.
- Step 5** Return to your originating procedure (NTP).
-

NTP-A72 Suppress Alarms and Discontinue Alarm Suppression

Purpose	Use this procedure to prevent alarms from being reported for a port, card, or node in circumstances when an alarm or condition is known to exist but you do not want to include it in the display. Also use this procedure to resume normal alarm reporting by discontinuing the suppression.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A119 Suppress Alarm Reporting” task on page 9-31 to make the node send out autonomous messages that clear particular raised alarms and cause the suppressed alarms to appear in the Conditions window.



Note Suppressing one or more alarms prevents them from appearing in Alarm or History windows or in any other clients. The suppress command causes CTC to display them in the Conditions window, where Not-Reported (NR) events are shown. The suppressed alarms appear there with their severity, their severity color code, and service-affecting status.

Step 3 Complete the “DLP-A120 Discontinue Alarm Suppression” task on page 9-32 to remove the suppress command and resume normal alarm reporting.

Stop. You have completed this procedure.

DLP-A119 Suppress Alarm Reporting

Purpose	This task suppresses the reporting of ONS 15454 alarms at the port, card, or node level.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning



Caution If multiple CTC/TL1 sessions are open, suppressing alarms in one session suppresses the alarms in all other open sessions.

Step 1 At either the node or card view, click the **Provisioning > Alarm Behavior** tabs.

Step 2 At the node level, you can suppress alarms on a card basis or for the entire node. At the card level, you can suppress alarms on a port basis.

- a. To suppress alarms at the node level for the entire node, check the **Suppress Alarms** column check box located at the bottom-left of the window.
- b. To suppress alarms at the node level for individual cards, check the **Suppress Alarms** column check box for the slot row where you want to suppress alarms (Figure 9-12 on page 9-24).



Note In node view, row numbers correspond to slot numbers.

- c. Click **Apply** (whether or not you complete the next step).
The node sends out autonomous messages to clear any raised alarms.

Step 3 To suppress alarms at the card level for ports:

- a. Double-click the card.
- b. Click the **Provisioning > Alarm Behavior** tabs.
- c. Check the **Suppress Alarms** column check box for the port row where you want to suppress alarms (Figure 9-11 on page 9-22).
- d. Click **Apply**.

**Caution**

If multiple CTC sessions are open, suppressing alarms in one session suppresses the alarms in all other open sessions.

Step 4 Return to your originating procedure (NTP).

DLP-A120 Discontinue Alarm Suppression

Purpose	This task discontinues alarm suppression and reenables alarm reporting on a port, card, or node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A119 Suppress Alarm Reporting, page 9-31 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning

- Step 1** To discontinue alarm suppression for the entire node, uncheck the **Suppress Alarms** check box at the lower-left of the Alarm Behavior window.
- Step 2** To discontinue alarm suppression for individual cards that you suppressed at the node level:
- Uncheck the check box in the Suppress Alarms column for that card.
 - Click **Apply**.
- Step 3** To discontinue alarm suppression for ports that you suppressed at the card level:
- Double-click the card to display the card view.
 - Uncheck the **Suppress Alarms** check box for the port(s) you no longer want to suppress.
 - Click **Apply**.
- Step 4** Return to your originating procedure (NTP).
-

NTP-A32 Provision External Alarms and Controls on the Alarm Interface Controller


Purpose	Use this procedure to create external (environmental) alarms and external controls for the Alarm Interface Controller (AIC) card.
Tools/Equipment	An AIC card must be installed in Slot 9.
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher


Note

For information about the AIC-I external alarms and controls, virtual wire, and orderwire, refer to the *Cisco ONS 15454 Reference Manual*.

-
- Step 1** Verify the backplane wiring. See the “NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections” procedure on page 1-36 for information about the ONS 15454 backplane pins.
- a. For external alarms, verify that the external-device relays are wired to the ENVIR ALARMS IN backplane pins.
 - b. For external controls, verify the external relays are wired to the ENVIR ALARMS OUT backplane pins.
- Step 2** In the node view, double-click the AIC card on the shelf graphic. The card view appears.
- Step 3** If you are provisioning external alarms, click the **Provisioning > External Alarms** tabs (Figure 9-16). If you are not provisioning external alarms, skip Steps 4 through 6 and go to Step 7.

Figure 9-16 AIC Card External Alarms

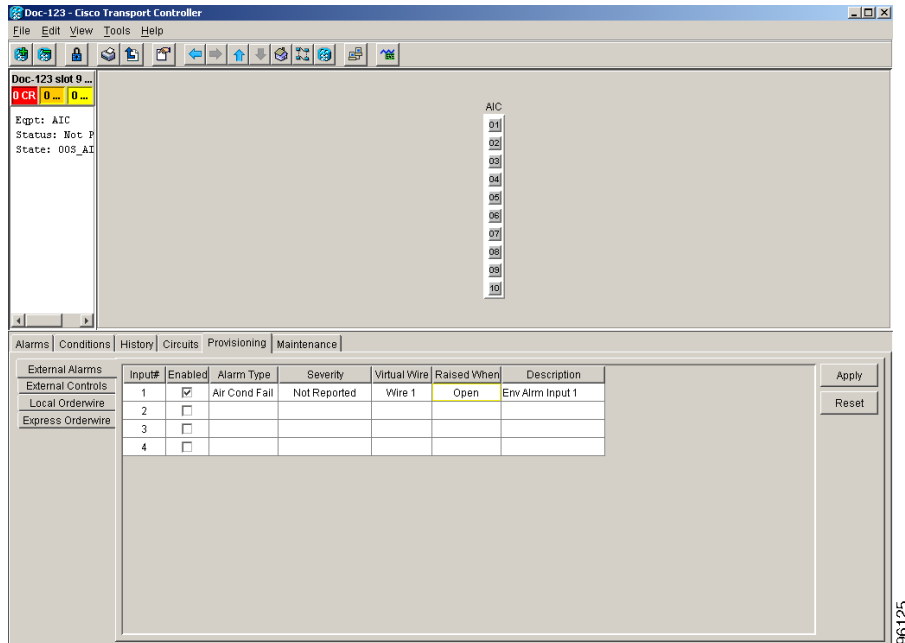

Step 4 Complete the following fields for each external device wired to the ONS 15454 backplane:

- Enabled—Check the check box to activate the fields for the alarm input number.
- Alarm Type—Choose an alarm type from the drop-down menu.
- Severity—Click a severity in the drop-down menu.

The severity determines the severity the alarm has in the Alarms and History tabs and determines whether the LEDs are activated. Critical (CR), Major (MJ), and Minor (MN) alarms activate the LEDs. Not-Alarmmed (NA) and Not-Reported (NR) do not activate LEDs, but do report the information in CTC.

- Virtual Wire—Choose the virtual wire number in the drop-down menu to assign the external device to a virtual wire. Otherwise, do not change the None default. For information about the AIC virtual wire, see the *Cisco ONS 15454 Reference Manual*.
- Raised When—From the drop-down menu, choose the contact condition (open or closed) that triggers the alarm.
- Description—A default description is provided; enter a different description if needed.

Step 5 To provision up to four virtual wire inputs for external devices, complete Step 4 for each additional device.

Step 6 Click **Apply**.

Step 7 If you are provisioning external control outputs for external devices, click the **External Controls** subtab.

Step 8 Complete the following options for each external control wired to the ONS 15454 backplane:

- Enabled—Check this check box to activate the fields for the alarm input number.
- Control Type—Choose the control type from the drop-down menu: air conditioner, engine, fan, generator, heat, light, sprinkler, or miscellaneous.
- Trigger Type—Choose a trigger type: a local minor, major, or critical alarm; a remote minor, major, or critical alarm; or a virtual wire activation.

- Description—Enter a description.

Step 9 To provision additional external controls, complete Steps 7 and 8 for each additional device.

Step 10 Click **Apply**.



Note When you provision an external alarm, the alarm object is ENV-IN-nn. The variable nn refers to the external alarm's number, regardless of the name you assign.



Note Environmental alarms that you create (and name) should be recorded locally for the NE. Both the Alarm name and resolution are node-specific.

Stop. You have completed this procedure.

NTP-A248 Provision External Alarms and Controls on the Alarm Interface Controller-International

Purpose	Use this procedure to create external (environmental) alarms and external controls for the AIC-I card.
Tools/Equipment	An AIC-I card must be installed in Slot 9.
Prerequisite Procedures	NTP-A24 Verify Card Installation, page 4-2
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note AIC-I alarm provides direct alarm contacts (external alarm inputs and external control outputs) for ONS 15454 and ONS 15454 SDH systems. In the ONS-145454 ANSI shelf, these AIC-I alarm contacts are routed through the backplane to wire-wrap pins accessible from the back of the shelf. If you install an Alarm Expansion Panel (AEP), the AIC-I alarm contacts cannot be used. Only the alarm expansion panel (AEP) alarm contacts can be used. For further information about the AEP, see “NTP-A119 Install the Alarm Expansion Panel” procedure on page 1-32 and the “NTP-A120 Install an External Wire-Wrap Panel to the AEP” procedure on page 1-43.



Note For information about the AIC-I alarms, controls, and virtual wire, refer to the *Cisco ONS 15454 Reference Manual*.

Step 1 Verify the backplane wiring. If you are using the AEP, see the “NTP-A119 Install the Alarm Expansion Panel” procedure on page 1-32. Otherwise, see the “NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections” procedure on page 1-36 for information about the ONS 15454 backplane pins.

- For external alarms, verify that the external device relays are wired to the ENVIR ALARMS IN backplane pins.

- b. For external controls, verify that the external device relays are wired to the ENVIR ALARMS OUT backplane pins.

Step 2 In the node view, double-click the AIC-I card on the shelf graphic. The card view appears.

Step 3 Click the **Provisioning > Card** tabs.


Step 4 In the Input/Output area, click one of the following options:

- Add Extension—Check this check box if you are using the AEP.
- Extension Type—The AEP radio button is automatically selected if you checked the Add Extension check box.
- Input/Output—Select **External Alarm** if you use external alarms only; select **External Control** if you use both external alarms and external controls. Selecting only External Alarm gives you 16 external alarm ports and no external control ports. If you select External control, four of the ports are converted to external control ports, leaving you with 12 external alarm ports.

Step 5 Click **Apply**.

Step 6 If you are provisioning external alarms, click the **External Alarms** tab. If you are not provisioning external alarms, skip Steps 7 through 9 and go to Step 10.

Figure 9-17 Provisioning External Alarms On The AIC-I Card

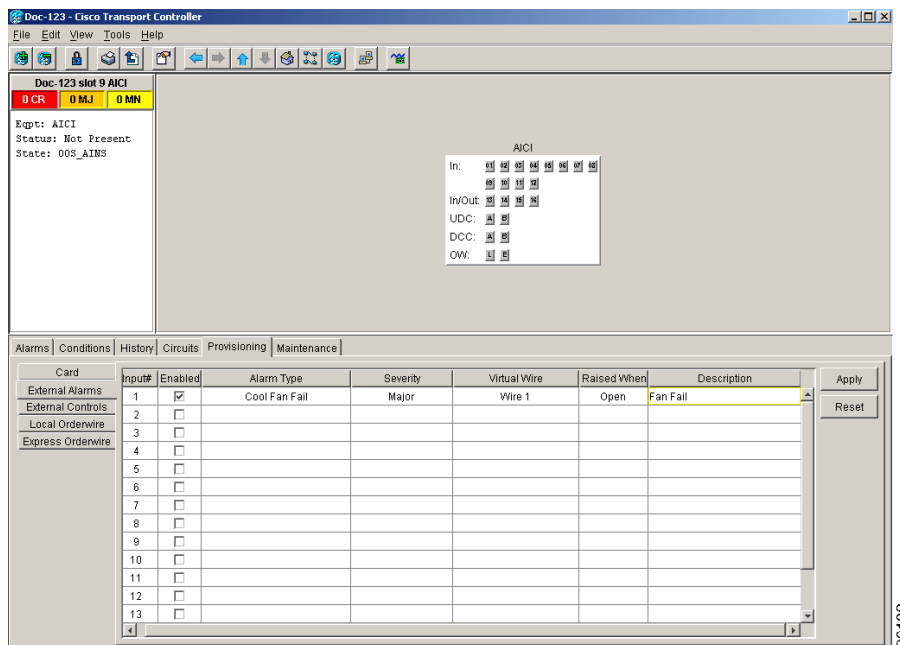

Step 7 Complete the following fields for each external device wired to the ONS 15454 backplane:

- Enabled—Check the check box to activate the fields for the alarm input number.
- Alarm Type—Choose an alarm type from the drop-down menu.
- Severity—Click a severity from the drop-down menu.

The severity determines the severity the alarm has in the Alarms and History tabs and determines whether the LEDs are activated. Critical (CR), Major (MJ), and Minor (MN) alarms activate the LEDs. Not-Alarmed (NA) and Not-Reported (NR) do not activate LEDs, but do report the information in CTC.

- **Virtual Wire**—Choose the virtual wire number from the drop-down menu to assign the external device to a virtual wire. Otherwise, do not change the None default. For information about the AIC virtual wire, see the *Cisco ONS 15454 Reference Manual*.
- **Raised When**—From the drop-down, choose the contact condition (open or closed) that triggers the alarm.
- **Description**—A default description is provided; enter a different description if needed.

Step 8 To provision additional devices, complete Step 7 for each additional device.

Step 9 Click **Apply**.

Step 10 If you are provisioning external controls, click the **External Controls** tab and complete the following fields for each external control wired to the ONS 15454 backplane:

- **Enabled**—Check this check box to activate the fields for the alarm input number.
- **Control Type**—Choose the control type from the drop-down menu: air conditioner, engine, fan, generator, heat, light, sprinkler, or miscellaneous.
- **Trigger Type**—Choose a trigger type: a local minor, major, or critical alarm; a remote minor, major, or critical alarm; or a virtual wire activation.
- **Description**—Enter a description.

Step 11 To provision the other external controls, complete Step 10 for each additional device.

Step 12 Click **Apply**.



Note When you provision an external alarm, the alarm object is ENV-IN-nn. The variable nn refers to the external alarm's number, regardless of the name you assign.



Note Environmental alarms that you create (and name) should be recorded locally for the NE. Both the Alarm name and resolution are node-specific.

Stop. You have completed this procedure.



Monitor Performance

This chapter explains how to enable and view performance monitoring statistics for the Cisco ONS 15454. Performance monitoring (PM) parameters are used by service providers to gather, store, set thresholds, and report performance data for early detection of problems. For more PM information, details, and definitions refer to the *Cisco ONS 15454 Reference Manual*.

Before You Begin

Before performing any of the following procedures, investigate all alarms and clear any trouble conditions. Refer to the *Cisco ONS 15454 Troubleshooting Guide* as necessary.

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A253 Change the PM Display, page 10-2—Complete as needed to change the displayed PM counts.
2. NTP-A197 Monitor Electrical Performance, page 10-9—Complete as needed to monitor electrical performance.
3. NTP-A198 Monitor Ethernet Performance, page 10-11—Complete as needed to monitor Ethernet performance.
4. NTP-A250 Monitor OC-N Performance, page 10-18—Complete as needed to monitor optical (OC-N) performance.
5. NTP-A251 Monitor Multirate Transport Performance, page 10-24—Complete as needed to monitor multirate transport performance.
6. NTP-A252 Monitor DWDM Performance, page 10-31—Complete as needed to monitor DWDM performance.



Note

For additional information regarding PM parameters, refer to the Digital transmission surveillance section in Telcordia's GR-1230-CORE, GR-820-CORE, GR-499-CORE, and GR-253-CORE documents, and in the ANSI document entitled *Digital Hierarchy - Layer 1 In-Service Digital Transmission Performance Monitoring*.

NTP-A253 Change the PM Display


Purpose	This procedure enables you to change the display of PM counts by selecting drop-down menu or radio button options in the Performance window.
Tools/Equipment	None
Prerequisite Procedures	Before you monitor performance, be sure you have created the appropriate circuits and provisioned the card according to your specifications. For more information, see Chapter 8, “Create Circuits and VT Tunnels” and Chapter 13, “Change Card Settings.”
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Retrieve or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node that you want to monitor. If you are already logged in, continue with Step 2
- Step 2** In node view, double-click the electrical, Ethernet, optical (OC-N), multirate transport, or DWDM card where you want to view PM counts. The card view appears.
- Step 3** As needed, use the following tasks to change the display of PM counts:
- DLP-A124 Refresh PM Counts at 15-Minute Intervals, page 10-2
 - DLP-A125 Refresh PM Counts at One-Day Intervals, page 10-3
 - DLP-A126 View Near-End PM Counts, page 10-4
 - DLP-A127 View Far-End PM Counts, page 10-4
 - DLP-A128 Monitor PM Counts for a Selected Signal, page 10-5
 - DLP-A129 Reset Current PM Counts, page 10-6
 - DLP-A130 Clear Selected PM Counts, page 10-7
 - DLP-A260 Set Auto-Refresh Interval for Displayed PM Counts, page 10-8
 - DLP-A261 Refresh PM Counts for a Different Port, page 10-8

Stop. You have completed this procedure.

DLP-A124 Refresh PM Counts at 15-Minute Intervals

Purpose	This task changes the window view to display PM counts in 15-minute intervals.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

-
- Step 1** In node view, double-click the card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance** tab.
- Step 3** Click the **15 min** radio button.
- Step 4** Click **Refresh**. Performance monitoring parameters appear in 15-minute intervals synchronized with the time of day.
- Step 5** View the Curr column to find PM counts for the current 15-minute interval.
- Each monitored performance parameter has corresponding threshold values for the current time period. If the value of the counter exceeds the threshold value for a particular 15-minute interval, a threshold crossing alert (TCA) is raised. The number represents the counter value for each specific performance monitoring parameter.
- Step 6** View the Prev-*n* columns to find PM counts for the previous 15-minute intervals.
-  **Note** If a complete 15-minute interval count is not possible, the value appears with a yellow background. An incomplete or incorrect count can be caused by monitoring for less than 15 minutes after the counter started, changing node timing settings, changing the time zone settings, replacing a card, resetting a card, or by changing port states. When the problem is corrected, the subsequent 15-minute interval appears with a white background.
-
- Step 7** Return to your originating procedure (NTP).
-

DLP-A125 Refresh PM Counts at One-Day Intervals

Purpose	This task changes the window view to display PM parameters in 1-day intervals.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

-
- Step 1** In node view, double-click the card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance** tab.
- Step 3** Click the **1 day** radio button.
- Step 4** Click **Refresh**. Performance monitoring appears in 1-day intervals synchronized with the time of day.
- Step 5** View the Curr column to find PM counts for the current 1-day interval.
- Each monitored performance parameter has corresponding threshold values for the current time period. If the value of the counter exceeds the threshold value for a particular 1-day interval, a threshold crossing alert (TCA) is raised. The number represents the counter value for each specific performance monitoring parameter.
- Step 6** View the Prev-*n* columns to find PM counts for the previous 1-day intervals.



Note If a complete count over a 1-day interval is not possible, the value appears with a yellow background. An incomplete or incorrect count can be caused by monitoring for less than 24 hours after the counter started, changing node timing settings, changing the time zone settings, replacing a card, resetting a card, or by changing port states. When the problem is corrected, the subsequent 1-day interval appears with a white background.

Step 7 Return to your originating procedure (NTP).

DLP-A126 View Near-End PM Counts

Purpose	Use this task to view near-end PM counts for the selected card and port.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

Step 1 In node view, double-click the card where you want to view PM counts. The card view appears.

Step 2 Click the **Performance** tab.

Step 3 Click the **Near End** radio button.

Step 4 Click **Refresh**. All PM parameters occurring for the selected card on the incoming signal appear. For PM parameter definitions refer to the *Cisco ONS 15454 Reference Manual*.

Step 5 View the Curr column to find PM counts for the current time interval.

Step 6 View the Prev-*n* columns to find PM counts for the previous time intervals.

Step 7 Return to your originating procedure (NTP).

DLP-A127 View Far-End PM Counts

Purpose	Use this task to view far-end PM parameters for the selected card and port. Only cards that allow far-end monitoring have the Far End radio button as an option.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

Step 1 In node view, double-click the card where you want to view PM counts. The card view appears.

- Step 2** Click the **Performance** tab.
- Step 3** Click the **Far End** radio button.
- Step 4** Click **Refresh**. All PM parameters recorded by the far-end node for the selected card on the outgoing signal appear. For PM parameter definitions refer to the *Cisco ONS 15454 Reference Manual*.
- Step 5** View the Curr column to find PM counts for the current time interval.
- Step 6** View the Prev-*n* columns to find PM counts for the previous time intervals.
- Step 7** Return to your originating procedure (NTP).
-

DLP-A128 Monitor PM Counts for a Selected Signal

Purpose	This task enables you to view near-end or far-end PM counts for a specific signal (STS <i>n</i>), path (VT <i>n</i>) and port (DS <i>n</i>) on a selected card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Remote
Security Level	Retrieve or higher

- Step 1** In node view, double-click the card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance** tab.




Note Different port and signal-type menus appear depending on the card type and the circuit type. The appropriate types (DS1, DS3, VT path, STS path) appear based on the card. For example, the DS3XM card lists DS3, DS1, VT path, and STS path PM parameters as signal-types. This enables you to select both the DS-3 port and the DS-1 within the specified DS-3.

- Step 3** In the signal type drop-down menus, click the desired following options:
- DS: *n* or Port:*n* (card port number)
 - VT: *n* (VT path number)
 - STS: *n* (STS number within the VT path)

Figure 10-1 shows the Port and Signal-type menus on the Performance window for a DS3XM-6 card.

Figure 10-1 Signal-Type Menus for a DS3XM-6 Card

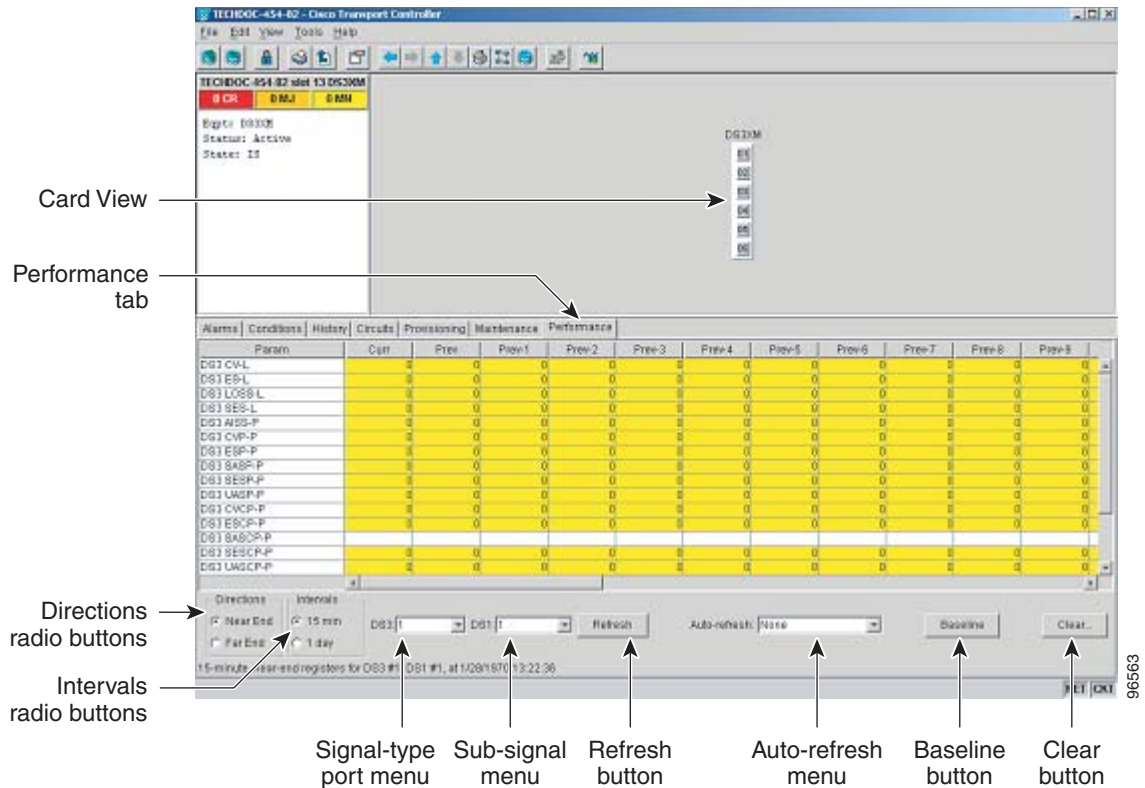

- Step 4** Click **Refresh**. All PM counts recorded by the near-end or far-end node for the specified outgoing signal type on the selected card and port appear. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.
- Step 5** View the PM parameter names that appear in the Param column. The PM parameter values appear in the Curr (current) and Prev-*n* (previous) columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.
- Step 6** Return to your originating procedure (NTP).

DLP-A129 Reset Current PM Counts

Purpose	This task clears the PM count, but it does not clear the cumulative PM count. This task allows you to see how quickly PM counts rise.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** In node view, double-click the card where you want to view PM counts. The card view appears.

Step 2 Click the **Performance** tab.

Step 3 Click **Baseline**.



Note The Baseline button clears the PM counts displayed in the current time interval but does not clear the PM counts on the card. When the current time interval expires or the window view changes, the total number of PM counts on the card and on the window appear in the appropriate column. The baseline values are discarded if you change views to a different window and then return to the Performance window.

Step 4 View the current statistics column(s) to observe changes to PM counts for the current time interval.

Step 5 Return to your originating procedure (NTP).

DLP-A130 Clear Selected PM Counts

Purpose	This task uses the Clear button to clear specified PM counts depending on the option selected.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher



Caution

Pressing the Clear button can mask problems if used incorrectly. This button is commonly used for testing purposes.

Step 1 In node view, double-click the card where you want to view PM counts. The card view appears.

Step 2 Click the **Performance** tab.

Step 3 Click **Clear**.

Step 4 From the Clear Statistics menu, choose one of three options:

- **Selected statistics:** Clearing selected statistics erases from the card and the window display all PM counts associated with the current combination of statistics on the selected port. This means the selected time interval, direction, and signal type counts are erased from the card and the window display.
- **All statistics on port x:** Clearing all statistics on port x erases from the card and the window display all PM counts associated with all combinations of the statistics on the selected port. This means all time intervals, directions, and signal type counts are erased from the card and the window display.
- **All statistics in current view:** Clearing all statistics in the current view erases from the card and the window display all PM counts for all ports.

Step 5 From the Clear Statistics menu, click **Yes** to clear the selected statistics.

Step 6 Verify that the selected PM counts have been cleared.

Step 7 Return to your originating procedure (NTP).

DLP-A260 Set Auto-Refresh Interval for Displayed PM Counts

Purpose	This task changes the window auto-refresh intervals for updating the displayed PM counts.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

Step 1 In node view, double-click the card where you want to view PM counts. The card view appears.

Step 2 Click the **Performance** tab.

Step 3 From the Auto-refresh drop-down menu, choose one of six options:

- None: This option disables the auto-refresh feature.
- 15 Seconds: This option sets the window auto-refresh to 15-second time intervals.
- 30 Seconds: This option sets the window auto-refresh to 30-second time intervals.
- 1 Minute: This option sets the window auto-refresh to 1-minute time intervals.
- 3 Minutes: This option sets the window auto-refresh to 3-minute time intervals.
- 5 Minutes: This option sets the window auto-refresh to 5-minute time intervals.

Step 4 Click **Refresh**. The PM counts for the newly-selected auto-refresh time interval appear.

Depending on the selected auto-refresh interval, the displayed PM counts automatically update when each refresh interval completes. If the auto-refresh interval is set to None, the PM counts that appear are not updated unless you click Refresh.

Step 5 Return to your originating procedure (NTP).

DLP-A261 Refresh PM Counts for a Different Port

Purpose	This task changes the window view to display PM counts for another port on a multi-port card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher


-
- Step 1** In node view, double-click the card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance** tab.
- Step 3** In the Port drop-down menu, click the desired port.
- Step 4** Click the **Refresh** button. The PM counts for the newly-selected port appear.
- Step 5** Return to your originating procedure (NTP).
-

NTP-A197 Monitor Electrical Performance

Purpose	This procedure enables you to view node near-end or far-end performance during selected time intervals on a selected electrical card and port to detect possible performance problems. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	Before you monitor performance, be sure you have created the appropriate circuits and provisioned the card according to your specifications. For more information, see Chapter 8, “Create Circuits and VT Tunnels” and Chapter 13, “Change Card Settings.”
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Retrieve or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node that you want to monitor. If you are already logged in, continue with Step 2.
- Step 2** In node view, double-click the electrical card where you want to view PM counts. The card view appears.
- Step 3** Click the **Performance** tab (Figure 10-2).

Figure 10-2 Viewing Electrical Card Performance Monitoring Information

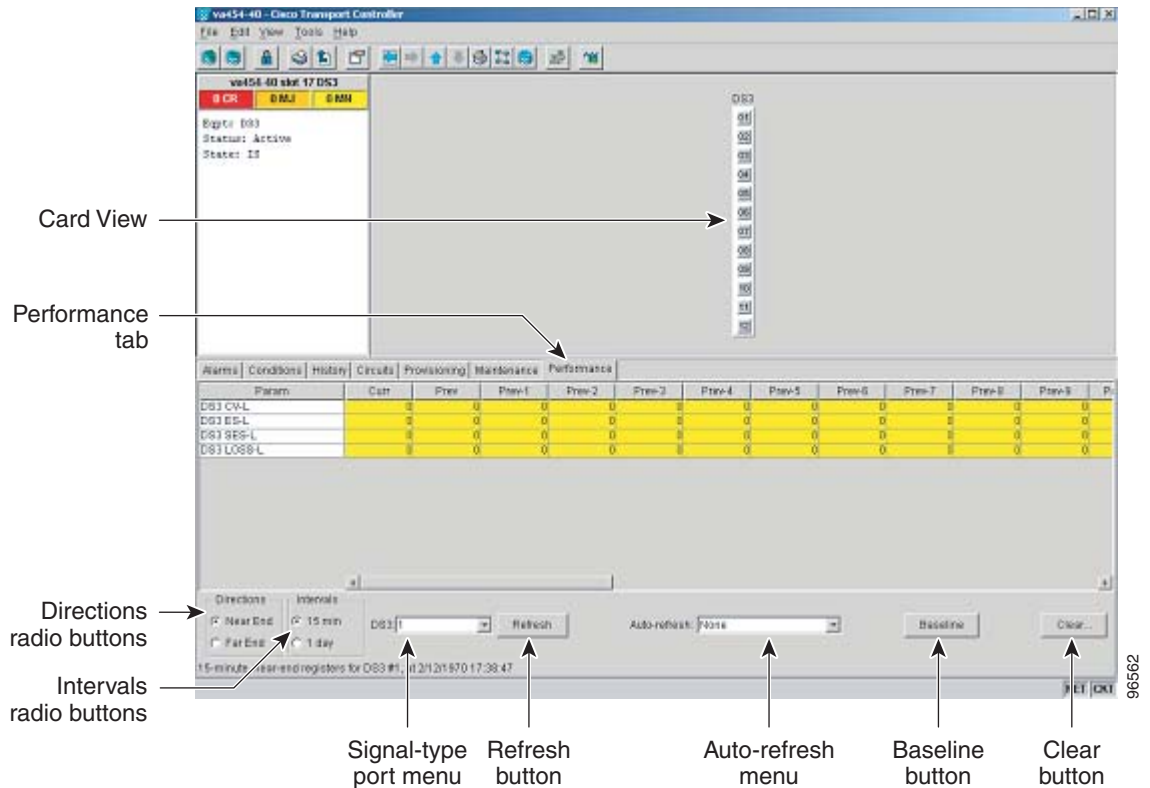

Step 4 In the signal type drop-down menus, click one of the following options:

- DS_n (card port)
- VT_n (VT path)
- STS_n (STS within the VT path)

Step 5 Click **Refresh**.

Step 6 View the PM parameter names that appear in the Param column. The PM parameter values appear in the Curr (current) and Prev- n (previous) columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.

To refresh, reset, or clear PM counts, see the “NTP-A253 Change the PM Display” procedure on page 10-2.

Stop. You have completed this procedure.

NTP-A198 Monitor Ethernet Performance

Purpose	This procedure enables you to view node transmit and receive performance during selected time intervals on a selected Ethernet card and port to detect possible performance problems. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	Before you monitor performance, be sure you have created the appropriate circuits and provisioned the card according to your specifications. For more information, see Chapter 8, “Create Circuits and VT Tunnels” and Chapter 13, “Change Card Settings.”
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Retrieve or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node that you want to monitor. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A256 View Ethernet Statistics PM Parameters” task on page 10-12.
To refresh, reset, or clear PM counts, see the “NTP-A253 Change the PM Display” procedure on page 10-2.
- Step 3** Complete the “DLP-A257 View Ethernet Utilization PM Parameters” task on page 10-13.
To refresh, reset, or clear PM counts, see the “NTP-A253 Change the PM Display” procedure on page 10-2.
- Step 4** Complete the “DLP-A258 View Ethernet History PM Parameters” task on page 10-14.
To refresh, reset, or clear PM counts, see the “NTP-A253 Change the PM Display” procedure on page 10-2.
- Step 5** Complete the “DLP-A320 View ML-Series Ether Ports PM Parameters” task on page 10-15.
To refresh, reset, or clear PM counts, see the “NTP-A253 Change the PM Display” procedure on page 10-2.
- Step 6** Complete the “DLP-A321 View ML-Series POS Ports PM Parameters” task on page 10-16.
To refresh, reset, or clear PM counts, see the “NTP-A253 Change the PM Display” procedure on page 10-2.

Stop. You have completed this procedure.

DLP-A256 View Ethernet Statistics PM Parameters

Purpose	This task enables you to view current statistical PM counts on an Ethernet card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** In node view, double-click the E-Series or G-Series Ethernet card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance > Statistics** tabs (Figure 10-3).

Figure 10-3 G-Series Statistics on the Card View Performance Window

The screenshot shows the Cisco Transport Controller (CTC) interface. The main window displays the G-Series Statistics on the Card View Performance Window. The interface includes a menu bar (File, Edit, View, Tools, Help) and a toolbar. Below the menu bar, there are tabs for Alarms, Conditions, History, Circuits, Provisioning, Maintenance, Performance, and Statistics. The Performance tab is selected, and the Statistics sub-tab is active. The Statistics window shows a table of performance monitoring (PM) parameters for four ports (Port 1, Port 2, Port 3, Port 4). The table has columns for 'Param' and 'Port #'. The 'Param' column lists various metrics such as 'Time Last Clear', 'Link Status', 'Rx Packets', 'Tx Packets', 'Rx Total Errors', 'Rx FCS', 'Rx Alignment', 'Rx Runts', 'Rx Shorts', 'Rx Jabbers', 'Rx Giants', 'Rx Pause Frames', 'Rx Pkts Dropped', 'Tx Pkts Dropped', and 'HELOC Errors'. The 'Port #' columns show the current values for these parameters for each port. The interface also includes a 'Refresh' button, an 'Auto-refresh' menu, a 'Baseline' button, and a 'Clear' button. Arrows point to these elements from labels: 'Card View', 'Performance tab', 'Statistics tab', 'Refresh button', 'Auto-refresh menu', 'Baseline button', and 'Clear button'.

- Step 3** Click **Refresh**. Performance monitoring statistics for each port on the card appear.
- Step 4** View the PM parameter names appear in the Param column. The current PM parameter values appear in the Port # columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.

**Note**

In R 4.1.x, G-Series Ethernet performance-monitoring statistics are added cumulatively during the test process and are not immediately adjusted to equal total received packets until testing ends. To see the final PM count totals, allow a few moments for the PM window statistics to finish testing and update fully. PM counts are also listed in the G-Series Ethernet card Performance > History window. To view counts there, complete the “DLP-A258 View Ethernet History PM Parameters” task on page 10-14.

Step 5 Return to your originating procedure (NTP).


DLP-A257 View Ethernet Utilization PM Parameters

Purpose	This task enables you to view line utilization PM counts on an Ethernet card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

Step 1 In node view, double-click the E-Series or G-Series Ethernet card where you want to view PM counts. The card view appears.

Step 2 Click the **Performance > Utilization** tabs (Figure 10-4).

Figure 10-4 G-Series Utilization on the Card View Performance Window

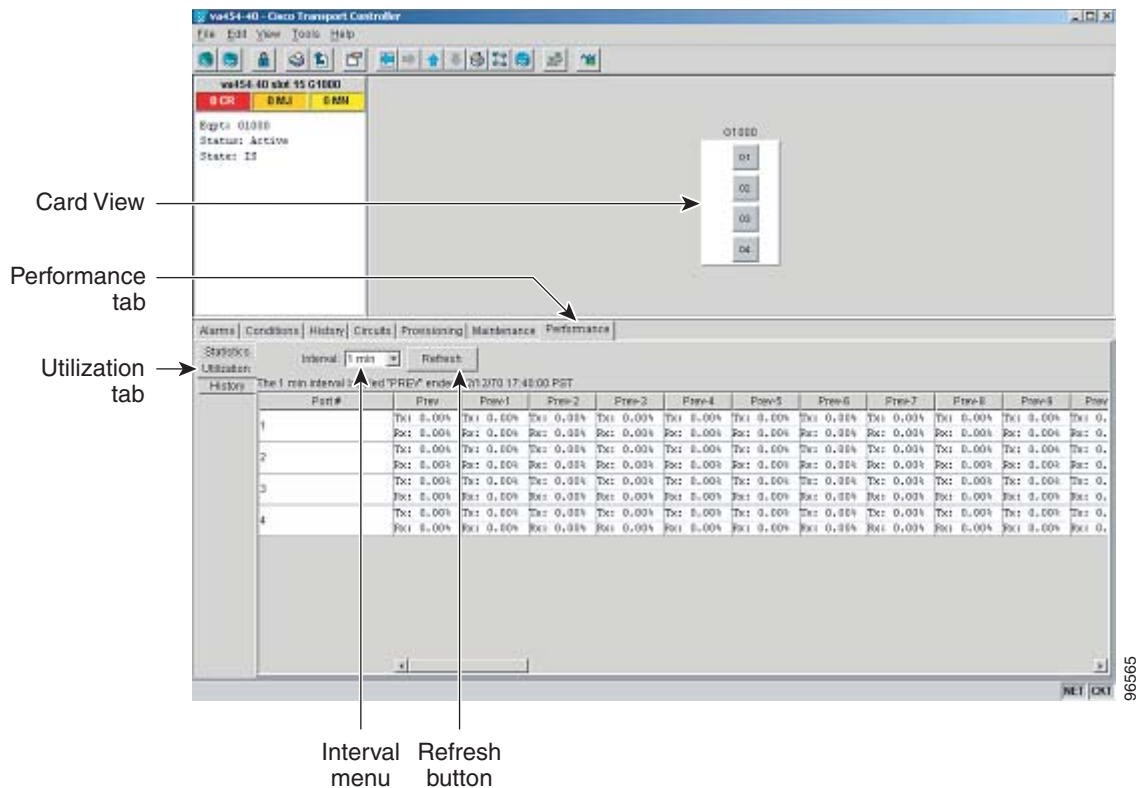

- Step 3** Click **Refresh**. Performance monitoring utilization values for each port on the card appear.
- Step 4** View the Port # column to find the port you want to monitor.
- Step 5** The transmit (Tx) and receive (Rx) bandwidth utilization values for the previous time intervals appear in the Prev-n columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.
- Step 6** Return to your originating procedure (NTP).


DLP-A258 View Ethernet History PM Parameters

Purpose	This task enables you to view historical PM counts at selected time intervals on an Ethernet card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** In node view, double-click the E-Series or G-Series Ethernet card where you want to view PM counts. The card view appears.

Step 2 Click the **Performance > History** tabs (Figure 10-5).

Figure 10-5 Ethernet History on the Card View Performance Window

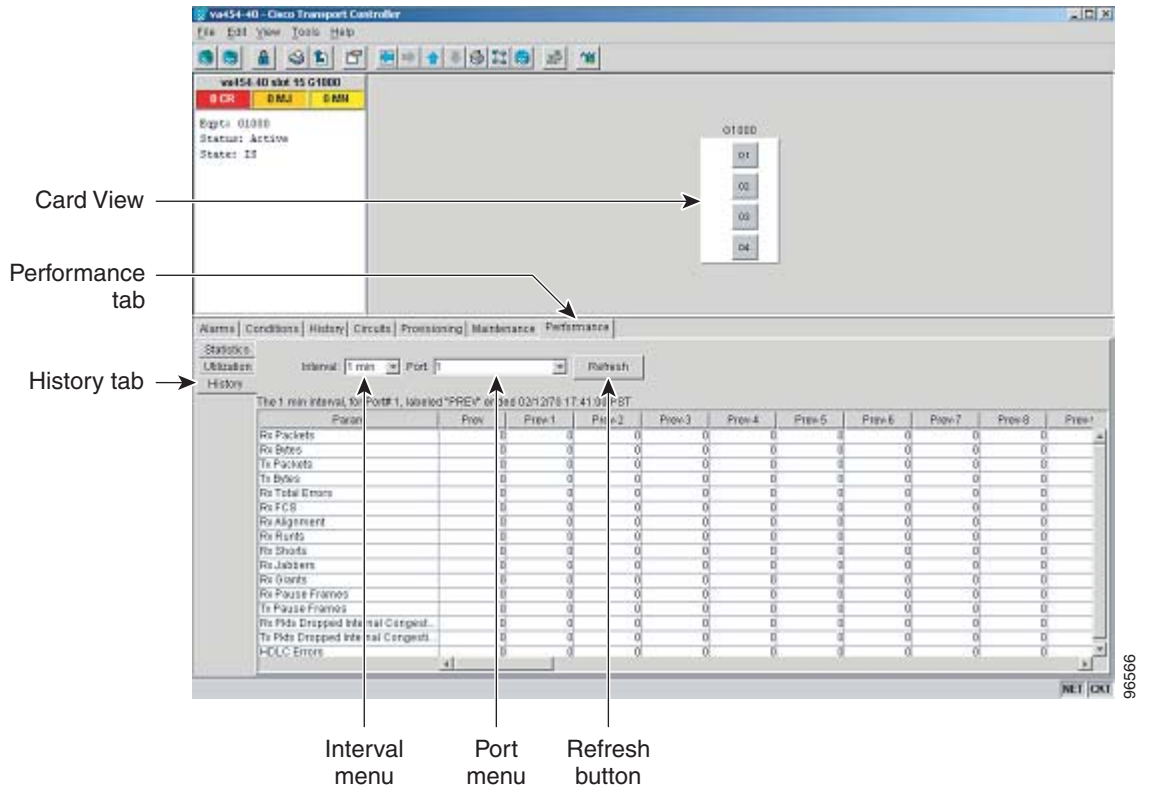

- Step 3** Click **Refresh**. Performance monitoring statistics for each port on the card appear.
- Step 4** View the PM parameter names that appear in the Param column. The PM parameter values appear in the Prev-n columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.
- Step 5** Return to your originating procedure (NTP).

DLP-A320 View ML-Series Ether Ports PM Parameters

Purpose	This task enables you to view ML-Series Ethernet port PM counts at selected time intervals to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

Step 1 In node view, double-click the ML-series Ethernet card where you want to view PM counts. The card view appears.

Step 2 Click the **Performance > Ether Ports** tabs (Figure 10-6).

Figure 10-6 Ether Ports on the Card View Performance Window

The screenshot shows the CTC interface for a Cisco Transport Controller. The main window is titled 'TECHDOC-454-82 - Cisco Transport Controller'. The 'Performance' tab is selected, and the 'Ether Ports' sub-tab is active. The window displays a table of performance statistics for 12 POS ports. The table has columns for 'Param' and 'Port 0' through 'Port 11'. The 'Param' column lists various metrics like RxBytes, RxPackets, RxUnicastPackets, RxMulticastPackets, RxBroadcastPackets, RxErrors, RxTotalErrors, RxFCSErrors, RxFrames, RxJabbers, RxAlignErrors, TxBytes, TxPackets, TxUnicastPackets, TxMulticastPackets, and TxBroadcastPackets. The 'Port #' columns show numerical values for each port. The interface includes a 'Refresh' button, an 'Auto-refresh' menu, and a 'Baseline' button. Arrows point to these elements with labels: 'Card View', 'Performance tab', 'Ether Ports tab', 'Refresh button', 'Auto-refresh menu', and 'Baseline button'.

Step 3 Click **Refresh**. Performance monitoring statistics for each port on the card appear.

Step 4 View the PM parameter names that appear in the Param column. The PM parameter values appear in the Port # columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.

Step 5 Return to your originating procedure (NTP).

DLP-A321 View ML-Series POS Ports PM Parameters

Purpose

This task enables you to view Packet Over SONET (POS) port PM counts at selected time intervals on an ML-Series Ethernet card and port to detect possible performance problems.

Tools/Equipment

None

Prerequisite Procedures

DLP-A60 Log into CTC, page 3-26

Required/As Needed

As needed

Onsite/Remote


Onsite or remote

Security Level

Retrieve or higher

- Step 1** In node view, double-click the ML-series Ethernet card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance > POS Ports** tabs (Figure 10-7).

Figure 10-7 POS Ports on the Card View Performance Window

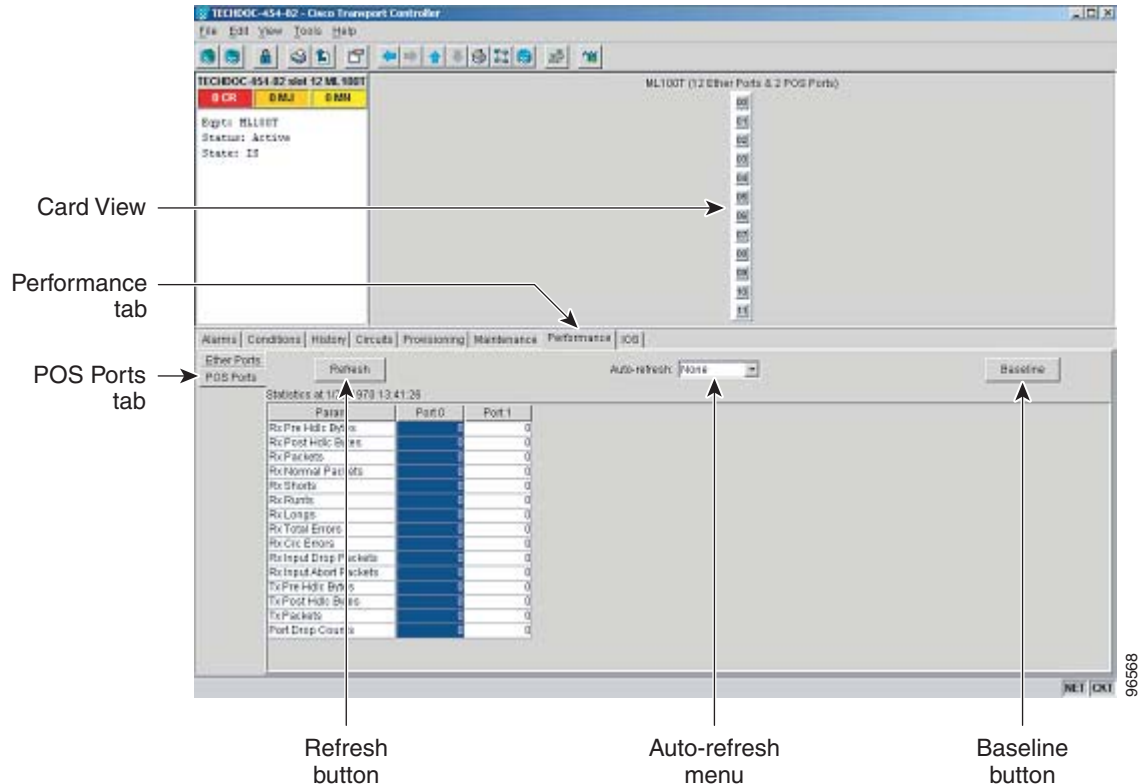

- Step 3** Click **Refresh**. Performance monitoring statistics for each port on the card appear.
- Step 4** View the PM parameter names that appear in the Param column. The PM parameter values appear in the Port # columns. For PM parameter definitions refer to the *Cisco ONS 15454 Reference Manual*.
- Step 5** Return to your originating procedure (NTP).

DLP-A259 Refresh Ethernet PM Counts at a Different Time Interval

Purpose	This task changes the window view to display specified PM counts in time intervals depending on the interval option selected.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

-
- Step 1** In node view, double-click the Ethernet card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance** tab.
- Step 3** Click the **Utilization** or the **History** tab.
- Step 4** From the Interval drop-down menu, choose one of four options:
- 1 min: This option appears the specified PM counts in one-minute time intervals.
 - 15 min: This option appears the specified PM counts in 15-minute time intervals.
 - 1 hour: This option appears the specified PM counts in one-hour time intervals.
 - 1 day: This option appears the specified PM counts in one-day (24 hours) time intervals.
- Step 5** Click **Refresh**. The PM counts refresh with values based on the selected time interval.
- Step 6** Return to your originating procedure (NTP).
-

NTP-A250 Monitor OC-N Performance

Purpose	This procedure enables you to view node near-end or far-end performance during selected time intervals on a selected OC-N card and port to detect possible performance problems. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	Before you monitor performance, be sure you have created the appropriate circuits and provisioned the card according to your specifications. For more information, see Chapter 8, “Create Circuits and VT Tunnels” and Chapter 13, “Change Card Settings.”
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Retrieve or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node that you want to monitor. If you are already logged in, continue with Step 2
- Step 2** Complete the “DLP-A121 Enable/Disable Pointer Justification Count Performance Monitoring” task on page 10-19 as needed to enable or disable clock synchronization monitoring.
- Step 3** Complete the “DLP-A122 Enable/Disable Intermediate Path Performance Monitoring” task on page 10-21 as needed to enable or disable monitoring of STS traffic through intermediate nodes.
- Step 4** Complete the “DLP-A507 View OC-N PM Parameters” task on page 10-23.
- To refresh, reset, or clear PM counts, see the “NTP-A253 Change the PM Display” procedure on page 10-2.
- Stop. You have completed this procedure.**
-

DLP-A121 Enable/Disable Pointer Justification Count Performance Monitoring

Purpose	This task enables or disables pointer justification counts, which provide a way to align the phase variations in STS and VT payloads and to monitor the clock synchronization between nodes. A consistent, large pointer justification count indicates clock synchronization problems between nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher


- Step 1** In node view, double-click the OC-N card you want to monitor. The card view appears. See Table 10-1 for a list of OC-N LTE cards.

Table 10-1 OC-N Cards that Terminate the Line, Called LTEs

Line Terminating Equipment
OC3 IR4 1310
OC12 LR 1310
OC12 IR 1310
OC12 IR/STM4 SH 1310-4
OC12 LR 1550
OC48 LR 1550
OC48 IR 1310
OC48 LR/STM16 LH AS 1550
OC48 IR/STM16 SH AS 1310
OC48 ELR 200 Ghz ITU
OC48 ELR 100 Ghz ITU
OC192 LR 1550

- Step 2** Click the **Provisioning > Line** tabs.
- Step 3** Click the PJStsMon# drop-down menu (Figure 10-8) and make a selection based on the following rules:
- Off means pointer justification monitoring is disabled (default).
 - 1 to *n* are the number of STSs on the port. One STS per port can be enabled from the PJStsMon# card menu.

Figure 10-8 Enabling or Disabling Pointer Justification Count Parameters

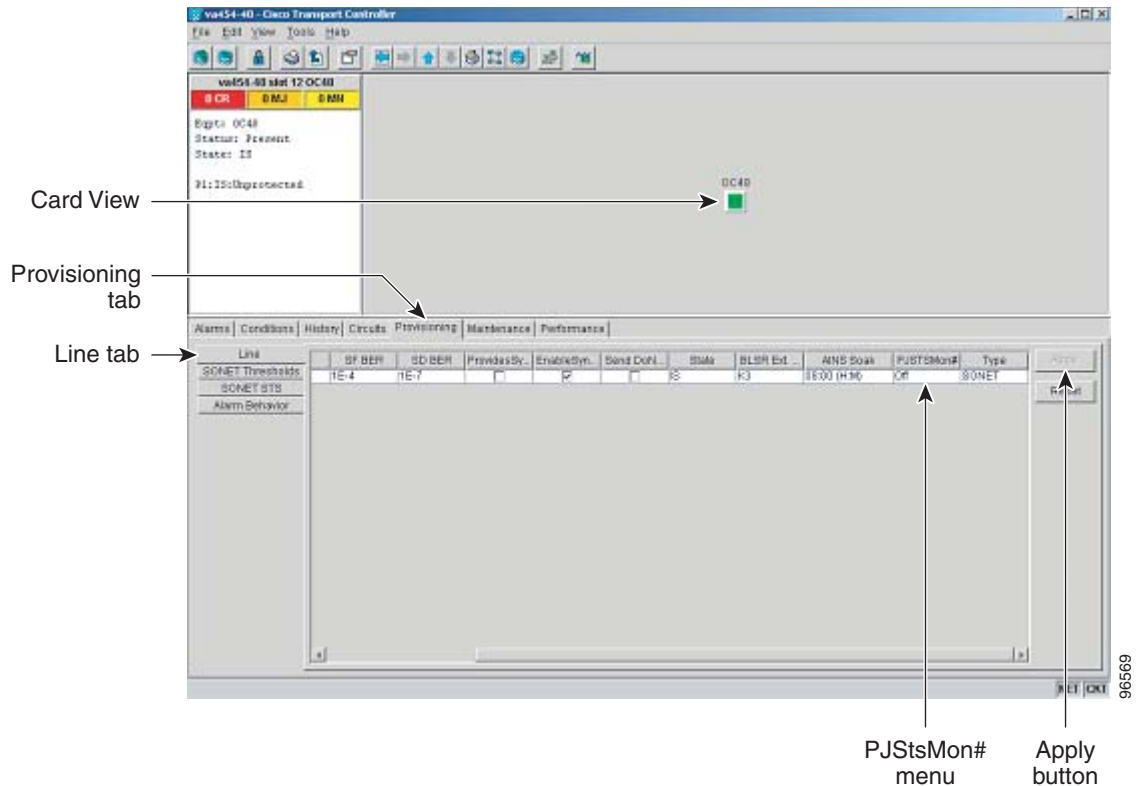


- Step 4** In the State field, confirm that the port is in service (IS).
- Step 5** If the port is IS, click **Apply**. If the port is out of service (OOS, OOS_MT, OOS_AINS), select **IS** in the State field and click **Apply**.
- Step 6** Click the **Performance** tab to view PM parameters. Figure 10-9 shows pointer justification counts. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.



Note The count fields for PPJC and NPJC PM parameters appear white and blank unless pointer justification count performance monitoring is enabled.

Figure 10-9 Pointer Justification Counts in the Performance Window

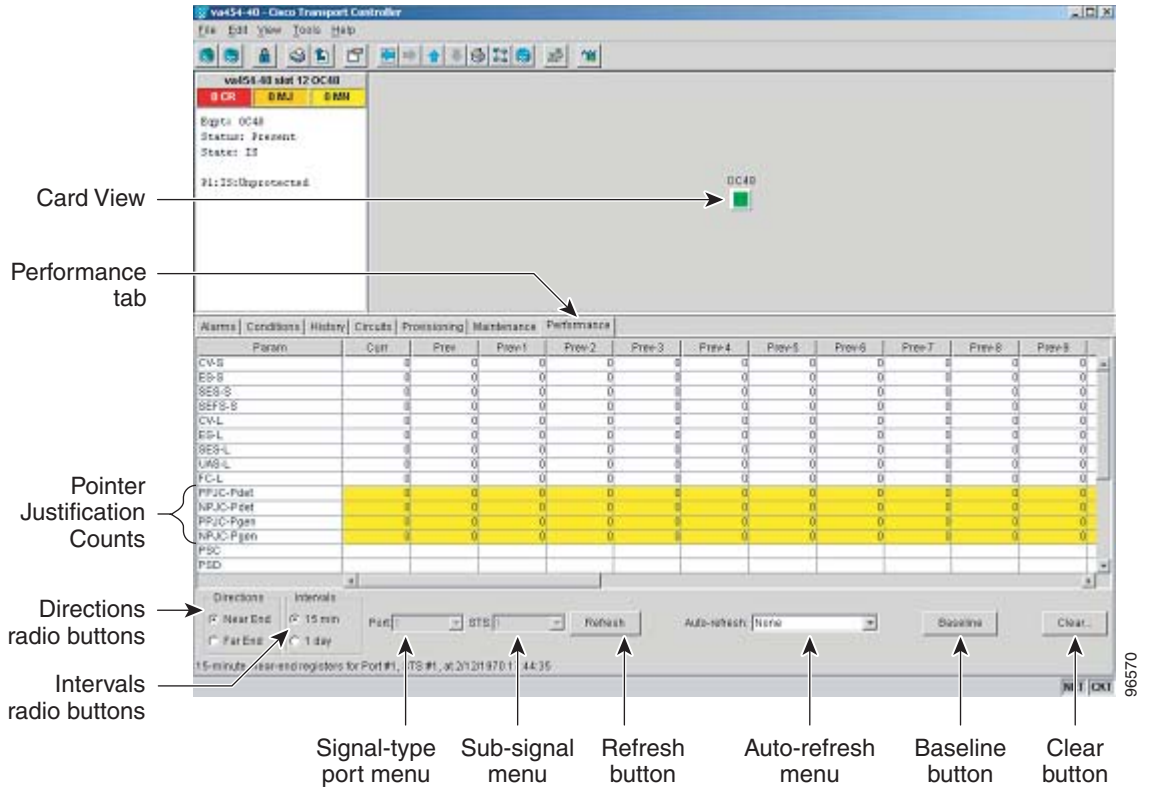

Step 7 Return to your originating procedure (NTP).

DLP-A122 Enable/Disable Intermediate Path Performance Monitoring

Purpose	This task enables or disables intermediate path performance monitoring, which allows you to monitor large amounts of STS traffic through intermediate nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher




Note

The monitored IPPM parameters are STS CV-P, STS ES-P, STS SES-P, STS UAS-P, and STS FC-P. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.

Step 1 In node view, double-click the OC-N card you want to monitor. The card view appears. See Table 10-1 on page 10-19 for a list of OC-N LTE cards.

Step 2 Click the **Provisioning > SONET STS** tabs (Figure 10-10).

Figure 10-10 SONET STS Tab for Enabling or Disabling IPPM

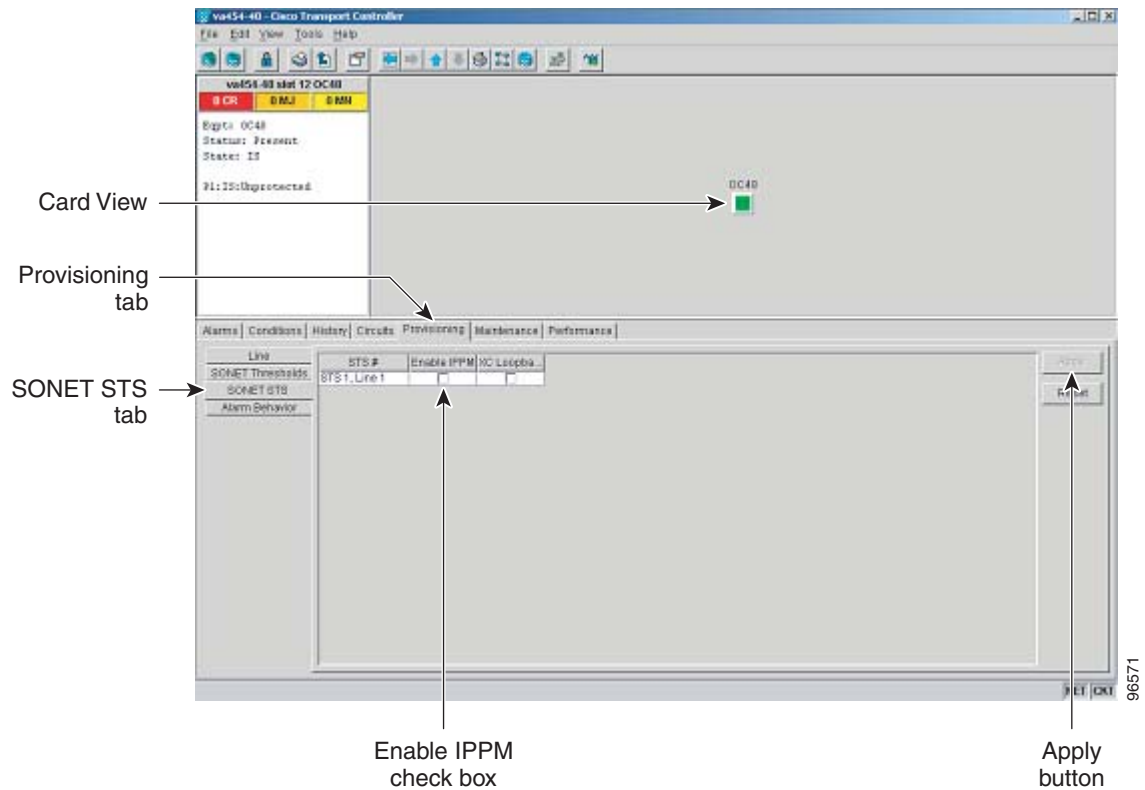

Step 3 Click the check box in the Enable IPPM column and make a selection based on the following rules:

- Unchecked means IPPM is disabled for that STS (default)
- Checked means IPPM is enabled for that STS

Step 4 Click **Apply**.

Step 5 Click the **Performance** tab to view PM parameters. For IPPM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.


Step 6 Return to your originating procedure (NTP).

DLP-A507 View OC-N PM Parameters

Purpose	This task enables you to view PM counts on a selected OC-N card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** In node view, double-click the OC-N card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance** tab (Figure 10-11).

Figure 10-11 Viewing OC-N Card Performance Monitoring Information

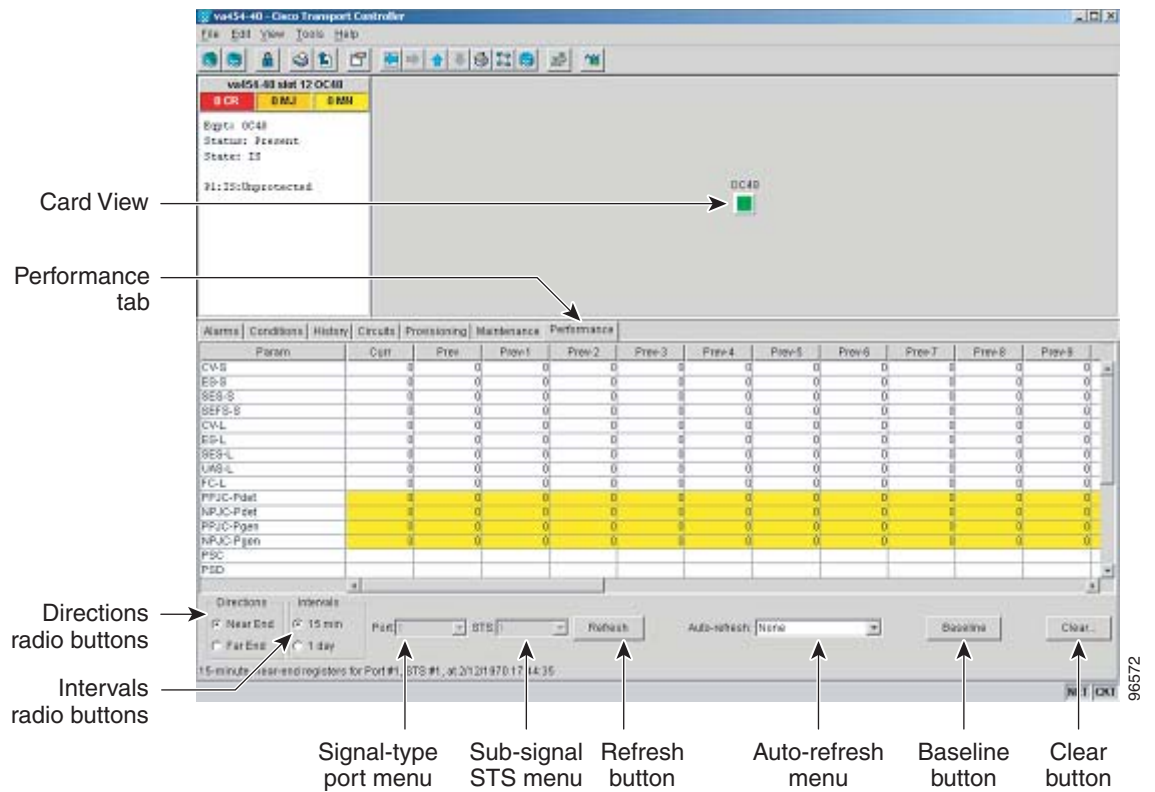

- Step 3** In the Port drop-down menu, click the port you want to monitor:
- Step 4** Click **Refresh**.
- Step 5** View the PM parameter names that appear in the Param column. The PM parameter values appear in the Curr (current), and Prev-n (previous) columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.
- Step 6** To monitor another port on a multiport card, choose another port from the Port drop-down menu and click **Refresh**.

Step 7 Return to your originating procedure (NTP).

NTP-A251 Monitor Multirate Transport Performance

Purpose	This procedure enables you to view node near-end or far-end performance during selected time intervals on a selected TXP_MR_10G, TXP_MR_2.5G, TXPP_MR_2.5G, or MXP_2.5G_10G card and port to detect possible performance problems. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	Before you monitor performance, be sure you have created the appropriate circuits and provisioned the card according to your specifications. For more information, see Chapter 8, “Create Circuits and VT Tunnels” and Chapter 13, “Change Card Settings.”
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Retrieve or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node that you want to monitor. If you are already logged in, continue with Step 2
- Step 2** Complete the “DLP-A500 Enable/Disable OTN G.709 Performance Monitoring” task on page 10-25 as needed to enable or disable optical transport network (OTN) G.709 monitoring.
- Step 3** Complete the “DLP-A501 Enable/Disable OTN FEC Performance Monitoring” task on page 10-26 as needed to enable or disable optical transport network (OTN) forward error correction (FEC) monitoring.
- Step 4** Complete the “DLP-A317 View Optics PM Parameters” task on page 10-27 as needed.
- Step 5** Complete the “DLP-A318 View Payload PM Parameters” task on page 10-28 as needed.
- Step 6** Complete the “DLP-A319 View Optical Transport Network PM Parameters” task on page 10-30 as needed.

To refresh, reset, or clear PM counts, see the “NTP-A253 Change the PM Display” procedure on page 10-2.

Stop. You have completed this procedure.


DLP-A500 Enable/Disable OTN G.709 Performance Monitoring

Purpose	This task enables or disables optical transport network (OTN) G.709 monitoring of near-end or far-end performance on a selected card and port during selected time intervals to detect possible problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the card you want to monitor. The card view appears.

Step 2 Click the **Provisioning** > **OTN** > **OTN Lines** tabs (Figure 10-12).

Figure 10-12 OTN Lines Tab for Enabling/Disabling OTN G.709 Performance Monitoring

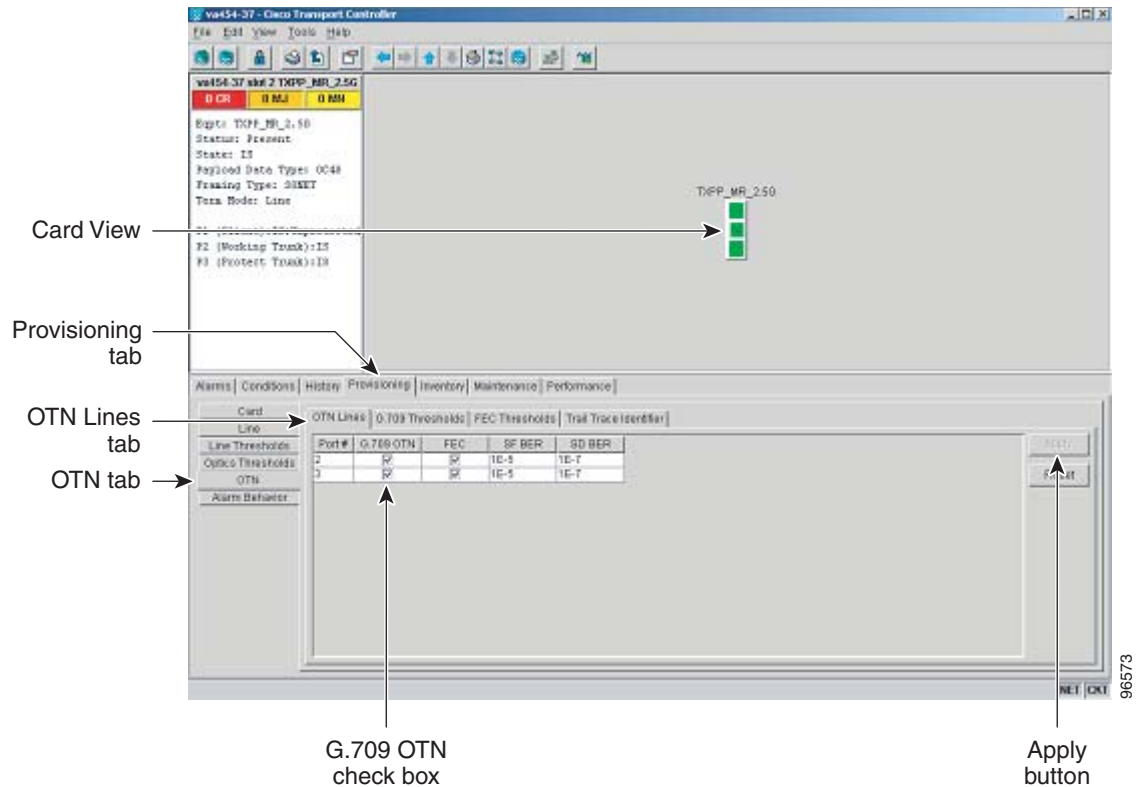

Step 3 Make a G.709 selection based on the following rules:

- Unchecked disables G.709 for that port (default)
- Checked enables G.709 for that port

Step 4 Click **Apply**.

Step 5 Click the **Performance** tab to view PM parameters. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.

Step 6 Return to your originating procedure (NTP).


DLP-A501 Enable/Disable OTN FEC Performance Monitoring

Purpose	This task enables or disables optical transport network (OTN) FEC monitoring of node near-end or far-end performance on a selected card and port during selected time intervals to detect possible problems
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the card you want to monitor. The card view appears.

Step 2 Click the **Provisioning > OTN > OTN Lines** tabs (Figure 10-13).

Figure 10-13 OTN Lines Tab for Enabling/Disabling OTN FEC Performance Monitoring

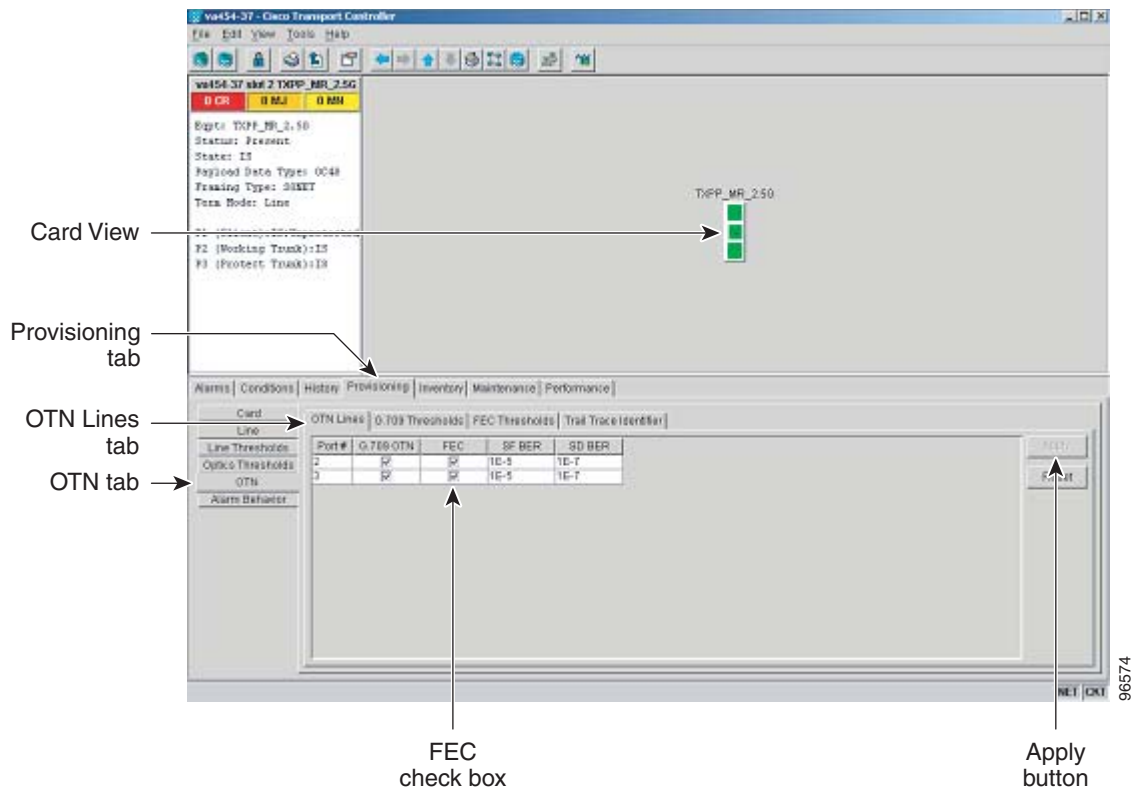

Step 3 Make a FEC selection based on the following rules:

- Unchecked disables FEC for that port (default)

- Checked enables FEC for that port

Step 4 Click **Apply**.

Step 5 Click the **Performance** tab to view PM parameters. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.

Step 6 Return to your originating procedure (NTP).

DLP-A317 View Optics PM Parameters

Purpose	This task enables you to view the optics PM counts on a selected TXP_MR_10G, TXP_MR_2.5G, TXPP_MR_2.5G (transponder), or MXP_2.5G_10G (muxponder) optical card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

Step 1 In node view, double-click the transponder or muxponder card where you want to view PM counts. The card view appears.

Step 2 Click the **Performance > Optics PM** tabs (Figure 10-14).

Figure 10-14 Viewing Optics Performance Monitoring Information

The screenshot shows the CTC interface for a TXPP_MR_2.5G card. The 'Performance' tab is active, displaying a table of PM parameters. The table has columns for 'Param', 'Curr', and 'Prev-1' through 'Prev-8'. The parameters include Laser Bias (Avg %), Laser Bias (Max %), RX Optical Pwr (Min, dBm), RX Optical Pwr (Max, dBm), TX Optical Pwr (Min, dBm), and TX Optical Pwr (Max, dBm). The current values are mostly 19.2, 19.4, -2.5, -2.4, -2.3, -2.1, and -2.0. Below the table, there are controls for 'Directions', 'Intervals' (15 min, 1 day), 'Port' (R162003), 'Refresh' button, 'Auto-refresh' menu (None), and 'Clear' button. Arrows from the text labels point to these specific UI elements.

Param	Curr	Prev-1	Prev-2	Prev-3	Prev-4	Prev-5	Prev-6	Prev-7	Prev-8
Laser Bias (Avg %)	19.2	19.2	19.2	19.2	19.2	19.2	19.1	19.1	19.1
Laser Bias (Max %)	19.4	19.4	19.3	19.3	19.3	19.3	19.2	19.2	19.2
RX Optical Pwr (Min, dBm)	-2.5	-2.5	-2.5	-2.5	-2.5	-2.5	-2.5	-2.5	-2.5
RX Optical Pwr (Max, dBm)	-2.4	-2.4	-2.4	-2.4	-2.4	-2.4	-2.4	-2.4	-2.4
TX Optical Pwr (Min, dBm)	-2.3	-2.3	-2.3	-2.3	-2.3	-2.3	-2.3	-2.3	-2.3
TX Optical Pwr (Max, dBm)	-2.1	-2.1	-2.1	-2.1	-2.1	-2.1	-2.1	-2.1	-2.1
TX Optical Pwr (Avg, dBm)	-2.1	-2.1	-2.1	-2.1	-2.1	-2.1	-2.1	-2.1	-2.1
TX Optical Pwr (Max, dBm)	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0

- Step 3** View the PM parameter names that appear in the Param column. The PM parameter values appear in the Curr (current) and Prev-*n* (previous) columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.
- Step 4** Return to your originating procedure (NTP).


DLP-A318 View Payload PM Parameters

Purpose	This task enables you to view the payload PM counts on a selected TXP_MR_10G, TXP_MR_2.5G, TXPP_MR_2.5G (transponder), or MXP_2.5G_10G (muxponder) optical card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** In node view, double-click the transponder or muxponder card where you want to view PM counts. The card view appears.

Step 2 Click the **Performance > Payload PM** tabs (Figure 10-15).

Figure 10-15 Viewing Payload Performance Monitoring Information

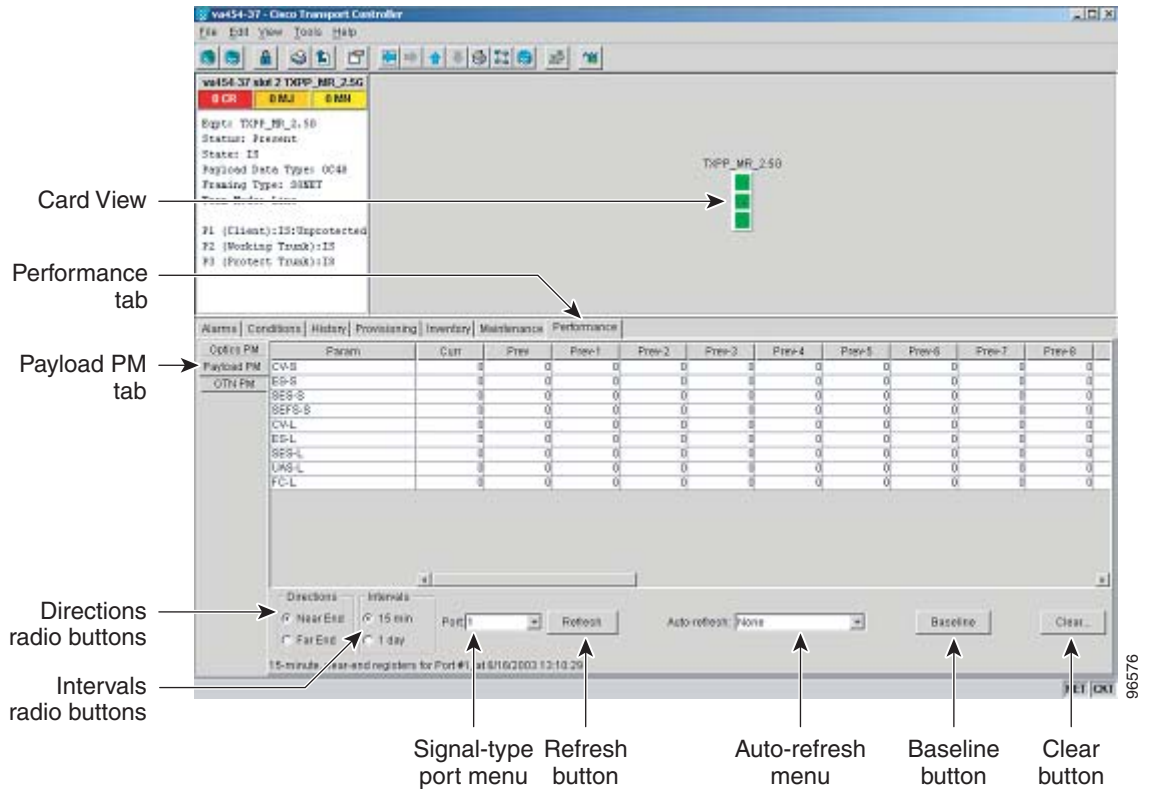

Step 3 View the PM parameter names that appear in the Param column. The PM parameter values appear in the Curr (current), and Prev-*n* (previous) columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.



Note The PM parameters that appear depend upon the data payload and framing type provisioned on the port. Unframed data payloads such as ESCON, DV6000, DSI/D1 video, and HDTV do not provide payload performance monitoring information.

Step 4 Return to your originating procedure (NTP).

DLP-A319 View Optical Transport Network PM Parameters

Purpose	This task enables you to view the optical transport network (OTN) PM counts on a selected TXP_MR_10G, TXP_MR_2.5G, TXPP_MR_2.5G (transponder), or MXP_2.5G_10G (muxponder) optical card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher


- Step 1** In node view, double-click the transponder or muxponder card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance > OTN PM > G.709** tabs (Figure 10-16).

Figure 10-16 Viewing OTN G.709 Performance Monitoring Information

The screenshot shows the CTC interface for a TXPP_MR_2.5G card. The 'Performance' tab is selected, and the 'G.709 PM' sub-tab is active. Below the sub-tab, the 'OTN PM' tab is selected, displaying a table of performance monitoring parameters. The table has columns for 'Param', 'Curr', 'Prev-1', 'Prev-2', 'Prev-3', 'Prev-4', 'Prev-5', 'Prev-6', 'Prev-7', and 'Prev-8'. The parameters listed include BBE-SM, ES-SM, SRS-SM, GRS-SM, FC-SM, ESR-SM, GSR-SM, BGR-SM, BCE-SM, E2-SM, SES-SM, LAS-SM, and FC-SM. Below the table, there are controls for 'Directions' (Near End, Far End), 'Intervals' (15 min, 1 day), a 'Signal-type port menu' (Port 2), a 'Refresh' button, an 'Auto-refresh' menu (None), a 'Baseline' button, and a 'Clear' button.

- Step 3** View the PM parameter names that appear in the Param column. The PM parameter values appear in the Curr (current) and Prev-*n* (previous) columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.
- Step 4** Click the **FEC PM** tab (Figure 10-17).

Figure 10-17 Viewing OTN FEC Performance Monitoring Information

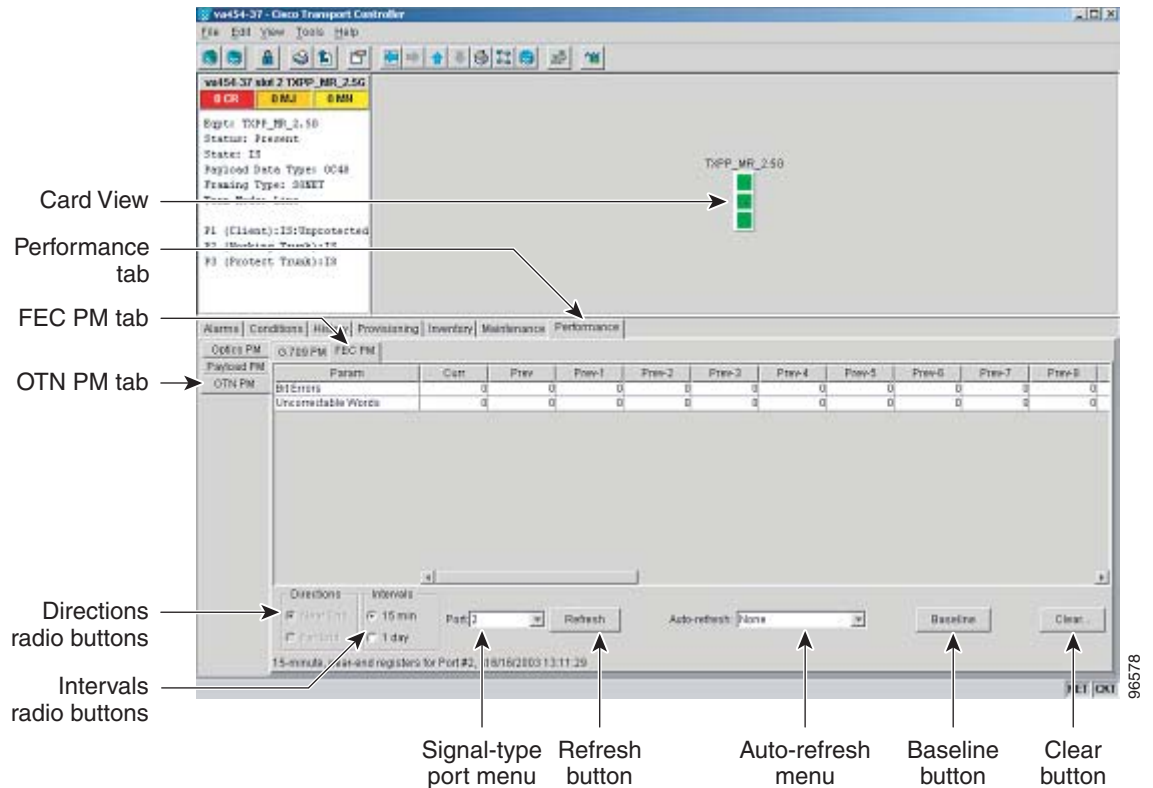

Step 5 View the PM parameter names that appear in the Param column. The PM parameter values appear in the Curr (current) and Prev-n (previous) columns. For PM parameter definitions, refer to the *Cisco ONS 15454 Reference Manual*.

Step 6 Return to your originating procedure (NTP).

NTP-A252 Monitor DWDM Performance

- Purpose** This procedure enables you to view transmit and receive performance during selected time intervals on a selected DWDM card and port to detect possible performance problems. This procedure applies to DWDM (Software R4.5) nodes only.
- Tools/Equipment** None
- Prerequisite Procedures** Before you monitor performance, be sure you have created the appropriate circuits and provisioned the card according to your specifications. For more information, see Chapter 8, “Create Circuits and VT Tunnels” and Chapter 13, “Change Card Settings.”
- Required/As Needed** As needed
- Onsite/Remote** Onsite
- Security Level** Retrieve or higher


-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node that you want to monitor. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A502 View Optical Service Channel PM Parameters” task on page 10-32.
- Step 3** Complete the “DLP-A503 View Optical Amplifier PM Parameters” task on page 10-34.
- Step 4** Complete the “DLP-A504 View Optical Multiplexer and Demultiplexer PM Parameters” task on page 10-36.
- Step 5** Complete the “DLP-A505 View Channel Filter Optical Add/Drop Multiplexer PM Parameters” task on page 10-38.
- Step 6** Complete the “DLP-A506 View Band Filter Optical Add/Drop Multiplexer PM Parameters” task on page 10-40.
- To refresh, reset, or clear PM counts, see the “NTP-A253 Change the PM Display” procedure on page 10-2.
- Stop. You have completed this procedure.**
-

DLP-A502 View Optical Service Channel PM Parameters

Purpose	This task enables you to view optical service channel PM counts at selected time intervals on an OSCM or OSC-CSM card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher


-
- Step 1** In node view, double-click the OSCM or OSC-CSM card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance > OC3 Line** tabs (Figure 10-18).

Figure 10-18 OC3 Line Tab in the Optical Service Channel Card View Performance Window

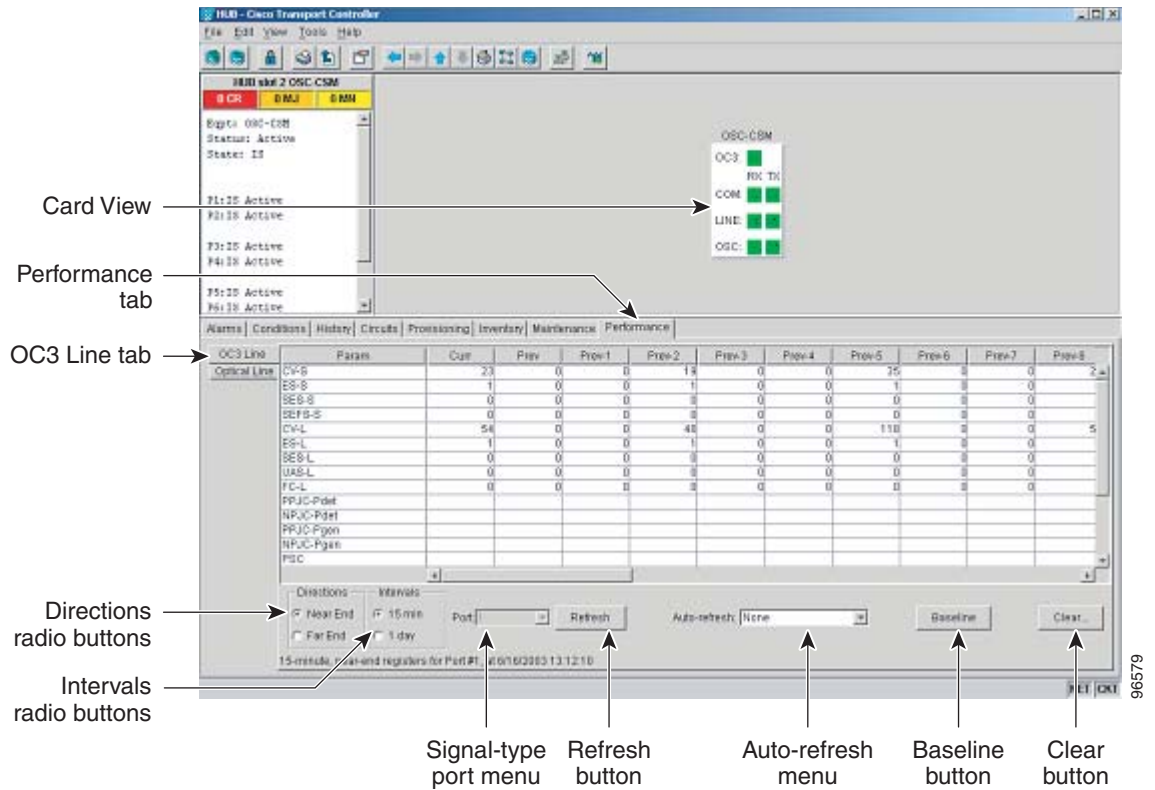

- Step 3** Click **Refresh**. OC3 line performance monitoring statistics for the selected port appear.
- Step 4** Click the **Optical Line** tab (Figure 10-19).

Figure 10-19 Optical Line Tab in the Optical Service Channel Card View Performance Window

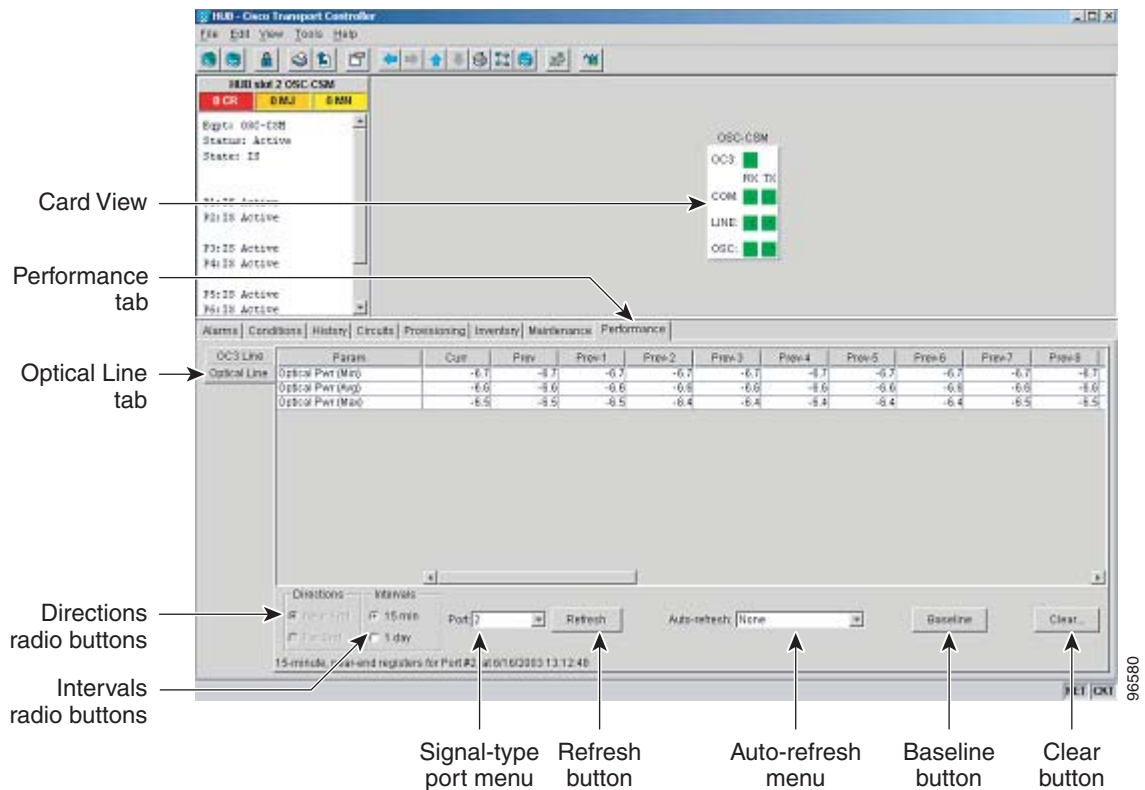


- Step 5** Click **Refresh**. Optical line performance monitoring statistics for the selected port appear.
- Step 6** Return to your originating procedure (NTP).

DLP-A503 View Optical Amplifier PM Parameters

Purpose	This task enables you to view optical amplifier PM counts at selected time intervals on an OPT PRE or OPT BST card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** In node view, double-click the optical amplifier card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance > Optical Line** tabs (Figure 10-20).


Figure 10-20 Optical Line Tab in the Optical Amplifier Card View Performance Window

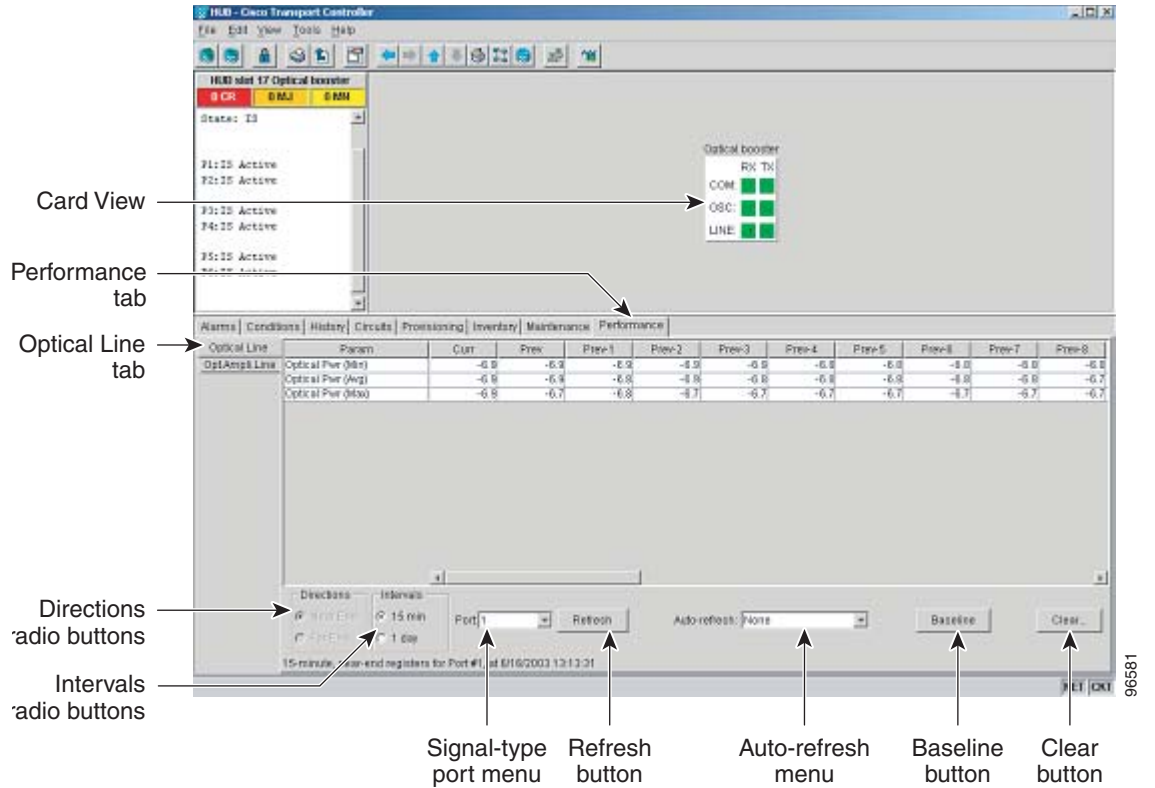

- Step 3** Click **Refresh**. Optical line performance monitoring statistics for the selected port appear.
- Step 4** Click the **Opt. Ampli. Line** tab (Figure 10-21).

96581

Figure 10-21 Optical Amplifier Line Tab in the Optical Amplifier Card View Performance Window

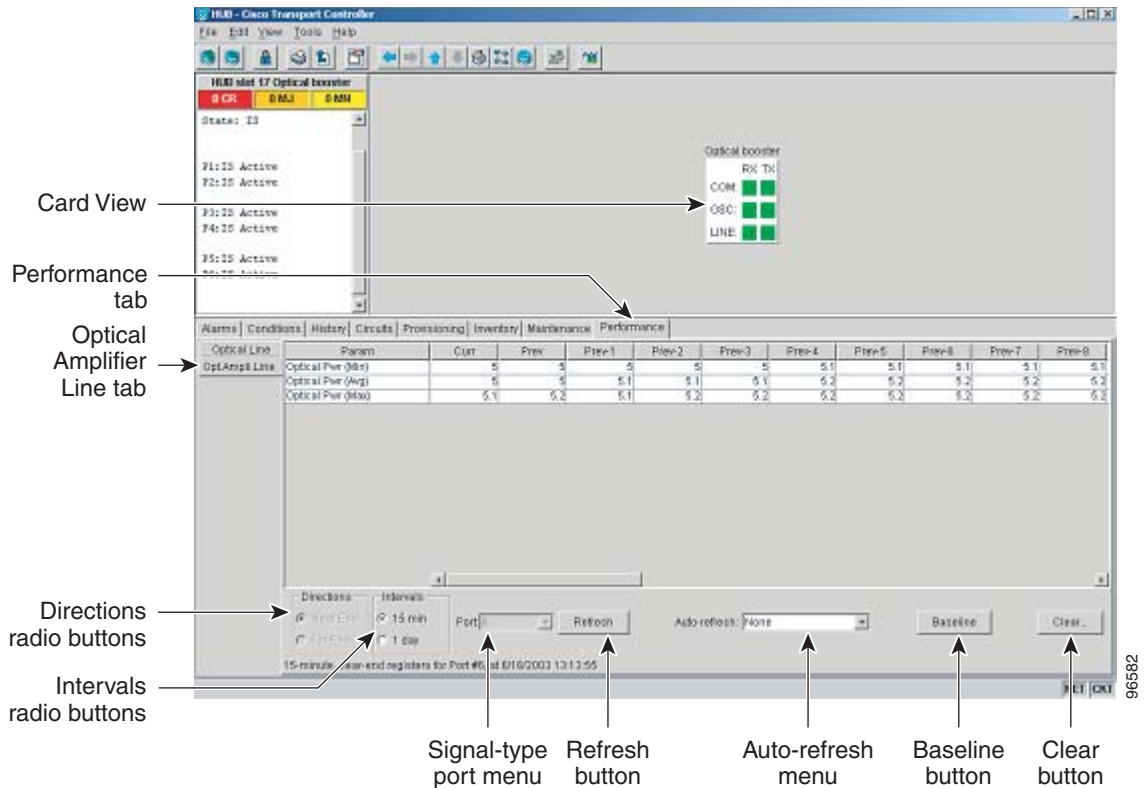


- Step 5** Click **Refresh**. Optical amplifier line performance monitoring statistics for the selected port appear.
- Step 6** Return to your originating procedure (NTP).

DLP-A504 View Optical Multiplexer and Demultiplexer PM Parameters

Purpose	This task enables you to view multiplexer or demultiplexer PM counts at selected time intervals on a 32MUX or 32DMX card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher


- Step 1** In node view, double-click the 32MUX or 32DMX card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance > Optical Channel** tabs (Figure 10-22).

Figure 10-22 Optical Channel Tab in the Mux/Demux Card View Performance Window

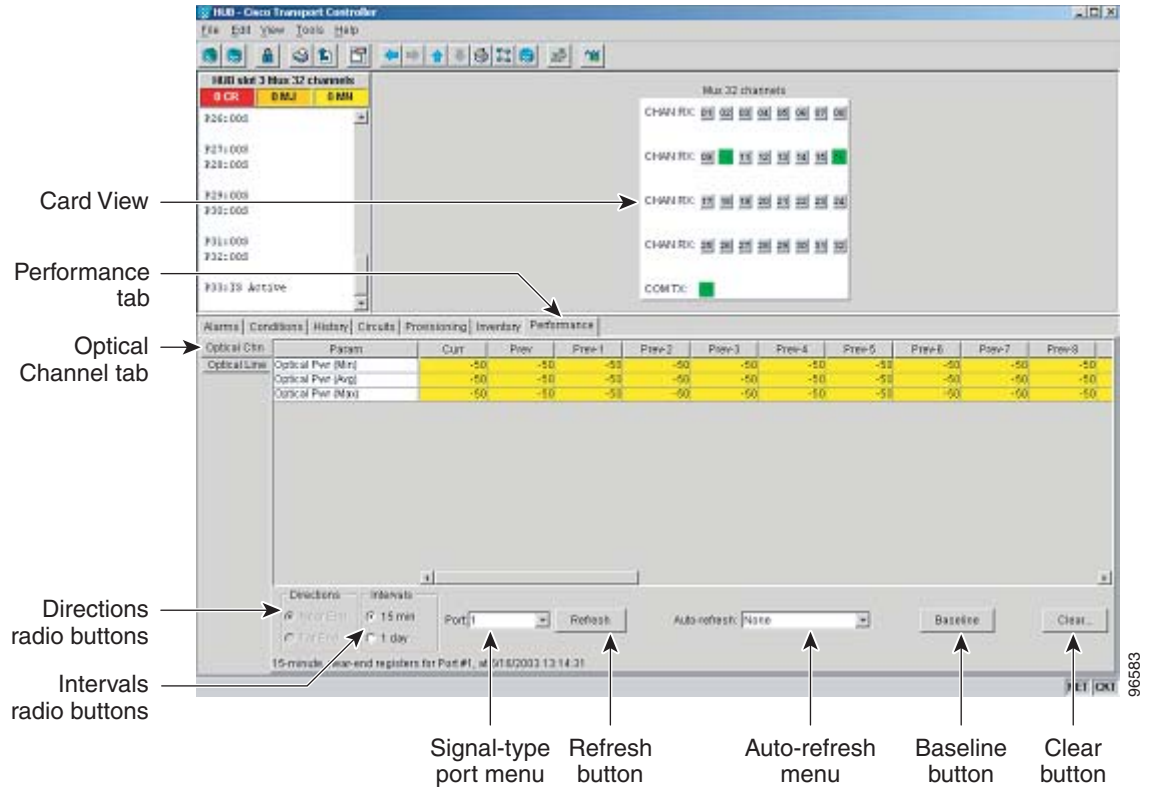

- Step 3** Click **Refresh**. Optical channel line performance monitoring statistics for the selected port appear.
- Step 4** Click the **Optical Line** tab (Figure 10-23).

Figure 10-23 Optical Line Tab in the Mux/Demux Card View Performance Window

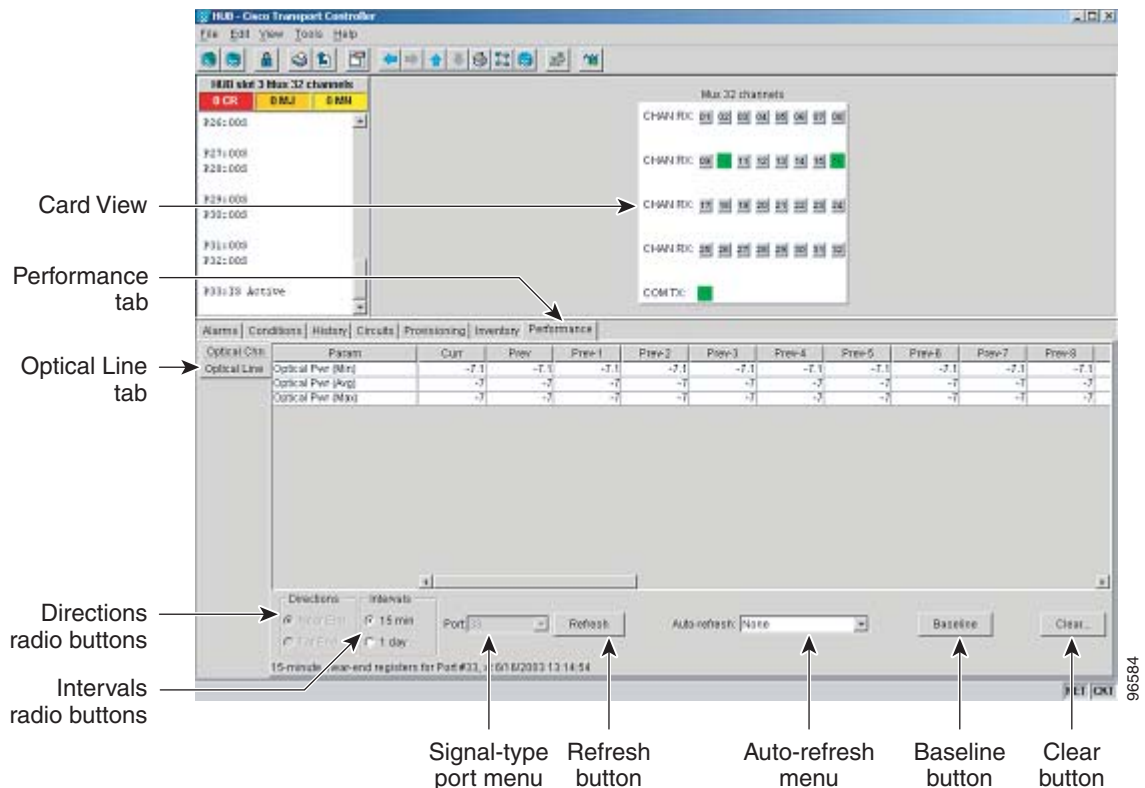


- Step 5** Click **Refresh**. Optical line performance monitoring statistics for the selected port appear.
- Step 6** Return to your originating procedure (NTP).

DLP-A505 View Channel Filter Optical Add/Drop Multiplexer PM Parameters

Purpose	This task enables you to view optical add/drop channel multiplexer PM counts at selected time intervals on an AD1C, AD2C, or AD4C card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher


- Step 1** In node view, double-click the optical add/drop channel multiplexer card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance > Optical Line** tabs (Figure 10-24).

Figure 10-24 Optical Line Tab in the Channel Filter OADM Card View Performance Window

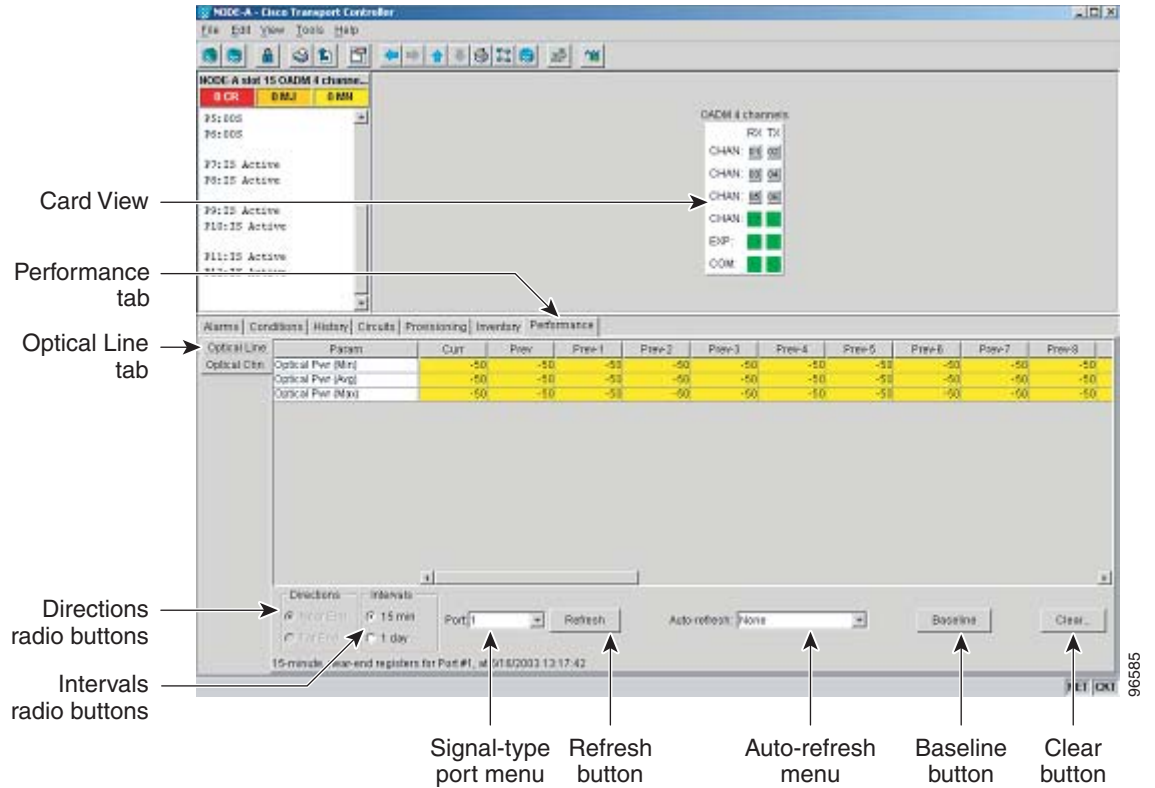

- Step 3** Click **Refresh**. Optical channel performance monitoring statistics for the selected port appear.
- Step 4** Click the **Optical Channel** tab (Figure 10-25).

Figure 10-25 Optical Channel Tab in the Channel Filter OADM Card View Performance Window

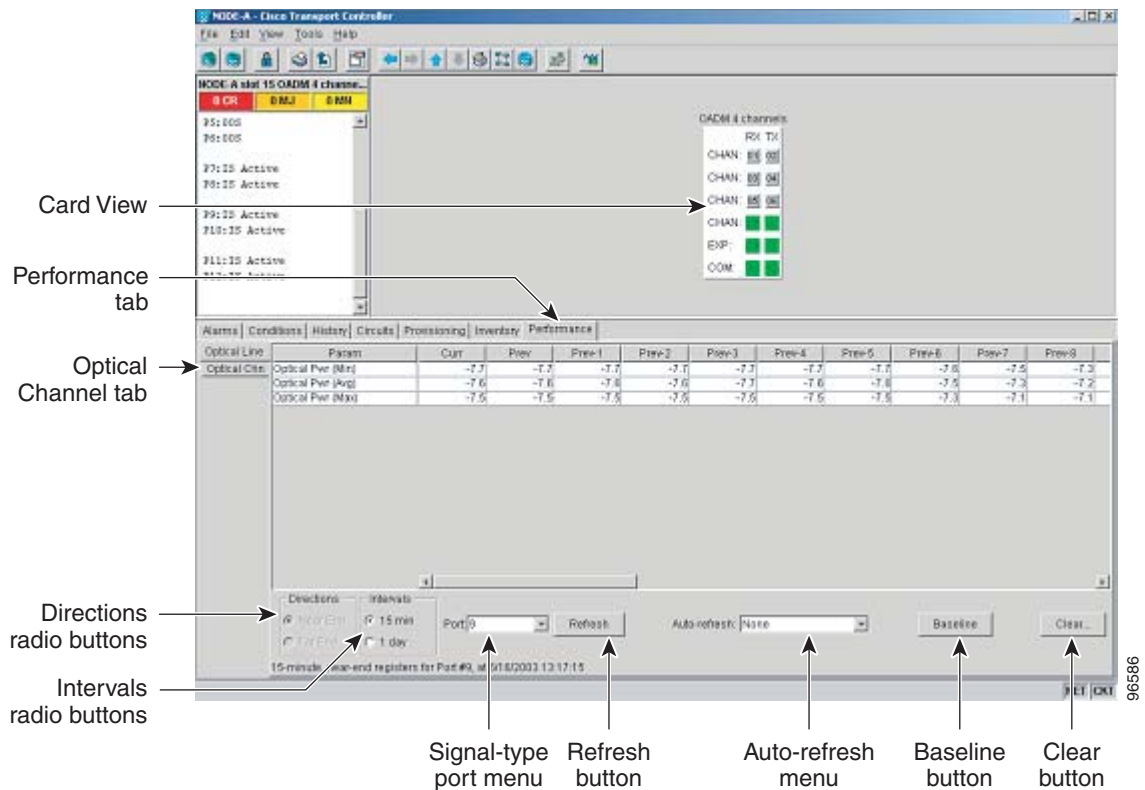


- Step 5** Click **Refresh**. Optical line performance monitoring statistics for the selected port appear.
- Step 6** Return to your originating procedure (NTP).

DLP-A506 View Band Filter Optical Add/Drop Multiplexer PM Parameters

Purpose	This task enables you to view optical add/drop band multiplexer PM counts at selected time intervals on an AD1B, AD4B, or 4MD card and port to detect possible performance problems.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** In node view, double-click the optical add/drop band multiplexer card where you want to view PM counts. The card view appears.
- Step 2** Click the **Performance > Optical Line** tabs (Figure 10-26).

Figure 10-26 Optical Line Tab in the Band Filter OADM Card View Performance Window

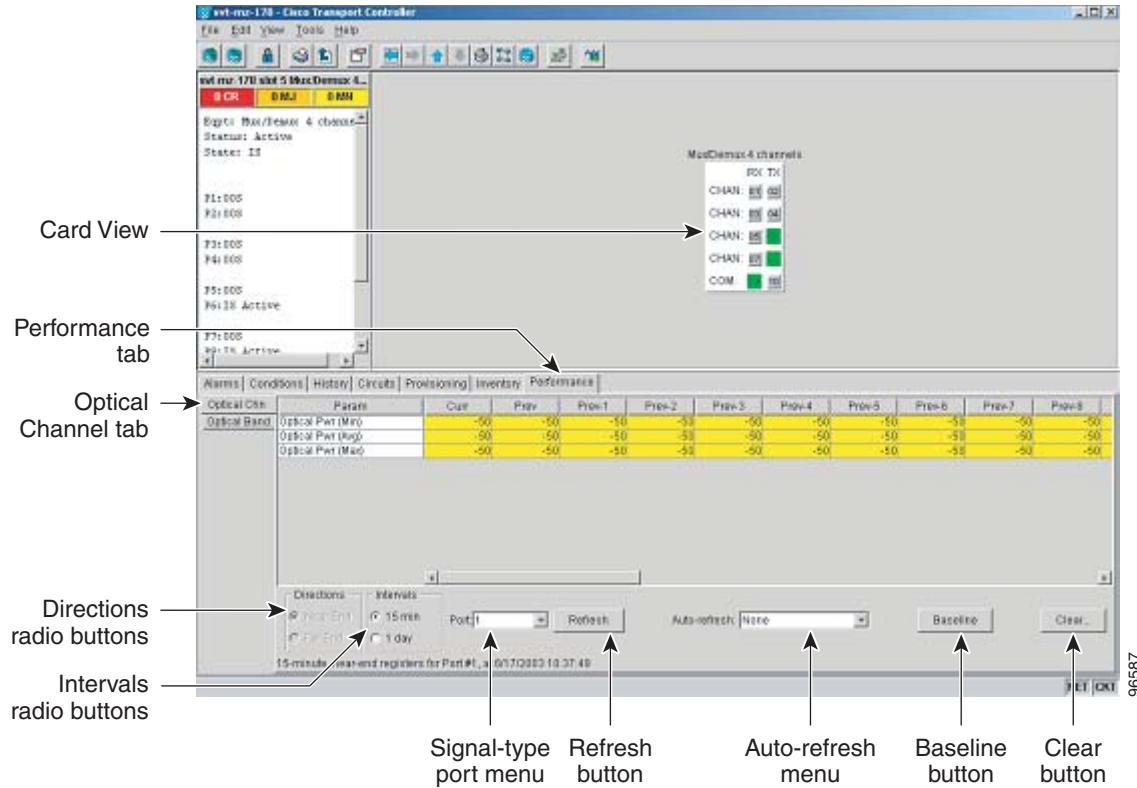

- Step 3** Click **Refresh**. Optical line performance monitoring statistics for the selected port appear.
- Step 4** Click the **Optical Band** tab (Figure 10-27).

Figure 10-27 Optical Band Tab in the Band Filter OADM Card View Performance Window

The screenshot displays the Cisco Transport Controller interface. The main window is titled "Optical Band" and is part of the "Performance" tab. The interface includes a table with the following data:

Optical Chs	Param	Cur	Prev	Prev-1	Prev-2	Prev-3	Prev-4	Prev-5	Prev-6	Prev-7	Prev-8
Optical Pwr (Min)		3.3	3.2	3.2	3.3	3.3	3.3	3.3	3.3	3.3	3.3
Optical Pwr (Max)		3.8	3.6	3.6	3.8	3.8	3.8	3.8	3.8	3.8	3.8
Optical Pwr (Max)		4	4	3.9	3.8	3.9	3.9	3.9	3.8	3.9	3.9

Below the table, there are control elements for "Directions" and "Intervals" (radio buttons), a "Signal-type port menu" (dropdown), a "Refresh button", an "Auto-refresh menu" (dropdown), a "Baseline button", and a "Clear button".

Step 5 Click **Refresh**. Optical band performance monitoring statistics for the selected port appear.

Step 6 Return to your originating procedure (NTP).



Manage Circuits



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This chapter explains how to manage Cisco ONS 15454 electrical, optical (OC-N), and Ethernet circuits. It also explains how to manage optical channel network connections provisioned in DWDM networks.



Note

Except where noted, the procedures and tasks in this chapter apply to both DWDM (Software Release 4.5) and non-DWDM (Software R4.1 and earlier) nodes.

Before You Begin

To create circuits, see Chapter 8, "Create Circuits and VT Tunnels."

To clear any alarm or trouble conditions, refer to the *Cisco ONS 15454 Troubleshooting Guide*.

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A199 Locate and View Circuits, page 11-2—Complete as needed.
2. NTP-A200 View Cross-Connect Card Resource Usage, page 11-11—Complete as needed.
3. NTP-A151 Modify Circuit Characteristics, page 11-12—Complete as needed to edit a circuit name, change the active and standby colors of spans, or change signal fail, signal degrade thresholds, reversion time, and PDI-P settings for path protection circuits.
4. NTP-A416 Convert a CTC Circuit to TL1 Cross-Connects, page 11-18—Complete this procedure if you want to convert a CTC circuit into TL1 cross-connects.
5. NTP-A417 Upgrade TL1 Cross-Connects to CTC Circuits, page 11-19—Complete this procedure if you want to convert TL1 cross-connects or TL1-like cross-connects created in CTC into a CTC circuit.
6. NTP-A152 Delete Circuits, page 11-20—Complete as needed.
7. NTP-A78 Create a Monitor Circuit, page 11-21—Complete as needed to monitor traffic on primary bidirectional circuits.

8. NTP-A79 Create a J1 Path Trace, page 11-22—Complete as needed to monitor interruptions or changes to circuit traffic.

NTP-A199 Locate and View Circuits

Purpose	This procedure allows you to locate and view circuits and DWDM optical channel network connections.
Tools/Equipment	None
Prerequisite Procedures	Circuit creation procedure(s) in Chapter 8, “Create Circuits and VT Tunnels”
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

-
- Step 1** Log into the network where you want to view the circuits. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.



Note Do not check “Disable Circuit Management” on the Login dialog box. No circuits are displayed if this option is checked.

- Step 2** As needed, complete the “DLP-A416 View Circuit Information” task on page 11-2.
- Step 3** As needed, complete the “DLP-A131 Search for Circuits” task on page 11-7.
- Step 4** As needed, complete the “DLP-A262 Filter the Display of Circuits” task on page 11-8.
- Step 5** As needed, complete the “DLP-A229 View Circuits on a Span” task on page 11-9.
- Step 6** As needed, complete the “DLP-A417 View the BLSR Squelch Table” task on page 11-10.

Stop. You have completed this procedure.

DLP-A416 View Circuit Information

Purpose	This task provides information about ONS 15454 circuits and DWDM optical channel network connections.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

-
- Step 1** Navigate to the appropriate CTC view:
- To view circuits for an entire network, from the View menu, choose **Go to Network View**.

- To view circuits that originate, terminate, or pass through a specific node, from the View menu, choose **Go to Other Node**, then choose the node you want to search and click **OK**.
- To view circuits that originate, terminate, or pass through a specific card, in node view, double-click the card containing the circuits you want to view.



Note In node or card view, you can change the scope of the circuits that are displayed by choosing Card (in card view), Node, or Network from the Scope drop-down menu in the bottom right corner of the Circuits window.

Step 2 Click the **Circuits** tab.

The Release 4.1 Circuits tab has the following information:

- **Name**—Name of the circuit. The circuit name can be manually assigned or automatically generated.
- **Type**—Circuit types are: STS (STS circuit), VT (VT circuit), VTT (VT tunnel), or VAP (VT aggregation point).
- **Size**—Circuit size. VT circuits are 1.5. STS circuit sizes are 1, 3c, 6c, 9c, 12c, 24c, 48c, or 192c.
- **Protection**—The type of circuit protection. See Table 11-1 on page 11-4 for a list of protection types.
- **Direction**—The circuit direction, either two-way or one-way.
- **Status**—The circuit status. Table 11-2 on page 11-4 lists the circuit statuses that may appear.
- **Source**—The circuit source in the format: *node/slot/port "port name"/STS/VT*. (Port name will appear in quotes.) Node and slot will always appear; port "port name"/STS/VT might appear, depending on the source card, circuit type, and whether a name is assigned to the port. If the circuit size is a concatenated size (3c, 6c, 12c, etc.) STSs used in the circuit will be indicated by an ellipsis, for example, "S7..9," (STSs 7, 8, and 9) or S10..12 (STS 10, 11, and 12).
- **Destination**—The circuit destination in same format (*node/slot/port "port name"/STS/VT*) as the circuit source.
- **# of VLANs**—The number of VLANs used by an Ethernet circuit with end points on E Series Ethernet cards in single card or multiscard mode.
- **# of Spans**—The number of inter-node links that constitute the circuit. Right-clicking the column shows a shortcut menu from which you can choose to show or hide circuit span detail.
- **State**—The circuit state. Table 11-2 on page 11-4 lists the circuit states that may appear.

The Release 4.5 Circuits tab has the following information:

- **Name**—Name of the circuit. The circuit name can be manually assigned or automatically generated.
- **Type**—Circuit types are: STS (STS circuit), VT (VT circuit), VTT (VT tunnel), or VAP (VT aggregation point), or OCHNC (DWDM optical channel network connection).
- **Size**—Circuit size. VT circuits are 1.5. STS circuit sizes are 1, 3c, 6c, 9c, 12c, 24c, 48c, 192c. OCHNC sizes are Equipped not specific, Multi-rate, 2.5 Gb/s No FEC (forward error correction), 2.5 Gb/s FEC, 10 Gb/s No FEC, and 10 Gb/s FEC.
- **OCHNC Wlen**—For OCHNCs, the wavelength provisioned for the optical channel network connection. See Table 5-5 on page 5-8 for a list of channels and wavelengths.
- **Direction**—The circuit direction, either two-way or one-way.
- **OCHNC Dir**—For OCHNCs, the direction of the optical channel network connection, either east to west or west to west.

- Protection—The type of circuit protection. See Table 11-1 for a list of protection types.

Table 11-1 Circuit Protection Types

Protection Type	Description
—	Circuit protection is not applicable.
2F BLSR	The circuit is protected by a 2-fiber bidirectional line switched ring (BLSR).
4F BLSR	The circuit is protected by a 4-fiber BLSR.
BLSR	The circuit is protected by both a 2-fiber and a 4-fiber BLSR.
Path Protection	The circuit is protected by a path protection.
Path Protection-DRI	The circuit is protected by a path protection dual ring interconnection
1+1	The circuit is protected by a 1+1 protection group.
Y-Cable	The circuit is protected by a transponder or musponder card Y-cable protection group.
Splitter	(Release 4.5 only) The circuit is protected by the protect transponder (TXPP_MR_2.5G) splitter protection.
Protected	The circuit is protected by diverse SONET topologies, for example, a BLSR and a path protection, or a path protection and 1+1.
2F-PCA	The circuit is routed on a protection channel access path on a 2-fiber BLSR. PCA circuits are unprotected.
4F-PCA	The circuit is routed on a protection channel access path on a 4-fiber BLSR. PCA circuits are unprotected.
PCA	The circuit is routed on a protection channel access path on both 2-fiber and 4-fiber BLSRs. PCA circuits are unprotected.
Unprot (black)	The circuit is not protected.
Unprot (red)	A circuit created as a fully-protected circuit is no longer protected due to a system change, such as removal of a BLSR or 1+1 protection group.
Unknown	Circuit protection types appear in the Protection column only when all circuit components are known, that is, when the circuit status is ACTIVE or UPGRADABLE. If the circuit is in some other status, the protection type is “unknown.”

- Status—The circuit status. Table 11-2 lists the circuit statuses that may appear.

Table 11-2 Cisco ONS 15454 Circuit Status

Status	Definition/Activity
CREATING	CTC is creating a circuit.
ACTIVE	CTC created a circuit. All components are in place and a complete path exists from the circuit source to the circuit destination.
DELETING	CTC is deleting a circuit.

Table 11-2 Cisco ONS 15454 Circuit Status (continued)

Status	Definition/Activity
INCOMPLETE	<p>A CTC-created circuit is missing a cross-connect or network span; a complete path from source to destination(s) does not exist, or an Alarm Interface Panel (AIP) change occurred on one of the circuit nodes and the circuit is in need of repair. (AIPs store the node MAC address.)</p> <p>In CTC, circuits are represented using cross-connects and network spans. If a network span is missing from a circuit, the circuit status is INCOMPLETE. However, an INCOMPLETE status does not necessarily mean a circuit traffic failure has occurred, for traffic may flow on a protect path.</p> <p>Network spans are in one of two states: up or down. On CTC circuit and network maps, up spans are shown as green lines, and down spans are shown as gray lines. If a failure occurs on a network span during a CTC session, the span remains on the network map but its color changes to gray to indicate the span is down. If you restart your CTC session while the failure is active, the new CTC session cannot discover the span and its span line will not appear on the network map.</p> <p>Subsequently, circuits routed on a network span that goes down will appear as ACTIVE during the current CTC session, but they will appear as INCOMPLETE to users who log in after the span failure. This status does not appear for OCHNC circuit types.</p>
UPGRADABLE	<p>A TL1-created circuit or a TL1-like CTC-created circuit is complete and has upgradable cross-connects. A complete path from source to destination(s) exists. You can upgrade the circuit using the “NTP-A417 Upgrade TL1 Cross-Connects to CTC Circuits” procedure on page 11-19. This status does not appear for OCHNC circuit types.</p>
INCOMPLETE_UPGRADABLE	<p>A TL1-created circuit or a TL1-like CTC-created circuit with upgradable cross-connects is missing a cross-connect, and a complete path from source to destination(s) does not exist. The circuit cannot be upgraded until missing cross-connects are in place. This status does not appear for OCHNC circuit types.</p>
NOT_UPGRADABLE	<p>A TL1-created circuit or a TL1-like CTC-created circuit is complete but has at least one non-upgradable cross-connect. UPSR_HEAD, UPSR_EN, UPSR_DC, and UPSR_DROP cross-connects are not upgradable, so all unidirectional path protection circuits created with TL1 are not upgradable. This status does not appear for OCHNC circuit types.</p>
INCOMPLETE_NOT_UPGRADABLE	<p>A TL1-created circuit or a TL1-like CTC-created circuit with one or more non-upgradable cross-connects is missing a connection or circuit span (network link); a complete path from source to destination(s) does not exist. This status does not appear for OCHNC circuit types.</p>

- **Source**—The circuit source in the format: *node/slot/port "port name"/STS/VT*. (Port name will appear in quotes.) Node and slot will always appear; *port "port name"/STS/VT* might appear, depending on the source card, circuit type, and whether a name is assigned to the port. If the circuit size is a concatenated size (3c, 6c, 12c, etc.), STSs used in the circuit will be indicated by an ellipsis, for example, "S7..9," (STSs 7, 8, and 9) or S10..12 (STS 10, 11, and 12).
- **Destination**—The circuit destination in same format (*node/slot/port "port name"/STS/VT*) as the circuit source.
- **# of VLANs**—The number of VLANs used by an Ethernet circuit.
- **# of Spans**—The number of inter-node links that constitute the circuit. Right-clicking the column shows a shortcut menu from which you can choose to show or hide circuit span detail.
- **State**—The circuit state Table 11-3 lists the circuit states that may appear.

Table 11-3 Cisco ONS 15454 Circuit States

State	Definition
IS	In service; able to carry traffic
OOS	Out of service; unable to carry traffic. This status does not appear for OCHNC circuit types.
OOS-AINS	Out of service, auto in service; alarm reporting is suppressed, but traffic is carried and loopbacks are allowed. Raised fault conditions, whether their alarms are reported or not, can be retrieved on the CTC Conditions tab or by using the TL1 RTRV-COND command. VT circuits generally switch to IS when source and destination ports are IS, OOS_AINS, or OOS_MT regardless of whether a physical signal is present. STS circuits switch to IS when a signal is received. This status does not appear for OCHNC circuit types.
OOS-MT	Out of service, maintenance; alarm reporting is suppressed, but traffic is carried and loopbacks are allowed. Raised fault conditions, whether their alarms are reported or not, can be retrieved on the CTC Conditions tab or by using the TL1 RTRV-COND command. This status is not displayed for OCHNC circuit types.

Step 3 Return to your originating procedure (NTP).

DLP-A131 Search for Circuits

Purpose	This task searches for an ONS 15454 circuits and DWDM optical channel network connections at the network, node, or card level.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** Navigate to the appropriate CTC view:
- To search the entire network, from the View menu, choose **Go to Network View**.
 - To search for circuits that originate, terminate, or pass through a specific node, from the View menu, choose **Go to Other Node**, then choose the node you want to search and click **OK**.
 - To search for circuits that originate, terminate, or pass through a specific card, double-click the card on the shelf graphic in node view to display the card in card view.
- Step 2** Click the **Circuits** tab.
- Step 3** If you are in node or card view, choose the scope for the search in the Scope drop-down menu.
- Step 4** Click **Search**.
- Step 5** In the Circuit Name Search dialog box, complete the following:
- **Find What**—Enter the text of the circuit name you want to find.
 - **Match Whole Word Only**—Select this check box to instruct CTC to select circuits only if the entire word matches the text in the Find What field.
 - **Match Case**—Select this check box to instruct CTC to select circuits only when the capitalization matches the capitalization entered in the Find What field.
 - **Direction**—Choose the direction for the search. Searches are conducted up or down from the currently selected circuit.
- Step 6** Click **Find Next**. If a match is found, click **Find Next** again to find the next circuit.
- Step 7** Repeat Steps 5 and 6 until you are finished, then click **Cancel**.
- Step 8** Return to your originating procedure (NTP).
-

DLP-A262 Filter the Display of Circuits

Purpose	This task filters the display of circuits and DWDM optical channel network connections in the ONS 15454 network, node, or card view Circuits window based on circuit or OCHNC name, size, type, direction, and other attributes
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

-
- Step 1** Navigate to the appropriate CTC view:
- To filter network circuits, from the View menu, choose **Go to Network View**.
 - To filter circuits that originate, terminate, or pass through a specific node, from the View menu, choose **Go to Other Node**, then choose the node you want to search and click **OK**.
 - To filter circuits that originate, terminate, or pass through a specific card, double-click the card on the shelf graphic in node view to display the card in card view.
- Step 2** Click the **Circuits** tab.
- Step 3** Set the attributes for filtering the circuit display:
- a. Click the **Filter** button.
 - b. On the Filter Dialog, set the filter attributes by choosing one or more of the following:
 - Name—Enter a complete or partial circuit name to filter circuits based on circuit name; otherwise leave the field blank.
 - Direction—Choose one: **Any** (direction not used to filter circuits), **1-way** (display only one-way circuits), or **2-way** (display only two-way circuits).
 - OCHNC Dir—(DWDM optical channel network connections only) Choose one: East to West (displays only east-to-west circuits); West to East (displays only west-to-east circuits)
 - OCHNC Wlen—(DWDM optical channel network connections only) Choose an OCHNC wavelength to filter the circuits. For example, choosing 1530.33 will display channels provisioned on the 1530.33 nm wavelength.
 - Status—Choose one: **Any** (status not used to filter circuits), **Active** (display only active circuits; optical channel network connections have Active status only), **Incomplete** (display only incomplete circuits, that is, circuits missing a connection or span to form a complete path), or **Upgradable** (display only upgradable circuits, that is, circuits created in TL1 that are ready to upgrade in CTC). See Table 11-2 for more information about circuit statuses. (While other statuses are described in the table, filtering is only supported for Active, Incomplete, and Upgradable circuits.
 - State—Choose one: **OOS** (display only out-of-service circuits), **IS** (display only in-service circuits; optical channel network connections have IS status only), **OOS-AINS** (display only out-of-service, auto in-service circuits), or **OOS-MT** (display only out-of-service, maintenance circuits.) See Table 11-3 for more information about circuit states.
 - Slot—Enter a slot number to filter circuits based on the source or destination slot; otherwise leave the field blank.

- Port—Enter a port number to filter circuits based on the source or destination port; otherwise leave the field blank.
 - Type—Choose one: **Any** (type not used to filter circuits), **STS** (displays only STS circuits), **VT** (displays only VT circuits), **VT Tunnel** (displays only VT tunnels), **VT Aggregation Point** (displays only VT aggregation points), or **OCHNC** (displays only optical channel network connections; Release 4.5 only).
 - Size—Click the appropriate check boxes to filter circuits based on size: VT1.5, STS-1, STS3c, STS-6c, STS-9c, STS-12c, STS-24c, STS-48c, STS-192c, 2.5 Gb/s FEC, multi-rate, Equipment not specific, 2.5 Gb/s No FEC, 10 Gb/s FEC, 10 Gb/s No FEC. The check boxes displayed depend on what you entered in the Type field. If you chose Any, all sizes are available. If you chose VT, only VT1.5 is available. If you chose STS, only STS sizes are available, and if you chose VT Tunnel or VT Aggregation Point, only STS-1 is available. If you chose OCHNC as the circuit type, 2.5 Gb/s FEC, multi-rate, Equipment not specific, 2.5 Gb/s No FEC, 10 Gb/s FEC, 10 Gb/s No FEC are displayed.
- Step 4** Click **OK**. Circuits matching the attributes in the Filter Circuits dialog box are displayed in the Circuits window.
- Step 5** To turn filtering off, click the Filter icon in the lower right corner of the Circuits window. Click the icon again to turn filtering on, and click the Filter button to change the filter attributes.
- Step 6** Return to your originating procedure (NTP).

DLP-A229 View Circuits on a Span

Purpose	This task allows you to view circuits and DWDM optical channel network connections on an ONS 15454 span.
Tools/Equipment	None
Prerequisite Procedures	Circuits must be created on the span. See Chapter 8, “Create Circuits and VT Tunnels” DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** From the View menu on the node view, choose **Go to Network View**. If you are already in network view, go to Step 2.
- Step 2** Right-click the green line containing the circuits you want to view and choose one of the following:
- **Circuits**—To view BLSR, path protection, 1+1,DWDM optical channel network connections, or unprotected circuits on the span.
 - **PCA Circuits**—To view circuits routed on a BLSR protected channel. (This option does not display if the span you right-clicked is not a BLSR span.)

On the Circuits on Span dialog box, you can view the following information about the circuits that traverse the span. The information displayed depends on the circuit type.

For OC-N, DS-1, and DS-3 circuits provisioned on the span, the following information appears:

- STS—STSs used by the circuits.
- VT—VTs used by the circuits (VT circuits).
- Path Protection—(path protection span only)—If checked, path protection circuits are on the span.
- Circuit—Displays the circuit name.
- Switch State—(path protection span only) Displays the switch state of the circuit, that is, whether any span switches are active. For path protection spans, switch types include: CLEAR (no spans are switched), MANUAL (a manual switch is active), FORCE (a force switch is active), and LOCKOUT OF PROTECTION (a span lockout is active).



Note You can perform other procedures from the Circuits on Span dialog box. If the span is in a path protection, you can switch the span traffic. See “DLP-A197 Initiate a Path Protection Force Switch” task on page 16-17 for instructions. If you want to edit a circuit on the span, double-click the circuit. See the “DLP-A231 Edit a Circuit Name” task on page 11-14 or the “DLP-A233 Edit Path Protection Circuit Path Selectors” task on page 11-16 for instructions.

For DWDM optical channel network connections, the following information appears:

- OCHNC Wavelength—The wavelength provisioned for the optical channel network connection.
- OCHNC Dir—The direction provisioned for the optical channel network connection, either east to west or west to east.
- Circuit—The optical channel network connection circuit name

Step 3 Return to your originating procedure (NTP).

DLP-A417 View the BLSR Squelch Table

Purpose	This task allows you to view the BLSR squelch table for an ONS 15454 BLSR node. The table shows STSs that will be squelched for every isolated node. The STSs are replaced by the appropriate Path AIS to prevent misconnections. For more information about BLSR squelching, see Telcordia GR-1230.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

Step 1 In node view, click the **Provisioning > BLSR** tabs.

Step 2 Click the BLSR whose squelch table you want to view.

Step 3 Click **Squelch Table**. In the BLSR Squelch Table window you can view the following information:

- STS Number—shows the BLSR STS numbers. For 2-fiber BLSRs, the number of STSs is half the BLSR OC-N, for example, an OC-48 BLSR squelch table will show 24 STSs. For 4-fiber BLSRs, the number of STSs in the table is the same as the BLSR OC-N.

- West Source—if traffic is received by the node on its west span, the BLSR node ID of the source is displayed. (To view the BLSR node IDs for all nodes in the ring, click the **Ring Map** button.)
- West Dest—if traffic is sent on the node's west span, the BLSR node ID of the destination is displayed.
- East Source—if traffic is received by the node on its east span, the BLSR node ID of the source is displayed.
- East Dest—if traffic is sent on the node's east span, the BLSR node ID of the destination is displayed.



Note BLSR squelching is performed on STSs that carry STS circuits only. STSs carrying VT circuits or Ethernet circuits to/from E Series Ethernet cards provisioned in a multcard Ethergroup will not have entries in the squelch table.

Step 4 Return to your originating procedure (NTP).

NTP-A200 View Cross-Connect Card Resource Usage

Purpose	This procedure allows you to view the percentage of cross-connect card resources used by circuits that traverse or terminate at an ONS 15454. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	XC, XCVT, or XC10G cards must be installed.
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

- Step 1** Log into the node where you want to view the cross-connect card resource usage. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, go to Step 2.
- Step 2** Click the **Maintenance > Cross-Connect > Resource Usage** tabs.
- Step 3** In the Summary section of the Resources Usage tab, view the following information:
- STS-1 Paths—(XC, XCVT, XC10G) Provides the percent of the cross-connect card STS-1 path resources that are used. 288 STS-1 paths are available for XC or XCVT cards; 1152 STS-1 paths are available for XC10G cards.
 - VT Matrix Ports—(XCVT and XC10G) Provides the percent of the cross-connect card VT matrix ports that are used. Each port is one STS in size, and each can transport 28 VT1.5s. 24 VT matrix ports are available for the XCVT and XV10G cards.
 - VT Matrix—(XCVT and XC10G) Provides the percent of the VT matrix resources that are used. 672 are available, which is the number of VT matrix ports (24) multiplied by the number of VT1.5s in an STS (28).
- Step 4** In the VT Port Matrix Detail section, you can view details of the VT Matrix Port usage:
- Drop—Identifies the source slot, port, and STS.

- **Tunnel Name**—VT tunnels use VT matrix ports on the tunnel source and destination nodes (VT tunnels do not use matrix resources on pass-through nodes). If the port is used by a VT tunnel, the tunnel name will appear here.
- **% Uses**—Shows the percent of the matrix port that is used. Each matrix port can carry 28 VT1.5s, so for example, if one STS carries seven VT1.5 circuits, the matrix port will be 25% used.
- **Usage**—Shows the port usage. For example, if one STS carries seven VT1.5 circuits, the matrix port will show that 7 of 28 are used.

Step 5 As needed, you can perform the following actions:

- Click the **Refresh** button to see an updated XC Resources view. For example, if other users create circuits while you view the XC Resources tab, click **Refresh** to see the effects those circuits have on the VT matrix usage.
- Click the **Delete** button to delete STSs that use VT matrix resources but no longer carry VT circuits. This occasionally occurs when many VT circuits are added and deleted over a period of time. Stranded STSs appear as STSs with 0% usage in the VT Matrix Port Detail area. If stranded STSs appear, click the STS, then click **Delete** to free up VT matrix capacity.



Note VT tunnels may appear as STSs with 0% capacity used. These cannot be deleted. The Delete button requires a Superuser security level.

Stop. You have completed this procedure.

NTP-A151 Modify Circuit Characteristics

Purpose	This procedure edits or changes the properties of ONS 15454 circuits and DWDM optical channel network connections.
Tools/Equipment	None
Prerequisite Procedures	Circuits must exist on the network. See Chapter 8, “Create Circuits and VT Tunnels” for circuit creation procedures.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at a node on the network where you want to create a circuit. If you are already logged in, continue with Step 2.
- Step 2** As needed, complete the “DLP-A230 Change a Circuit State” task on page 11-13.
- Step 3** As needed, complete the “DLP-A231 Edit a Circuit Name” task on page 11-14.
- Step 4** As needed, complete the “DLP-A232 Change Active and Standby Span Color” task on page 11-15.
- Step 5** As needed, complete the “DLP-A233 Edit Path Protection Circuit Path Selectors” task on page 11-16.

Stop. You have completed this procedure.

DLP-A230 Change a Circuit State

Purpose	This task changes the state of a circuit. This task does not apply to DWDM (Software R4.5) nodes because optical channel network connections are always in IS state.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Click the **Circuits** tab.

Step 2 Click the circuit with the state you want to change.



Note You cannot edit the circuit state if the circuit is routed to nodes with a CTC software release older than Release 3.4. These circuits will automatically be in service (IS).


Step 3 From the Tools menu, choose **Circuits > Set Circuit State**.

Step 4 In the Set Circuit State dialog box (Figure 11-1) change the circuit state by choosing one of the following choices from the Target Circuit State drop-down menu:

- IS—Places the circuit in service
- OOS—Places the circuit out of service
- OOS-AINS—Places the circuit out of service, auto in service
- OOS-MT—Places the circuit out of service, maintenance

See Table 11-3 on page 11-6 for additional information about circuit states.

Figure 11-1 Changing Circuit State

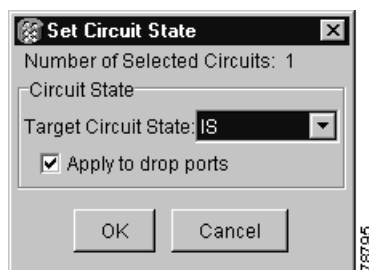

Step 5 If you want to apply the state to the circuit source and destination ports, check the **Apply to Drop Ports** check box.

Step 6 Click **OK**.



Note CTC will not change the state of the circuit source and destination port in certain circumstances. For example, if the circuit size is smaller than the port, for example, a VT1.5 circuit on an STS port, CTC will not change the port state from IS to OOS. If CTC cannot change the port state, a message is displayed and you must change the port state manually.

Step 7 Return to your originating procedure (NTP).

DLP-A231 Edit a Circuit Name

Purpose	This task edits a circuit or DWDM optical channel network connection name.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Click the **Circuits** tab.

Step 2 Click the circuit you want to rename, then click **Edit**.

Step 3 On the General tab, click the **Name** field and edit or rename the circuit. Names can be up to 48 alphanumeric and/or special characters.



Note If you will create a monitor circuit on this circuit, do not make the name longer than 44 characters because monitor circuits will add “_MON” (four characters) to the circuit name.

Step 4 Click **Apply**.

Step 5 From File menu, select **Close**.

Step 6 In the Circuits window, verify that the circuit was correctly renamed.

Step 7 Return to your originating procedure (NTP).

DLP-A232 Change Active and Standby Span Color

Purpose	This task changes the color of active (working) and standby (protect) circuit spans displayed on the detailed circuit map of the Edit Circuits window. By default, working spans are green and protect spans are purple. This task does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher


- Step 1** From the Edit menu, choose **Preferences**.
- Step 2** In the Preferences dialog box, click the **Circuit** tab.
- Step 3** Complete one or more of the following steps, as required:
- To change the color of the active (working) span, go to Step 4.
 - To change the color of the standby (protect) span, go to Step 5.
 - To return active and standby spans to their default colors, go to Step 6.
- Step 4** Change the color of the active span:
- a. Next to Active Span Color, click **Color**.
 - b. In the Pick a Color dialog box, click the color for the active span, or click **Reset** if you want the active span to display the last applied (saved) color.
 - c. Click **OK** to close the Pick a Color dialog box. If you want to change the standby span color, go to Step 5. If not, click **OK** to save the change and close the Preferences dialog box, or click **Apply** to save the change and keep the Preferences dialog box displayed.
- Step 5** Change the color of the standby span:
- a. Next to Standby Span Color, click **Color**.
 - b. On the Pick a Color dialog box, click the color for the standby span, or click **Reset** if you want the standby span to display the last applied (saved) color.
 - c. Click **OK** to save the change and close the Preferences dialog box, or click **Apply** to save the change and keep the Preferences dialog box displayed.
- Step 6** Return the active and standby spans to their default colors:
- a. From the Edit menu, choose **Preferences**.
 - b. In the Preferences dialog box, click the **Circuits** tab.
 - c. Click **Reset to Defaults** .
 - d. Click **OK** to save the change and close the Preferences dialog box, or click **Apply** to save the change and keep the Preferences dialog box displayed.
- Step 7** Return to your originating procedure (NTP).
-

DLP-A233 Edit Path Protection Circuit Path Selectors

Purpose	This task changes the path protection signal fail and signal degrade thresholds, the reversion and reversion time, and the PDI-P settings for one or more path protection circuits. This task does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A44 Provision Path Protection Nodes, page 6-34 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Click the **Circuits** tab.
- Step 2** On the Circuits tab, click the path protection circuit(s) you want to edit. To change the settings for multiple circuits, press the **Shift** key (to choose adjoining circuits) or the **Ctrl** key (to choose non-adjoining circuits) and click each circuit you want to change.
- Step 3** From the Tools menu, choose **Circuits > Set Path Selector Attributes**.
- Step 4** In the Path Selectors Attributes dialog box (Figure 11-2), edit the following path protection selectors, as needed:
- **Revertive**—If checked, traffic reverts to the working path when conditions that diverted it to the protect path are repaired. If not checked, traffic does not revert.
 - **Reversion Time (Min)**—If Revertive is checked, sets the amount of time that will elapse before traffic reverts to the working path. The range is 0.5 to 12 minutes in 0.5 minute increments.
 - **SF Ber Level**—Sets the path protection signal failure BER threshold (STS circuits only).
 - **SD Ber Level**—Sets the path protection signal degrade BER threshold (STS circuits only).
 - **PDI-P**—When checked, traffic switches if an STS payload defect indication is received (STS circuits only).

Figure 11-2 Editing Path Protection Path Selectors

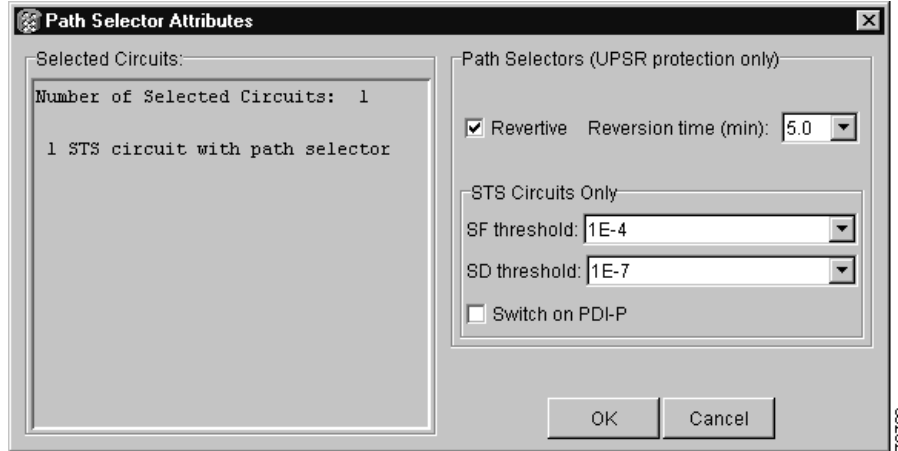

- Step 5** Click **OK** and verify that the changed values are correct on the Circuits window.
- Step 6** Return to your originating procedure (NTP).

DLP-A263 Edit Path Protection Dual Ring Interconnect Circuit Hold-Off Timer

Purpose	This task changes the amount of time a path selector switch is delayed for circuits routed on path protection dual ring interconnect (DRI) topology. In DRIs, switching contention might occur depending upon the relative switching speed of the path selector and the transmission delay on the alternative routes. The hold-off time (HOT) allows you to change switch times to prevent the switching contention. This task does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A44 Provision Path Protection Nodes, page 6-34 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note Cisco recommends that you set the DRI port HOT value to zero and the circuit path selector HOT value to a number equal to or greater than zero.

- Step 1** Click the **Circuits** tab.
- Step 2** Click the Path Protection circuit you want to edit, then click **Edit**.
- Step 3** In the Edit Circuit window, click the **Path Protection Selectors** tab.

- Step 4** Create a hold-off time for the circuit source and destination ports:
- In the Holder Off Timer area, double-click the cell of the circuit source port (top row), then type the new hold-off time. The range is 0 to 10,000 ms in increments of 100.
 - In the Hold-Off Timer area, double-click the cell of the circuit destination port (bottom row), then type the hold-off time entered in Step a.
- Step 5** Click **Apply**, then close the Edit Circuit window by choosing **Close** from the File menu.
- Step 6** Return to your originating procedure (NTP).
-

NTP-A416 Convert a CTC Circuit to TL1 Cross-Connects

Purpose	This procedure converts CTC circuits to a set of TL1 cross-connects, which enables you to repair a missing cross-connect or change the cross-connect(s) using the TL1-like circuit option during circuit creation. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher




Note You can only use this procedure with DS-1, DS-3, or OC-N circuits. You cannot use the procedure with VT tunnels, VT aggregation points, E-Series Ethernet card circuits, and DWDM optical channel network connections.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at a node on the network where you want to convert the CTC circuits. If you are already logged in, continue with Step 2.
- Step 2** From the View menu, choose **Go to Network View**.
- Step 3** Click the **Circuits** tab, then choose the CTC circuit(s) that you want to convert to TL1 cross-connects. The circuit(s) must have an INCOMPLETE or ACTIVE status.
- Step 4** From the Tools menu, choose **Circuits > Convert CTC Circuit to TL1 Cross-Connects**.
- Step 5** In the Convert to TL1 Cross Connect dialog box, click **YES**.
- The Convert to TL1 Cross Connect Results dialog box displays the results of the conversion. If any circuits could not be converted, those circuits are listed.
- Step 6** In the Convert to TL1 Cross Connect Results dialog box, click **OK**.
- If the circuit you selected had an INCOMPLETE status, its status will not change. If you selected an ACTIVE (complete) circuit, its status will change to UPGRADABLE.
- Step 7** If you are repairing a circuit, complete the circuit creation procedure in Chapter 8, “Create Circuits and VT Tunnels,” appropriate to the circuit you are repairing to replace or repair the circuit cross-connects. On the Circuit Creation wizard, shown in Figure 11-3, check **Create cross-connects only (TL1-like)**.

After you repair or replace all missing cross-connects, CTC automatically merges them and the circuit status changes to UPGRADABLE.

Figure 11-3 Choosing the Cross-Connects Only Option

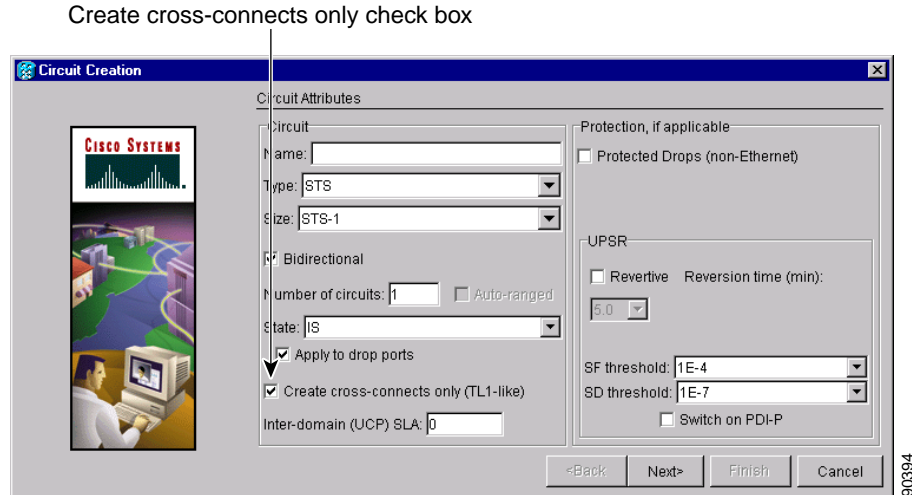

Step 8 To upgrade the repaired circuit to a CTC circuit, go to the “NTP-A417 Upgrade TL1 Cross-Connects to CTC Circuits” procedure on page 11-19.

Stop. You have completed this procedure.

NTP-A417 Upgrade TL1 Cross-Connects to CTC Circuits

Purpose	This procedure converts a series of cross-connects displayed as UPGRADABLE in the CTC Circuits window to an ACTIVE CTC circuit. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	TL1-created or CTC-created TL1-like cross-connects must exist on the network.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at a node on the network where you want to upgrade the TL1-created or CTC-created TL1-like cross-connects. If you are already logged in, continue with Step 2.

Step 2 From the View menu, choose **Go to Network View**.

Step 3 Click the **Circuits** tab, then choose one or more circuits with an UPGRADABLE status. These circuits contain a series of cross-connects that are linked together to form a circuit path. The cross-connects may have been created with TL1 or with CTC using the TL1-like cross-connects option.

Step 4 From the Tools menu, choose **Circuits > Upgrade TL1 Cross-Connects to CTC Circuits**.

Step 5 In the Upgrade Circuits dialog box, click **OK**.

The circuit status changes to ACTIVE.

Step 6 In the Circuit Upgrade Results dialog box, click **OK**.

Stop. You have completed this procedure.

NTP-A152 Delete Circuits

Purpose	This procedure deletes circuits or DWDM optical channel network connections.
Tools/Equipment	None
Prerequisite Procedures	Circuits must exist on the network. See Chapter 8, “Create Circuits and VT Tunnels” for circuit creation procedures.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Deleting circuits can be service affecting and should be performed during a maintenance window.

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at a node on the network where you want to delete the circuit.. If you are already logged in, continue with Step 2.

Step 2 Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Step 3 Investigate all network alarms and resolve any problems that may be affected by the circuit deletion. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.

Step 4 Verify that traffic is no longer carried on the circuit and that the circuit can be safely deleted.

Step 5 Click the **Circuits** tab.

Step 6 Choose the circuit(s) you want to delete, then click **Delete**.

Step 7 In the Delete Circuits confirmation dialog box, check one or both of the following, as needed:

- **Set drop ports to OOS**—puts the circuit source and destination ports out of service if the circuit is the same size as the port or is the only circuit using the port. If the circuit is not the same size as the port or the only circuit using the port, CTC will not change the port state.
- **Wait for feedback on drop ports**—if checked, CTC will display a confirmation dialog indicating whether all circuit source/destination ports were placed in OOS state. During this time, you cannot perform other CTC functions. If you are deleting many circuits, waiting for the port OOS confirmation may take a few minutes. Circuits are deleted whether or not this check box is checked.

Step 8 Click **Yes** to confirm the deletion. If you did not check “Wait for feedback on drop ports,” the Circuits window appears. If you checked the check box, the Circuits Window may take a few minutes to appear.

Step 9 Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Stop. You have completed this procedure.

NTP-A78 Create a Monitor Circuit

Purpose	This procedure creates a monitor circuit that monitors traffic on primary, bidirectional circuits. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	Bidirectional (2-way) circuits must exist on the network. See Chapter 8, “Create Circuits and VT Tunnels” for circuit creation procedures.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note Monitor circuits cannot be used with EtherSwitch circuits.



Note For unidirectional circuits, create a drop to the port where the test equipment is attached.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at a node on the network where you will create the monitor circuit. If you are already logged in, continue with Step 2.
- Step 2** From the View menu, choose **Go to Network View**.
- Step 3** Click the **Circuits** tab.
- Step 4** Choose the bidirectional (2-way) circuit that you want to monitor and double-click it (or click **Edit**).
- Step 5** Verify that the circuit name is no more than 44 characters. Monitor circuits append a “_MON” to the circuit name. If the name is longer than 44 characters, edit the name in the Name field, then click **Apply**.
- Step 6** In the Edit Circuit window, click the **Monitors** tab.
The Monitors tab displays ports that you can use to monitor the circuit.



Note The Monitor tab is only available when the circuit has an ACTIVE status.

- Step 7** On the Monitors tab, choose the monitor source port. The monitor circuit will display traffic coming into the node at the port you choose.



Note In Figure 11-4, you would choose either the DS1-14 card (to test circuit traffic entering Node 2 on the DS1-14) or the OC-N card at Node 1 (to test circuit traffic entering Node 1 on the OC-N card).

- Step 8** Click **Create Monitor Circuit**.

- Step 9** In the Circuit Destination section of the Circuit Creation wizard, choose the destination node, slot, port, STS, VT, or DS1 for the monitored circuit.




Note In the Figure 11-4 example, the monitor circuit destination is Port 2 on the EC1-12 card.

- Step 10** Click **Next**.
- Step 11** In the Circuit Routing Preferences area, review the monitor circuit information. If you want the monitor circuit routed on a BLSR protection channel, click **Protection Channel Access**.
- Step 12** Click **Finish**.
- Step 13** In the Edit Circuit window, click **Close**. The new monitor circuit appears on the Circuits tab.

Figure 11-4 shows a sample monitor circuit setup. VT1.5 traffic is received by Port 1 of the EC1-12 card at Node 1. To monitor the VT1.5 traffic, test equipment is plugged into Port 2 of the EC1-12 card and a monitor circuit to Port 2 is provisioned in CTC. (Circuit monitors are one-way.) This example assumes circuits have been created.

Figure 11-4 VT1.5 Monitor Circuit Received at an EC1-12 Port

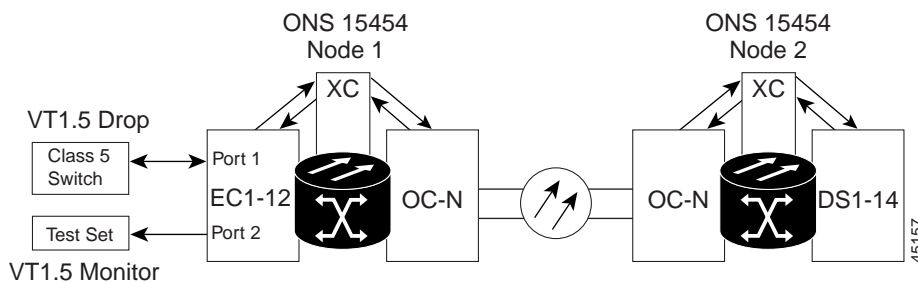

Stop. You have completed this procedure.

NTP-A79 Create a J1 Path Trace

Purpose	This procedure creates a repeated, fixed-length string of characters used to monitor interruptions or changes to circuit traffic. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	ONS 15454 cards capable of transmitting and/or receiving path trace must be installed. See Table 11-4 on page 11-24 for a list of cards.
Prerequisite Procedures	Path trace can only be provisioned on OC-N (STS) circuits. See Chapter 8, “Create Circuits and VT Tunnels” for OC-N circuit creation procedures.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note You cannot create a J1 path trace on a TL1-like circuit.

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at a node on the network where you will create the path trace. If you are already logged in, continue with Step 2.
- Step 2** Complete the following tasks as needed:
- As needed, complete the “DLP-A264 Provision Path Trace on Circuit Source and Destination Ports” task on page 11-23.
 - As needed, complete the “DLP-A137 Provision Path Trace on OC-N Ports” task on page 11-28.
- Stop. You have completed this procedure.**
-

DLP-A264 Provision Path Trace on Circuit Source and Destination Ports

Purpose	This task creates a path trace on STS circuit source ports and destination ports. This task does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	ONS 15454 cards capable of transmitting and receiving path trace must be installed at the circuit source and destination ports. See Table 11-4 on page 11-24 for a list of cards.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note This procedure assumes you are setting up path trace on a bidirectional circuit and setting up transmit strings at the circuit source and destination.

-
- Step 1** Click the **Circuits** tab.
- Step 2** For the STS circuit you want to monitor, verify that the source and destination ports are on a card that can transmit and receive the path trace string. See Table 11-4 for a list of cards.

Table 11-4 Path-Trace-Capable ONS 15454 Cards


J1 Function	Cards
Transmit and Receive	DS1-14 DS1N-14 DS3-12E DS3N-12E DS3XM-6 G1000-4 M400T-12 M4000-2
Receive Only	EC1-12 OC3 IR 4/STM1 SH 1310 OC3 IR 4/STM1 SH 1310-8 OC12/STM4-4 OC48 IR/STM16 SH AS 1310 OC48 LR/STM16 LH AS 1550 OC192 SR/STM64 IO 1310 OC192 LR/STM64 LH 1550 OC192 IR/STM SH 1550 ML100T ML1000



Note If neither port is on a transmit/receive card, you will not be able to complete this procedure. If one port is on a transmit/receive card and the other is on a receive-only card, you can set up the transmit string at the transmit/receive port and the receive string at the receive-only port, but you will not be able to transmit in both directions.

- Step 3** Choose the STS circuit you want to trace, then double-click it (or click **Edit**).
- Step 4** In the Edit Circuit window, click the **Show Detailed Map** check box at the bottom of the window. A detailed map of the source and destination ports is displayed.
- Step 5** Provision the circuit source transmit string:
- a. On the detailed circuit map right-click the circuit source port (the square on the left or right of the source node icon) and choose **Edit J1 Path Trace (port)** from the shortcut menu. Figure 11-5 shows an example.

Figure 11-5 Selecting the Edit Path Trace Option

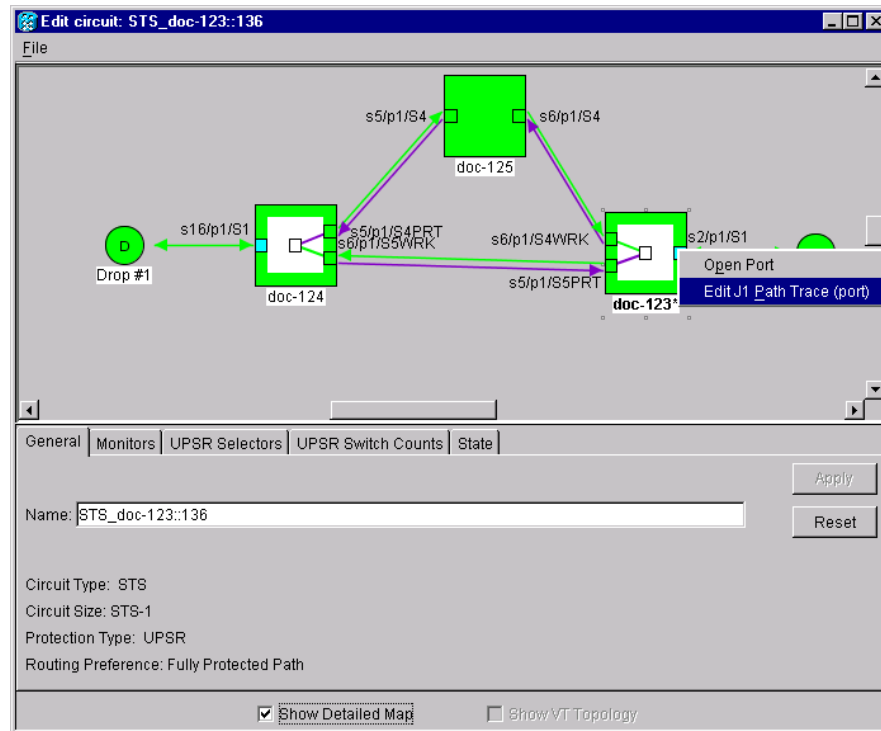

- b. In the New Transmit String field, enter the circuit source transmit string. Enter a string that makes the source port easy to identify, such as the node IP address, node name, circuit name, or another string. If the New Transmit String field is left blank, the J1 transmits a string of null characters.
- c. Click **Apply**, then click **Close**.

Step 6 Provision the circuit destination transmit string:

- a. On the detailed circuit map, right-click the circuit destination port and choose **Edit Path Trace** from the shortcut menu (Figure 11-5) .
- b. In the New Transmit String field, enter the string that you want the circuit destination to transmit. Enter a string that makes the destination port easy to identify, such as the node IP address, node name, circuit name, or another string. If the New Transmit String field is left blank, the J1 transmits a string of null characters.
- c. Click **Apply**.

Step 7 Provision the circuit destination expected string:

- a. On the Circuit Path Trace window, enable the path trace expected string by choosing **Auto** or **Manual** from the Path Trace Mode drop-down menu:
 - Auto—The first string received from the source port is automatically provisioned as the current expected string. An alarm is raised when a string that differs from the baseline is received.
 - Manual—The string entered in the Current Expected String field is the baseline. An alarm is raised when a string that differs from the Current Expected String is received.
- b. If you set the Path Trace Mode field to Manual, enter the string that the circuit destination should receive from the circuit source in the New Expected String field. If you set Path Trace Mode to Auto, skip this step.

- c. Click the **Disable AIS and RDI if TIM-P is detected** check box if you want to suppress the alarm indication signal (AIS) and RDI when the STS Path Trace Identifier Mismatch Path (TIM-P) alarm is displayed. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for descriptions of alarms and conditions.
- d. (Check box visibility depends on card selection) Click the **Disable AIS on C2 Mis-Match** check box if you want to suppress the Alarm Indication Signal when a C2 mis-match occurs.
- e. Click **Apply**, then click **Close**.

Step 8 Provision the circuit source expected string:

- a. In the Edit Circuit window (with Show Detailed Map chosen, see Figure 11-5) right-click the circuit source port and choose **Edit Path Trace** from the shortcut menu.
- b. In the Circuit Path Trace window, enable the path trace expected string by choosing **Auto** or **Manual** from the Path Trace Mode drop-down menu:
 - Auto—Uses the first string received from the port at the other path trace end as the baseline string. An alarm is raised when a string that differs from the baseline is received.
 - Manual—Uses the Current Expected String field as the baseline string. An alarm is raised when a string that differs from the Current Expected String is received.
- c. If you set the Path Trace Mode field to Manual, enter the string that the circuit source should receive from the circuit destination in the New Expected String field. If you set Path Trace Mode to Auto, skip this step.
- d. Click the **Disable AIS and RDI if TIM-P is detected** check box if you want to suppress the alarm indication signal (AIS) and RDI when the STS Path Trace Identifier Mismatch Path (TIM-P) alarm is displayed. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for descriptions of alarms and conditions.
- e. (Check box visibility depends on card selection) Click the **Disable AIS on C2 Mis-Match** check box if you want to suppress the Alarm Indication Signal when a C2 mis-match occurs.
- f. Click **Apply**.

Step 9 After you set up the path trace, the received string is displayed in the Received field on the path trace setup window. Figure 11-6 shows an example. The following options are available:

- Click **Hex Mode** to display path trace in hexadecimal display. The button name changes to ASCII Mode. Click it to return the path trace to ASCII display.
- Click the **Reset** button to reread values from the port.
- Click **Default** to return to the path trace default settings (Path Trace Mode is set to Off and the New Transmit and New Expected Strings are null).




Caution

Clicking Default will generate alarms if the port on the other end is provisioned with a different string.

The Expect and Receive strings are updated every few seconds if the Path Trace Mode field is set to Auto or Manual.


Step 10 Click **Close**.

Figure 11-6 Setting Up a Path Trace

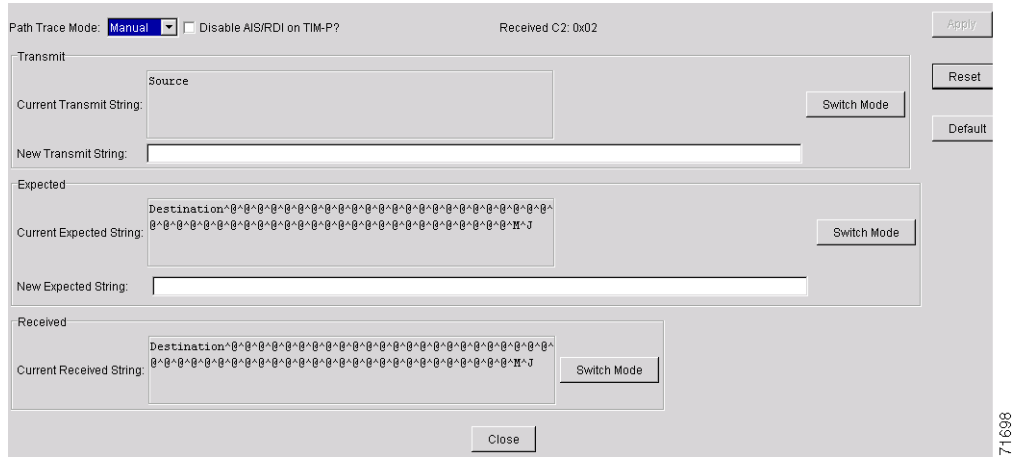

When you display the detailed circuit window, path trace is indicated by an M (manual path trace) or an A (automatic path trace) at the circuit source and destination ports. Figure 11-7 shows an example.

Figure 11-7 Detailed Circuit Window With Manual Expected String Enabled

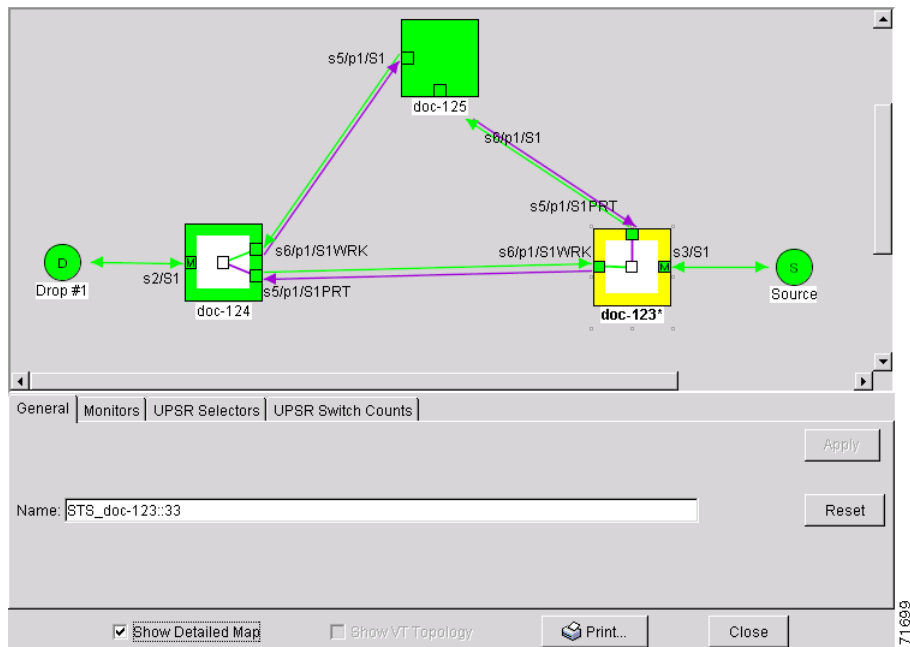

Step 11 Return to your originating procedure (NTP).

DLP-A137 Provision Path Trace on OC-N Ports

Purpose	This task monitors a path trace on OC-N ports within the circuit path. This task does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	The OC-N ports you want to monitor must be on OC-N cards capable of receiving path trace. See Table 11-4 on page 11-24.
Prerequisite Procedures	DLP-A264 Provision Path Trace on Circuit Source and Destination Ports, page 11-23 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Display the node where path trace was provisioned on the circuit source and destination ports.
- Step 2** Click **Circuits**.
- Step 3** Choose the STS circuit that has path trace provisioned on the source and destination ports, then click **Edit**.
- Step 4** In the Edit Circuit window, click the Show Detailed Map check box at the bottom of the window. A detailed circuit graphic showing source and destination ports is displayed.
- Step 5** In the detailed circuit map right-click the circuit OC-N port (the square on the left or right of the source node icon) and choose **Edit Path Trace** from the shortcut menu.



Note The OC-N port must be on a receive-only card listed in Table 11-4 on page 11-24. If not, the Edit Path Trace menu item will not display.

- Step 6** In the Circuit Path Trace window, enable the path trace expected string by choosing **Auto** or **Manual** from the Path Trace Mode drop-down menu:
- **Auto**—Uses the first string received from the port at the other path trace end as the current expected string. An alarm is raised when a string that differs from the baseline is received. For OC-N ports, Auto is recommended because Manual mode requires you to trace the circuit on the Edit Circuit window to determine whether the port is the source or destination path.
 - **Manual**—Uses the Current Expected String field as the baseline string. An alarm is raised when a string that differs from the Current Expected String is received.
- Step 7** If you set the Path Trace Mode field to Manual, enter the string that the OC-N port should receive in the New Expected String field. To do this, trace the circuit path on the detailed circuit window to determine whether the port is in the circuit source or destination path, then set the New Expected String to the string transmitted by the circuit source or destination. If you set the Path Trace Mode field to Auto, skip this step.
- Step 8** Click **Apply**, then click **Close**.
- Step 9** Return to your originating procedure (NTP).
-



Change Node Settings



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This chapter explains how to modify node provisioning for the Cisco ONS 15454. To provision a new node, see Chapter 4, "Turn Up Node." To change default network element settings and to view a list of those settings, refer to the *Cisco ONS 15454 Network Element Defaults Handbook* for Software R4.1 or R4.5.



Note

Except where noted, procedures and tasks in this chapter apply to both DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.

Before You Begin

Before performing the following procedures, investigate all alarms and clear any trouble conditions. Refer to the *Cisco ONS 15454 Troubleshooting Guide* as necessary.

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A81 Change Node Management Information, page 12-2—As needed, complete this procedure to change node name, contact information, latitude, longitude, date, time, and login legal disclaimer.
2. NTP-A201 Change CTC Network Access, page 12-4—As needed, complete this procedure to change the IP address, default router, subnet mask, network configuration settings, and static routes.
3. NTP-A226 Modify DWDM Node Settings, page 12-8—As needed, complete this procedure to modify DWDM node settings.
4. NTP-A202 Customize the CTC Network View, page 12-11—As needed, complete this procedure to create domains and customize the appearance of the network map, including specifying a different default map, creating domains, selecting your own map or image, and changing the background color.
5. NTP-A203 Modify or Delete Card Protection Settings, page 12-16—Complete as needed.
6. NTP-A204 Delete a SONET DCC Termination, page 12-22—Complete as needed.

7. NTP-A423 Delete a DWDM OSC Termination, page 12-23—Complete as needed.
8. NTP-A85 Change Node Timing, page 12-23—Complete as needed.
9. NTP-A205 Modify Users and Change Security, page 12-26—As needed, complete this procedure to make changes to user settings, including security level and security policies, and to delete users.
10. NTP-A87 Change SNMP Settings, page 12-32—As needed, complete this procedure to modify the node SNMP settings.

NTP-A81 Change Node Management Information

Purpose	Use this procedure to change node name, date, time, contact information, or the login legal disclaimer.
Tools/Equipment	None
Prerequisite Procedures	NTP-A25 Set Up Name, Date, Time, and Contact Information, page 4-6
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Click the **Provisioning > General** tabs.
- Step 4** Complete the “DLP-A140 Change the Node Name, Date, Time, and Contact Information” task on page 12-2, as needed.
- Step 5** Complete the “DLP-A265 Change the Login Legal Disclaimer” task on page 12-3, as needed.
- Step 6** After confirming the changes, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Stop. You have completed this procedure.**
-

DLP-A140 Change the Node Name, Date, Time, and Contact Information

Purpose	Use this procedure to change basic information such as node name, date, time, and contact information.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note Changing the date, time, or time zone may invalidate the node’s performance monitoring counters.

Step 1 In node view, click the **Provisioning > General** tabs.

Step 2 Change any of the following:

- General: Node Name
- General: Contact
- Location: Latitude
- Location: Longitude
- Location: Description



Note To see changes to longitude or latitude on the network map, you must go to network view and right-click the specified node, then click Reset Node Position.

- Time: Use SNTP Server
- Time: Date (M/D/Y)
- Time: Time (H:M:S)
- Time: Time Zone
- Time: Use Daylight Saving Time

See the “NTP-A25 Set Up Name, Date, Time, and Contact Information” procedure on page 4-6 for detailed field descriptions.

Step 3 Click **Apply**. Confirm that the changes appear; if not, repeat the task.

Step 4 Return to your originating procedure (NTP).

DLP-A265 Change the Login Legal Disclaimer

Purpose	Use this task to modify the legal disclaimer statement shown in the CTC login dialog box so that it will display customer-specific information when users log into the network.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

Step 1 In node view, click the **Provisioning > Security > Legal Disclaimer > HTML** tabs.

Step 2 The existing statement is a default, non-customer-specific disclaimer. If you want to edit this statement with specifics for your company, you can change the text. You can also use the following HTML commands to format the text:

- `` Begins boldface font
- `` Ends boldface font

- `<center>` Aligns type in the center of the window
- `</center>` Ends the center alignment
- `<font=n, where n = point size>` Changes the font to the new size
- `` Ends the font size command
- `<p>` Creates a line break
- `<sub>` Begins subscript
- `</sub>` Ends subscript
- `<sup>` Begins superscript
- `</sup>` Ends superscript
- `<u>` Starts underline
- `</u>` Ends underline

Step 3 If you want to preview your changed statement and formatting, click the **Preview** subtab.

Step 4 Click **Apply**.

Step 5 Return to the “NTP-A81 Change Node Management Information” procedure on page 12-2.

NTP-A201 Change CTC Network Access

Purpose	Use this procedure to change essential network information, including IP settings, static routes, and OSPF options.
Tools/Equipment	None
Prerequisite Procedures	NTP-A169 Set Up CTC Network Access, page 4-8
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

Additional ONS 15454 networking information and procedures, including IP addressing examples, static route scenarios, Open Shortest Path First (OSPF) protocol, and routing information protocol options are provided in the IP Networking section of the *Cisco ONS 15454 Reference Manual*.

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.

Step 2 Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Step 3 Perform any of the following tasks as needed:

- DLP-A266 Change IP Settings, page 12-5
- DLP-A142 Modify a Static Route, page 12-6
- DLP-A143 Delete a Static Route, page 12-6
- DLP-A144 Disable OSPF, page 12-7
- DLP-A250 Set Up or Change Open Shortest Path First Protocol, page 4-15.

- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
Stop. You have completed this procedure.
-

DLP-A266 Change IP Settings

Purpose	Use this task to change the IP address, subnet mask, default router, DHCP access, firewall IOP listener port, LCD IP display, and proxy server settings.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser



Caution

Changing the node IP address, subnet mask, or IOP listener port causes the TCC+/TCC2 cards to reboot. If Ethernet circuits using spanning tree protocol originate or terminate on E Series Ethernet cards installed in the node, circuit traffic will be lost for several minutes while the spanning trees reconverge. Other circuits are not affected by TCC2 reboots.

- Step 1** In node view, click the **Provisioning > Network > General** tabs.

- Step 2** Change any of the following:

- IP Address
- Suppress CTC IP Display
- LCD IP Setting
- Default Router
- Subnet Mask Length
- Forward DHCP Request To
- TCC CORBA (IOP) Listener Port
- Gateway Settings

See the “DLP-A249 Provision IP Settings” task on page 4-9 for detailed field descriptions.

- Step 3** Click **Apply**.

If you changed a network field that will cause the node to reboot—IP address, default router, subnet mask, TCC CORBA Listener Port, the Change Network Configuration confirmation dialog box appears. If you changed a gateway setting, a confirmation appropriate to the gateway field appears.

- Step 4** If a confirmation dialog box appears, click **Yes**.

If you changed an IP address, subnet mask length, or TCC CORBA (IOP) Listener Port, both ONS 15454 TCC+/TCC2 cards will reboot, one at a time. A TCC+/TCC2 reboot causes a temporary loss of connectivity to the node, but traffic is unaffected.

- Step 5** Confirm that the changes appear on the Provisioning > Network > General tab. If the changes do not appear, repeat the task. Refer to the *Cisco ONS 15454 Troubleshooting Guide*, as necessary.

Step 6 Return to your originating procedure (NTP).

DLP-A142 Modify a Static Route

Purpose	Use this task to modify a static route on an ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > Network** tabs.

Step 2 Click the **Static Routing** tab.

Step 3 Click the static route you want to edit.

Step 4 Click **Edit**.

Step 5 In the Edit Selected Static Route dialog box, enter the following:

- Mask
- Next Hop
- Cost

See the “DLP-A65 Create a Static Route” task on page 4-14 for detailed field descriptions.

Step 6 Click **OK**.

Step 7 Return to your originating procedure (NTP).

DLP-A143 Delete a Static Route

Purpose	Use this task to delete an existing static route on an ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > Network > Static Routing** tabs.

Step 2 Click the static route you want to delete.

Step 3 Click **Delete**. A confirmation dialog box appears.

Step 4 Click **Yes**.


Step 5 Return to your originating procedure (NTP).

DLP-A144 Disable OSPF

Purpose	Use this task to disable the Open Shortest Path First (OSPF) routing protocol process for an ONS 15454 LAN.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning** > **Network** > **OSPF** tabs (Figure 12-1). The OSPF subtab has several options.

Figure 12-1 Disabling OSPF on the ONS 15454

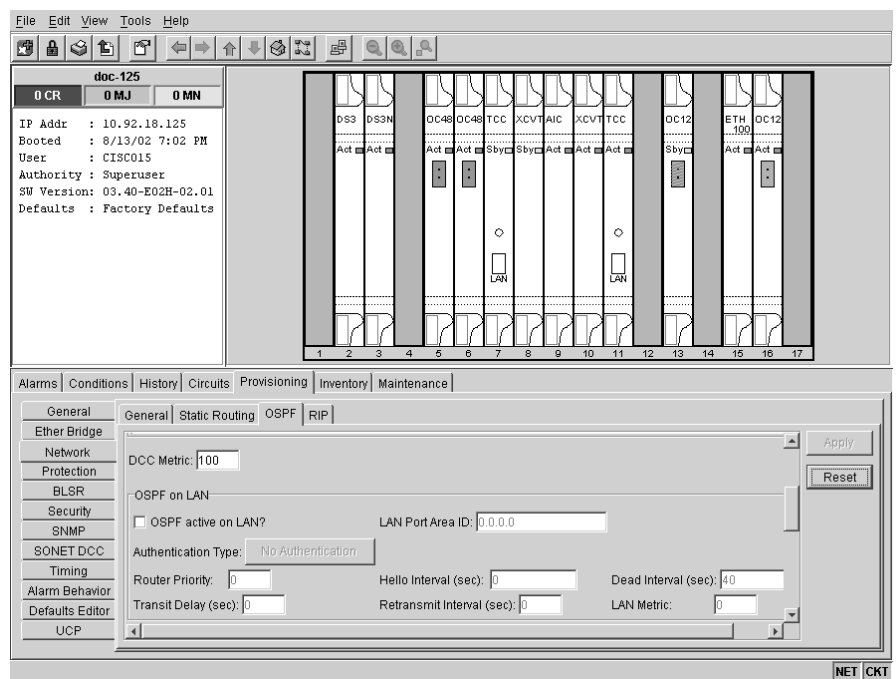

Step 2 In the OSPF on LAN area, uncheck the **OSPF active on LAN** check box.

Step 3 Click **Apply**. Confirm that the changes appear; if not, repeat the task.

Step 4 Return to your originating procedure (NTP).

NTP-A226 Modify DWDM Node Settings

Purpose	This procedure sets the network and system settings and provisions the node power levels on ONS 15454s that are provisioned for DWDM. This procedure applies to DWDM (Software R4.5) nodes only.
Tools/Equipment	A node provisioning plan prepared by Cisco MetroPlanner is required.
Prerequisite Procedures	You must use Cisco MetroPlanner or another DWDM network calculation tool to prepare a configuration file for your network. NTP-A222 Provision the DWDM Node, page 5-3
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser



Caution

DWDM settings are normally not changed at the individual node level. Any change to a DWDM node setting usually requires recalculation of power and attenuation levels at other nodes on the DWDM network. Do not change a DWDM node setting unless you are prepared to modify the settings of other DWDM nodes on the network.

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Perform one of the following tasks as appropriate:
- DLP-A408 Modify DWDM Hub Node Settings, page 12-9.
 - DLP-A409 Modify DWDM Terminal Node Settings, page 12-9.
 - DLP-A410 Modify DWDM OADM Node Settings, page 12-10.
 - DLP-A411 Modify DWDM Line Node Settings, page 12-10.
- Step 3** Click the **Connections** tab, then click the **Calculate Connections** button.
- Step 4** Verify that every connection matches the connections specified by the Cisco MetroPlanner design plan. If a connection is not correct:
- a. Delete the connection. See the “DLP-A405 Delete a DWDM Connection” task on page 5-11.
 - b. Uninstall the fibers from the incorrect slot/unit/port.
 - c. Connect the fiber to the correct slot/unit/port.
 - d. Create a new connection. See the “DLP-A406 Create a DWDM Connection” task on page 5-11.
- Step 5** Click the **Port Status** tab. Click **Launch ANS**. ANS (Automatic Node Setup) adjusts the values of the variable optical attenuators (VOAs) to equalize the per channel power at the amplifier level.
- Stop. You have completed this procedure.**
-

DLP-A408 Modify DWDM Hub Node Settings

Purpose	This task modifies the network and system types and sets the channel power levels for a DWDM hub node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** In node view, click the **Provisioning > WDS-ANS > Provisioning** tabs.
- Step 2** Complete the fields shown in Table 5-1 on page 5-5.
- Step 3** Click **Apply**.
- Step 4** Return to your originating procedure (NTP).
-

DLP-A409 Modify DWDM Terminal Node Settings

Purpose	This task provisions the network and system types and power levels for a DWDM terminal node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** In node view, click the **Provisioning > WDS-ANS > Provisioning** tabs.
- Step 2** Complete the fields shown in Table 5-3 on page 5-6.
- Step 3** Click **Apply**.
- Step 4** Return to your originating procedure (NTP).
-

DLP-A410 Modify DWDM OADM Node Settings

Purpose	This task provisions the network and system types and power levels for a DWDM optical add/drop module (OADM) node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

-
- Step 1** In node view, click the **Provisioning > WDS-ANS > Provisioning** tabs.
- Step 2** Complete the fields shown in Table 5-4 on page 5-7.
- Step 3** Click **Apply**.
- Step 4** Return to your originating procedure (NTP).
-

DLP-A411 Modify DWDM Line Node Settings

Purpose	This task modifies the network and system types for a DWDM line node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

-
- Step 1** In node view, click the **Provisioning > WDS-ANS > Provisioning** tabs.
- Step 2** Complete the fields shown in Table 5-6 on page 5-10.
- Step 3** Click **Apply**.
- Step 4** Return to your originating procedure (NTP).
-

NTP-A202 Customize the CTC Network View

Purpose	Use this procedure to modify the CTC network view, including grouping nodes into domains for a less-cluttered display, changing the network view background color, and using a custom image for the network view background.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.

Step 2 Complete the following tasks, as needed:

- DLP-A145 Change the Network View Background Color, page 12-11
- DLP-A267 Change the Default Network View Background Map, page 12-12
- DLP-A268 Apply a Custom Network View Background Map, page 12-13
- DLP-A148 Create Domain Icons, page 12-14
- DLP-A149 Manage Domain Icons, page 12-14
- DLP-A269 Enable Dialog Box Do-Not-Display Option, page 12-15

Stop. You have completed this procedure.

DLP-A145 Change the Network View Background Color

Purpose	Use this task to change the network view background color or the domain view background color (the area displayed when you open a domain).
Tools/Equipment	None
Prerequisite procedures	DLP-A60 Log into CTC, page 3-26
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher



Note If you modify background colors, the change is stored in your CTC user profile on the computer. The change does not affect other CTC users.

Step 1 From the View menu choose **Go to Network View**.

Step 2 If you want to change a domain background, double-click the domain. If not, continue with Step 3.

- Step 3** Right-click the network view or domain map area and choose **Set Background Color** from the shortcut menu.
 - Step 4** In the Choose Color dialog box, select a background color.
 - Step 5** Click **OK**.
 - Step 6** Return to your originating procedure (NTP).
-

DLP-A267 Change the Default Network View Background Map

Purpose	Use this task to change the default map of the CTC network view.
Tools/Equipment	None
Prerequisite procedures	DLP-A60 Log into CTC, page 3-26
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note If you modify the background image, the change is stored in your CTC user profile on the computer. The change does not affect other CTC users.

- Step 1** From the View menu choose **Go to Network View**.
 - Step 2** From the Edit menu, choose **Preferences**.
 - Step 3** In the Preferences dialog box, click the **Map** tab, then check the **Use Default Map** check box if it is not already selected.
 - Step 4** Click the **Default Maps** field and choose a default map from the drop-down menu. Map choices are: Germany, Japan, Netherlands, South Korea, United Kingdom, and the United States (default).
 - Step 5** Click **Apply**. The new network map is displayed.
 - Step 6** Click **OK**.
 - Step 7** If the ONS 15454 icons are not visible, right-click the network view and choose **Zoom Out**. (Repeat until all the ONS 15454 icons are visible. (You can also choose **Fit Graph to Window**.)
 - Step 8** If you need to reposition the node icons, drag and drop them one at a time to a new location on the map.
 - Step 9** If you want to change the magnification of the icons, right-click the network view and choose **Zoom In**. Repeat until the ONS 15454 icons are displayed at the magnification you want.
 - Step 10** Return to your originating procedure (NTP).
-

DLP-A268 Apply a Custom Network View Background Map

Purpose	Use this task to change the background image or map of the CTC network view.
Tools/Equipment	None
Prerequisite procedures	DLP-A60 Log into CTC, page 3-26
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher



Note

You can replace the network view background image with any JPEG or GIF image that is accessible on a local or network drive. If you apply a custom background image, the change is stored in your CTC user profile on the computer. The change does not affect other CTC users.

-
- Step 1** From the View menu choose **Go to Network View**.
 - Step 2** Right-click the network or domain map and choose **Set Background Image**.
 - Step 3** Click **Browse**. Navigate to the graphic file you want to use as a background.
 - Step 4** Select the file. Click **Open**.
 - Step 5** Click **Apply** and then click **OK**.
 - Step 6** If the ONS 15454 icons are not visible, right-click the network view and choose **Zoom Out**. Repeat this step until all the ONS 15454 icons are visible.
 - Step 7** If you need to reposition the node icons, drag and drop them one at a time to a new location on the map.
 - Step 8** If you want to change the magnification of the icons, right-click the network view and choose **Zoom In**. Repeat until the ONS 15454 icons are displayed at the magnification you want.
 - Step 9** Return to your originating procedure (NTP).
-

DLP-A498 Switch Between TDM and DWDM Network Views

Purpose	Use this task to switch between TDM (Time Division Multiplexing) and DWDM (Dense Wavelength Division Multiplexing) network views. This task applies only to Release 4.5 or later.
Tools/Equipment	None
Prerequisite procedures	DLP-A60 Log into CTC, page 3-26
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

-
- Step 1** From the View menu choose **Go to Network View**.

- Step 2** From the Network View drop-down menu, choose one of the following:
- All—displays both TDM and DWDM nodes
 - TDM—only displays ONS 15454s with SONET or SDH cards including the transponder and muxponder cards.
 - DWDM—only displays ONS 15454s with DWDM cards, including the transponder and muxponder cards.
- Step 3** Return to your originating procedure (NTP).
-

DLP-A148 Create Domain Icons

Purpose	Use this task to create a domain icon, which can be used to group ONS 15454 icons in CTC network view.
Tools/Equipment	None
Prerequisite procedures	DLP-A60 Log into CTC, page 3-26
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note Domains that you create are visible to all users who log into the network.

- Step 1** From the View menu choose **Go to Network View**.
- Step 2** Right-click the network map and choose **Create New Domain** from the shortcut menu.
- Step 3** When the domain icon appears on the map, click the map name and type the domain name.
- Step 4** Press **Enter**.
- Step 5** Return to your originating procedure (NTP).
-

DLP-A149 Manage Domain Icons

Purpose	Use this task to manage CTC network view domain icons.
Tools/Equipment	None
Prerequisite procedures	DLP-A60 Log into CTC, page 3-26 DLP-A148 Create Domain Icons, page 12-14
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note All domain changes, such as added or removed nodes, are visible to all users who log into the network.

- Step 1** From the View menu choose **Go to Network View**.
- Step 2** Locate the domain action you want in Table 12-1 and complete the appropriate steps.

Table 12-1 Managing Domains

Domain action	Steps
Move a domain	Drag and drop the domain icon to the new location.
Rename a domain	Right-click the domain icon and choose Rename Domain from the shortcut menu. Type the new name in the domain name field.
Add a node to a domain	Drag and drop the node icon to the domain icon.
Move a node from a domain to the network map	Open the domain and right-click a node. Select Move Node Back to Parent View .
Open a domain	<ul style="list-style-type: none"> • Double-click the domain icon. • Right-click the domain and choose Open Domain.
Return to network view	Right-click the domain view area and choose Go to Parent View from the shortcut menu.
Preview domain contents	Right-click the domain icon and choose Show Domain Overview . The domain icon shows a small preview of the nodes in the domain. To turn off the domain overview, right-click the overview and select Show Domain Overview .
Remove domain	Right-click the domain icon and choose Remove Domain . Any nodes residing in the domain are returned to the network map.

- Step 3** Return to your originating procedure (NTP).

DLP-A269 Enable Dialog Box Do-Not-Display Option

Purpose	Use this task to ensure that a user-selected “Do not display” dialog box preference is enabled for subsequent sessions or to disable the do not display option.
Tools/Equipment	None
Prerequisite procedures	DLP-A60 Log into CTC, page 3-26
Required/As needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

If any user who has rights to perform an operation (for example, creating a circuit) selects the “Do not show this dialog again” check box in a dialog box, the dialog box is not displayed for any other users who perform that operation on the network from the same computer unless the command is overridden using the following task. (The preference is stored on the computer, not in the node database.)

-
- Step 1** From the Edit menu, choose **Preferences**.
- Step 2** In the Preferences dialog box, click the **General** tab.
The Preferences Management area field lists all dialog boxes where “Do not show this dialog again” was checked.
- Step 3** Choose one of the following, or uncheck the individual dialog boxes that you want to appear:
- Don’t Show Any—Hides all do-not-display check boxes.
 - Show All—Overrides do-not-display check box selections and displays all dialog boxes.
- Step 4** Click **OK**.
- Step 5** Return to your originating procedure (NTP).
-

NTP-A203 Modify or Delete Card Protection Settings

Purpose	Use this procedure to modify or delete card protection settings. Except where noted, this procedure only applies to non-DWDM (Software R4.1 or earlier) cards.
Tools/Equipment	None
Prerequisite Procedures	NTP-A170 Create Protection Groups, page 4-25
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution Modifying and deleting protection groups can be service affecting.

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A150 Modify a 1:1 Protection Group, page 12-17
 - DLP-A152 Modify a 1:N Protection Group, page 12-18
 - DLP-A154 Modify a 1+1 Protection Group, page 12-19
 - DLP-A270 Modify a Y Cable Protection Group, page 12-20
 - DLP-A499 Modify a Splitter Protection Group, page 12-21
 - DLP-A155 Delete a Protection Group, page 12-21
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Stop. You have completed this procedure.**
-

DLP-A150 Modify a 1:1 Protection Group

Purpose	Use this task to modify a 1:1 protection group for electrical (DS-1, DS-3, EC-1, and DS3XM-6) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A71 Create a 1:1 Protection Group, page 4-27 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > Protection** tabs.

Step 2 In the Protection Groups area, click the 1:1 protection group you want to modify.

Step 3 In the Selected Group area, you can modify the following, as needed:

- **Name**—As needed, type the changes to the protection group name. The name can have up to 32 alphanumeric characters.
- **Revertive**—Check this box if you want traffic to revert to the working card after failure conditions stay corrected for the amount of time chosen from the Reversion Time menu. Uncheck if you do not want traffic to revert.
- **Reversion time**—If the Revertive check box is selected, choose the reversion time from the Reversion time drop-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. This is the amount of time that will elapse before the traffic reverts to the working card. Traffic can revert when conditions causing the switch are cleared.

Step 4 Click **Apply**. Confirm that the changes appear.



Note If the changes do not appear, repeat the task. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.



Note To convert electrical protection groups, see the “NTP-A91 Upgrade DS-1 and DS-3 Protect Cards from 1:1 Protection to 1:N Protection” procedure on page 13-58.

Step 5 Return to your originating procedure (NTP).

DLP-A152 Modify a 1:N Protection Group

Purpose	This task modifies a 1:N protection group for DS-1 and DS-3 cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A72 Create a 1:N Protection Group, page 4-28 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Verify that the DS-1 and DS-3 cards are installed according to the 1:N specifications in the “DLP-A72 Create a 1:N Protection Group” task on page 4-28.

Step 2 In node view, click the **Provisioning** > **Protection** tabs.

Step 3 In the Protection Groups area, click the 1:N protection group you want to modify.

Step 4 In the Selected Group area, change any of the following, as needed:

- **Name**—As needed, type the changes to the protection group name. The name can have up to 32 alphanumeric characters.
- **Available Cards**—If cards are available, they will appear here. Use the arrow buttons to move them into the Working Cards column.
- **Working Cards**—Use the arrow buttons to move cards out of the Working Cards column.
- **Reversion Time**—Choose a reversion time from the drop-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. This is the amount of time that will elapse before the traffic reverts to the working card. Traffic can revert when conditions causing the switch are cleared.

See the “DLP-A72 Create a 1:N Protection Group” task on page 4-28 for field descriptions.

Step 5 Click **Apply**. The changes are applied. Confirm that the changes appear.



Note If the changes do not appear, repeat the task. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.



Note To convert electrical protection groups, see the “NTP-A91 Upgrade DS-1 and DS-3 Protect Cards from 1:1 Protection to 1:N Protection” procedure on page 13-58.

Step 6 Return to your originating procedure (NTP).

DLP-A154 Modify a 1+1 Protection Group

Purpose	This task modifies a 1+1 protection group for any optical port (OC-3, OC-12, OC-12 IR, OC-48, OC-48AS, and OC-192).
Tools/Equipment	None
Prerequisite Procedures	DLP-A73 Create a 1+1 Protection Group, page 4-29 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > Protection** tabs.

Step 2 In the Protection Groups area, click the 1+1 protection group you want to modify.

Step 3 In the Selected Group area, you can modify the following:

- Name—As needed, type the changes to the protection group name. The name can have up to 32 alphanumeric characters.
- Bidirectional switching—As needed, check or uncheck
- Revertive—Check this box if you want traffic to revert to the working card after failure conditions stay corrected for the amount of time chosen from the Reversion Time menu. Uncheck if you do not want traffic to revert.
- Reversion time—If the Revertive check box is selected, choose the reversion time from the Reversion time drop-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. This is the amount of time that will elapse before the traffic reverts to the working card. Traffic can revert when conditions causing the switch are cleared.

See the “DLP-A73 Create a 1+1 Protection Group” task on page 4-29 for field descriptions.

Step 4 Click **Apply**. Confirm that the changes appear.



Note If the changes do not appear, repeat the task. Refer to the *Cisco ONS 15454 Troubleshooting Guide*, as needed.

Step 5 Return to your originating procedure (NTP).

DLP-A270 Modify a Y Cable Protection Group

Purpose	Use this task to modify a Y Cable protection group for any client port on a MXP_2.5G_10G, TXP_MR_2.5G, or TXP_MR_10G card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A252 Create a Y-Cable Protection Group, page 4-31 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, click the **Provisioning > Protection** tabs.
- Step 2** In the Protection Groups area, click the Y Cable protection group you want to modify.
- Step 3** In the Selected Group area, you can modify the following:
- **Name**—As needed, type the changes to the protection group name. The name can have up to 32 alphanumeric characters.
 - **Revertive**—Check this box if you want traffic to revert to the working card after failure conditions stay corrected for the amount of time chosen from the Reversion Time menu. Uncheck if you do not want traffic to revert.
 - **Reversion time**—If the Revertive check box is selected, choose the reversion time from the Reversion time drop-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. This is the amount of time that will elapse before the traffic reverts to the working card. Traffic can revert when conditions causing the switch are cleared.

See the “DLP-A252 Create a Y-Cable Protection Group” task on page 4-31 for field descriptions.

- Step 4** Click **Apply**. Confirm that the changes appear.



Note If the changes do not appear, repeat the task. Refer to the *Cisco ONS 15454 Troubleshooting Guide*, as needed.

- Step 5** Return to your originating procedure (NTP).
-

DLP-A499 Modify a Splitter Protection Group

Purpose	Use this task to modify a Splitter protection group for any client port on a TXPP_MR_2.5G card. Splitter protection is automatically created when the TXPP transponder card is installed.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, click the **Provisioning > Protection** tabs.
- Step 2** In the Protection Groups area, click the Splitter protection group you want to modify.
- Step 3** In the Selected Group area, you can modify the following:
- **Name**—As needed, type the changes to the protection group name. The name can have up to 32 alphanumeric characters.
 - **Revertive**—Check this box if you want traffic to revert to the working card after failure conditions stay corrected for the amount of time chosen from the Reversion Time menu. Uncheck if you do not want traffic to revert.
 - **Reversion time**—If the Revertive check box is selected, choose the reversion time from the Reversion time drop-down menu. The range is 0.5 to 12.0 minutes. The default is 5.0 minutes. This is the amount of time that will elapse before the traffic reverts to the working card. Traffic can revert when conditions causing the switch are cleared.
- Step 4** Click **Apply**. Confirm that the changes appear.



Note If the changes do not appear, repeat the task. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.

- Step 5** Return to your originating procedure (NTP).
-

DLP-A155 Delete a Protection Group

Purpose	Use this task to delete any 1:1, 1:N, 1+1, or Y Cable protection group.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, click the **Provisioning > Protection** tabs.

- Step 2** In the Protection Groups area, click the protection group you want to delete.
- Step 3** Click **Delete**.
- Step 4** Click **Yes** in the Delete Protection Group dialog box. Confirm that the changes appear; if they do not, repeat Steps 1 through 3.
- Step 5** Return to your originating procedure (NTP).

NTP-A204 Delete a SONET DCC Termination

Purpose	Use this task to delete a SONET DCC termination on the ONS 15454. This procedure applies to non-DWDM (Software R4.1 and earlier) nodes only.
Tools/Equipment	None
Prerequisite Procedures	DLP-A253 Provision SONET DCC Terminations, page 6-5
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Deleting a DCC termination may cause you to lose visibility of nodes that do not have other DCCs or network connections to the CTC computer.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Click the **Provisioning > DCC/GCC** tabs.



Note This tab is labeled DCC/GCC in Software R4.1 and DCC/GCC/OSC in Software R4.5.

- Step 3** Click the DCC termination to be deleted and click **Delete**. The Delete SDCC Termination dialog box appears.
- Step 4** Check the **Set Port Out of Service** check box if you want to change the port state to out of service (this may be service affecting).
- Step 5** Click **Yes** in the confirmation dialog box to confirm. Confirm that the changes appear.
- Stop. You have completed this procedure.**

NTP-A423 Delete a DWDM OSC Termination

Purpose	This procedure deletes a DWDM OSC termination on the ONS 15454. This procedure applies to DWDM (Software R4.5) nodes only.
Tools/Equipment	None
Prerequisite Procedures	DLP-A240 Provision OSC Terminations, page 7-5
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Deleting a OSC termination may cause node isolation and loss of visibility to nodes that do not have other OSCs or network connections to the CTC computer.

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** In node view, click the **Provisioning > DCC/GCC/OSC > OSC** tabs.
- Step 3** Click the OSC termination you want to delete and click **Delete**.
- Step 4** In the Delete OSC Termination confirmation box, click **Yes**. Confirm that the changes appear.
- Until all network OSC terminations are deleted, the following alarms might appear: EOC (SDCC Termination Failure) and power failure alarms on the OPT-BST and OSC-CSM, such as TRUE LOS alarms.
- Stop. You have completed this procedure.**
-

NTP-A85 Change Node Timing

Purpose	Use this procedure to change the SONET timing settings for the ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	NTP-A28 Set Up Timing, page 4-21
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** As needed, complete the “DLP-A157 Change the Node Timing Source” task on page 12-24.
- Step 4** If you need to change any internal timing settings, follow the “DLP-A70 Set Up Internal Timing” task on page 4-24 for the settings you need to modify.

**Caution**

Internal timing is Stratum 3 and not intended for permanent use. All ONS 15454s should be timed to a Stratum 2 or better primary reference source.

Step 5 If you need to verify timing after removing a node from a BLSR or path protection, see the “DLP-A195 Verify Timing in a Reduced Ring” task on page 16-12.

Step 6 Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Stop. You have completed this procedure.

DLP-A157 Change the Node Timing Source

Purpose	Use this task to change the SONET timing source for the ONS 15454
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

**Caution**

The following procedure may be service affecting and should be performed during a scheduled maintenance window.

Step 1 In node view, click the **Provisioning > Timing** tabs.

Step 2 In the General Timing section, change any of the following information:

- Timing Mode

**Note**

Because mixed timing can cause timing loops, Cisco does not recommend using the Mixed Timing option. Use this mode with care.

- SSM Message Set
- Quality of RES
- Revertive
- Revertive Time

See the “DLP-A69 Set Up External or Line Timing” task on page 4-22 for field descriptions.

Step 3 In the BITS Facilities section, you can change the following information:



Note The BITS Facilities section sets the parameters for your BITS1 and BITS2 timing references. Many of these settings are determined by the timing source manufacturer. If equipment is timed through BITS Out, you can set timing parameters to meet the requirements of the equipment.

- State
- Coding
- Framing
- Sync Messaging
- AIS Threshold
- LBO

Step 4 In the Reference Lists area, you can change the following information:



Note Reference lists define up to three timing references for the node and up to six BITS Out references. BITS Out references define the timing references used by equipment that can be attached to the node's BITS Out pins on the backplane. If you attach equipment to BITS Out pins, you normally attach it to a node with Line mode because equipment near the external timing reference can be directly wired to the reference.

- NE Reference
- BITS 1 Out
- BITS 2 Out

Step 5 Click **Apply**. Confirm that the changes appear.



Note If the changes do not appear, repeat the task. Refer to the *Cisco ONS 15454 Troubleshooting Guide*, as needed.

Step 6 Return to your originating procedure (NTP).

NTP-A205 Modify Users and Change Security

Purpose	This procedure modifies user and security properties for the ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	NTP-A30 Create Users and Assign Security, page 4-4
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A271 Change Security Policy—Single Node, page 12-26
 - DLP-A272 Change Security Policy—Multiple Nodes, page 12-27
 - DLP-A158 Change User Password and Security Level—Single Node, page 12-28
 - DLP-A160 Change User Password and Security Level—Multiple Nodes, page 12-29
 - DLP-A159 Delete User—Single Node, page 12-31
 - DLP-A161 Delete User—Multiple Nodes, page 12-31
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Stop. You have completed this procedure.**
-

DLP-A271 Change Security Policy—Single Node

Purpose	This task changes the security policy for a single node, including idle user timeouts, user lockouts, password changes, and concurrent login policies.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

-
- Step 1** In node view, click the **Provisioning > Security > Policy** tabs.
- Step 2** In the Idle User Timeout area, you can modify the timeout times by clicking the hour (H) and minute (M) arrows. You can choose values between 0 and 16 hours, and 0 and 59 minutes.
- Step 3** In the User Lockout area, you can modify the following:
- Failed Logins Before Lockout—The number of failed login attempts a user can make before the user is locked out from the node. You can choose a value between 0 and 10.

- Manual Unlock by Superuser—Allows a user with Superuser privileges to manually unlock a user who has been locked out from a node.
 - Lockout Duration—Sets the amount of time the user will be locked out after a failed login. You can choose a value between 0 and 10 minutes, and 0 and 55 seconds (in five-second intervals).
- Step 4** Under Concurrent Logins, click **Single Session Per User** if you want to limit users to a single login session.
- Step 5** Under Password Change, you can modify the following:
- Require [nn] different passwords...—Choose a value between 1 and 10 to determine how many different passwords have to be created before a password can be reused.
 - ...or a waiting period of [nn] days before password reuse—Choose a value between 0 and 30 days to set the amount of time (in days) before a password can be reused.
- In other words, users can change their password after they meet one of the two conditions. For example, if you set the number of different passwords to 5 and the number of days to 20, the user can reuse their password after changing it five times or after 20 days elapse, whichever occurs first.
- Step 6** Click **Apply**. Confirm that the changes appear.
- Step 7** Return to your originating procedure (NTP).
-

DLP-A272 Change Security Policy—Multiple Nodes

Purpose	Use this task to change the security policy for multiple nodes including idle user timeouts, user lockouts, password change, and concurrent login policies.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** From the View menu choose **Go to Network View**.
- Step 2** Click the **Provisioning > Security > Policy** tabs. A read-only table of nodes and their policies is displayed.
- Step 3** Click a node on the table that you want to modify, then click **Change**.
- Step 4** Under Idle User Timeout, you can modify the timeout times by clicking the hour (H) and minute (M) arrows. You can choose values between 0 and 16 hours, and 0 and 59 minutes.
- Step 5** Under User Lockout, you can modify the following:
- Failed Logins Before Lockout—Choose the number failed login attempts a user can make before the user is locked out from the node. You can choose a value between 0 and 10.
 - Manual Unlock by Superuser—Select this check box if you want to allow a user with Superuser privileges to manually unlock a user who has been locked out from a node.
 - Lockout Duration—Choose the amount of time the user will be locked out after a failed login. You can choose a value between 0 and 10 minutes, and 0 and 55 seconds (in five-second intervals).

- Step 6** In the Single Session area, click **Single Session Per User** if you want to limit users to a single login session.
- Step 7** In the Password Change area, you can modify the following:
- Require [nn] different passwords...—Choose the number of different passwords that have to be created before a password can be reused. You can choose a value between 0 and 10 days.
 - ...or a waiting period of [nn] days before password reuse—Choose the number of days the user must wait before reusing a password. You can choose a value between 0 and 30 days.
- In other words, users can change their password after they meet one of the two conditions. For example, if you set the number of different passwords to 5 and the number of days to 20, the user can reuse their password after changing it five times or after 20 days elapse, whichever occurs first.
- Step 8** In the Select Applicable Nodes area, uncheck any nodes where you do not want to apply the changes.
- Step 9** Click **OK**.
- Step 10** In the Security Policy Change Results dialog box, confirm that the changes are correct, then click **OK**.
- Step 11** Return to your originating procedure (NTP).
-

DLP-A158 Change User Password and Security Level—Single Node

Purpose	This task changes settings for an existing user at one node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** In node view, click the **Provisioning > Security > Users** tabs.
- Step 2** Click the user whose settings you want to modify, then click **Change**.
- Step 3** In the Change User dialog box, you can:
- Change a user's password
 - Modify the user's security level
 - Lock out the user
- See the “NTP-A30 Create Users and Assign Security” procedure on page 4-4 for field descriptions.
- Step 4** Click **OK**.



Note User settings that you changed during this task will not appear until that user logs off and logs back in again.

- Step 5** Return to your originating procedure (NTP).
-

DLP-A160 Change User Password and Security Level—Multiple Nodes

Purpose	This task changes settings for an existing user at multiple nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser



Note

You must add the same user name and password to each node the user will access.

-
- Step 1** From the View menu, choose **Go to Network View**. Verify that all the nodes where you want to add users are accessible.
- Step 2** Click the **Provisioning > Security > Users** tabs. Highlight the user's name whose settings you want to change.
- Step 3** Click **Change**. The Change User dialog box appears.
- Step 4** In the Change User dialog box, you can:
- Change a user's password
 - Modify the user's security level
 - Lock out the user
- See the "DLP-A75 Create a New User—Multiple Nodes" task on page 4-5 for field descriptions.
- Step 5** In the Select Applicable Nodes area, uncheck any nodes where you do not want to change the user's settings (all network nodes are selected by default).
- Step 6** Click **OK**. A Change Results confirmation dialog box appears.
- Step 7** Click **OK** to acknowledge the changes. Confirm that the changes appear; if not, repeat the task.
- Step 8** Return to your originating procedure (NTP).
-

DLP-A315 Log Out a User—Single Node

Purpose	This task logs out a user from a single node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

-
- Step 1** In node view, click the **Provisioning > Security > Active Logins** tabs.
- Step 2** Choose the user you want to log out and click **Logout**.

- Step 3** In the Logout User dialog box, check **Lockout before Logout** if you want to lock the user out. This prevents the user from logging in after logout based on parameters set under User Lockouts in the Policy tab. Either a manual unlock by a Superuser is required, or the user is locked out for the amount of time specified in the Lockout Duration field. See the “DLP-A271 Change Security Policy—Single Node” task on page 12-26 for more information.
- Step 4** Click **OK**.
- Step 5** Click **Yes** to confirm the logout.
- Step 6** Return to your originating procedure (NTP).
-

DLP-A316 Log Out a User—Multiple Nodes

Purpose	This task logs out a user from multiple nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** From the view menu, chose **Go to Network View**.
- Step 2** Click the **Provisioning > Security > Active Logins** tabs.
- Step 3** Choose the user you want to log out.
- Step 4** Click **Logout**.
- Step 5** In the Logout User dialog box, check the nodes where you want to log out the user.
- Step 6** Check **Lockout before Logout** if you want to lock the user out prior to logout. This prevents the user from logging in after logout based on parameters set under User Lockouts in the Policy tab. Either a manual unlock by a Superuser is required, or the user is locked out for the amount of time specified in the Lockout Duration field. See the “DLP-A271 Change Security Policy—Single Node” task on page 12-26 for more information.
- Step 7** In the Select Applicable Nodes area, uncheck any nodes where you do not want to change the user’s settings (all network nodes are selected by default).
- Step 8** Click **OK**.
- Step 9** In the User Change dialog box, click **OK**.
- Step 10** Return to your originating procedure (NTP).
-

DLP-A159 Delete User—Single Node

Purpose	Use this task to delete an existing user from a single node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser


Note

You cannot delete a user who is currently logged in. To log out a user, you can complete the “DLP-A315 Log Out a User—Single Node” task on page 12-29, or you can choose the “Logout before delete” option in the Delete User dialog box.


Note

CTC will allow you to delete other Superusers if one Superuser remains. For example, you can delete the CISCO15 user if you have created another Superuser. Use this option with caution.

-
- Step 1** In node view, select the **Provisioning > Security > Users** tabs.
- Step 2** Choose the user you want to delete.
- Step 3** Click **Delete**.
- Step 4** In the Delete User dialog box, verify that the user name displayed is the one you want to delete. Click **Logout before delete?** if the user is currently logged in. (You cannot delete users if they are logged in.)
- Step 5** Click **OK**. Confirm that the changes appear; if not, repeat the task.
- Step 6** Return to your originating procedure (NTP).
-

DLP-A161 Delete User—Multiple Nodes

Purpose	Use this task to delete an existing user from multiple nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser


Note

You cannot delete a user who is currently logged in. To log out a user, you can complete the “DLP-A316 Log Out a User—Multiple Nodes” task on page 12-30, or you can choose the “Logout before delete” option in the Delete User dialog box.

**Note**

CTC will allow you to delete other Superusers if one Superuser remains. For example, you can delete the CISCO15 user if you have created another Superuser. Use this option with caution.

-
- Step 1** From the View menu choose **Go to Network View**.
- Step 2** Click the **Provisioning > Security** tabs. Highlight the name of the user you want to delete.
- Step 3** Click **Delete**. The Delete User dialog box appears.
- Step 4** In the Select Applicable Nodes area, uncheck any nodes where you do not want to delete this user.
- Step 5** Click **OK**. A User Deletion Results confirmation dialog box appears.
- Step 6** Click **OK** to acknowledge the changes. Confirm that the changes appear; if not, repeat the task.
- Step 7** Return to your originating procedure (NTP).
-

NTP-A87 Change SNMP Settings

Purpose	Use this procedure to modify SNMP settings for the ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	NTP-A171 Set Up SNMP, page 4-32
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A273 Modify SNMP Trap Destinations, page 12-33
 - DLP-A163 Delete SNMP Trap Destinations, page 12-34
 - DLP-A164 Delete Ethernet RMON Alarm Thresholds, page 12-35
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Stop. You have completed this procedure.**
-

DLP-A273 Modify SNMP Trap Destinations

Purpose	Use this task to modify the SNMP trap destinations on an ONS 15454 including community name, default UDP port, SNMP trap version, and maximum traps per second.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, click the **Provisioning > SNMP** tabs.

Step 2 Select a trap from the **Trap Destinations** dialog box.

For a description of SNMP traps, refer to the *Cisco ONS 15454 Reference Manual*.

Step 3 Type the SNMP community name in the Community Name field.



Note The community name is a form of authentication and access control. The community name assigned to the ONS 15454 is case-sensitive and must match the community name of the network management system.



Note The default UDP port for SNMP is 162.

Step 4 Set the Trap Version field for either SNMPv1 or SNMPv2.

Refer to your NMS documentation to determine whether to use SNMP v1 or v2.

Step 5 Set your maximum traps per second in the Max Traps per Second field.



Note The Max Traps per Second is the maximum number of traps per second that will be sent to the SNMP manager. If the field is set to 0, there is no maximum and all traps are sent.

Step 6 If you want to allow the ONS 15454 SNMP agent to accept SNMP SET requests on certain MIBs, check the **Allow SNMP Sets** check box. If the box is not checked, SET requests are rejected.


Step 7 Click **Apply**.

Step 8 SNMP settings are now configured. To view SNMP information for each node, highlight the node IP address in the Trap Destinations area of the Trap Destinations screen (Figure 12-2). Confirm that the changes appear.



Note If the changes do not appear, repeat the task. Refer to the *Cisco ONS 15454 Troubleshooting Guide*, as needed.

Figure 12-2 Viewing Trap Destinations

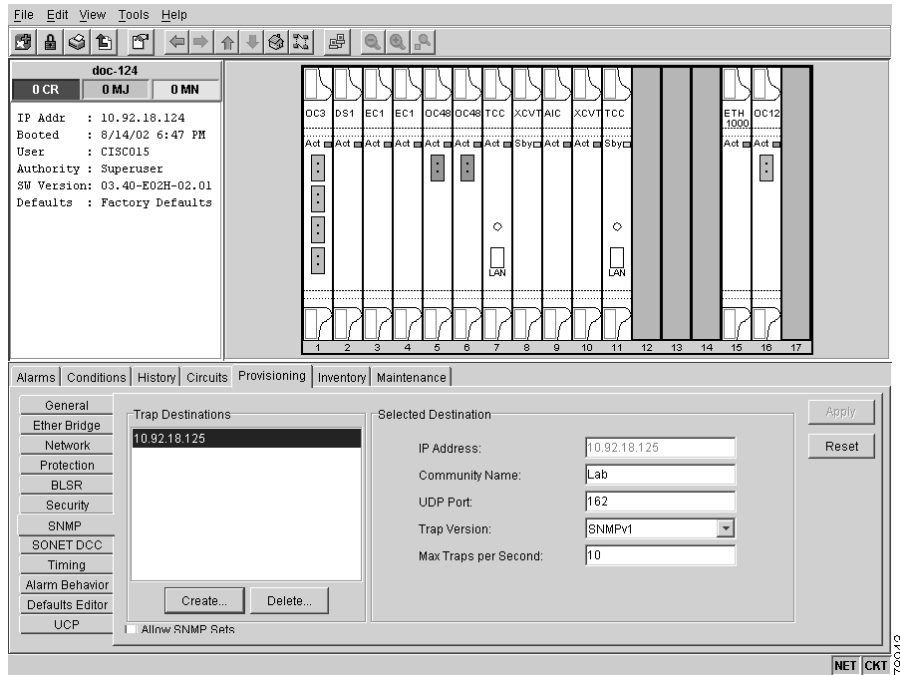

Step 9 Return to your originating procedure (NTP).

DLP-A163 Delete SNMP Trap Destinations

Purpose	Use this task to delete SNMP trap destinations on an ONS 15454.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, click the **Provisioning > SNMP** tabs.
- Step 2** In the Trap Destinations area, click the trap you want to delete.
- Step 3** Click **Delete**. A confirmation dialog box appears.
- Step 4** Click **Yes**. Confirm that the changes appear; if not, repeat the task.
- Step 5** Return to your originating procedure (NTP).

DLP-A164 Delete Ethernet RMON Alarm Thresholds

Purpose	This task deletes remote monitoring (RMON) threshold crossing alarms for Ethernet ports.
Tools/Equipment	None
Prerequisite Procedures	NTP-A34 Create Ethernet RMON Alarm Thresholds, page 4-34 DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note The ONS 15454 ML-Series card uses the Cisco IOS CLI for managing RMON.

-
- Step 1** In node view, click the **Provisioning > Ether Bridge > Thresholds** tabs.
- Step 2** Click the RMON alarm threshold you want to delete.
- Step 3** Click **Delete**. The Delete Threshold dialog box opens.
- Step 4** Click **Yes** to delete that threshold.
- Step 5** Return to your originating procedure (NTP).
-



Change Card Settings

This chapter explains how to change line and threshold settings on Cisco ONS 15454 cards.

Before You Begin

Before performing any of the following procedures, investigate all alarms and clear any trouble conditions. Refer to the *Cisco ONS 15454 Troubleshooting Guide* as necessary.



Caution

Changing card settings can be service affecting. You should make all changes during a scheduled maintenance window.

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A88 Modify Line Settings and PM Parameter Thresholds for Electrical Cards, page 13-2—As needed, complete this procedure to change line and threshold settings for all electrical cards (EC-1, DS-1, DS-3, and DS3MX-6).
2. NTP-A89 Modify Line Settings and PM Parameter Thresholds for OC-N Cards, page 13-19—As needed, complete this procedure to change line and threshold settings for all optical (OC-N) cards.
3. NTP-A206 Modify Line Settings and PM Parameter Thresholds for TXP_MR_10G Cards, page 13-24—As needed, complete this procedure to change line and threshold settings for TXP_MR_10G (transponder) cards.
4. NTP-A207 Modify Line Settings and PM Parameter Thresholds for MXP_2.5G_10G Cards, page 13-32—As needed, complete this procedure to change line and threshold settings for MXP_2.5G_10G (muxponder) cards.
5. NTP-A237 Modify Line Settings and PM Parameter Thresholds for TXP_MR_2.5G and TXPP_MR_2.5G Cards, page 13-42—As needed, complete this procedure to change line and threshold settings for TXP_MR_2.5G and TXPP_MR_2.5G (transponder) cards.
6. NTP-A90 Modify Alarm Interface Controller Settings, page 13-52—As needed, complete this procedure to change external alarms and controls (environmental alarms) and/or orderwire settings.
7. NTP-A118 Modify Alarm Interface Controller-International Settings, page 13-55—As needed, complete this procedure to change external alarms and controls and/or orderwire settings.
8. NTP-A91 Upgrade DS-1 and DS-3 Protect Cards from 1:1 Protection to 1:N Protection, page 13-58—As needed, complete this procedure to change the protection type on DS-1 or DS-3 cards.
9. NTP-A229 Modify Line Settings and PM Parameter Thresholds for Optical Service Channel Cards, page 13-63—As needed, complete this procedure to change the optical service channel card settings.

10. NTP-A230 Modify Line Settings and PM Parameter Thresholds for Amplifier Cards, page 13-68—As needed, complete this procedure to change the amplifier card settings.
11. NTP-A231 Modify Line Settings and PM Parameter Thresholds for Multiplexer and Demultiplexer Cards, page 13-73—As needed, complete this procedure to change the multiplexer and demultiplexer card settings.

NTP-A88 Modify Line Settings and PM Parameter Thresholds for Electrical Cards

Purpose	This procedure changes the line and threshold settings for electrical cards; This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A17 Install the Electrical Cards, page 2-16
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the electrical card settings. If you are already logged in, proceed to Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7 to preserve the existing database.
- Step 3** Perform any of the following tasks as needed:
- DLP-A165 Change Line and Threshold Settings for the DS1-14 or DS1N-14 Cards, page 13-3
 - DLP-A166 Change Line and Threshold Settings for the DS3-12 or DS3N-12 Cards, page 13-6
 - DLP-A167 Change Line and Threshold Settings for the DS3E-12 or DS3N-12E Cards, page 13-8
 - DLP-A168 Change Line and Threshold Settings for the DS3XM-6 Card, page 13-12
 - DLP-A169 Change Line and Threshold Settings for the EC1-12 Card, page 13-16
- Step 4** When you are finished changing the card settings, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Stop. You have completed this procedure.

DLP-A165 Change Line and Threshold Settings for the DS1-14 or DS1N-14 Cards

Purpose	This task changes the line and threshold settings for the DS1-14 or DS1N-14 (DS-1) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In the node view, double-click the DS1-14 or DS1N-14 card where you want to change the line or threshold settings.
- Step 2** Click the **Provisioning** tab.
- Step 3** Depending on the setting you need to modify, click the **Line**, **Line Thresholds**, **Elect Path Thresholds**, or **Sonet Thresholds** tab.



Note See Chapter 9, “Manage Alarms” for information about the Alarm Behavior tab.

- Step 4** Modify any of the settings found under these subtabs. For definitions of the Line settings, see Table 13-1. For definitions of the Line Threshold settings, see Table 13-2. For definitions of the Electrical Path settings, see Table 13-3.
- Step 5** Click **Apply**.
- Step 6** Repeat Steps 3 through 5 for each subtab that has parameters you want to provision. Table 13-1 describes the values on the Provisioning > Line tabs for the DS-1 cards.

Table 13-1 Line Options for DS1-14 and DS1N-14 Cards

Parameter	Description	Options
Port #	Port number	1 to 14 (read-only)
Port	Port name	User-defined, up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
Line Type	Defines the line framing type	<ul style="list-style-type: none"> D4 ESF - Extended Super Frame Unframed
Line Coding	Defines the DS-1 transmission coding type	<ul style="list-style-type: none"> AMI - Alternate Mark Inversion (default) B8ZS - Bipolar 8 Zero Substitution

Table 13-1 Line Options for DS1-14 and DS1N-14 Cards (continued)

Parameter	Description	Options
Line Length	Defines the distance (in feet) from the backplane connection to the next termination point	<ul style="list-style-type: none"> • 0 - 131 • 132 - 262 • 263 - 393 • 394 - 524 • 525 - 655
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS
AINS Soak	Automatic in-service soak	<ul style="list-style-type: none"> • Duration of valid input signal in hh.mm after which the card becomes in service (IS) automatically. • 0 to 48 hours, 15 minutes increments.

Table 13-2 describes the values on the Provisioning > Line Thresholds tabs for the DS-1 cards.

Table 13-2 Line Thresholds Options for DS1-14 and DS1N-14 Cards

Parameter	Description	Options
Port	Port number	1 to 14 (read-only)
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
LOSS	Number of one-second intervals containing one or more loss of signal (LOS) defects	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.

Table 13-3 describes the values on the Provisioning > Elect Path Thresholds tabs for the DS-1 cards.

Table 13-3 Electrical Path Threshold Options for DS1-14 and DS1N-14 Cards

Parameter	Description	Options
Port	Port number	1 - 14 (read-only)
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.

Table 13-3 Electrical Path Threshold Options for DS1-14 and DS1N-14 Cards (continued)

Parameter	Description	Options
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
SAS	Severely errored frame/alarm indication signal	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
AISS	Alarm indication signal seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.

Table 13-4 describes the values on the Provisioning > SONET Thresholds tabs for the DS-1 cards.

Table 13-4 SONET Threshold Options for DS1-14 and DS1N-14 Cards

Parameter	Description	Options
Port #	DS-1 ports partitioned for STS	Read-only Line 1, STS 1, Line 2, STS 1 Line 3, STS 1, Line 4 STS 1
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near End, STS termination).
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near End, STS termination).
FC	Failure count	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near End, STS termination).
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near End, STS termination).
UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near End, STS termination).



Note The threshold value displays after the circuit is created.

Step 7 Return to your originating procedure (NTP).

DLP-A166 Change Line and Threshold Settings for the DS3-12 or DS3N-12 Cards

Purpose	This task changes the line and threshold settings for the DS3-12 or DS3N-12 (DS-3) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Double-click the DS3-12 or DS3N-12 card where you want to change the line or threshold settings.

Step 2 Click the **Provisioning** tab.

Step 3 Depending on the setting you need to modify, click the **Line**, **Line Thrshld**, **Elec Path Thrshld**, or **Sonet Thrshld** subtab.



Note See Chapter 9, “Manage Alarms” for information about the Alarm Behavior tab.

Step 4 Modify any of the settings found under these subtabs. For definitions of the Line settings, see Table 13-5. For definitions of the Line Threshold settings, see Table 13-6. For definitions of the SONET Threshold settings, see Table 13-7.

Step 5 Click **Apply**.

Step 6 Repeat Steps 3 through 5 for each subtab that has parameters you want to provision.

Table 13-5 describes the values on the Provisioning > Line tabs for the DS-3 cards.

Table 13-5 Line Options for DS3-12 or DS3N-12 Cards

Parameter	Description	Options
Port #	Port number	1 - 12
Port	Port name	User-defined, up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
Line Length	Defines the distance (in feet) from backplane connection to the next termination point	<ul style="list-style-type: none"> 0 - 225 (default) 226 - 450

Table 13-5 Line Options for DS3-12 or DS3N-12 Cards (continued)

Parameter	Description	Options
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS
AINS Soak	Automatic in-service soak	Duration of valid input signal in hh.mm after which the card becomes in service (IS) automatically. 0 to 48 hours, 15 minutes increments.

Table 13-6 describes the values on the Provisioning > Line Thresholds tabs for the DS-3 cards.

Table 13-6 Line Threshold Options for DS3-12 or DS3N-12 Cards

Parameter	Description	Options
Port #	Port number	1 - 12
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
LOSS	Loss of signal; number of one-second intervals containing one or more LOS defects	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.

Table 13-7 describes the values on the Provisioning > SONET Thresholds tabs for the DS-3 cards.

Table 13-7 SONET Threshold Options for DS3-12 or DS3N-12 Cards

Parameter	Description	Options
Port #	DS-3 ports partitioned for STS	Read-only Line 1, STS 1, Line 2, STS 1 Line 3, STS 1, Line 4 STS 1
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).

Table 13-7 SONET Threshold Options for DS3-12 or DS3N-12 Cards (continued)

Parameter	Description	Options
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).
FC	Failure count	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).
UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).



Note The threshold value displays after the circuit is created.

Step 7 Return to your originating procedure (NTP).

DLP-A167 Change Line and Threshold Settings for the DS3E-12 or DS3N-12E Cards

Purpose	This task changes the line and threshold settings for the DS3E-12 or DS3N-12E (DS3E) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note If the DS3E is installed in an ONS 15454 slot that is provisioned for a DS-3 card, the DS3E enhanced performance monitoring parameters are unavailable. If this occurs, remove the DS3E from the ONS 15454, delete the DS-3 card in CTC using the “DLP-A191 Delete a Card” task on page 2-28, and provision the slot for the DS3E using the “NTP-A115 Preprovision a Slot” procedure on page 2-29.

Step 1 Double-click the DS3E-12 or DS3N-12E card where you want to change the line or threshold settings.

Step 2 Click the **Provisioning** tab.

Step 3 Depending on the setting you need to modify, click the **Line**, **Line Thrshld**, **Elect Path Thrshld**, or **Sonet Thrshld** subtab.



Note See Chapter 9, “Manage Alarms” for information about the Alarm Behavior tab.

Step 4 Modify any of the settings found under these subtabs. For definitions of the Line settings, see Table 13-8. For definitions of the Line Threshold settings, see Table 13-9. For definitions of the Electrical Path Thresholds, see Table 13-10. For definitions of the SONET Threshold settings, see Table 13-11.

Step 5 Click **Apply**.

Step 6 Repeat Steps 3 through 5 for each subtab that has parameters you want to provision.

Table 13-8 describes the values on the Provisioning > Line tabs for the DS3E cards.

Table 13-8 Line Options for the DS3-12E and DS3N-12E Cards

Parameter	Description	Options
Port #	Port number	1 - 12 (Read-only)
Port	Port name	User-defined, up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
Line Type	Defines the line framing type	<ul style="list-style-type: none"> • M13 • C Bit • Auto Provisioned
Detected Line Type	Displays the detected line type	Read-only
Line Coding	Defines the DS3E transmission coding type	B3ZS
Line Length	Defines the distance (in feet) from backplane connection to the next termination point	<ul style="list-style-type: none"> • 0 - 225 (default) • 226 - 450
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS
AINS Soak	Automatic in-service soak	<ul style="list-style-type: none"> • Duration of valid input signal in hh.mm after which the card becomes in service (IS) automatically. • 0 to 48 hours, 15-minute increments.

Table 13-9 describes the values on the Provisioning > Line Thresholds tabs for the DS3E cards.

Table 13-9 Line Threshold Options for the DS3-12E and DS3N-12E Cards

Subtab	Parameter	Description	Options
Port #	Port number	1 - 12 (Read-only)	Port #
Line Thrshld	CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	LOSS	Loss of signal; number of one-second intervals containing one or more LOS defects	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.

Table 13-10 describes the values on the Provisioning > Elect Path Thresholds tabs for the DS3E cards.

Table 13-10 Electrical Path Options for the DS3-12E and DS3N-12E Cards

Subtab	Parameter	Description	Options
Port #	Port number	1 - 12 (Read-only)	Port #
Elect Path Thrshld	CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3 Pbit: Near End only; DS3 CPbit: Near and Far End).

Table 13-10 Electrical Path Options for the DS3-12E and DS3N-12E Cards (continued)

Subtab	Parameter	Description	Options
	ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3 Pbit: Near End only; DS3 CPbit: Near and Far End).
	SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3 Pbit: Near End only; DS3 CPbit: Near and Far End).
	SAS	Severely errored frame/alarm indication signal	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3 Pbit: Near End only; DS3 CPbit: Near and Far End).
	AIS	Alarm indication signal	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3 Pbit: Near End only; DS3 CPbit: Near and Far End).
	UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3 Pbit: Near End only; DS3 CPbit: Near and Far End).

Table 13-11 describes the values on the Provisioning > SONET Thresholds tabs for the DS3E cards.

Table 13-11 SONET Threshold Options for DS3-12E and DS3N-12E Cards

Parameter	Description	Options
Port #	DS-3 ports partitioned for STS	Read-only Line 1, STS 1, Line 2, STS 1 Line 3, STS 1, Line 4 STS 1
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).

Table 13-11 SONET Threshold Options for DS3-12E and DS3N-12E Cards (continued)

Parameter	Description	Options
FC	Failure count	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).
UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End, STS termination only).



Note The threshold value displays after the circuit is created.

Step 7 Return to your originating procedure (NTP).

DLP-A168 Change Line and Threshold Settings for the DS3XM-6 Card

Purpose	This task changes the line and threshold settings for the DS3XM-6 card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note The DS3XM-6 (transmux) card can accept up to six channelized DS-3 signals and convert each signal to 28 VT1.5 signals. Conversely, the card can take 28 T-1s and multiplex them into a channeled C-bit or M13 framed DS-3.

- Step 1** In node view, double-click the DS3XM-6 card where you want to change the line or threshold settings.
- Step 2** Click the **Provisioning** tab.
- Step 3** Depending on the setting you need to modify, click the **Line**, **Line Thrshld**, **Elect Path Thrshld**, or **Sonet Thrshld** subtab.



Note See Chapter 9, “Manage Alarms” for information about the Alarm Behavior tab.

- Step 4** Modify any of the settings found under these subtabs. For definitions of the Line settings, see Table 13-12. For definitions of the Line Threshold settings, see Table 13-13. For definitions of the Electrical Path Thresholds, see Table 13-14. For definitions of the SONET Threshold settings, see Table 13-15.
- Step 5** Click **Apply**.
- Step 6** Repeat Steps 3 through 5 for each subtab that has parameters you want to provision. Table 13-12 describes the values on the Provisioning > Line tabs for the DS3XM-6 cards.

Table 13-12 Line Options for the DS3XM-6 Parameters

Parameter	Description	Options
Port #	Port number	1 - 6 (read-only)
Port	Port name	User-defined, up to 32 alphanumeric/special characters. Blank by default See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
Line Type	Defines the line framing type	<ul style="list-style-type: none"> M13 - default C BIT
Line Coding	Defines the DS-1 transmission coding type that is used	B3ZS
Line Length	Defines the distance (in feet) from backplane connection to the next termination point	<ul style="list-style-type: none"> 0 - 225 (default) 226 - 450
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> IS OOS OOS_MT OOS_AINS
AINS Soak	Automatic in-service soak	<ul style="list-style-type: none"> Duration of valid input signal in hh.mm after which the card becomes in service (IS) automatically. 0 to 48 hours, 15 minutes increments.

Table 13-13 lists the line threshold options for DS3XM-6 cards.

Table 13-13 Line Threshold Options for the DS3XM-6 Card

Parameter	Description	Options
Port #	Port number	1 - 6 (read-only)
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.

Table 13-13 Line Threshold Options for the DS3XM-6 Card (continued)

Parameter	Description	Options
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
LOSS	Loss of signal	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.

Table 13-14 describes the values on the Provisioning > Elect Path Thresholds tabs for the DS3XM-6 cards.

Table 13-14 Electrical Path Threshold Options for the DS3XM-6 Card

Parameter	Description	Options
Port #	Port number	1 - 6 (read-only)
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3, Pbit Near End only; DS3 CPbit, Near and Far End; DS1, only if there is a VT circuit dropped on the port).
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3, Pbit Near End only; DS3 CPbit, Near and Far End; DS1, only if there is a VT circuit dropped on the port).
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3, Pbit Near End only; DS3 CPbit, Near and Far End; DS1, only if there is a VT circuit dropped on the port).
SAS	Severely errored frame/alarm indication signal	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3, Pbit Near End only; DS3 CPbit, Near and Far End; DS1, only if there is a VT circuit dropped on the port).

Table 13-14 Electrical Path Threshold Options for the DS3XM-6 Card (continued)

Parameter	Description	Options
AISS	Alarm indication signal seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3, Pbit Near End only; DS3 CPbit, Near and Far End; DS1, only if there is a VT circuit dropped on the port).
UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (DS3, Pbit Near End only; DS3 CPbit, Near and Far End; DS1, only if there is a VT circuit dropped on the port).

Table 13-15 describes the values on the Provisioning > SONET Thresholds tabs for the DS3XM-6 cards.

Table 13-15 SONET Threshold Options for the DS3XM-6 Card

Parameter	Description	Options
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (STS and VT Term).
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (STS and VT Term).
FC	Failure count	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (STS and VT Term).
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (STS and VT Term).
UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (STS and VT Term).



Note The threshold value displays after the circuit is created.

Step 7 Return to your originating procedure (NTP).

DLP-A169 Change Line and Threshold Settings for the EC1-12 Card

Purpose	This task changes the line and threshold settings for the EC1-12 (EC-1) card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the EC-1 card where you want to change the line or threshold settings.

Step 2 Click the **Provisioning** tab.

Step 3 Depending on the setting you need to modify, click the **Line**, **Thresholds**, or **STS** subtab.



Note See Chapter 9, “Manage Alarms” for information about the Alarm Behavior tab.

Step 4 Modify any of the settings found under these subtabs. For definitions of the Line settings, see Table 13-16. For definitions of the threshold settings, see Table 13-17.

Step 5 Click **Apply**.

Step 6 Repeat Steps 3 through 5 for each subtab that has parameters you want to provision.



Note The STS subtab is used to provision intermediate path performance monitoring (IPPM). To provision IPPM, circuits must be provisioned on the EC1-12 card. For circuit creation procedures, go to Chapter 8, “Create Circuits and VT Tunnels.” To provision IPPM, go to the “DLP-A121 Enable/Disable Pointer Justification Count Performance Monitoring” task on page 10-19.

Table 13-16 Line Options for the EC1-12 card

Parameter	Description	Options
Port #	EC-1 card port #	1 - 12 (read-only)
Port Name	Name assigned to the port (optional)	User-defined, up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
PJStsMon#	Sets the STS that will be used for pointer justification. If set to zero, no STS is used.	<ul style="list-style-type: none"> 0 (default) 1
Line Length (feet)	Defines the distance (in feet) from backplane to next termination point	<ul style="list-style-type: none"> 0 - 225 (default) 226 - 450

Table 13-16 Line Options for the EC1-12 card (continued)

Parameter	Description	Options
Rx Equalization	For early EC1-12 card versions, equalization can be turned off if the line length is short or the environment is extremely cold; Rx Equalization should normally be set to On	<ul style="list-style-type: none"> • On (checked, default) • Off (unchecked)
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS

Table 13-17 lists the threshold options for EC-12 cards.

Table 13-17 Threshold Options for the EC1-12 Card

SONET Layer	Parameter	Description	Options
	Port #	EC-1 card port #	1 - 12 (read-only)
Line	CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	FC	Failure count	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	PPJC-PDET	Positive Pointer Justification Count, STS Path Detected	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	NPJC-PDET	Negative Pointer Justification Count, STS Path Detected	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	PPJC-PGEN	Positive Pointer Justification Count, STS Path Generated	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	NPJC-PGEN	Negative Pointer Justification Count, STS Path Generated	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.

Table 13-17 Threshold Options for the EC1-12 Card (continued)

SONET Layer	Parameter	Description	Options
	PSC	Protection Switching Count	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	PSD	Protection Switching Duration	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
Section	CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near End only).
	ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	SEFS	Severely errored framing seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
Path	CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click the Refresh button (Near and Far End).
	ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	FC	Failure count	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.
	UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals. Select the bullet and click Refresh.

Step 7 Return to your originating procedure (NTP).

NTP-A89 Modify Line Settings and PM Parameter Thresholds for OC-N Cards

Purpose	This procedure changes the line and threshold settings for optical cards. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A16 Install the OC-N Cards, page 2-13
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the OC-N card settings. If you are already logged in, proceed to Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A170 Change Line Transmission Settings for OC-N Cards, page 13-19
 - DLP-A171 Change Threshold Settings for OC-N Cards, page 13-21
 - DLP-A172 Change an Optical Port to SDH, page 13-23
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Stop. You have completed this procedure.**
-

DLP-A170 Change Line Transmission Settings for OC-N Cards

Purpose	This task changes the line transmission settings for OC-N cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, double-click the OC-N card where you want to change the line settings.
- Step 2** Click the **Provisioning > Line** tabs.
- Step 3** Modify any of the settings described in Table 13-18.



Note The STS subtab is used to provision intermediate path performance monitoring (IPPM). To provision IPPM, circuits must be provisioned on the EC1-12 card.

Table 13-18 OC-N Card Line Settings

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> • 1 (OC-12, OC-48, OC-192) • 1-4 (OC-3, OC12-4)
Port Name	Provides the ability to assign the specified port a name	<p>User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default.</p> <p>See the “DLP-A314 Assign a Name to a Port” task on page 8-17.</p>
SF BER Level	Sets the signal fail bit error rate	<ul style="list-style-type: none"> • 1E-3 • 1E-4 • 1E-5
SD BER Level	Sets the signal degrade bit error rate	<ul style="list-style-type: none"> • 1E-5 • 1E-6 • 1E-7 • 1E-8 • 1E-9
Provides Synch	If checked, the card is provisioned as a network element timing reference	<ul style="list-style-type: none"> • Yes • No <p>(Read-only)</p>
Enable Synch Messages	Enables synchronization status messages (S1 byte), which allow the node to choose the best timing source	<ul style="list-style-type: none"> • Yes • No
Send Do Not Use	When checked, sends a DUS (do not use) message on the S1 byte	<ul style="list-style-type: none"> • Yes • No
PJSTSMon #	Sets the STS that will be used for pointer justification. If set to 0, no STS is monitored. Only one STS can be monitored on each OC-N port.	<ul style="list-style-type: none"> • 0 - 3 (OC-3, per port) • 0 - 12 (OC-12) • 0 - 48 (OC-48) • 0 - 192 (OC-192)
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS

Table 13-18 OC-N Card Line Settings (continued)

Parameter	Description	Options
AINS Soak	Automatic in-service soak	<ul style="list-style-type: none"> Duration of valid input signal in hh.mm after which the card becomes in service (IS) automatically. 0 to 48 hours, 15 minutes increments.
Type	Defines the port as SONET or SDH. The Enable Sync Msg field and the Send Do Not Use field must be disabled before the port can be set to SDH.	<ul style="list-style-type: none"> Sonet SDH

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A171 Change Threshold Settings for OC-N Cards

Purpose	This task changes threshold settings for OC-N cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the OC-N card where you want to change the threshold settings.
- Step 2** Click the **Provisioning > Thresholds** tabs.
- Step 3** Modify any of the settings found in Table 13-19.

Table 13-19 OC-N Threshold Options

Parameter	Description	Options
Port	Port number	<ul style="list-style-type: none"> 1 (OC-12, OC-48, OC-192) 1-4 (OC-3, OC12-4)
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals for Line, Section, or Path (Near and Far End). Select the bullet and click Refresh.
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals for Line, Section, or Path (Near and Far End). Select the bullet and click Refresh.

Table 13-19 OC-N Threshold Options (continued)

Parameter	Description	Options
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals for Line, Section, or Path (Near and Far End). Select the bullet and click Refresh.
SEFS	Severely errored framing seconds	Numeric. Can be set for 15-minute or one-day intervals for Line, Section, or Path (Near and Far End). Select the bullet and click Refresh.
FC	Failure count	Numeric. Can be set for 15-minute or one-day intervals for Line. Select the bullet and click Refresh. or Path (Near and Far End)
UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals for Line or Path (Near and Far End). Select the bullet and click Refresh.
PPJC-PDET	Positive Pointer Justification Count, STS Path detected.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
NPJC-PDET	Negative Pointer Justification Count, STS Path detected.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
PPJC-PGEN	Positive Pointer Justification Count, STS Path generated.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
NPJC-PGEN	Negative Pointer Justification Count, STS Path generated.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
PSC	Protection Switching Count (Line)	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
PSD	Protection Switch Duration (Line)	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
PSC-W	Protection Switching Count - Working line BLSR is not supported on the OC-3 card; therefore, the PSC-W, PSC-S, and PSC-R PMs do not increment.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
PSD-W	Protection Switching Duration - Working line BLSR is not supported on the OC-3 card; therefore, the PSD-W, PSD-S, and PSD-R PMs do not increment.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.

Table 13-19 OC-N Threshold Options (continued)

Parameter	Description	Options
PSC-S	Protection Switching Duration - Span BLSR is not supported on the OC-3 card; therefore, the PSC-W, PSC-S, and PSC-R PMs do not increment.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
PSD-S	Protection Switching Duration - Span BLSR is not supported on the OC-3 card; therefore, the PSD-W, PSD-S, and PSD-R PMs do not increment.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
PSC-R	Protection Switching Count - Ring BLSR is not supported on the OC-3 card; therefore, the PSC-W, PSC-S, and PSC-R PMs do not increment.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.
PSD-R	Protection Switching Duration - Ring BLSR is not supported on the OC-3 card; therefore, the PSD-W, PSD-S, and PSD-R PMs do not increment.	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh.

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A172 Change an Optical Port to SDH

Purpose	This task provisions a port on an OC-N card for SDH.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the OC-N card where you want to provision a port for SDH.
- Step 2** Click the **Provisioning > Line** tabs.
- Step 3** In the Type field, specify the port and choose SDH.



Note Before you can change the port type to SDH, ensure the following: the EnableSyncMsg and SendDoNotUse fields are unchecked, the card is not part of a BLSR or 1+1 protection group, the card is not part of an orderwire channel, and the card is not a SONET DCC/GCC termination point.

- Step 4** Click **Apply**.
- Step 5** If the card is a multiport OC-N card, for example a four-port OC-3, eight-port OC-3, or four-port OC-12, you can repeat Steps 3 and 4 for any other ports on that card.
- Step 6** Return to your originating procedure (NTP).
-

NTP-A206 Modify Line Settings and PM Parameter Thresholds for TXP_MR_10G Cards

Purpose	This procedure changes the line and threshold settings for TXP_MR_10G (transponder) cards. This procedure applies to both DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A249 Install the Transponder and Muxponder Cards, page 2-15
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the transponder card settings. If you are already logged in, proceed to Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A274 Change Card Settings for TXP_MR_10G Cards, page 13-25
 - DLP-A275 Change Line Settings for TXP_MR_10G Cards, page 13-26
 - DLP-A276 Change Line Threshold Settings for TXP_MR_10G Cards, page 13-27
 - DLP-A277 Change Optical Thresholds Settings for TXP_MR_10G Cards, page 13-28
 - DLP-A278 Change Section Trace Settings for TXP_MR_10G Cards, page 13-29
 - DLP-A279 Change Optical Transport Network Settings for TXP_MR_10G Cards, page 13-30
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Stop. You have completed this procedure.

DLP-A274 Change Card Settings for TXP_MR_10G Cards

Purpose	This task changes the card settings for TXP_MR_10G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the TXP_MR_10G card where you want to change the line settings.
- Step 2** Click the **Provisioning > Card** tabs.
- Step 3** Modify any of the settings described in Table 13-20.

Table 13-20 TXP_MR_10G (Transponder) Card Settings

Parameter	Description	Options
Payload Type	Sets the type of payload	<ul style="list-style-type: none"> • SONET/10 GigE WAN Phy • SDH • 10 GigE LAN Phy
Termination Mode	Sets the mode of operation	<ul style="list-style-type: none"> • Transparent • Line
Wavelength	Sets the wavelength of the DWDM side optical transmitter	<ul style="list-style-type: none"> • First Tunable Wavelength • (Further wavelengths in 100 GHz ITU spacing)
Regeneration Peer Slot	Sets the regeneration peer slot	<ul style="list-style-type: none"> • None • 1 • 2 • 3 • 4 • 5 • 6 • 12 • 13 • 14 • 15 • 16 • 17

- Step 4** Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A275 Change Line Settings for TXP_MR_10G Cards

Purpose	This task changes the line settings for TXP_MR_10G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the TXP_MR_10G card where you want to change the line settings.

Step 2 Click the **Provisioning > Line** tab.

Step 3 Modify any of the settings described in Table 13-21.

Table 13-21 TXP_MR_10G (Transponder) Card Line Settings

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> • 1 • 2
Port Name	Provides the ability to assign the specified port a name	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
SF BER Level	Sets the signal fail bit error rate	<ul style="list-style-type: none"> • 1E-3 • 1E-4 • 1E-5
SD BER Level	Sets the signal degrade bit error rate	<ul style="list-style-type: none"> • 1E-5 • 1E-6 • 1E-7 • 1E-8 • 1E-9
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS

Table 13-21 TXP_MR_10G (Transponder) Card Line Settings (continued)

Parameter	Description	Options
AINS Soak	Automatic in-service soak	<ul style="list-style-type: none"> Duration of valid input signal in hh.mm after which the card becomes in service (IS) automatically. 0 to 48 hours, 15 minutes increments.
ALS Mode	Sets the automatic laser shutdown function	<ul style="list-style-type: none"> Disabled Auto Restart Manual Restart Manual Restart for Test

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A276 Change Line Threshold Settings for TXP_MR_10G Cards

Purpose	This task changes the line threshold settings for TXP_MR_10G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the TXP_MR_10G card where you want to change the line threshold settings.

Step 2 Click the **Provisioning > Line Thresholds** tabs.

Step 3 Modify any of the settings described in Table 13-22.

Table 13-22 TXP_MR_10G (Transponder) Card Line Thresholds Settings

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> 1 2
CV	Coding violations	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, or for Line (Far End only), Section or Line. Select bullet and click Refresh button.

Table 13-22 TXP_MR_10G (Transponder) Card Line Thresholds Settings (continued)

Parameter	Description	Options
ES	Errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, or for Line (Far End only), Section or Line. Select bullet and click Refresh button.
SES	Severely errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, or for Line (Far End only), Section or Line. Select bullet and click Refresh button.
SEFS	Severely errored framing seconds	Numeric. Can be set for Far End, for 15-minute or one-day intervals, for Section only. Select bullet and click Refresh button.
FC	Failure count	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select bullet and click Refresh button.
UAS	Unavailable seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select bullet and click Refresh button.

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A277 Change Optical Thresholds Settings for TXP_MR_10G Cards

Purpose	This task changes the optical threshold settings for TXP_MR_10G(Transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the OC-N card where you want to change the optical threshold settings.

Step 2 Click the **Provisioning > Optical Thresholds** tabs.

Step 3 Modify any of the settings described in Table 13-23.

Table 13-23 TXP_MR_10G (Transponder) Card Optical Thresholds Settings

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> • 1 • 2
Laser Bias High (%)	Sets the warning threshold for low laser bias current	Numeric, in percent range 0 to 100
RX Power High (dBm)	Sets the warning threshold for high receiver input power	Numeric, in dBm range -40.0 to +30.0
RX Power Low (dBm)	Sets the warning threshold for low receiver input power	Numeric, in dBm range -40.0 to +30.0
TX Power High (dBm)	Sets the warning threshold for high transmitter output power	Numeric, in dBm range -40.0 to +30.0
TX Power Low (dBm)	Sets the warning threshold for low transmitter output power	Numeric, in dBm range -40.0 to +30.0

- Step 4** Click **Apply**.
- Step 5** Click the **Alarm** radio button and click **Refresh**.
- Step 6** Modify any of the settings described in Table 13-23.
- Step 7** Click **Apply**.
- Step 8** Return to your originating procedure (NTP).

DLP-A278 Change Section Trace Settings for TXP_MR_10G Cards

Purpose	This task changes the section trace settings for TXP_MR_10G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the TXP_MR_10G card where you want to change the section trace settings.
- Step 2** Click the **Provisioning > Section Trace** tab.
- Step 3** Modify any of the settings described in Table 13-24.

Table 13-24 TXP_MR_10G (Transponder) Card Section Trace Settings

Parameter	Description	Options
Port #	Port number	<ul style="list-style-type: none"> 1 2
Trace Mode	Sets the trace mode	<ul style="list-style-type: none"> Off/None Manual
Section Trace String Size	Sets the trace string size	<ul style="list-style-type: none"> 1 byte 16 byte
Transmit	Displays the current transmit string; sets a new transmit string	String of trace string size
Expected	Displays the current expected string; sets a new expected string	String of trace string size
Received	Displays the current received string (read only)	String of trace string size

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A279 Change Optical Transport Network Settings for TXP_MR_10G Cards

Purpose	This task changes the line optical transport network (OTN) settings for TXP_MR_10G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the TXP_MR_10G card where you want to change the OTN settings.

Step 2 Click the **Provisioning > OTN** tabs.

Step 3 Modify any of the settings described in Table 13-25.

Table 13-25 TXP_MR_10G (Transponder) Card OTN Settings

Parameter	Description	Options
OTN Lines	Port number (read-only)	2
Port #		
OTN Lines G.709 OTN	Sets the OTN lines according to ITU-T G.709	<ul style="list-style-type: none"> Enabled Disabled

Table 13-25 TXP_MR_10G (Transponder) Card OTN Settings (continued)

Parameter	Description	Options
OTN Lines FEC	Sets the OTN lines to forward error correction (FEC)	<ul style="list-style-type: none"> Enabled Disabled
OTN Lines SF BER	Sets the signal fail bit error rate	<ul style="list-style-type: none"> 1E-5
OTN Lines SD BER	Sets the signal degrade bit error rate	<ul style="list-style-type: none"> 1E-5 1E-6 1E-7 1E-8 1E-9
G.709 Thresholds Port	Port number (read-only)	2
G.709 Thresholds ES	Errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds SES	Severely errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds UAS	Unavailable seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds BBE	Background block errors	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds FC	Failure counter	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
FEC Thresholds Port	Port number (read-only)	2
FEC Thresholds	Bit Errors Corrected	Numeric. Can be set for 15-minute or one-day intervals.
FEC Thresholds	Uncorrectable Words	Numeric. Can be set for 15-minute or one-day intervals.
Trail Trace Identifier	Level	<ul style="list-style-type: none"> Section Path

Table 13-25 TXP_MR_10G (Transponder) Card OTN Settings (continued)

Parameter	Description	Options
Trail Trace Identifier Trace Mode	Sets the trace mode	<ul style="list-style-type: none"> Off/None Manual
Trail Trace Identifier Transmit	Displays the current transmit string; sets a new transmit string	String of trace string size; trail trace identifier is 64 bytes in length.
Trail Trace Identifier Expected	Displays the current expected string; sets a new expected string	String of trace string size
Trail Trace Identifier Received	Displays the current received string (read only)	String of trace string size

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

NTP-A207 Modify Line Settings and PM Parameter Thresholds for MXP_2.5G_10G Cards

Purpose	This procedure changes the line and threshold settings for MXP_2.5G_10G (muxponder) cards. This procedure applies to both DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A249 Install the Transponder and Muxponder Cards, page 2-15
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the muxponder card settings. If you are already logged in, proceed to Step 2.

Step 2 Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Step 3 Perform any of the following tasks as needed:

- DLP-A280 Change Card Settings for MXP_2.5G_10G Cards, page 13-33
- DLP-A281 Change Line Settings for MXP_2.5G_10G Cards, page 13-35
- DLP-A282 Change Line Thresholds Settings for MXP_2.5G_10G Cards, page 13-36

- DLP-A283 Change Optical Thresholds Settings for MXP_2.5G_10G Cards, page 13-38
- DLP-A284 Change Section Trace Settings for MXP_2.5G_10G Cards, page 13-39
- DLP-A285 Change Optical Transport Network Settings for MXP_2.5G_10G Cards, page 13-40

Step 4 Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Stop. You have completed this procedure.

DLP-A280 Change Card Settings for MXP_2.5G_10G Cards

Purpose	This task changes the card settings for MXP_2.5G_10G (muxponder) cards, including payload type, termination mode, and wavelength.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the MXP_2.5G_10G card where you want to change the card settings.

Step 2 Click the **Provisioning > Card** tabs.

Step 3 Modify any of the settings described in Table 13-26.

Table 13-26 MXP_2.5G_10G (Muxponder) Card Settings

Parameter	Description	Options
Payload Type	Sets the type of payload	<ul style="list-style-type: none"> • OC3 • OC12 • OC48 • STM1 • STM4 • STM16 • 1G Ethernet • 1G Fiber Channel/FICON • 2G Fiber Channel/FICON • ESCON • DV6000 • SDI/D1 Video • HDTV • Pass Through
Termination Mode	Sets the mode of operation	<ul style="list-style-type: none"> • Transparent • Section • Line
Wavelength	Sets the wavelength of the DWDM side optical transmitter	<ul style="list-style-type: none"> • First Tunable Wavelength • (Further wavelengths in 100 GHz ITU spacing)
Regeneration Peer Slot	Sets the regeneration peer slot	<ul style="list-style-type: none"> • None • 1 • 2 • 3 • 4 • 5 • 6 • 12 • 13 • 14 • 15 • 16 • 17
Regeneration Group Name	Sets the regeneration peer group name.	User defined.

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A281 Change Line Settings for MXP_2.5G_10G Cards

Purpose	This task changes the line settings for MXP_2.5G_10G (muxponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Double-click the MXP_2.5G_10G card where you want to change the line settings.
- Step 2** Click the **Provisioning > Line** tab.
- Step 3** Modify any of the settings described in Table 13-27.

Table 13-27 MXP_2.5G_10G (Muxponder) Card Line Settings

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> • 1 • 2 • 3 • 4 • 5
Port Name	Provides the ability to assign the specified port a name	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
SF BER Level	Sets the signal fail bit error rate	<ul style="list-style-type: none"> • 1E-3 • 1E-4 • 1E-5
SD BER Level	Sets the signal degrade bit error rate	<ul style="list-style-type: none"> • 1E-5 • 1E-6 • 1E-7 • 1E-8 • 1E-9

Table 13-27 MXP_2.5G_10G (Muxponder) Card Line Settings (continued)

Parameter	Description	Options
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service	<ul style="list-style-type: none"> IS OOS OOS_MT OOS_AINS
AINS Soak	Automatic in-service soak	<ul style="list-style-type: none"> Duration of valid input signal in hh.mm after which the card becomes in service (IS) automatically. 0 to 48 hours, 15 minutes increments
ALS Mode	Sets the automatic laser shutdown function	<ul style="list-style-type: none"> Disabled Auto Restart Manual Restart Manual Restart for Test
Provides Sync	If checked, the card is provisioned as a network element timing reference	<ul style="list-style-type: none"> Yes No (Read-only)
Enable Sync Msg	Enables synchronization status messages (S1 byte), which allow the node to choose the best timing source	<ul style="list-style-type: none"> Yes No
Send DoNotUse	When checked, sends a DUS (do not use) message on the S1 byte	<ul style="list-style-type: none"> Yes No

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A282 Change Line Thresholds Settings for MXP_2.5G_10G Cards

Purpose	This task changes the line threshold settings for MXP_2.5G_10G (Muxponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the MXP_2.5G_10G card where you want to change the line threshold settings.

Step 2 Click the **Provisioning > Line Thresholds** tabs.

Step 3 Modify any of the settings described in Table 13-28.

Table 13-28 MXP_2.5G_10G (Muxponder) Card Line Threshold Settings

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> • 1 • 2 • 3 • 4 • 5
CV	Coding violations	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, or for Line (Far End only), Section or Line. Select bullet and click Refresh button.
ES	Errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, or for Line (Far End only), Section or Line. Select bullet and click Refresh button.
SES	Severely errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, or for Line (Far End only), Section or Line. Select bullet and click Refresh button.
SEFS	Severely errored framing seconds	Numeric. Can be set for Far End, for 15-minute or one-day intervals, for Section only. Select bullet and click Refresh button.
FC	Failure count	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select bullet and click Refresh button.
UAS	Unavailable seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select bullet and click Refresh button.

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A283 Change Optical Thresholds Settings for MXP_2.5G_10G Cards

Purpose	This task changes the optical threshold settings for MXP_2.5G_10G (muxponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the MXP_2.5G_10G card where you want to change the optical threshold settings.
- Step 2** Click the **Provisioning > Optical Thresholds** tabs.
- Step 3** Modify any of the settings described in Table 13-29.

Table 13-29 MXP_2.5G_10G (Muxponder) Card Optical Thresholds Settings

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> • 1 • 2 • 3 • 4 • 5
Laser Bias Low (%)	Sets the warning threshold for low laser bias current	Numeric, in percent range 0 to 100
RX Power High (dBm)	Sets the warning threshold for high receiver input power	Numeric, in dBm range -40.0 to +30.0
RX Power Low (dBm)	Sets the warning threshold for low receiver input power	Numeric, in dBm range -40.0 to +30.0
TX Power High (dBm)	Sets the warning threshold for high transmitter output power	Numeric, in dBm range -40.0 to +30.0
TX Power Low (dBm)	Sets the warning threshold for low transmitter output power	Numeric, in dBm range -40.0 to +30.0

- Step 4** Click **Apply**.
- Step 5** Click the **Alarm** radio button and click **Refresh**.
- Step 6** Modify any of the settings described in Table 13-23.
- Step 7** Click **Apply**.
- Step 8** Return to your originating procedure (NTP).

DLP-A284 Change Section Trace Settings for MXP_2.5G_10G Cards

Purpose	This task changes the section trace settings for MXP_2.5G_10G (muxponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the MXP_2.5G_10G card where you want to change the section trace settings.
- Step 2** Click the **Provisioning > Section Trace** tabs.
- Step 3** Modify any of the settings described in Table 13-30.

Table 13-30 MXP_2.5G_10G (Muxponder) Card Section Trace Settings

Parameter	Description	Options
Port #	Port number	<ul style="list-style-type: none"> • 1 • 2 • 3 • 4 • 5
Trace Mode	Sets the trace mode	<ul style="list-style-type: none"> • Off/None • Manual
Section Trace String Size	Sets the trace string size	<ul style="list-style-type: none"> • 1 byte • 16 byte
Transmit	Displays the current transmit string; sets a new transmit string	String of trace string size
Expected	Displays the current expected string; sets a new expected string	String of trace string size
Received	Displays the current received string (read only)	String of trace string size

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A285 Change Optical Transport Network Settings for MXP_2.5G_10G Cards

Purpose	This task changes the line OTN settings for MXP_2.5G_10G (muxponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the MXP_2.5G_10G card where you want to change the OTN settings.
- Step 2** Click the **Provisioning > OTN** tabs.
- Step 3** Modify any of the settings described in Table 13-31.

Table 13-31 MXP_2.5G_10G (Muxponder) Card OTN Settings

Parameter	Description	Options
OTN Lines Port #	Port number (read-only)	5
OTN Lines G.709 OTN	Sets the OTN lines according to ITU-T G.709	<ul style="list-style-type: none"> Enabled Disabled
OTN Lines FEC	Sets the OTN lines to forward error correction (FEC)	<ul style="list-style-type: none"> Enabled Disabled
OTN Lines SF BER	Sets the signal fail bit error rate	<ul style="list-style-type: none"> 1E-5
OTN Lines SD BER	Sets the signal degrade bit error rate	<ul style="list-style-type: none"> 1E-5 1E-6 1E-7 1E-8 1E-9
G.709 Thresholds Port	Port number (read-only)	5
G.709 Thresholds ES	Errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds SES	Severely errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.

Table 13-31 MXP_2.5G_10G (Muxponder) Card OTN Settings (continued)

Parameter	Description	Options
G.709 Thresholds UAS	Unavailable seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds BBE	Background block errors	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds FC	Failure counter	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
FEC Thresholds Port	Port number (read-only)	5
FEC Thresholds	Bit Errors Corrected	Numeric. Can be set for 15-minute or one-day intervals.
FEC Thresholds	Uncorrectable Words	Numeric. Can be set for 15-minute or one-day intervals.
Trail Trace Identifier Level	Level	<ul style="list-style-type: none"> Section Path
Trail Trace Identifier Trace Mode	Sets the trace mode	<ul style="list-style-type: none"> Off/None Manual
Trail Trace Identifier Transmit	Displays the current transmit string; sets a new transmit string	String of trace string size; trail trace identifier is 64 bytes in length.
Trail Trace Identifier Expected	Displays the current expected string; sets a new expected string	String of trace string size
Trail Trace Identifier Received	Displays the current received string (read only)	String of trace string size

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

NTP-A237 Modify Line Settings and PM Parameter Thresholds for TXP_MR_2.5G and TXPP_MR_2.5G Cards

Purpose	This procedure changes the line and threshold settings for TXP_MR_2.5G and TXPP_MR_2.5G (transponder) cards. This procedure applies to DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A249 Install the Transponder and Muxponder Cards, page 2-15.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the transponder card settings. If you are already logged in, proceed to Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A471 Change Card Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards, page 13-42
 - DLP-A472 Change Line Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards, page 13-44
 - DLP-A473 Change Line Threshold Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards, page 13-46
 - DLP-A474 Change Optical Thresholds Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards, page 13-48
 - DLP-A475 Change Section Trace Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards, page 13-49
 - DLP-A476 Change Optical Transport Network Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards, page 13-50
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Stop. You have completed this procedure.**
-

DLP-A471 Change Card Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards

Purpose	This task changes the card settings for TXP_MR_2.5G and TXPP_MR_2.5G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the TXP_MR_2.5G or TXPP_MR_2.5G card where you want to change the line settings.
- Step 2** Click the **Provisioning > Card** tabs.
- Step 3** Modify any of the settings described in Table 13-32.

Table 13-32 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Settings

Parameter	Description	Options
Payload Type	Sets the type of payload	<ul style="list-style-type: none"> • OC3 • OC12 • OC48 • STM1 • STM4 • STM16 • 1G Ethernet • 1G Fiber Channel/FICON • 2G Fiber Channel/FICON • ESCON • DV6000 • SDI/D1 Video • HDTV • Pass Through
Termination Mode	Sets the mode of operation (option only supported for SONET/SDH payloads)	<ul style="list-style-type: none"> • Transparent • Section • Line
Wavelength	Sets the wavelength of the DWDM side optical transmitter	<ul style="list-style-type: none"> • First Tunable Wavelength • (Further wavelengths in 100 GHz ITU spacing) <p>Note The four available wavelengths are listed in the Card Parameters section of the window.</p>

Table 13-32 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Settings (continued)

Parameter	Description	Options
Regeneration Peer Slot	Sets the regeneration peer slot	<ul style="list-style-type: none"> • None • 1 • 2 • 3 • 4 • 5 • 6 • 12 • 13 • 14 • 15 • 16 • 17
Regeneration Group Name	Sets the regeneration peer group name.	User defined.

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A472 Change Line Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards

Purpose	This task changes the line settings for TXP_MR_2.5G and TXPP_MR_2.5G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the TXP_MR_2.5G or TXPP_MR_2.5G card where you want to change the line settings.

Step 2 Click the **Provisioning > Line** tabs.

Step 3 Modify any of the settings described in Table 13-33.

Table 13-33 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Line Settings

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> • 1 • 2 • 3 (TXPP_MR_2.5G card only)
Port Name	Provides the ability to assign the specified port a name	<p>User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default.</p> <p>See the “DLP-A314 Assign a Name to a Port” task on page 8-17.</p>
SF BER Level	Sets the signal fail bit error rate (OC-N and STM-N payloads only)	<ul style="list-style-type: none"> • 1E-5
SD BER Level	Sets the signal degrade bit error rate (OC-N and STM-N payloads only)	<ul style="list-style-type: none"> • 1E-5 • 1E-6 • 1E-7 • 1E-8 • 1E-9
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS
AINS Soak	Automatic in-service soak (OC-N and STM-N payloads only)	<ul style="list-style-type: none"> • Duration of valid input signal in hh.mm after which the card becomes in service (IS) automatically. • 0 to 48 hours, 15 minutes increments.
ALS Mode	Sets the automatic laser shutdown function	<ul style="list-style-type: none"> • Disabled • Auto Restart • Manual Restart • Manual Restart for Test

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A473 Change Line Threshold Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards

Purpose	This task changes the line threshold settings for TXP_MR_2.5G and TXPP_MR_2.5G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the TXP_MR_2.5G or TXPP_MR_2.5G card where you want to change the line threshold settings.
- Step 2** Click the **Provisioning > Line Thresholds** tabs.
- Step 3** Modify any of the settings as follows:
- For OC-3/STM-1, OC-12/STM-4, and OC-48/STM16 payloads, see Table 13-34.
 - For 1G Ethernet, 1G and 2G fiber channel/FICON payloads, see Table 13-35.

Table 13-34 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Line Thresholds Settings for OC-3/STM-1, OC-12/STM-4, and OC-48/STM-16 Payloads

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> 1 2 3 (TXPP_MR_2.5G card only)
CV	Coding violations	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, or for Line (Far End only), Section, or Line. Select the bullet and click Refresh.
ES	Errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, or for Line (Far End only), Section, or Line. Select the bullet and click Refresh.
SES	Severely errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, or for Line (Far End only), Section, or Line. Select the bullet and click Refresh.
SEFS	Severely errored framing seconds (section only)	Numeric. Can be set for Far End, for 15-minute or one-day intervals for Section only. Select the bullet and click Refresh.

Table 13-34 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Line Thresholds Settings for OC-3/STM-1, OC-12/STM-4, and OC-48/STM-16 Payloads (continued)

Parameter	Description	Options
FC	Failure count (line only)	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals for Line only. Select the bullet and click Refresh.
UAS	Unavailable seconds (line only)	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select the bullet and click Refresh.

Table 13-35 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Line Thresholds Settings for 1G Ethernet, 1G Fiber Channel/FICON Payloads

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> • 1 • 2 • 3 (TXPP_MR_2.5G card only)
Valid Packets	Number of valid packets	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select the bullet and click Refresh.
Invalid Packets	Number of invalid packets	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select the bullet and click Refresh.
Code Group Violations	Number of code group violations	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select the bullet and click Refresh.
Idle Ordered Sets	Number of idle ordered sets	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select the bullet and click Refresh.
Non Idle Ordered Sets	Number of non-idle ordered sets	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select the bullet and click Refresh.
Data Code Groups	Number of data code groups (excluding ordered sets)	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for Line only. Select the bullet and click Refresh.

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A474 Change Optical Thresholds Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards

Purpose	This task changes the optical threshold settings for TXP_MR_2.5G and TXPP_MR_2.5G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the TXP_MR_2.5G or TXPP_MR_2.5G card where you want to change the optical threshold settings.
- Step 2** Click the **Provisioning > Optical Thresholds** tabs.
- Step 3** Modify any of the settings described in Table 13-36.

Table 13-36 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Optical Thresholds Settings

Parameter	Description	Options
Port #	Port number (read-only)	<ul style="list-style-type: none"> • 1 • 2 • 3 (TXPP_MR_2.5G only)
Laser Bias Low (%)	Sets the warning threshold for low laser bias current	Numeric, in percent range 0 to 100 (client side) range 0 to 100 (trunk side)
RX Power High (dBm)	Sets the warning threshold for high receiver input power	Numeric, in dBm range -40.0 to +30.0 (client side) range -40.0 to +30.0 (trunk side)
RX Power Low (dBm)	Sets the warning threshold for low receiver input power	Numeric, in dBm range -40.0 to +30.0 (client side) range -40.0 to +30.0 (trunk side)
TX Power High (dBm)	Sets the warning threshold for high transmitter output power	Numeric, in dBm range -40.0 to +30.0 (client side) — (trunk side)
TX Power Low (dBm)	Sets the warning threshold for low transmitter output power	Numeric, in dBm range -40.0 to +30.0 (client side) — (trunk side)

- Step 4** Click **Apply**.

- Step 5** Click the **Alarm** radio button and click **Refresh**.
- Step 6** Modify any of the settings described in Table 13-23.
- Step 7** Click **Apply**.
- Step 8** Return to your originating procedure (NTP).

DLP-A475 Change Section Trace Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards

Purpose	This task changes the section trace settings for TXP_MR_2.5G and TXPP_MR_2.5G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the TXP_MR_2.5G or TXPP_MR_2.5G card where you want to change the section trace settings.
- Step 2** Click the **Provisioning > Section Trace** tab.
- Step 3** Modify any of the settings described in Table 13-37.

Table 13-37 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card Section Trace Settings

Parameter	Description	Options
Port #	Port number	<ul style="list-style-type: none"> • 1 • 2 • 3 (TXPP_MR_2.5G only)
Trace Mode	Sets the trace mode	<ul style="list-style-type: none"> • Off/None • Manual
Section Trace String Size	Sets the trace string size	<ul style="list-style-type: none"> • 1 byte • 16 byte
Transmit	Displays the current transmit string; sets a new transmit string	String of trace string size
Expected	Displays the current expected string; sets a new expected string	String of trace string size
Received	Displays the current received string (read only)	String of trace string size

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A476 Change Optical Transport Network Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards

Purpose	This task changes the line optical transport network (OTN) settings for TXP_MR_2.5G and TXPP_MR_2.5G (transponder) cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the TXP_MR_2.5G or TXPP_MR_2.5G card where you want to change the OTN settings.
- Step 2** Click the **Provisioning > OTN** tabs.
- Step 3** Modify any of the settings described in Table 13-38.

Table 13-38 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card OTN Settings

Parameter	Description	Options
OTN Lines Port #	Port number (read-only)	2
OTN Lines G.709 OTN	Sets the OTN lines according to ITU-T G.709	<ul style="list-style-type: none"> Enabled Disabled
OTN Lines FEC	Sets the OTN lines to forward error correction (FEC)	<ul style="list-style-type: none"> Enabled Disabled
OTN Lines SF BER	Sets the signal fail bit error rate	<ul style="list-style-type: none"> 1E-5
OTN Lines SD BER	Sets the signal degrade bit error rate	<ul style="list-style-type: none"> 1E-5 1E-6 1E-7 1E-8 1E-9
G.709 ¹ Thresholds Port	Port number (read-only)	2

Table 13-38 TXP_MR_2.5G and TXPP_MR_2.5G (Transponder) Card OTN Settings (continued)

Parameter	Description	Options
G.709 Thresholds ES	Errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds SES	Severely errored seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds UAS	Unavailable seconds	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds BBE	Background block errors	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
G.709 Thresholds FC	Failure counter	Numeric. Can be set for Near End or Far End, for 15-minute or one-day intervals, for SM (OTUk) or PM (ODUk). Select bullet and click Refresh button.
FEC Thresholds Port	Port number (read-only)	2
FEC Thresholds	Bit Errors Corrected	Numeric. Can be set for 15-minute or one-day intervals.
FEC Thresholds	Uncorrectable Words	Numeric. Can be set for 15-minute or one-day intervals.
Trail Trace Identifier	Level	<ul style="list-style-type: none"> Section Path
Trail Trace Identifier Trace Mode	Sets the trace mode	<ul style="list-style-type: none"> Off/None Manual
Trail Trace Identifier Transmit	Displays the current transmit string; sets a new transmit string	String of trace string size; trail trace identifier is 64 bytes in length.
Trail Trace Identifier Expected	Displays the current expected string; sets a new expected string	String of trace string size
Trail Trace Identifier Received	Displays the current received string (read only)	String of trace string size

1. Latency for 1G-FC payload without G.709 is 4 microseconds, with G.709 is 40 microseconds. Latency for 2G-FC payload without G.709 is 2 microseconds, with G.709 is 20 microseconds. Consider these values when planning a FC network that is sensitive to latency.

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

NTP-A90 Modify Alarm Interface Controller Settings

Purpose	This procedure provisions the AIC card to receive input from, or send output to, external devices wired to the backplane (called external alarms and controls or environmental alarms) or to change orderwire settings. This procedure applies to DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A32 Provision External Alarms and Controls on the Alarm Interface Controller, page 9-33 DLP-A83 Provision Orderwire, page 8-94.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the AIC card settings. If you are already logged in, proceed to Step 2.

Step 2 Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Step 3 Perform any of the following tasks as needed:

- DLP-A173 Change External Alarms Using the AIC Card, page 13-53
- DLP-A174 Change External Controls Using the AIC Card, page 13-53
- DLP-A175 Change Orderwire Settings Using the AIC Card, page 13-54

Step 4 Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Stop. You have completed this procedure.

DLP-A173 Change External Alarms Using the AIC Card

Purpose	This task changes external alarm settings on the AIC card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Confirm that external-device relays are wired to the ENVIR ALARMS IN backplane pins. See the “DLP-A19 Install Alarm Wires on the Backplane” task on page 1-37 for more information.
- Step 2** In node view, double-click the AIC card to display it in card view.
- Step 3** Click the **Provisioning > External Alarms** tabs.
- Step 4** Modify any of the following fields for each external device wired to the ONS 15454 backplane. For definitions of these fields, see the “NTP-A32 Provision External Alarms and Controls on the Alarm Interface Controller” procedure on page 9-33.
- Enabled
 - Alarm Type
 - Severity
 - Virtual Wire
 - Raised When
 - Description
- Step 5** To provision additional devices, complete Step 4 for each additional device.
- Step 6** Click **Apply**.
- Step 7** Return to your originating procedure (NTP).
-

DLP-A174 Change External Controls Using the AIC Card

Purpose	This task changes external control settings on the AIC card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Verify the external control relays to the ENVIR ALARMS OUT backplane pins. See the “DLP-A19 Install Alarm Wires on the Backplane” task on page 1-37 for more information.
- Step 2** In node view, double-click the AIC card to display it in card view.

- Step 3** Click the **Provisioning > External Controls** tabs.
- Step 4** Modify any of the following fields for each external control wired to the ONS 15454 backplane. For definitions of these fields, see the “NTP-A32 Provision External Alarms and Controls on the Alarm Interface Controller” procedure on page 9-33.
- Enabled
 - Trigger Type
 - Control Type
 - Description
- Step 5** To provision additional controls, complete Step 4 for each additional device.
- Step 6** Click **Apply**.
- Step 7** Return to your originating procedure (NTP).
-

DLP-A175 Change Orderwire Settings Using the AIC Card

Purpose	This task changes orderwire settings on the AIC card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

When provisioning orderwire for ONS 15454s residing in a ring, do not provision a complete orderwire loop. For example, a four-node ring typically has east and west ports provisioned at all four nodes. However, to prevent orderwire loops, provision two orderwire ports (east and west) at all but one of the ring nodes.



Tip

Before you begin, make a list of the ONS 15454 slots and ports that require orderwire communication.

- Step 1** In node view, double-click the AIC to display it in card view.
- Step 2** Click the **Provisioning > Local Orderwire** tabs or **Provisioning > Express Orderwire** tabs, depending on the orderwire path that you want to create.
- Step 3** If needed, adjust the Tx and Rx dBm by moving the slider to the right or left for the headset type (four-wire or two-wire) that you will use. In general, you should not need to adjust the dBm.
- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).
-

NTP-A118 Modify Alarm Interface Controller-International Settings

Purpose	This procedure provisions the AIC-I card to receive input from, or send output to, external devices wired to the backplane (called external alarms and controls or environmental alarms), or to change orderwire settings. This procedure applies to DWDM (Software R4.5) and non-DWDM (Software R4.1 and earlier) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A248 Provision External Alarms and Controls on the Alarm Interface Controller-International, page 9-35 and the DLP-A83 Provision Orderwire, page 8-94
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the AIC-I card settings. If you are already logged in, proceed to Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A208 Change External Alarms Using the AIC-I Card, page 13-55
 - DLP-A209 Change External Controls Using the AIC-I Card, page 13-56
 - DLP-A210 Change AIC-I Card Orderwire Settings, page 13-57
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Stop. You have completed this procedure.**
-

DLP-A208 Change External Alarms Using the AIC-I Card

Purpose	This task changes external alarm settings on the AIC-I card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note The procedure is the same if you are using the Alarm Expansion panel (AEP). In this case, the number of contacts that are shown on the screen is changed accordingly.

-
- Step 1** Confirm that external-device relays are wired to the ENVIR ALARMS IN backplane pins. See the “DLP-A19 Install Alarm Wires on the Backplane” task on page 1-37 for more information.
- Step 2** Double-click the AIC-I card to display it in card view.
- Step 3** Click the **Provisioning > External Alarms** tabs.
- Step 4** Modify any of the following fields for each external device wired to the ONS 15454 backplane. For definitions of these fields, see the “NTP-A248 Provision External Alarms and Controls on the Alarm Interface Controller-International” procedure on page 9-35.
- Enabled
 - Alarm Type
 - Severity
 - Virtual Wire
 - Raised When
 - Description
- Step 5** To provision additional devices, complete Step 4 for each additional device.
- Step 6** Click **Apply**.
- Step 7** Return to your originating procedure (NTP).
-

DLP-A209 Change External Controls Using the AIC-I Card

Purpose	This task changes external control settings on the AIC-I card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note The procedure is the same if you are using the Alarm Expansion panel (AEP). In this case, the number of contacts that are shown on the screen is changed accordingly.

- Step 1** Verify the external control relays to the ENVIR ALARMS OUT backplane pins. See the “DLP-A19 Install Alarm Wires on the Backplane” task on page 1-37 for more information.
- Step 2** In node view, double-click the AIC-I card to display it in card view.
- Step 3** On the **External Controls** subtab, modify any of the following fields for each external control wired to the ONS 15454 backplane. For definitions of these fields, see the “NTP-A248 Provision External Alarms and Controls on the Alarm Interface Controller-International” procedure on page 9-35.
- Enabled
 - Trigger Type
 - Control Type

- Description

- Step 4** To provision additional controls, complete Step 4 for each additional device.
- Step 5** Click **Apply**.
- Step 6** Return to your originating procedure (NTP).
-

DLP-A210 Change AIC-I Card Orderwire Settings

Purpose	This task changes orderwire settings on the AIC-I card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

When provisioning orderwire for ONS 15454s residing in a ring, do not provision a complete orderwire loop. For example, a four-node ring typically has east and west ports provisioned at all four nodes. However, to prevent orderwire loops, provision two orderwire ports (east and west) at all but one of the ring nodes.



Tip

Before you begin, make a list of the ONS 15454 slots and ports that require orderwire communication.

- Step 1** In node view, double-click the AIC-I card to display it in card view.
- Step 2** Click the **Provisioning > Local Orderwire** tabs or the **Provisioning > Express Orderwire** tabs, depending on the orderwire path that you want to create. Provisioning steps are the same for both types of orderwire.
- Step 3** If needed, adjust the Tx and Rx dBm by moving the slider to the right or left for the headset type (four-wire or two-wire) that you will use. In general, you should not need to adjust the dBm.
- Step 4** If you want to turn on the audible alert (buzzer) for the orderwire, check the **Buzzer On** check box.
- Step 5** Click **Apply**.
- Step 6** Return to your originating procedure (NTP).
-

NTP-A91 Upgrade DS-1 and DS-3 Protect Cards from 1:1 Protection to 1:N Protection

Purpose	This procedure converts DS-1 and DS-3 protect cards from 1:1 to 1:N protection. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A71 Create a 1:1 Protection Group, page 4-27.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to convert the DS-1 or DS-3 cards from 1:1 to 1:N protection. If you are already logged in, proceed to Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A176 Convert DS1-14 Cards From 1:1 to 1:N Protection, page 13-58
 - DLP-A177 Convert DS3-12 Cards From 1:1 to 1:N Protection, page 13-60
 - DLP-A178 Convert DS3-12E Cards From 1:1 to 1:N Protection, page 13-61
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
Stop. You have completed this procedure.
-

DLP-A176 Convert DS1-14 Cards From 1:1 to 1:N Protection

Purpose	This task converts DS1-14 cards in a 1:1 protection scheme to 1:N protection. A 1:N protection group can protect a maximum of five working cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Note

This procedure assumes DS1-14 cards are installed in Slots 1 through 6 and/or Slots 12 through 17. The DS1-14 cards in Slots 3 and 15, which are the protection slots, will be replaced with DS1N-14 cards. The ONS 15454 must run CTC Release 2.0 or later. The procedure also requires at least one DS1N-14 card.

-
- Step 1** In node view, click the **Maintenance > Protection** tabs.

- Step 2** Click the protection group that contains Slot 3 or Slot 15 (where you will install the DS1N-14 card).
- Step 3** Make sure the slot you are upgrading is not carrying working traffic. In the Selected Group list, the protect slot must say Protect/Standby (shown in on page 13-59) and not Protect/Active. If the protect slot status is Protect/Active, switch traffic to the working card:
- Under Selected Group, click the protect card.
 - Next to Switch Commands, click **Switch**.
- The working slot should change to Working/Active and the protect slot should change to Protect/Standby. If they do not change, do not continue. Troubleshoot the working card and slot to determine why the card cannot carry working traffic.
- Step 4** Repeat Steps 1 through 3 for each protection group that you need to convert.
- Step 5** Click the **Alarms** tab to verify that no standing alarms exist for any of the DS1-14 cards that you are converting. If alarms exist and you have difficulty clearing them, contact your next level of support.
- Step 6** Click the **Provisioning > Protection** tabs.
- Step 7** Click the 1:1 protection group that contains the cards that you will move into the new protection group.
- Step 8** Click **Delete**.
- Step 9** When the confirmation dialog box appears, click **Yes**.



Note Deleting the 1:1 protection group does not disrupt service. However, no protection bandwidth exists for the working circuits until you complete the 1:N protection procedure. Therefore, complete this procedure as quickly as possible.

- Step 10** If needed, repeat Steps 7 – 9 for other DS-1 1:1 protection groups that you want to include in a 1:N group.
- Step 11** Physically remove the DS1-14 card from Slot 3 or Slot 15. This raises an improper removal alarm.
- Step 12** In node view, right-click the slot that held the removed card and select **Delete** from the drop-down menu. Wait for the card to disappear from node view.
- Step 13** Physically insert a DS1N-14 card into the same slot.
- Step 14** Verify that the card boots up properly.
- Step 15** Click the **Inventory** tab and verify that the new card appears as a DS1N-14.
- Step 16** Click the **Provisioning > Protection** tabs.
- Step 17** Click **Create**.
- Step 18** Type a name for the protection group in the Name field (optional).
- Step 19** From the Type drop-down menu, choose **1:N (card)**.
- Step 20** From the Protect Card drop-down menu, choose the DS1N-14 card. Verify that the correct DS1N-14 card appears in the Protect Card field.
- Step 21** In the Available Cards list, highlight the cards that you want in the protection group. Click the arrow (>>) tab to move the cards to the Working Cards list.
- Step 22** If necessary, set a new reversion time in the Reversion time drop-down menu.



Note 1:N protection groups are always revertive.

- Step 23** Click **OK**. The protection group appears in the Protection Groups list on the Protection subtab.

Step 24 Return to your originating procedure (NTP).

DLP-A177 Convert DS3-12 Cards From 1:1 to 1:N Protection

Purpose	This task converts DS3-12 cards in 1:1 protection to 1:N protection. A 1:N protection group can protect a maximum of five working cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Note

This procedure assumes that DS3-12 cards are installed in Slots 1 - 6 and/or Slots 12 - 17. The DS3-12 cards in Slots 3 or 15, which are the protection slots, will be replaced with DS3N-12 cards. The ONS 15454 must run CTC Release 2.0 or later. The procedure also requires at least one DS3N-12 card and a protection group with DS3-12 cards.

- Step 1** In node view, click the **Maintenance > Protection** tabs.
- Step 2** Click the protection group containing Slot 3 or Slot 15 (where you will install the DS3N-12 card).
- Step 3** Make sure the slot you are upgrading is not carrying working traffic. In the Selected Group list, the protect slot must say Protect/Standby as shown in on page 13-59, and not Protect/Active. If the protect slot status is Protect/Active, switch traffic to the working card:
- Under Selected Group, click the protect card.
 - Next to Switch Commands, click **Switch**.
- The working slot should change to Working/Active and the protect slot should change to Protect/Standby. If they fail to change, do not continue. Troubleshoot the working card and slot to determine why the card cannot carry working traffic.
- Step 4** Repeat Steps 2 and 3 for each protection group that you need to convert.
- Step 5** Click the **Alarms** tab to verify that no standing alarms exist for any of the DS3-12 cards you are converting. If alarms exist and you have difficulty clearing them, contact your next level of support.
- Step 6** Click the **Provisioning > Protection** tabs.
- Step 7** Click the 1:1 protection group that contains the cards that you will move into the new protection group.
- Step 8** Click **Delete**.
- Step 9** When the confirmation dialog box appears, click **Yes**.



Note

Deleting the 1:1 protection groups will not disrupt service. However, no protection bandwidth exists for the working circuits until the 1:N protection procedure is completed. Therefore, complete this procedure as soon as possible.

- Step 10** If you are deleting more than one DS-3 1:1 protection group, repeat Steps 7 through 9 for each group that you want to include in a 1:N group.

- Step 11** Physically remove the protect DS3-12 card from Slot 3 or Slot 15. This raises an improper removal alarm.
- Step 12** In node view, right-click the slot that held the removed card and choose **Delete** from the drop-down menu. Wait for the card to disappear from the node view.
- Step 13** Physically insert a DS3N-12 card into the same slot.
- Step 14** Verify that the card boots up properly.
- Step 15** Click the **Inventory** tab and verify that the new card appears as a DS3N-12 card.
- Step 16** Click the **Provisioning > Protection** tabs.
- Step 17** Click **Create**.
- Step 18** Type a name for the protection group in the Name field (optional).
- Step 19** Click **Type** and choose **1:N (card)** from the drop-down menu.
- Step 20** Verify that the DS3N-12 card appears in the Protect Card field.
- Step 21** In the Available Cards list, highlight the cards that you want in the protection group. Click the arrow (>>) tab to move the cards to the Working Cards list.
- Step 22** Click **OK**.
- The protection group should appear in the Protection Groups list on the Protection subtab.
- Step 23** Return to your originating procedure (NTP).

DLP-A178 Convert DS3-12E Cards From 1:1 to 1:N Protection

Purpose	This task converts DS3-12E cards in 1:1 protection to 1:N protection. A 1:N protection group can protect a maximum of five working cards.
Tools/Equipment	None
Prerequisite Procedures	“DLP-A60 Log into CTC” task on page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Note

This task assumes that DS3-12E cards are installed in Slots 1 - 6 and/or Slots 12 - 17. The DS3-12E cards in Slots 3 or 15, which are the protection slots, will be replaced with DS3N-12E cards. The procedure requires at least one DS3N-12E card and a protection group with DS3-12E cards.

- Step 1** In node view, click the **Maintenance > Protection** tab.
- Step 2** Click the protection group containing Slot 3 or Slot 15 (where you will install the DS3N-12E card).
- Step 3** Make sure the slot you are upgrading is not carrying working traffic. In the Selected Group list, the protect slot must say Protect/Standby as shown in on page 13-59, and not Protect/Active. If the protect slot status is Protect/Active, switch traffic to the working card:
- Under Selected Group, click the protect card.
 - Next to Switch Commands, click **Switch**.

The working slot should change to Working/Active and the protect slot should change to Protect/Standby. If they fail to change, do not continue. Troubleshoot the working card and slot to determine why the card cannot carry working traffic.

- Step 4** Repeat Steps 2 and 3 for each protection group that you need to convert.
- Step 5** Click the **Alarms** tab to verify that no standing alarms exist for any of the DS3-12E cards you are converting. If alarms exist and you have difficulty clearing them, contact your next level of support.
- Step 6** Click the **Provisioning > Protection** tab.
- Step 7** Click the 1:1 protection group that contains the cards that you will move into the new protection group.
- Step 8** Click **Delete**.
- Step 9** When the confirmation dialog box appears, click **Yes**.



Note Deleting the 1:1 protection groups will not disrupt service. However, no protection bandwidth exists for the working circuits until the 1:N protection procedure is completed. Do not delay when completing this procedure.

- Step 10** If you are deleting more than one DS-3 1:1 protection group, repeat Steps 7 through 9 for each group that you want to include in a 1:N group.
 - Step 11** Physically remove the protect DS3-12E card from Slot 3 or Slot 15. This raises an improper removal alarm.
 - Step 12** In node view, right-click the slot that held the removed card and choose **Delete** from the drop-down menu. Wait for the card to disappear from the node view.
 - Step 13** Physically insert a DS3N-12E card into the same slot.
 - Step 14** Verify that the card boots up properly.
 - Step 15** Click the **Inventory** tab and verify that the new card appears as a DS3N-12E.
 - Step 16** Click the **Provisioning > Protection** tabs.
 - Step 17** Click **Create**.
 - Step 18** Type a name for the protection group in the Name field (optional).
 - Step 19** Click **Type** and choose **1:N (card)** from the drop-down menu.
 - Step 20** Verify that the DS3N-12E card appears in the Protect Card field.
 - Step 21** In the Available Cards list, highlight the cards that you want in the protection group. Click the arrow (>>) tab to move the cards to the Working Cards list.
 - Step 22** Click **OK**.
The protection group should appear in the Protection Groups list on the Protection subtab.
 - Step 23** Return to your originating procedure (NTP).
-

NTP-A229 Modify Line Settings and PM Parameter Thresholds for Optical Service Channel Cards

Purpose	This procedure changes the line and threshold settings for optical service channel cards (OSCM and OSC-CSM). This procedure applies to DWDM (Software R4.5) nodes only.
Tools/Equipment	None
Prerequisite Procedures	NTP-A242 Install the DWDM Cards, page 2-23.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the OSCM or OSC-CSM card settings. If you are already logged in, proceed to Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A477 Change Optical Line Settings for OSCM and OSC-CSM Cards, page 13-63
 - DLP-A478 Change Line Threshold Settings for OSCM and OSC-CSM Cards, page 13-65
 - DLP-A479 Change Optical Line Settings for OSCM and OSC-CSM Cards, page 13-66
 - DLP-A480 Change Channel Settings for OSCM and OSC-CSM Cards, page 13-67
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Stop. You have completed this procedure.**
-

DLP-A477 Change Optical Line Settings for OSCM and OSC-CSM Cards

Purpose	This task changes the line settings for OSCM and OSC-CSM cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, double-click the OSCM or OSC-CSM card where you want to change the line settings.
- Step 2** Click the **Provisioning > OC3 Line > OC3 Line** tabs.
- Step 3** Modify any of the settings described in Table 13-39.

Table 13-39 OSCM and OSC-CSM Card OC-3 Line Settings

Parameter	Description	Options
Port #	Port number (read-only)	—
Port Name	Provides the ability to assign the specified port a name	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
SF BER Level	Sets the signal fail bit error rate	<ul style="list-style-type: none"> • 1E-3 • 1E-4 • 1E-5
SD BER Level	Sets the signal degrade bit error rate	<ul style="list-style-type: none"> • 1E-5 • 1E-6 • 1E-7 • 1E-8 • 1E-9
Provides Synch	If checked, the card is provisioned as a network element timing reference	<ul style="list-style-type: none"> • Checked • Unchecked (Read-only)
Enable Synch Messages	Enables synchronization status messages (S1 byte), which allow the node to choose the best timing source	<ul style="list-style-type: none"> • Checked • Unchecked
Send Do Not Use	When checked, sends a DUS (do not use) message on the S1 byte	<ul style="list-style-type: none"> • Checked • Unchecked
PJSTSMon #	Sets the STS that will be used for pointer justification. If set to 0, no STS is monitored. Only one STS can be monitored on each OC-N port.	<ul style="list-style-type: none"> • On • Off (Read-only)
State	Places port in or out of service	<ul style="list-style-type: none"> • In Service • Out of Service • Out of Service MT • Out of Service AINS
AINS Soak	Automatic in-service soak	<ul style="list-style-type: none"> • Duration of valid input signal in hh.mm after which the card becomes in service (IS) automatically. • 0 to 48 hours, 15 minutes increments.
Type	Defines the port as SONET or SDH. The Enable Sync Msg field and the Send Do Not Use field must be disabled before the port can be set to SDH.	<ul style="list-style-type: none"> • Sonet • SDH

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A478 Change Line Threshold Settings for OSCM and OSC-CSM Cards

Purpose	This task changes the optical line threshold settings for OSCM and OSC-CSM cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the OSCM or OSC-CSM card where you want to change the optical threshold settings.
- Step 2** Click the **Provisioning > OC3 Line > SONET Thresholds** tabs.
- Step 3** Modify any of the settings described in Table 13-40.

Table 13-40 OSCM and OSC-CSM Cards Optical Threshold Settings

Parameter	Description	Options
Port	Port number	—
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End). Select the bullet and click Refresh.
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End). Select the bullet and click Refresh.
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End). Select the bullet and click Refresh.
FC	Failure count	Numeric. Can be set for 15-minute or one-day intervals for Line or Section. Select the bullet and click the Refresh button or Path (Near and Far End)
UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End). Select the bullet and click Refresh.

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A479 Change Optical Line Settings for OSCM and OSC-CSM Cards

Purpose	This task changes the optical line settings for OSCM and OSC-CSM cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the OSCM or OSC-CSM card where you want to change the line settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in Table 13-41.

Table 13-41 OSCM and OSC-CSM Card Line Settings

Parameter	Description	Options
Port #	Displays the port number and TX or RX.	Read-only
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
Status	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS
Line Direction	Provides the ability to associate a card with the line direction. Use this field if you have two cards in the same shelf and must designate which one will carry the traffic flow from East to West, the second card will carry traffic from West to East.	<ul style="list-style-type: none"> • East to West • West to East
Type	Identifies the type of port such as Input Com, Output Com, Input Line, Output Line, Input OSC, and Output OSC.	Read only
Power	Shows the current power level per port.	Read only
VOA Mode	Shows the current functional mode of the VOA: constant gain mode, constant power mode, or not in use (N/A).	Read only

Table 13-41 OSCM and OSC-CSM Card Line Settings (continued)

Parameter	Description	Options
VOA Power Ref.	Shows the value of the optical output power going to a VOA when constant power mode is active. ANS is the only function that can modify this value.	Read only
VOA Power Calib.	The user can modify the optical output power to the VOA if necessary. This feature is normally used when the system is configured as “access” in Provisioning > WDM-ANS.	Numeric
VOA Attenuation Ref.	Shows the attenuation value of the VOA when the VOA is set in attenuation mode. ANS and APC are the only functions that can modify this value.	Read only
VOA Attenuation Calib.	The user can modify the attenuation value of the VOA if necessary when the VOA mode is set for constant attenuation.	Numeric

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A480 Change Channel Settings for OSCM and OSC-CSM Cards

Purpose	This task changes the optical channel threshold settings for OSCM and OSC-CSM cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the OSCM or OSC-CSM card where you want to change the optical threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** Modify any of the settings described in Table 13-42.

Table 13-42 OSCM and OSC-CSM Cards Optical Thresholds Settings

Parameter	Description	Options
Port	Port number (read-only)	—
Power Low (dBm)	Set the low power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.
Power High (dBm)	Set the high power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

NTP-A230 Modify Line Settings and PM Parameter Thresholds for Amplifier Cards

Purpose	This procedure changes the line and threshold settings for the OPT-PRE and OPT-BST amplifier cards. This procedure applies to DWDM (Software R4.5) nodes only.
Tools/Equipment	None
Prerequisite Procedures	NTP-A242 Install the DWDM Cards, page 2-23.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the OPT-PRE or OPT-BST amplifier card settings. If you are already logged in, proceed to Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A481 Change Optical Line Settings for OPT-PRE and OPT-BST Amplifiers, page 13-69
 - DLP-A482 Change Line Threshold Settings for OPT-PRE and OPT-BST Amplifiers, page 13-70
 - DLP-A483 Change Optical Amplifier Line Settings for OPT-PRE and OPT-BST Amplifiers, page 13-71
 - DLP-A484 Change Channel Settings for OPT-PRE and OPT-BST Amplifiers, page 13-72
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Stop. You have completed this procedure.

DLP-A481 Change Optical Line Settings for OPT-PRE and OPT-BST Amplifiers

Purpose	This task changes the line settings for OPT-PRE and OPT-BST amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the OPT-PRE or OPT-BST amplifier where you want to change the line settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in Table 13-43.

Table 13-43 OPT-PRE and OPT-BST Amplifier Line Settings

Parameter	Description	Options
Port #	Port number (read-only)	Displays port number and TX or RX
Port Name	Provides the ability to assign the specified port a name	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
Status	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS
Line Direction	Provides the ability to associate a card with the line direction. Use this field if you have two cards in the same shelf and must designate which one will carry the traffic flow from East to West, the second card will carry traffic from West to East.	<ul style="list-style-type: none"> • East to West • West to East
Type	Identifies the type of port such as Input Com, Output Com, Input Line, Output Line, Input OSC, and Output OSC.	Read only
Power	Shows the current power level per port.	Read only

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A482 Change Line Threshold Settings for OPT-PRE and OPT-BST Amplifiers

Purpose	This task changes the optical line threshold settings for OPT-PRE and OPT-BST amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, double-click the OPT-PRE or OPT-BST amplifier where you want to change the optical threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** Modify any of the settings described in Table 13-44.

Table 13-44 OPT-PRE and OPT-BST Amplifiers Optical Thresholds Settings

Parameter	Description	Options
Port	Port number (read-only)	—
Power Low (dBm)	Set the low power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.
Power High (dBm)	Set the high power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).
-

DLP-A483 Change Optical Amplifier Line Settings for OPT-PRE and OPT-BST Amplifiers

Purpose	This task changes the optical amplifier line settings for OPT-PRE and OPT-BST amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the OPT-PRE or OPT-BST amplifier where you want to change the line settings.
- Step 2** Click the **Provisioning > Opt. Ampli. Line > Parameters** tabs.
- Step 3** Modify any of the settings described in Table 13-45.

Table 13-45 OSCM and OSC-CSM Card Line Settings

Parameter	Description	Options
Port #	Port number (read-only)	Displays port number and TX or RX
Port Name	Provides the ability to assign the specified port a name	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
Status	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS
Line Direction	Provides the ability to associate a card with the line direction. Use this field if you have two cards in the same shelf and must designate which one will carry the traffic flow from East to West, the second card will carry traffic from West to East.	<ul style="list-style-type: none"> • East to West • West to East
Type	Identifies the type of port such as Input Com, Output Com, Input Line, Output Line, Input OSC, and Output OSC.	Read only
Power	Shows the current power level per port.	Read only
Power Ref.	Shows the total optical power going to the amplifier.	Read only
Power Calib.	The user can manually set the total optical power going to the amplifiers.	Numeric

Table 13-45 OSCM and OSC-CSM Card Line Settings (continued)

Parameter	Description	Options
Gain	The current gain of the amplifiers.	Read only
Gain Set Point	The value of the gain that the amplifier must achieve.	Read only or numeric depending on mode setting. When the system is configured as metro core, this field is read only. When the system is configured as metro access this field can be changed by the user.
Tilt Reference	This field is set to zero. It represents the default value for the amplifier tilt. In a future software release this value will be managed by APC.	Read only
Tilt Calibration	The user can manually set the amplifier tilt.	Numeric
Mode	Shows the working mode of the amplifier: control gain or control power	Read only

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A484 Change Channel Settings for OPT-PRE and OPT-BST Amplifiers

Purpose	This task changes the optical channel threshold settings for OPT-PRE and OPT-BST amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view, double-click the OPT-PRE or OPT-BST amplifier where you want to change the optical threshold settings.

Step 2 Click the **Provisioning > Opt. Ampli. Line > Optics Thresholds** tabs.

Step 3 Modify any of the settings described in Table 13-46.

Table 13-46 OPT-PRE and OPT-BST Cards Optical Thresholds Settings

Parameter	Description	Options
Port	Port number (read-only)	—

Table 13-46 OPT-PRE and OPT-BST Cards Optical Thresholds Settings (continued)

Parameter	Description	Options
Power Low (dBm)	Set the low power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.
Power High (dBm)	Set the high power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

NTP-A231 Modify Line Settings and PM Parameter Thresholds for Multiplexer and Demultiplexer Cards

Purpose	This procedure changes the line and threshold settings for the multiplexer and demultiplexer. The cards included in this category are the 32 MUX, 32 DMX, and the 4MD xx.x cards. This procedure applies to DWDM (Software R4.5) nodes only.
Tools/Equipment	None
Prerequisite Procedures	NTP-A242 Install the DWDM Cards, page 2-23.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to change the 32MUX, 32DMX, or 4MD xx.x card settings. If you are already logged in, proceed to Step 2.
- Step 2** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Perform any of the following tasks as needed:
- DLP-A485 Change Optical Line Settings for Multiplexer and Demultiplexer Cards, page 13-74
 - DLP-A486 Change Line Threshold Settings for Multiplexer and Demultiplexer Cards, page 13-75
 - DLP-A487 Change Optical Channel Settings for Multiplexer and Demultiplexer Cards, page 13-76
 - DLP-A488 Change Channel Settings for Multiplexer and Demultiplexer Cards, page 13-78
- Step 4** Complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Stop. You have completed this procedure.**

DLP-A485 Change Optical Line Settings for Multiplexer and Demultiplexer Cards

Purpose	This task changes the line settings for 32MUX, 32DMX, and 4MD xx.x multiplexer and demultiplexer cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the multiplexer or demultiplexer cards where you want to change the line settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in Table 13-47.

Table 13-47 Multiplexer and Demultiplexer Card Line Settings

Parameter	Description	Options
Port #	Port number (read-only)	Displays port number and TX or RX
Port Name	Provides the ability to assign the specified port a name	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS
Line Direction	Provides the ability to associate a card with the line direction. Use this field if you have two cards in the same shelf and must designate which one will carry the traffic flow from East to West, the second card will carry traffic from West to East.	<ul style="list-style-type: none"> • East to West • West to East
Type	Identifies the type of port such as Input Com, Output Com, Input Line, Output Line, Input OSC, and Output OSC.	Read only
Power	Shows the current power level per port.	Read only

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).

DLP-A486 Change Line Threshold Settings for Multiplexer and Demultiplexer Cards

Purpose	This task changes the optical line threshold settings for 32MUX, 32DMX, and 4MD xx.x multiplexer and demultiplexer cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, double-click the multiplexer or demultiplexer cards where you want to change the optical threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** Modify any of the settings described in Table 13-48.

Table 13-48 Multiplexer and Demultiplexer Amplifiers Optical Thresholds Settings

Parameter	Description	Options
Port	Port number (read-only)	—
Power Low (dBm)	Set the low power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.
Power High (dBm)	Set the high power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).
-

DLP-A487 Change Optical Channel Settings for Multiplexer and Demultiplexer Cards

Purpose	This task changes the channel settings for 32MUX, 32DMX, and 4MD xx.x multiplexer and demultiplexer cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view, double-click the multiplexer or demultiplexer card where you want to change the line settings.
- Step 2** Click the **Provisioning > Optical Chn > Parameters** tabs.
- Step 3** Modify any of the settings described in Table 13-49.

Table 13-49 Multiplexer and Demultiplexer Card Line Settings

Parameter	Description	Options
Port #	Port number (read-only)	Displays port number and TX or RX
Port Name	Provides the ability to assign the specified port a name	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-A314 Assign a Name to a Port” task on page 8-17.
State	Places port in service, out of service, out of service-maintenance, or out of service-auto in service.	<ul style="list-style-type: none"> • IS • OOS • OOS_MT • OOS_AINS
Line Direction	Provides the ability to associate a card with the line direction. Use this field if you have two cards in the same shelf and must designate which one will carry the traffic flow from East to West, the second card will carry traffic from West to East.	<ul style="list-style-type: none"> • East to West • West to East
Type	Identifies the type of port such as Input Com, Output Com, Input Line, Output Line, Input OSC, and Output OSC.	Read only
Power	Shows the current power level per port.	Read only
VOA Mode	Shows the current functional mode of the VOA: constant gain mode, constant power mode, or not in use (N/A).	Read only

Table 13-49 Multiplexer and Demultiplexer Card Line Settings (continued)

Parameter	Description	Options
VOA Power Ref.	Shows the value of the optical output power going to a VOA when constant power mode is active. ANS is the only function that can modify this value.	Read only
VOA Power Calib.	The user can modify the optical output power to the VOA if necessary. This feature is normally used when the system is configured as “access” in Provisioning > WDM-ANS.	Numeric
VOA Attenuation Ref.	Shows the attenuation value of the VOA when the VOA is set in attenuation mode. ANS and APC are the only functions that can modify this value.	Read only
VOA Attenuation Calib.	The user can modify the attenuation value of the VOA if necessary when the VOA mode is set for constant attenuation.	Numeric
Actual Wavelength	Shows the wavelength specified by the manufacturing data. This field cannot be set manually.	Read only
Expected Wavelength	Shows the preprovisioned wavelength. This field is used to preprovision cards. For example you can specify a generic AD-1C in Slot 15 and set the expected wavelength to 1552.52. The result is a AD-1C-52.5. If the actual equipment installed does not match the preprovisioned slot, an MEA Mismatch Equipment Alarm occurs.	Numeric

Step 4 Click **Apply**.

Step 5 Return to your originating procedure (NTP).

DLP-A488 Change Channel Settings for Multiplexer and Demultiplexer Cards

Purpose	This task changes the optical channel threshold settings for 32MUX, 32DMX, and 4MD xx.x multiplexer and demultiplexer cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, double-click the multiplexer or demultiplexer cards where you want to change the optical threshold settings.
- Step 2** Click the **Provisioning > Optical Chn > Optics Thresholds** tabs.
- Step 3** Modify any of the settings described in Table 13-50.

Table 13-50 Multiplexer and Demultiplexer Cards Optical Thresholds Settings

Parameter	Description	Options
Port	Port number (read-only)	—
Power Low (dBm)	Set the low power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.
Power High (dBm)	Set the high power settings.	Numeric. Can be set for 15-minute or one-day intervals for Warning or Alarm. Select the bullet and click Refresh.

- Step 4** Click **Apply**.
- Step 5** Return to your originating procedure (NTP).
-



Upgrade Cards and Spans



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This chapter explains how to upgrade common control cards, DS3-12 and DS3N-12 cards, and optical spans for the Cisco ONS 15454.



Note

The procedures in this chapter do not apply to DWDM (Software Release 4.5) nodes.

Before You Begin

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A92 Upgrade the XC Card to the XCVT Card, page 14-2—Complete as needed.
 2. NTP-A220 Upgrade the XC or XCVT Card to the XC10G Card, page 14-3—Complete as needed
 3. NTP-A419 Upgrade the TCC or TCC+ Card to the TCC2 Card, page 14-5—Complete as needed.
 4. NTP-A93 Upgrade the DS3-12 Card to the DS3-12E Card, page 14-9— Complete as needed.
 5. NTP-A153 Upgrade the AIC Card to AIC-I, page 14-12—Complete as needed.
 6. NTP-A94 Upgrade OC-N Spans Automatically, page 14-13—Complete this procedure as needed to upgrade OC-N cards within path protection configurations, BLSRs, and 1+1 protection groups.
 7. NTP-A95 Upgrade OC-N Spans Manually, page 14-16—Complete this procedure as needed to perform error recovery for the Span Upgrade Wizard or back out of a span upgrade (downgrade).
-

NTP-A92 Upgrade the XC Card to the XCVT Card

Purpose	This procedure upgrades the XC card to the XCVT card.
Tools/Equipment	Two XCVT cards
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Maintenance or higher


Note

The UNEQ-P alarm is raised during a cross-connect card upgrade if you have E100T-12/E1000-2 cards installed in the node. The alarm will appear and clear within a few seconds.


Caution

Always upgrade the standby cross-connect card. Removing an active cross-connect card can cause a protection switch unless a lockout is in place. If the standby card is being upgraded, a lockout is unnecessary.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will perform the upgrade. If you are already logged in, continue with Step 2.
- Step 2** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Determine the standby XC card. The ACT/STBY LED of the standby XC card is amber, while the ACT/STBY LED of the active XC card is green.
- Step 4** Physically replace the standby XC card on the ONS 15454 with an XCVT card:
- Open the XC card ejectors.
 - Slide the card out of the slot. This raises the IMPROPRMVL alarm, which will clear when the upgrade is complete.
 - Open the ejectors on the XCVT card.
 - Slide the XCVT card into the slot along the guide rails.
 - Close the ejectors.
- On the XCVT card the fail LED above the ACT/STBY LED becomes red, blinks for several seconds, and turns off. The ACT/STBY LED turns amber and remains illuminated.
- Step 5** In node view, click the **Maintenance > Cross-Connect** tabs.
- Step 6** From the Cross Connect Cards menu, choose **Switch**.
- Step 7** Click **Yes** on the Confirm Switch dialog box. Traffic switches to the XCVT card inserted in Step 4. The ACT/STBY LED on this card changes from amber to green.


Note

The Interconnection Equipment Failure alarm appears, but it will clear when the upgrade procedure is complete and the node has matching cross-connect cards installed.

- Step 8** Physically remove the now standby XC card from the ONS 15454 and insert the second XCVT card into the empty XC slot:
- Open the XC card ejectors.
 - Slide the XC card out of the slot.
 - Open the ejectors on the XCVT.
 - Slide the XCVT card into the slot along the guide rails.
 - Close the ejectors.

The upgrade is complete when the second XCVT card boots up and becomes the standby XCVT.

Stop. You have completed this procedure.

NTP-A220 Upgrade the XC or XCVT Card to the XC10G Card

Purpose	This procedure upgrades an XC or XCVT card to an XC10G card.
Tools/Equipment	Two XC10G cards
Prerequisite Procedures	None
Required/As Needed	Software Release 3.1 and later and the 15454-SA-ANSI shelf are required for XC10G card operation.
Onsite/Remote	Onsite
Security Level	Maintenance or higher



Note

This procedure only applies to the XC or XCVT cards that are installed in the 15454-SA-ANSI (Software Release 3.1 and later). You cannot perform this upgrade from shelves released prior to Software R3.1. The XC10G requires the 15454-SA-ANSI.



Note

The UNEQ-P alarm is raised during a cross-connect card upgrade if you have E100T-12/E1000-2 cards installed in the node. The alarm will appear and clear within a few seconds.



Note

Downgrade procedures from XC10G cards to XCVT or XC cards are not supported. Contact Cisco Technical Assistance Center (TAC) for more information.



Caution

Always upgrade the standby cross-connect card. Removing an active cross-connect card can cause a protection switch unless a lockout is in place. If the standby card is being upgraded, a lockout is unnecessary.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you will perform the upgrade. If you are already logged in, continue with Step 2.

- Step 2** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

- Step 3** Determine the standby XC or XCVT card. The ACT/STBY LED of the standby XC or XCVT card is amber, while the ACT/STBY LED of the active XC or XCVT card is green.
- Step 4** Physically replace the standby XC or XCVT card on the ONS 15454 with an XC10G card:
- Open the XC or XCVT card ejectors.
 - Slide the card out of the slot. This raises the IMPROPRMVL alarm, which will clear when the upgrade is complete.
 - Open the ejectors on the XC10G card.
 - Slide the XC10G card into the slot along the guide rails.
 - Close the ejectors.



Note On the XC10G card the fail LED above the ACT/STBY LED becomes red, blinks for several seconds, and turns off. The ACT/STBY LED turns amber and remains illuminated. In node view, the XC10G appears as the standby XC or XCVT.

- Step 5** In node view, click the **Maintenance > Cross-Connect** tabs.
- Step 6** From the Cross Connect Cards menu, choose **Switch**.
- Step 7** Click **Yes** on the Confirm Switch dialog box. Traffic switches to the XC10G card you inserted in Step 4. The ACT/STBY LED on this card changes from amber to green.



Note The Interconnection Equipment Failure alarm appears, but it will clear when the upgrade procedure is complete and the node has matching cross-connect cards installed.

- Step 8** Physically remove the now standby XC or XCVT card from the ONS 15454 and insert the second XC10G card into the empty XC or XCVT card slot:
- Open the XC or XCVT card ejectors.
 - Slide the XC or XCVT card out of the slot.
 - Open the ejectors on the XC10G card.
 - Slide the XC10G card into the slot along the guide rails.
 - Close the ejectors.

The upgrade is complete when the second XC10G card boots up and becomes the standby XC10G card. In node view, both the active and standby cards will change to XC10G.

Stop. You have completed this procedure.

NTP-A419 Upgrade the TCC or TCC+ Card to the TCC2 Card

Purpose	This procedure upgrades the TCC or the TCC+ card to the TCC2 card. When upgrading from a TCC to a TCC2, TCC+ cards are necessary as an intermediate step. The TCC2 card supports ONS 15454 Software R4.0 and later software versions. The TCC+ card is compatible with ONS 15454 Software R4.0 and earlier software versions back to Software R2.2.x.
Tools/Equipment	Two SONET TCC2 cards Two TCC+ cards
Prerequisite Procedures	DLP-A36 Install the TCC+/TCC2 Cards, page 2-7
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Maintenance or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Ensure that no alarms or abnormal conditions are present. See the “DLP-A298 Check the Network for Alarms and Conditions” task on page 15-3 for instructions.
- Step 4** Before you begin the upgrade, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 5** If you are upgrading TCC+ cards to TCC2 cards, skip to Step 9. If you are upgrading TCC cards to TCC2 cards, continue with the next step.
- Step 6** Before you install TCC+ cards, verify that the node you are upgrading has ONS 15454 Software R2.2.x. The TCC card to TCC+ card upgrade process requires Release 2.2.x to support the TCC/TCC+ mismatch that occurs briefly during the TCC card to TCC+ card upgrade process.
- Step 7** Complete the “DLP-A291 Upgrade the TCC Card to the TCC+ Card” task on page 14-6.
- Step 8** Before you install TCC2 cards, install ONS 15454 Software R4.0 or later on the node. Refer to the *Cisco ONS 15454 Software Upgrade Guide*. TCC2 cards are not compatible with releases prior to Software R4.0.
- Step 9** Complete the “DLP-A508 Upgrade the TCC+ Card to the TCC2 Card” task on page 14-7.
- Stop. You have completed this procedure.**
-

DLP-A291 Upgrade the TCC Card to the TCC+ Card

Purpose	This task upgrades the TCC card to the TCC+ card.
Tools/Equipment	Two TCC+ cards
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** Physically replace the standby TCC card on the ONS 15454 with a TCC+ card.
- Open the TCC card ejectors.
 - Slide the card out of the slot. This raises the IMPROPRMVL alarm which will clear when the upgrade is complete.
 - Open the ejectors on the TCC+ card.
 - Slide the TCC+ card into the slot along the guide rails.
 - Close the ejectors.



Note The MEA (card mismatch) alarm appears because CTC recognizes a mismatch between TCC card types. Disregard this alarm; it clears by the end of the procedure.



Note It takes approximately 20 or 30 minutes for the active TCC to transfer the system software to the newly-installed TCC+. Software transfer occurs in instances where different software versions exist on the two cards. During this operation, the LEDs on the TCC+ flash Fail and then the active/standby LED flashes. When the transfer completes, the TCC+ reboots and goes into standby mode after approximately three minutes.



Caution If your active TCC card resets during the upgrade before the new TCC+ card has come to a full standby mode, remove the new TCC+ card immediately.

- Step 2** Right click the active TCC card to reveal a drop-down menu.
- Step 3** Click **Reset Card**.
- Wait for the TCC card to reboot. The ONS 15454 switches the standby TCC+ card to active mode.
- Step 4** Verify that the remaining TCC card is now in standby mode (the ACT/STBY LED changes to amber).
- Step 5** Physically replace the remaining TCC card with the second TCC+ card.
- Open the TCC card ejectors.
 - Slide the card out of the slot.
 - Open the ejectors on the TCC+ card.
 - Slide the TCC+ card into the slot along the guide rails.
 - Close the ejectors.

The ONS 15454 boots up the second TCC+ card. The second TCC+ card must also copy the system software, which can take up to 20 or 30 minutes. The MEA alarm clears when the ONS 15454 recognizes the matching TCC+ cards.

Step 6 Return to your originating procedure (NTP).

DLP-A508 Upgrade the TCC+ Card to the TCC2 Card

Purpose	This procedure upgrades the TCC+ card to the TCC2 card. The TCC2 card supports ONS 15454 Software R4.0 and later software versions. The TCC+ card is compatible with ONS 15454 Software R4.0 and earlier software versions.
Tools/Equipment	Two SONET TCC2 cards
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Software R4.0 or later is required for TCC2 card operation.
Onsite/Remote	Onsite
Security Level	Maintenance or higher



Note

The TCC2 card does not support software earlier than R4.0. You will not be able to revert to a software release earlier than Software R4.0 with TCC2 cards installed.



Note

Downgrade procedures from TCC2 cards to TCC+ cards are not supported. Contact Cisco Technical Assistance Center (TAC) at 1-800-553-2447 for more information.

- Step 1** Verify that the LAN wires on the backplane are installed properly. The TCC2 card does not autodetect miswired LAN connections. If a LAN connection is miswired, a “LAN Connection Polarity Reversed” condition appears. See the “DLP-A21 Install LAN Wires on the Backplane” task on page 1-41 for instructions.
- Step 2** Verify that the node you are upgrading has ONS 15454 Software R4.0 installed. The software version is displayed in the upper left corner of the window. Refer to the *Cisco ONS 15454 Software Upgrade Guide* for software installation procedures.
- Step 3** Physically replace the standby TCC+ card on the ONS 15454 with a TCC2 card.
- Check the LED on the faceplate. The ACT/STBY LED on the faceplate of the TCC+/TCC2 card indicates whether the card is in active or standby mode. A green ACT/STBY LED indicates an active card and an amber light indicates a standby card.
 - Open the standby TCC+ card ejectors.
 - Slide the card out of the slot. This raises the IMPROPRMVL alarm which will clear when the upgrade is complete.
 - Open the ejectors on the TCC2 card to be installed.
 - Slide the TCC2 card into the slot along the guide rails.
 - Close the ejectors.
 - In CTC node view, Ldg (loading) appears on the recently installed TCC2 card.



Note The MEA (card mismatch) alarm appears because CTC recognizes a mismatch between TCC card types. Disregard this alarm; it clears by the end of the procedure.



Note During a TCC+ upgrade, the CONTBUS-IO-A or CONTBUS-IO-B TCC A (or B) To Shelf Slot Communication Failure alarm is raised as the TCC+ briefly loses communication with the backplane. This alarm usually clears after approximately 13 minutes. If the condition does not clear after a period, log onto <http://www.cisco.com/tac> for more information or call TAC (800) 553-2447.



Note It takes approximately 10 minutes for the active TCC+ card to transfer the database to the newly-installed TCC2 card. During this operation, the LEDs on the TCC2 flash Fail and then the active/standby LED flashes. When the transfer completes, the TCC2 card reboots and goes into standby mode after approximately three minutes. Do not remove the card from the shelf during a database transfer.



Caution If your active TCC+ card resets during the upgrade before the new TCC2 card has come to a full standby mode, remove the new TCC2 card immediately.

Step 4 When the newly installed TCC2 card is in standby, go to the active TCC+ and right-click the card.



Note You can no longer revert to a software version prior to Software R4.0 once you switch the standby TCC2 card to the active TCC2 card.

Step 5 From the drop-down menu, click **Reset Card**.

Wait for the TCC+ card to reboot. The ONS 15454 switches the standby TCC2 card to active mode. The TCC+ card verifies that it has the same database as the TCC2 card and then switches to standby.

Step 6 Verify that the remaining TCC+ card is now in standby mode (the ACT/STBY LED changes to amber).

Step 7 Physically replace the remaining TCC+ card with the second TCC2 card.

- a. Open the TCC+ card ejectors.
- b. Slide the card out of the slot. This raises the IMPROPRMVL alarm, which will clear when the upgrade is complete.
- c. Open the ejectors on the TCC2 card.
- d. Slide the TCC2 card into the slot along the guide rails.
- e. Close the ejectors.

The ONS 15454 boots up the second TCC2 card. The second TCC2 card must also copy the database, which can take approximately 10 minutes. Do not remove the card from the shelf during a database transfer.

Step 8 If power-related alarms occur after the second TCC2 card is installed, check the voltage on the backplane. See the “DLP-A33 Measure Voltage” task on page 1-67 for instructions. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for information on clearing alarms.

Step 9 Return to your originating procedure (NTP).

NTP-A93 Upgrade the DS3-12 Card to the DS3-12E Card

Purpose	This procedure upgrades the DS3-12 card to the DS3-12E card or the DS3N-12 card to the DS3N-12E card. This procedure can also be used to enable the capabilities of a DS3-12E card that was installed in a shelf with Software R3.1 or earlier.
Tools/Equipment	DS3-12E or DS3N-12E card
Prerequisite Procedures	NTP-A17 Install the Electrical Cards, page 2-16
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Note

Upgrading to DS3-12E or DS3N-12E cards requires that the ONS 15454 be running CTC Release 3.1 or later. Upgrades must be performed between two N-type cards or two non-N-type cards. You cannot upgrade between an N-type card and a non-N-type card. When physically replacing a card, the new card must be in the same slot as the old card. The DS3-12E card upgrade supports 1:1 and 1:N protection schemes. The procedure is non-service affecting; that is, the upgrade will cause a switch less than 50 ms in duration.



Caution

Protect cards must be upgraded before working cards because working cards cannot have more capabilities than their protect card.



Note

During the upgrade some minor alarms and conditions display and then clear on their own; however, there should be no Service-Affecting (SA, Major, or Critical) alarms. If any service-affecting alarms occur, Cisco recommends backing out of the procedure. See the “NTP-A254 Downgrade a DS3-12E/DS3NE Card to a DS3-12/DS3N-12 Card” task on page 14-11.

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Determine if the card you are upgrading is protected or unprotected:
- A protected card will be listed under Protection Groups in the **Maintenance > Protection** tabs. The slot, port and status (i.e., Protect/Standby, Working/Active) of each card will be listed under Selected Group.
 - An unprotected card will not be listed under Protection Groups/Selected Group in the **Maintenance > Protection** tabs.

- Step 4** If the card you are upgrading is unprotected, skip to Step 5 and ignore references to the protect card and protect slot. If the card you are upgrading is protected, make sure the protect card is not active. If the card status is Protect/Active, perform a switch so that the working card becomes active:
- Double-click the protection group.
 - Click the Protect/Active card.
 - Click **Switch**.
 - Click **Yes** in the confirmation dialog box.



Note Traffic will be lost during an upgrade on an unprotected card.

- Step 5** Physically remove the protect DS3-12 or the protect DS3N-12 card:
- Open the DS3-12 or DS3N-12 card ejectors.
 - Slide the card out of the slot. This raises the IMPROPRMVL alarm, which will clear when the upgrade is complete.
- Step 6** Right-click the protect slot and choose **Change Card** from the drop-down menu.
- Step 7** Choose the new card (DS3-12E or DS3N-12E) from the Change to: drop-down menu.
- Step 8** Click **OK**.
- Step 9** Insert the new DS3-12E or DS3N-12E card into the protect slot:
- Open the ejectors on the DS3-12E or DS3N-12E card.
 - Slide the DS3-12E or DS3N-12E card into the slot along the guide rails.
- Step 10** Close the ejectors.
Wait for the IMPROPRMVL alarm to clear and the card to become standby.
- Step 11** If you switched traffic in Step 4, clear the switch:
- In the **Maintenance > Protection** tabs, double-click the protection group that contains the reporting card.
 - Click the selected group.
 - Click **Clear** and click **Yes** at the confirmation dialog box.
- Step 12** Repeat this procedure (Steps 3 through 11) for the working card.
- Stop. You have completed this procedure.**
-

NTP-A254 Downgrade a DS3-12E/DS3NE Card to a DS3-12/DS3N-12 Card

Purpose	This task downgrades a DS3-12E or DS3NE card. Downgrading can be performed to back out of an upgrade. The procedure for downgrading is the same as upgrading except you choose DS3-12 or DS3N-12 from the Change Card drop-down menu.
Tools	None
Prerequisite Procedures	NTP-A17 Install the Electrical Cards, page 2-16
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Note All ports must be provisioned as UNFRAMED and have Path Trace disabled.



Note Working cards must be downgraded before protect cards.

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 3** Determine if the card you are downgrading is protected or unprotected:
- A protected card will be listed under Protection Groups in the **Maintenance > Protection** tabs. The slot, port and status (i.e., Protect/Standby, Working/Active) of each card will be listed under Selected Group.
 - An unprotected card will not be listed under Protection Groups/Selected Group in the **Maintenance > Protection** tabs.
- Step 4** If the card you are upgrading is unprotected, skip to Step 5 and ignore references to the protect card and protect slot. If the card you are upgrading is protected, make sure the protect card is not active. If the card status is Protect/Active, perform a switch so that the working card becomes active:
- Double-click the protection group.
 - Click the Protect/Active card.
 - Click **Switch** and **Yes** in the Confirmation dialog box.
- Step 5** Physically remove the working DS3-12E card or the working DS3N-12E card:
- Open the DS3-12E or DS3N-12E card ejectors.
 - Slide the card out of the slot. This raises the IMPROPRMVL alarm, which will clear when the downgrade is complete.
- Step 6** Right-click the slot to be downgraded and choose **Change Card** from the drop-down menu.
- Step 7** Choose **DS3-12** or **DS3N-12** from the Change to: drop-down menu.



Tip The procedure for downgrading is the same as upgrading except you choose DS3-12 or DS3N-12 from the Change Card drop-down menu.

- Step 8** Click **OK**.
- Step 9** Insert the DS3-12 or DS3N-12 card into the working slot:
- Open the ejectors on the DS3-12 or DS3N-12 card.
 - Slide the DS3-12 or DS3N-12 card into the slot along the guide rails.
- Step 10** Close the ejectors. Wait for the IMPROPRMVL alarm to clear and the card to become active.
- Step 11** If you switched traffic in Step 4, clear the switch:
- In the **Maintenance > Protection** tabs, double-click the protection group that contains the reporting card.
 - Click the selected group.
 - Click **Clear** and click **Yes** in the confirmation dialog box.
- Step 12** Repeat Steps 3 through 11 to downgrade the protect card if applicable.
- Stop. You have completed this procedure.**

NTP-A153 Upgrade the AIC Card to AIC-I

Purpose	This procedure upgrades an AIC card to an AIC-I card; the AIC-I card provides additional alarm contacts.
Tools	None
Prerequisite Procedures	DLP-A38 Install the Alarm Interface Controller or Alarm Interface Controller–International Card, page 2-11
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Maintenance or higher

- Step 1** Physically remove the AIC card:
- Open the AIC card ejectors.
 - Slide the card out of the slot.
- After several seconds this raises the IMPROPRMVL alarm, which will clear when the downgrade is complete.
- Step 2** Complete the “DLP-A38 Install the Alarm Interface Controller or Alarm Interface Controller–International Card” task on page 2-11.
- Step 3** Complete the “NTP-A248 Provision External Alarms and Controls on the Alarm Interface Controller–International” procedure on page 9-35.
- Stop. You have completed this procedure.**

NTP-A94 Upgrade OC-N Spans Automatically

Purpose	This procedure upgrades two-fiber BLSR spans, four-fiber BLSR spans, path protection spans, and 1+1 protection group spans. The Span Upgrade Wizard only supports OC-N span upgrades. It does not support electrical upgrades.
Tools/Equipment	Higher-rate cards Compatible hardware necessary for the upgrade (for example, XC10G cards and OC-48 any slot cards) Attenuators might be needed for some applications
Prerequisite Procedures	The span upgrade procedure requires at least two technicians (one at each end of the span) who can communicate with each other during the upgrade.
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Caution

Do not perform any other maintenance operations, such as facility or terminal loopbacks, or add any circuits during a span upgrade.



Note

OC-N transmit and receive levels should be in their acceptable range as shown in the specifications section for each card in the *Cisco ONS 15454 Reference Manual*.



Note

During the upgrade, the IMPROPRMVL alarm may be raised. It will clear automatically.



Note

A four-port OC-3 to eight-port OC-3 span upgrade, or an OC-12 to four-port OC-12 span upgrade can only be performed from multispeed slots (Slots 1 to 4 and 14 to 17) because the OC3-8 and OC12-4 card can only be installed in multispeed slots. Ensure that the OC-3 and OC-12 cards are in multispeed slots before performing a span upgrade to the OC3-8 and OC12-4. The four OC-3 ports will be mapped to Ports 1 to 4 on the eight-port OC-3 card. The OC-12 port will be mapped to Port 1 on the four-port OC-12 card.



Note

BLSR protection channel access (PCA) circuits, if present, will remain in their existing STSs. Therefore, they will be located on the working path of the upgraded span and will have full BLSR protection. To route PCA circuits on protection channels in the upgraded span, delete and recreate the circuits after the span upgrade. For example, if you upgrade an OC-48 span to an OC-192, PCA circuits on the protection STSs (STSs 25 to 48) in the OC-48 BLSR will remain in their existing STSs (STSs 25 to 48) which are

working, protected STSs in the OC-192 BLSR. Deleting and recreating the OC-48 PCA circuits moves the circuits to STSs 96 to 192 in the OC-192 BLSR. To delete circuits, see the “NTP-A152 Delete Circuits” procedure on page 11-20. To create circuits, see Chapter 8, “Create Circuits and VT Tunnels.”

Step 1 Determine the type of span you need to upgrade and make sure you have the necessary cards. Valid span upgrades include:

- Four-port OC-3 to eight-port OC-3
- Single-port OC-12 to four-port OC-12
- Single-port OC-12 to OC-48
- Single-port OC-12 to OC-192
- OC-48 to OC-192

**Caution**

You cannot upgrade a four-port OC-12 span. If the ring contains any OC-12-4 cards and you need to upgrade all the spans in the ring, you will need to downgrade the OC-12-4 card to a single-port OC-12 card (which is only possible if one port on the OC12-4 card is being used).

Step 2 Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 3.

**Note**

The Span Upgrade option will only be visible and available if the hardware necessary for the upgrade is present; for example, no upgrade is possible from an OC48 span unless XC10G cards are installed in the nodes at both ends of the span.

Step 3 According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.

Step 4 Ensure that no alarms or abnormal conditions (regardless of severity), including LOS, LOF, AIS-L, SF, SD, and FORCED-REQ-RING are present. See the “DLP-A298 Check the Network for Alarms and Conditions” task on page 15-3 for instructions.


**Note**

During the upgrade/downgrade some minor alarms and conditions display and then clear automatically. No service-affecting alarms (SA, Major, or Critical) should occur other than BLSROSync, which will clear when the upgrade/downgrade of all nodes is complete. If any other service-affecting alarms occur, Cisco recommends backing out of the procedure. A four-node BLSR can take up to five minutes to clear all of the BLSROSync alarms. Allow extra time for a large BLSR to clear all of the BLSROSync alarms.

Step 5 In network view, right-click the span you want to upgrade.

Step 6 Choose **Span Upgrade** from the drop-down menu (Figure 14-1).

Figure 14-1 Span Upgrade Drop-Down Menu

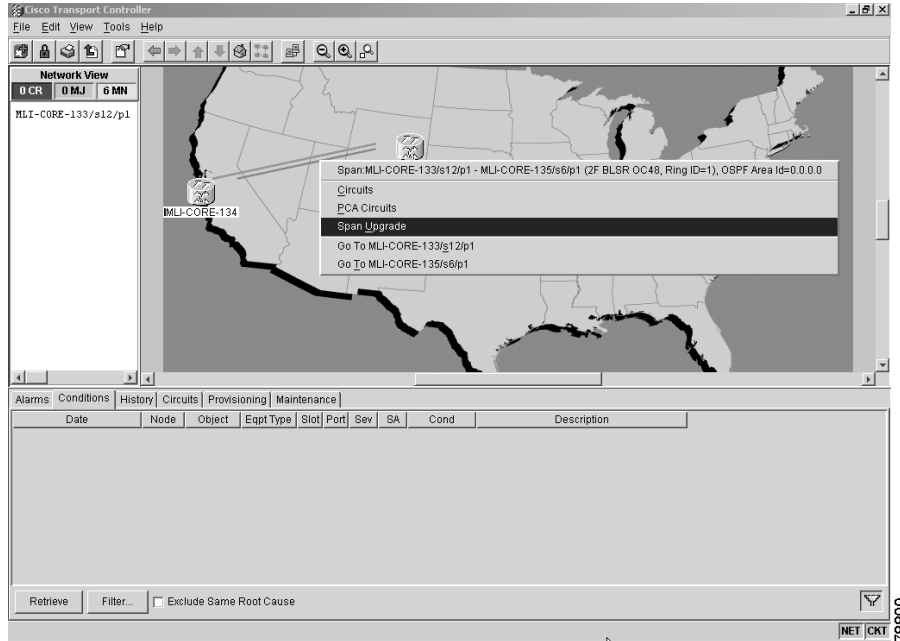


Step 7 The first Span Upgrade dialog box appears (Figure 14-2). Follow the instructions on the dialog box and the wizard will lead you through the rest of the span upgrade.



Note The Back button is only enabled on Step 2 of the wizard; because you cannot back out of an upgrade via the wizard, close the wizard and initiate the manual procedure if you need to back out of the upgrade at any point beyond Step 2.

Figure 14-2 Span Upgrade Wizard

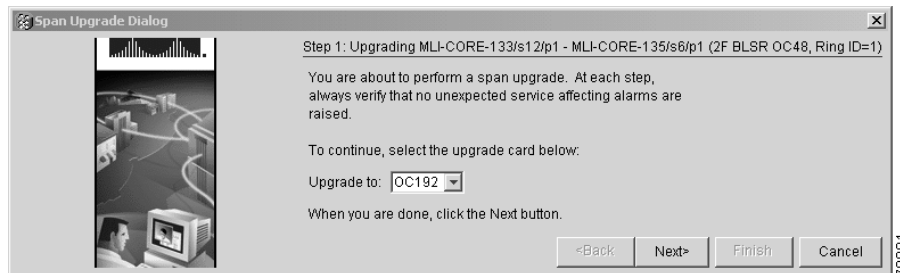

Caution

As indicated by the wizard, when installing cards you must wait for the cards to boot up and become active before proceeding to the next step.



Note Remember to attach the fiber after installing the OC-N cards.



Note The span upgrade process resets the line's CV-L threshold to factory default. The CV-L threshold is reset because the threshold is dependent on line rate.

Step 8 Repeat Steps 5 through 7 for additional spans in the ring.

Stop. You have completed this procedure.

NTP-A95 Upgrade OC-N Spans Manually

Purpose	This procedure upgrades OC-N speeds within BLSRs, path protection configurations, and 1+1 protection groups by upgrading OC-N cards. Complete a manual upgrade task if you need to perform error recovery for the Span Upgrade Wizard or back out of a span upgrade (downgrade).
Tools/Equipment	Replacement cards
Prerequisite Procedures	The manual span upgrade procedure requires at least two technicians (one at each end of the span) who can communicate with each other during the upgrade.
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Note OC-N card transmit and receive levels should be in their acceptable range as shown in the specifications section for each card in the *Cisco ONS 15454 Reference Manual*.



Note In this context the word “span” represents the OC-N path between two nodes. The words “span endpoint” represent the nodes on each end of a span.



Note If any of the cross-connect cards reboot during the span upgrade, you must reset each one when the span upgrade procedure is complete for all the nodes in the ring.

Step 1 Determine the type of span you need to upgrade and make sure you have the necessary cards. Valid span upgrades include:

- Four-port OC-3 to eight-port OC-3
- Single-port OC-12 to four-port OC-12
- Single-port OC-12 to OC-48
- Single-port OC-12 to OC-192
- OC-48 to OC-192

**Caution**

You cannot upgrade a four-port OC-12 span. If the ring contains any OC-12-4 cards and you need to upgrade all the spans in the ring, you will need to downgrade the OC-12-4 card to a single-port OC-12 card (which is not possible unless only one port on the OC12-4 card is being used).

- Step 2** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 3.
- Step 3** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7.
- Step 4** Ensure that no alarms or abnormal conditions (regardless of severity), including LOS, LOF, AIS-L, SF, SD, and FORCED-REQ-RING are present. See the “DLP-A298 Check the Network for Alarms and Conditions” task on page 15-3 for instructions.

**Note**

During the upgrade/downgrade some minor alarms and conditions display, such as IMPROPRMVL, and then clear automatically. No service-affecting alarms (SA, Major, or Critical) should occur other than BLSROSYNC, which will clear when the upgrade/downgrade of all nodes is complete. If any other service-affecting alarms occur, Cisco recommends backing out of the procedure.

A four-node BLSR can take up to five minutes to clear all of the BLSROSYNC alarms. Allow extra time for a large BLSR to clear all of the BLSROSYNC alarms. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for information about alarms.

- Step 5** Complete the appropriate task:
- DLP-A293 Perform a Manual Span Upgrade on a Two-Fiber BLSR, page 14-18
 - DLP-A294 Perform a Manual Span Upgrade on a Four-Fiber BLSR, page 14-19
 - DLP-A295 Perform a Manual Span Upgrade on a Path Protection, page 14-21
 - DLP-A296 Perform a Manual Span Upgrade on a 1+1 Protection Group, page 14-22
 - DLP-A297 Perform a Manual Span Upgrade on an Unprotected Span, page 14-23

**Note**

The span upgrade process resets the line’s CV-L threshold to factory default. The CV-L threshold is reset because the threshold is dependent on line rate.

**Note**

The Span Upgrade option will only be visible and available if the hardware necessary for the upgrade is present; for example, no upgrade is possible from an OC48 span unless XC10G cards are installed in the nodes at both ends of the span.

**Note**

A four-port OC-3 to eight-port OC-3 span upgrade, or an OC-12 to four-port OC-12 span upgrade can only be performed from multispeed slots (Slots 1 to 4 and 14 to 17) because the OC3-8 and OC12-4 card can only be installed in multispeed slots. Ensure that the OC-3 and OC-12 cards are in multispeed slots before performing a span upgrade to the OC3-8 and OC12-4. The four OC-3 ports will be mapped to Ports 1-4 on the eight-port OC-3 card. The OC-12 port will be mapped to Port 1 on the four-port OC-12 card.

Stop. You have completed this procedure.

DLP-A293 Perform a Manual Span Upgrade on a Two-Fiber BLSR

Purpose	This task upgrades a two-fiber BLSR span to a higher OC-N rate.
Tools/Equipment	Higher-rate cards Compatible hardware necessary for the upgrade Attenuators might be needed for some applications
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Caution

Do not perform any other maintenance operations or add any circuits during a span upgrade.



Note

To downgrade a span, repeat this task but choose a lower-rate card in Step 5.



Note

All spans connecting the nodes in a BLSR must be upgraded before the bandwidth is available.



Note

BLSR protection channel access (PCA) circuits, if present, will remain in their existing STSs. Therefore, they will be located on the working path of the upgraded span and will have full BLSR protection. To route PCA circuits on protection channels in the upgraded span, delete and recreate the circuits after the span upgrade. For example, if you upgrade an OC-48 span to an OC-192, PCA circuits on the protection STSs (STSs 25 to 48) in the OC-48 BLSR will remain in their existing STSs (STSs 25 to 48) which are working, protected STSs in the OC-192 BLSR. Deleting and recreating the OC-48 PCA circuits moves the circuits to STSs 96 to 192 in the OC-192 BLSR. To delete circuits, see the “NTP-A152 Delete Circuits” procedure on page 11-20. To create circuits, see Chapter 8, “Create Circuits and VT Tunnels.”

- Step 1** Apply a Force switch to both span endpoints (nodes) on the span that you will upgrade first. See the “DLP-A303 Initiate a BLSR Force Ring Switch” task on page 16-7.
- Step 2** Remove the fiber from both endpoints and ensure that traffic is still running.
- Step 3** Remove the OC-N cards from both endpoints.
- Step 4** From both endpoints, in node view right-click each OC-N slot and choose **Change Card**.
- Step 5** In the Change Card dialog box, choose the new OC-N card type.

- Step 6** Click **OK**.
- Step 7** Complete the “NTP-A16 Install the OC-N Cards” procedure on page 2-13 to install the new OC-N cards in both endpoints.
- Step 8** Verify that the transmit signal falls within the acceptable range. See Table 2-3 on page 2-31 for OC-N card transmit and receive levels.
- Step 9** Complete the “DLP-A44 Install Fiber-Optic Cables for BLSR Configurations” task on page 2-38 to attach the fiber to the cards. Wait for the IMPROPRMVL alarm to clear and the cards to become active.
- Step 10** When cards in both endpoint nodes have been successfully upgraded and all the facility alarms (LOS, SD or SF) are cleared, remove the forced switch from both endpoints on the upgraded span. See the “DLP-A194 Clear a BLSR Force Ring Switch” task on page 16-9.
- Step 11** Perform an exercise ring test to check the BLSR ring functionality without switching traffic. See the “DLP-A217 BLSR Exercise Ring Test” task on page 6-23.
- Step 12** Repeat this task for each span in the BLSR. When you are done with each span, the upgrade is complete.
- Step 13** Return to your originating procedure (NTP).

DLP-A294 Perform a Manual Span Upgrade on a Four-Fiber BLSR

Purpose	This task upgrades a four-fiber BLSR span to a higher OC-N rate. Repeat the task to upgrade each span to the higher OC-N rate.
Tools/Equipment	Higher-rate cards Compatible hardware necessary for the upgrade Attenuators might be needed for some applications
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Caution

Do not perform any other maintenance operations or add any circuits during a span upgrade.



Note

To downgrade, repeat this task but choose a lower-rate card in Step 5.



Note

All spans connecting the nodes in a BLSR must be upgraded before the bandwidth is available.

**Note**

BLSR protection channel access (PCA) circuits, if present, will remain in their existing STSs. Therefore, they will be located on the working path of the upgraded span and will have full BLSR protection. To route PCA circuits on protection channels in the upgraded span, delete and recreate the circuits after the span upgrade. For example, if you upgrade an OC-48 span to an OC-192, PCA circuits on the protection STSs (STSs 25 to 48) in the OC-48 BLSR will remain in their existing STSs (STSs 25 to 48) which are working, protected STSs in the OC-192 BLSR. Deleting and recreating the OC-48 PCA circuits moves the circuits to STSs 96 to 192 in the OC-192 BLSR. To delete circuits, see the “NTP-A152 Delete Circuits” procedure on page 11-20. To create circuits, see Chapter 8, “Create Circuits and VT Tunnels.”

-
- Step 1** Apply a Force switch to both span endpoints (nodes) on the span that you will upgrade first. See the “DLP-A303 Initiate a BLSR Force Ring Switch” task on page 16-7.
 - Step 2** Remove the fiber from both working and protect cards at both span endpoints (nodes) and ensure that traffic is still running.
 - Step 3** Remove the OC-N cards from both end points.
 - Step 4** For both ends of the span endpoints, in node view right-click each OC-N slot and choose **Change Card**.
 - Step 5** In the Change Card dialog box, choose the new OC-N card type.
 - Step 6** Click **OK**.
 - Step 7** Complete the “NTP-A16 Install the OC-N Cards” procedure on page 2-13 to install the new OC-N cards in both endpoints.
 - Step 8** Verify that the transmit signal falls within the acceptable range. See Table 2-3 on page 2-31 for OC-N card transmit and receive levels.
 - Step 9** Complete the “DLP-A44 Install Fiber-Optic Cables for BLSR Configurations” task on page 2-38 to attach the fiber to the cards. Wait for the IMPROPRMVL alarm to clear and the cards to become active.
 - Step 10** When cards in both endpoint nodes have been successfully upgraded and all the facility alarms (LOS, SD or SF) are cleared, remove the forced switch from both endpoints (nodes) on the upgraded span. See “DLP-A194 Clear a BLSR Force Ring Switch” task on page 16-9.
 - Step 11** Perform an exercise ring test to check the BLSR ring functionality without switching traffic. See the “DLP-A217 BLSR Exercise Ring Test” task on page 6-23.
 - Step 12** Repeat these steps for each span in the BLSR. When all spans in the BLSR have been upgraded, the ring is upgraded.
 - Step 13** Return to your originating procedure (NTP).
-

DLP-A295 Perform a Manual Span Upgrade on a Path Protection

Purpose	This task upgrades path protection spans to a higher OC-N speed. Repeat the task for each span to upgrade the entire ring to the higher OC-N rate.
Tools/Equipment	Higher-rate cards Compatible hardware necessary for the upgrade
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Caution

Do not perform any other maintenance operations or add any circuits during a span upgrade.



Note

To downgrade a span, repeat this task but choose a lower-rate card in Step 5.

-
- Step 1** Complete the “DLP-A197 Initiate a Path Protection Force Switch” task on page 16-17 to apply a Force switch on the span that you will upgrade.
- Step 2** Remove the fiber from both endpoint nodes in the span and ensure that traffic is still running.
- Step 3** Remove the OC-N cards from both span endpoints.
- Step 4** For both ends of the span, in node view right-click each OC-N slot and choose **Change Card**.
- Step 5** In the Change Card dialog box, choose the new OC-N card type.
- Step 6** Click **OK**.
- Step 7** Complete the “NTP-A16 Install the OC-N Cards” procedure on page 2-13 to install the new OC-N cards in both endpoints.
- Step 8** Verify that the transmit signal falls within the acceptable range. See Table 2-3 on page 2-31 for OC-N card transmit and receive levels.
- Step 9** Complete the “DLP-A43 Install Fiber-Optic Cables for Path Protection Configurations” task on page 2-34 to attach the fiber to the cards. Wait for the IMPROPRMVL alarm to clear and the cards to become active.
- Step 10** Complete the “DLP-A198 Clear a Path Protection Force Switch” task on page 16-18 when cards in both endpoint nodes have been successfully upgraded and all the facility alarms (LOS, SD or SF) are cleared.
- Step 11** Return to your originating procedure (NTP).
-

DLP-A296 Perform a Manual Span Upgrade on a 1+1 Protection Group

Purpose	This task upgrades a linear span to a higher OC-N rate.
Tools/Equipment	Higher-rate cards Compatible hardware necessary for the upgrade
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Caution

Do not perform any other maintenance operations or add any circuits during a span upgrade.



Note

To downgrade a span, follow this task but choose a lower-rate card in Step 6.

- Step 1** Initiate a Force switch on the ports you will upgrade, beginning with the protect port:
- In node view, click the **Maintenance > Protection** tabs.
 - Choose the protection group from the Protection Groups area. In the Selected Group area, the working and protect spans appear.
 - In the Selected Group area, click the protect OC-N port.
 - In Switch Commands, choose **Force**.
 - Click **Yes** in the confirmation dialog box.
FORCE-SWITCH-TO-WORKING appears next to the forced span.
- Step 2** If you are upgrading a multiport card, repeat Step 1 for each port.
- Step 3** Remove the fiber from both ends of the span and ensure that traffic is still running.
- Step 4** Remove the OC-N cards from both span endpoints.
- Step 5** At both ends of the span, in node view, right-click the OC-N slot and choose **Change Card**.
- Step 6** In the Change Card dialog box, choose the new OC-N card type.
- Step 7** Click **OK**.
- Step 8** Complete the “NTP-A16 Install the OC-N Cards” procedure on page 2-13 to install the new OC-N cards in both endpoints.
- Step 9** Verify that the transmit signal falls within the acceptable range. See Table 2-3 on page 2-31 for OC-N card transmit and receive levels.
- Step 10** Complete the “DLP-A428 Install Fiber Optic Cables in a 1+1 Configuration” task on page 2-33 to attach the fiber to the cards. Wait for the IMPROPRMVL alarm to clear and the cards to become active.

- Step 11** When cards on each end of the span have been successfully upgraded and all the facility alarms (LOS, SD or SF) are cleared, remove the Force switch:
- In node view, click the **Maintenance > Protection** tabs.
 - In the Protection Groups area, click the protection group that contains the card/port you want to clear.
 - In the Selected Group area, click the card you want to clear.
 - In Switch Commands, choose **Clear**.
 - Click **Yes** in the confirmation dialog box.
- Step 12** Repeat this task for any other spans in the 1 + 1 linear configuration.
- Step 13** Return to your originating procedure (NTP).

DLP-A297 Perform a Manual Span Upgrade on an Unprotected Span

Purpose	This task manually upgrades unprotected spans to a higher OC-N rate.
Tools/Equipment	Higher-rate cards Compatible hardware necessary for the upgrade
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Caution

Upgrading unprotected spans will cause all traffic running on those spans to be lost.



Caution

Do not perform any other maintenance operations or add any circuits during a span upgrade.

- Step 1** Remove the fiber from both endpoint nodes in the span.



Caution

Removing the fiber will cause all traffic on the unprotected span to be lost.

- Step 2** Remove the OC-N cards from both span endpoints.
- Step 3** For both ends of the span, in node view, right-click each OC-N slot and choose **Change Card**.
- Step 4** In the Change Card dialog box, choose the new OC-N type.
- Step 5** Click **OK**.

- Step 6** When you have finished Steps 2 through 5 for both nodes, install the new OC-N cards in both endpoints and attach the fiber to the cards. Wait for the IMPROPRMVL alarm to clear and the cards to become active.
- Step 7** Return to your originating procedure (NTP).
-



Convert Network Configurations



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This chapter explains how to convert from one SONET topology to another in an ONS 15454 network. For initial network turn up, see Chapter 6, "Turn Up Network."



Note

The procedures and tasks in this chapter do not apply to DWDM (Software Release 4.5) nodes.

Before You Begin

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A154 Convert a Point-to-Point to a Linear ADM, page 15-1—Complete as needed.
2. NTP-A155 Convert a Point-to-Point or a Linear ADM to a Two-Fiber BLSR, page 15-3—Complete as needed.
3. NTP-A156 Convert a Point-to-Point or Linear ADM to a Path Protection, page 15-7—Complete as needed.
4. NTP-A210 Convert a Path Protection to a Two-Fiber BLSR, page 15-7—Complete as needed.
5. NTP-A211 Convert a Two-Fiber BLSR to a Four-Fiber BLSR, page 15-9—Complete as needed.
6. NTP-A159 Modify a BLSR, page 15-11—Complete as needed.
7. NTP-A228 Manage BLSR Manual Ring Switches, page 15-12—Complete as needed.

NTP-A154 Convert a Point-to-Point to a Linear ADM

Purpose	This procedure upgrades a point-to-point configuration (two nodes) to a linear add/drop multiplexer (ADM) configuration (three or more nodes).
Tools/Equipment	None

Prerequisite Procedures	NTP-A124 Provision a Point-to-Point Network, page 6-4
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

**Note**

Optical transmit and receive levels should be in their acceptable range as shown in the specifications section for each card in Table 2-3 on page 2-31.

**Note**

In a point-to-point configuration, two OC-N cards are connected to two OC-N cards on a second node. Slots 1 to 4 and 14 to 17 or Slots 5 to 6 and 12 to 13 can be used if connections between nodes are consistent. For example, Slot 5 on the first point-to-point node connects to Slot 5 on the second point-to-point node for the working path, and Slot 6 connects to Slot 6 for the protect path. The working OC-N ports have data communications channel (DCC) terminations, and the OC-N cards are in a 1+1 protection group.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A298 Check the Network for Alarms and Conditions” task on page 15-3.
- Step 3** Log into the node that will be added to the point-to-point configuration.
- Step 4** Complete the “NTP-A24 Verify Card Installation” procedure on page 4-2 to ensure that the new node has two OC-N cards with the same rate as the point-to-point nodes.
- Step 5** Complete the “NTP-A35 Verify Node Turn Up” procedure on page 6-2 for the new node.
- Step 6** Physically connect the fibers between the point-to-point node and the new node.
- Step 7** On the new node, create a 1+1 protection group for the OC-N cards that will connect to the point-to-point node. See the “DLP-A73 Create a 1+1 Protection Group” task on page 4-29.
- Step 8** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 for the working OC-N cards in the new node that will connect to the linear ADM network. Make sure to set the Port State in the Create SDCC Termination dialog box to **IS**.

**Note**

DCC failure alarms appear until you create DCC terminations in the point-to-point node during Step 9.

- Step 9** Display the point-to-point node that will connect to the new node in CTC node view.
- Step 10** Ensure that the point-to-point node has OC-N cards installed that can connect to the new node.
- Step 11** Create a 1+1 protection group for the OC-N cards that will connect to the new node. See the “DLP-A73 Create a 1+1 Protection Group” task on page 4-29 for instructions.
- Step 12** Create DCC terminations on the working OC-N card that will connect to the new node. See the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5. In the Create SDCC Termination dialog box, set the port state to **IS**.
- Step 13** Display the new node in node view.
- Step 14** Complete the “NTP-A28 Set Up Timing” procedure on page 4-21 for the new node. If the new node is using line timing, make the working OC-N card the timing source.

- Step 15** Display the network view to verify that the newly created linear ADM configuration is correct. Two green span lines should appear between each linear node.
- Step 16** Click the **Alarms** tab. Verify that no unexpected alarms are displayed.
- Step 17** Repeat the procedure to add an additional node to the linear ADM.
- Stop. You have completed this procedure.**
-

DLP-A298 Check the Network for Alarms and Conditions

Purpose	This task verifies that no alarms or conditions exist on the network.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Remote
Security Level	Retrieve or higher

- Step 1** From the View menu, choose **Go to Network View**. Verify that all affected spans on the network map are green.
- Step 2** Verify that the affected spans do not have active switches on the network map. Span ring switches are graphically displayed on the span with the letters “L” for lockout ring, “F” for Force ring, “M” for Manual ring, and “E” for Exercise ring.
- Step 3** A second verification method can be performed from the Conditions tab. Click **Retrieve Conditions** and verify that no switches are active. Make sure the Filter button is not selected.
- Step 4** Click the **Alarms** tab. Verify that no critical or major alarms are present, nor any facility alarms, such as LOS, LOF, AIS-L, AIS-P, SF, and SD. Make sure the Filter button is not selected.
- If trouble is indicated (for example, a major alarm exists), resolve the problem before proceeding. See Chapter 9, “Manage Alarms,” or, if necessary, refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 5** Return to your originating procedure (NTP).
-

NTP-A155 Convert a Point-to-Point or a Linear ADM to a Two-Fiber BLSR

Purpose	This procedure upgrades a point-to-point configuration (two nodes) or a linear ADM configuration (three or more nodes) to a two-fiber bidirectional line switched ring (BLSR).
Tools/Equipment	None
Prerequisite Procedures	NTP-A124 Provision a Point-to-Point Network, page 6-4 or NTP-A38 Provision a Linear ADM Network, page 6-12

Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

**Caution**

This procedure is service affecting.

**Note**

Optical transmit and receive levels should be in their acceptable range as shown in the specifications section for each card in the *Cisco ONS 15454 Reference Manual*.

- Step 1** Log into one of the nodes that you want to convert from a point-to-point or ADM to a BLSR. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A298 Check the Network for Alarms and Conditions” task on page 15-3.
- Step 3** Right-click a span adjacent to the node you are logged into.
- Step 4** From the shortcut menu, click **Circuits**. The Circuits on Span window appears.
- Step 5** Verify that the total number of active STS circuits does not exceed 50 percent of the span bandwidth. In the Circuits column there is a block titled “Unused.” This number should exceed 50 percent of the span bandwidth.

**Note**


If the span is an OC-48, no more than 24 STSs can be provisioned on the span. If the span is an OC-192, no more than 96 STSs can be provisioned on the span. If the span is an OC-12, no more than 6 STSs can be provisioned on the span.

**Caution**

If the first half of the capacity is exceeded, this procedure cannot be completed. Bandwidth must be 50 percent unassigned to convert to BLSR. Refer to local procedures for relocating circuits if these requirements are not met.

- Step 6** Repeat Steps 3 through 5 for each node in the point-to-point or linear ADM that you will convert to BLSR. If all nodes comply with Step 5, proceed to Step 7.
- Step 7** Complete the “DLP-A189 Verify that a 1+1 Working Slot is Active” task on page 15-6 for every 1+1 protection group that supports a span in the point-to-point or linear ADM network.
- Step 8** Complete the “DLP-A155 Delete a Protection Group” task on page 12-21 at each node that supports the point-to-point or linear ADM span.
- Step 9** Complete the “DLP-A214 Change the Service State for a Port” task on page 6-6 to put the protect ports out of service at each node that supports the point-to-point or linear ADM span.
- Step 10** (Linear ADM only) Physically remove the protect fibers from all nodes in the linear ADM; for example, the fiber running from Node 2/Slot 13 to Node 3/Slot 13 (as shown in Figure 15-1) can be removed.

Figure 15-1 Linear ADM to BLSR Conversion

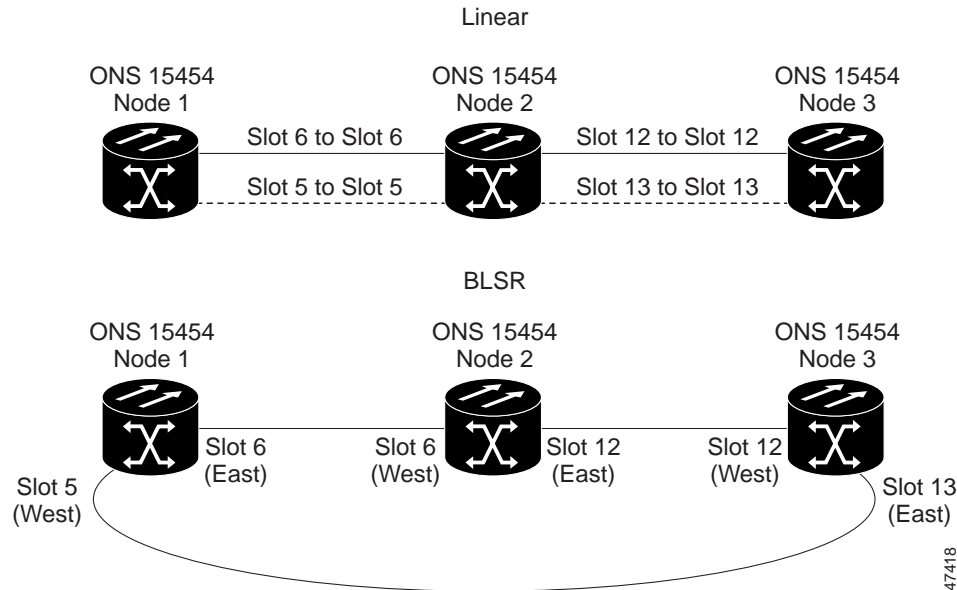

- Step 11** Create the ring by connecting the protect fiber from one end node to the protect port on the other end node. For example, the fiber between Node 1/Slot 5 and Node 2/Slot 5 (as shown in Figure 15-1) can be rerouted to connect Node 1/Slot 5 to Node 3/Slot 13.



Note If you need to physically remove any OC-N cards, do so now. In this example, cards in Node 2/Slots 5 and 13 can be removed. See the “NTP-A116 Remove and Replace a Card” procedure on page 2-27.

- Step 12** From the network view, click the **Circuits** tabs and complete the “DLP-A139 Export CTC Data” task on page 9-4 to save the circuit data to a file on your hard drive.
- Step 13** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 at the end nodes; provision the slot in each node that is not already in the SDCC Terminations list (in the Figure 15-1 example, Port 1 of Node 1/Slot 5 and Port 1 of Node 3/Slot 13).
- Step 14** For circuits provisioned on an STS that is now part of the protection bandwidth (STSs 7 to 12 for an OC-12 BLSR, STSs 25 to 48 for an OC-48 BLSR, and STSs 97 to 192 for an OC-192 BLSR), delete and recreate each circuit:



Note Deleting circuits is service affecting.

- a. Complete the “NTP-A152 Delete Circuits” procedure on page 11-20 for one circuit.
- b. Create the circuit on STSs 1 to 6 for an OC-12 BLSR, STSs 1 to 24 for an OC-48 BLSR, or STSs 1 to 96 for an OC-192 BLSR on the fiber that served as the protect fiber in the linear ADM. See the “NTP-A189 Create a Manually Routed OC-N Circuit” procedure on page 8-47 for instructions.
- c. Repeat Steps a and b for each circuit residing on a BLSR protect STS.

- Step 15** Complete the “NTP-A126 Create a BLSR” procedure on page 6-17 to put the nodes into a BLSR.
Stop. You have completed this procedure.
-

DLP-A189 Verify that a 1+1 Working Slot is Active

Purpose	This task verifies that a working slot in a 1+1 protection scheme is active (and that the protect slot is in standby).
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Both
Security Level	Maintenance or higher

- Step 1** In the node view, click the **Maintenance > Protection** tabs.
- Step 2** In the Selected Group pane, verify that the working slot/port is shown as Working/Active. If so, this task is complete.
- Step 3** If the working slot says Working/Standby, perform a Manual switch on the working slot:
- In the Selected Group area, choose the Protect/Active slot.
 - In the Switch Commands field, choose **Manual**.
 - Click **Yes** in the confirmation dialog box.
- Step 4** Verify that the working slot is carrying traffic (Working/Active).



Note If the slot is not active, look for conditions or alarms that might be preventing the card from carrying working traffic. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.

- Step 5** When the working slot is carrying traffic, clear the Manual switch:
- In the Switch Commands field, choose **Clear**.
 - Click **Yes** in the confirmation dialog box.
- Step 6** Verify that the working slot does not revert to Standby, which might indicate a problem on the working span.
- Step 7** Return to your originating procedure (NTP).
-

NTP-A156 Convert a Point-to-Point or Linear ADM to a Path Protection

Purpose	This procedure upgrades a point-to-point system to a path protection.
Tools/Equipment	None
Prerequisite Procedures	NTP-A124 Provision a Point-to-Point Network, page 6-4
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

This procedure is service affecting. All circuits are deleted and reprovisioned.

-
- Step 1** Log into a node on the point-to-point or linear ADM. See the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A298 Check the Network for Alarms and Conditions” task on page 15-3.
- Step 3** Complete the “DLP-A189 Verify that a 1+1 Working Slot is Active” task on page 15-6 for each node.
- Step 4** Complete the “DLP-A155 Delete a Protection Group” task on page 12-21 for each 1+1 protection group that supports the point-to-point or linear ADM span.
- Step 5** Complete the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5 at the protect cards in all nodes.
- Step 6** Complete the “NTP-A152 Delete Circuits” procedure on page 11-20 and the “NTP-A188 Create an Automatically Routed OC-N Circuit” procedure on page 8-43 to delete and recreate the circuits one at a time.
- Stop. You have completed this procedure.**
-

NTP-A210 Convert a Path Protection to a Two-Fiber BLSR

Purpose	This procedure converts a path protection to a two-fiber BLSR.
Tools/Equipment	None
Prerequisite Procedures	NTP-A44 Provision Path Protection Nodes, page 6-34
Required/As Needed	As needed
Onsite/Remote	Both
Security Level	Provisioning or higher



Caution

This procedure is service affecting. All circuits on the ring are deleted and reprovisioned.



Caution

Read through this procedure completely before beginning the conversion.



Note Prior to beginning this procedure, you should have a unique ring ID number to identify the new BLSR and a unique node ID number for each node on the ring.



Note Prior to beginning this procedure, optical transmit and receive levels should be in their acceptable range as shown in the specifications section for each card in the *Cisco ONS 15454 Reference Manual*.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** Complete the “DLP-A298 Check the Network for Alarms and Conditions” task on page 15-3.
- Step 3** From the View menu choose **Go to Network View**.
- Step 4** Right-click a span adjacent to the node you are logged into.
- Step 5** From the shortcut menu, click **Circuits**. The Circuits on Span window appears.
- Step 6** Verify that the total number of active STS circuits does not exceed 50 percent of the span bandwidth. In the Circuits column there is a block titled “Unused.” This number should exceed 50 percent of the span bandwidth.



Note If the span is an OC-48, no more than 24 STSs can be provisioned on the span. If the span is an OC-192, no more than 96 STSs can be provisioned on the span. If the span is an OC-12, no more than 6 STSs can be provisioned on the span.



Caution If the first half of the capacity is exceeded, this procedure cannot be completed. Bandwidth must be 50 percent unassigned to convert to BLSR. Refer to local procedures for relocating circuits if these requirements are not met.

- Step 7** Repeat Steps 1 through 6 for each node in the path protection that you will convert to BLSR. If all nodes comply with Step 6, proceed to Step 8.
- Step 8** Save all circuit information:
- a. In network view, click the **Provisioning > Circuits** tabs.
 - b. Record the circuit information using one of the following options:
 - From the File menu, click **Print** to print the circuits table.
 - From the File menu, click **Export** and choose the data format: HTML, CSV (comma separated values), or TSV (tab separated values). Click **OK** and save the file in a temporary directory.
 - Complete the “NTP-A195 Document Existing Provisioning” procedure on page 9-2.

Step 9 Delete the circuits:



Note This method uses the network view. To delete circuits one at a time from each node, see the “NTP-A152 Delete Circuits” procedure on page 11-20.

- a. From network view, click the **Circuits** tab. All circuits on the ring appear.

- b. With the **Shift** key pressed, click each circuit in the display. Each line in the display turns dark blue as it is selected.
 - c. After all circuits have been selected, click **Delete**. Allow several minutes for processing; the actual length of time depends on the number of circuits in the network.
- Step 10** Complete the “NTP-A126 Create a BLSR” procedure on page 6-17 to create the BLSR.
- Step 11** Complete the “NTP-A175 Two-Fiber BLSR Acceptance Test” procedure on page 6-21.
- Step 12** To recreate the circuits, see Chapter 8, “Create Circuits and VT Tunnels” and choose the applicable procedure for the circuit type you want to enter.
- Stop. You have completed this procedure.**
-

NTP-A211 Convert a Two-Fiber BLSR to a Four-Fiber BLSR

Purpose	This procedure upgrades a two-fiber BLSR to a four-fiber BLSR. The conversion will be easier if the same east and west configuration is used on all nodes being upgraded.
Tools/Equipment	None
Prerequisite Procedures	NTP-A126 Create a BLSR, page 6-17
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Note

Two-fiber OC-48 or OC-192 BLSRs can be converted to four-fiber BLSRs. To convert, install two additional OC-48 or OC-192 cards at each two-fiber BLSR node, then log into CTC and convert the BLSR from two-fiber to four-fiber. The fibers that were divided into working and protect bandwidths for the two-fiber BLSR are now fully allocated for working BLSR traffic. A span upgrade can be performed prior to the two-fiber to four-fiber BLSR conversion.



Note

BLSR protection channel access (PCA) circuits, if present, will remain in their existing STSs. Therefore, they will be located on the working path of the four-fiber BLSR and will have full BLSR protection. To route PCA circuits on protection channels in the four-fiber BLSR, delete and recreate the circuits after the upgrade. For example, if you upgrade a two-fiber OC-48 BLSR to four-fiber, PCA circuits on the protection STSs (STSs 25 to 48) in the two-fiber BLSR will remain in their existing STSs which are working STSs in the four-fiber BLSR. Deleting and recreating the OC-48 PCA circuits moves the circuits to STSs 1 to 24 in the protect bandwidth of the four-fiber BLSR. To delete circuits, see the “NTP-A152 Delete Circuits” procedure on page 11-20. To create circuits, see Chapter 8, “Create Circuits and VT Tunnels.”



Note

Prior to beginning this procedure, optical transmit and receive levels should be in their acceptable range as shown in the specifications section for each card in the *Cisco ONS 15454 Reference Manual*.

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 to log into one of the two-fiber nodes that you want to convert.
- Step 2** Complete the “DLP-A298 Check the Network for Alarms and Conditions” task on page 15-3.
- Step 3** Install two OC-48 or OC-192 cards at each BLSR node. You must install the same OC-N card rate as the two-fiber BLSR. See Chapter 2, “Install Cards and Fiber-Optic Cable,” for installation procedures.
- Step 4** Connect the fiber to the new cards. Use the same east-west connection scheme that was used to create the two-fiber connections.
- Step 5** Complete the “DLP-A214 Change the Service State for a Port” task on page 6-6 to enable (put in service) the ports for each new OC-N card.
- Step 6** Test the new fiber connections using procedures standard for your site.
- Step 7** Convert the BLSR:
- Display the network view and click the **Provisioning > BLSR** tabs.
 - Choose the two-fiber BLSR you want to convert then click the **Upgrade to 4 Fiber** button.
 - In the Upgrade BLSR dialog box, set the amount of time that will pass before the traffic reverts to the original working path after the condition that caused the switch has been resolved. The default is 5 minutes.
 - Click **Next**.
 - Assign the east and west protection ports:
 - West Protect—Select the west BLSR port that will connect to the west protect fiber from the drop-down menu.
 - East Protect—Select the east BLSR port that will connect to the east protect fiber from the drop-down menu.
 - Click **Finish**.
- Step 8** Click the **Alarms** tab. Make sure the **Filter** button is not selected. Verify that no critical or major alarms are present, nor any facility alarms, such as LOS, LOF, AIS-L, SF, and SD. If an alarm is present, resolve the problem before proceeding to the next step. Refer to the *Cisco ONS 15454 Troubleshooting Guide* for more information about alarms.
- Step 9** Complete the “NTP-A176 Four-Fiber BLSR Acceptance Test” procedure on page 6-28.
- Stop. You have completed this procedure.**
-

NTP-A159 Modify a BLSR

Purpose	This procedure changes a BLSR ring ID, node ID, or ring and span reversion times.
Tools/Equipment	None
Prerequisite Procedures	NTP-A126 Create a BLSR, page 6-17
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Log into a node in the BLSR you want to modify. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.
- Step 2** Check the BLSR for outstanding alarms and conditions. See the “DLP-A298 Check the Network for Alarms and Conditions” task on page 15-3 for instructions.



Note Some or all of the following alarms display during BLSR setup: E-W MISMATCH, RING MISMATCH, APSCIMP, APSDFLTK, and BLSROSYNC. The alarms clear after you configure all the nodes in the BLSR. For definitions of these alarms, see the *Cisco ONS 15454 Troubleshooting Guide*.

- Step 3** To change the BLSR ring ID or the ring or span reversion times, complete the following steps. If you want to change a node ID, go to Step 4.
- a. In network view, click the **Provisioning > BLSR** tabs.
 - b. Click the BLSR you want to modify and click **Edit**.
 - c. In the BLSR window, change any of the following:
 - Ring ID—If needed, change the BLSR ring ID (a number between 0 and 9999). Do not choose a number that is already assigned to another BLSR.
 - Reversion time—If needed, change the amount of time that will pass before the traffic reverts to the original working path after a ring switch.
 - Span Reversion—(Four-fiber BLSRs only) If needed, change the amount of time that will pass before the traffic reverts to the original working path after a span switch.
 - d. Click **Apply**.
- If you changed the ring ID, the BLSR window closes automatically. If you only changed a reversion time, close the window by choosing **Close** from the File menu.
- Step 4** If you need to change a BLSR node ID, complete the “DLP-A326 Change a BLSR Node ID” task on page 15-12; otherwise, proceed to Step 5.

- Step 5** In network view, verify the following:
- A green span line appears between all BLSR nodes.
 - All E-W MISMATCH, RING MISMATCH, APSCIMP, DFLTK, BLSROSYNC, and Node ID Mismatch alarms are cleared.



Note For definitions of these alarms, see the *Cisco ONS 15454 Troubleshooting Guide*.

Stop. You have completed this procedure.

DLP-A326 Change a BLSR Node ID

Purpose	This task changes a BLSR node ID.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** From the View menu choose **Go to Network View**.
- Step 2** On the network map, double-click the node with the node ID you want to change.
- Step 3** Click the **Provisioning > BLSR** tabs.
- Step 4** Choose a Node ID number. Do not choose a number already assigned to another node in the same BLSR.
- Step 5** Click **Apply**.
- Step 6** Return to your originating procedure (NTP).

NTP-A228 Manage BLSR Manual Ring Switches

Purpose	This procedure initiates or clears a BLSR manual ring switch.
Tools/Equipment	None
Prerequisite Procedures	NTP-A126 Create a BLSR, page 6-17
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Traffic is not protected during a Manual ring protection switch.

-
- Step 1** Log into a node in the BLSR you want to modify. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. If you are already logged in, continue with Step 2.
- Step 2** (Optional) Initiate a BLSR manual ring switch. See “DLP-A301 Initiate a BLSR Manual Ring Switch” task on page 15-13.
- Step 3** (Optional) Clear a BLSR manual ring switch. See “DLP-A241 Clear a BLSR Manual Ring Switch” task on page 15-14.
- Stop. You have completed this procedure.**
-

DLP-A301 Initiate a BLSR Manual Ring Switch

Purpose	This task performs a BLSR Manual ring switch.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

Traffic is not protected during a Manual ring protection switch.

- Step 1** From the View menu choose **Go to Network View**.
- Step 2** Click the **Provisioning > BLSR** tabs.
- Step 3** Choose the BLSR and click **Edit**.



Tip

To move an icon to a new location, for example, to see BLSR channel (port) information more clearly, click an icon and drag and drop it in a new location.

- Step 4** Right-click any BLSR node channel (port) and choose **Set West Protection Operation** (if you chose a west channel) or **Set East Protection Operation** (if you chose an east channel).



Note

For two-fiber BLSRs, the squares on the node icons represent the BLSR working and protect channels. You can right-click either channel. For four-fiber BLSRs, the squares represent ports. Right-click either working port.

- Step 5** In the Set West Protection Operation dialog box or the Set East Protection Operation dialog box, choose **MANUAL RING** from the drop-down menu. Click **OK**.
- Step 6** Click **Yes** in the two Confirm BLSR Operation dialog boxes.
- Step 7** Verify that the channel (port) displays the letter “M” for Manual ring. Also verify that the span lines between the nodes where the Manual switch was invoked turn purple, and that the span lines between all other nodes turn green on the network view map. This confirms the Manual switch.

- Step 8** From the File menu, choose **Close**.
- Step 9** Return to your originating procedure (NTP).
-

DLP-A241 Clear a BLSR Manual Ring Switch

Purpose	This task clears a Manual ring switch.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

Traffic is not protected during a Manual ring switch.

- Step 1** From the View menu choose **Go to Network View**.
- Step 2** Click the **Provisioning > BLSR** tabs.
- Step 3** Choose the BLSR and click **Edit**.



Tip

To move an icon to a new location, for example, to see BLSR channel (port) information more clearly, click an icon on the Edit BLSR network graphic and while pressing **Ctrl**, drag the icon to a new location.

- Step 4** Right-click the BLSR node channel (port) where the Manual ring switch was applied and choose **Set West Protection Operation** or **Set East Protection Operation**, as applicable.
- Step 5** In the dialog box, choose **CLEAR** from the drop-down menu. Click **OK**.
- Step 6** Click **Yes** on the Confirm BLSR Operation dialog box. The letter “M” is removed from the channel (port) and the span turns green on the network view map.
- Step 7** From the File menu, choose **Close**.
- Step 8** Return to your originating procedure (NTP).
-



Add and Remove BLSR and Path Protection Nodes



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This chapter explains how to add and remove Cisco ONS 15454 nodes from bidirectional line switched rings (BLSRs) and path protection configurations.



Note

The procedures and tasks in this chapter do not apply to DWDM (Software Release 4.5) nodes.

Before You Begin

Before performing any of the following procedures, complete the "NTP-A195 Document Existing Provisioning" procedure on page 9-2. Also investigate all alarms and clear any trouble conditions. Refer to the *Cisco ONS 15454 Troubleshooting Guide* as necessary.

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. NTP-A212 Add a BLSR Node, page 16-1—Complete as needed.
2. NTP-A213 Remove a BLSR Node, page 16-10—Complete as needed.
3. NTP-A105 Add a Path Protection Node, page 16-15—Complete as needed.
4. NTP-A106 Remove a Path Protection Node, page 16-19—Complete as needed.

NTP-A212 Add a BLSR Node

Purpose	This procedure expands a BLSR by adding a node.
Tools/Equipment	Fiber for new node connections

Prerequisite Procedures	Cards must be installed and node turn-up procedures completed on the node that will be added to the BLSR. See Chapter 2, “Install Cards and Fiber-Optic Cable,” and Chapter 4, “Turn Up Node.”
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution Adding a BLSR node can be service affecting and should be performed during a maintenance window.

Step 1

Draw a diagram of the BLSR where you will add the node. In the diagram, identify the east and west BLSR OC-N trunk (span) cards that will connect to the new node. This information is essential to complete this procedure without error. Figure 16-1 shows a drawing of a three-node, two-fiber BLSR that uses Slots 5 and 12 for the BLSR trunk cards. The dashed arrow shows the new fiber connections that will be made to add the fourth node to the BLSR.

Figure 16-1 Three-Node, Two-Fiber BLSR Before a Fourth Node Is Added


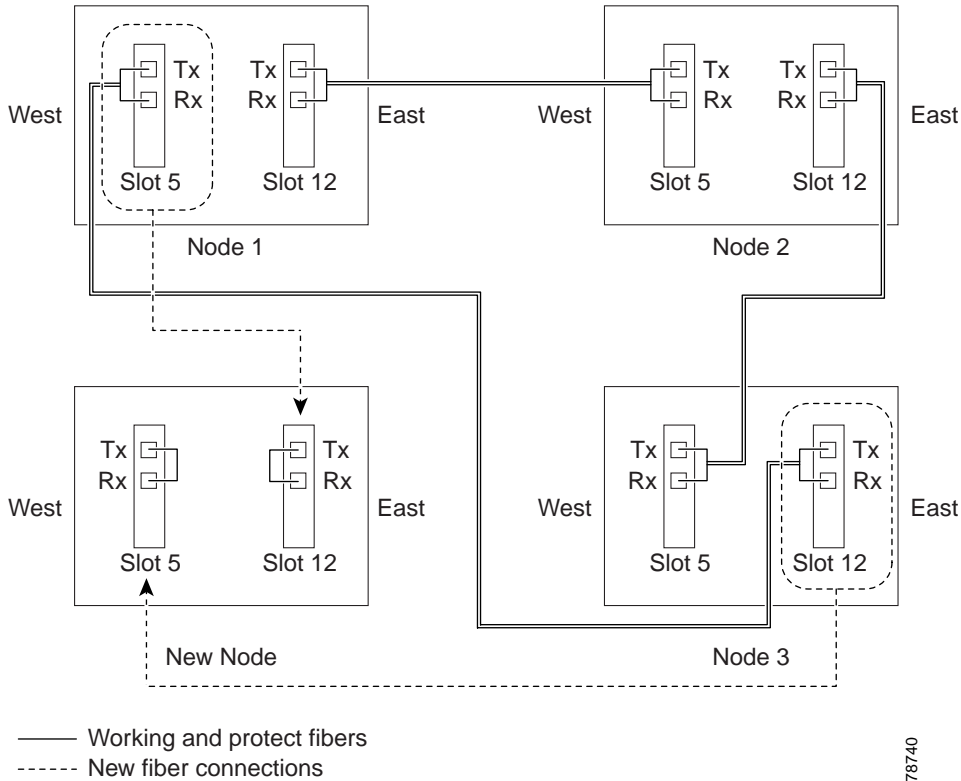


Figure 16-2 shows a sample drawing of a four-fiber BLSR. The dashed arrow shows the new fiber connections that will be made to add the fourth node. For four-fiber BLSRs, two fiber sets will be reconnected, the working fiber and the protect fiber.

Figure 16-2 Three-Node, Four-Fiber BLSR Before a Fourth Node is Added

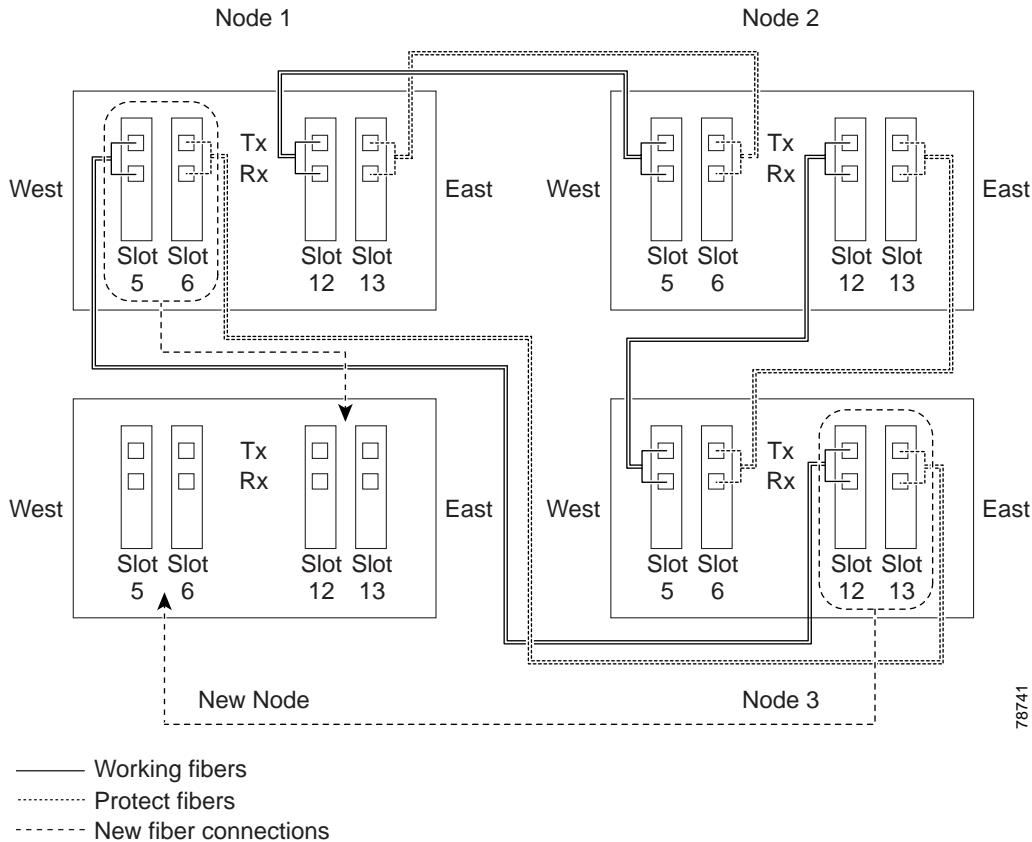

- Step 2** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7 for all the nodes in the ring.
- Step 3** Verify the card installation on the new node using the “NTP-A24 Verify Card Installation” procedure on page 4-2. Verify that the OC-N cards that will be the BLSR trunk cards match the BLSR optical rate. For example, if the BLSR is OC-48, the new node must have OC-48 cards installed. If the OC-N cards are not installed or the optical rates do not match the BLSR, complete the “NTP-A16 Install the OC-N Cards” procedure on page 2-13.
- Step 4** Verify that fiber is available to connect the new node to the existing nodes. Refer to the diagram drawn in Step 1.
- Step 5** Complete the “NTP-A35 Verify Node Turn Up” procedure on page 6-2. In order to have CTC visibility to the new node after it is added, you must be an authorized user on the node and you must have IP connectivity to the node.
- Step 6** Determine if the following conditions are present:
- The IP address for the new node is on the same subnet as other nodes in the network.
 - On the new node Provisioning > Network > General subtab, Craft Access Only is not checked under Gateway Settings.
 - A CTC computer is directly connected to the new node.
 - CTC computers are directly connected to other nodes on the same subnet.

If the conditions are not present, continue with Step 7. If these conditions are present, complete the “DLP-A65 Create a Static Route” task on page 4-14 on the node that will be added to the BLSR using the following settings:

- Destination IP address: *IP address of the CTC computer connected to the new node*
- Net Mask: **255.255.255.255**
- Next Hop: *IP address of the Cisco ONS 15454*
- Cost: **1**

To view Gateway Settings, see the “DLP-A249 Provision IP Settings” task on page 4-9.

- Step 7** Complete the “DLP-A60 Log into CTC” task on page 3-26 at a node in the BLSR.
- Step 8** Complete the “DLP-A302 Check BLSR or Path Protection Alarms and Conditions” task on page 16-6 to verify that the BLSR is free of major alarms or problems. If trouble is indicated (for example, a major alarm exists), resolve the problem before proceeding. See Chapter 9, “Manage Alarms” or, if necessary, refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 9** Click the Circuits tab. If any circuits on the BLSR show an Upgradable status, complete the “NTP-A417 Upgrade TL1 Cross-Connects to CTC Circuits” procedure on page 11-19 to upgrade the circuits.
- Step 10** Click the **Provisioning > BLSR** tabs.
- Step 11** On paper, record the Ring ID, Ring Type, Line Rate, Ring Reversion, and Span Reversion (4 Fiber).
- Step 12** From the Node column, record the Node IDs in the BLSR. The Node IDs are the numbers in parentheses next to the node name.
- Step 13** Log into the new node:
- If the node has a LAN connection and appears on the network map, from the View menu, choose **Go to Other Node**, then enter the new node.
 - If the new node is not connected to the network, log into it using the “DLP-A60 Log into CTC” task on page 3-26.
- Step 14** Click the **Alarms** tab. Verify that no critical or major alarms are present, nor any facility alarms, such as LOS, LOF, AIS-L, SF, and SD. If trouble is indicated (for example, a major alarm exists), resolve the problem before proceeding. See Chapter 9, “Manage Alarms” or, if necessary, refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 15** Using the information recorded in Steps 11 and 12 and the diagram created in Step 1, create a BLSR on the new node. See the “DLP-A242 Create a BLSR on a Single Node” task on page 16-6.
- Step 16** (Optional) Create test circuits, making sure they pass through the BLSR trunk cards, and run test traffic through the node to ensure the cards are functioning properly. See the “NTP-A189 Create a Manually Routed OC-N Circuit” procedure on page 8-47 and the “NTP-A62 Test OC-N Circuits” procedure on page 8-55 for information.
- Step 17** Create the DCC terminations on the new node. See the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5.



Note Creating the DCC terminations causes the SDCC Termination Failure and Loss of Signal alarms to appear. These alarms will remain active until you connect the node to the BLSR.



Note If you map the K3 byte to another byte (such as E2), you must remap the line cards on either side of the new node to the same byte. See the “DLP-A89 Remap the K3 Byte” task on page 6-17.

- Step 18** Complete the “DLP-A60 Log into CTC” task on page 3-26 at a BLSR node that will connect to the new node.
- Step 19** Referring to the diagram created in Step 1, complete the “DLP-A303 Initiate a BLSR Force Ring Switch” task on page 16-7 on the node that will connect to the new node on its west line (port).
- Step 20** Referring to the diagram created in Step 1, complete the “DLP-A303 Initiate a BLSR Force Ring Switch” task on page 16-7 on the node that will connect to the new node on its east line (port).
- Step 21** Click the **Alarms** tab. If unexpected critical or major alarms appear, resolve them before you continue. If necessary, refer to the alarm troubleshooting procedures in the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 22** Following the diagram created in Step 1, remove the fiber connections from the two nodes that will connect to the new node.
- Remove the west fiber from the node that will connect to the east port of the new node. In the Figure 16-1 example, this is Node 1/Slot 5, and in Figure 16-2 this is Node 1, Slots 5 and 6.
 - Remove the east fiber from the node that will connect to the west port of the new node. In the Figure 16-1 example, this is Node 3/Slot 12, and in Figure 16-2 this is Node 3, Slots 12 and 13.
- Step 23** Connect fibers from the adjacent nodes to the new node following the diagram created in Step 1. Connect the west port to the east port and the east port to the west port. For 4-fiber BLSRs, connect the protect fibers.
- Step 24** Display the newly added node in node view.
- Step 25** Click the **Provisioning > BLSR** tabs.
- Step 26** Click **Ring Map**. Verify that the new node appears on the Ring Map with the other BLSR nodes, then click **OK**.
- Step 27** From the View menu, choose **Go to Network View** and check the following:
- Click the **Provisioning > BLSR** tabs. Verify that the new node appears under the Node column.
 - Click the **Alarms** tab. Verify that BLSR alarms such as RING MISMATCH, E-W MISMATCH, PRC-DUPID (duplicate node ID), and APSCDFLTK (default K) do not appear.
- If the new node does not appear in the Node column, or if BLSR alarms are present, log into the new node and verify that the BLSR is provisioned on it correctly with the information from Steps 11 and 12. If the node still does not appear, or if alarms persist, refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 28** Click the **Circuits** tab. Wait until all the circuits are discovered. The circuits that pass through the new node will be shown as incomplete.



Note If the circuits take more than a minute to appear, log out of CTC, then log back in.

- Step 29** In network view, right-click the new node and choose **Update Circuits With The New Node** from the shortcut menu. Verify that the number of updated circuits in the dialog box is correct.
- Step 30** If incomplete circuits are still present, refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 31** Click the **History** tab. Verify that BLSR_RESYNC conditions appear for every node in the BLSR.
- Step 32** Complete the “DLP-A194 Clear a BLSR Force Ring Switch” task on page 16-9 to remove the ring switch from the east and west BLSR lines.
- Step 33** If you want to convert the circuits upgraded to CTC circuits in the Step 9 to TL1-like cross-connects, complete the “NTP-A416 Convert a CTC Circuit to TL1 Cross-Connects” procedure on page 11-18.

Step 34 According to local site practice, complete the “NTP-A175 Two-Fiber BLSR Acceptance Test” procedure on page 6-21 or the “NTP-A176 Four-Fiber BLSR Acceptance Test” procedure on page 6-28.

Stop. You have completed this procedure.

DLP-A302 Check BLSR or Path Protection Alarms and Conditions

Purpose	Use this task to check a BLSR or path protection for alarms and conditions before performing any major administrative change to the ring such as adding and removing nodes.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	Required before performing any major change to the ring.
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Verify that all BLSR or path protection spans on the network map are green.
- Step 3** Click the **Alarms** tab. Verify that no critical or major alarms are present, nor any facility alarms, such as LOS, LOF, AIS-L, SF, and SD. In a BLSR, these facility conditions might be reported as minor alarms. Make sure the Filter button in the lower right corner of the window is off (not indented).
- Step 4** Click the **Conditions** tab and click **Retrieve Conditions**. Verify that no ring switches are active. Make sure the Filter button in the lower right corner of the window is off (not indented).
- Step 5** Return to the originating procedure (NTP).
-

DLP-A242 Create a BLSR on a Single Node

Purpose	This task creates a BLSR on a single node. Use it to add a node to an existing BLSR or when you delete and then recreate a BLSR temporarily on one node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** In node view, click the **Provisioning > BLSR** tabs.
- Step 2** In the Suggestion dialog box, click **OK**.
- Step 3** In the Create BLSR dialog box, enter the BLSR information:

- Ring Type—Enter the ring type (either 2 Fiber or 4 Fiber) of the BLSR.
- Ring ID—Enter the BLSR ring ID. If the node is being added to a BLSR, use the BLSR ring ID.
- Node ID—Enter the node ID. If the node is being added to a BLSR, use an ID that is not used by other BLSR nodes.
- Ring Reversion—Enter the ring reversion time of the existing BLSR.
- West Line—Enter the slot on the node that will connect to the existing BLSR via the node's west line (port).
- East Line—Enter the slot on the node that will connect to the existing BLSR via the node's east line (port).

If you are adding the node to a four-fiber BLSR, complete the following for the second set of fibers:

- Span Reversion—Enter the span reversion time of the existing BLSR.
- West Line—Enter the slot on the node that will connect to the existing BLSR via the node's west line.
- East Line—Enter the slot on the node that will connect to the existing BLSR via the node's east line.

Step 4 Click **OK**.



Note The BLSR is incomplete and alarms are present until the node is connected to other BLSR nodes.

Step 5 Return to your originating procedure (NTP).

DLP-A303 Initiate a BLSR Force Ring Switch

Purpose	Use this task to perform a BLSR Force switch on a BLSR port.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

The Force Switch Away command overrides normal protective switching mechanisms. Applying this command incorrectly can cause traffic outages.



Caution

Traffic is not protected during a Force protection switch.

Step 1 From the View menu, choose **Go to Network View**.

Step 2 Click the **Provisioning > BLSR** tabs.

Step 3 Click **Edit**.

Step 4 To apply a Force switch to the west line:

- a. Right-click the west BLSR port where you want to switch the BLSR traffic and choose **Set West Protection Operation**.



Note If node icons overlap, drag and drop the icons to a new location. You can also return to network view and change the positions of the network node icons, because BLSR node icons are based on the network view node icon positions.



Note For two-fiber BLSRs, the squares on the node icons represent the BLSR working and protect channels. You can right-click either channel. For four-fiber BLSRs, the squares represent ports. Right-click either working port.

- b. In the Set West Protection Operation dialog box, choose **FORCE RING** from the drop-down menu. Click **OK**.
- c. Click **Yes** in the two Confirm BLSR Operation dialog boxes that appear.

On the network graphic, an F appears on the working BLSR channel where you invoked the protection switch. The span lines change color to reflect the forced traffic. Green span lines indicate the new BLSR path, and the lines between the protection switch are purple.

Performing a Force switch generates several conditions including FORCED-REQ-RING, FORCED-REQ-RING, and WKSWPR.

Step 5 To apply a Force switch to the east line:

- a. Right-click the east BLSR port and choose **Set East Protection Operation**.



Note If node icons overlap, drag and drop the icons to a new location or return to network view and change the positions of the network node icons, since BLSR node icons are based on the network view node icon positions.



Note For two-fiber BLSRs, the squares on the node icons represent the BLSR working and protect channels. You can right-click either channel. For four-fiber BLSRs, the squares represent ports. Right-click either working port.

- b. In the Set East Protection Operation dialog box, choose **FORCE RING** from the drop-down menu. Click **OK**.
- c. Click **Yes** in the two Confirm BLSR Operation dialog boxes that appear.

On the network graphic, an F appears on the working BLSR channel where you invoked the protection switch. The span lines change color to reflect the forced traffic. Green span lines indicate the new BLSR path, and the lines between the protection switch are purple.

Performing a Force switch generates several conditions including FORCED-REQ-RING, FORCED-REQ-RING, and WKSWPR.

Step 6 From the File menu, choose **Close**.

Step 7 Return to your originating procedure (NTP).

DLP-A194 Clear a BLSR Force Ring Switch

Purpose	This task removes a Force switch from a BLSR port.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

- Step 1** From the View menu, choose **Go to Network View**.
- Step 2** Click the **Provisioning > BLSR** tabs.
- Step 3** Click **Edit**.
- Step 4** To clear a Force switch on the west line:
- Right-click the BLSR west port where you want to clear the protection switch and choose **Set West Protection Operation**. Ports with a Force switch applied are marked with an F.
 - In the Set West Protection Operation dialog box, choose **CLEAR** from the drop-down menu. Click **OK**.
 - In the Confirm BLSR Operation dialog box, click **Yes**.
- Step 5** To clear a Force switch on the east line:
- Right-click the BLSR east port where you want to clear the protection switch and choose **Set East Protection Operation**. Ports with a Force switch applied are marked with an F.
 - In the Set East Protection Operation dialog box, choose **CLEAR** from the drop-down menu. Click **OK**.
 - In the Confirm BLSR Operation dialog box, click **Yes**.
- On the BLSR network graphic, a green and a purple span line connects each node. This is the normal display for BLSRs when protection operations are not invoked.
- Step 6** From the File menu, choose **Close**.
- Step 7** Return to your originating procedure (NTP).
-

NTP-A213 Remove a BLSR Node

Purpose	This procedure removes a node from a BLSR.
Tools/Equipment	None
Prerequisite Procedures	NTP-A126 Create a BLSR, page 6-17
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

The following procedure minimizes traffic outages during node removals. You will delete all circuits that originate and terminate on the node that will be removed. In addition, you will verify that circuits passing through the node do not enter and exit the node on different STSs and/or VTs. If they do, you will delete and recreate the circuits, and traffic will be lost during this time. If you have questions, contact your next level of support. See “Obtaining Technical Assistance” section on page xlix.




Caution

If you remove a node that is the only BITS timing source for the ring, you also remove the only source of synchronization for all the nodes in that ring. Circuits that connect to other networks which are synchronized to a Stratum 1 clock will experience a high level of pointer adjustments, which might adversely affect customer service.

-
- Step 1** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7 for all the nodes in the ring.
- Step 2** Log into the node that you are going to remove from the BLSR. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions.
- Step 3** Complete the “DLP-A195 Verify Timing in a Reduced Ring” task on page 16-12.
- Step 4** Create a diagram of the BLSR where you will remove the node. You can draw the BLSR manually, or print it from CTC by performing the following steps:
- From the View menu, choose **Go to Network View**.
 - Click the **Provisioning > BLSR** tab, click the BLSR, then click **Edit**.
 - In the BLSR window, verify that all the port information is visible. If not, press **Ctrl** and drag the node icons to a new location so the information can be viewed.
 - From the File menu, choose **Print**.
 - Close the BLSR window by choosing **Close** from the File menu.
- Step 5** Referring to the BLSR diagram, identify the following:
- The node that is connected via its west port to the target (removal) node. For example, if you were removing Node 4 in Figure 16-3, Node 1 is the node connected via its west port to Node 4.
 - The node that is connected via its east port to the target (removal) node. In Figure 16-3, Node 3 is the node connected via its east port to Node 4.

Figure 16-3 Four-Node, Two-Fiber BLSR Before a Node Is Removed

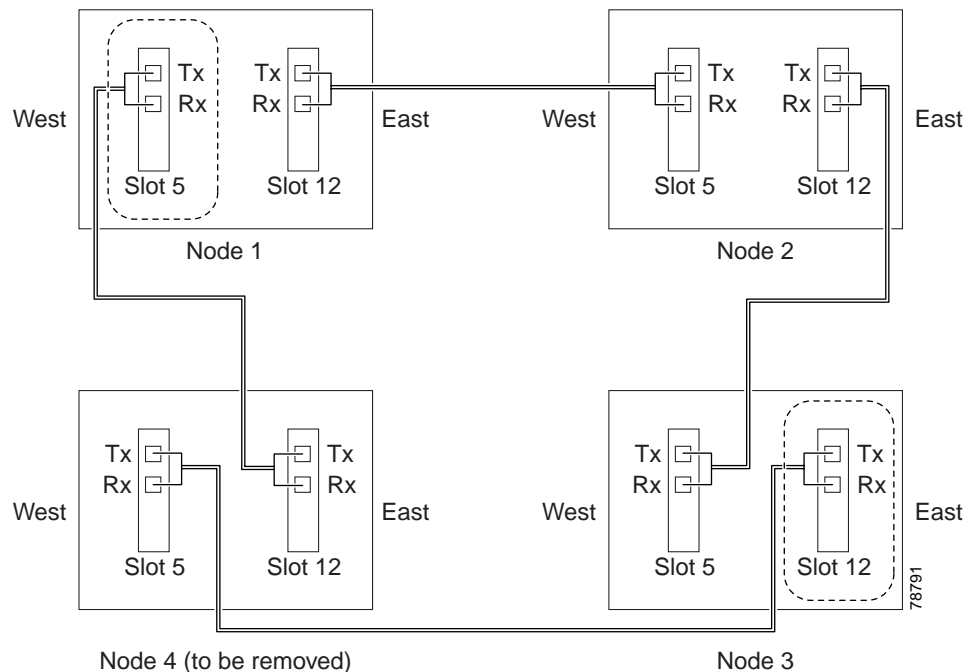

- Step 6** Complete the “DLP-A302 Check BLSR or Path Protection Alarms and Conditions” task on page 16-6 to verify that the BLSR is free of alarms. If trouble is indicated (for example, a major alarm exists), resolve the problem before proceeding. See Chapter 9, “Manage Alarms” or, if necessary, refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 7** From the View menu, choose **Go to Other Node**. Choose the node that you will remove and click **OK**.
- Step 8** Click the **Circuits** tab. If the Scope setting is set to Network, choose **Node** from the Scope drop-down menu. Make sure the Filter button is off (not indented) to ensure that all circuits are visible.
- Step 9** Delete all circuits that originate or terminate on the node. See the “NTP-A152 Delete Circuits” procedure on page 11-20.
- Step 10** Complete the “DLP-A304 Verify BLSR and Path Protection Pass-Through Circuits” task on page 16-13 to verify that circuits passing through the target node enter and exit the node on the same STS and/or VT.
- Step 11** From the View menu, choose **Go to Network View**.
- Step 12** Referring to the diagram created in Step 1, complete the “DLP-A303 Initiate a BLSR Force Ring Switch” task on page 16-7 at each node that connects to the target (removal) node to force traffic away from it. You must perform a Force switch at each port connected to the target node. For example, in Figure 16-3, you would perform a Force switch on the east port of Node 3 and the west port of Node 1.
- Step 13** Click the **Alarms** tab. If unexpected critical or major alarms are present, resolve them before you continue. If necessary, refer to the alarm troubleshooting procedures in the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 14** Remove the fiber connections between the node being removed and the two neighboring nodes.
- Step 15** If the two nodes that will be connected after the BLSR node is removed have OC48AS trunk (span) cards and their K3 bytes were remapped, complete the “DLP-A304 Verify BLSR and Path Protection Pass-Through Circuits” task on page 16-13. If not, continue with Step 16.
- Step 16** Reconnect the fiber of the two neighboring nodes directly, west port to east port. For example, in Figure 16-3, the east port of Node 3 (Slot 12) connects to the west port of Node 1 (Slot 5).

- Step 17** If you do not plan to add the removed node to a BLSR in the future, complete the “DLP-A196 Delete a BLSR from a Single Node” task on page 16-15. If you will add the node to a BLSR in the future, go to Step 18.
- Step 18** If you delete a node that was in a login node group, you will see incomplete circuits for that node in the CTC network view. (Although it is no longer part of the ring, the removed node still reports to CTC until it is no longer in a login node group.) Delete the node from the login node group:
- From the CTC Edit menu, choose **Preferences**.
 - In the Preferences dialog box, click the **Login Node Groups** tab.
 - Click the login node group tab containing the node you want to remove.
 - Click the node you want to remove, then click **Remove**.
 - Click **OK**.
- Step 19** Click the **History** tab. Verify that the BLSR_RESYNC condition appears for every node in the BLSR.
- Step 20** Complete the “DLP-A194 Clear a BLSR Force Ring Switch” task on page 16-9 to remove the Force protection switches.
- Step 21** According to local site practice, complete the “NTP-A175 Two-Fiber BLSR Acceptance Test” procedure on page 6-21.
- Stop. You have completed this procedure.**
-

DLP-A195 Verify Timing in a Reduced Ring

Purpose	This task verifies timing in the ring where you removed a node.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite/remote
Security Level	Provisioning or higher

- Step 1** Click the **Provisioning > Timing** tabs.
- Step 2** Observe the Timing Mode field to see the type of timing (Line, External, Mixed) that has been set for that node.
- Step 3** Scroll down to the Reference Lists and observe the NE Reference fields to see the timing references provisioned for that node.
- Step 4** If the removed node was the only BITS timing source, perform the following:
- Contact your synchronization coordinator or appropriate personnel before continuing with this procedure.
 - Look for another node on the ring that can be used as a BITS source and set that node’s Timing Mode to **External**. Choose that node as the primary timing source for all other nodes in the ring. See the “DLP-A157 Change the Node Timing Source” task on page 12-24.

- c. If no node in the reduced ring can be used as a BITS source, choose one node to be your internal timing source. Set that node's Timing Mode to **External**, set BITS-1 and BITS-2 BITS In State to **OOS**, and set the NE Reference to **Internal**. Then, choose line timing for all other nodes in the ring. This forces the first node to be their primary timing source. (See the "DLP-A157 Change the Node Timing Source" task on page 12-24.)



Note This type of timing conforms to Stratum 3 requirements and is not considered optimal.


- Step 5** If the removed node was not the only BITS timing source, provision the adjacent nodes to line timing using SONET links (east and west) as timing sources, traceable to the node with external BITS timing. See the "NTP-A28 Set Up Timing" procedure on page 4-21.
- Step 6** Return to your originating procedure (NTP).

DLP-A304 Verify BLSR and Path Protection Pass-Through Circuits

Purpose	This task verifies that circuits passing through a BLSR or path protection node enter and exit the node on the same STS and/or VT. The task is performed prior to removal of the node from the BLSR or path protection.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In the CTC Circuits window, choose a circuit that passes through the BLSR or path protection node that will be removed and click **Edit**.
- Step 2** In the Edit Circuits window, check **Show Detailed Map**.
- Step 3** Verify that the STS and VT mapping on the node's east and west ports are the same. For example, if the circuit mapping on the west port is s5/p1/S1 (Slot 5, Port 1, STS 1), verify that the mapping is STS 1 on the east port. If the circuit displays different STSs and/or VTs on the east and west ports, write down the name of the circuit. Figure 16-4 shows a circuit passing through a node (doc-124) on the same STS (STS 2).

Figure 16-4 Verifying Pass-Through STSs

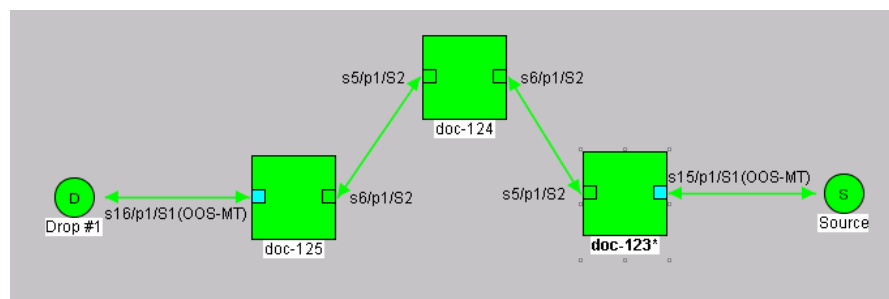

- Step 4** Repeat Steps 1 to 3 for each circuit in the Circuits tab.
- Step 5** For each circuit recorded in Step 3 (circuits that entered/exited the node on a different STS/VT), complete the following steps:
- Check the STS/VT availability from circuit source to destination to verify a path is available for the recreated circuit to pass through the node on the same STS/VT timeslot. For path protection configurations verify both a working and protect path from circuit source to destination.
 - Complete the “NTP-A152 Delete Circuits” procedure on page 11-20.
 - Create a new circuit. See Chapter 8, “Create Circuits and VT Tunnels.”
 - Repeat Steps 1 through 3 to verify that the new circuit passes through the node on the same STS/VT.
- Step 6** Return to your originating procedure (NTP).
-

DLP-A422 Verify BLSR Extension Byte Mapping

Purpose	This task verifies that the extension byte mapping is the same on BLSR trunk (span) cards that will be connected after a node is removed from a BLSR.
Tools/Equipment	OC48AS cards must be installed at one or both ends of the BLSR span that will be connected.
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In network view, double-click a BLSR node with OC48AS trunk (span) cards that will be reconnected after a BLSR node removal.
- Step 2** Double-click one OC48AS BLSR trunk card.
- Step 3** Click the **Provisioning > Line** tab.
- Step 4** Record on paper the byte in the BLSR Ext Byte column.
- Step 5** Repeat Steps 2 and 4 for the second OC48AS trunk card
- Step 6** If the node at the other end of the new span contains OC48AS trunk cards, repeat Steps 1 and 5 at the node. If it does not have OC48AS cards, their trunk cards are mapped to the K3 extension byte. Continue with Step 7.
- Step 7** If the trunk cards on each end of the new span are mapped to the same BLSR extension byte, continue with Step 6. If they are not the same, remap the extension byte of the trunk cards at one of the nodes. See the “DLP-A89 Remap the K3 Byte” task on page 6-17.
- Step 8** Return to your originating procedure (NTP).
-

DLP-A196 Delete a BLSR from a Single Node

Purpose	This task deletes a BLSR from a node after you remove the node from the BLSR.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view, display the node that was removed from the BLSR.
- Step 2** Click the **Provisioning > BLSR** tabs.
- Step 3** Highlight the ring and click **Delete**.
- Step 4** In the Suggestion dialog box, click **OK**.
- Step 5** In the confirmation message, confirm that this is the ring you want to delete. If so, click **Yes**.
- Step 6** Return to your originating procedure (NTP).
-

NTP-A105 Add a Path Protection Node

Purpose	This procedure adds a node to a path protection.
Tools/Equipment	None
Prerequisite Procedures	Cards must be installed and node turn-up procedures completed on the node that will be added to the path protection. See Chapter 2, “Install Cards and Fiber-Optic Cable,” and Chapter 4, “Turn Up Node.”
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher

-
- Step 1** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7 for all the nodes in the ring.
- Step 2** Log into an existing node in the path protection where you want to add a node. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions. In order to have CTC visibility to the new node after it is added, you must be an authorized user on the node and you must have IP connectivity to the node.
- Step 3** Complete the “DLP-A302 Check BLSR or Path Protection Alarms and Conditions” task on page 16-6 to verify that the path protection is free of major alarms or problems. If trouble is indicated (for example, a major alarm exists), resolve the problem before proceeding. See Chapter 9, “Manage Alarms” or, if necessary, refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 4** Verify the card installation on the new node. See the “NTP-A24 Verify Card Installation” procedure on page 4-2. Check that the OC-N cards that will serve as the path protection trunk (span) cards match the path protection optical rate of the trunk cards to which the new node will be connected. For example, if

the adjacent nodes have OC-48 trunk cards, the new node must have OC-48 cards installed. If the OC-N cards are not installed or the rate does not match the rate of the adjacent node trunk cards, complete the “NTP-A16 Install the OC-N Cards” procedure on page 2-13 to install them.

Step 5 Verify that fiber is available to connect the new node to the existing nodes.

Step 6 Complete the “NTP-A35 Verify Node Turn Up” procedure on page 6-2.

Step 7 Determine if the following conditions are present.

- The IP address for the new node is on the same subnet as other nodes in the network.
- On the new node Provisioning > Network > General subtab, Craft Access Only is not checked under Gateway Settings.
- A CTC computer is directly connected to the new node.
- CTC computers are directly connected to other nodes on the same subnet.

If the conditions are not present, continue with Step 8. If conditions are present, complete the “DLP-A65 Create a Static Route” task on page 4-14 on the node that will be added to the path protection. Use the following settings:

- Destination IP address: *IP address of the CTC computer connected to the new node*
- Net Mask: **255.255.255.255**
- Next Hop: *IP address of the Cisco ONS 15454*
- Cost: **1**

To view Gateway Settings, see the “DLP-A249 Provision IP Settings” task on page 4-9.

Step 8 Click the Circuits tab. If any circuits on the path protection have a status of “Upgradable,” complete the “NTP-A417 Upgrade TL1 Cross-Connects to CTC Circuits” procedure on page 11-19 to upgrade them.

Step 9 Log into the new node:

- If the node has a LAN connection and appears on the network map, from the View menu, choose **Go to Other Node**, then enter the new node.
- If the new node is not connected to the network, log into it using the “DLP-A60 Log into CTC” task on page 3-26.

Step 10 Click the **Alarms** tab. Verify that no critical or major alarms are present, nor any facility alarms, such as LOS, LOF, AIS-L, SF, and SD. If trouble is indicated (for example, a major alarm exists), resolve the problem before proceeding. See Chapter 9, “Manage Alarms,” or, if necessary, refer to the *Cisco ONS 15454 Troubleshooting Guide*.

Step 11 (Optional) Create test circuits, making sure they pass through the path protection trunk cards, and run test traffic through the node to ensure that the cards are functioning properly. See the “NTP-A189 Create a Manually Routed OC-N Circuit” procedure on page 8-47 and the “NTP-A62 Test OC-N Circuits” procedure on page 8-55 for information.

Step 12 Create the DCC terminations on the new node. See the “DLP-A253 Provision SONET DCC Terminations” task on page 6-5.

Step 13 From the View menu, choose **Go to Network View**.

Step 14 Complete the “DLP-A197 Initiate a Path Protection Force Switch” task on page 16-17 to switch traffic away from the span that will be broken to connect to the new node.



Caution

Traffic is not protected during a protection switch.

- Step 15** Two nodes will connect directly to the new node; remove their fiber connections:
- Remove the east fiber connection from the node that will connect to the west port of the new node.
 - Remove the west fiber connection from the node that will connect to the east port of the new node.
- Step 16** Replace the removed fibers with the fibers that are connected to the new node.
- Step 17** Log out of CTC and log back into a node in the network.
- Step 18** From the View menu, choose **Go to Network View** to display the path protection nodes. The new node should appear in the network map. Wait for a few minutes to allow all the nodes to appear.
- Step 19** Click the **Circuits** tab and wait for all the circuits to appear, including spans. Count the number of incomplete circuits.
- Step 20** In the network view, right-click the new node and choose **Update Circuits With New Node** from the shortcut menu. Wait for the confirmation dialog box to appear. Verify that the number of updated circuits in the dialog box is correct.



Note If the circuits take more than a minute to appear, log out, then log back in.

- Step 21** Click the **Circuits** tab and verify that no incomplete circuits are present.
- Step 22** Complete the “DLP-A198 Clear a Path Protection Force Switch” task on page 16-18 to clear the protection switch.
- Step 23** If you want to convert the circuits upgraded to CTC circuits in the Step 8 to TL1-like cross-connects, complete the “NTP-A416 Convert a CTC Circuit to TL1 Cross-Connects” procedure on page 11-18.
- Step 24** According to local site practice, complete the “NTP-A177 Path Protection Acceptance Test” procedure on page 6-35.

Stop. You have completed this procedure.

DLP-A197 Initiate a Path Protection Force Switch

Purpose	This task switches all circuits on a path protection span to another span.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

The Force Switch Away command overrides normal protective switching mechanisms. Applying this command incorrectly can cause traffic outages.



Caution


Traffic is not protected during a Force protection switch.

- Step 1** From the View menu in the node view, choose **Go to Network View**.

- Step 2** Right-click the span where you want to switch path protection traffic away. Choose **Circuits** from the shortcut menu.
- Step 3** In the Circuits on Span dialog box, choose **FORCE SWITCH AWAY**. Click **Apply**.
- Step 4** In the Confirm path protection Switch dialog box, click **Yes**.
- Step 5** In the Protection Switch Result dialog box, click **OK**.

In the Circuits on Span window, the Switch State for all circuits is FORCE. Figure 16-5 shows an example.

Figure 16-5 Circuits on Span Dialog Box with a Force Switch

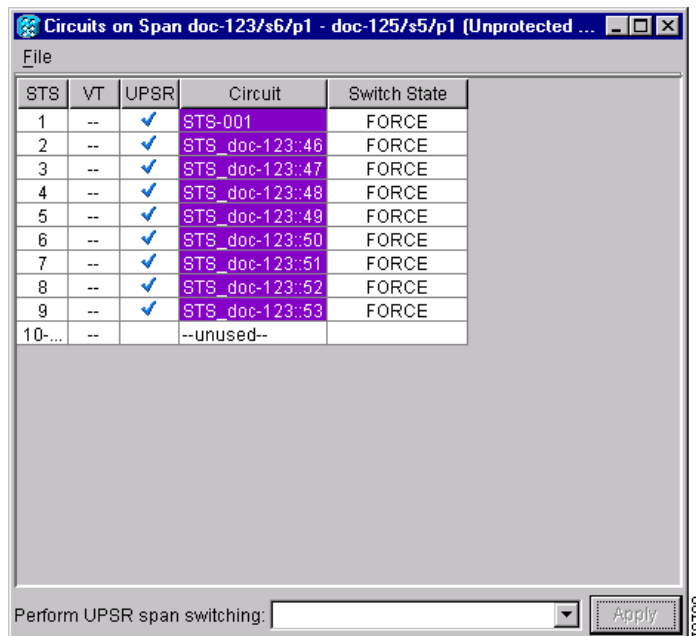

Note A Force switch request on a span or card causes CTC to raise a FORCED-REQ condition. The condition clears when you clear the Force switch.

- Step 6** Return to your originating procedure (NTP).

DLP-A198 Clear a Path Protection Force Switch

Purpose	This task clears a path protection Force switch.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** From the View menu at the node view, choose **Go to Network View**.
- Step 2** Right-click the span where you want to clear the switch. Choose **Circuits** from the shortcut menu.
- Step 3** In the Circuits on Span dialog box, choose **CLEAR** to remove the Force switch. Click **Apply**.
- Step 4** In the Confirm Path Protection Switch dialog box, click **Yes**.
- Step 5** In the Protection Switch Result dialog box, click **OK**.
- In the Circuits on Span window, the Switch State for all path protection circuits is CLEAR.
- Step 6** Return to your originating procedure (NTP).
-

NTP-A106 Remove a Path Protection Node

Purpose	This procedure removes a node from a path protection.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Provisioning or higher



Caution

The following procedure minimizes traffic outages during node removals. You will delete all circuits that originate and terminate on the node that will be removed. In addition, you will verify that circuits passing through the node do not enter and exit the node on different STSs and/or VTs. If they do, you will delete and recreate the circuits, and traffic will be lost during this time. If you have questions, contact your next level of support. See “Obtaining Technical Assistance” section on page xlix.



Caution

If you remove a node that is the only BITS timing source for the ring, you also remove the only source of synchronization for all the nodes in that ring. Circuits that connect to other networks which are synchronized to a Stratum 1 clock will experience a high level of pointer adjustments, which might adversely affect customer service.

-
- Step 1** Draw a diagram of the path protection where you will remove the node. In the diagram, identify the following:
- The node that is connected through its west port to the node that will be removed.
 - The node that is connected through its east port to the node that will be removed.
- Step 2** According to local site practice, complete the “NTP-A108 Back Up the Database” procedure on page 17-7 for all the nodes in the ring.
- Step 3** Log into a node in the network where you want to remove a path protection node. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions.

- Step 4** Complete the “DLP-A302 Check BLSR or Path Protection Alarms and Conditions” task on page 16-6 to verify that the path protection is free of alarms. If trouble is indicated (for example, a major alarm exists), resolve the problem before proceeding. See Chapter 9, “Manage Alarms” or, if necessary, refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 5** Complete the “NTP-A152 Delete Circuits” procedure on page 11-20 for circuits that originate or terminate in the node you will remove. (If a circuit has multiple drops, delete only the drops that terminate on the node you are deleting.)
- Step 6** Complete the “DLP-A304 Verify BLSR and Path Protection Pass-Through Circuits” task on page 16-13 to verify that circuits passing through the target node enter and exit the node on the same STS and/or VT.
- Step 7** Complete the “DLP-A197 Initiate a Path Protection Force Switch” task on page 16-17 for all spans connected to the node you are removing.

**Caution**

Traffic is not protected during a Force protection switch.

- Step 8** Remove all fiber connections between the node being removed and the two neighboring nodes.
- Step 9** Reconnect the fiber of the two neighboring nodes directly, west port to east port.

**Note**

If you delete a node that was in a login node group, you will see incomplete circuits for that node in CTC network view. (Although it is no longer part of the ring, the removed node still reports to CTC until it is no longer in a login node group.)

- Step 10** Exit CTC and log back in. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions.
- Step 11** Log into each newly connected node and click the **Alarms** tab. Verify that the span cards are free of alarms. Resolve any alarms before proceeding. Refer to the *Cisco ONS 15454 Troubleshooting Guide*.
- Step 12** Complete the “DLP-A195 Verify Timing in a Reduced Ring” task on page 16-12.
- Step 13** Complete the “DLP-A198 Clear a Path Protection Force Switch” task on page 16-18 to clear the protection switch.
- Step 14** Click the **Circuits** tab and verify that no incomplete circuits are present.
- Step 15** Complete the “NTP-A177 Path Protection Acceptance Test” procedure on page 6-35.

Stop. You have completed this procedure.



Maintain the Node

This chapter provides procedures for maintaining the Cisco ONS 15454.



Note

Except where noted, the procedures and tasks in this chapter apply to both DWDM (Software Release 4.5) and non-DWDM (Software R4.1 and earlier) nodes.

Before You Begin

Before performing any of the following procedures, investigate all alarms and clear any trouble conditions. Refer to the *Cisco ONS 15454 Troubleshooting Guide* as necessary. This section lists the chapter procedures (NTPs). Turn to a procedure to view its tasks (DLPs).

1. NTP-A107 Inspect and Maintain the Air Filter, page 17-2—Complete as needed.
2. NTP-A108 Back Up the Database, page 17-7—Complete as needed.
3. NTP-A109 Restore the Database, page 17-9—Complete as needed.
4. NTP-A163 Restore the Node to Factory Configuration, page 17-11—Complete as needed to clear the database and upload a blank database and the latest software.
5. NTP-A214 Off Load the Security Audit Trail Log, page 17-16—Complete as needed.
6. NTP-A110 Inhibit Card Protection Switching, page 17-17—Complete as needed.
7. NTP-A111 Revert to an Earlier Software Load, page 17-20—Complete as needed
8. NTP-A112 Clean Fiber Connectors, page 17-21—Complete as needed.
9. NTP-A113 Reset the TCC+/TCC2 Card Using CTC, page 17-24—Complete as needed to reset the TCC2 card and switch the node to the redundant TCC2.
10. NTP-A215 View G-Series Ethernet Maintenance Information, page 17-25—Complete as needed.
11. NTP-A239 View E-Series Ethernet Maintenance Information, page 17-25--Complete as needed.
12. NTP-A218 Change the Node Timing Reference, page 17-27—Complete as needed.
13. NTP-A223 View ONS 15454 Timing Report, page 17-28—Complete as needed.

NTP-A107 Inspect and Maintain the Air Filter

Purpose	This procedure explains how to inspect and maintain reusable and disposable fan tray air filters.
Tools/Equipment	Spare air filters
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	None



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Note

Although the filter can work if it is installed with either side facing up, Cisco recommends that you install it with the metal bracing facing up to preserve the surface of the filter.

- Step 1** To maintain the reusable air filter, complete the “DLP-A199 Inspect, Clean, and Replace the Reusable Air Filter” task on page 17-2.
- Step 2** To maintain the disposable air filter, complete the “DLP-A200 Inspect and Replace the Disposable Air Filter” task on page 17-5.

Stop. You have completed this procedure.

DLP-A199 Inspect, Clean, and Replace the Reusable Air Filter

Purpose	This task ensures that the air filter is free from dirt and dust, which allows optimum air flow and prevents dirt and dust from entering the shelf.
Tools/Equipment	Vacuum or detergent and water faucet, spare filter, pinned hex key tool
Prerequisite Procedures	None
Required/As Needed	Inspection required every 30 days. Clean as needed.
Onsite/Remote	Onsite
Security Level	None



Warning


Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.

- Step 1** Verify that you are replacing a reusable air filter. The reusable filter is made of a gray, open-cell, polyurethane foam that is specially coated to provide fire and fungi resistance. NEBS 3E and later versions of the ONS 15454 use a reusable air filter.

- Step 2** If the air filter is installed in the external filter brackets, slide the filter out of the brackets while being careful not to dislodge any dust that may have collected on the filter and proceed to Step 9. Figure 17-1 illustrates a reusable fan-tray air filter in an external filter bracket.
- Step 3** If the filter is installed below the fan tray and not in the external filter brackets, open the front door of the shelf assembly. If the front door is already open, proceed to Step 4.
- a. Open the front door lock.

The ONS 15454 comes with a pinned hex key for locking and unlocking the front door. Turn the key counterclockwise to unlock the door and clockwise to lock it.
 - b. Press the door button to release the latch.
 - c. Swing the door open.
- Step 4** Remove the front door (optional). If you do not want to remove the door or it is already removed, proceed to Step 5:
- a. Detach the ground strap from either the door or the chassis by removing one of the Kepnuts.
 - b. Place the Kepnut back on the stud after the ground strap is removed to avoid misplacement.
 - c. Secure the dangling end of the ground strap to the door or chassis with tape.

Figure 17-1 Reusable Fan-Tray Air Filter in an External Filter Bracket (Front Door Removed)

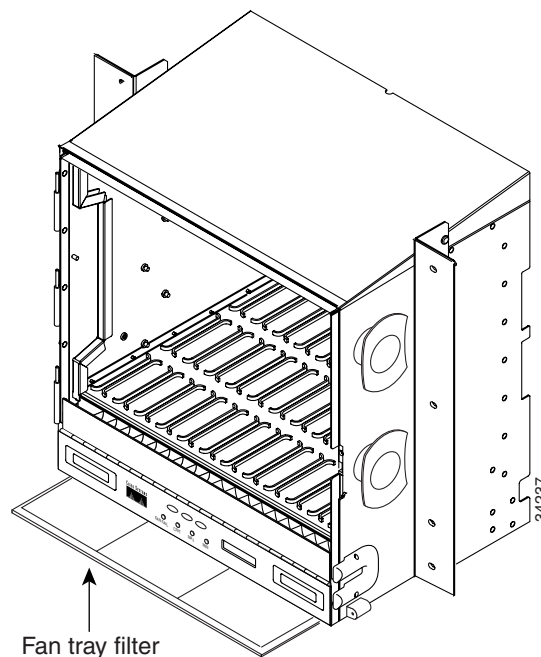

- Step 5** Push the outer side of the handles on the fan-tray assembly to expose the handles.
- Step 6** Pull the handles and slide the fan-tray assembly one inch out of the shelf assembly and wait until the fans stop.
- Step 7** When the fans have stopped, pull the fan-tray assembly completely out of the shelf assembly.
- Step 8** Gently remove the air filter from the shelf assembly. Be careful not to dislodge any dust that may have collected on the filter.
- Step 9** Visually inspect the air filter material for dirt and dust.

- Step 10** If the reusable air filter contains a concentration of dirt and dust, replace the dirty air filter with a clean air filter (spare filters should be kept in stock) and re-insert the fan-tray assembly. Then, vacuum or wash the dirty air filter under a faucet with a light detergent.



Caution Do not leave the fan tray out of the chassis for an extended period of time because excessive heat can damage the ONS 15454 cards.



Note Cleaning should take place outside the operating environment to avoid releasing dirt and dust near the equipment.

- Step 11** If you washed the filter, allow it to completely air dry for at least eight hours.



Warning Do not put a damp filter back in the ONS 15454.

- Step 12** Replace the clean filter:
- a. If the air filter is installed in the external filter brackets, slide the dry air filter all the way to the back of the brackets to complete the procedure.
 - b. If the filter is installed below the fan-tray assembly, remove the fan-tray assembly and slide the dry/clean air filter into the recessed compartment at the bottom of the shelf assembly. Put the front edge of the air filter flush against the front edge of the recessed compartment. Push the fan tray back into the shelf assembly.



Caution If the fan tray does not slide all the way to the back of the shelf assembly, pull the fan tray out and readjust the position of the reusable filter until the fan tray fits correctly.



Note On a powered-up ONS 15454, the fans start immediately after the fan-tray assembly is correctly inserted.

- Step 13** To verify that the tray is plugged into the backplane, ensure that the LCD on the front of the fan-tray assembly is activated and displays node information.
- Step 14** Rotate the retractable handles back into their compartments.
- Step 15** If you replace the door, also reattach the ground strap.
- Step 16** Close and lock the door.
- Step 17** Return to your originating procedure (NTP).

DLP-A200 Inspect and Replace the Disposable Air Filter

Purpose	This task ensures that the air filter is free from dirt and dust, thus allowing optimum air flow and preventing dirt and dust from entering the ONS 15454.
Tools/Equipment	Extra filters, pinned hex key
Prerequisite Procedures	None
Required/As Needed	Inspection required every 30 days. Replace as needed.
Onsite/Remote	Onsite
Security Level	None


Note


The disposable air filter is installed below the fan-tray assembly only, so you must remove the fan-tray assembly to inspect and replace the disposable air filter.

-
- Step 1** Verify that you are replacing a disposable air filter. The disposable filter is made of spun white polyester that is flame retardant. NEBS 3E and earlier versions of the ONS 15454 use a disposable air filter.
- Step 2** Open the front door of the shelf assembly. If the front door is already open, proceed to Step 4.
- Open the front door lock.
The ONS 15454 comes with a pinned hex key for locking and unlocking the front door. Turn the key counterclockwise to unlock the door and clockwise to lock it.
 - Press the door button to release the latch.
 - Swing the door open.
- Step 3** Remove the front door (optional). If the door is already removed or you do not want to remove it, Step 4:
- Detach the ground strap from either the door or the chassis by removing one of the Kepnuts.
 - Place the Kepnut back on the stud after the ground strap is removed to avoid misplacement.
 - Secure the dangling end of the ground strap to the door or chassis with tape.
- Step 4** Push the outer side of the handles on the fan-tray assembly to expose the handles.
- Step 5** Pull the handles and slide the fan-tray assembly one inch out of the shelf assembly and wait until the fans stop.
- Step 6** When the fans have stopped, pull the fan-tray assembly completely out of the shelf assembly (Figure 17-2).


Caution


Do not leave the fan tray out of the chassis for an extended period of time because excessive heat can damage the ONS 15454 cards.

Figure 17-2 Inserting or Removing the Fan-Tray Assembly (Front Door Removed)

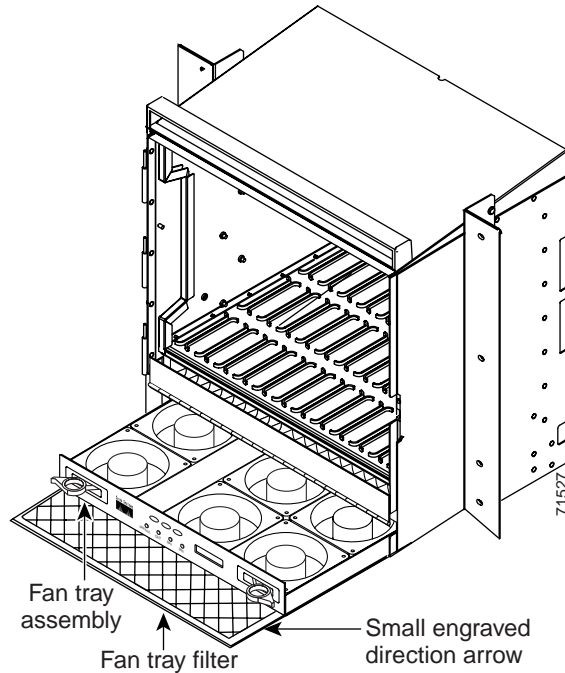

- Step 7** Gently remove the air filter from the shelf assembly (Figure 17-3). Be careful not to dislodge any dust that may have collected on the filter.
- Step 8** Visually inspect the white filter material for dirt and dust.
- Step 9** If the air filter shows a heavy concentration of dirt and dust, replace it with a new filter by sliding the new filter into the bottom of the shelf assembly. Make sure that the front of the filter is flush with the front of the shelf assembly and that the air flow indicators on the filter point upwards.

Figure 17-3 Inserting or Removing a Disposable Fan-Tray Air Filter (Front Door Removed)

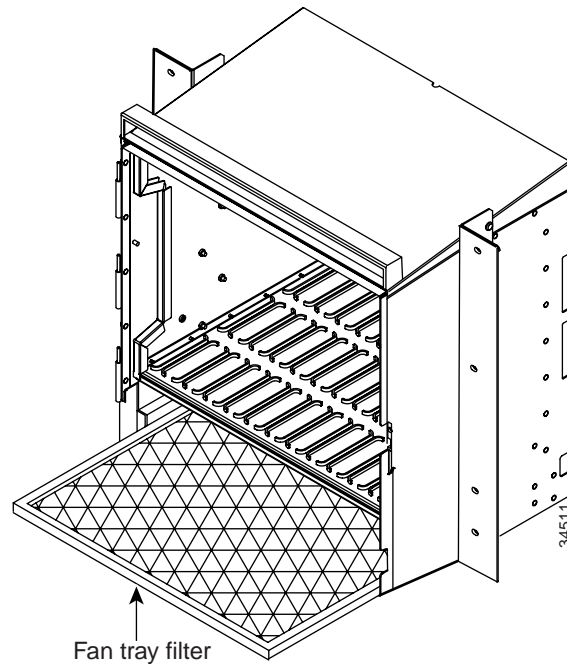

- Step 10** Slide the fan-tray assembly into the shelf assembly until the electrical plug at the rear of the tray plugs into the corresponding receptacle on the backplane.
- Step 11** To verify that the tray is plugged into the backplane, ensure that the LCD on the front of the fan-tray assembly is activated and displays node information.
- Step 12** Rotate the retractable handles back into their compartments.
- Step 13** If you replace the door, also reattach the group strap.
- Step 14** Close and lock the door.
- Step 15** Return to your originating procedure (NTP).

NTP-A108 Back Up the Database

Purpose	This procedure stores a backup version of the TCC+/TCC2 (software) database on the workstation running CTC or on a network server.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	Required. Cisco recommends performing a database backup at approximately weekly intervals and prior to and after configuration changes.
Onsite/Remote	Onsite or remote
Security Level	Superuser

**Note**


You must back up and restore the database for each node on a circuit path in order to maintain a complete circuit.

**Note**

The following parameters are not backed up and restored: node name, IP address, subnet mask and gateway, and IIOIP port. If you change the node name and then restore a backed up database with a different node name, the circuits map to the new node name. Cisco recommends keeping a record of the old and new node names.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node you want to back up. If you are already logged in, continue with Step 2.
- Step 2** Click the **Maintenance > Database** tabs (Figure 17-4).

Figure 17-4 Backing up the TCC2 Database

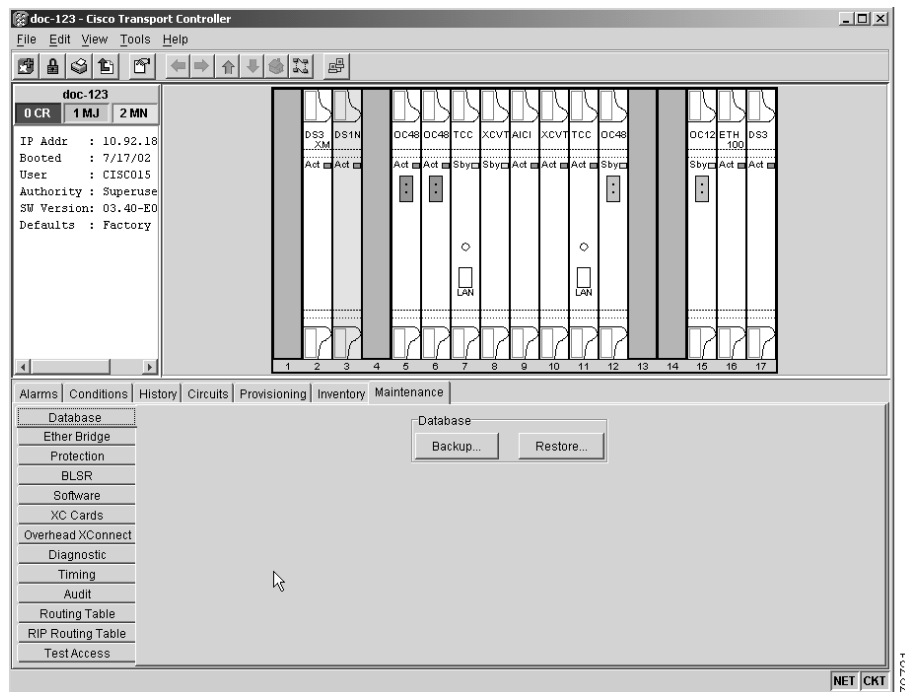

- Step 3** Click **Backup**.
- Step 4** Save the database on the workstation’s hard drive or on network storage. Use an appropriate file name with the .db file extension; for example, database.db.
- Step 5** Click **Save**.
- Step 6** Click **OK** in the confirmation dialog box.
- Stop. You have completed this procedure.**

NTP-A109 Restore the Database

Purpose	This procedure restores the TCC+/TCC2 software database.
Tools/Equipment	None
Prerequisite Procedures	NTP-A108 Back Up the Database, page 17-7
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser



Note

The following parameters are not backed up and restored: node name, IP address, subnet mask and gateway, and IIOP port. If you change the node name and then restore a backed up database with a different node name, the circuits map to the new renamed node. Cisco recommends keeping a record of the old and new node names.



Caution

E1000-2 cards lose traffic for approximately 90 seconds when an ONS 15454 database is restored. Traffic is lost during the period of spanning tree reconvergence. The CARLOSS alarm appears and clears during this period.




Caution

If you are restoring the database on multiple nodes, wait until the TCC2 reboot has completed on each node before proceeding to the next node.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you are restoring the database. If you are already logged in, continue with Step 2.
- Step 2** Ensure that no ring or span (four-fiber only) switch events are present; for example, ring-switch east or west, and span-switch east or west. In network view, click the **Conditions** tab and click **Retrieve Conditions** to view a list of conditions.
- Step 3** If switch events need to be cleared, in node view click the **Maintenance > BLSR** tabs and view the West Switch and East Switch columns.
- If a switch event (not caused by a line failure) is present, choose **CLEAR** from the drop-down menu and click **Apply**.
 - If a switch event caused by the Wait to Restore (WTR) condition is present, choose **LOCKOUT SPAN** from the drop-down menu and click **Apply**. When the LOCKOUT SPAN is applied, choose **CLEAR** from the drop-down menu and click **Apply**.
- Step 4** In node view, click the **Maintenance > Database** tabs (Figure 17-5).

Figure 17-5 Restoring the TCC2 Database

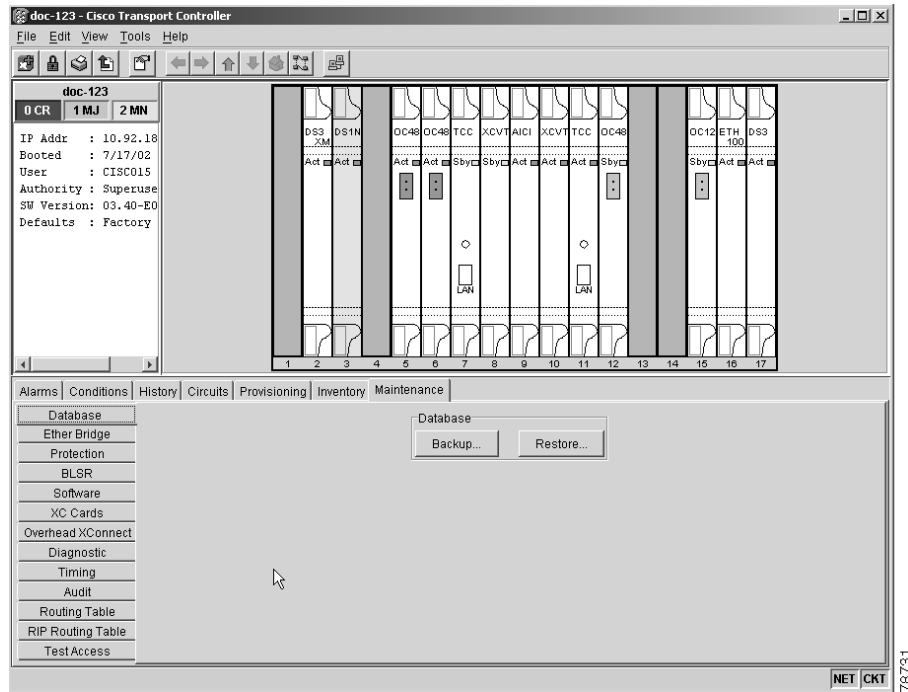

Step 5 Click **Restore**.

Step 6 Locate the database file stored on the workstation hard drive or on network storage.




Note To clear all existing provisioning, locate and upload the database found on the latest ONS 15454 software CD.

Step 7 Click the database file to highlight it.

Step 8 Click **Open**. The DB Restore dialog box appears. Opening a restore file from another node or from an earlier backup may affect traffic on the login node (Figure 17-6).


Figure 17-6 Restoring the Database—Traffic Loss Warning

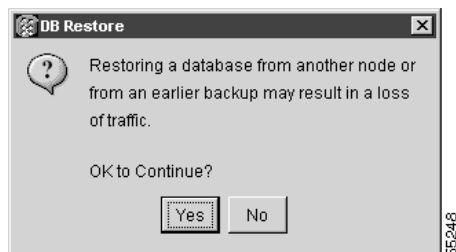

Step 9 Click **Yes**.

The Restore Database dialog box monitors the file transfer (Figure 17-7).

Figure 17-7 Restoring the Database – In-Process Notification

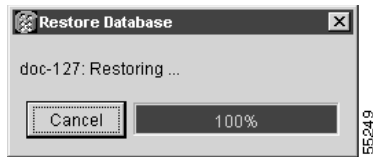

- Step 10** Wait for the file to complete the transfer to the TCC2.
- Step 11** Click **OK** when the “Lost connection to node, changing to Network View” dialog box appears. Wait for the node to reconnect.
- Step 12** If you cleared a switch in Step 3, reapply the switch as needed.
- Stop. You have completed this procedure.**

NTP-A163 Restore the Node to Factory Configuration

Purpose	This procedure clears the TCC2 database and restores customer or factory defaults by uploading the most recent software package and a blank database. This process is performed using the RE-INIT.jar utility, also called the reinitialization (reinit) tool.
Tools/Equipment	Software CD containing Software Release 3.4 or later, the node NE defaults, and the reinitialization tool. JRE 1.03_02 must also be installed on the computer you use to perform this procedure.
Prerequisite Procedures	NTP-A108 Back Up the Database, page 17-7
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Superuser



Caution

Cisco strongly recommends that you keep different node databases in separate folders. This is because the reinit tool chooses the first product-specific software package in the specified directory if you use the Search Path field instead of the Package and Database fields. You may accidentally copy an incorrect database if multiple databases are kept in the specified directory.



Caution

Restoring a node to the factory configuration deletes all cross-connects on the node.



Caution

If you are restoring the database on multiple nodes, wait until the TCC2 cards have rebooted on each node before proceeding to the next node.



Caution

Restoring a node to factory configuration on a Windows or Unix workstation should only be carried out on a standby TCC+/TCC2 card.

**Caution**

Cisco recommends that you take care to save the node database to safe location if you will not be restoring the node using the database provided on the software CD.

**Note**

The following parameters are not backed up and restored when you delete the database and restore the factory settings: node name, IP address, subnet mask and gateway, and IIOP port. If you change the node name and then restore a backed up database with a different node name, the circuits map to the new renamed node. Cisco recommends keeping a record of the old and new node names.

- Step 1** If you need to install or replace one or more TCC+/TCC2 cards, see the “DLP-A36 Install the TCC+/TCC2 Cards” task on page 2-7.
- Step 2** If you are using Microsoft Windows, complete the “DLP-A244 Use the Reinitialization Tool to Clear the Database and Upload Software (Windows)” task on page 17-12.
- Step 3** If you are using UNIX, complete the “DLP-A245 Use the Reinitialization Tool to Clear the Database and Upload Software (UNIX)” task on page 17-14.

Stop. You have completed this procedure.

DLP-A244 Use the Reinitialization Tool to Clear the Database and Upload Software (Windows)

Purpose	This procedure describes how to use the reinitialization tool in Windows. Use this tool to clear the database on the TCC2, upload software, and restore factory or customer defaults.
Tools/Equipment	Software CD containing Software R3.4 or later, the NE defaults, and the reinitialization tool Straight-through (CAT-5) LAN cable JRE 1.03_02 must be installed on your PC
Prerequisite Procedures	NTP-A108 Back Up the Database, page 17-7
Required/As Needed	As needed to clear the existing database from a TCC2 and restore the node default settings.
Onsite/Remote	Onsite
Security Level	Superuser

**Caution**

Restoring a node to the factory configuration deletes all cross-connects on the node.

**Caution**

Restoring a node to factory configuration on a Windows workstation should only be carried out on a standby TCC+/TCC2 card.

**Note**

The TCC2 cards reboot several times during this procedure. Wait until they are completely rebooted before continuing.

- Step 1** Insert the system software CD containing the reinit tool, software, and defaults database into the computer CD-ROM drive. If the CTC Installation Wizard opens, click **Cancel**.
- Step 2** To find the recovery tool file, go to **Start > Run > Browse** and select the CD drive.
- Step 3** On the CD drive, go to the CISCO15454 folder and choose **All Files from the Files of Type** drop-down menu.
- Step 4** Select the RE-INIT.jar file and click **Open** to open the reinit tool (Figure 17-8).

Figure 17-8 Reinitialization Tool in Windows


- Step 5** If the node you are reinitializing is an external network element (ENE) in a proxy server network, enter the IP address of the gateway network element (GNE) in the GNE IP field. If not, leave it blank.
- Step 6** Enter the node name or IP address of the node you are reinitializing in the Node IP field (Figure 17-8).
- Step 7** If the User ID field does not contain your user ID, enter the ID. Enter your password in the Password field.
- Step 8** Verify that the Re-Init Database, Upload Package, and Confirm checkboxes are checked. If one is not checked, check the checkbox.
- Step 9** In the Search Path field, verify that the path to the CISCO15454 folder on the CD drive is listed.

**Caution**

Before you perform the next step, be sure you are uploading the correct database. You cannot reverse the upload process after you click Yes.

- Step 10** Click **Go**. A confirmation dialog box opens (Figure 17-9).

Figure 17-9 Confirming NE Restoration

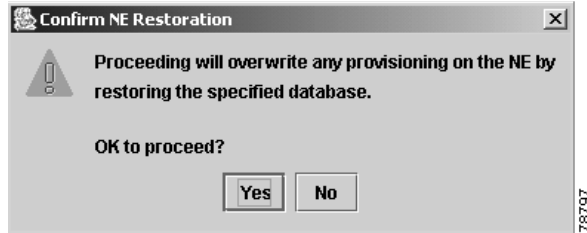

Step 11 Click **Yes**.

Step 12 The status bar at the bottom of the screen displays **Complete** when the node has activated the software and uploaded the database.



Note The **Complete** message only indicates that the TCC2 successfully uploaded the database, not that the database restore was successful. The TCC2 then tries to restore the database after it reboots.

Step 13 If you are logged into CTC, close the browser window and disconnect the straight-through LAN cable from the RJ-45 (LAN) port on the TCC2 card or on the hub or switch to which the ONS 15454 is physically connected. Reconnect your straight-through LAN cable to the LAN port and log back into CTC.

Step 14 Manually set the node name and network configuration to site-specific values. See the “NTP-A25 Set Up Name, Date, Time, and Contact Information” procedure on page 4-6 and “NTP-A169 Set Up CTC Network Access” procedure on page 4-8 for information on setting the node name, IP address, mask and gateway, and IIOP port.

Step 15 Return to your originating procedure (NTP).

DLP-A245 Use the Reinitialization Tool to Clear the Database and Upload Software (UNIX)

Purpose	This procedure describes how to use the reinitialization tool in a UNIX environment. Use this tool to clear the database on the TCC2 card and restore factory or customer defaults.
Tools/Equipment	Software CD containing Software R3.4 or later, the node NE defaults, and the reinitialization tool. JRE 1.03_02 must also be installed on the computer you use to perform this procedure.
Prerequisite Procedures Required/As Needed	NTP-A108 Back Up the Database, page 17-7 As needed to clear the existing database from a TCC2 card and restore the node default settings.
Onsite/Remote	Onsite or remote
Security Level	Superuser

**Caution**

Restoring a node to the factory configuration deletes all cross-connects on the node.

**Caution**

Restoring a node to factory configuration on a Unix workstation should only be carried out on a standby TCC+/TCC2 card.

**Note**

The TCC2 cards reboot several times during this procedure. Wait until they are completely rebooted before continuing.

- Step 1** Insert the system software CD containing the reinit tool, software, and defaults database into the computer CD-ROM drive. If the CTC Installation Wizard opens, click **Cancel**.
- Step 2** To find the recovery tool file, go to the CISCO15454 directory on the CD (usually /cdrom/cdrom0/CISCO15454).
- Step 3** If you are using a file explorer, double-click the **RE-INIT.jar** file to open the reinit tool (Figure 17-10). If you are working with a command line interface, run **java -jar RE-INIT.jar**.

Figure 17-10 The Reinitialization Tool in UNIX

- Step 4** If the node you are reinitializing is an external network element (ENE) in a proxy server network, enter the IP address of the gateway network element (GNE) in the GNE IP field. If not, leave it blank.
- Step 5** Enter the node name or IP address of the node you are reinitializing in the Node IP field (Figure 17-10).
- Step 6** If the User ID field does not contain your user ID, enter the ID. Enter your password in the Password field.
- Step 7** Verify that the Re-Init Database, Upload Package, and Confirm checkboxes are checked. If one is not checked, check the checkbox.
- Step 8** In the Search Path field, verify that the path to the CISCO15454 folder on the CD-ROM drive is listed.

**Caution**

Before you perform the next step, be sure you are uploading the correct database. You cannot reverse the upload process after you click Yes.

- Step 9** Click **Go**. A confirmation dialog box opens (Figure 17-9).
- Step 10** Click **Yes**.
- Step 11** The status bar at the bottom of the screen displays **Complete** when the node has activated the software and uploaded the database.



Note The **Complete** message only indicates that the TCC2 successfully uploaded the database, not that the database restore was successful. The TCC2 then tries to restore the database after it reboots.

- Step 12** If you are logged into CTC, close the browser window and disconnect the straight-through LAN cable from the RJ-45 (LAN) port on the TCC2 card or on the hub or switch where the ONS 15454 is physically connected. Reconnect your straight-through LAN cable to the LAN port and log back into CTC.
- Step 13** Set the node name and network configuration to site-specific values. See the “NTP-A81 Change Node Management Information” procedure on page 12-2 and the “NTP-A201 Change CTC Network Access” procedure on page 12-4 for information on provisioning the node name, IP address, subnet mask and gateway, and IIOP port.
- Step 14** Return to your originating procedure (NTP).
-

NTP-A214 Off Load the Security Audit Trail Log

Purpose	This procedure stores up to 640 audit trail log entries in a local or network drive file to maintain a record of actions performed for the node. If the audit trail log is not off loaded, the oldest entries are overwritten after the log reaches capacity.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to off load the audit trail log. If you are already logged in, continue with Step 2.
- Step 2** In the node view, click the **Maintenance > Audit** tabs.
- Step 3** Click **Retrieve**.
- Step 4** Click **Archive**.
- Step 5** In the Archive Audit Trail dialog, navigate to the directory (local or network) where you want to save the file.
- Step 6** Enter a name in the File Name field.
- You do not have to give the archive file a particular extension. It is readable in any application that supports text files, such as WordPad, Microsoft Word (imported), etc.
- Step 7** Click **Save**.

The 640 entries are saved in this file. The next entries continue with the next number in the sequence, rather than starting over.

Stop. You have completed this procedure.

NTP-A110 Inhibit Card Protection Switching

Purpose	This procedure describes how to apply and remove a lock on or lock out to a traffic card in a linear protection configuration. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A170 Create Protection Groups, page 4-25
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	Superuser

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to apply a lock on or lock out. If you are already logged in, continue with Step 2.
- Step 2** To prevent traffic on a working or protect card from switching to the other card in the pair, complete the “DLP-A201 Apply a Lock On” task on page 17-17.
- Step 3** To prevent traffic from switching to the protect card, complete the “DLP-A202 Apply a Lock Out” task on page 17-18.



Note A combination of Lock On and Lock Out is allowed in 1:1 and 1:N protection; for example, a Lock On on the working card and a Lock Out on the protect card is permissible.

- Step 4** To remove a lock on or lock out and return a protection group to its usual switching method, complete the “DLP-A203 Clear a Lock On or Lock Out” task on page 17-19.



Note A non-alarmed event (INH SW) is raised when a card is placed in a Lock On or Lock Out state.

Stop. You have completed this procedure.

DLP-A201 Apply a Lock On

Purpose	This task prevents traffic from being switched from one card to another.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed

Onsite/Remote	Onsite or remote
Security Level	Maintenance or higher

**Note**

To apply a Lock On to a protect card in a 1:1 or 1:N protection group, the protect card must be active. If the protect card is in standby, the Lock On button is disabled. To make the protect card active, you must switch traffic from the working card to the protect card (Step 4). When the protect card is active, you can apply the Lock On.


-
- Step 1** Use the following rules to determine if you can apply a lock on:
- For a 1:1 electrical protection group, both the working and protect cards can be placed in the Lock On state.
 - For a 1:N electrical protection group, both the working and protect cards can be placed in the Lock On state.
 - For a 1+1 optical protection group, only the working card can be placed in the Lock On state.
- Step 2** In node view, click the **Maintenance > Protection** tabs.
- Step 3** In the Protection Groups list, click the protection group where you want to apply a lock on.
- Step 4** If you determine that the protect card is in standby and you want to apply the lock on to the protect card, make the protect card active:
- a. In the Selected Group area, click the protect card.
 - b. In the Switch Commands, click **Switch**.
- Step 5** In the Selected Group area, click the active card where you want to lock traffic.
- Step 6** From Inhibit Switching, click **Lock On**.
- Step 7** Click **Yes** in the confirmation dialog box.
- The Lock On has been applied and traffic cannot be switched to the working card. To clear the Lock On, see the “DLP-A203 Clear a Lock On or Lock Out” task on page 17-19.
- Step 8** Return to your originating procedure (NTP).
-

DLP-A202 Apply a Lock Out

Purpose	This task switches traffic from one card to another using a lock out, which is a switching mechanism that overrides other external switching commands (Force, Manual, and Exercise).
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Maintenance or higher

**Note**

Multiple Lock Outs in the same protection group are not allowed.

-
- Step 1** Use the following rules to determine if you can put the intended card in a Lock Out state:
- For a 1:1 electrical protection group, you can apply a lock out to the working and protect cards.
 - For a 1:N electrical protection group, you can apply a lock out to the working and protect cards.
 - For a 1+1 optical protection group, you can apply a lock out to the protect card.
- Step 2** In node view, click the **Maintenance > Protection** tabs.
- Step 3** In the Protection Groups area, click the protection group that contains the card you want to lock out.
- Step 4** In the Selected Group area, click the card you want to lock traffic out of.
- Step 5** From Inhibit Switching, click **Lock Out**.
- Step 6** Click **Yes** in the confirmation dialog box.
- The lock out has been applied and traffic is switched to the opposite card. To clear the lock out, see the “DLP-A203 Clear a Lock On or Lock Out” task on page 17-19.
-  **Note** Provisioning a lock out raises a LOCKOUT-REQ or an FE-LOCKOUT condition on CTC. Clearing the lockout switch request clears these conditions.
-
- Step 7** Return to your originating procedure (NTP).
-

DLP-A203 Clear a Lock On or Lock Out

Purpose	This task clears a lock on or lock out.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26 DLP-A201 Apply a Lock On, page 17-17 or DLP-A202 Apply a Lock Out, page 17-18
Required/As Needed	As needed
Onsite/Remote	Both
Security Level	Maintenance or higher

-
- Step 1** In node view, click the **Maintenance > Protection** tabs.
- Step 2** In the Protection Groups area, click the protection group that contains the card you want to clear.
- Step 3** In the Selected Group area, click the card you want to clear.
- Step 4** From Inhibit Switching, click **Unlock**.
- Step 5** Click **Yes** in the confirmation dialog box.
- The Lock On or Lock Out is cleared.
- Step 6** Return to your originating procedure (NTP).
-

NTP-A111 Revert to an Earlier Software Load

Purpose	This procedure reverts the ONS 15454 database to an earlier software load.
Tools/Equipment	None
Prerequisite Procedures	DLP-A36 Install the TCC+/TCC2 Cards, page 2-7
Required/As Needed	As needed
Onsite/Remote	On site or remote
Security Level	Superuser

**Tip**

The revert feature is useful if a maintenance window closes while you are upgrading CTC software. You can revert to the protect software load without losing traffic. When the next maintenance window opens, complete the upgrade and activate the new software load.

**Note**

Reverting to a 2.2.1 or later load switches to the older software load and its database without affecting traffic or DCC connectivity. This feature requires dual TCC+/TCC2 cards and CTC Software R 2.2.1 or later as the protect version.

**Note**

A revert to a maintenance release software load uses the current active database; therefore, no provisioning is lost. All other reverts do restore the database. (A maintenance release has a three-digit release number, e.g. 2.2.2).

**Note**

Circuits created and provisioning performed after a software load is activated (upgraded to a higher software release) does not reinstate with a revert. The database configuration at the time of activation is reinstated after a revert. This note does not apply to maintenance reverts (e.g. 2.2.2 to 2.2.1), because maintenance releases use the same database.

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 to log into the node you want to revert. If you are already logged in, continue with Step 2.

Step 2 Record the IP address of that node; the IP address is displayed on the left side of the node view window.

**Note**

To find the IP address you can also click the Provisioning > Network > General tabs.

Step 3 If you are reverting to a previous software release (not a maintenance release) record any new circuits created since the previous software upgrade because these circuits have to be manually recreated (if needed) once the software reversion has taken place.

Step 4 Click the **Maintenance > Software** tabs.

Step 5 Verify that the protect software is Software R2.2.0 or later. If the protect software is not Software R2.2.0 or later, do not revert.



Note The TCC2 card is compatible with Software R4.0 and higher.

- Step 6** Click **Revert**. The Revert button activates the protect software load.
- Step 7** Click **Yes** on the revert confirmation dialog box. The ONS 15454 reboots and loses the connection to CTC.
- Step 8** Wait until the software upgrade finishes. This may take as long as 30 minutes.
- Step 9** When the software upgrade is finished, click the **Delete CTC Cache** button in the browser window.
- Step 10** Completely close the browser.
- Step 11** Restart the browser and log back into the node using the IP address recorded in Step 2.
The browser downloads the CTC applet for the protect software load.
- Step 12** If needed, recreate the circuits recorded in Step 3. See Chapter 8, “Create Circuits and VT Tunnels” for specific circuit creation procedures.
- Stop. You have completed this procedure.**
-

NTP-A112 Clean Fiber Connectors

Purpose	This procedure cleans the fiber connectors.
Tools/Equipment	<ul style="list-style-type: none"> Inspection microscope Compressed air/duster “Type A” Fiber Optic Connector Cleaner (Cletop reel) Isopropyl alcohol 70% or higher Optical swab Optical receiver cleaning stick
Prerequisite Procedures	None
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None



Warning

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam or view directly with optical instruments.

- Step 1** Using an inspection microscope, inspect each fiber connector for dirt, cracks, or scratches.
- Step 2** Replace any damaged fiber connectors.



Note Replace all dust caps whenever the equipment is unused for 30 minutes or more.

- Step 3** Complete the “DLP-A204 Scope and Clean Fiber Connectors and Adapters with Alcohol and Dry Wipes” task on page 17-22 as necessary.

- Step 4** Complete the “DLP-A205 Clean Fiber Connectors with Cletop” task on page 17-23 as necessary.
- Step 5** Complete the “DLP-A206 Clean the Fiber Adapters” task on page 17-23 as necessary.



Caution Do not reuse optical swabs. Keep unused swabs off of work surfaces.

Stop. You have completed this procedure.

DLP-A204 Scope and Clean Fiber Connectors and Adapters with Alcohol and Dry Wipes

Purpose	This task cleans the fiber connectors and adapters with alcohol and dry wipes.
Tools/Equipment	Compressed air/duster Isopropyl alcohol 70% or higher Optical swab Optical receiver cleaning stick
Prerequisite Procedures	None
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None



Warning

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam or view directly with optical instruments.

- Step 1** Remove the dust cap from the fiber connector.
- Step 2** Wipe the connector tip with the pre-moistened alcohol wipe.
- Step 3** Blow dry using filtered air.
- Step 4** Use an inspection microscope to inspect each fiber connector for dirt, cracks, or scratches. If the connector is not clean, repeat Steps 1 to 3.
- Step 5** Insert the fiber connector into the applicable adapter or attach a dust cap to the fiber connector.



Note If you must replace a dust cap on a connector, first verify that the dust cap is clean. To clean the dust cap, wipe the outside of the cap using a dry lint free wipe and the inside of the dust cap using a Cletop stick swab (14100400).

- Step 6** Return to your originating procedure (NTP).

DLP-A205 Clean Fiber Connectors with Cletop

Purpose	This task cleans the fiber connectors with Cletop.
Tools/Equipment	“Type A” Fiber Optic Connector Cleaner (Cletop reel) Optical receiver cleaning stick
Prerequisite Procedures	None
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Remove the dust cap from the fiber connector.
- Step 2** Press the lever down to open the shutter door. Each time you press the lever, you expose a clean wiping surface.
- Step 3** Insert the connector into the Cletop cleaning cassette slot, rotate one quarter turn, and gently swipe downwards.
- Step 4** Use an inspection microscope to inspect each fiber connector for dirt, cracks, or scratches. If the connector is not clean, repeat Steps 1 to 3.
- Step 5** Insert the fiber connector into the applicable adapter or attach a dust cap to the fiber connector.



Note If you must replace a dust cap on a connector, first verify that the dust cap is clean. To clean the dust cap, wipe the outside of the cap using a dry lint free wipe and the inside of the dust cap using a Cletop stick swab (14100400).

-
- Step 6** Return to your originating procedure (NTP).
-

DLP-A206 Clean the Fiber Adapters

Purpose	This task cleans the fiber adapters.
Tools/Equipment	Cletop stick swab
Prerequisite Procedures	None
Required/As Needed	Required
Onsite/Remote	Onsite
Security Level	None

-
- Step 1** Remove the dust plug from the fiber adapter.
- Step 2** Insert a Cletop stick swab (14100400) into the adapter opening and rotate the swab.
- Step 3** Place dust plugs on the fiber adapters when not in use.
- Step 4** Return to your originating procedure (NTP).
-

NTP-A113 Reset the TCC+/TCC2 Card Using CTC

Purpose	This procedure resets the TCC+ or TCC2 card and switches the node to the redundant card.
Tools/Equipment	None
Prerequisite Procedures	DLP-A36 Install the TCC+/TCC2 Cards, page 2-7
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Note

Before you reset the TCC2, you should wait at least 60 seconds after the last provisioning change you made to avoid losing any changes to the database.



Note

When a software reset is performed on an active TCC2, the AIC card goes through an initialization process and also resets. The AIC card reset is normal and happens each time an active TCC2 card goes through a software-initiated reset.

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to reset the TCC+/TCC2 card. If you are already logged in, continue with Step 2.
- Step 2** In node view, right-click the TCC+/TCC2 card to reveal a drop-down menu.
- Step 3** Click **Reset Card**.
- Step 4** Click **Yes** when the “Are You Sure?” dialog box appears.
- Step 5** Click **OK** when the “Lost connection to node, changing to Network View” dialog box appears.



Note For LED behavior during a TCC2 reboot, see Table 4-1 on page 4-11.

- Step 6** Confirm that the TCC+/TCC2 card LED is amber (standby).
- Stop. You have completed this procedure.**

NTP-A215 View G-Series Ethernet Maintenance Information

Purpose	This procedure enables you to view loopback, bandwidth, and J1 path trace information for G-Series Ethernet cards. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A246 Install Ethernet Cards and Connectors, page 2-18
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** In node view, double-click a G-Series Ethernet card. The card view displays.
- Step 3** To view loopback status, click the **Maintenance > Loopback** tabs.
The # and State columns identify the port number and current circuit state (IS, OOS, OOS_MT) of each port on the card. The Loopback Type column identifies the type of loopback (None or Terminal) applied to each port on the card.
- Step 4** To view Ethernet bandwidth utilization, click the **Maintenance > Bandwidth** tabs.
The current STS bandwidth usage information appears.
- Step 5** To view J1 path trace information, click the **Maintenance > J1 Path Trace** tabs and then click the **Retrieve** button.
- Stop. You have completed this procedure.**
-

NTP-A239 View E-Series Ethernet Maintenance Information

Purpose	This procedure enables you to view maintenance information for E-Series Ethernet cards. This procedure does not apply to DWDM (Software R4.5) nodes.
Tools/Equipment	None
Prerequisite Procedures	NTP-A246 Install Ethernet Cards and Connectors, page 2-18
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Retrieve or higher

-
- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26. If you are already logged in, continue with Step 2.
- Step 2** To view spanning tree information, click the **Maintenance > Ether Bridge > Spanning Trees** tabs.

- Step 3** As needed, complete the following tasks:
- DLP-A309 View the Ethernet MAC Address Table, page 17-26
 - DLP-A310 View Ethernet Trunk Utilization, page 17-26

Stop. You have completed this procedure.

DLP-A309 View the Ethernet MAC Address Table

Purpose	This task displays the Ethernet MAC address table for any node with one or more E-Series Ethernet cards installed.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or Remote
Security Level	Retrieve or higher

- Step 1** In node view, click the **Maintenance > Ether Bridge > MAC Table** tabs.
- Step 2** Select the appropriate E-Series Ethernet card in the Layer 2 Domain field.
- Step 3** Click **Retrieve**.
- The MAC address table information is displayed.
- Step 4** Return to your originating procedure (NTP).
-

DLP-A310 View Ethernet Trunk Utilization

Purpose	This task displays the Ethernet Trunk bandwidth usage on any node with one or more E-Series Ethernet cards installed.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or Remote
Security Level	Retrieve or higher

- Step 1** In node view, click the **Maintenance > Ether Bridge > Trunk Utilization** tabs.
- Step 2** Select the desired time interval in the Interval field.
- Step 3** Click the **Refresh** button.
- The trunk utilization information for the current and previous time intervals is displayed.

Step 4 Return to your originating procedure (NTP).

NTP-A218 Change the Node Timing Reference

Purpose	This procedure enables automatic timing reference switching or returns the node timing to normal operation.
Tools/Equipment	None
Prerequisite Procedures	NTP-A28 Set Up Timing, page 4-21
Required/As Needed	As needed
Onsite/Remote	Onsite or Remote
Security Level	Maintenance or higher

Step 1 Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to enable timing switching. If you are already logged in, continue with Step 2.

Step 2 Complete the “DLP-A322 Manual or Force Switch the Node Timing Reference” task on page 17-27 as needed.

Step 3 Complete the “DLP-A323 Clear a Manual or Force Switch on a Node Timing Reference” task on page 17-28 as needed.

Stop. You have completed this procedure.

DLP-A322 Manual or Force Switch the Node Timing Reference

Purpose	This task commands the node to switch to the timing reference you have selected if the SSM quality of the requested reference is not less than the current reference.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Maintenance or higher

Step 1 In node view, click the **Maintenance > Timing** tabs. The Timing source window appears.

Step 2 From the Reference drop-down menu for the desired Clock choose the desired reference.

Step 3 From the Operation drop-down menu for the desired Clock choose one of the following options:

- **Manual**—This operation commands the node to switch to the reference you have selected if the SSM quality of the reference is not lower than the current timing reference.
- **Force**—This operation commands the node to switch to the reference you have selected, regardless of the SSM quality (if the reference is valid).

- Step 4** Click **Apply**.
- Step 5** Click **Yes** in the confirmation dialog box. If the selected timing reference is an acceptable valid reference, the node switches to the selected timing reference.
- Step 6** If the selected timing reference is invalid, a warning dialog appears. Click **OK**; the node does not revert to the normal timing reference.
- Step 7** Return to your originating procedure (NTP).
-

DLP-A323 Clear a Manual or Force Switch on a Node Timing Reference

Purpose	This task clears a Manual or Force switch on a node timing reference and reverts the timing reference to its provisioned reference.
Tools/Equipment	None
Prerequisite Procedures	DLP-A60 Log into CTC, page 3-26
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Maintenance or higher

- Step 1** In node view, click the **Maintenance > Timing** tabs. The Timing source window appears.
- Step 2** Find the Clock reference that is currently set to Manual or Force in the Operation menu.
- Step 3** From the Operation drop-down menu choose the Clock and choose **Clear**.
- Step 4** Click the **Apply** button.
- Step 5** Click **Yes** in the confirmation dialog box. If the normal timing reference is an acceptable valid reference, the node switches back to the normal timing reference as defined by the system configuration.
- Step 6** If the normal timing reference is invalid or has failed, a warning dialog appears. Click **OK**; the timing reference does not revert.
- Step 7** Return to your originating procedure (NTP).
-

NTP-A223 View ONS 15454 Timing Report

Purpose	This procedure displays the current status of the ONS 15454 timing references.
Tools/Equipment	None
Prerequisite Procedures	NTP-A28 Set Up Timing, page 4-21
Required/As Needed	As needed
Onsite/Remote	Onsite or Remote
Security Level	Maintenance or higher

- Step 1** Complete the “DLP-A60 Log into CTC” task on page 3-26 at the node where you want to view the node timing status. If you are already logged in, continue with Step 2.
- Step 2** Click the **Maintenance > Timing** tabs.
- Step 3** In the Timing Report area you can view node timing information. The date and time of the report appear at the top of the report. The time stamp is the same as the alarms time stamp and can be configured using the “DLP-A112 Display Alarms and Conditions Using Time Zone” task on page 9-10. Table 17-1 describes the report fields and entries.
- Step 4** To update the report, click **Reset**.

Table 17-1 ONS 15454 Timing Report

Item	Description	Options	Option Descriptions
Clock	Indicates the timing clock. The report section that follows applies to the timing clock indicated	NE	The node timing clock
		BITS-1 Out	The BITS-1Out timing clock
		BITS-2 Out	The BITS-2Out timing clock

Table 17-1 ONS 15454 Timing Report (continued)

Item	Description	Options	Option Descriptions
Status	Indicates the status of the timing clock	INIT_STATE	The timing reference has not been provisioned. For an NE reference, this status appears just before the first provisioning messages when the TCC is booting. Timing is provisioned to the internal clock of the node.
		HOLDOVER_STATE	The clock was locked onto a valid timing reference for more than 140 seconds when a failure occurred. Holdover state timing is a computation based on timing during Normal State combined with the node's internal clock. The node will hold onto this frequency until the valid reference is restored. This status appears for NE references only.
		FREERUN_STATE	The node is running off its internal clock without any modification except the calibrated value to bring timing to 0 PPM. Freerun state can occur when 1) a Force switch to the Internal clock is initiated; 2) all references fail without the 140 seconds of holdover data; or 3) only Internal timing references are defined. This status appears for NE references only.
		NO_SYNC_STATE	A synchronization timing reference is not defined. BITS-1 Out or BITS-2 Out default to this status until an OC-N card is defined as its reference on the Provisioning > Timing tab. This status appears for external references only.
		NE_SYNC_STATE	BITS-1Out and/or BITS-2 Out use the same timing source as the NE. This is displayed when NE Reference is selected for BITS-1 Out and/or BITS-2 Out Reference List on the Provisioning > Timing tab.
		NORMAL_STATE	The timing reference is locked onto one of its provisioned references. The reference cannot be Internal or No Sync State.
		FAST_START_STATE	The node has switched references, but the reference is too far away to reach Normal State within an acceptable amount of time. Fast Start is a fast acquisition mode to allow the node to quickly acquire the reference. After it achieves this goal, the node will progress to the Normal State.
		FAST_START_FAILED_STATE	A timing reference is too far away to reach in Normal State, the Fast Start State could not acquire sufficient timing information within the allowable amount of time.
Status Changed At	Date and time of the last status change	—	—
Switch Type	Type of switch	AUTOMATIC	The timing switch was system-generated.
		MANUAL	The timing switch was a user-initiated MANUAL switch.
		FORCE	The timing switch was user-initiated FORCE switch.

Table 17-1 ONS 15454 Timing Report (continued)

Item	Description	Options	Option Descriptions
Reference	Indicates the timing reference.	Three timing references are available on the Provisioning > Timing tab.	—
Selected	Indicates whether the reference is selected	Selected references are indicated with an X.	—
Facility	Indicates the timing facility provisioned for the reference on the Provisioning > Timing tab.	BITS-1	The timing facility is a BITS clock attached to the node's BITS-1 pins
		BITS-2	The timing facility is a BITS clock attached to the node's BITS-2 pins
		OC-N card with port #	If the node is set to line timing, the OC-N card and port provisioned as the timing reference
		Internal clock	The node is using its internal clock,
State	Indicates the timing reference state	IS	The timing reference is in service.
		OOS	The timing reference is out of service
Condition	Indicates the timing reference state	OKAY	The reference is valid to use as a timing reference.
		OOB	Out of bounds; the reference is not valid and cannot be used as a timing reference, for example, a BITS clock is disconnected.
Condition changed	Date and time of the last status change	—	—
SSM	Indicates whether Synchronization Status Messaging is enabled for the timing reference	Enabled	SSM is enabled
		Disabled	SSM is not enabled
SSM Quality	Indicates the SSM timing quality	8-10 SSM quality messages may be displayed.	For a list of SSM message sets, see the Security and Timing chapter in the Cisco ONS 15454 Reference Manual.

Stop. You have completed this procedure.



Power Down the Node

This chapter explains how to power down a node and stop all node activity on the Cisco ONS 15454.



Note

Except where noted, this procedure applies to both DWDM (Software Release 4.5) and non-DWDM (Software R4.1 and earlier) nodes.

NTP-A114 Power Down the Node

Purpose	This procedure stops all node activity.
Tools/Equipment	None
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite
Security Level	For software steps the provisioning level or higher is required. For hardware steps any level is allowed.



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Caution

The following procedure is designed to minimize traffic outages when powering down nodes, but traffic will be lost if you delete and recreate circuits that passed through a working node.



Note

Always use the supplied ESD wristband when working with the Cisco ONS 15454. Plug the wristband into the ESD jack located on the fan-tray assembly or on the lower right outside edge of the shelf on the NEBS 3 shelf assembly. To access the ESD plug on the NEBS 3 shelf assembly, open the front door of the Cisco ONS 15454. The front door is grounded to prevent electrical shock.

- Step 1** Identify the node that you want to power down. If no cards are installed, go to Step 13. If cards are installed, log into the node. See the “DLP-A60 Log into CTC” task on page 3-26 for instructions.
- Step 2** In node view, choose **Go to Network View** from the View menu.

- Step 3** Verify that the node is not connected to a network.
- If the node is part of a working network, log out of the node and complete the “NTP-A213 Remove a BLSR Node” procedure on page 16-10, the “NTP-A106 Remove a Path Protection Node” procedure on page 16-19, or, if the node is part of a Software R4.5 DWDM configuration, consult your network administrator. Continue with Step 4.
 - If the node is not connected to a working network and the current configurations are no longer required, proceed to Step 4.



Note Current configurations will be saved if Steps 4–13 are skipped.

- Step 4** In node view, click the **Circuits** tab and verify that no circuits are displayed, then proceed to Step 5. If circuits are displayed, delete all the circuits that originate or terminate in the node, as follows:
- Click the circuits that need to be deleted and click **Delete**.
 - Click **Yes**.

Repeat until no circuits are displayed.

- Step 5** In node view, click the **Provisioning > Protection** tabs and delete all protection groups:
- Click the protection group that needs to be deleted and click **Delete**.
 - Click **Yes**.

Repeat until no protection groups are displayed.

- Step 6** In node view, click the **Provisioning > SONET DCC/GCC/OSC** tabs and delete all SDCC or OSC terminations:
- Click the SDCC or OSC termination that needs to be deleted and click **Delete**.
 - Click **Yes**.

Repeat until no SDCC or OSC terminations are present.



Note In Software R4.1, the tab is labeled SONET DCC/GCC. In Software R4.5, the tab is labeled SONET DCC/GCC/OSC.

- Step 7** For each installed card, put all ports in Out of Service status:
- In card view, click the **Provisioning > Line** tabs.
 - Click under the Status column for each port and choose **Out of Service**.

- Step 8** Remove all fiber connections to the cards.

- Step 9** In node view, right-click an installed card and click **Delete**.

- Step 10** Click **Yes**.

- Step 11** After you have deleted the card, open the card ejectors and remove it from the node.

- Step 12** Repeat Step 7 through 11 for each installed card.



Note You cannot delete a TCC+ or TCC2 card in CTC. Physically remove it after all the other cards have been deleted and removed.

- Step 13** Shut off the power from the power supply that feeds the node.

Step 14 Disconnect the node from its external fuse source.

Step 15 Store all the cards you removed and update inventory records according to local site practice.

Stop. You have completed this procedure.



CTC Information and Shortcuts



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This appendix describes how to navigate in the Cisco Transport Controller (CTC), change CTC table data displays, and lists menu and tool options for the Cisco ONS 15454. This appendix also describes the shelf inventory data presented in CTC. For information about CTC, refer to the Cisco Transport Controller Operation chapter in the *Cisco ONS 15454 Reference Manual*.



Note

Except where noted, the reference material in this chapter applies to both DWDM (Software Release 4.5) and non-DWDM (Software R4.1 and earlier) nodes.

Displaying Node, Card, and Network Views

The Cisco Transport Controller provides three views of the ONS 15454 and ONS network:

- Node view appears when you first log into an ONS 15454. This view shows a graphic of the ONS 15454 shelf and provides access to tabs and subtabs that you use to manage the node.
- Card view provides access to individual ONS 15454 cards. This view provides a graphic of the card and provides access to tabs and subtabs that you use to manage the card.
- Network view shows all the nodes in a ring. A Superuser can set up this feature so each user will see the same network view, or the user can create a custom view with maps. This view provides access to tabs and subtabs that you use to manage the network.

Table A-1 lists different actions for changing CTC views.

Table A-1 Change CTC Views

To display:	Perform one of the following:
Node view	<ul style="list-style-type: none"> Log into a node; node view is the default view. In network view, double-click a node icon, or right-click the node and select Open Node from the shortcut menu. In network view, single-click a node icon, then select Go to Selected Object from the View menu. From the CTC View menu, select Go to Other Node, then select the node you want from the shortcut menu. Use the arrows on the CTC toolbar to navigate up or down views. For example, in network view, click a node, then click the down arrow.
Network view	<ul style="list-style-type: none"> In node view, click the up arrow or the Network View tool on the CTC toolbar. From the View menu, select Go To Network View.
Card view	<ul style="list-style-type: none"> In node view, double-click a card or right-click the card and select Open Card. In node view, single-click a card icon, then select Go to Selected Object from the View menu. Use the arrows on the CTC toolbar to navigate up or down views. For example, in node view, click a card, then click the down arrow.

Node Icons on the Network View Map

Table A-2 Description of Node Icons on Network View Map








Node Name	Icon	Description
SONET Node		A SONET node icon (in Software R4.1 and earlier) is represented as a cylinder with crossed arrows. SONET nodes can include OC-N cards, electrical cards, cross-connects, and more. DWDM cards do not inter operate with SONET cards in Software Release 4.5 or earlier.
Hube Node		A DWDM hub node icon (only in Software Release 4.5) is represented as a three dimensional cylinder with amplifiers. A hub node contains at least two 32 channel demultiplexor, two 32 channel multiplexor and no OADM cards are provisioned.
OADM Node		A DWDM OADM node icon (only in Software Release 4.5) is represented as a three dimensional cylinder with arrows. An OADM node contains at least one AD-xC or AD-xB and no 32 channel multiplexor and 32channel demultiplexor cards are provisioned.

Table A-2 Description of Node Icons on Network View Map (continued)

Node Name	Icon	Description
Terminal Nodes (West)		A DWDM west terminal node icon (only in Software Release 4.5) is represented as a three dimensional cylinder with one amplifier on the west-side of the icon. A terminal node contains one 32 channel demultiplexor and one 32 channel multiplexor. No OADM cards are provisioned.
Terminal Nodes (East)		A DWDM east terminal node icon (only in Software Release 4.5) is represented as a three dimensional square with one amplifier on the east-side of the icon. A terminal node contains one 32 channel demultiplexor and one 32 channel multiplexor. No OADM cards are provisioned.
Line		A DWDM line node icon (only in Software Release 4.5) is represented as a three dimensional cylinder with one arrow pointing west and another arrow pointing east. A line node only has OPT-PRE or OPT-BST amplifiers provisioned.
Unknown		An unknown DWDM node icon (only in Software Release 4.5) is represented as a three dimensional cylinder with one arrow pointing north. An unknown node means that the provisioned cards do not allow the node to fit in with any of the defined DWDM node categories.

Manage the CTC Window

Different navigational methods are available within the CTC window to access views and perform management actions. You can double-click and right-click objects in the graphic area and move the mouse over nodes, cards, and ports to view popup status information.

CTC Menu and Toolbar Options

The CTC window menu bar and toolbar provide primary CTC functions. Table A-3 shows the actions that are available from the CTC menu and toolbar.

Table A-3 CTC Menu and Toolbar Options








Menu	Menu Option	Toolbar	Description
File	Add Node		Adds a node to the current session. See the “DLP-A62 Add a Node to the Current Session or Login Group” task on page 3-31.
	Delete Selected Node		Deletes a node from the current session.
	Lock CTC		Locks CTC without closing the CTC session. A user name and password are required to open CTC.
	Print		Prints CTC data. See the “DLP-A138 Print CTC Data” task on page 9-2.
	Export		Exports CTC data. See the “DLP-A139 Export CTC Data” task on page 9-4.
	Exit		Closes the CTC session. The exit icon only appears in the File menu.
Edit	Preferences		Displays the Preferences dialog box: General tab—Allows you to change event defaults and manage preferences. Login Node Groups tab—Allows you to create login node groups. See the “DLP-A61 Create Login Node Groups” task on page 3-30. Map—Allows you to customize the network view. See the “DLP-A145 Change the Network View Background Color” task on page 12-11 and the “DLP-A268 Apply a Custom Network View Background Map” task on page 12-13. Circuit—Allows you to change the color of circuit spans. See the “DLP-A232 Change Active and Standby Span Color” task on page 11-15. Firewall—Sets the IIOP listener ports for access to the ONS 15454 through a firewall. See the “NTP-A27 Set Up the ONS 15454 for Firewall Access” procedure on page 4-18.

Table A-3 CTC Menu and Toolbar Options (continued)













Menu	Menu Option	Toolbar	Description
View	Go to Previous View		Displays the previous CTC view.
	Go to Next View		Displays the next CTC view. Available only after you navigate to a previous view. Go to Previous and Go to Next are similar to forward and backward navigation in a web browser.
	Go to Parent View		References the CTC view hierarchy: network view, node view, and card view. In card view, this command displays the node view; in node view, the command displays network view. Not available in network view.
	Go to Selected Object View		Displays the object selected in the CTC window.
	Go to Home View		Displays the login node in node view.
	Go to Network View		Displays the network view.
	Go to Other Node		Displays a dialog box allowing you to type in the node name or IP address of a network node that you want to view.
	Show Status Bar	—	Click this item to display or hide the status bar at the bottom of the CTC window.
	Show Tool Bar	—	Click this item to display or hide the CTC toolbar.
—	Network View	—	In Software Release 4.5, the network view drop-down menu has three options: DWDM, TDM, or All. If you select DWDM, only DWDM nodes are displayed on the network view map. If you select TDM, only TDM nodes are displayed on the network view map. If you select All, every node on the network is displayed on the network view map.
—	—		Decreases the size of the map area in network view (toolbar only).
—	—		Increases the size of the map area in network view (toolbar only).
—	—		Increases the size of a selected area of the map in network view (toolbar only).

Table A-3 CTC Menu and Toolbar Options (continued)

Menu	Menu Option	Toolbar	Description
Tools	Circuits	—	<p>Displays the following options:</p> <ul style="list-style-type: none"> • Repair Circuits—Repairs incomplete circuits following replacement of the ONS 15454 AIP board. Refer to the <i>Cisco ONS 15454 Troubleshooting Guide</i> for more information. • Set Path Selector Attributes—Allows you to edit path protection circuit path selector attributes. See the “DLP-A233 Edit Path Protection Circuit Path Selectors” task on page 11-16. • Set Circuit State—Allows you to change a circuit state. See the “DLP-A230 Change a Circuit State” task on page 11-13. • Convert CTC Circuits to TL1 Cross Connects—If a cross-connect in a circuit gets deleted, this menu option allows a user to repair a circuit by separating an incomplete CTC circuit into TL1 cross-connects. Then, the user can replace the missing cross-connect. See the “NTP-A417 Upgrade TL1 Cross-Connects to CTC Circuits” procedure on page 11-19. • Upgrade TL1 Cross Connects to CTC Circuits—Allows you to convert TL1 cross-connects to CTC circuits. See the “NTP-A416 Convert a CTC Circuit to TL1 Cross-Connects” procedure on page 11-18. • Roll Circuit—Allows you to reroute live traffic without interrupting service. This feature requires an ONS 15600 on your network. Refer to the <i>Cisco ONS 15600 Procedure Guide</i>. • Delete Rolls —This feature requires an ONS 15600 on your network. Refer to the <i>Cisco ONS 15600 Procedure Guide</i>.
	Manage VLANs	—	Displays a list of VLANs that have been created and allows you to delete or create new VLANs. See Chapter 8, “Create Circuits and VT Tunnels.”
	Open TL1 Connection		Displays the TL1 session dialog box so you can create a TL1 session to a specific node. Refer to the <i>Cisco ONS 15454 and Cisco ONS 15327 TL1 Command Guide</i> .
	Open IOS Connection		Displays the IOS command line interface dialog box if an IOS capable card (ML1000-2 or ML100T-12) is installed in the node. Refer to the <i>Cisco ONS 15454 SONET/SDH ML-Series Multilayer Ethernet Card Software Feature and Configuration Guide</i> .
Help	Contents and Index	—	Displays the online help window.
	Manage Help	—	Displays the versions of online help loaded on your computer.
	About CTC	—	Displays the software version and the nodes in the CTC session.

CTC Mouse Options

In addition to the CTC menu bar and toolbar, you can invoke actions by double-clicking CTC window items with your mouse, or by right-clicking an item and selecting actions from shortcut menus. Table A-4 lists the CTC window mouse shortcuts.

Table A-4 CTC Window Mouse Shortcuts

Technique	Description
Double-click	<ul style="list-style-type: none"> • Node in network view—Displays the node view. • Card in node view—Displays the card view. • Alarm/Event—Displays the object that raised the alarm or event. • Circuits—Displays the Edit Circuit window.
Right-click	<ul style="list-style-type: none"> • Network view graphic area—Displays a menu that you can use to create a new domain, change the position and zoom level of the graphic image, save the map layout (if you have a Superuser security level), reset the default layout of the network view, and set, change, or remove the background image and color. • Node in network view—Displays a menu that you can use to open the node, reset the node icon position to the longitude and latitude set on the Provisioning > General tab, delete the node, fix the node position for auto layout, provision circuits, provision channels, and update circuits or channels with a new node. • Span in network view—Displays a menu that you can use to view information about the span's source and destination ports, the protection scheme, and the optical or electrical level. You can display the Circuits on Spans dialog box, which displays additional span information and allows you to perform path protection protection switching. You can also perform span upgrades from this menu. • Card in node view—Displays a menu that you can use to open, delete, reset, and change cards. The card that is selected determines the commands that are displayed. • Card in card view—Displays a menu that you can use to reset the card, or go to the parent view (node view). • Empty slot in node view—Displays a menu with cards that you can select to preprovision the slot.

Table A-4 CTC Window Mouse Shortcuts (continued)

Technique	Description
Move mouse cursor	<ul style="list-style-type: none"> Over node in network view—Displays a summary of node alarms and provides a warning if the node icon has been moved out of the map range. Over span in network view—Displays circuit (node, slot, port) bandwidth and protection information. In Software R4.5, on DWDM spans the optical direction and optical ring ID are displayed. If the span terminates on the trunk port of a transponder card (TXP/MXP), the associated DWDM wavelength is also displayed. Over card in node view—Displays card type and card status. In Software R4.5, on DWDM cards the number of bands or channels are displayed depending on the card type. The card type and card status are also displayed. Over card port in node view—Displays card name, port state, and alarm profile status. Over card port in card view—Displays port state, protection status (if applicable), and alarm profile status. In Software R4.5, on DWDM cards the port number is labeled as channel, band, or line depending on the card type along with the port state and alarm profile status display.

Node View Shortcuts

Table A-5 shows actions on ONS 15454 cards that you can perform by moving your mouse over the CTC window.

Table A-5 Node View Card-Related Shortcuts

Action	Shortcut
Display card information	In node view, move your mouse over cards in the graphic to display tooltips with the card type, card present or card provisioned but not present, the highest level of alarm (if any), and the alarm profile used by the card.
Open, reset, or delete a card	In node view, right-click a card. Select Open to display the card in card view, Delete to delete it, or Reset to reset the card.
Preprovision a slot	In node view, right-click an empty slot. Select the card type that you want to provision the slot from the shortcut menu.
Change a card	In node view, right-click an OC-N card or a DS3 card, and select Change Card. In the Change Card dialog box, select the card type. Change card retains all card provisioning, including DCC terminations, protection, circuits, and ring.

Network View Tasks

Right-click the network view graphic area or a node, span, or domain to display shortcut menus. Table A-6 lists the actions that are available from the network view.

Table A-6 Network Management Tasks in Network View

Action	Task
Open a node	Any of the following: <ul style="list-style-type: none"> • Double-click a node icon. • Right-click a node icon and choose Open Node from the shortcut menu. • Click a node and choose Go to Selected Object View from the CTC View menu. • From the View menu, choose Go To Other Node. Select a node from the Select Node dialog box. • Double-click a node alarm or event in the Alarms or History tab.
Move a node icon	Press the Ctrl key and the left mouse button simultaneously and drag the node icon to a new location.
Reset node icon position	Right-click a node and choose Reset Node Position from the shortcut menu. The node icon moves to the position defined by the longitude and latitude fields on the Provisioning > General tab in node view.
Provision a circuit	Right-click a node. From the shortcut menu, choose Provision Circuit To and select the node where you want to provision the circuit. For circuit creation procedures, see Chapter 8, “Create Circuits and VT Tunnels.”
Update circuits with new node	Right-click a node and choose Update Circuits With New Node from the shortcut menu. Use this command when you add a new node and want to pass circuits through it.
Display a link end point	Right-click a span. From the shortcut menu, select Go To [node/slot/port] for the drop port you want to view. CTC displays the card in card view.
Display span properties	Do any of the following: <ul style="list-style-type: none"> • Move mouse over a span; the properties appear near the span. • Click a span; the properties appear in the upper left corner of the window. • Right-click a span; the properties appear at the top of the shortcut menu.
Perform a path protection switch for an entire span	Right-click a network span and click Circuits. In the Circuits on Span dialog box, switch options are displayed in the Path Protection Span Switching field.
Display DWDM span properties	Right-click a DWDM network span and click Circuits. The OCHNC channel, optical direction, and circuit are displayed.
Upgrade a span	Right-click a span and choose Upgrade Span from the shortcut menu. <p>Note For detailed span upgrade information and instructions, see Chapter 14, “Upgrade Cards and Spans.”</p>

Table Display Options

Right-clicking a table column displays a menu. Table A-7 shows table display options, which include rearranging or hiding CTC table columns and sorting table columns by primary or secondary keys.

Table A-7 Table Display Options

Task	Click	Right-Click Shortcut Menu
Resize column	Left-click while dragging the header separator to the right or left.	—
Rearrange column order	Left-click while dragging the column header to the right or left.	—
Reset column order	—	Choose Reset Columns Order/Visibility.
Hide column	—	Choose Hide Column.
Show column	—	Choose Show Column > <i>column_name</i> .
Display all hidden columns	—	Choose Reset Columns Order/Visibility.
Sort table (primary)	Click a column header; each click changes sort order (ascending or descending).	Choose Sort Column.
Sort table (secondary sorting keys)	Press the Shift key and simultaneously click the column header.	Choose Sort Column (incremental).
Reset sorting	—	Choose Reset Sorting.
View table row count	—	View the number listed next to “Row Count,” it is the last item on the shortcut menu.

Equipment Inventory

In node view, the Inventory tab displays information about the ONS 15454 equipment, including:

- Delete Button—After highlighting a card with your mouse, use this button to delete the card from node view.
- Reset Button—After highlighting a card with your mouse, use this button to reset the card.
- Location—Identifies where the equipment is installed, either chassis or slot number.
- Eqpt Type—Displays the type of equipment but not the specific card name, for example, OC-12 or DS-1.
- Actual Eqpt Type—Displays the actual equipment type, for example, OC12 IR/STM4 SH 1310.
- HW Part #—Displays the hardware part number; this number is printed on the top of the card or equipment piece.
- HW Rev—Displays the hardware revision number.
- Serial #—Displays the equipment serial number; this number is unique to each card.

- CLEI Code—Displays the Common Language Equipment Identifier code.
- Firmware Rev—Displays the revision number of the software used by the ASIC chip installed on the ONS 15454 card.



Specifications



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

This appendix contains hardware and software specifications for the ONS 15454.

Bandwidth

The ONS 15454 has the following bandwidth specifications:

- Total bandwidth: 240 Gbps
- Data plane bandwidth: 160 Gbps
- SONET plane bandwidth: 80 Gbps

Configurations

The ONS 15454 can be configured as follows:

- Two-fiber path protection
- Path protected mesh network (PPMN)
- Two-fiber bidirectional line switch ring (BLSR)
- Four-fiber BLSR
- Add-drop multiplexer
- Terminal mode
- Regenerator mode
- Hubbed rings
- Multihubbed rings
- Point-to-point

- Linear
- Linear with optical add/drop multiplexing (OADM)

Cisco Transport Controller

Cisco Transport Controller (CTC), the ONS 15454 craft interface software, has the following specifications:

- 10 BaseT
- TCC+/TCC2 access: RJ-45 connector
- Backplane access: LAN pin field

External LAN Interface

The ONS 15454 external LAN interface has the following specifications:

- 10 BaseT Ethernet
- Backplane access: LAN pin field

TL1 Craft Interface

The ONS 15454 TL1 craft interface has the following specifications:

- Speed: 9600 bps
- TCC+/TCC2 access: EIA/TIA-232 DB-9 type connector
- Backplane access: CRAFT pin field

Modem Interface

The ONS 15454 modem interface has the following specifications:

- Hardware flow control
- TCC+/TCC2: EIA/TIA-232 DB-9 type connector

Alarm Interface

The ONS 15454 alarm interface has the following specifications:

- Visual: Critical, Major, Minor, Remote
- Audible: Critical, Major, Minor, Remote
- Alarm contacts: 0.045 mm, -48 V, 50 mA
- Backplane access: Alarm pin fields

EIA Interface

The ONS 15454 EIA interface has the following specifications:

- SMB: AMP #415504-3 75-ohm, 4-leg connectors
- BNC: Trompeter #UCBJ224 75-ohm 4 leg connector (King or ITT are also compatible)
- AMP Champ: AMP#552246-1 with #552562-2 bail locks

BITS Interface

The ONS 15454 BITS interface has the following specifications:

- 2 DS-1 building integrated timing supply (BITS) inputs
- 2 derived DS-1 outputs
- Backplane access: BITS pin field

System Timing

The ONS 15454 has the following system timing specifications:

- Stratum 3 per Telcordia GR-253-CORE
- Free running accuracy: ± 4.6 ppm
- Holdover stability: 3.7×10^{-7} /day, including temperature (< 255 slips in first 24 hours)
- Reference: External BITS, line, internal

Power Specifications

System Power

The ONS 15454 has the following power specifications:

- Input power: -48 VDC
- Power consumption: 55 W (fan tray only); 650 W (maximum draw w/cards)
- Power requirements: -42 to -57 VDC
- Power terminals: #6 Lug
- ANSI shelf: 100-A fuse panel (minimum 30mA fuse per shelf)
NEBS3 shelf: 80-A fuse panel (minimum 20 A fuse per shelf)

Cards

Table B-1 provides power consumption information for the ONS 15454 cards.

Table B-1 Individual Card Power Requirements

Card Type	Card Name	Watts	Amperes	BTU/Hr.
Control Cards	TCC+	9.82	0.20	33.53
	TCC2	26.00	0.54	88.8
	XC	29.00	0.60	99
	XCVT	34.40	0.72	117.46
	XC10G	34.40	.72	117.46
	AIC	6.01	0.12	20.52
	AIC-I	8	0.17	27.3
	AEP	3	(from +5 VDC from AIC-I)	10.2
Electrical Cards	EC1-12	36.60	0.76	124.97
	DS1-14	12.60	0.26	43.02
	DS1N-14	12.60	0.26	43.02
	DS3-12	38.20	0.79	130.43
	DS3N-12	38.20	0.79	130.43
	DS3-12E	26.80	0.56	91.51
	DS3N-12E	26.80	0.56	91.51
	DS3XM-6 Transmux	20	0.42	68

Table B-1 Individual Card Power Requirements (continued)

Card Type	Card Name	Watts	Amperes	BTU/Hr.
Optical Cards	OC3 IR 4	19.20	0.40	65.56
	OC3 IR 4/STM1 SH 1310	19.20	0.40	65.56
	OC3 IR 4/STM1SH 1310-8	26.00	0.48	78.5
	OC12 IR 1310	10.90	0.23	37.22
	OC12 LR 1310	9.28	0.19	31.68
	OC12 LR 1550	9.28	0.19	31.68
	OC12 LR/STM4 LH 1310	9.28	0.19	31.68
	OC12 LR/STM4 LH 1550	9.28	0.19	31.68
	OC12 IR/STM4 SH 1310-4	35.60	0.74	121.6
	OC48 IR 1310	32.20	0.67	109.94
	OC48 LR 1550	26.80	0.56	91.50
	OC48 IR/STM16 SH AS 1310	37.20	0.77	127.01
	OC48 LR/STM16 LH AS 1550	37.20	0.77	127.01
	OC48 ELR/STM16 EH 100 GHz	31.20	0.65	106.53
	OC48 ELR 200 GHz	31.20	0.65	106.53
	OC192 SR/STM64 IO H 1310	48.00	1.00	163.68
	OC192 IR/STM64 SH 1550	48.00	1.00	163.68
	OC192 LR/STM64 LH 1550	72.20	1.50	246.52
	OC192 LR/STM64 LH 15xx.xx	48.00	1.00	163.68
	TXP_MR_10G	35.00 ¹	0.73	119.5
MXP_2.5G_10G	50 ¹	1.04	170.7	
2.5G_MR_TXP	35.00 ²	0.73	119.5	
2.5G_MR_TXP-P	50 ¹	1.04	170.5	

Table B-1 Individual Card Power Requirements (continued)

Card Type	Card Name	Watts	Amperes	BTU/Hr.
DWDM Cards	OSCM	Nominal 23	Nominal 0.48	Nominal 78.48
		Maximum 26	Maximum 0.54	Maximum 88.71
	OSC-CSM	Nominal 24	Nominal 0.5	Nominal 81.89
		Maximum 27	Maximum 0.56	Maximum 92.12
	OPT-PRE	Minimum 25	Minimum 0.52	Minimum 85.3
		Nominal 30	Nominal 0.5	Nominal 102.36
		Maximum 39	Maximum 0.81	Maximum 88.71
	OPT-BST	Nominal 30	Nominal 0.63	Nominal 102.36
		Maximum 39	Maximum 0.81	Maximum 88.71
	32 MUX-O	Nominal 16	Nominal 0.33	Nominal 54.59
		Maximum 25	Maximum 0.52	Maximum 85.3
	32 DMX-O	Nominal 16	Nominal 0.33	Nominal 54.59
		Maximum 25	Maximum 0.52	Maximum 85.3
4MD-xx.x	Nominal 17	Nominal 0.35	Nominal 58.0	
	Maximum 25	Maximum 0.52	Maximum 85.3	
AD-1C-xx.x	Nominal 17	Nominal 0.35	Nominal 58.0	
	Maximum 25	Maximum 0.52	Maximum 85.3	
AD-2C-xx.x	Nominal 17	Nominal 0.35	Nominal 58.0	
	Maximum 25	Maximum 0.52	Maximum 85.3	
AD-4C-xx.x	Nominal 17	Nominal 0.35	Nominal 58.0	
	Maximum 25	Maximum 0.52	Maximum 85.3	
AD-1B-xx.x	Nominal 17	Nominal 0.35	Nominal 58.0	
	Maximum 25	Maximum 0.52	Maximum 85.3	
AD-4B-xx.x	Nominal 17	Nominal 0.35	Nominal 58.0	
	Maximum 25	Maximum 0.52	Maximum 85.3	
Ethernet Cards	E100T-12	65	1.35	221.93
	E1000-2	53.50	1.11	182.67
	E100T-G	65	1.35	221.93
	E1000-2-G	53.50	1.11	182.67
	G1000-4	63.00	1.31	215.11

1. Calculated power; measured power was not available at the time of publication.
2. Calculated power; measured power was not available at the time of publication.

Environmental Specifications

System

The ONS 15454 has the following environmental specifications:

- Operating temperature: 0 to +55 degrees Celsius; –40 to +65 degrees Celsius with industrial temperature rated cards
- Operating humidity: 5 to 95%, noncondensing

Cards

Table B-2 provides temperature ranges and product names for ONS 15454 cards.



Note

The I-Temp symbol is displayed on the faceplate of an I-Temp compliant card. A card without this symbol is C-Temp compliant.

Table B-2 Card Temperature Ranges and Product Names

Card Type	Card Name	C-Temp Product Name (32 to 131 degrees Fahrenheit, 0 to +55 degrees Celsius)	I-Temp Product Name (–40 to 149 degrees Fahrenheit, –40 to +65 degrees Celsius)
Control Cards	TCC+	15454-TCC+	15454-TCC+T
	TCC2	—	15454-TCC2
	XC	15454-XC	15454-XC-T
	XCVT	15454-XC-VT	15454-XC-VT-T
	XC10G	15454-XC-10G	—
	AIC	15454-AIC	15454-AIC-T
	AIC-I	—	15454-AIC-I
	AEP	—	15454-AEP
Electrical	EC1-12	15454-EC1-12	15454-EC1-12-T
	DS1-14	15454-DS1-14	15454-DS1-14-T
	DS1N-14	15454-DS1N-14	15454-DS1N-14-T
	DS3-12	15454-DS3-12	15454-DS3-12-T
	DS3N-12	15454-DS3N-12	15454-DS3N-12-T
	DS3-12E	—	15454-DS3-12E-T
	DS3N-12E	—	15454-DS3N-12E-T
	DS3XM-6 (Transmux)	15454-DS3XM-6	15454-DS3XM-6-T

Table B-2 Card Temperature Ranges and Product Names (continued)

Card Type	Card Name	C-Temp Product Name (32 to 131 degrees Fahrenheit, 0 to +55 degrees Celsius)	I-Temp Product Name (-40 to 149 degrees Fahrenheit, -40 to +65 degrees Celsius)
Optical	OC3 IR 4/STM1 SH 1310	15454-OC34IR1310	15454-OC34I13-T
	OC3 IR/STM1 SH 1310-8	15454-OC3I8-1310	—
	OC12 IR/STM4 SH 1310	15454-OC12I1R1310	15454-OC12I13-T
	OC12 LR/STM4 LH 1310	15454-OC121LR1310	15454-OC121L13-T
	OC12 LR/STM4 LH 1550	15454-OC121LR1550	15454-OC121L15-T
	OC12 IR/STM4 SH 1310-4	15454-OC12I4-1310	—
	OC48 IR 1310	15454-OC48I1R1310	—
	OC48 LR 1550	15454-OC481LR1550	—
	OC48 IR/STM16 SH AS 1310	15454-OC48I1R1310A	—
	OC48 LR/STM16 LH AS 1550	15454-OC481LR1550A	—
	OC48 ELR/STM16 EH 100 GHz	15454-OC48E-1-xx.xx (all wavelengths)	—
	OC48 ELR/STM16 EH 200 GHz	15454-OC48E-xx.xx (all wavelengths)	—
	OC 192 SR/STM64 IO 1310	15454-OC192IO1310	—
	OC192 IR/STM64 SH 1550	15454-OC192IR1550	—
	OC192 LR/STM64 LH 1550	15454-OC192LR1550	—
	OC192 LR/STM64 LH ITU 15xx.xx	15454-OC192LR15xx	—
	TXP_MR_10G	15454-TXP10G	—
	MXP_2.5G_10G	15454-MXP2.5G10G	—
	2.5G_MR_TXP	15454-2.5GMRTXP	—
	2.5G_MR_TXP-P	15454-2.5GMRTXP-P	—
DWDM	OSCM	15454-OSCM	—
	OSC-CSM	15454-OSC-CSM	—
	OPT-PRE	15454-OPT-PRE	—
	OPT-BST	15454-OPT-BST	—
	32 MUX-O	15454-32 MUX-O	—
	32 DMX-O	15454-32 DMX-O	—
	4MD-xx.x	15454-4MD-xx.x	—
	AD-1B-xx.x	15454-AD-1B-xx.x	—
	AD-2C-xx.x	15454-AD-2C-xx.x	—
	AD-4B-xx.x	15454-AD-4B-xx.x	—
	AD-1C-xx.x	15454-AD-1C-xx.x	—
	AD-4C-xx.x	15454-AD-4C-xx.x	—

Dimensions

The ONS 15454 shelf assembly has the following dimensions:

- Height: 18.5 in. (40.7 cm)
- Width: 19 or 23 in. (41.8 or 50.6 cm) with mounting ears attached
- Depth: 12 in. (26.4 cm) (5 in. or 12.7 cm projection from rack)
- Weight: 55 lb (24.947 kg) empty



Release 4.1 and 4.5 NTPs



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

The following table contains a numerical list of the procedures (NTPs) used in Release 4.1/4.5 of the *Cisco ONS 15454 Procedure Guide*. This list is helpful when searching a printed copy of this book for a specific NTP.

Table C-1 Procedure (NTP) Number, Title, and Page Number

NTP-A1 Unpack and Inspect the ONS 15454 Shelf Assembly	1-4
NTP-A2 Install the Shelf Assembly	1-6
NTP-A3 Open and Remove the Front Door	1-13
NTP-A4 Remove the Backplane Covers	1-16
NTP-A5 Install the Electrical Interface Assemblies	1-17
NTP-A6 Install the Power and Ground	1-24
NTP-A7 Install the Fan-Tray Assembly	1-30
NTP-A8 Attach Wires to Alarm, Timing, LAN, and Craft Pin Connections	1-35
NTP-A9 Install the Electrical Card Cables on the Backplane	1-47
NTP-A10 Route Electrical Cables	1-55
NTP-A11 Install the Rear Cover	1-57
NTP-A12 Install Ferrites	1-59
NTP-A13 Perform the Shelf Installation Acceptance Test	1-64
NTP-A15 Install the Common Control Cards	2-2
NTP-A16 Install the OC-N Cards	2-12
NTP-A17 Install the Electrical Cards	2-16
NTP-A20 Replace the Front Door	2-58
NTP-A21 Set Up Computer for CTC	3-2
NTP-A23 Log into the ONS 15454 GUI	3-24

Table C-1 Procedure (NTP) Number, Title, and Page Number (continued)

NTP-A24 Verify Card Installation	4-2
NTP-A25 Set Up Name, Date, Time, and Contact Information	4-6
NTP-A27 Set Up the ONS 15454 for Firewall Access	4-18
NTP-A28 Set Up Timing	4-21
NTP-A30 Create Users and Assign Security	4-4
NTP-A32 Provision External Alarms and Controls on the Alarm Interface Controller	9-33
NTP-A34 Create Ethernet RMON Alarm Thresholds	4-34
NTP-A35 Verify Node Turn Up	6-2
NTP-A38 Provision a Linear ADM Network	6-12
NTP-A40 Provision BLSR Nodes	6-15
NTP-A44 Provision Path Protection Nodes	6-34
NTP-A46 Subtend a Path Protection from a BLSR	6-46
NTP-A47 Subtend a BLSR from a Path Protection	6-48
NTP-A48 Subtend a BLSR from a BLSR	6-48
NTP-A62 Test OC-N Circuits	8-54
NTP-A68 Delete Cleared Alarms from Display	9-13
NTP-A69 View Alarm-Affected Circuits	9-14
NTP-A70 View Alarm Counts on the LCD for a Node, Slot, or Port	9-16
NTP-A71 Create, Download, and Assign Alarm Severity Profiles	9-17
NTP-A72 Suppress Alarms and Discontinue Alarm Suppression	9-30
NTP-A78 Create a Monitor Circuit	11-21
NTP-A79 Create a J1 Path Trace	11-22
NTP-A81 Change Node Management Information	12-2
NTP-A85 Change Node Timing	12-23
NTP-A87 Change SNMP Settings	12-32
NTP-A88 Modify Line Settings and PM Parameter Thresholds for Electrical Cards	13-2
NTP-A89 Modify Line Settings and PM Parameter Thresholds for OC-N Cards	13-19
NTP-A90 Modify Alarm Interface Controller Settings	13-52
NTP-A91 Upgrade DS-1 and DS-3 Protect Cards from 1:1 Protection to 1:N Protection	13-58
NTP-A92 Upgrade the XC Card to the XCVT Card	14-1
NTP-A93 Upgrade the DS3-12 Card to the DS3-12E Card	14-9
NTP-A94 Upgrade OC-N Spans Automatically	14-13
NTP-A95 Upgrade OC-N Spans Manually	14-16
NTP-A105 Add a Path Protection Node	16-15
NTP-A106 Remove a Path Protection Node	16-19
NTP-A107 Inspect and Maintain the Air Filter	17-2
NTP-A108 Back Up the Database	17-7

Table C-1 Procedure (NTP) Number, Title, and Page Number (continued)

NTP-A109 Restore the Database	17-9
NTP-A110 Inhibit Card Protection Switching	17-17
NTP-A111 Revert to an Earlier Software Load	17-20
NTP-A112 Clean Fiber Connectors	17-21
NTP-A113 Reset the TCC+/TCC2 Card Using CTC	17-24
NTP-A114 Power Down the Node	18-1
NTP-A115 Preprovision a Slot	2-29
NTP-A116 Remove and Replace a Card	2-27
NTP-A118 Modify Alarm Interface Controller-International Settings	13-55
NTP-A119 Install the Alarm Expansion Panel	1-32
NTP-A120 Install an External Wire-Wrap Panel to the AEP	1-42
NTP-A124 Provision a Point-to-Point Network	6-4
NTP-A126 Create a BLSR	6-17
NTP-A127 Verify Network Turn Up	8-4
NTP-A133 Create an Automatically Routed VT Tunnel	8-33
NTP-A134 Create a Manually Routed VT Tunnel	8-35
NTP-A135 Test Electrical Circuits	8-40
NTP-A139 Create a Half Circuit on a BLSR or 1+1 Node	8-56
NTP-A140 Create a Half Circuit on a Path Protection Node	8-58
NTP-A142 Create an E-Series Shared Packet Ring Ethernet Circuit	8-66
NTP-A143 Create an E-Series Hub and Spoke Ethernet Configuration	8-69
NTP-A144 Create an E-Series Single-Card EtherSwitch Manual Cross-Connect	8-71
NTP-A145 Create an E-Series Multicard EtherSwitch Manual Cross-Connect	8-73
NTP-A146 Test E-Series Circuits	8-80
NTP-A147 Create a G-Series STS Circuit	8-81
NTP-A148 Create a Manual Cross-Connect for a G-Series or an E-Series in Port-Mapped Mode	8-83
NTP-A149 Test G-Series Circuits	8-90
NTP-A151 Modify Circuit Characteristics	11-12
NTP-A152 Delete Circuits	11-20
NTP-A153 Upgrade the AIC Card to AIC-I	14-12
NTP-A154 Convert a Point-to-Point to a Linear ADM	15-1
NTP-A155 Convert a Point-to-Point or a Linear ADM to a Two-Fiber BLSR	15-3
NTP-A156 Convert a Point-to-Point or Linear ADM to a Path Protection	15-7
NTP-A159 Modify a BLSR	15-11
NTP-A163 Restore the Node to Factory Configuration	17-11
NTP-A168 Enable, Modify, or Disable Alarm Severity Filtering	9-26
NTP-A169 Set Up CTC Network Access	4-8

Table C-1 Procedure (NTP) Number, Title, and Page Number (continued)

NTP-A170 Create Protection Groups	4-25
NTP-A171 Set Up SNMP	4-32
NTP-A172 Create a Logical Network Map	6-3
NTP-A173 Point-to-Point Network Acceptance Test	6-7
NTP-A174 Linear ADM Network Acceptance Test	6-13
NTP-A175 Two-Fiber BLSR Acceptance Test	6-21
NTP-A176 Four-Fiber BLSR Acceptance Test	6-28
NTP-A177 Path Protection Acceptance Test	6-35
NTP-A181 Create an Automatically Routed DS-1 Circuit	8-6
NTP-A182 Create a Manually Routed DS-1 Circuit	8-10
NTP-A183 Create a Unidirectional DS-1 Circuit with Multiple Drops	8-13
NTP-A184 Create an Automatically Routed DS-3 Circuit	8-20
NTP-A185 Create a Manually Routed DS-3 Circuit	8-24
NTP-A186 Create a Unidirectional DS-3 Circuit with Multiple Drops	8-26
NTP-A187 Create a VT Aggregation Point	8-37
NTP-A188 Create an Automatically Routed OC-N Circuit	8-42
NTP-A189 Create a Manually Routed OC-N Circuit	8-46
NTP-A190 Create a Unidirectional OC-N Circuit with Multiple Drops	8-48
NTP-A191 Create an E-Series EtherSwitch Circuit (Multicard or Single-Card Mode)	8-62
NTP-A192 Create a Circuit for an E-Series Card in Port-Mapped Mode	8-64
NTP-A194 Create Overhead Circuits	8-91
NTP-A195 Document Existing Provisioning	9-2
NTP-A196 View Alarms, History, Events, and Conditions	9-5
NTP-A197 Monitor Electrical Performance	10-9
NTP-A198 Monitor Ethernet Performance	10-11
NTP-A199 Locate and View Circuits	11-2
NTP-A200 View Cross-Connect Card Resource Usage	11-11
NTP-A201 Change CTC Network Access	12-4
NTP-A202 Customize the CTC Network View	12-11
NTP-A203 Modify or Delete Card Protection Settings	12-16
NTP-A204 Delete a SONET DCC Termination	12-22
NTP-A205 Modify Users and Change Security	12-26
NTP-A206 Modify Line Settings and PM Parameter Thresholds for TXP_MR_10G Cards	13-24
NTP-A207 Modify Line Settings and PM Parameter Thresholds for MXP_2.5G_10G Cards	13-32
NTP-A210 Convert a Path Protection to a Two-Fiber BLSR	15-7
NTP-A211 Convert a Two-Fiber BLSR to a Four-Fiber BLSR	15-9
NTP-A212 Add a BLSR Node	16-1

Table C-1 Procedure (NTP) Number, Title, and Page Number (continued)

NTP-A213 Remove a BLSR Node	16-10
NTP-A214 Off Load the Security Audit Trail Log	17-16
NTP-A215 View G-Series Ethernet Maintenance Information	17-25
NTP-A216 Provision a Traditional Path Protection Dual Ring Interconnect	6-38
NTP-A217 Provision an Integrated Path Protection Dual Ring Interconnect	6-40
NTP-A218 Change the Node Timing Reference	17-27
NTP-A220 Upgrade the XC or XCVT Card to the XC10G Card	14-3
NTP-A221 Verify TCC2 Installation	5-2
NTP-A222 Provision the DWDM Node	5-3
NTP-A223 View ONS 15454 Timing Report	17-29
NTP-A224 Provision an Open-Ended Path Protection	6-42
NTP-A225 Open-Ended Path Protection Acceptance Test	6-44
NTP-A226 Modify DWDM Node Settings	12-8
NTP-A227 Provision a DWDM Optical Channel Network Connection	8-95
NTP-A228 Manage BLSR Manual Ring Switches	15-12
NTP-A229 Modify Line Settings and PM Parameter Thresholds for Optical Service Channel Cards	13-63
NTP-A230 Modify Line Settings and PM Parameter Thresholds for Amplifier Cards	13-68
NTP-A231 Modify Line Settings and PM Parameter Thresholds for Multiplexer and Demultiplexer Cards	13-73
NTP-A232 Verify DWDM Node Turn Up	7-2
NTP-A233 Provision a DWDM Ring, Linear Configuration, or Single-Span Link	7-3
NTP-A234 Set Up CTC Computer for Local Craft Connection to the ONS 15454	3-10
NTP-A235 Set Up a CTC Computer for a Corporate LAN Connection to the ONS 15454	3-21
NTP-A236 Set Up a Remote Access Connection to the ONS 15454	3-23
NTP-A237 Modify Line Settings and PM Parameter Thresholds for TXP_MR_2.5G and TXPP_MR_2.5G Cards	13-42
NTP-A238 Install Optional DWDM Equipment	1-62
NTP-A239 View E-Series Ethernet Maintenance Information	17-25
NTP-A241 Provision G-Series Ports for Transponder Mode	8-87
NTP-A242 Install the DWDM Cards	2-23
NTP-A243 Install the DWDM Dispersion Compensating Cards	2-25
NTP-A244 Install Fiber-Optic Cables on DWDM Cards	2-42
NTP-A245 Route Fiber-Optic Cables	2-57
NTP-A246 Install Ethernet Cards and Connectors	2-17
NTP-A247 Install Fiber-Optic Cables on OC-N Cards	2-30
NTP-A248 Provision External Alarms and Controls on the Alarm Interface Controller-International	9-35
NTP-A249 Install the Transponder and Muxponder Cards	2-14
NTP-A250 Monitor OC-N Performance	10-18
NTP-A251 Monitor Multirate Transport Performance	10-24

Table C-1 Procedure (NTP) Number, Title, and Page Number (continued)

NTP-A252 Monitor DWDM Performance	10-31
NTP-A253 Change the PM Display	10-2
NTP-A254 Downgrade a DS3-12E/DS3NE Card to a DS3-12/DS3N-12 Card	14-14
NTP-A416 Convert a CTC Circuit to TL1 Cross-Connects	11-18
NTP-A417 Upgrade TL1 Cross-Connects to CTC Circuits	11-19
NTP-A419 Upgrade the TCC or TCC+ Card to the TCC2 Card	14-5
NTP-A423 Delete a DWDM OSC Termination	12-23



Release 4.1 and 4.5 DLPs



Note

The terms "Unidirectional Path Switched Ring" and "UPSR" may appear in Cisco literature. These terms do not refer to using Cisco ONS 15xxx products in a unidirectional path switched ring configuration. Rather, these terms, as well as "Path Protected Mesh Network" and "PPMN," refer generally to Cisco's path protection feature, which may be used in any topological network configuration. Cisco does not recommend using its path protection feature in any particular topological network configuration.

The following table contains a numerical list of the tasks (DLPs) used in Release 4.1/4.5 of the Cisco ONS 15454 Procedure Guide. This list is helpful when searching a printed copy of this book for a specific DLP.

Table D-1 Task (DLP) Number, Name, and Page Number

DLP-A1 Unpack and Verify the Shelf Assembly	1-4
DLP-A2 Inspect the Shelf Assembly	1-5
DLP-A3 Reverse the Mounting Bracket to Fit a 19-inch (482.6 mm) Rack	1-7
DLP-A4 Install the External Brackets and Air Filter	1-8
DLP-A5 Mount the Shelf Assembly in a Rack (One Person)	1-10
DLP-A6 Mount the Shelf Assembly in a Rack (Two People)	1-11
DLP-A7 Mount Multiple Shelf Assemblies in a Rack	1-12
DLP-A8 Open the Front Cabinet Compartment (Door)	1-13
DLP-A9 Remove the Front Door	1-14
DLP-A10 Remove the Lower Backplane Cover	1-16
DLP-A11 Remove the Backplane Sheet Metal Cover	1-17
DLP-A12 Install a BNC or High-Density BNC EIA	1-18
DLP-A13 Install an SMB EIA	1-20
DLP-A14 Install the AMP Champ EIA	1-22
DLP-A16 Connect the Office Ground to the ONS 15454	1-26
DLP-A17 Connect Office Power to the ONS 15454 Shelf	1-27
DLP-A18 Turn On and Verify Office Power	1-29
DLP-A19 Install Alarm Wires on the Backplane	1-36
DLP-A20 Install Timing Wires on the Backplane	1-39

Table D-1 Task (DLP) Number, Name, and Page Number (continued)

DLP-A21 Install LAN Wires on the Backplane	1-40
DLP-A22 Install the TL1 Craft Interface	1-41
DLP-A23 Install DS-1 Cables Using Electrical Interface Adapters (Balun)	1-48
DLP-A24 Install DS-1 AMP Champ Cables on the AMP Champ EIA	1-49
DLP-A25 Install Coaxial Cable With BNC Connectors	1-52
DLP-A26 Install Coaxial Cable With High-Density BNC Connectors	1-53
DLP-A27 Install Coaxial Cable with SMB Connectors	1-54
DLP-A28 Route Coaxial Cables	1-55
DLP-A29 Route DS-1 Twisted-Pair Cables	1-57
DLP-A30 Install Ferrites to Power Cabling	1-60
DLP-A31 Attach Ferrites to Wire-Wrap Pin Fields	1-61
DLP-A32 Inspect the Shelf Installation and Connections	1-65
DLP-A33 Measure Voltage	1-66
DLP-A36 Install the TCC+/TCC2 Cards	2-7
DLP-A37 Install the XC, XCVT, or XC10G Cards	2-9
DLP-A38 Install the Alarm Interface Controller or Alarm Interface Controller–International Card	2-11
DLP-A39 Install Ethernet Cards	2-19
DLP-A43 Install Fiber-Optic Cables for Path Protection Configurations	2-34
DLP-A44 Install Fiber-Optic Cables for BLSR Configurations	2-38
DLP-A45 Install the Fiber Boot	2-40
DLP-A47 Run the CTC Installation Wizard for Windows	3-2
DLP-A48 Run the CTC Installation Wizard for UNIX	3-7
DLP-A49 Set Up the Java Runtime Environment for UNIX	3-9
DLP-A50 Set Up a Windows PC for Craft Connection to an ONS 15454 on the Same Subnet Using Static IP Addresses	3-12
DLP-A51 Set Up a Windows PC for Craft Connection to an ONS 15454 Using DHCP	3-14
DLP-A52 Set Up a Windows PC for Craft Connection to an ONS 15454 Using Automatic Host Detection	3-16
DLP-A53 Set Up a Solaris Workstation for a Craft Connection to an ONS 15454	3-19
DLP-A56 Disable Proxy Service Using Internet Explorer (Windows)	3-22
DLP-A57 Disable Proxy Service Using Netscape (Windows and UNIX)	3-22
DLP-A59 Connect Computer to the ONS 15454	3-25
DLP-A60 Log into CTC	3-26
DLP-A61 Create Login Node Groups	3-30
DLP-A62 Add a Node to the Current Session or Login Group	3-31
DLP-A64 Set the IP Address, Default Router, and Network Mask Using the LCD	4-12
DLP-A65 Create a Static Route	4-14
DLP-A67 Provision the IIOP Listener Port on the ONS 15454	4-19

Table D-1 Task (DLP) Number, Name, and Page Number (continued)

DLP-A68 Provision the IIOP Listener Port on the CTC Computer	4-20
DLP-A69 Set Up External or Line Timing	4-22
DLP-A70 Set Up Internal Timing	4-24
DLP-A71 Create a 1:1 Protection Group	4-27
DLP-A72 Create a 1:N Protection Group	4-28
DLP-A73 Create a 1+1 Protection Group	4-29
DLP-A74 Create a New User—Single Node	4-4
DLP-A75 Create a New User—Multiple Nodes	4-5
DLP-A83 Provision Orderwire	8-93
DLP-A88 Optical 1+1 Protection Test	6-11
DLP-A89 Remap the K3 Byte	6-17
DLP-A91 BLSR Switch Test	6-25
DLP-A92 Four-Fiber BLSR Exercise Span Test	6-30
DLP-A93 Four-Fiber BLSR Span Switching Test	6-32
DLP-A94 Path Protection Protection Switching Test	6-37
DLP-A95 Provision a DS-1 Circuit Source and Destination	8-18
DLP-A96 Provision a DS-1 or DS-3 Circuit Route	8-31
DLP-A97 Provision an OC-N Circuit Source and Destination	8-51
DLP-A98 Provision an OC-N Circuit Route	8-52
DLP-A99 Determine Available VLANs	8-76
DLP-A110 View Alarm History	9-8
DLP-A111 Changing the Maximum Number of Session Entries for Alarm History	9-9
DLP-A112 Display Alarms and Conditions Using Time Zone	9-10
DLP-A113 Synchronize Alarms	9-11
DLP-A114 View Conditions	9-11
DLP-A115 Create Alarm Severity Profiles	9-18
DLP-A117 Apply Alarm Profiles to Cards and Nodes	9-23
DLP-A118 Delete Alarm Severity Profiles	9-25
DLP-A119 Suppress Alarm Reporting	9-31
DLP-A120 Discontinue Alarm Suppression	9-32
DLP-A121 Enable/Disable Pointer Justification Count Performance Monitoring	10-19
DLP-A122 Enable/Disable Intermediate Path Performance Monitoring	10-21
DLP-A124 Refresh PM Counts at 15-Minute Intervals	10-2
DLP-A125 Refresh PM Counts at One-Day Intervals	10-3
DLP-A126 View Near-End PM Counts	10-4
DLP-A127 View Far-End PM Counts	10-4
DLP-A128 Monitor PM Counts for a Selected Signal	10-5

Table D-1 Task (DLP) Number, Name, and Page Number (continued)

DLP-A129 Reset Current PM Counts	10-6
DLP-A130 Clear Selected PM Counts	10-7
DLP-A131 Search for Circuits	11-7
DLP-A137 Provision Path Trace on OC-N Ports	11-28
DLP-A138 Print CTC Data	9-2
DLP-A139 Export CTC Data	9-4
DLP-A140 Change the Node Name, Date, Time, and Contact Information	12-2
DLP-A142 Modify a Static Route	12-6
DLP-A143 Delete a Static Route	12-6
DLP-A144 Disable OSPF	12-7
DLP-A145 Change the Network View Background Color	12-11
DLP-A148 Create Domain Icons	12-14
DLP-A149 Manage Domain Icons	12-14
DLP-A150 Modify a 1:1 Protection Group	12-17
DLP-A152 Modify a 1:N Protection Group	12-18
DLP-A154 Modify a 1+1 Protection Group	12-19
DLP-A155 Delete a Protection Group	12-21
DLP-A157 Change the Node Timing Source	12-24
DLP-A158 Change User Password and Security Level—Single Node	12-28
DLP-A159 Delete User—Single Node	12-31
DLP-A160 Change User Password and Security Level—Multiple Nodes	12-29
DLP-A161 Delete User—Multiple Nodes	12-31
DLP-A163 Delete SNMP Trap Destinations	12-34
DLP-A164 Delete Ethernet RMON Alarm Thresholds	12-35
DLP-A165 Change Line and Threshold Settings for the DS1-14 or DS1N-14 Cards	13-3
DLP-A166 Change Line and Threshold Settings for the DS3-12 or DS3N-12 Cards	13-6
DLP-A167 Change Line and Threshold Settings for the DS3E-12 or DS3N-12E Cards	13-8
DLP-A168 Change Line and Threshold Settings for the DS3XM-6 Card	13-12
DLP-A169 Change Line and Threshold Settings for the EC1-12 Card	13-16
DLP-A170 Change Line Transmission Settings for OC-N Cards	13-19
DLP-A171 Change Threshold Settings for OC-N Cards	13-21
DLP-A172 Change an Optical Port to SDH	13-23
DLP-A173 Change External Alarms Using the AIC Card	13-53
DLP-A174 Change External Controls Using the AIC Card	13-53
DLP-A175 Change Orderwire Settings Using the AIC Card	13-54
DLP-A176 Convert DS1-14 Cards From 1:1 to 1:N Protection	13-58
DLP-A177 Convert DS3-12 Cards From 1:1 to 1:N Protection	13-60

Table D-1 Task (DLP) Number, Name, and Page Number (continued)

DLP-A178 Convert DS3-12E Cards From 1:1 to 1:N Protection	13-61
DLP-A189 Verify that a 1+1 Working Slot is Active	15-6
DLP-A191 Delete a Card	2-28
DLP-A194 Clear a BLSR Force Ring Switch	16-9
DLP-A195 Verify Timing in a Reduced Ring	16-12
DLP-A196 Delete a BLSR from a Single Node	16-15
DLP-A197 Initiate a Path Protection Force Switch	16-17
DLP-A198 Clear a Path Protection Force Switch	16-18
DLP-A199 Inspect, Clean, and Replace the Reusable Air Filter	17-2
DLP-A200 Inspect and Replace the Disposable Air Filter	17-5
DLP-A201 Apply a Lock On	17-18
DLP-A202 Apply a Lock Out	17-18
DLP-A203 Clear a Lock On or Lock Out	17-19
DLP-A204 Scope and Clean Fiber Connectors and Adapters with Alcohol and Dry Wipes	17-22
DLP-A205 Clean Fiber Connectors with Cletop	17-23
DLP-A206 Clean the Fiber Adapters	17-23
DLP-A207 Install Fiber-Optic Cables on the LGX Interface	2-32
DLP-A208 Change External Alarms Using the AIC-I Card	13-55
DLP-A209 Change External Controls Using the AIC-I Card	13-56
DLP-A210 Change AIC-I Card Orderwire Settings	13-57
DLP-A212 Create a User Data Channel Circuit	8-94
DLP-A214 Change the Service State for a Port	6-6
DLP-A217 BLSR Exercise Ring Test	6-23
DLP-A218 Provision Path Protection Selectors During Circuit Creation	8-29
DLP-A219 Provision a VT Tunnel Route	8-36
DLP-A220 Provision E-Series Ethernet Ports	8-77
DLP-A221 Provision E-Series Ethernet Ports for VLAN Membership	8-78
DLP-A222 Provision G-Series Ethernet Ports	8-85
DLP-A223 Download an Alarm Severity Profile	9-20
DLP-A225 Enable Alarm Filtering	9-27
DLP-A226 Modify Alarm and Condition Filtering Parameters	9-27
DLP-A227 Disable Alarm Filtering	9-30
DLP-A229 View Circuits on a Span	11-9
DLP-A230 Change a Circuit State	11-13
DLP-A231 Edit a Circuit Name	11-14
DLP-A232 Change Active and Standby Span Color	11-15
DLP-A233 Edit Path Protection Circuit Path Selectors	11-16

Table D-1 Task (DLP) Number, Name, and Page Number (continued)

DLP-A240 Provision OSC Terminations	7-5
DLP-A241 Clear a BLSR Manual Ring Switch	15-14
DLP-A242 Create a BLSR on a Single Node	16-6
DLP-A244 Use the Reinitialization Tool to Clear the Database and Upload Software (Windows)	17-12
DLP-A245 Use the Reinitialization Tool to Clear the Database and Upload Software (UNIX)	17-14
DLP-A246 Provision E-Series Ethernet Card Mode	8-77
DLP-A247 Change an OC-N Card	2-28
DLP-A249 Provision IP Settings	4-9
DLP-A250 Set Up or Change Open Shortest Path First Protocol	4-15
DLP-A251 Set Up or Change Routing Information Protocol	4-17
DLP-A252 Create a Y Cable Protection Group	4-31
DLP-A253 Provision SONET DCC Terminations	6-5
DLP-A254 TCC+/TCC2 Active/Standby Switch Test	6-9
DLP-A255 Cross-Connect Card Side Switch Test	6-10
DLP-A256 View Ethernet Statistics PM Parameters	10-12
DLP-A257 View Ethernet Utilization PM Parameters	10-13
DLP-A258 View Ethernet History PM Parameters	10-14
DLP-A259 Refresh Ethernet PM Counts at a Different Time Interval	10-17
DLP-A260 Set Auto-Refresh Interval for Displayed PM Counts	10-8
DLP-A261 Refresh PM Counts for a Different Port	10-8
DLP-A262 Filter the Display of Circuits	11-8
DLP-A263 Edit Path Protection Dual Ring Interconnect Circuit Hold-Off Timer	11-17
DLP-A264 Provision Path Trace on Circuit Source and Destination Ports	11-23
DLP-A265 Change the Login Legal Disclaimer	12-3
DLP-A266 Change IP Settings	12-5
DLP-A267 Change the Default Network View Background Map	12-12
DLP-A268 Apply a Custom Network View Background Map	12-13
DLP-A269 Enable Dialog Box Do-Not-Display Option	12-15
DLP-A270 Modify a Y Cable Protection Group	12-20
DLP-A271 Change Security Policy—Single Node	12-26
DLP-A272 Change Security Policy—Multiple Nodes	12-27
DLP-A273 Modify SNMP Trap Destinations	12-33
DLP-A274 Change Card Settings for TXP_MR_10G Cards	13-25
DLP-A275 Change Line Settings for TXP_MR_10G Cards	13-26
DLP-A276 Change Line Threshold Settings for TXP_MR_10G Cards	13-27
DLP-A277 Change Optical Thresholds Settings for TXP_MR_10G Cards	13-28
DLP-A278 Change Section Trace Settings for TXP_MR_10G Cards	13-29

Table D-1 Task (DLP) Number, Name, and Page Number (continued)

DLP-A279 Change Optical Transport Network Settings for TXP_MR_10G Cards	13-30
DLP-A280 Change Card Settings for MXP_2.5G_10G Cards	13-33
DLP-A281 Change Line Settings for MXP_2.5G_10G Cards	13-35
DLP-A282 Change Line Thresholds Settings for MXP_2.5G_10G Cards	13-36
DLP-A283 Change Optical Thresholds Settings for MXP_2.5G_10G Cards	13-38
DLP-A284 Change Section Trace Settings for MXP_2.5G_10G Cards	13-39
DLP-A285 Change Optical Transport Network Settings for MXP_2.5G_10G Cards	13-40
DLP-A291 Upgrade the TCC Card to the TCC+ Card	14-9
DLP-A293 Perform a Manual Span Upgrade on a Two-Fiber BLSR	14-21
DLP-A294 Perform a Manual Span Upgrade on a Four-Fiber BLSR	14-22
DLP-A295 Perform a Manual Span Upgrade on a Path Protection	14-24
DLP-A296 Perform a Manual Span Upgrade on a 1+1 Protection Group	14-25
DLP-A297 Perform a Manual Span Upgrade on an Unprotected Span	14-26
DLP-A298 Check the Network for Alarms and Conditions	15-3
DLP-A301 Initiate a BLSR Manual Ring Switch	15-13
DLP-A302 Check BLSR or Path Protection Alarms and Conditions	16-6
DLP-A303 Initiate a BLSR Force Ring Switch	16-7
DLP-A304 Verify BLSR Pass-Through Circuits	16-13
DLP-A309 View the Ethernet MAC Address Table	17-26
DLP-A310 View Ethernet Trunk Utilization	17-26
DLP-A311 Provision a Half Circuit Source and Destination—BLSR and 1+1	8-60
DLP-A312 Provision a Half Circuit Source and Destination—Path Protection	8-61
DLP-A313 Create a DCC Tunnel	8-92
DLP-A314 Assign a Name to a Port	8-17
DLP-A315 Log Out a User—Single Node	12-29
DLP-A316 Log Out a User—Multiple Nodes	12-30
DLP-A317 View Optics PM Parameters	10-27
DLP-A318 View Payload PM Parameters	10-28
DLP-A319 View Optical Transport Network PM Parameters	10-30
DLP-A320 View ML-Series Ether Ports PM Parameters	10-15
DLP-A321 View ML-Series POS Ports PM Parameters	10-16
DLP-A322 Manual or Force Switch the Node Timing Reference	17-27
DLP-A323 Clear a Manual or Force Switch on a Node Timing Reference	17-28
DLP-A326 Change a BLSR Node ID	15-12
DLP-A328 Create a BLSR Using the BLSR Wizard	6-18
DLP-A329 Create a BLSR Manually	6-20
DLP-A400 Import a Cisco MetroPlanner Configuration File	5-4

Table D-1 Task (DLP) Number, Name, and Page Number (continued)

DLP-A401 Provision DWDM Hub Node Settings	5-4
DLP-A402 Provision DWDM Terminal Node Settings	5-6
DLP-A403 Provision DWDM OADM Node Settings	5-7
DLP-A404 Provision DWDM Line Node Settings	5-10
DLP-A405 Delete a DWDM Connection	5-11
DLP-A406 Create a DWDM Connection	5-11
DLP-A407 Verify OSCM and OSC-CSM Transmit Power	5-12
DLP-A408 Modify DWDM Hub Node Settings	12-9
DLP-A409 Modify DWDM Terminal Node Settings	12-9
DLP-A410 Modify DWDM OADM Node Settings	12-10
DLP-A411 Modify DWDM Line Node Settings	12-10
DLP-A412 Install the DCU Shelf Assembly	1-62
DLP-A413 Install the Fiber Patch Panel Shelf	1-63
DLP-A414 Install the Fiber Storage Shelf	1-63
DLP-A415 Install the Air Ramp	1-64
DLP-A416 View Circuit Information	11-2
DLP-A417 View the BLSR Squelch Table	11-10
DLP-A418 Install Public-Key Security Certificate	3-28
DLP-A421 Provision G-Series Flow Control Watermarks	8-86
DLP-A422 Verify BLSR Extension Byte Mapping	16-14
DLP-A423 Install Fiber-Optic Cables for Basic OSC on All DWDM Nodes	2-43
DLP-A424 Install Fiber-Optic Cables for a Terminal Node	2-45
DLP-A425 Install Fiber-Optic Cables for a Hub Node	2-46
DLP-A426 Install Fiber-Optic Cables for a Line Amplifier Node	2-48
DLP-A427 Install Fiber-Optic Cables for an Amplified or Passive OADM Node	2-51
DLP-A428 Install Fiber Optic Cables in a 1+1 Configuration	2-33
DLP-A429 Apply Alarm Profiles to Ports	9-21
DLP-A469 Install GBIC or SFP Connectors	2-20
DLP-A470 Remove GBIC or SFP Connectors	2-22
DLP-A471 Change Card Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards	13-42
DLP-A472 Change Line Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards	13-44
DLP-A473 Change Line Threshold Settings for TXP_MR_2.5G Cards and TXPP_MR_2.5G Cards	13-46
DLP-A474 Change Optical Thresholds Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards	13-48
DLP-A475 Change Section Trace Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards	13-49
DLP-A476 Change Optical Transport Network Settings for TXP_MR_2.5G and TXPP_MR_2.5G Cards	13-50
DLP-A477 Change Optical Line Settings for OSCM and OSC-CSM Cards	13-63
DLP-A478 Change Line Threshold Settings for OSCM and OSC-CSM Cards	13-65

Table D-1 Task (DLP) Number, Name, and Page Number (continued)

DLP-A479 Change Optical Line Settings for OSCM and OSC-CSM Cards	13-66
DLP-A480 Change Channel Settings for OSCM and OSC-CSM Cards	13-67
DLP-A481 Change Optical Line Settings for OPT-PRE and OPT-BST Amplifiers	13-69
DLP-A482 Change Line Threshold Settings for OPT-PRE and OPT-BST Amplifiers	13-70
DLP-A483 Change Optical Amplifier Line Settings for OPT-PRE and OPT-BST Amplifiers	13-71
DLP-A484 Change Channel Settings for OPT-PRE and OPT-BST Amplifiers	13-72
DLP-A485 Change Optical Line Settings for Multiplexer and Demultiplexer Cards	13-74
DLP-A486 Change Line Threshold Settings for Multiplexer and Demultiplexer Cards	13-75
DLP-A487 Change Optical Channel Settings for Multiplexer and Demultiplexer Cards	13-76
DLP-A488 Change Channel Settings for Multiplexer and Demultiplexer Cards	13-78
DLP-A490 Verify the OSNR	7-9
DLP-A491 Provision the Ring ID	7-6
DLP-A492 Check Span Attenuation	7-6
DLP-A493 Create a Test OCHNC	7-8
DLP-A494 Verify the Optical Receive Power	7-8
DLP-A496 Convert a Pass-Through Connection to an Add/Drop Connection	7-10
DLP-A497 DWDM Node Acceptance Test	7-11
DLP-A498 Switch Between TDM and DWDM Network Views	12-13
DLP-A499 Modify a Splitter Protection Group	12-21
DLP-A500 Enable/Disable OTN G.709 Performance Monitoring	10-25
DLP-A501 Enable/Disable OTN FEC Performance Monitoring	10-26
DLP-A502 View Optical Service Channel PM Parameters	10-32
DLP-A503 View Optical Amplifier PM Parameters	10-34
DLP-A504 View Optical Multiplexer and Demultiplexer PM Parameters	10-36
DLP-A505 View Channel Filter Optical Add/Drop Multiplexer PM Parameters	10-38
DLP-A506 View Band Filter Optical Add/Drop Multiplexer PM Parameters	10-40
DLP-A507 View OC-N PM Parameters	10-23
DLP-A508 Upgrade the TCC+ Card to the TCC2 Card	14-10
DLP-A510 Provision a DS-3 Circuit Source and Destination	8-30



Numerics

1:1 protection

An electrical card protection scheme that pairs a working card with a protect card of the same type in an adjacent slot (DS-1 and DS-3 speeds). If the working card fails, the traffic from the working card switches to the protect card. When the failure on the working card is resolved, traffic reverts to the working card.

1+1 protection

An optical (OC-N) card protection scheme that pairs a single working port/card with a single dedicated protect port/card. All OC-N cards can use this protection type (OC-3, OC-12, OC-48, and OC-192 speeds).

1:N protection

An electrical card protection scheme that allows a single protect card to provide protection for several working cards (DS-1 and DS-3 speeds). If a working card fails, the traffic from the working card switches to the protect card. When the failure on the working card is resolved, traffic reverts to the working card.

10BaseT

Standard 10 Mbps local area network over unshielded twisted pair copper wire.

100BaseT

Standard 100 Mbps local ethernet network.

100BaseTX

Specification of 100BaseT that supports full duplex operation.

A

Access drop

Points where network devices can access the network.

ACO

Alarm cutoff.

Active card

A card that is working or carrying traffic. A card provisioned as working can be an active card or, after a protection switch, a protect card can be an active card.

ACT/STBY

Active/Standby.

Address mask

Bit combination used to describe the portion of an IP address that refers to the network or subnet and the portion that refers to the host. Sometimes referred to as mask. See also *subnet mask*.

ADM

(Add/drop multiplexers). Linear ADMs allow signals to be added to a SONET span or dropped from a SONET span. An ADM has three or more nodes.

Agent

1. Generally, software that processes queries and returns replies on behalf of an application.
2. In a network management system, a process that resides in all managed devices and reports the values of specified variables to management stations.

AIC

Alarm Interface Controller.

AID

(Access Identifier). An access code used in TL1 messaging that identifies and addresses specific objects within the ONS 15454. These objects include individual pieces of equipment, transport spans, access tributaries, and others. See also *TID*.

AIP

Alarm Interface Panel.

AIS

Alarm Indication Signal.

AIS-L

Line Alarm Indication Signal.

AMI

(Alternate Mark Inversion). Line-code format used on T1 circuits that transmits ones by alternate positive and negative pulses. Zeroes are represented by 01 during each bit cell and ones are represented by 11 or 00, alternately, during each bit cell. AMI requires that the sending device maintain ones density. Ones density is not maintained independently of the data stream. Sometimes called binary-coded alternate mark inversion.

ANSI

American National Standards Institute.

APS

(Automatic Protection Switching). SONET switching mechanism that routes traffic from working lines to protect lines if a line card failure or fiber cut occurs.

ARP

Address Resolution Protocol.

APSB

Alarm Protection Switching Byte.

ATAG

(Autonomous Message Tag). ATAG is used for TL1 message sequencing. See also *CTAG*.

ATM

Asynchronous Transfer Mode.

AWG

American Wire Gauge

B**B8ZS**

(Binary 8-zero Substitution). A line-code type, used on T1 circuits, that substitutes a special code whenever 8 consecutive zeros are sent over the link. This code is then interpreted at the remote end of the connection. This technique guarantees ones density independent of the data stream. Sometimes called bipolar 8-zero substitution.

Backbone

The part of the network that carries the heaviest traffic or joins LANs together.

BER

(Bit Error Rate). Ratio of received bits that contain errors.

BIP

Bit Interleaved Parity.

Bit rate

Speed at which bits are transmitted, usually expressed in bits per second.

BITS

(Building Integrated Timing Supply). A single building master timing supply that minimizes the number of synchronization links entering an office. Sometimes referred to as a Synchronization Supply Unit.

BLSR

(Bidirectional Line Switched Ring). SONET ring architecture that provides working and protection fibers between nodes. If the working fiber between nodes is cut, traffic is automatically routed onto the protection fiber.

Blue band

Dense Wavelength Division Multiplexing (DWDM) wavelengths are broken into two distinct bands: red and blue. DWDM cards for the ONS 15454 SDH operate on wavelengths between 1530.33nm and 1542.94nm in the blue band. The blue band is the lower frequency band.

BNC

Bayonet Neill-Concelman (coaxial cable bayonet-locking connector).

BPDU

Bridge Protocol Data Unit.

Bridge

Device that connects and passes packets between two network segments that use the same communications protocol. In general, a bridge will filter, forward, or flood an incoming frame based on the MAC address of that frame. See also *MAC address*.

Broadcast

Data packet that will be sent to all nodes on a network. Broadcasts are identified by a broadcast address. Compare with *multicast* and *unicast*. See also *Broadcast address*.

Broadcast address

Special address reserved for sending a message to all stations. Generally, a broadcast address is a MAC destination address of all ones. See also *MAC address*.

Broadcast storm

Undesirable network event in which many broadcasts are sent simultaneously across all network segments. A broadcast storm uses substantial network bandwidth and, typically, causes network time-outs.

Bus

Common physical signal path composed of wires or other media across which signals can be sent from one part of a computer to another.

C**C2 byte**

The C2 byte is the signal label byte in the STS path overhead. This byte tells the equipment what the SONET payload envelope contains and how it is constructed. See also *SONET*.

CAT 5

Category 5 (cabling).

CCITT

Comité Consultatif International Télégraphique et Téléphoniques. (Formerly ITU.)

CEO

Central Office Environment.

CEV

Controlled Environment Vaults.

CLEI

Common Language Equipment Identifier code.

CLNP

Correctionless Network Protocol.

cm

Centimeter.

CMIP

Common Management Information Protocol.

COE

Central Office Environment.

Collision

In Ethernet, the result of two nodes transmitting simultaneously. The frames from each device impact and are damaged when they meet on the physical media.

Concatenation

A mechanism for allocating contiguous bandwidth for payload transport. Through the use of Concatenation Pointers, multiple OC-1s can be linked together to provide contiguous bandwidth through the network, from end to end.

CORBA

Common Object Request Broker Architecture.

CPE

Customer Premise Environments.

Crosspoint

A set of physical or logical contacts that operate together to extend the speech and signal channels in a switching network.

CTAG

(Correlation Tag). A unique identifier given to each input command by the TL1 operator. When the ONS 15454 system responds to a specific command, it includes the command's CTAG in the reply. This eliminates discrepancies about which response corresponds to which command. See also *ATAG*.

CTC

(Cisco Transport Controller). A Java-based graphical user interface (GUI) that allows operations, administration, maintenance, and provisioning (OAM&P) of the ONS 15454 using an Internet browser.

CTM

(Cisco Transport Manager). A Java-based network management tool used to support large networks of Cisco 15000-class

D**DCC**

(Data Communications Channel). Used to transport information about operation, administration, maintenance, and provisioning (OAM&P) over a SONET interface. DCC can be located in SDCC or LDCC. See also *LDCC* and *SDCC*.

DCN

Data Communications Network.

DCS

Distributed Communications System.

Default router

If the ONS 15454 must communicate with a device on a network to which the ONS 15454 is not connected, packets are sent to this router to be distributed.

Demultiplex

To separate multiple multiplexed input streams from a common physical signal back into multiple output streams. Compare *Multiplexing*.

Destination

The endpoint where traffic exits an ONS 15454 network. Endpoints can be paths (STS or STS/VT for optical card endpoints), ports (for electrical circuits, such as DS1, VT, DS3, STS), or cards (for circuits on DS1 and Ethernet cards). See also STS, and VT.

DRAM

Dynamic Random-Access Memory.

Drop

See *Destination*.

DS-1

Digital Signal Level One.

DS1-14

Digital Signal Level One (14 ports).

DS1N-14

Digital Signal Level One (N-14 ports).

DS-3

Digital Signal Level Three.

DS3-12

Digital Signal Level Three (12 ports).

DS3N-12

Digital Signal Level Three (N-12 ports).

DS3XM-6

Digital Service, level 3 Trans-Multiplexer 6 ports.

DSX

(Digital Signal Cross-Connect Frame). A manual bay or panel where different electrical signals are wired. A DSX permits cross-connections by patch cords and plugs.

DWDM

(Dense Wave Division Multiplexing). A technology that increases the information carrying capacity of existing fiber optic infrastructure by transmitting and receiving data on different light wavelengths. Many of these wavelengths can be combined on a single strand of fiber.

DWDM Node

An ONS 15454 running Software Release 4.5. See *Non-DWDM Node*.

E**EDFA**

(Erbium Doped Fiber Amplifier). A type of fiber optical amplifier that transmits a light signal through a section of erbium-doped fiber and amplifies the signal with a laser pump diode. EDFA is used in transmitter booster amplifiers, in-line repeating amplifiers, and in receiver preamplifiers.

EFCA

Electrical Facility Connection Assembly.

EFT

Electrical Fast Transient/Burst.

EIA

(Electrical Interface Assemblies). Provides backplane connection points for the DS-1, DS-3, and EC-1 cards.

ELR

Extended Long Reach.

EMC

Electromagnetic compatibility.

EMI

(Electromagnetic Interference). Interference by electromagnetic signals that can cause reduced data integrity and increased error rates on transmission channels.

EML

Element Manager Layer.

EMS

Element Management System.

Envelope

The part of messaging that varies in composition from one transmittal step to another. It identifies the message originator and potential recipients, documents its past, directs its subsequent movement by the Message Transfer System (MTS), and characterizes its content.

EOW

(Engineered Orderwire). A permanently connected voice circuit between selected stations for technical control purposes.

ERDI

Enhanced Remote Defect Indicator.

ES

Errored Seconds.

ESD

Electrostatic Discharge.

ESF

Extended Super Frame.

Ethernet switch

A type of Ethernet LAN device that increases aggregate LAN bandwidth by allowing simultaneous switching of packets between switch ports. Ethernet switches subdivide previously shared LAN segments into multiple networks with fewer stations per network.

ETSI

European Telecommunications Standards Institute.

Extended SNCP

(Extended Subnetwork Connection Protection). Extended SNCP extends the protection scheme of a subnetwork connection protection ring (SNCP) beyond the basic ring configuration to the meshed architecture of several interconnecting rings. See *SNCP*.

External timing reference

A timing reference obtained from a source external to the communications system, such as one of the navigation systems. Many external timing references are referenced to Coordinated Universal Time (UTC).

F**Falling threshold**

A falling threshold is the counterpart to a rising threshold. When the number of occurrences drops below a falling threshold, this triggers an event to reset the rising threshold. See also *rising threshold*.

FC

Failure count.

FDDI

(Fiber Distributed Data Interface). LAN standard, defined by ANSI X3T9.5, specifying a 100-Mbps token-passing network using fiber optic cable, with transmission distances of up to 2 km. FDDI uses a dual-ring architecture to provide redundancy.

FE

Frame Bit Errors.

FG1

Frame Ground #1 (pins are labeled “FG1,” “FG2,” etc.)

FMEC

Front Mount Electrical Connection.

Frame

Logical grouping of information sent as a data link layer unit over a transmission medium. Often refers to the header and trailer, used for synchronization and error control that surrounds the user data contained in the unit.

FSB

Field Service Bulletin.

G

Gateway

An electronic repeater device that intercepts and steers electrical signals from one network to another.

GBIC

(Gigabit Interface Converter). A hot-swappable input/output device that plugs into a Gigabit Ethernet port to link the port with the fiber optic network.

Gbps

Gigabits per second.

GBps

Gigabytes per second.

GR-153-CORE

General Requirements #253 Council of Registrars.

GR-1089

General Requirements #1089.

GUI

Graphical User Interface.

H**Hard reset**

The physical removal and insertion of a TCC+ card, also known as reseating a card or performing a card pull.

HDLC

(High-Level Data Link Control). Bit-oriented, synchronous, data-link layer protocol developed by ISO. HDLC specifies a data encapsulation method on synchronous serial links using frame characters and checksums.

Hop

A hop is a way to quantify the 'length' of a network route to decide which redundant route is selected. Typically each path segment through a routing network device is considered one hop. For example, if an ENE is connected to a GNE that is connected to a router, the ENE has two hops to the router—one from itself to the GNE and a second from the GNE to the router. To ensure that a certain route is used only when all other routes are exhausted, assign it an unusually high hop count.

Host number

Part of IP address used to address an individual host within the network or subnetwork.

Hot swap

The process of replacing a failed component while the rest of the system continues to function normally.

I**IEC**

1. InterExchange Carrier.
2. International Electrotechnical Commission.

IEEE

Institute of Electrical and Electronics Engineers.

IETF

Internet Engineering Task Force.

Input alarms

Used for external sensors such as open doors, temperature sensors, flood sensors, and other environmental conditions.

I/O

Input/Output.

IP

(Internet Protocol). Network layer protocol in the TCP/IP stack offering a connectionless internetwork service. IP provides features for addressing, type-of-service specification, fragmentation and reassembly, and security.

IPPM

Intermediate-Path Performance Monitoring.

IP address

32-bit address assigned to host using TCP/IP. An IP address belongs to one of five classes (A, B, C, D, or E) and is written as 4 octets separated by periods (dotted decimal format). Each address consists of a network number, an optional subnetwork number, and a host number.

ITU-T

International Telecommunication Union - Telecommunication Standards Sector.

J**JRE**

Java Runtime Environment.

K**K bytes**

Automatic protection-switching bytes located in the SONET line overhead and monitored by equipment for an indication to switch to protection.

L**LAN**

(Local Area Network). High-speed, low error data network covering a relatively small geographic area. LANs connect workstations, peripherals, terminals, and other devices in a single building or other geographically limited area. Ethernet, FDDI, and Token Ring are widely used LAN technologies.

LCD

(Liquid Crystal Display). An alphanumeric display using liquid crystal sealed between two pieces of glass. LCDs conserve electricity.

LDCC

Line Data Communication Channel.

Line layer

Refers to the segment between two SONET devices in the circuit. The line layer deals with SONET payload transport, and its functions include multiplexing and synchronization. Sometimes called a maintenance span.

Line terminating equipment (LTE)

Refers to line cards which terminate the line signal in the ONS 15454.

Line timing mode

A node that derives its clock from the SONET lines.

Link budget

The difference between the output power and receiver power of an optical signal expressed in dB. Link refers to an optical connection and all of its component parts (optical transmitters, repeaters, receivers, and cables).

Link integrity

The network communications channel has link integrity if it is intact.

Lock Out

A method of switching traffic from one card to another, or one span to another (BLSRs), that prevents traffic from reverting to the card or span with the lock out applied. The lock out overrides other manual switching connections (force, manual, and exercise).

LOF

Loss of Frame.

Loopback test

Test that sends signals then directs them back toward their source from some point along the communications path. Loopback tests are often used to test network interface usability.

LOP

Loss of Pointer.

LOS

Loss of Signal.

LOW

(Local Orderwire). A communications circuit between a technical control center and selected terminal or repeater locations.

LTE

Line Terminating Equipment.

LVDS

Low-Voltage Differential Signal.

M**MAC**

Media Access Control.

MAC address

Standardized data link layer address that is required for every port or device that connects to a LAN. Other devices in the network use these addresses to locate specific ports in the network and to create and update routing tables and data structures. MAC addresses are six bytes long and are controlled by the IEEE. Also known as the hardware address, MAC-layer address, and physical address.

Maintenance user

A security level that limits user access to maintenance options only. See also *Superuser*, *Provisioning User*, and *Retrieve User*.

Managed device

A network node that contains an SNMP agent and resides on a managed network. Managed devices include routers, access servers, switches, bridges, hubs, computer hosts, and printers.

Managed object

In network management, a network device that can be managed by a network management protocol. Sometimes called an MIB object.

Mapping

A logical association between one set of values, such as addresses on one network, with quantities or values of another set, such as devices on another network.

Mbps

Megabits per second.

MBps

Megabytes per second.

MHz

Megahertz.

MIB

(Management Information Base). Database of network management information that is used and maintained by a network management protocol such as SNMP or CMIP. The value of a MIB object can be changed or retrieved using SNMP or CMIP commands, usually through a GUI network management system. MIB objects are organized in a tree structure that includes public (standard) and private (proprietary) branches.

MIME

Multipurpose Internet Mail Extensions.

MS

Multiplex Section.

MS-FERF

Multiplex Section Far-end Receive Failure.

MSP

Multiplex Section Protection.

MS-SPRing

(Multiplex Section Shared Protection Ring.) SDH ring architecture that provides working and protection fibers between nodes. If the working fiber between nodes is cut, traffic is automatically rerouted onto the protection fiber.

Multicast

Single packets copied by the network and sent to a specific subset of network addresses.

Multiplex payload

Generates section and line overhead, and converts electrical/optical signals when the electrical/optical card is transmitting.

Multiplexing

Scheme that allows multiple signals to be transmitted simultaneously across a single physical channel. Compare *Demultiplex*.

Mux/Demux

Multiplexer/Demultiplexer.

Muxed

Multiplexed. See *Multiplexing*.

N**NE**

(Network Element). In an Operations Support System, a single piece of telecommunications equipment used to perform a function or service integral to the underlying network.

NEBS

Network Equipment-Building Systems.

NEL

Network Element Layer.

Network number

Part of an IP address that specifies the network where the host belongs.

NML

Network Management Layer.

NMS

(Network Management System). System that executes applications that monitor and control managed devices. NMSs provide the bulk of the processing and memory resources required for network management.

Node

In this manual the term “node” usually refers to an ONS 15454. A node is the endpoint of a network connection or a junction common to two or more lines in a network. Nodes can be processors, controllers, or workstations. Nodes, which vary in routing and other functional capabilities, can be interconnected by links, and serve as control points in the network. Node is sometimes used generically to refer to any entity that can access a network.

Non-DWDM Node

An ONS 15454 running Software Release 4.1 or earlier. Nodes running Software Release 4.5 are termed “DWDM nodes.”

O**OAM&P**

(Operations, Administration, Maintenance, and Provisioning). Provides the facilities and personnel required to manage a network.

OC

Optical carrier.

OOS AS

Out of Service Assigned.

Optical amplifier

A device that amplifies an optical signal without converting the signal from optical to electrical and back again to optical energy.

Optical receiver

An opto-electric circuit that detects incoming lightwave signals and converts them to the appropriate signal for processing by the receiving device.

Orderwire

Equipment that establishes voice contact between a central office and carrier repeater locations. See *Local orderwire*.

OSI

Open Systems Interconnection.

OSPF

Open Shortest Path First.

OSS

Operations Support System.

OSS/NMS

Operations Support System/Network Management System.

Output contacts (controls)

Triggers that drive visual or audible devices such as bells and lights. Output contacts can control other devices such as generators, heaters, and fans.

P**Passive devices**

Components that do not require external power to manipulate or react to electronic output. Passive devices include capacitors, resistors, and coils.

Path Layer

The segment between the originating equipment and the terminating equipment. This path segment may encompass several consecutive line segments or segments between two SONET devices.

Payload

Portion of a cell, frame, or packet that contains upper-layer information (data).

PCM

Pulse Code Modulation.

PCMCIA

Personal Computer Memory Card International Association.

PCN

Product Change Notice(s).

PDI-P

STS Payload Defect Indication - Path.

Ping

(Packet internet grouper). ICMP echo message and its reply. Often used in IP networks to test the reachability of a network device.

Pointer justification

In SONET, the mechanism used to compensate for frequency and phase variations. Pointer justification counts indicate timing errors on SONET networks.

POP

Point of Presence.

PM

Performance Monitoring.

PPMN

(Path-Protected Mesh Network). PPMN extends the protection scheme of a Path Protection beyond the basic ring configuration to the meshed architecture of several interconnecting rings.

Priority queuing

Routing feature that divides data packets into two queues: one low-priority and one high-priority.

Protect card

A card in a protection pair or scheme that is provisioned as a protect card to the working card. If the working card fails, the protect card becomes active. See also *working card*.

Provisioning user

A security level that allows the user to access only provisioning and maintenance options in CTC. See also *Superuser*, *Maintenance user*, and *Retrieve user*.

PSC

Protection-Switching Count.

PSD

Protection-Switching Duration.

PTE

Path-Terminating Equipment.

Q**Queue**

In routing, a backlog of packets waiting to be forwarded over a router interface.

R**RAM**

Random Access Memory.

RDI-L

Remote Defect Indication - Line.

Red band

DWDM wavelengths are broken into two distinct bands: red and blue. The red band is the higher frequency band. The red band DWDM cards for the ONS 15454 SDH operate on wavelengths between 1547.72nm and 1560.61nm.

RES

Reserved.

Retrieve user

A security level that allows the user to retrieve and view CTC information but not set or modify parameters. See also *Superuser*, *Maintenance user*, and *Provisioning user*.

Revertive switching

A process that sends electrical interfaces (traffic) back to the original working card after the card comes back online.

Rising threshold

The number of occurrences (collisions) that must be exceeded to trigger an event.

RJ-45

Registered Jack #45 (8-pin).

RMA

Return Materials Authorization.

RMON

(Remote Network Monitoring). Allows network operators to monitor the health of the network with a Network Management System (NMS). RMON watches several variables, such as Ethernet collisions, and triggers an event when a variable crosses a threshold in the specified time interval.

RS-232

Recommended Standard #232 (ANSI Electrical Interface for Serial Communication).

Rx

Receive.

S**SCI**

Serial Communication Interface.

SCL

System Communications Link.

SDCC

Section Data Communication Channel.

SDH

(Synchronous Digital Hierarchy). European standard that defines a set of rate and format standards that are transmitted using optical signals over fiber. SDH is similar to SONET, with a basic SDH rate of 155.52 Mbps. Compare *SONET*.

SEF

Severely Errored Frame.

SELV

Safety Extra-Low Voltage.

SES

Severely Errored Seconds.

SF

Super Frame.

SML

Service Management Layer.

SMF

Single Mode Fiber.

SNCP

(Subnetwork Connection Protection Ring). Path-switched SDH rings that employ redundant, fiber-optic transmission facilities in a pair configuration. One fiber transmits in one direction and the backup fiber transmits in the other. If the primary ring fails, the backup takes over.

SNMP

(Simple Network Management Protocol). Network management protocol used almost exclusively in TCP/IP networks. SNMP monitors and controls network devices and manages configurations, statistics collection, performance, and security.

SNTP

(Simple Network Time Protocol). Using an SNTP server ensures that all ONS 15454 network nodes use the same date and time reference. The server synchronizes alarm timing during power outages or software upgrades.

Soft reset

A soft reset reloads the operating system, application software, etc., and reboots the TCC+ card. It does not initialize the ONS 15454 ASIC hardware.

SONET

(Synchronous Optical Network). High-speed synchronous network specification developed by Telcordia Technologies, Inc. and designed to run on optical fiber. STS-1 is the basic building block of SONET. Approved as an international standard in 1988.

Source

The endpoint where traffic enters an ONS 15454 network. Endpoints can be a path (STS or STS/VT for optical card endpoints), port (for electrical circuits, such as DS1, VT, DS3, STS), or card (for circuits on DS1 and Ethernet cards). See also *STS* and *VT*.

Span

An optical path between two nodes.

Spanning tree

A loop-free subset of a network topology. See also *STA* and *STP*.

SPE

(Synchronous Payload Envelope). A SONET term describing the envelope that carries the user data or payload.

SSM

(Synchronous Status Messaging). A SONET protocol that communicates information about the quality of the timing source using the S1 byte of the line overhead.

STA

(Spanning-Tree Algorithm). An algorithm used by the spanning tree protocol to create a spanning tree. See also *Spanning tree* and *STP*.

Standby card

A card that is not active or carrying traffic. A standby card can be a protect card or, after a protection switch, a working card can be a standby card.

Static route

A route that is manually entered into a routing table. Static routes take precedence over routes chosen by all dynamic routing protocols.

STP

1. Shielded Twisted Pair.
2. Spanning Tree Protocol. Bridge protocol that uses the spanning-tree algorithm to enable a learning bridge to dynamically work around loops in a network topology by creating a spanning tree. See also *Spanning tree* and *STA*.

STS

(Synchronous Transport Signal, used generically when speaking of SONET signals.)

STS-1

(Synchronous Transport Signal Level 1). Basic building block signal of SONET, operating at 51.84 Mbps for transmission over OC-1 fiber. Faster SONET rates are defined as STS-*n*, where *n* is a multiple of 51.84 Mbps. See also *SONET*.

Subnet mask

32-bit address mask used in IP to indicate the bits of an IP address that are used for the subnet address. Sometimes referred to simply as mask. See also *IP address mask* and *IP address*.

Subnetwork

In IP networks, a network confined to a particular subnet address. Subnetworks are networks segmented by a network administrator in order to provide a multilevel, hierarchical routing structure while shielding the subnetwork from the addressing complexity of attached networks. Sometimes called a subnet.

Subtending rings

SONET rings that incorporate nodes that are also part of an adjacent SONET ring.

Superuser

A security level that can perform all of the functions of the other security levels as well as set names, passwords, and security levels for other users. A superuser is usually the network element administrator. See also *Retrieve user*, *Maintenance user*, and *Provisioning user*.

Switching, Span

Span switching occurs when a working span fails. Traffic switches to the protect fibers between the nodes and then returns to the working fibers. Multiple span switches can occur at the same time.

Switching, Ring

Ring switching occurs when a span switch cannot recover traffic, such as when both the working and protect fibers fail on the same span. In a ring switch, traffic is routed to the protect fibers throughout the full ring.

SWS

SONET WAN switch.

SXC

SONET Cross Connect ASIC.

T**T1**

T1 transmits DS-1-formatted data at 1.544 Mbps through the telephone-switching network using AMI or B8ZS coding. See also *AMI*, *B8ZS*, and *DS-1*.

TAC

Technical Assistance Center.

Tag

Identification information, including a number plus other information.

TBOS

Telemetry Byte-Oriented Serial protocol.

TCA

Threshold Crossing Alert.

TCC+

Timing Communications and Control + Card

TCP/IP

Transmission Control Protocol/Internet Protocol

TDM

(Time Division Multiplexing). Allocates bandwidth on a single wire for information from multiple channels based on preassigned time slots. Bandwidth is allocated to each channel regardless of whether the station has data to transmit.

TDS

Time-Division Switching.

Telcordia

(Telcordia Technologies, Inc., formerly named Bellcore). Eighty percent of the U.S. telecommunications network depends on software invented, developed, implemented, or maintained by Telcordia.

TID

(Target Identifier). Identifies the particular network element (in this case, the ONS 15454) where each TL1 command is directed. The TID is a unique name given to each system at installation. See also *AID*.

TL1

Transaction Language 1.

TLS

(Transparent LAN Service). Provides private network service across a SONET backbone.

TMN

Telecommunications Management Network.

Transponder

Optional devices of a DWDM system providing the conversion of one optical wavelength to a precision narrow band wavelength. See also *DWDM*.

Trap

Message sent by an SNMP agent to an NMS (CTM), console, or terminal to indicate the occurrence of a significant event, such as an exceeded threshold. See also *CTM*.

Tributary

The lower-rate signal directed into a multiplexer for combination (multiplexing) with other low rate signals to form an aggregate higher rate level.

Trunk

Network traffic travels across this physical and logical connection between two switches. A backbone is composed of a number of trunks. See also *Backbone*.

TSA

Time-Slot Assignment.

TSI

Time-Slot Interchange.

Tunneling

Architecture that is designed to provide the services necessary to implement any standard point-to-point encapsulation scheme.

Tx

Transmit.

U**UAS**

Unavailable Seconds.

UDP/IP

User Datagram Protocol/Internet Protocol.

UID

User Identifier.

Unicast

The communication of a single source to a single destination.

Upstream

Set of frequencies used to send data from a subscriber to the head end.

UTC

Universal-Time Coordinated.

UTP

Unshielded Twisted Pair.

V**VDC**

Volts Direct Current.

Virtual fiber

A fiber that carries signals at different rates and uses the same fiber optic cable.

Virtual ring

Entity in a source-route bridging (SRB) network that logically connects two or more physical rings together either locally or remotely. The concept of virtual rings can be expanded across router boundaries.

Virtual wires

Virtual wires route external alarms to one or more alarm collection centers across the SONET transport network.

VLAN

(Virtual LAN). Group of devices located on a number of different LAN segments that are configured (using management software) to communicate as if they were attached to the same wire. Because VLANs are based on logical instead of physical connections, they are extremely flexible.

VPN

(Virtual Private Network). Enables IP traffic to travel securely over a public TCP/IP network by encrypting all traffic from one network to another. A VPN uses “tunneling” to encrypt all information at the IP level. See also *Tunneling*.

VT

(Virtual Tributary). A structure designed for the transport and switching of sub-DS3 payloads. See also *Tributary*.

VT1.5

Virtual Tributary that equals 1.544 Mbps.

VT layer

The VT layer or electrical layer occurs when the SONET signal is broken down into an electrical signal.

VT tunnel

VT tunnels allow electrical circuits to pass through ONS 15454 nodes without using ONS 15454 cross-connect card capacity.

W**W**

Watts.

WAN

Wide Area Network.

Working card

A card that is provisioned as an active, primary card. Traffic cards in a protection pair are provisioned as working or protect. See also *Protect card*.

X**XC**

Cross Connect

XCVT

Cross Connect Virtual Tributary.

X.25

Protocol providing devices with direct connections to a packet-switched network.

