



# DISC Commands

---

This chapter provides disconnect (DISC) commands for the Cisco ONS 15454, Cisco ONS 15310-MA, and Cisco ONS 15600.

## 9.1 DISC-TACC

(Cisco ONS 15454, ONS 15310-MA, and ONS 15600) The Disconnect Test Access (DISC-TACC) command disconnects the test access point (TAP) and puts the connection back to its original state (no splits). For more information on test access (TACC), refer to the [Cisco ONS SONET TL1 Reference Guide](#).

---

**Usage Guidelines**

For this command to be applicable, you must first create the TAP using the ED-<MOD\_PATH> command.

**Note**

If you send this command to an already disconnected TAP connection, an SADC error message is returned.

---

**Note**

If the system cannot release TAP, an SRTN error message is returned.

---

---

**Category**

Troubleshooting and Test Access

---

**Security**

Maintenance

---

**Input Format**

DISC-TACC:[<TID>]:<TAP>:<CTAG>;

---

**Input Example**

DISC-TACC:CISCO:8:123;

---

<b>Input Parameters</b>	<TAP>	The test access point number. The TAP number must be an integer with a range of 1 to 999. String  <b>Note</b> This command only supports disconnecting one TAP at a time.
-------------------------	-------	---

---