



CHAPTER

19

## RMV Commands

This chapter provides remove (RMV) commands for the Cisco ONS 15454, Cisco ONS 15310-CL, Cisco ONS 15310-MA, and Cisco ONS 15600.

### 19.1 RMV-<MOD2>

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Remove 10GFC, 10GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, D1VIDEO, DS1, DV6000, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OCH, OMS, OTS, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (RMV-<MOD2>) command removes a facility from service.

**Usage Guidelines** See [Table 27-1 on page 27-1](#) for supported modifiers by platform.

**Category** Ports

**Security** Maintenance

**Input Format** RMV-<MOD2>:<TID>:<AID>:<CTAG>[::];

**Input Example** RMV-EC1:CISCO:FAC-1-1:1;

**Input Parameters** <AID> Access identifier from the [“25.1 ALL” section on page 25-1](#)

## 19.2 RMV-EQPT

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Remove Equipment (RMV-EQPT) command removes equipment from the In Service (IS) state and places it into the Maintenance (MT) state.

<b>Usage Guidelines</b>	This command is only applicable to equipment that is in transition from the IS state to the MT state.		
<b>Category</b>	Equipment		
<b>Security</b>	Maintenance		
<b>Input Format</b>	RMV-EQPT:<TID>:<AID>:<CTAG>[:];		
<b>Input Example</b>	RMV-EQPT:CISCO:SLOT-1:1;		
<b>Input Parameters</b>	<table><tr><td>&lt;AID&gt;</td><td>Access identifier from the “<a href="#">25.14 EQPT</a>” section on page 25-33.</td></tr></table>	<AID>	Access identifier from the “ <a href="#">25.14 EQPT</a> ” section on page 25-33.
<AID>	Access identifier from the “ <a href="#">25.14 EQPT</a> ” section on page 25-33.		