



Raman Tuning

This chapter describes the Raman Tuning optical application for Cisco NCS 1010.

- [Overview of Raman Tuning, on page 1](#)

Overview of Raman Tuning

Raman Tuning Algorithm calculates and sets the different pump power values across five Raman pumps to obtain the target Raman Gain on a span. Raman tuning runs in both directions of the span independently at the node level. Raman tuning requires communication between peer nodes. Hence, OSC communication between the two nodes is a prerequisite for Raman Tuning.

Raman tuning algorithm uses the following parameters to calculate the pump powers necessary to achieve the target Raman gain.

- Fiber type
- Fiber length
- Loss on the fiber at each pump wavelength
- Loss on the fiber at the signal wavelength

If you configure a span length value, Raman tuning uses this value.

Raman tuning is disabled by default. Raman tuning is enabled if automatic link bring up is enabled. You can manually trigger Raman tuning if necessary. The NCS 1010 initiates the tuning process under the following circumstances:

- During the initial link bring up
- After a fiber cut
- After a power cycle event
- After a line card cold reload event
- After a DFB shut or unshut event
- After an OTS controller shut or unshut event on near end or far end node
- After modification of span length configuration

Raman tuning is traffic impacting. When Raman tuning is in progress, the amplifier on the far end of the span is turned off to block traffic. The Optical Safety Remote Interlock (OSRI) feature allows turning off the amplifier on the peer node for Raman tuning. Only the OSC is active on the link while Raman tuning is in progress.

At the LINE-TX port on the far end of the span, the dedicated Raman probe (DFB) is combined with the transmitted optical channels. The DFB laser at 191.1 THz is used to perform a link continuity check on the Raman span for optical safety. The DFB laser is used during Raman tuning.

At the LINE-RX port, five wavelengths between 1424 nm and 1495 nm are inserted in the counter propagating direction of the signal to provide amplification using the Raman effect for both C and L band optical channels.

The system triggers Raman tuning when a link goes down and comes back up. After completing Raman tuning successfully, soft reloads, RP reloads, Raman OSRI change, and Raman Force APR change do not retrigger Raman tuning.

The following table lists and describes the different Raman Tuning Status.

Raman Tuning Status	Description
WORKING – MEASUREMENT	The algorithm is measuring the span loss on the link.
WORKING – CALCULATION	The algorithm is calculating the gain target and required pump powers.
WORKING – OPTIMIZATION	The algorithm is optimizing the pump powers.
TUNED	Raman tuning is complete.
BLOCKED	The system is unable to perform Raman tuning. This status can occur because the link is down or the system detected high Raman Back Reflection.
DISABLED	Raman tuning is disabled.

Raman tuning works in the following three modes:

- Auto mode: Raman tuning defines the target gain and sets the pump powers and DFB VOA attenuation to achieve the target gain overwriting user configuration.
- Gain mode: User defines the gain target and Raman tuning sets the pump powers and DFB VOA attenuation to achieve the target gain.
- Manual mode: User disables Raman tuning and manually configures the Raman pumps and DFB VOA attenuation.



Note

- If Raman back reflection (BR) is high, Raman tuning turns the Raman pumps off and goes into blocked state. High BR can damage the optics. When you clear the high BR and BR is at acceptable levels, the system triggers Raman tuning and turns the Raman pumps on.
- If a Raman span has a span loss value less than 14 dB, Raman tuning goes into the BLOCKED state. The NCS 1010 performs a span loss check at system startup to verify if you can use Raman amplification effectively on the span.

View Raman Tuning Status

You can view the Raman tuning status using **show olc raman-tuning** command. The following sample is an output of the **show olc raman-tuning** command.

```
RP/0/RP0/CPU0:ios#sh olc raman-tuning
Tue Mar 21 06:11:36.944 UTC

Controller : Ots0/0/0/0
Raman-Tuning Status : TUNED
Tuning Complete Timestamp : 2023-03-20 07:54:00
Estimated Max Possible Gain : 19.8 dB
Raman Gain Target : 16.0 dB
Gain Achieved on Tuning Complete : 15.7 dB
```

You can view the Raman tuning status for individual controllers using **show olc raman-tuning controller ots r/s/i/p** command. The following sample is an output of the **show olc raman-tuning controller ots r/s/i/p** command.

```
RP/0/RP0/CPU0:ios#sh olc raman-tuning controller ots 0/0/0/0
Tue Mar 21 06:13:26.535 UTC

Controller : Ots0/0/0/0
Raman-Tuning Status : TUNED
Tuning Complete Timestamp : 2023-03-20 07:54:00
Estimated Max Possible Gain : 19.8 dB
Raman Gain Target : 16.0 dB
Gain Achieved on Tuning Complete : 15.7 dB
```

To view the individual Raman pump information and other parameters, use the **show controllers ots r/s/i/p raman-info** command.

```
RP/0/RP0/CPU0:ios#show controllers ots 0/0/0/0 raman-info
Fri Apr 1 06:40:33.849 UTC
```

```
Alarm Status:
-----
Detected Alarms: None
```

```
Alarm Statistics:
-----
RAMAN-AUTO-POW-RED = 0
RAMAN-1-LOW-POW = 0
RAMAN-2-LOW-POW = 0
RAMAN-3-LOW-POW = 0
RAMAN-4-LOW-POW = 0
RAMAN-5-LOW-POW = 0
RAMAN-1-HIGH-POW = 1
RAMAN-2-HIGH-POW = 0
RAMAN-3-HIGH-POW = 0
RAMAN-4-HIGH-POW = 0
RAMAN-5-HIGH-POW = 0
```

```
Parameter Statistics:
-----
Raman Safety Control mode = auto
Raman Osri = OFF
Raman Force Apr = OFF
Composite Raman Power = 886.60 mW
```

```
RAMAN Pump Info:
-----
Instance          Wavelength (nm)  Power (mW)
```

```

1          1424.00          257.60
2          1438.00          255.10
3          1457.00          71.60
4          1470.00          127.50
5          1495.00          170.10

```

Configured Parameters:

```

-----
Raman Safety Control mode = auto
Raman Osri = OFF
Raman Force Apr = OFF

```

RAMAN Pump Info:

```

-----
Instance      Power (mW)
1              45.00
2              40.00
3              40.00
4              40.00
5              35.00

```

The following sample output



Note In the previous output, there are two sections for Raman Pump Info that show different values. The first Raman Pump Info section displays operational data (current pumps power values). The second Raman Pump Info section displays Raman Pump Power configuration. In this case, the default pump powers are displayed. Use the **raman-tx-power *pumpvaluevalue*** command to configure individual Raman pump powers.

Configure Raman Tuning

The following configurations are available for Raman Tuning:

Disable Raman Tuning

You can disable Raman tuning for a controller. Use the following commands to disable Raman tuning.

configure

optical-line-control

controller ots *Rack/Slot/Instance/Port*

raman-tuning disable

commit

end

The following is a sample configuration that disables Raman tuning.

```

RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#optical-line-control
RP/0/RP0/CPU0:ios(config-olc)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-olc-ots)#raman-tuning disable
RP/0/RP0/CPU0:ios(config-olc-ots)#commit
RP/0/RP0/CPU0:ios(config-olc-ots)#end

```

Enable Raman Tuning

You can enable Raman tuning for a controller. Use the following commands to enable Raman tuning.

```
configure  
optical-line-control  
controller ots Rack/Slot/Instance/Port  
raman-tuning enable  
commit  
end
```

The following is a sample configuration that enables Raman tuning.

```
RP/0/RP0/CPU0:ios#configure  
RP/0/RP0/CPU0:ios(config)#optical-line-control  
RP/0/RP0/CPU0:ios(config-olc)#controller ots 0/0/0/0  
RP/0/RP0/CPU0:ios(config-olc-ots)#raman-tuning enable  
RP/0/RP0/CPU0:ios(config-olc-ots)#commit  
RP/0/RP0/CPU0:ios(config-olc-ots)#end
```

Configure Raman Gain Target

You can manually set the desired Raman gain target. Use the following commands to set the Raman gain target.

```
configure  
optical-line-control  
controller ots Rack/Slot/Instance/Port  
raman-tuning raman-gain-target value  
commit  
end
```

You can configure Target Raman Gain of 8.0 to 25.0 dB in multiples of 0.1 dB. The following is a sample configuration that configures the Raman gain target to 18 dB.

```
RP/0/RP0/CPU0:ios#configure  
RP/0/RP0/CPU0:ios(config)#optical-line-control  
RP/0/RP0/CPU0:ios(config-olc)#controller ots 0/0/0/0  
RP/0/RP0/CPU0:ios(config-olc-ots)#raman-tuning raman-gain-target 180  
RP/0/RP0/CPU0:ios(config-olc-ots)#commit  
RP/0/RP0/CPU0:ios(config-olc-ots)#end
```

Configure Raman Pump Powers

You can set the Raman pump powers manually. Use the following commands to set the pump powers.

```
configure  
controller ots Rack/Slot/Instance/Port  
raman-tx-power pumpvaluevalue  
commit  
end
```

The following is a sample configuration that sets the pump power of the first Raman pump to 211 mW.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config-olc)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-olc-ots)#raman-tx-power 1 value 21100
RP/0/RP0/CPU0:ios(config-olc-ots)#commit
RP/0/RP0/CPU0:ios(config-olc-ots)#end
```

Configure DFB VOA Attenuation

Raman tuning algorithm changes the DFB VOA to adjust the DFB Tx power depending on the span loss. The following table lists the DFB TX power for different span loss ranges.

Span Loss	DFB TX Power
14-25 dB	-5 dB
25-33 dB	0 dB
>33 dB	5 dB

Use the following commands to configure DFB VOA attenuation when Raman Tuning is disabled and you want to configure the DFB manually.

configure

controller dfb *Rack/Slot/Instance/Port*

tx-voa-attenuation *value*

commit

end

The following is a sample configuration that sets the DFB VOA attenuation to 10 dB.

```
RP/0/RP0/CPU0:ios#conf
Wed Jul 6 04:45:47.720 UTC
RP/0/RP0/CPU0:ios(config)#controller dfb 0/0/0/0
RP/0/RP0/CPU0:ios(config-Dfb)#tx-voa-attenuation 100
RP/0/RP0/CPU0:ios(config-Dfb)#commit
RP/0/RP0/CPU0:ios(config-Dfb)#end
```

Initiate Raman Tuning

You can trigger Raman tuning manually. Use the following exec command to trigger Raman tuning.

olc start-raman-tuning controller ots *Rack/Slot/Instance/Port*

The following is a sample configuration that initiates Raman tuning.

```
RP/0/RP0/CPU0:ios#olc start-raman-tuning controller ots 0/0/0/0
```