



## Symbols

? command **196**

## A

abbreviated commands, entering **195**

abort command **167**

aborting command output **1102**

administration EXEC mode **147**

alarm correlation, logging **189**

alarm logging

    correlation **189**

    locations **189**

    severity levels **189**

alias command **1115**

aliases, introduction **1115**

alphanumeric LED display

    DRP PLIM (illustration) **132**

    PRP-2 (illustration) **114, 133**

alternative configuration, loading at startup **163**

anchor characters **1142**

## B

bring up

    standalone router, first time **121**

    verification

        standalone router **122**

## C

capitalization, keyboard shortcuts **1119**

cards

    DRP PLIM **132**

    PRP-2, (illustration) **114, 133**

card type, displayed in prompt **139**

characters

    anchor **1142**

    parentheses for pattern recall **1143**

    pattern ranges **1140**

    special **1140**

    underscore wildcard **1142**

Cisco IOS XR software, supported standalone systems **11**

cisco-support user group **142**

clear command **163, 1132**

clear configuration commit command **188**

clear configuration sessions command **1133**

CLI

    introduction **19**

    prompt **139**

CLI (command-line interface)

    identifying command mode **139, 146**

    introduction **19**

clock, setting the router time **174**

clock set command **175**

clock timezone command **175**

clock update-calendar command **175**

command-line interface *See CLI*

command mode

    administration EXEC **147**

    configuration submodes **148**

    EXEC **147**

    global configuration **148**

    interface configuration **148**

    navigation **145**

- navigation example **150**  
 ROM monitor **149**  
 router configuration **148**  
 router submode configuration **149**
- commands  
 abbreviated **195**  
 aliases **1115**  
 applying templates **1114**  
 completing a partial command **198**  
 creating templates **1112**  
 identifying syntax errors **198**  
 more prompt, responding to **1101**  
 no form **199**  
 on-screen help **196**  
 output  
     filtering **1102**  
     halting **1102**  
     narrowing **1102**  
     redirecting to a file **1102**  
 recall deleted entries **1117**  
 redisplaying **1117**  
 wildcards **1111**  
 wrapped lines, editing **199**
- commit best-effort command **164**  
 commit command **164**  
 commit comment command **164**  
 commit confirmed command **164**  
 commit force command **165**
- commitIDs  
 clearing **188**  
 displaying **184**  
 displaying changes **184**  
 loading changes **186**
- commit label command **164**  
 commit replace command **165**  
 committing a configuration **164**  
 complex expressions **1141**
- configuration  
 clearing changes **163**  
 committing **164**  
 displaying **156**  
 ending a session **167**  
 files, storage **166**  
 loading an alternate **163**  
 mode, entering EXEC commands **149**  
 overview **151**  
 reloading a failed configuration **166**  
 submodes **148**  
 target configuration  
     loading from a file **163**  
     saving to a file **162**
- templates  
 applying **1114**  
 creating **1112**
- configurations  
 standalone router **11**
- configure command **154**  
 configure exclusive command **155**
- Console port  
 connection **112, 131**  
 DRP PLIM (illustration) **132**  
 PRP-2 (illustration) **114, 133**
- correlation, alarm logging **189**
- CPU0 module **140**
- Ctrl-Z command **167**
- cursor movement **1119**
- 
- D**
- debug command **1125, 1127**  
 debugging  
     disabling for all services, all sessions **1128**  
     disabling for all services, one session **1128**  
     disabling for a service **1128**  
     displaying features **1125**  
     displaying status **1127**  
     enabling **1127**
- default SDR **129**

designated shelf controller

*See DSC*

domain name, configuration **177**

domain name command **177, 178**

domain name server, configuration **177**

domain name-server command **177, 178**

DSC

selection and identification **111**

## E

end command **167**

errors

syntax **198**

Ethernet interface

configuring **168**

displaying **169**

DRP PLIM (illustration) **132**

PRP-2 (illustration) **114, 133**

EXEC commands, entering in configuration modes **149**

EXEC mode **147**

exit command **166, 167**

expressions

complex **1141**

regular **1139**

extensible markup language *See XML*

## F

file, redirecting output to **1102**

filters, command output **1102**

flash disk

configuration file storage **166**

## G

global configuration mode **148**

## H

halting command output **1102**

history, commands **1116**

hostname

configuration **168**

displayed in prompt **140**

hostname command **168**

host services and applications

domain services

domain name-server command **178**

HTTP server configuration **179**

## I

interface configuration mode **148**

interface MgmtEth command **172**

interfaces, verifying operation **1134**

introduction **139**

ipv4 address command **172**

## K

keyboard shortcuts

capitalization **1119**

command history **1117**

cursor movement **1119**

deleting text **1119**

recalling deleted entries **1117**

transposing letters **1119**

## L

line wrap, editing long lines **199**

load command **163**

load commit changes command **187**

load configuration failed commit command **166**

load rollback changes command **188**

logging  
    alarm correlation **189**  
    configuration **190**  
    output locations **189**  
    severity levels **189**  
logging buffered command **189, 191**  
logging command **190**  
logging console command **189, 190**  
logging console disable command **192**  
logging in **139, 146**  
logging monitor command **189**  
logging trap command **189, 190**  
long lines, editing **199**  
low memory warning, removing configurations **1132**

---

**M**

Management Ethernet interface  
    configuring **168**  
    displaying **169**  
    DRP PLIM (illustration) **132**  
    establishing a connection through **138**  
    name syntax **169**  
    PRP-2 illustration **133**  
memory  
    displaying system memory **1131**  
    low memory warnings **1130**  
    removing configurations **1132**  
mode  
    administration EXEC **147**  
    configuration submodes **148**  
    EXEC **147**  
    global configuration **148**  
    interface configuration **148**  
    ROM monitor **149**  
    router configuration **148**  
    router submode configuration **149**  
modem connection  
    DRP PLIM (illustration) **132**

PRP-2 (illustration) **114, 133**  
module  
    number displayed in prompt **140**  
More prompt **1101**  
multishelf system  
    software requirements **120**

---

**N**

name, router  
    configuring **168**  
    displayed in prompt **140**  
named SDR **129**  
netadmin user group **142**  
network connection, overview **131**  
no, command form **199**  
no debug command **1128**

---

**O**

operator user group **142**  
owner SDR **129**

---

**P**

partial command, entry **198**  
pattern  
    alternation **1142**  
    multiple-character **1141**  
    recall **1143**  
ping command **1123**  
prompt **139**  
PRP-1, not supported **113**  
PRP-2, connections **113**

---

**R**

rack number

- displayed in prompt **139**
- redirecting command output **1102**
- rollback
  - configuration
    - loading changes to the target configuration **187**
    - overview **183**
    - previewing changes **185**
    - procedure **185**
    - rollback failure **183**
  - packages
    - package incompatibility **183**
- rollback configuration command **186**
- ROM monitor
  - mode **149**
- root command **167**
- root-lr user group **142**
- root-system user group **142**
- route processors
  - DRP PLIM (illustration) **132**
  - PRP-2 illustration **114, 133**
- router
  - clock setting **174**
  - name configuration **168**
  - name displayed in prompt **140**
  - verification
    - standalone router **122**
- router configuration mode **148**
- router static address family ipv4 command **172**
- router submode configuration **149**

---

- S**
- save configuration command **162**
- SDR
  - introduction **129**
  - named **129**
  - owner **129**
- secure domain router
  - See SDR*
- serviceadmin user group **142**
- session
  - configuration overview **151**
  - ending **167**
- shortcuts
  - capitalization **1119**
  - command history **1117**
  - cursor movement **1119**
  - deleting text **1119**
  - recalling deleted entries **1117**
  - transposing letters **1119**
- show aaa userdb command **193**
- show aaa usergroup command **144, 193**
- show cli history brief location **1117**
- show cli history detail location **1118**
- show clock command **175**
- show configuration command **160, 162, 1100, 1122**
- show configuration commit changes ? command **184**
- show configuration commit changes command **184, 1133**
- show configuration commit list **1133**
- show configuration commit list command **184, 1133**
- show configuration failed command **161, 1129**
- show configuration failed load command **162**
- show configuration failed noerror command **162, 1129**
- show configuration failed startup command **1129**
- show configuration merge command **160**
- show configuration rollback changes command **185**
- show configuration sessions command **153, 1133**
- show context command **1122**
- show controller command **1122**
- show controllers command **1122**
- show debug command **1122, 1127**
- show debug conditions command **1128**
- show environment command **127, 1101, 1122**
- show exception command **1122**
- show history **1116**
- show hosts command **178**
- show install command **1122**
- show interfaces brief command **169**

- show interfaces command **1122, 1134**  
 show interfaces MgmtEth command **173**  
 show ipv4 interface brief command **1134**  
 show ipv4 interface command **1134**  
 show ipv6 interface brief command **1134**  
 show ipv6 interface command **1134**  
 show logging command **191, 1123**  
 show memory command **1123, 1131**  
 show memory summary command **1131, 1133**  
 show platform command **125**  
 show processes blocked command **1123**  
 show redundancy command **126, 1123**  
 show running-config command **156, 158, 1100, 1123**  
 show running-config sanitized command **158, 159**  
 show task supported command **141, 193**  
 show tech-support command **1100, 1123**  
 show user command **143, 1123**  
 show user group command **144**  
 show user tasks command **143**  
 show variables boot command **1122**  
 show version command **124, 1100, 1123**  
 Simple Network Management Protocol **110**  
 slot number  
   displayed in prompt **140**  
 SNMP (Simple Network Management Protocol) **110**  
 software packages  
   configuration rollback failure **183**  
 special characters **1140**  
 ssh server command **138**  
 standalone router  
   bring up **121**  
   supported hardware **11**  
   supported systems **11**  
   verification after bring up **122**  
 start up  
   standalone router, first time **121**  
   verification  
     standalone router **122**  
 stopping command output **1102**  
 submodes, configuration **148**  
 syntax  
   anchor characters **1142**  
   character pattern ranges **1140**  
   complex regular expressions **1141**  
   error identification **198**  
   pattern alternation **1142**  
   pattern recall **1143**  
   regular expressions **1139**  
   special characters **1140**  
   wildcard underscore **1142**  
 sysadmin user group **142**
- 
- T**
- tab key **198**  
 target configuration  
   clearing changes **163**  
   loading from a file **163**  
   saving to a file **162**  
 task group, introduction **141**  
 task ID  
   displaying **143**  
   introduction **141**  
 telnet ipv4 server command **138**  
 telnet ipv6 server command **138**  
 telnet server command **181**  
 Telnet server configuration **179**  
 templates  
   applying **1114**  
   creating **1112**  
 terminal connection  
   DRP PLIM (illustration) **132**  
   PRP-2 (illustration) **114, 133**  
 terminal server, establishing a connection through **136**  
 terminal settings, default values **116, 135, 137**  
 time, setting the router clock **174**  
 time zone, setting the router clock **174**  
 traceroute command **1124**

troubleshooting  
  basic commands [1121](#)  
  displaying system memory information [1131](#)  
  errors at startup [1129](#)  
  failed commit operation [1129](#)  
  low memory warnings [1130](#)  
type, card type displayed in prompt [139](#)

---

## U

undebug all command [1128](#)  
underscore wildcard character [1142](#)  
user access  
  task IDs, displaying [143](#)  
user groups  
  displaying [143](#)  
  introduction [141](#)  
  predefined [142](#)  
user interfaces  
  CLI [19](#)  
  SNMP [110](#)  
  XML API [110](#)

---

## W

warning, low memory [1130](#)  
wildcards [1111](#)

---

## X

XML  
  API [110](#)  
  host service configuration [179](#)

