



Packet-over-SONET Interface Commands on the Cisco IOS XR Software

This module provides command line interface (CLI) commands for configuring Packet-over-SONET/SDH (POS) on the Cisco XR 12000 Series Router.

This module describes the Cisco IOS XR commands used to configure, monitor, and troubleshoot Packet-over-SONET/SDH (POS).

POS provides a method for efficiently carrying data packets in SONET or Synchronous Digital Hierarchy (SDH) frames. High-bandwidth capacity and efficient link utilization are characteristics that make POS largely preferred for building the core of data networks. POS uses PPP in High-Level Data Link Control (HDLC)-like framing for data encapsulation at Layer 2 (data link) of the Open System Interconnection (OSI) stack. This method provides efficient packet delineation and error control.

In addition to high-bandwidth efficiency, POS offers secure and reliable transmission for data. Reliable data transfer depends on timing integrity.

The real-time POS functionality is performed in hardware, according to the hardware configuration setup. Configured hardware events are detected by the framer application-specific integrated circuits (ASICs) and the control is passed to the software. The generic POS driver is responsible for providing a mechanism to configure the hardware on a per-interface basis, to handle interface state transitions, and to collect POS-related statistics.

- [crc \(POS\), page 2](#)
- [encapsulation \(POS\), page 4](#)
- [interface pos, page 6](#)
- [keepalive \(POS\), page 8](#)
- [pos, page 10](#)
- [show interfaces pos, page 12](#)
- [transmit-delay, page 15](#)

crc (POS)

To set the length of the cyclic redundancy check (CRC) on a Packet-over-SONET/SDH (POS) interface, use the **crc** command in POS configuration mode. To return the CRC setting on a POS interface to the 32-bit default setting, use the **no** form of this command.

```
crc {16|32}
```

```
no crc [16|32]
```

Syntax Description

16	Sets 16-bit CRC mode.
32	Sets 32-bit CRC mode. The default is 32 bits.

Command Default

The default CRC mode is 32 bits.

Command Modes

POS configuration

Command History

Release	Modification
Release 3.2	This command was introduced.

Usage Guidelines

CRC is an error-checking technique that uses a calculated numeric value to detect errors in transmitted data. The designators 16 and 32 indicate the length (in bits) of the frame check sequence (FCS). A CRC of 32 bits provides more powerful error detection, but adds overhead. Both the sender and receiver must use the same setting.

CRC-16, the most widely used error checking method throughout the United States and Europe, is used extensively with WANs. CRC-32 is specified by IEEE standard 802 and as an option by some point-to-point transmission standards. It is often used on Switched Multimegabit Data Service (SMDS) networks and LANs.

Task ID

Task ID	Operations
pos-dpt	read, write

Examples

In this example, the 32-bit CRC on POS interface 0/1/0/2 is enabled:

```
rack/slot/module (config) # interface POS 0/1/0/2
rack/slot/module (config-if) # POS
```

rack/slot/module (config-if-pos)# **crc 32**

Related Commands

Command	Description
transmit-delay , on page 15	Specifies a number of flag sequences to be inserted between the packets.

encapsulation (POS)

To set the Layer 2 encapsulation of an interface, use the **encapsulation** command in interface configuration mode. To restore the system to the default encapsulation, use the **no** form of this command.

encapsulation {hdlc| ppp| frame-relay [ietf] }

no encapsulation [hdlc| ppp| frame-relay [ietf]]

Syntax Description

hdlc	Enables Cisco High-Level Data Link Control (cHDLC) encapsulation on the interface. This is the default encapsulation type.
ppp	Enables Point-to-Point Protocol (PPP) encapsulation on the interface.
frame -relay	Enables Frame Relay encapsuation on the interface.
ietf	(Optional) Enables RFC1490/RFC2427 encapsulation.

Command Default

For Packet-over-SONET/SDH (POS) interfaces, the default encapsulation is HDLC.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.2	This command was introduced.
Release 3.4.0	The frame-relay and ietf keywords were added.

Usage Guidelines

The task ID hdlc (r,w) is required for use of the keyword **hdlc**. The task ID ppp(r,w) is required for use of the keyword **ppp**. The task ID fr(r,w) is required for use of the keyword **frame-relay**.

Task ID

Task ID	Operations
hdlc OR ppp OR fr	read, write
interface	read, write

Examples

In this example, PPP encapsulation is set on POS interface 0/3/0/1:

```
RP/0/0/CPU0:router(config)# interface POS 0/3/0/1  
RP/0/0/CPU0:router(config-if)# encapsulation ppp
```

Related Commands

Command	Description
show interfaces pos, on page 12	Displays information about a POS interface.
show ppp interfaces	Displays PPP state information for an interface.

interface pos

To enter interface or subinterface configuration mode for a POS interface or subinterface, use the **interface pos** command in global configuration mode. To delete a POS configuration, use the **no** form of this command.

interface pos *interface-path-id* [.subinterface] {**l2 transport**| **point-to-point**}

no interface pos *interface-path-id* [.subinterface] {**l2 transport**| **point-to-point**}

Syntax Description

<i>interface-path-id</i> [.subinterface]	Physical interface or virtual interface followed by the optional subinterface path ID. Naming notation is <i>interface-path-id.subinterface</i> . The period in front of the subinterface value is required as part of the notation. For more information about the syntax for the router, use the question mark (?) online help function.
l2transport	(Optional) Configures the interface to function as an attachment circuit (AC) on one endpoint of a Layer 2 link.
point-to-point	(Optional) Configures interface to function as one endpoint of a point-to-point link.

Command Default

No default behavior or values

Command Modes

Global configuration

Command History

Release	Modification
Release 3.2	This command was introduced.

Usage Guidelines

Subinterfaces of a POS interface can only be configured using the **l2transport** keyword, if Frame Relay encapsulation is configured on the POS interface, using the **encapsulation frame-relay** command. Interfaces configured to use HDLC or PPP encapsulation cannot be configured using the **l2transport** keyword.

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.

◦ *port*: Physical port number of the interface.

- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read, write

Examples

The following example shows how to enter interface configuration mode for a POS interface:

```
RP/0/0/CPU0:router(config)# interface pos 0/1/0/0
RP/0/0/CPU0:router(config-if)#
```

The following example shows how to create a subinterface on a POS interface in slot 1, subslot 1, port 2 and enter subinterface configuration mode:

```
RP/0/0/CPU0:router(config)# interface pos 0/1/1/2.1
RP/0/0/CPU0:router(config-subif)#
```

The following example shows how to configure frame-relay encapsulation on the main POS interface before being able to configure an AC subinterface:

```
RP/0/0/CPU0:router# interface pos 0/1/0/0
RP/0/0/CPU0:router(config-if)# encapsulation frame-relay
RP/0/0/CPU0:router(config-if)# commit
RP/0/0/CPU0:router(config-if)# exit
RP/0/0/CPU0:router(config)# interface pos 0/1/0/0.1 l2transport
RP/0/0/CPU0:router(config-subif)# commit
```

Related Commands

Command	Description
show interfaces pos, on page 12	Displays information about a POS interface.

keepalive (POS)

To set the keepalive timer for a specific interface, use the **keepalive** command in interface configuration mode. To reset the keepalive timer to the default of 10 seconds, use the **no** form of this command.

keepalive {*interval* [*retry*] **disable**}

no keepalive

Syntax Description

<i>interval</i>	Number of seconds (from 1 to 30) between keepalive messages. The default is 10.
<i>retry</i>	(Optional) Number of keepalive messages (from 1 to 255) that can be sent to a peer without a response before transitioning the link to the down state. The default is 5 for interfaces with PPP encapsulation, and 3 for interfaces with HDLC encapsulation.
disable	Turns off the keepalive timer.

Command Default

The default interval is 10 seconds between keepalive messages. The default number of retry keepalive messages that can be sent without a response is 5 for interfaces with PPP encapsulation, and 3 for interfaces with HDLC encapsulation. However, when more than 5 (or 3) keepalive messages are sent to a peer without a response, the link transitions to the down state.

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.2	This command was introduced.
Release 3.9.0	The <i>retry</i> argument was added.

Usage Guidelines

cHDLC keepalives require that the **keepalive** command is configured the same way on both routers. The two connected routers have no way of negotiating the keepalive value, because there is no way for the routers to tell each other what their configured values are. The keepalive value configured on each router (local and partner) sets the rate at which the Cisco IOS XR software sends packets. It also sets the rate at which the local end expects to receive incoming packets.

To set the keepalive value to the default value, use the **keepalive** command without specifying a value for the *seconds* argument.

If three keepalives are sent to the peer and no response is received from the peer, then the link makes the transition to the down state.

Task ID

Task ID	Operations
hdlc	read, write
ppp	read,write

Examples

This example shows how to configure keepalives for 3 seconds on POS interface 0/7/0/1:

```
RP/0/0/CPU0:router(config)# interface POS 0/7/0/1  
RP/0/0/CPU0:router(config-if)# keepalive 3
```

pos

To access the POS configuration submode, use the **pos** command in interface configuration mode.

pos

Command Default

No default behavior or values

Command Modes

Interface configuration

Command History

Release	Modification
Release 3.2	This command was introduced.

Usage Guidelines

When you issue the **pos** command in interface configuration mode for a POS interface, the CLI prompt changes to “config-if-pos,” indicating that you have entered POS configuration submode. In the following sample output, the question mark (?) online help function displays all the commands available under POS configuration submode:

```
RP/0/0/CPU0:router(config)# interface POS 0/1/0/2
RP/0/0/CPU0:router(config-if)# POS
RP/0/0/CPU0:router(config-if-pos)# ?

  commit          Commit the configuration changes to running
  crc             Set the CRC on a POS interface
  describe        Describe a command without taking real actions
  do              Run an exec command
  exit            Exit from this submode
  no              Negate a command or set its defaults
  show            Show contents of configuration
  transmit-delay  Set POS transmit delay on an interface
```

Task ID

Task ID	Operations
pos-dpt	read, write

Examples

The following example shows how to access the POS configuration submode from the POS configuration mode:

```
RP/0/0/CPU0:router(config)# interface POS 0/1/0/2
RP/0/0/CPU0:router(config-if)# POS
RP/0/0/CPU0:router(config-if-pos)#
```

Related Commands

Command	Description
crc (POS), on page 2	Sets the length of the CRC on a Packet-over-SONET/SDH (POS) interface.
transmit-delay, on page 15	Specifies a number of flag sequences to be inserted between the packets.

show interfaces pos

To display information about a POS interface, use the **show interfaces pos** command in EXEC mode.

show interfaces pos *interface-path-id* [**accounting** [**rates**]] **brief**| **description**| **detail**] [**location** *node-id*]

Syntax Description

<i>interface-path-id</i>	(Optional) Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
accounting	(Optional) Displays accounting information for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
rates	(Optional) Displays interface accounting rates for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
brief	(Optional) Displays brief output for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
description	Displays descriptive output for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
detail	(Optional) Displays detailed output for all POS interfaces on the router, for a specific POS interface instance, or for all POS interfaces on a specific node.
location <i>node-id</i>	(Optional) Displays detailed POS information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

Enter the **show interfaces pos** command without including any of the optional keywords or arguments to display detailed information about all POS interfaces configured on the router.

Command Modes

EXEC

Command History

Release	Modification
Release 3.2	This command was introduced.

Usage Guidelines

For the *interface-path-id* argument, use the following guidelines:

- If specifying a physical interface, the naming notation is *rack/slot/module/port*. The slash between values is required as part of the notation. An explanation of each component of the naming notation is as follows:
 - *rack*: Chassis number of the rack.
 - *slot*: Physical slot number of the line card.
 - *module*: Module number. A physical layer interface module (PLIM) is always 0.
 - *port*: Physical port number of the interface.
- If specifying a virtual interface, the number range varies, depending on interface type.

Task ID

Task ID	Operations
interface	read

Examples

The following example shows how to display summarized information for a POS interface on a specific node:

```
RP/0/0/CPU0:router# show interfaces pos summary location 0/1/CPU0
```

```
Interface Type          Total    UP      Down    Admin Down
-----
ALL TYPES                4        1       1       2
-----
IFT_POS                  4        1       1       2
```

Table 1: show interfaces pos summary Field Descriptions

Field	Description
Intf Type	Type of interface described in the display.
Total	Total number of configured interfaces of the specified type.
Up	Number of interfaces of the specified type that are in the “Up” state.
Down	Number of interfaces of the specified type that are in the “Down” state.
Admin Down	Number of interfaces of the specified type that are in the “Admin Down” state.

The following example shows how to display brief information for a specific POS interface:

```
RP/0/0/CPU0:router# show interfaces pos 0/2/0/0 brief
```

```
Intf          Intf          LineP          Encap  MTU          BW
```

show interfaces pos

```

-----
      Name           State           State           Type (byte)   (Kbps)
-----
    P00/2/0/0      admin-down     admin-down     HDLC  4474   2488320

```

Table 2: show interfaces pos Field Descriptions

Field	Description
Intf Name	Interface identifier, in the <i>type*rack/slot/module/port</i> notation.
Intf State	Indicates whether the interface is in the admin-up or admin down state.
LineP State	Line protocol state.
Encap Type	Encapsulation type for the specified interface. Can be HDLC or PPP.
MTU (byte)	Maximum transmission unit (MTU) value configured for the specified interface, in bytes.
BW (Kbps)	Bandwidth of the interface, in kbps.

Related Commands

Command	Description
show controllers pos	Displays information on the POS controllers.
show controllers sonet	Displays information about the operational status of SONET layers.

transmit-delay

To specify a number of flag sequences to be inserted between the packets, use the **transmit-delay** command in POS configuration mode. To restore the default, use the **no** form of this command.

transmit-delay *microseconds*

no transmit-delay *microseconds*

Syntax Description	<i>microseconds</i>	Number of microseconds of minimum delay after sending a packet. Range is from 0 to 1023. Default is 0 (disabled).
---------------------------	---------------------	---

Command Default	<i>microseconds</i> = 0 (disabled)
------------------------	------------------------------------

Command Modes	POS configuration
----------------------	-------------------

Command History	Releases	Modifications
	Release 3.2	This command was introduced.

Usage Guidelines

Task ID	Task ID	Operations
	pos-dpt	read, write


Examples

In the following example, a delay of 2 microseconds is specified on POS interface 0/1/0/2:

```
RP/0/0/CPU0:router# configure
RP/0/0/CPU0:router(config)# interface POS 0/1/0/2
RP/0/0/CPU0:router(config-if)# pos
RP/0/0/CPU0:router(config-if-pos)# transmit-delay 2
```

In the following example, the transmit delay on POS interface 0/1/0/2 is disabled:

```
RP/0/0/CPU0:router# configure
RP/0/0/CPU0:router(config)# interface POS 0/1/0/2
RP/0/0/CPU0:router(config-if)# pos
RP/0/0/CPU0:router(config-if-pos)# no transmit-delay
```

 transmit-delay**Related Commands**

Command	Description
show interfaces	