



# Uninstalling Cisco Plug-in for OpenFlow

---

- [Uninstalling Cisco Plug-in for OpenFlow, on page 1](#)
- [Converting a Previous OpenFlow Configuration, on page 1](#)
- [Deactivating and Uninstalling an Application from a Virtual Services Container, on page 3](#)

## Uninstalling Cisco Plug-in for OpenFlow

The Cisco OpenFlow Agent was introduced in Cisco NX-OS Release 7.0(3)I5(1), replacing the Cisco Plug-in for OpenFlow used in previous releases. The Cisco Plug-in for OpenFlow, which runs as an application in a virtual services container, is no longer supported as of this release. When upgrading from a release earlier than Cisco NX-OS Release 7.0(3)I5(1) to Cisco NX-OS Release 7.0(3)I5(1) or a later release, you must deactivate and uninstall the Cisco Plug-in for OpenFlow application from the virtual services container using the procedure described in this section.

Cisco OpenFlow Agent support for the Cisco Nexus 3548 was introduced in Cisco NX-OS Release 7.0(3)I7(2) replacing the Cisco Plug-in for OpenFlow used from Cisco NX-OS Release 6.0(2)A8(1). When upgrading from a release earlier than Cisco NX-OS Release 7.0(3)I7(2) to Cisco NX-OS Release 7.0(3)I7(2) or a later release, you must deactivate and uninstall the Cisco Plug-in for OpenFlow application from the virtual services container using the procedure described in this section.

## Converting a Previous OpenFlow Configuration

When you upgrade to a release that requires you to uninstall the Cisco Plug-in for OpenFlow, you can save your existing OpenFlow configuration and modify it for use with the Cisco OpenFlow Agent. Perform the following procedure before uninstalling the Cisco Plug-in for OpenFlow.

### Procedure

---

**Step 1** Capture the current OpenFlow configuration.

Enter the CLI command **show run | section openflow** to display the current OpenFlow configuration, as shown in this example.

**Example:**

```
Switch# show run | section openflow
```

```

hardware access-list tcam region openflow 512 double-wide
mode openflow
mode openflow
mode openflow
mode openflow
mode openflow
openflow <----- Copy this section to your text editor.
switch 1
  pipeline 201
  controller ipv4 5.1.1.237 port 6653 vrf management security none
  of-port interface Ethernet1/11-15

```

**Step 2** Copy the configuration and paste it into your text editor.

**Step 3** Make the changes described below.

- Add the **feature openflow** command to enable the Cisco OpenFlow Agent.
- Combine the **switch** and **pipeline** commands into one command.
- Expand any interface ranges.

**Example:**

```

feature openflow <----- Add this comment to enable openflow agent

openflow
switch 1 pipeline 201 <----- Create switch command is in this format
  controller ipv4 192.168.1.36 port 6653
  of-port interface Ethernet1/11 <----- Change Ethernet1/11-15 to this format
  of-port interface Ethernet1/12
  of-port interface Ethernet1/13
  of-port interface Ethernet1/14
  of-port interface Ethernet1/15

```

**Step 4** Make the changes described below.

When upgrading from a release earlier than Cisco NX-OS Release 7.0(3)I7(2) to Cisco NX-OS Release 7.0(3)I7(2) or a later release, obtain the Node-ID of the switch from the OpenFlow controller to which the switch is registered. Copy the Node-ID in your text editor. After upgrading, configure the Node-ID under OpenFlow.

**Example:**

```

openflow
switch 1 pipeline 201
controller ipv4 192.168.1.36 port 6653 vrf management security none
datapath-id 0x174a02fc67f00

```

**Note** 0x174a02fc67f00 is the Node-ID of the switch which had been registered with the OpenFlow controller before upgrading.

**Step 5** Make the changes described below.

If the 'onep\_apps\_openflow\_GLOBAL\_VER.cli' file exists under bootflash:onep/apps-cli, it must be removed if you are upgrading from a release earlier than Cisco NX-OS Release 7.0(3)I7(2) to Cisco NX-OS Release 7.0(3)I7(2) or a later release.

**Example:**

```
switch# delete bootflash:onep/apps-cli/onep_apps_openflow_GLOBAL_VER.cli
```

### What to do next

After uninstalling the Cisco Plug-in for OpenFlow, uninstalling the virtual service container (if necessary), and upgrading the switch, follow the instructions in this guide to enable the Cisco OpenFlow Agent. Then load the modified configuration into the switch.

## Deactivating and Uninstalling an Application from a Virtual Services Container

(Optional) Perform this task to uninstall and deactivate an application from within a virtual services container.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b> <b>Example:</b> Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> Device# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>virtual-service</b> <i>virtual-services-name</i> <b>Example:</b> Device(config)# virtual-service openflow_agent	Enters virtual services configuration mode to configure a specified application. <ul style="list-style-type: none"> <li>• Use the <i>virtual-services-name</i> defined during installation of the application.</li> </ul>
<b>Step 4</b>	<b>no activate</b> <b>Example:</b> Device(config-virt-serv)# no activate	Disables the application.
<b>Step 5</b>	<b>no virtual-service</b> <i>virtual-services-name</i> <b>Example:</b> Device(config)# no virtual-service openflow_agent	Unprovisions the application. <ul style="list-style-type: none"> <li>• Use the <i>virtual-services-name</i> defined during installation of the application.</li> <li>• This command is optional for all devices running Cisco IOS-XE.</li> </ul>
<b>Step 6</b>	<b>end</b> <b>Example:</b> Device(config-virt-serv)# end	Exits virtual services configuration mode and enters privileged EXEC mode.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 7</b>	<p><b>virtual-service uninstall name</b> <i>virtual-services-name</i></p> <p><b>Example:</b></p> <pre>Device# virtual-service uninstall name openflow_agent</pre>	<p>Uninstalls the application.</p> <ul style="list-style-type: none"> <li>• Use the <i>virtual-services-name</i> defined during installation of the application.</li> <li>• Run this command only after receiving a successful deactivation response from the device.</li> </ul>
<b>Step 8</b>	<p><b>copy running-config startup-config</b></p> <p><b>Example:</b></p> <pre>Device# copy running-config startup-config</pre>	<p>Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.</p>