



# F Commands

---

This chapter describes the system management commands that begin with F.

# feature ptp

To enable the PTP feature, use the **feature ptp** command. To unconfigure the PTP feature, use the **no** form of this command.

**feature ptp**

**no feature ptp**

**Syntax Description** There are no arguments or keywords for this command.

**Command Default** None

**Command Modes** Global configuration mode

Command History	Release	Modification
	5.2(1)N1(1)	This command was introduced.

**Examples** This example shows how to enable PTP on the device:

```
switch# configure terminal
switch(config)# feature ptp
```

Related Commands	Command	Description
	<b>feature ptp</b>	Enables or disables PTP on the device.
	<b>ptp source</b>	Configures the source IP address for all PTP packets.
	<b>ptp domain</b>	Configures the domain number to use for this clock.
	<b>ptp priority1</b>	Configures the priority 1 value to use when advertising this clock.
	<b>ptp priority2</b>	Configures the priority 1 value to use when advertising this clock.
	<b>show ptp brief</b>	Displays the PTP status.
	<b>show ptp clock</b>	Displays the properties of the local clock.