



## O Commands

---

This chapter describes the system management commands available that begin with O.

# option exporter-stats timeout

To configure the NetFlow exporter resend timer, use the **option exporter-stats timeout** command. To remove the NetFlow exporter resend timer, use the **no** form of this command.

**option exporter-stats timeout** *time*

**no option exporter-stats timeout**

<b>Syntax Description</b>	<i>time</i>	Time in seconds. The range is from 1 to 86400.
---------------------------	-------------	--

<b>Defaults</b>	None	
-----------------	------	--

<b>Command Modes</b>	NetFlow exporter version 9 configuration (config-flow-exporter-version-9)	
----------------------	---	--

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	7.0(0)N1(1)	This command was introduced.

<b>Usage Guidelines</b>	This command does not require a license.	
-------------------------	--	--

<b>Examples</b>	<p>This example shows how to configure the NetFlow exporter resend timer:</p> <pre>switch(config)# flow exporter Custom-Flow-Exporter-1 switch(config-flow-exporter)# version 9 switch(config-flow-exporter-version-9)# option exporter-stats timeout 1200 switch(config-flow-exporter-version-9)#</pre>	
-----------------	--	--

This example shows how to remove the NetFlow exporter resend timer configuration:

```
switch(config-flow-exporter-version-9)# no option exporter-stats timeout
switch(config-flow-exporter-version-9)#
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show flow exporter</b>	Displays information about NetFlow exporters.

# option interface-table timeout

To configure the NetFlow exporter interface-table timer, use the **option interface-table timeout** command. To remove the interface-table timer, use the **no** form of this command.

**option interface-table timeout** *time*

**no option interface-table timeout** [*time*]

Syntax Description	<i>time</i>
	Time in seconds. The range is from 1 to 86400.

Defaults	None
----------	------

Command Modes	NetFlow exporter version 9 configuration (config-flow-exporter-version-9)
---------------	---

Command History	Release	Modification
	7.0(0)N1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
------------------	--

Examples	This example shows how to configure the NetFlow exporter interface-table timer:
----------	---

```
switch(config)# flow exporter Custom-Flow-Exporter-1
switch(config-flow-exporter)# version 9
switch(config-flow-exporter-version-9)# option interface-table timeout 1200
switch(config-flow-exporter-version-9)#
```

This example shows how to remove the NetFlow exporter interface-table timer configuration:

```
switch(config-flow-exporter-version-9)# no option interface-table timeout
```

Related Commands	Command	Description
	<b>show flow exporter</b>	Displays information about the NetFlow exporters.

# option sampler-table timeout

To configure the NetFlow exporter sampler-table timer, use the **option sampler-table timeout** command. To remove the sampler-table timer, use the **no** form of this command.

**option sampler-table timeout** *time*

**no option sampler-table timeout** [*time*]

Syntax Description	<i>time</i>	Time in seconds. The range is from 1 to 86400.
--------------------	-------------	--

Defaults	None
----------	------

Command Modes	NetFlow exporter version 9 configuration (config-flow-exporter-version-9)
---------------	---

Command History	Release	Modification
	7.0(0)N1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
------------------	--

Examples	This example shows how to configure the NetFlow exporter sampler-table timer:
----------	---

```
switch(config)# flow exporter Custom-Flow-Exporter-1
switch(config-flow-exporter)# version 9
switch(config-flow-exporter-version-9)# option sampler-table timeout 1200
switch(config-flow-exporter-version-9)#
```

This example shows how to remove the sampler-table timer configuration:

```
switch(config)# no option sampler-table timeout
switch(config)#
```

Related Commands	Command	Description
	<b>show flow exporter</b>	Displays information about NetFlow exporters.