



## C Commands

---

This chapter describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands that begin with C.

# clear ip interface statistics

To clear IP interface statistics, use the **clear ip interface statistics** command.

**clear ip interface statistics**

**Syntax Description** This command has no arguments or keywords.

**Command Default** None

**Command Modes** Any command mode

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

**Examples** This example shows how to clear the IP interface statistics:

```
switch# clear ip interface statistics
```

Related Commands	Command	Description
	show ip interface	Displays IP interface information.

# clear vrrp

To clear the Virtual Router Redundancy Protocol (VRRP) statistics, use the **clear vrrp** command.

```
clear vrrp vr id interface {ethernet slot/port | port-channel number[.sub_if_number]}
```

Syntax Description		
<b>vr id</b>		Clears VRRP statistics in a VRRP group on an interface. The range is from 1 to 255.
<b>interface</b>		Specifies an Ethernet or EtherChannel interface or a subinterface.
<b>ethernet</b> <i>slot/port</i>		Clears VRRP statistics on the Ethernet interface. The slot number is from 1 to 255, and the port number is from 1 to 128.
<b>port-channel</b> <i>number</i>		Clears VRRP statistics on the EtherChannel interface. The EtherChannel number is from 1 to 4096.
<i>.sub_if_number</i>		(Optional) Subinterface number. The range is from 1 to 4093.

**Command Default** None

**Command Modes** Any command mode

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

**Examples** This example shows how to clear VRRP statistics from a specific Ethernet interface:

```
switch(config)# clear vrrp vr 1 interface ethernet 1/5
switch(config)#
```

Related Commands	Command	Description
	<b>feature vrrp</b>	Enables the VRRP feature.

