



## F Commands

---

This chapter describes the Cisco NX-OS Border Gateway Protocol (BGP) commands that begin with F.

*Review Draft -- Cisco Confidential*

# feature bgp

To enable the Border Gateway Protocol (BGP), use the **feature bgp** command. To disable BGP, use the **no** form of this command.

**feature bgp**

**no feature bgp**

**Syntax Description** This command has no arguments or keywords.

**Command Default** Disabled

**Command Modes** Global configuration mode

Command History	Release	Modified
	6.0(2)N1(1)	This command was introduced.

**Usage Guidelines** You must enable the BGP feature before you can configure BGP.  
This command requires the LAN Enterprise Services license.

**Examples** This example shows how to enable a BGP configuration:

```
switch# configure terminal
switch(config)# feature bgp
switch(config)#
```

This example shows how to disable the BGP feature:

```
switch# configure terminal
switch(config)# no feature bgp
switch(config)#
```

Related Commands	Command	Description
	<b>router bgp</b>	Creates a BGP instance.
	<b>show bgp</b>	Displays BGP configuration information.
	<b>show feature</b>	Displays the status of features on a switch.