



INDEX

B

bootflash file, copying the running configuration for an individual VDC [4-21](#)

C

Cisco Nexus 7000 Series 32-port Gbps Ethernet modules

port group interface allocation [1-6, 3-4](#)

configuration files

VDC support [1-8](#)

configuration modes

description [1-9](#)

control plane policing. See CoPP

CoPP

VDC support [1-12](#)

D

default user roles

network-admin [1-8](#)

network-operator [1-9](#)

vdc-admin [1-9](#)

vdc-operator [1-9](#)

default VDC

description [1-4](#)

documentation

additional publications [3-viii](#)

related [2-7](#)

updates [3-x](#)

F

fault isolation

description (figure) [1-11](#)

FCoE

VDC support [1-12](#)

feature support

description [1-12](#)

field description

VDC resource templates [2-6](#)

field descriptions

VDC management [4-23](#)

H

HA

VDC support [1-12](#)

HA policies

changing for VDCs [4-19](#)

description [3-3](#)

high availability. See HA

I

infrastructure layer

description [1-3](#)

interfaces

allocating [3-4](#)

allocating to VDCs [4-7](#)

allocation [4-2](#)

IP tunnels

VDC support [1-12](#)

Send document comments to dcnm-docfeedback@cisco.com.

K

kernel
description [1-3](#)

L

licensing
VDC resource templates [2-2](#)

logical resources
description [1-7](#)
namespaces [1-7](#)

M

MAC addresses
per VDC [4-4](#)

management connections
description [1-10](#)

N

namespaces
description [1-7](#)

network-operator roles
description [1-9](#)

P

physical resource
description [1-5](#)

port groups
allocation requirements [1-6, 3-4](#)

R

rate limits
VDC support [1-12](#)

Really Simple Syndication. See RSS

related documentation
creating VDCs [3-15](#)

resource templates
description [1-7](#)

resource templates. See VDC resource templates

running configuration
copying to a bootflash file [4-21](#)
copying to startup configuration [4-21](#)

S

setup wizard
description [3-6 to 3-13](#)

storage VDCs
port groups [1-5](#)
VLAN numbering [1-2](#)

superuser roles. See network-admin roles

T

troubleshooting
storage VDCs [1-2](#)

U

user roles
description [1-8](#)
See also default user roles

V

vdc-admin roles
description [1-9](#)

VDC configuration
saving to bootflash file [4-4, 4-21](#)
saving to startup configuration [4-4, 4-21](#)

VDC management

Send document comments to dcnm-docfeedback@cisco.com.

- description [4-1](#)
- field descriptions [4-23](#)
- HA policies [4-4](#)
- interface allocation [4-2](#)
- resource limits [4-4](#)
- vdc-operator roles
 - description [1-9](#)
- VDC resources
 - changing limits [4-19](#)
 - description [1-5](#)
 - limits (table) [3-2](#)
- VDC resource templates
 - adding [2-3](#)
 - adding limits [2-3](#)
 - changing limits [2-4](#)
 - configuring [2-3 to 2-6](#)
 - default limits [2-2](#)
 - deleting [2-5](#)
 - deleting limits [2-5](#)
 - description [2-1, 3-2](#)
 - field descriptions [2-6](#)
 - resources [2-1](#)
- VDCs
 - allocating interfaces [4-7](#)
 - architecture [1-3](#)
 - changing HA policies [4-19](#)
 - changing resource limits [4-19](#)
 - communication between [1-4](#)
 - configuration files [1-8](#)
 - creating [3-1 to 3-5, 3-6](#)
 - creating with setup wizard [3-1](#)
 - default user roles [1-8](#)
 - deleting [4-22](#)
 - description [1-1](#)
 - discovering [4-22](#)
 - fault isolation (figure) [1-11](#)
 - FCoE [1-5](#)
 - feature support [1-12](#)
 - infrastructure layer [1-3](#)
 - initializing [3-5](#)
 - kernel [1-3](#)
 - management [1-8 to 1-11](#)
 - management connections [1-10](#)
 - managing [4-7](#)
 - namespaces [1-7](#)
 - resource templates [1-7](#)
 - resuming [3-14](#)
 - setup wizard [3-6 to 3-13](#)
 - shared interfaces [1-5](#)
 - storage [1-5](#)
 - suspending [3-14](#)
- VLAN numbering
 - VDCs [1-2](#)

Send document comments to dcnm-docfeedback@cisco.com.