



## INDEX

### A

aaa accounting dot1x command **2-1**  
aaa authentication dot1x command **2-3**  
aaa authorization network command **2-5, 2-28, 2-34, 2-36, 2-38, 2-40, 2-42, 2-131, 2-292, 2-485, B-8, B-35**  
AAA methods **2-3**  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP **2-181**  
        MAC, displaying **2-594**  
    access list, IPv6 **2-249**  
    access map configuration mode **2-318**  
    access mode **2-778**  
    access ports **2-778**  
    ACEs **2-122, 2-395**  
    ACLs  
        deny **2-120**  
        displaying **2-461**  
        for non-IP protocols **2-296**  
        IP **2-181**  
        matching **2-318**  
        on Layer 2 interfaces **2-181**  
        permit **2-393**  
    action command **2-6**  
    address aliasing **2-369**  
    aggregate-port learner **2-381**  
    alarm command **2-12**  
    alarm facility fcs-hysteresis command **2-8**  
    alarm facility power-supply command **2-9**

alarm facility temperature command **2-10**  
alarm IDs **2-13, 2-464**  
alarm profile  
    attaching to a port **2-14**  
    creating **2-12**  
    displaying **2-465**  
alarm profile (global configuration) command **2-12**  
alarm profile (interface configuration) command **2-14**  
alarm profile configuration mode **2-12**  
allowed VLANs **2-798**  
archive download-sw command **2-16**  
archive tar command **2-19**  
archive upload-sw command **2-22**  
arp access-list command **2-24**  
authentication command bounce-port ignore **2-26**  
authentication command disable-port ignore **2-27**  
authentication control-direction command **2-28**  
authentication event command **2-30**  
authentication failed VLAN  
    See dot1x auth-fail vlan  
authentication fallback command **2-34**  
authentication host-mode command **2-36**  
authentication mac-move permit command **2-38**  
authentication open command **2-40**  
authentication order command **2-42**  
authentication periodic command **2-44**  
authentication port-control command **2-46**  
authentication priority command **2-48**  
authentication timer command **2-50**  
authentication violation command **2-52**  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan

See dot1x auth-fail vlan  
 auth open command **2-40**  
 auth order command **2-42**  
 authorization state of controlled port **2-148**  
 auth timer command **2-50**  
 autonegotiation of duplex mode **2-159**  
 auto qos voip command **2-54**

**B**

BackboneFast, for STP **2-708**  
 backup interfaces  
     configuring **2-771**  
     displaying **2-529**  
 boot (boot loader) command **A-2**  
 boot config-file command **2-58**  
 boot enable-break command **2-59**  
 boot fast command **2-60**  
 boot helper command **2-61**  
 boot helper-config file command **2-62**  
 booting  
     Cisco IOS image **2-65**  
     displaying environment variables **2-478**  
     interrupting **2-59**  
     manually **2-63**

boot loader  
     accessing **A-1**  
     booting  
         Cisco IOS image **A-2**  
         helper image **2-61**

directories  
     creating **A-15**  
     displaying a list of **A-8**  
     removing **A-19**

displaying  
     available commands **A-13**  
     memory heap utilization **A-14**  
     version **A-27**

environment variables

described **A-20**  
 displaying settings **A-20**  
 location of **A-21**  
 setting **A-20**  
 unsetting **A-25**  
 files  
     copying **A-6**  
     deleting **A-7**  
     displaying a list of **A-8**  
     displaying the contents of **A-4, A-16, A-23**  
     renaming **A-17**  
 file system  
     formatting **A-11**  
     initializing flash **A-10**  
     running a consistency check **A-12**  
     resetting the system **A-18**  
 boot manual command **2-63**  
 boot private-config-file command **2-64**  
 boot system command **2-65**  
 BPDU filtering, for spanning tree **2-709, 2-744**  
 BPDU guard, for spanning tree **2-711, 2-744**  
 broadcast storm control **2-762**

**C**

candidate switches  
     See clusters  
 cat (boot loader) command **A-4**  
 channel-group command **2-66**  
 channel-protocol command **2-69**  
 Cisco SoftPhone  
     auto-QoS configuration **2-54**  
     trusting packets sent from **2-360**  
 CISP  
     See Client Information Signalling Protocol  
 cisp  
     debug platform cisp command **B-35**  
 cisp enable command **2-72**  
 class command **2-73**

- class-map command **2-75**
- class maps
- creating **2-75**
  - defining the match criteria **2-320**
  - displaying **2-486**
- class of service
- See CoS
- clear dot1x command **2-77**
- clear eap sessions command **2-78**
- clear errdisable interface **2-79**
- clear ip arp inspection log command **2-80**
- clear ip arp inspection statistics command **2-81**
- clear ipc command **2-84**
- clear ip dhcp snooping database command **2-82**
- clear ipv6 dhcp conflict command **2-85**
- clear l2protocol-tunnel counters command **2-86**
- clear lacp command **2-87**
- clear mac address-table command **2-88, 2-89**
- clear nmsp statistics command **2-90**
- clear pagp command **2-91, 2-95**
- clear port-security command **2-92**
- clear psp counter **2-94**
- clear psp counter command **2-94**
- clear spanning-tree counters command **2-96**
- clear spanning-tree detected-protocols command **2-97**
- clear vmps statistics command **2-98**
- clear vtp counters command **2-99**
- Client Information Signalling Protocol **2-72, 2-131, 2-485, B-8, B-35**
- cluster commander-address command **2-100**
- cluster discovery hop-count command **2-102**
- cluster enable command **2-103**
- cluster holdtime command **2-104**
- cluster member command **2-105**
- cluster outside-interface command **2-107**
- cluster run command **2-108**
- clusters
- adding candidates **2-105**
  - binding to HSRP group **2-109**
  - building manually **2-105**
  - communicating with
    - devices outside the cluster **2-107**
    - members by using Telnet **2-425**  - debug messages, display **B-9**
  - displaying
    - candidate switches **2-489**
    - debug messages **B-9**
    - member switches **2-491**
    - status **2-487**  - hop-count limit for extended discovery **2-102**
  - HSRP standby groups **2-109**
  - redundancy **2-109**
  - SNMP trap **2-699**
  - cluster standby-group command **2-109**
  - cluster timer command **2-111**
  - command modes defined **1-1**
  - command switch
    - See clusters
- configuration files
- password recovery disable considerations **A-1**
  - specifying the name **2-58, 2-64**
- configuring multiple interfaces **2-177**
- config-vlan mode
- commands **2-820**
- copy (boot loader) command **A-6**
- CoS
- assigning default value to incoming packets **2-330**
  - assigning to Layer 2 protocol packets **2-277**
  - overriding the incoming value **2-330**
- CoS-to-DSCP map **2-334**
- CPU ASIC statistics, displaying **2-493**
- crashinfo files **2-169**
- critical VLAN **2-31**
- 
- D**
- debug authentication **B-2**
- debug auto qos command **B-4**

- debug backup command **B-6, B-7**  
 debug cip **B-7**  
 debug cisp command **B-8**  
 debug cluster command **B-9**  
 debug dot1x command **B-11**  
 debug dtp command **B-12**  
 debug eap command **B-13, B-88**  
 debug etherchannel command **B-14**  
 debug interface command **B-15**  
 debug ip dhcp snooping command **B-16**  
 debug ip igmp filter command **B-18**  
 debug ip igmp max-groups command **B-19**  
 debug ip igmp snooping command **B-20**  
 debug ip verify source packet command **B-17**  
 debug lacp command **B-21**  
 debug lldp packets command **B-22**  
 debug mac-notification command **B-23**  
 debug matm command **B-24**  
 debug matm move update command **B-25**  
 debug monitor command **B-26**  
 debug mvrdbg command **B-28**  
 debug nmfp command **B-29**  
 debug nvram command **B-30**  
 debug pagp command **B-31**  
 debug platform acl command **B-32**  
 debug platform backup interface command **B-34**  
 debug platform cisp command **B-35**  
 debug platform cpu-queues command **B-36**  
 debug platform dot1x command **B-38**  
 debug platform etherchannel command **B-39**  
 debug platform fallback-bridging command **B-40**  
 debug platform forw-tcam command **B-41**  
 debug platform ip arp inspection command **B-42**  
 debug platform ip dhcp command **B-43**  
 debug platform ip igmp snooping command **B-44**  
 debug platform ip multicast command **B-46**  
 debug platform ip source-guard command **B-48**  
 debug platform ip unicast command **B-49**  
 debug platform led command **B-51**  
 debug platform matm command **B-52**  
 debug platform messaging application command **B-53**  
 debug platform phy command **B-54**  
 debug platform pm command **B-56**  
 debug platform port-asic command **B-58**  
 debug platform port-security command **B-59**  
 debug platform qos-acl-tcam command **B-60**  
 debug platform resource-manager command **B-61**  
 debug platform snmp command **B-62**  
 debug platform span command **B-63**  
 debug platform supervisor-asic command **B-64**  
 debug platform sw-bridge command **B-65**  
 debug platform tcam command **B-66**  
 debug platform udld command **B-69**  
 debug platform vlan command **B-70**  
 debug pm command **B-71**  
 debug port-security command **B-73**  
 debug profinet alarm **B-74**  
 debug profinet cyclic **B-76**  
 debug profinet error **B-78**  
 debug profinet packet **B-80**  
 debug profinet platform **B-82**  
 debug profinet topology **B-84**  
 debug profinet trace **B-86**  
 debug qos-manager command **B-89**  
 debug spanning-tree backbonefast command **B-92**  
 debug spanning-tree bpdu command **B-93**  
 debug spanning-tree bpdu-opt command **B-94**  
 debug spanning-tree command **B-90**  
 debug spanning-tree mstp command **B-95**  
 debug spanning-tree switch command **B-97**  
 debug spanning-tree uplinkfast command **B-99**  
 debug sw-vlan command **B-100**  
 debug sw-vlan ifs command **B-102**  
 debug sw-vlan notification command **B-103**  
 debug sw-vlan vtp command **B-105**  
 debug udld command **B-107**  
 debug vqpc command **B-109**  
 defaultPort profile **2-13, 2-14**

- define interface-range command **2-112**  
 delete (boot loader) command **A-7**  
 delete command **2-114**  
 deny (ARP access-list configuration) command **2-115**  
 deny (IPv6) command **2-117**  
 deny command **2-120**  
 detect mechanism, causes **2-160**  
**DHCP snooping**  
 accepting untrusted packets from edge switch **2-209**  
 enabling  
   on a VLAN **2-216**  
   option 82 **2-207, 2-209**  
   trust on an interface **2-214**  
   error recovery timer **2-166**  
   rate limiting **2-213**  
**DHCP snooping binding database**  
 binding file, configuring **2-205**  
 bindings  
   adding **2-203**  
   deleting **2-203**  
   displaying **2-548**  
   clearing database agent statistics **2-82**  
   database agent, configuring **2-205**  
   displaying  
     binding entries **2-548**  
     database agent status **2-551, 2-553**  
     renewing **2-429**  
 dir (boot loader) command **A-8**  
 directories, deleting **2-114**  
 domain name, VTP **2-835**  
 dot1x auth-fail max-attempts **2-125**  
 dot1x auth-fail vlan **2-127**  
 dot1x command **2-123**  
 dot1x control-direction command **2-129**  
 dot1x credentials (global configuration) command **2-131**  
 dot1x critical global configuration command **2-132**  
 dot1x critical interface configuration command **2-134**  
 dot1x default command **2-136**  
 dot1x fallback command **2-137**  
 dot1x guest-vlan command **2-138**  
 dot1x host-mode command **2-140**  
 dot1x initialize command **2-142**  
 dot1x mac-auth-bypass command **2-143**  
 dot1x max-reauth-req command **2-145**  
 dot1x max-req command **2-146**  
 dot1x pae command **2-147**  
 dot1x port-control command **2-148**  
 dot1x re-authenticate command **2-150**  
 dot1x reauthentication command **2-151**  
 dot1x supplicant force-multicast command **2-152**  
 dot1x test eapol-capable command **2-153**  
 dot1x test timeout command **2-154**  
 dot1x timeout command **2-155**  
 dot1x violation-mode command **2-157**  
 dropping packets, with ACL matches **2-6**  
 drop threshold, Layer 2 protocol tunneling **2-274**  
 DSCP-to-CoS map **2-334**  
 DSCP-to-DSCP-mutation map **2-334**  
**DTP** **2-779**  
**DTP flap**  
   error detection for **2-160**  
   error recovery timer **2-166**  
**DTP negotiation** **2-783**  
 dual-purpose uplink ports  
   selecting the type **2-324**  
**duplex command** **2-158**  
**dynamic-access ports**  
   configuring **2-767**  
   restrictions **2-768**  
**dynamic ARP inspection**  
 ARP ACLs  
   apply to a VLAN **2-189**  
   define **2-24**  
   deny packets **2-115**  
   display **2-469**  
   permit packets **2-385**  
 clear  
 log buffer **2-80**

- statistics **2-81**
- display
  - ARP ACLs **2-469**
  - configuration and operating state **2-543**
  - log buffer **2-543**
  - statistics **2-543**
  - trust state and rate limit **2-543**
  - enable per VLAN **2-199**
  - error detection for **2-160**
  - log buffer
    - clear **2-80**
    - configure **2-193**
    - display **2-543**
  - rate-limit incoming ARP packets **2-191**
  - statistics
    - clear **2-81**
    - display **2-543**
  - trusted interface state **2-195**
  - type of packet logged **2-200**
  - validation checks **2-197**
  - dynamic auto VLAN membership mode **2-778**
  - dynamic desirable VLAN membership mode **2-778**
  - Dynamic Host Configuration Protocol (DHCP)
    - See DHCP snooping
  - Dynamic Trunking Protocol
    - See DTP

---

- E**
  - EAP-request/identity frame
    - maximum number to send **2-146**
    - response time before retransmitting **2-155**
  - environmental alarms, displaying **2-467**
  - environment variables, displaying **2-478**
  - errdisable detect cause command **2-160**
  - errdisable detect cause small-frame comand **2-163**
  - errdisable recovery cause small-frame **2-165**
  - errdisable recovery command **2-166**
  - error conditions, displaying **2-517**
- error disable detection **2-160**
- error-disabled interfaces, displaying **2-529**
- EtherChannel
  - assigning Ethernet interface to channel group **2-66**
  - creating port-channel logical interface **2-175**
  - debug EtherChannel/PAgP, display **B-14**
  - debug platform-specific events, display **B-39**
  - displaying **2-520**
  - enabling Layer 2 protocol tunneling for
    - LACP **2-275**
    - PAgP **2-275**
    - UDLD **2-275**
  - interface information, displaying **2-529**
  - LACP
    - clearing channel-group information **2-87**
    - debug messages, display **B-21**
    - displaying **2-586**
    - modes **2-66**
    - port priority for hot-standby ports **2-278**
    - restricting a protocol **2-69**
    - system priority **2-280**
  - load-distribution methods **2-403**
  - PAgP
    - aggregate-port learner **2-381**
    - clearing channel-group information **2-91**
    - debug messages, display **B-31**
    - displaying **2-643**
    - error detection for **2-160**
    - error recovery timer **2-166**
    - learn method **2-381**
    - modes **2-66**
    - physical-port learner **2-381**
    - priority of interface for transmitted traffic **2-383**
  - Ethernet controller, internal register display **2-495**
  - Ethernet statistics, collecting **2-445**
  - exception crashinfo command **2-169**
  - extended discovery of candidate switches **2-102**
  - extended-range VLANs
    - and allowed VLAN list **2-798**

and pruning-eligible list **2-798**

configuring **2-819**

extended system ID for STP **2-717**

## F

facility alarm relays, displaying **2-523**

facility alarm status, displaying **2-524**

fallback profile command **2-170**

fallback profiles, displaying **2-525**

FCS bit error rate

displaying **2-526**

fluctuation threshold **2-8**

setting **2-172**

FCS hysteresis threshold **2-8**

fcs-threshold command **2-172**

file name, VTP **2-835**

files, deleting **2-114**

flash\_init (boot loader) command **A-10**

flexible authentication ordering **2-42**

Flex Links

configuring **2-771**

configuring preferred VLAN **2-773**

displaying **2-529**

flowcontrol command **2-173**

format (boot loader) command **A-11**

forwarding packets, with ACL matches **2-6**

forwarding results, display **C-6**

frame check sequence

See FCS

frame forwarding information, displaying **C-6**

fsck (boot loader) command **A-12**

## G

global configuration mode **1-2, 1-3**

## H

hardware ACL statistics **2-461**

help (boot loader) command **A-13**

hierarchical policy maps **2-400**

hop-count limit for clusters **2-102**

host connection, port configuration **2-777**

host ports, private VLANs **2-781**

Hot Standby Router Protocol

See HSRP

HSRP

binding HSRP group to cluster **2-109**

standby group **2-109**

## I

IEEE 802.1Q trunk ports and native VLANs **2-826**

IEEE 802.1Q tunnel ports

displaying **2-506**

limitations **2-779**

IEEE 802.1x

and switchport modes **2-779**

violation error recovery **2-166**

See also port-based authentication

IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant **2-126, 2-137, 2-171**

IGMP filters

applying **2-219**

debug messages, display **B-18**

IGMP groups, setting maximum **2-221**

IGMP maximum groups, debugging **B-19**

IGMP profiles

creating **2-223**

displaying **2-556**

IGMP snooping

adding ports as a static member of a group **2-238**

displaying **2-557**

enabling **2-225**

enabling the configurable-leave timer **2-227**

- enabling the Immediate-Leave feature **2-235**  
 flooding query count **2-232**  
 interface topology change notification behavior **2-234**  
 querier **2-229**  
 query solicitation **2-232**  
 report suppression **2-231**  
 switch topology change notification behavior **2-232**
- images  
 See software images
- Immediate-Leave feature, MVR **2-371**
- immediate-leave processing **2-235**
- Immediate-Leave processing, IPv6 **2-270**
- interface configuration mode **1-2, 1-4**
- interface port-channel command **2-175**
- interface range command **2-177**
- interface-range macros **2-112**
- interfaces  
 assigning Ethernet interface to channel group **2-66**  
 configuring **2-158**  
 configuring multiple **2-177**  
 creating port-channel logical **2-175**  
 debug messages, display **B-15**  
 disabling **2-695**  
 displaying the MAC address table **2-605**  
 restarting **2-695**
- interface speed, configuring **2-754**
- interface vlan command **2-179**
- internal registers, displaying **2-495, 2-502**
- Internet Group Management Protocol  
 See IGMP
- invalid GBIC  
 error detection for **2-160**  
 error recovery timer **2-166**
- ip access-group command **2-181**
- ip address command **2-184**
- IP addresses, setting **2-184**
- IP address matching **2-318**
- ip admission command **2-186**
- ip admission name proxy http command **2-187**
- ip arp inspection filter vlan command **2-189**  
 ip arp inspection limit command **2-191**  
 ip arp inspection log-buffer command **2-193**  
 ip arp inspection trust command **2-195**  
 ip arp inspection validate command **2-197**  
 ip arp inspection vlan command **2-199**  
 ip arp inspection vlan logging command **2-200**
- IP DHCP snooping  
 See DHCP snooping
- ip dhcp snooping binding command **2-203**  
 ip dhcp snooping command **2-202**  
 ip dhcp snooping database command **2-205**  
 ip dhcp snooping information option allow-untrusted command **2-209**  
 ip dhcp snooping information option command **2-207**  
 ip dhcp snooping information option format remote-id command **2-211**  
 ip dhcp snooping limit rate command **2-213**  
 ip dhcp snooping trust command **2-214**  
 ip dhcp snooping verify command **2-215**  
 ip dhcp snooping vlan command **2-216**  
 ip dhcp snooping vlan information option format-type circuit-id string command **2-217**  
 ip igmp filter command **2-219**  
 ip igmp max-groups command **2-221, 2-244, 2-246**  
 ip igmp profile command **2-223**  
 ip igmp snooping command **2-225**  
 ip igmp snooping last-member-query-interval command **2-227**  
 ip igmp snooping querier command **2-229**  
 ip igmp snooping report-suppression command **2-231**  
 ip igmp snooping tcn command **2-232**  
 ip igmp snooping tcn flood command **2-234**  
 ip igmp snooping vlan immediate-leave command **2-235**  
 ip igmp snooping vlan mrouter command **2-236**  
 ip igmp snooping vlan static command **2-238**  
 IP multicast addresses **2-368**
- IP phones  
 auto-QoS configuration **2-54**  
 trusting packets sent from **2-360**

IP-precedence-to-DSCP map **2-334**  
 ip source binding command **2-240**  
 IP source guard  
     disabling **2-248**  
     displaying  
         binding entries **2-564**  
         configuration **2-565**  
         dynamic binding entries only **2-548**  
     enabling **2-248**  
     static IP source bindings **2-240**  
 ip ssh command **2-242**  
 IPv6 access list, deny conditions **2-117**  
 ipv6 access-list command **2-249**  
 ipv6 address dhcp command **2-252**  
 ipv6 dhcp client request vendor command **2-253**  
 ipv6 dhcp ping packets command **2-254**  
 ipv6 dhcp pool command **2-256**  
 ipv6 dhcp server command **2-258**  
 ipv6 mld snooping command **2-260**  
 ipv6 mld snooping last-listener-query count command **2-262**  
 ipv6 mld snooping last-listener-query-count command **2-262**  
 ipv6 mld snooping last-listener-query-interval command **2-264**  
 ipv6 mld snooping listener-message-suppression command **2-266**  
 ipv6 mld snooping robustness-variable command **2-267**  
 ipv6 mld snooping tcn command **2-269**  
 ipv6 mld snooping vlan command **2-270**  
 IPv6 SDM template **2-446**  
 ipv6 traffic-filter command **2-272**  
 ip verify source command **2-248**

**J**

jumbo frames

See MTU

---

**L**

l2protocol-tunnel command **2-274**  
 l2protocol-tunnel cos command **2-277**  
 LACP  
     See EtherChannel  
 lacp port-priority command **2-278**  
 lacp system-priority command **2-280**  
 Layer 2 mode, enabling **2-765**  
 Layer 2 protocol ports, displaying **2-583**  
 Layer 2 protocol tunnel counters **2-86**  
 Layer 2 protocol tunneling error recovery **2-275**  
 Layer 2 traceroute  
     IP addresses **2-810**  
     MAC addresses **2-807**  
 Layer 3 mode, enabling **2-765**  
 line configuration mode **1-2, 1-4**  
 Link Aggregation Control Protocol  
     See EtherChannel  
 link flap  
     error detection for **2-160**  
     error recovery timer **2-166**  
 link state group command **2-286**  
 link state track command **2-288**  
 load-distribution methods for EtherChannel **2-403**  
 location (global configuration) command **2-282**  
 location (interface configuration) command **2-284**  
 logging event command **2-289**  
 logging file command **2-290**  
 logical interface **2-175**  
 loopback error  
     detection for **2-160**  
     recovery timer **2-166**  
 loop guard, for spanning tree **2-719, 2-723**

**M**

mab request format attribute 32 command **2-292**  
 mac access-group command **2-294**

- MAC access list configuration mode **2-296**  
 mac access-list extended command **2-296**  
 MAC access lists **2-120**  
 MAC addresses  
   disabling MAC address learning per VLAN **2-299**  
   displaying  
     aging time **2-599**  
     all **2-597**  
     dynamic **2-603**  
     MAC address-table move updates **2-608**  
     notification settings **2-607, 2-610**  
     number of addresses in a VLAN **2-601**  
     per interface **2-605**  
     per VLAN **2-614**  
     static **2-612**  
     static and dynamic entries **2-595**  
   dynamic  
     aging time **2-298**  
     deleting **2-88**  
     displaying **2-603**  
     enabling MAC address notification **2-303**  
     enabling MAC address-table move update **2-301**  
     matching **2-318**  
   static  
     adding and removing **2-305**  
     displaying **2-612**  
     dropping on an interface **2-306**  
 tables **2-597**  
 MAC address notification, debugging **B-23**  
 mac address-table aging-time **2-294**  
 mac address-table aging-time command **2-298**  
 mac address-table learning command **2-299**  
 mac address-table move update command **2-301**  
 mac address-table notification command **2-303**  
 mac address-table static command **2-305**  
 mac address-table static drop command **2-306**  
 macro apply command **2-308**  
 macro description command **2-311**  
 macro global command **2-312**  
 macro global description command **2-315**  
 macro name command **2-316**  
 macros  
   adding a description **2-311**  
   adding a global description **2-315**  
   applying **2-312**  
   creating **2-316**  
   displaying **2-645**  
   interface range **2-112, 2-177**  
   specifying parameter values **2-312**  
   tracing **2-312**  
 maps  
   QoS  
     defining **2-334**  
     displaying **2-624**  
   VLAN  
     creating **2-824**  
     defining **2-318**  
     displaying **2-686**  
 match (access-map configuration) command **2-318**  
 match (class-map configuration) command **2-320**  
 maximum transmission unit  
   See MTU  
 mdix auto command **2-323**  
 media-type command **2-324**  
 member switches  
   See clusters  
 memory (boot loader) command **A-14**  
 mkdir (boot loader) command **A-15**  
 MLD snooping  
   configuring **2-266, 2-267**  
   configuring queries **2-262, 2-264**  
   configuring topology change notification **2-269**  
   displaying **2-573, 2-575, 2-579**  
   enabling **2-260**  
 MLD snooping on a VLAN, enabling **2-270**  
 mls qos aggregate-policer command **2-328**  
 mls qos command **2-326**  
 mls qos cos command **2-330**

- mls qos dscp-mutation command **2-332**
- mls qos map command **2-334**
- mls qos queue-set output buffers command **2-338**
- mls qos queue-set output threshold command **2-340**
- mls qos rewrite ip dscp command **2-342**
- mls qos srr-queue input bandwidth command **2-344**
- mls qos srr-queue input buffers command **2-346**
- mls qos-srr-queue input cos-map command **2-348**
- mls qos srr-queue input dscp-map command **2-350**
- mls qos srr-queue input priority-queue command **2-352**
- mls qos srr-queue input threshold command **2-354**
- mls qos-srr-queue output cos-map command **2-356**
- mls qos srr-queue output dscp-map command **2-358**
- mls qos trust command **2-360**
- mls qos vlan-based command **2-362**
- mode, MVR **2-368**
- modes, commands **1-1**
- monitor session command **2-363**
- more (boot loader) command **A-16**
- MSTP
- displaying **2-668**
  - interoperability **2-97**
  - link type **2-721**
  - MST region
    - aborting changes **2-727**
    - applying changes **2-727**
    - configuration name **2-727**
    - configuration revision number **2-727**
    - current or pending display **2-727**
    - displaying **2-668**
    - MST configuration mode **2-727**
    - VLANs-to-instance mapping **2-727**
  - path cost **2-729**
  - protocol mode **2-725**
  - restart protocol migration process **2-97**
  - root port
    - loop guard **2-719**
    - preventing from becoming designated **2-719**
    - restricting which can be root **2-719**
  - root guard **2-719**
  - root switch
    - affects of extended system ID **2-717**
    - hello-time **2-732, 2-740**
    - interval between BDPU messages **2-733**
    - interval between hello BPDU messages **2-732, 2-740**
    - max-age **2-733**
    - maximum hop count before discarding BPDU **2-734**
    - port priority for selection of **2-736**
    - primary or secondary **2-740**
    - switch priority **2-739**
  - state changes
    - blocking to forwarding state **2-746**
    - enabling BPDU filtering **2-709, 2-744**
    - enabling BPDU guard **2-711, 2-744**
    - enabling Port Fast **2-744, 2-746**
    - forward-delay time **2-731**
    - length of listening and learning states **2-731**
    - rapid transition to forwarding **2-721**
    - shutting down Port Fast-enabled ports **2-744**
    - state information display **2-667**
  - MTU
    - configuring size **2-803**
    - displaying global setting **2-675**
  - Multicast Listener Discovery
    - See MLD
    - multicast group address, MVR **2-371**
    - multicast groups, MVR **2-369**
    - Multicast Listener Discovery
      - See MLD
      - multicast router learning method **2-236**
      - multicast router ports, configuring **2-236**
      - multicast router ports, IPv6 **2-270**
      - multicast storm control **2-762**
      - multicast VLAN, MVR **2-368**
      - multicast VLAN registration
        - See MVR

## Multiple Spanning Tree Protocol

See MSTP

## MVR

- and address aliasing [2-369](#)
- configuring [2-368](#)
- configuring interfaces [2-371](#)
- debug messages, display [B-28](#)
- displaying [2-632](#)
- displaying interface information [2-634](#)
- members, displaying [2-636](#)
- mvr (global configuration) command [2-368](#)
- mvr (interface configuration) command [2-371](#)
- mvr vlan group command [2-372](#)

## N

- native VLANs [2-798](#)
- native VLAN tagging [2-826](#)
- network-policy (global configuration) command [2-375](#)
- network-policy command [2-374](#)
- network-policy profile (network-policy configuration) command [2-377](#)
- nmstp attachment suppress command [2-380](#)
- nmstp command [2-379](#)
- nonegotiate, speed [2-754](#)
- nonegotiating DTP messaging [2-783](#)
- non-IP protocols
  - denying [2-120](#)
  - forwarding [2-393](#)
- non-IP traffic access lists [2-296](#)
- non-IP traffic forwarding
  - denying [2-120](#)
  - permitting [2-393](#)
- normal-range VLANs [2-819](#)
- notifies command [2-12](#)
- no vlan command [2-819](#)

## O

- online diagnostics
  - displaying
    - configured boot-up coverage level [2-506](#)
    - current scheduled tasks [2-506](#)
    - event logs [2-506](#)
    - supported test suites [2-506](#)
    - test ID [2-506](#)
    - test results [2-506](#)
    - test statistics [2-506](#)
  - global configuration mode
    - clearing health monitoring diagnostic test schedule [2-80](#)
    - setting health monitoring diagnostic testing [2-80](#)
    - setting up health monitoring diagnostic test schedule [2-80](#)

## P

- PAgP
  - See EtherChannel
- pagp learn-method command [2-381](#)
- pagp port-priority command [2-383](#)
- password, VTP [2-836](#)
- permit (ARP access-list configuration) command [2-385](#)
- permit (IPv6) command [2-387](#)
- permit (MAC access-list configuration) command [2-393](#)
- per-VLAN spanning-tree plus
  - See STP
- physical-port learner [2-381](#)
- PID, displaying [2-542](#)
- PIM-DVMRP, as multicast router learning method [2-236](#)
- police aggregate command [2-398](#)
- police command [2-396](#)
- policed-DSCP map [2-334](#)
- policy-map command [2-400](#)
- policy maps
  - applying to an interface [2-451, 2-456](#)

- creating **2-400**
- displaying **2-648**
- hierarchical **2-400**
- policers
  - displaying **2-617**
  - for a single class **2-396**
  - for multiple classes **2-328, 2-398**
  - policed-DSCP map **2-334**
- traffic classification
  - defining the class **2-73**
  - defining trust states **2-812**
  - setting DSCP or IP precedence values **2-454**
- Port Aggregation Protocol
  - See EtherChannel
- port-based authentication
  - AAA method list **2-3**
  - configuring violation modes **2-157**
  - debug messages, display **B-11**
  - enabling IEEE 802.1x
    - globally **2-123**
    - per interface **2-148**
  - guest VLAN **2-138**
  - host modes **2-140**
  - IEEE 802.1x AAA accounting methods **2-1**
  - initialize an interface **2-142, 2-154**
  - MAC authentication bypass **2-143**
  - manual control of authorization state **2-148**
  - PAE as authenticator **2-147**
  - periodic re-authentication
    - enabling **2-151**
    - time between attempts **2-155**
  - quiet period between failed authentication exchanges **2-155**
  - re-authenticating IEEE 802.1x-enabled ports **2-150**
  - resetting configurable IEEE 802.1x parameters **2-136**
  - switch-to-authentication server retransmission time **2-155**
  - switch-to-client frame-retransmission number **2-145 to 2-146**
  - switch-to-client retransmission time **2-155**
- test for IEEE 802.1x readiness **2-153**
- port-channel load-balance command **2-403**
- Port Fast, for spanning tree **2-746**
- port ranges, defining **2-112**
- ports, debugging **B-71**
- ports, protected **2-796**
- port security
  - aging **2-790**
  - debug messages, display **B-73**
  - enabling **2-785**
  - violation error recovery **2-166**
- port trust states for QoS **2-360**
- port types, MVR **2-371**
- power supply alarms, setting **2-9**
- power-supply dual command **2-405**
- power-supply mode **2-405**
- Precision Time Protocol
- primary temperature alarm **2-10**
- priority-queue command **2-406**
- private-vlan command **2-408**
- private-vlan mapping command **2-411**
- private VLANs
  - association **2-794**
  - configuring **2-408**
  - configuring ports **2-781**
  - host ports **2-781**
  - mapping
    - configuring **2-794**
    - promiscuous ports **2-781**
  - privileged EXEC mode **1-2, 1-3**
- product identification information, displaying **2-542**
- profinet **2-413**
- promiscuous ports, private VLANs **2-781**
- protected ports, displaying **2-534**
- pruning
  - VLANs **2-798**
- VTP
  - displaying interface information **2-529**
  - enabling **2-836**

- pruning-eligible VLAN list [2-799](#)
- psp [2-415](#)
- psp command [2-415](#)
- ptp (global configuration) command [2-416](#)
- ptp interface configuration command [2-418](#)
- PTP settings [2-418](#)
- PVST+
- See STP
- 
- Q**
- QoS
- auto-QoS
- configuring [2-54](#)
- debug messages, display [B-4](#)
- displaying [2-474](#)
- class maps
- creating [2-75](#)
- defining the match criteria [2-320](#)
- displaying [2-486](#)
- defining the CoS value for an incoming packet [2-330](#)
- displaying configuration information [2-474, 2-616](#)
- DSCP transparency [2-342](#)
- DSCP trusted ports
- applying DSCP-to-DSCP-mutation map to [2-332](#)
- defining DSCP-to-DSCP-mutation map [2-334](#)
- egress queues
- allocating buffers [2-338](#)
- defining the CoS output queue threshold map [2-356](#)
- defining the DSCP output queue threshold map [2-358](#)
- displaying buffer allocations [2-620](#)
- displaying CoS output queue threshold map [2-624](#)
- displaying DSCP output queue threshold map [2-624](#)
- displaying queueing strategy [2-620](#)
- displaying queue-set settings [2-627](#)
- enabling bandwidth shaping and scheduling [2-758](#)
- enabling bandwidth sharing and scheduling [2-760](#)
- limiting the maximum output on a port [2-756](#)
- mapping a port to a queue-set [2-420](#)
- mapping CoS values to a queue and threshold [2-356](#)
- mapping DSCP values to a queue and threshold [2-358](#)
- setting maximum and reserved memory allocations [2-340](#)
- setting WTD thresholds [2-340](#)
- enabling [2-326](#)
- ingress queues
- allocating buffers [2-346](#)
- assigning SRR scheduling weights [2-344](#)
- defining the CoS input queue threshold map [2-348](#)
- defining the DSCP input queue threshold map [2-350](#)
- displaying buffer allocations [2-620](#)
- displaying CoS input queue threshold map [2-624](#)
- displaying DSCP input queue threshold map [2-624](#)
- displaying queueing strategy [2-620](#)
- displaying settings for [2-618](#)
- enabling the priority queue [2-352](#)
- mapping CoS values to a queue and threshold [2-348](#)
- mapping DSCP values to a queue and threshold [2-350](#)
- setting WTD thresholds [2-354](#)
- maps
- defining [2-334, 2-348, 2-350, 2-356, 2-358](#)
- displaying [2-624](#)
- policy maps
- applying an aggregate policer [2-398](#)
- applying to an interface [2-451, 2-456](#)
- creating [2-400](#)
- defining policers [2-328, 2-396](#)
- displaying policers [2-617](#)

- displaying policy maps **2-648**  
 hierarchical **2-400**  
 policed-DSCP map **2-334**  
 setting DSCP or IP precedence values **2-454**  
 traffic classifications **2-73**  
 trust states **2-812**  
 port trust states **2-360**  
 queues, enabling the expedite **2-406**  
 statistics  
   in-profile and out-of-profile packets **2-620**  
   packets enqueued or dropped **2-620**  
   sent and received CoS values **2-620**  
   sent and received DSCP values **2-620**  
 trusted boundary for IP phones **2-360**  
 VLAN-based **2-362**  
 quality of service  
   See QoS  
 querytime, MVR **2-368**  
 queue-set command **2-420**
- 
- R**
- radius-server dead-criteria command **2-421**  
 radius-server host command **2-423**  
 rapid per-VLAN spanning-tree plus  
   See STP  
 rapid PVST+  
   See STP  
 rcommand command **2-425**  
 re-authenticating IEEE 802.1x-enabled ports **2-150**  
 re-authentication  
   periodic **2-151**  
   time between attempts **2-155**  
 receiver ports, MVR **2-371**  
 receiving flow-control packets **2-173**  
 recovery mechanism  
   causes **2-166**  
   display **2-79, 2-480, 2-516, 2-518**  
   timer interval **2-167**
- redundancy for cluster switches **2-109**  
 relay-major command **2-12**  
 relay-minor command **2-12**  
 remote-span command **2-427**  
 Remote Switched Port Analyzer  
   See RSPAN  
 rename (boot loader) command **A-17**  
 renew ip dhcp snooping database command **2-429**  
 rep admin vlan command **2-431**  
 rep block port command **2-432**  
 rep lsl-age-timer command **2-435**  
 rep preempt delay command **2-437**  
 rep preempt segment command **2-439**  
 rep segment command **2-440**  
 rep stcn command **2-443**  
 reset (boot loader) command **A-18**  
 resource templates, displaying **2-663**  
 restricted VLAN  
   See dot1x auth-fail vlan  
 rmdir (boot loader) command **A-19**  
 rmon collection stats command **2-445**  
 root guard, for spanning tree **2-719**  
 routed ports  
   IP addresses on **2-185**  
   number supported **2-185**  
 RSPAN  
   configuring **2-363**  
   displaying **2-630**  
   filter RSPAN traffic **2-363**  
   remote-span command **2-427**  
   sessions  
    displaying **2-630**
- 
- S**
- sdm prefer command **2-446**  
 SDM templates  
   displaying **2-663**  
   dual IPv4 and IPv6 **2-446**

secondary temperature alarm [2-10](#)

secure ports, limitations [2-787](#)

see PTP

sending flow-control packets [2-173](#)

service password-recovery command [2-449](#)

service-policy command [2-451](#)

set (boot loader) command [A-20](#)

set command [2-454](#)

setup command [2-456](#)

setup express command [2-459](#)

show access-lists command [2-461](#)

show alarm description port [2-464](#)

show alarm description port command [2-464](#)

show alarm profile command [2-465](#)

show alarm settings command [2-467](#)

show archive status command [2-468](#)

show arp access-list command [2-469](#)

show authentication command [2-470](#)

show auto qos command [2-474](#)

show boot command [2-478](#)

show cable-diagnostics tdr command [2-480](#)

show cisp command [2-485](#)

show class-map command [2-486](#)

show cluster candidates command [2-489](#)

show cluster command [2-487](#)

show cluster members command [2-491](#)

show controllers cpu-interface command [2-493](#)

show controllers ethernet-controller command [2-495](#)

show controllers tcam command [2-502](#)

show controller utilization command [2-504](#)

show dot1q-tunnel command [2-506](#)

show dot1x command [2-507](#)

show dtp [2-511](#)

show eap command [2-513](#)

show env command [2-515](#)

show errdisable detect command [2-516](#)

show errdisable flap-values command [2-517](#)

show errdisable recovery command [2-518](#)

show etherchannel command [2-520](#)

show facility-alarm relay command [2-523](#)

show facility-alarm status [2-523](#)

show facility-alarm status command [2-524](#)

show fallback profile command [2-525](#)

show fcs threshold command [2-526](#)

show flowcontrol command [2-528](#)

show interface rep command [2-540](#)

show interfaces command [2-529](#)

show interfaces counters command [2-538](#)

show interfaces rep command [2-540](#)

show inventory command [2-542](#)

show ip arp inspection command [2-543](#)

show ipc command [2-567](#)

show ip dhcp snooping binding command [2-548](#)

show ip dhcp snooping command [2-547](#)

show ip dhcp snooping database command [2-551, 2-553](#)

show ip igmp profile command [2-556](#)

show ip igmp snooping address command [2-575](#)

show ip igmp snooping command [2-557, 2-573](#)

show ip igmp snooping groups command [2-559](#)

show ip igmp snooping mrouter command [2-561, 2-577](#)

show ip igmp snooping querier command [2-562, 2-579](#)

show ip source binding command [2-564](#)

show ipv6 access-list command [2-570](#)

show ipv6 dhcp conflict command [2-572](#)

show ipv6 route updated [2-581](#)

show ip verify source command [2-565](#)

show l2protocol-tunnel command [2-583](#)

show lacp command [2-586](#)

show link state group command [2-592](#)

show location [2-590](#)

show mac access-group command [2-594](#)

show mac address-table address command [2-597](#)

show mac address-table aging time command [2-599](#)

show mac address-table command [2-595](#)

show mac address-table count command [2-601](#)

show mac address-table dynamic command [2-603](#)

show mac address-table interface command [2-605](#)

show mac address-table learning command [2-607](#)

- show mac address-table move update command **2-608**  
 show mac address-table notification command **2-89, 2-610, B-25**  
 show mac address-table static command **2-612**  
 show mac address-table vlan command **2-614**  
 show mls qos aggregate-policer command **2-617**  
 show mls qos command **2-616**  
 show mls qos input-queue command **2-618**  
 show mls qos interface command **2-620**  
 show mls qos maps command **2-624**  
 show mls qos queue-set command **2-627**  
 show mls qos vlan command **2-629**  
 show monitor command **2-630**  
 show mvr command **2-632**  
 show mvr interface command **2-634**  
 show mvr members command **2-636**  
 show network-policy profile command **2-638**  
 show nmfp command **2-640**  
 show pagp command **2-643**  
 show parser macro command **2-645**  
 show platform acl command **C-2**  
 show platform backup interface command **C-3**  
 show platform configuration command **C-4**  
 show platform etherchannel command **C-5**  
 show platform forward command **C-6**  
 show platform igmp snooping command **C-8**  
 show platform ip multicast command **C-9**  
 show platform ip unicast command **C-10**  
 show platform ipv6 unicast command **C-14**  
 show platform ip wccp command **C-13**  
 show platform layer4op command **C-16**  
 show platform mac-address-table command **C-17**  
 show platform messaging command **C-18**  
 show platform monitor command **C-19**  
 show platform mvr table command **C-20**  
 show platform pm command **C-21**  
 show platform port-asic command **C-22**  
 show platform port-security command **C-26**  
 show platform qos command **C-27**  
 show platform resource-manager command **C-28**  
 show platform snmp counters command **C-30**  
 show platform spanning-tree command **C-31**  
 show platform stp-instance command **C-32**  
 show platform team command **C-33**  
 show platform vlan command **C-36**  
 show policy-map command **2-648**  
 show port security command **2-650**  
 show profinet **2-653**  
 show psp config **2-655**  
 show psp config command **2-655**  
 show psp statistics **2-656**  
 show psp statistics command **2-656**  
 show ptp command **2-657**  
 show rep topology command **2-660**  
 show sdm prefer command **2-663**  
 show setup express command **2-666**  
 show spanning-tree command **2-667**  
 show storm-control command **2-673**  
 show system mtu command **2-675**  
 show trust command **2-812**  
 show udld command **2-676**  
 show version command **2-679**  
 show vlan access-map command **2-686**  
 show vlan command **2-681**  
 show vlan command, fields **2-683**  
 show vlan filter command **2-687**  
 show vmps command **2-688**  
 show vtp command **2-690**  
 shutdown command **2-695**  
 shutdown threshold, Layer 2 protocol tunneling **2-274**  
 shutdown vlan command **2-696**  
 small violation-rate command **2-697**  
 Smartports macros  
   See macros  
 SNMP host, specifying **2-703**  
 SNMP informs, enabling the sending of **2-699**  
 snmp-server enable traps command **2-699**  
 snmp-server host command **2-703**

- snmp trap mac-notification change command **2-706**
- SNMP traps
- enabling MAC address notification trap **2-706**
  - enabling the MAC address notification feature **2-303**
  - enabling the sending of **2-699**
- SoftPhone
- See Cisco SoftPhone
- software images
- deleting **2-114**
  - downloading **2-16**
  - upgrading **2-16**
  - uploading **2-22**
- software version, displaying **2-679**
- source ports, MVR **2-371**
- SPAN
- configuring **2-363**
  - debug messages, display **B-26**
  - displaying **2-630**
  - filter SPAN traffic **2-363**
  - sessions
    - add interfaces to **2-363**
    - displaying **2-630**
    - start new **2-363**
- spanning-tree backbonefast command **2-708**
- spanning-tree bpdufilter command **2-709**
- spanning-tree bpduguard command **2-711**
- spanning-tree cost command **2-713**
- spanning-tree etherchannel command **2-715**
- spanning-tree extend system-id command **2-717**
- spanning-tree guard command **2-719**
- spanning-tree link-type command **2-721**
- spanning-tree loopguard default command **2-723**
- spanning-tree mode command **2-725**
- spanning-tree mst configuration command **2-727**
- spanning-tree mst cost command **2-729**
- spanning-tree mst forward-time command **2-731**
- spanning-tree mst hello-time command **2-732**
- spanning-tree mst max-age command **2-733**
- spanning-tree mst max-hops command **2-734**
- spanning-tree mst port-priority command **2-736**
- spanning-tree mst pre-standard command **2-738**
- spanning-tree mst priority command **2-739**
- spanning-tree mst root command **2-740**
- spanning-tree portfast (global configuration) command **2-744**
- spanning-tree portfast (interface configuration) command **2-746**
- spanning-tree port-priority command **2-742**
- Spanning Tree Protocol
- See STP
- spanning-tree transmit hold-count command **2-748**
- spanning-tree uplinkfast command **2-749**
- spanning-tree vlan command **2-751**
- speed command **2-754**
- srr-queue bandwidth limit command **2-756**
- srr-queue bandwidth share command **2-760**
- SSH, configuring version **2-242**
- static-access ports, configuring **2-767**
- statistics, Ethernet group **2-445**
- sticky learning, enabling **2-785**
- storm-control command **2-762**
- STP
- BackboneFast **2-708**
  - counters, clearing **2-96**
  - debug messages, display
    - BackboneFast events **B-92**
    - MSTP **B-95**
    - optimized BPDU handling **B-94**
    - spanning-tree activity **B-90**
    - switch shim **B-97**
    - transmitted and received BPDU **B-93**
  - UplinkFast **B-99**
  - detection of indirect link failures **2-708**
  - EtherChannel misconfiguration **2-715**
  - extended system ID **2-717**
  - path cost **2-713**
  - protocol modes **2-725**
  - root port

- accelerating choice of new **2-749**
- loop guard **2-719**
- preventing from becoming designated **2-719**
- restricting which can be root **2-719**
- root guard **2-719**
- UplinkFast **2-749**
- root switch
- affects of extended system ID **2-717, 2-752**
  - hello-time **2-751**
  - interval between BDPU messages **2-751**
  - interval between hello BPDU messages **2-751**
  - max-age **2-751**
  - port priority for selection of **2-742**
  - primary or secondary **2-751**
  - switch priority **2-751**
- state changes
- blocking to forwarding state **2-746**
  - enabling BPDU filtering **2-709, 2-744**
  - enabling BPDU guard **2-711, 2-744**
  - enabling Port Fast **2-744, 2-746**
  - enabling timer to recover from error state **2-166**
  - forward-delay time **2-751**
  - length of listening and learning states **2-751**
  - shutting down Port Fast-enabled ports **2-744**
- state information display **2-667**
- VLAN options **2-739, 2-751**
- SVIs, creating **2-179**
- SVI status calculation **2-769**
- Switched Port Analyzer
- See SPAN
- switching characteristics
- modifying **2-765**
  - returning to interfaces **2-765**
- switchport access command **2-767**
- switchport autostate exclude command **2-769**
- switchport backup interface command **2-771**
- switchport block command **2-775**
- switchport command **2-765**
- switchport host command **2-777**
- switchport mode command **2-778**
- switchport mode private-vlan command **2-781**
- switchport nonegotiate command **2-783**
- switchport port-security aging command **2-790**
- switchport port-security command **2-785**
- switchport priority extend command **2-792**
- switchport private-vlan command **2-794**
- switchport protected command **2-796**
- switchports, displaying **2-529**
- switchport trunk command **2-798**
- switchport voice vlan command **2-801**
- syslog command **2-12**
- system message logging, save message to flash **2-290**
- system mtu command **2-803**
- system resource templates **2-446**
- 
- T**
- tar files, creating, listing, and extracting **2-19**
- TDR, running **2-805**
- Telnet, using to communicate to cluster switches **2-425**
- temperature alarms, setting **2-10**
- templates, system resources **2-446**
- test cable-diagnostics tdr command **2-805**
- test relay **2-806**
- test relay command **2-806**
- traceroute mac command **2-807**
- traceroute mac ip command **2-810**
- trunking, VLAN mode **2-778**
- trunk mode **2-778**
- trunk ports **2-778**
- trunks, to non-DTP device **2-779**
- trusted boundary for QoS **2-360**
- trusted port states for QoS **2-360**
- tunnel ports, Layer 2 protocol, displaying **2-583**
- type (boot loader) command **A-23**

**U****UDLD**

aggressive mode **2-814, 2-816**  
 debug messages, display **B-107**  
 enable globally **2-814**  
 enable per interface **2-816**  
 error recovery timer **2-166**  
 message timer **2-814**  
 normal mode **2-814, 2-816**  
 reset a shutdown interface **2-818**  
 status **2-676**

**udld** command **2-814**

**udld port** command **2-816**

**udld reset** command **2-818**

unicast storm control **2-762**

**UniDirectional Link Detection**

See UDLD

unknown multicast traffic, preventing **2-775**

unknown unicast traffic, preventing **2-775**

**unset** (boot loader) command **A-25**

**upgrading**

software images  
 downloading **2-16**  
 monitoring status of **2-468**

**UplinkFast**, for STP **2-749**

**user EXEC** mode **1-2**

**V**

**version** (boot loader) command **A-27**  
**vlan** (global configuration) command **2-819**  
**vlan access-map** command **2-824**  
**VLAN access map** configuration mode **2-824**  
**VLAN access maps**  
 actions **2-6**  
 displaying **2-686**  
**VLAN-based QoS** **2-362**  
**VLAN configuration**

rules **2-822**

saving **2-819**

**VLAN configuration mode**

description **1-4**  
 entering **2-819**  
 summary **1-2**

**vlan dot1q tag native** command **2-826**

**vlan filter** command **2-828**

**VLAN filters**, displaying **2-687**

**VLAN ID range** **2-819**

**VLAN maps**

applying **2-828**  
 creating **2-824**  
 defining **2-318**  
 displaying **2-686**

**VLAN Query Protocol**

See VQP

**VLANs**

adding **2-819**  
 configuring **2-819**  
 debug messages, display  
**ISL** **B-103**  
**VLAN IOS file system error tests** **B-102**  
**VLAN manager activity** **B-100**  
**VTP** **B-105**

displaying configurations **2-681**

enabling guest VLAN supplicant **2-126, 2-137, 2-171**

extended-range **2-819**

**MAC addresses**

displaying **2-614**  
 number of **2-601**  
**media types** **2-822**  
**normal-range** **2-819**  
**private** **2-781**

configuring **2-408**

See also private VLANs

restarting **2-696**

saving the configuration **2-819**

shutting down **2-696**

- SNMP traps for VTP **2-701**
- suspending **2-696**
- VLAN Trunking Protocol
  - See VTP
- VMPS
  - configuring servers **2-833**
  - displaying **2-688**
  - error recovery timer **2-167**
  - reconfirming dynamic VLAN assignments **2-830**
  - vmpls reconfirm (global configuration) command **2-831**
  - vmpls reconfirm (privileged EXEC) command **2-830**
  - vmpls retry command **2-832**
  - vmpls server command **2-833**
  - voice VLAN
    - configuring **2-801**
    - setting port priority **2-792**
- VQP
  - and dynamic-access ports **2-768**
  - clearing client statistics **2-98**
  - displaying information **2-688**
  - per-server retry count **2-832**
  - reconfirmation interval **2-831**
  - reconfirming dynamic VLAN assignments **2-830**
- VTP
  - changing characteristics **2-835**
  - clearing pruning counters **2-99**
  - configuring
    - domain name **2-835**
    - file name **2-835**
    - mode **2-835**
    - password **2-836**
  - counters display fields **2-691**
  - displaying information **2-690**
  - enabling
    - pruning **2-836**
    - Version 2 **2-836**
  - enabling per port **2-840**
  - mode **2-835**
  - pruning **2-836**

