



Preface

Overview

This guide documents the hardware features of the Cisco eXpandable Power System 2200 (XPS 2200). It describes the physical and performance characteristics of the XPS 2200, explains how to install it, and provides troubleshooting information.

This guide does not describe system messages that you might receive or how to configure the XPS 2200 (hereafter referred to as the *XPS*). You configure the XPS through the CLI and manage it through the Cisco IOS or management software on the Catalyst 3750-X and 3560-X switches.

For information about configuring the XPS 2200, see the *Cisco eXpandable Power System 2200 Configuration Note* on Cisco.com.

For information about the standard Cisco IOS commands, see the Cisco IOS documentation set from the Cisco.com home page.

Conventions

This document uses these conventions and symbols for notes, cautions, and warnings. Translations of the warning statements in this document appear in the *Regulatory Compliance and Safety Information for the Cisco eXpandable Power System 2200*.



Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



Warning

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device. Statement 1071

Related Publications

These documents provide more information about the XPS and supported switches:

- *Regulatory Compliance and Safety Information for the Cisco eXpandable Power System 2200*
- *Cisco eXpandable Power System 2200 Configuration Note*
- *Installation Notes for the Catalyst 3750-X and Catalyst 3560-X Switch Power Supply Modules*
- *Installation Notes for the Catalyst 3750-X and 3560-X Switch Fan Module*
- *Installation Notes for the Catalyst 3750-X and 3560-X Switch Network Modules*
- *Catalyst 3750-X and 3560-X Switch Getting Started Guide*
- *Catalyst 3750-X and 3560-X Switch Hardware Installation Guide*
- *Regulatory Compliance and Safety Information for the Catalyst 3750-X and 3560-X Switch*
- *Catalyst 3750-X and 3560-X Switch Software Configuration Guide*
- *Catalyst 3750-X and 3560-X Switch Command Reference*
- *Catalyst 3750-X, 3750-E, 3560-X, and 3560-E Switch System Message Guide*
- *Release Notes for the Catalyst 3750-X and 3560-X Switch*
- *Cisco IOS Software Installation Document*

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.