



A

- About function [1-7](#)
- Address Book window [2-2, 5-13](#)
- Apply button [1-7](#)
- audio
 - codec statistics [2-14, 6-2](#)
 - settings [2-2, 5-14](#)
- auto answer phone setting [5-14](#)

B

- bandwidth, meeting quality and [5-19](#)
- bit rate, advertised and negotiated [2-14, 6-2](#)

C

- calling services, restarting [2-17](#)
- call length, maximum [5-14](#)
- Call Statistics window [2-14, 6-2](#)
- camera
 - monitoring [1-3](#)
- Cisco CallManager
 - monitoring [1-3](#)
- Cisco TelePresence Touch 12
 - software upgrade information [5-22](#)
- Cisco Unified Communications Manager
 - configuration file location [2-2, 5-11](#)
 - monitoring [1-3](#)
- Cisco Unified Communications Manager Settings window [2-2, 5-11](#)
- codec, statistics from [2-14, 6-2](#)

D

- Device information
 - hardware/software information [3-3](#)
 - status information details [3-6](#)
 - system information details [3-4](#)
- DHCP configuration [2-1, 5-8](#)
- DHCP server, restarting [2-17](#)
- directory, adding meeting room to [2-2, 5-13](#)
- Display [5-20](#)
- display
 - monitoring [1-3](#)
- DSCP, audio and video settings [2-2, 5-14](#)

F

- field, data in [1-7](#)
- Firmware, upgrading [5-21](#)

H

- Help function [1-7](#)

I

- IP address
 - Cisco TelePresence [2-1, 5-8](#)
 - dynamic [2-1, 5-8](#)
 - meeting room [2-2, 5-13](#)
 - static [2-1, 5-8](#)
- IP phone
 - manual configuration of [2-2, 5-14](#)
 - monitoring [1-3](#)

IP Settings window [2-1, 5-8](#)

L

language, displayed [5-19](#)

Logout function [1-7](#)

M

MAC address

 Cisco TelePresence [2-1, 5-8](#)

media port settings [5-15](#)

message

 validation [1-7](#)

N

navigating the system [1-5](#)

Network Settings window [2-2, 5-10](#)

Network Statistics window [2-16, 6-5](#)

P

packet transmission statistics [2-16, 6-5](#)

password, changing [2-3, 5-18](#)

Passwords

 resetting in CTS [5-22](#)

R

Reset button [1-7](#)

restarting

 calling services [2-17](#)

 DHCP server [2-17](#)

 SNMP server [2-17](#)

 telephone server [2-17](#)

S

SNMP server, restarting [2-17](#)

SNMP Settings window [2-2, 5-16](#)

system [2-3, 5-18](#)

 days display not active [5-19](#)

 display on duration [5-20](#)

 display on time [5-20](#)

 navigation [1-5](#)

 quality [2-3, 5-18](#)

 status update [1-3](#)

 type [5-19](#)

System Settings window [2-3, 5-18](#)

System Status window [1-3](#)

T

telephone server, restarting [2-17](#)

Telephony Settings window [2-2, 5-14](#)

TFTP server, configuring [2-2, 5-11](#)

time zone, selecting [5-19](#)

trap receiver, SNMP [2-2, 5-16](#)

Troubleshooting

 CTX Test tab [2-5](#)

 Device Test tab [2-3](#)

U

username, setting [2-3, 5-18](#)

V

video

 codec statistics [2-14, 6-2](#)

 settings [2-2, 5-14](#)

VLAN ID

 administrative [2-2, 5-10](#)

 operational [2-2, 5-10](#)