



Numerics

50 Hz flicker reduction, enabling or disabling [5-18](#)

802.1x

enable or disable [5-31](#)

show status [6-49](#)

A

Active Control

enable or disable [5-4](#)

Active Control Mode

show [6-4, 6-5](#)

C

calls

add an audio call to an existing conference [2-2](#)

answer an incoming call [2-3](#)

initiate a call to the specified address [2-8](#)

place a specified call on hold [2-5](#)

resume a call on a specified line [2-6](#)

terminate the current call [2-4](#)

view the state of an active call [2-9](#)

commands

ending an SSH session [1-7](#)

getting help with [1-6](#)

how to use [1-6](#)

starting an SSH session [1-2](#)

connectivity

restoring [1-5](#)

D

diagnostics

capture camera display image [3-9](#)

check the audio loopback status [3-5](#)

download diagnostic display register information [3-15](#)

initiate a full diagnostic display loopback [3-3, 3-13](#)

initiate diagnostic color bar display [3-11](#)

perform a full system check [3-18](#)

perform a quick system check [3-18](#)

set the display color temperature [3-17](#)

switches camera focus [3-8](#)

terminate a full diagnostic display loopback [3-2, 3-12](#)

terminate diagnostic color bar display [3-10](#)

view the current display temperature [3-16](#)

view the status of the full diagnostic display loopback [3-14](#)

display

show diagnostics [6-43](#)

show errors [6-45](#)

show HDMI ports [6-46](#)

show status [6-44](#)

DTLS

enable or disable [5-34](#)

show version [6-51](#)

F

files

list logging files [4-6](#)

list NV bootlog files [4-7](#)

tail the contents of a file in the logging area [4-8](#)

tail the contents of a file in the NV bootlog area [4-9](#)

transfer the log file(s) to an external server using FTP [4-3](#)

transfer the log file(s) to an external server using SCP [4-4](#)

transfer the log file(s) to an external server using SFTP [4-5](#)

view the contents of a file in the logging area [4-10](#)

view the contents of a file in the NV bootlog area [4-11](#)

H

H.265 High Efficiency Video Coding (HEVC) standard

enable or disable [5-82](#)

show status [6-112](#)

P

passwords

expiration notices [1-3](#)

login history [1-5](#)

resetting in Cisco Unified CM [1-4](#)

resetting on CTS codec [1-4](#)

set new admin password [5-55](#)

troubleshooting [1-5](#)

updating [1-2](#)

S

settings

answer incoming calls [5-12, 5-14](#)

change voice activity detection threshold [5-81](#)

clear the directory [5-28](#)

control (disable) the logging level to the CLI logs [5-46](#)

control (enable) the logging level to the CLI logs [5-47](#)

control Camera Sync Inhibit [5-19](#)

define the Cisco TelePresence System device type [5-25](#)

define the Cisco Unified CM server [5-27](#)

disable acoustic echo cancellation (AEC) [5-5, 5-9](#)

disable answering incoming calls [5-11, 5-13](#)

disable camera zoom step mode [5-20](#)

disable the Cisco Unified CM Down Revision support state [5-32](#)

disable the License feature for Satellite [5-44](#)

disable the output of CLI data in Bellcore TL1 format [5-53](#)

enable acoustic echo cancellation (AEC) [5-5](#)

enable or disable audio mute [5-8](#)

enable or disable audio on the specified source [5-10](#)

enable or disable automatic frame rate [5-58](#)

enable or disable video on the specific source [5-84](#)

enable output of CLI data in Bellcore TL1 format [5-54](#)

enable the camera zoom, stepped mode [5-21](#)

enable the Cisco Unified CM Down Revision support state [5-33](#)

enable the License feature for Satellite [5-45](#)

force an upgrade of graphic icons [5-79](#)

force an upgrade of micro-controller [5-80](#)

force an upgrade of the audio peripheral [5-72](#)

force an upgrade of the auxiliary-ctrl peripheral [5-74](#)

force an upgrade of the camera peripheral [5-75](#)

force an upgrade of the display peripheral [5-76](#)

force an upgrade of the firmware peripheral [5-77](#)

force an upgrade of the graphic driver [5-78](#)

open or close the firewall for XmlRpc traffic [5-35](#)

regenerate the Web Interface Certificate [5-23](#)

reset the auxiliary control unit [5-36](#)

reset the camera [5-37](#)

reset the document camera [5-39](#)

set a new admin password [5-55](#)

set network IP DHCP values [5-49](#)

set new network IP static values [5-50](#)

set the active control mode [5-4](#)

set the Certificate Authority Proxy Function (CAPF) authentication string [5-60](#)

set the default facility used for syslog messages [5-62](#)

set the DTLS version [5-34](#)

set the heartbeat interval in minutes [5-64](#)

- set the network interface Maximum Transmission Unit (MTU) [5-48](#)
- set the output format version of the syslog messages [5-69](#)
- set the projector peripheral to default [5-41](#)
- set the timezone used for syslog message timestamps [5-67, 5-68](#)
- setting the main window in the presentation-in-picture (PiP) window [5-56](#)
- setting the presentation-in-picture (PiP) in the main window [5-56](#)
- set video quality [5-83](#)
- specify the heartbeat message standard syslog severity [5-66](#)
- specify the heartbeat message string [5-65](#)
- specify the standard syslog facility used for heartbeat messages [5-63](#)
- turning off the lights [5-40](#)
- turning on the lights [5-40](#)
- turn off 802.1x authentication [5-31](#)
- turn off the camera [5-37](#)
- turn off the display [5-29](#)
- turn on 802.1x authentication [5-31](#)
- turn on the camera [5-37](#)
- turn on the display [5-30](#)
- uniquely identify the timezone [5-70](#)
- show
 - 802.1x status [6-49](#)
 - active control mode [6-4, 6-5](#)
 - all audio-related hardware information [6-56](#)
 - all basic platform network information [6-69](#)
 - all hardware information [6-55](#)
 - all statistics of the call [6-12](#)
 - all system hardware information [6-62](#)
 - all video hardware information [6-63](#)
 - audio-addin statistics of the call [6-11](#)
 - audio statistics of the call [6-14](#)
 - audio status [6-6](#)
 - available timezones in long format [6-107](#)
 - basic platform network information about Ethernet port 0 [6-72](#)
 - basic platform network route information [6-73](#)
 - basic platform network status information [6-74](#)
 - basic platform status information [6-91](#)
 - call economy quality feature settings [6-8](#)
 - call hold feature settings [6-9](#)
 - call idle redirect settings [6-10](#)
 - CAPF authentication string [6-85](#)
 - CDP interface and configuration [6-23](#)
 - CDP neighbors entries [6-24](#)
 - configuration information [6-36](#)
 - configured alternate directory server [6-42](#)
 - configured heartbeat message test string [6-96](#)
 - configured severity of the heartbeat messages [6-97](#)
 - contents of the Locally Significant Certificate (LSC) [6-26](#)
 - contents of the Manufacturing Installed Certificate (MIC) [6-28](#)
 - contents of the Web Interface Certificate [6-34](#)
 - current Cisco Unified CM Down Revision support state [6-50](#)
 - current timezone setting in long format [6-106](#)
 - diagnostics, system [6-43](#)
 - display information [6-58](#)
 - display status [6-44, 6-45, 6-46](#)
 - DTLS version [6-51](#)
 - firewall entries [6-52](#)
 - information about the current account [6-68](#)
 - lcu information [6-60](#)
 - license status [6-65](#)
 - light control unit information [6-60](#)
 - meeting details [6-66](#)
 - meeting summary and details [6-67](#)
 - network aspects of the machine [6-102](#)
 - Network Failure Detection parameters [6-76](#)
 - number of sessions that are currently logged into the CTS [6-89](#)
 - phone configuration information [6-38](#)
 - platform inventory information [6-64](#)
 - projector hardware information [6-61](#)
 - remote speaker and video status [6-82](#)

- runtime aspects of the machine [6-103](#)
- security information [6-86](#)
- security trustlist [6-87](#)
- status of the call [6-18](#)
- status of the secondary codecs [6-83](#)
- syslog default facility used for logging messages [6-93](#)
- syslog heartbeat facility used for heartbeat messages [6-94](#)
- syslog heartbeat interval in minutes [6-95](#)
- syslog output version [6-101](#)
- syslog remote server details [6-98](#)
- syslog server details [6-99](#)
- syslog time zone setting [6-100](#)
- system aspects of the machine [6-105](#)
- system configuration information [6-40](#)
- system diagnostics [6-43](#)
- upgrade status [6-110](#)
- version number of the software on the system [6-111](#)
- video statistics of the call [6-17](#)
- video status [6-113](#)

T

troubleshooting

- camera image capture tool [9-1](#)
 - initiate the screen capture [9-2](#)
 - stop the call control agent [9-2](#)
 - turn on camera loopback [9-2](#)

U

unsetting

- clear a forced upgrade of the audio peripheral [7-2](#)
- clear a forced upgrade of the auxiliary-ctrl peripheral [7-3](#)
- clear a forced upgrade of the camera peripheral [7-4](#)
- clear a forced upgrade of the display peripheral [7-5](#)
- clear a forced upgrade of the firmware peripheral [7-6](#)
- clear a forced upgrade of the graphic driver [7-7](#)

- clear a forced upgrade of the of the graphic icons [7-8, 7-9](#)

utilities

- abort the last generated log files [8-15](#)
- access the presentation device in the system [8-63](#)
- add a Cisco IP Service Level Agreements (IP SLA) initiator/sender device IP address [8-12](#)
- add a new NTP server [8-44](#)
- capture network packets on the ethernet interface [8-33](#)
- clear all service statuses [8-51](#)
- clear locally stored calendaring information [8-6](#)
- create a remote support account [8-47](#)
- delete a Cisco IP Service Level Agreements (IP SLA) initiator [8-13](#)
- delete an entry in the Address Resolution Protocol table [8-3](#)
- delete an existing NTP server [8-45](#)
- disable the Cisco IP Service Level Agreements (IP SLA) responder [8-10](#)
- disable the remote support account [8-48](#)
- display the status of the last generated log files [8-30](#)
- enable the Cisco IP Service Level Agreements (IP SLA) responder [8-11](#)
- enable the remote support account [8-49](#)
- generate audio log files [8-16, 8-20](#)
- generate log files for other devices [8-21](#)
- generate phone log files [8-22](#)
- generate presentation device log files [8-23](#)
- generate sound recording log files [8-24](#)
- generate video log files [8-25](#)
- initiate an immediate peripheral upgrade [8-68](#)
- list all active allowed Cisco IP Service Level Agreements (IP SLA) initiators [8-14](#)
- list the contents of the Address Resolution Protocol table [8-4](#)
- ping all nodes to a remote destination [8-36](#)
- reset SNMP objects to their default values [8-58](#)
- resolve a hostname to an address [8-35](#)
- restart a service [8-55](#)
- restart the system [8-64](#)

retrieve all service statuses [8-52](#)

save a set of current SNMP object values [8-59](#)

send generated log files to an external server [8-17](#),
[8-26](#), [8-28](#)

send one or more ping packets to a remote
destination [8-37](#)

set an entry in the Address Resolution Protocol
table [8-5](#)

set the system to the factory default setting [8-62](#)

set the system to the factory initialized
configuration [8-61](#)

show the current configuration of the NTP client and
server [8-43](#)

show the current status of the NTP client [8-46](#)

show the current status of the remote support
account [8-50](#)

start a service [8-56](#)

stop a service [8-57](#)

switch to another installed load on the system [8-65](#)

test connectivity to a remote destination using the SIP
protocol [8-38](#)

test connectivity to a remote destination using the TCP
protocol [8-40](#)

trace an IP packets to a remote destination [8-42](#)

